



Models E19SG E19SGZ

> volts A.C., C.P.S.

DATA & TECHNICAL INFORMATION SERVICE

A.C. **Operated Superheterodynes**

AUSTRALIAN GENERAL (ELECTRIC


PROPRIETARY LIMITED

Nine Valve Seven Band

ELECTRICAL SPECIFICATIONS.

FREQUENCY RANGES.	e de la companya de
1. 540-1600 Kg/s	555-187.5M.
2. 4.0-1.5 Mc/s	75-200 M .
3. 9.7-3.6 Mc/s	
4. 12.0-9.4 Mc/s	
5. 15.0-11.7 Mc/s	
6. 19.0-15.0 Mc/s.	
7. 22.3-17.7 Mc/s	

Controls E19-SG and E19-SGZ

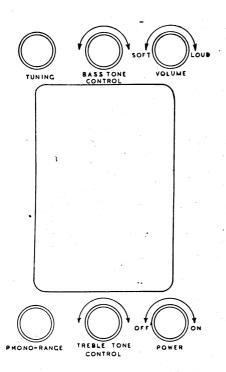

. •	. •	
	FREQUENCYy Rating	
age an	produced with other volt d frequency ratings.) imption lement	.
MODEL E19-SG	•	
1. 6U7G. 2. 6J8GA. 3. 6G8G. 4. 6SJ7. 5. 6SJ7GT. 6. 6J5GT. 7. 6V6GT. 8. 6V6GT. 9. 5Y3GT.	Phase Splitter. Push-pull Output. Push-pull Output. Rectifier.	
MODEL E19-SG	∋Z.	
1. 6U7G. 2. 6J8GA. 3. 6G8G. 4. 6AU6. 5. 6AU6. 6. 6J5GT. 7. 6V6GT. 8. 6V6GT. 9. 5Y3GT.	R.F. Amplifier. Converter. I.F. Amplifier, Detector, and A.F. Amplifier. 2nd A.F. Amplifier. Phase Splitter. Push-pull Output. Push-pull Output. Rectifier. or Y63. Visual Tuning Inc.	
LOUDSPEAKER:		
Transformer-	anent Magnet—Code No	

V.C. Impedance-12.5 ohms at 400 C.P.S.

Model E19-SGZ.

12 inch permanent Magnet-Code No. AU58. Transformer—TX4.

V.C. Impedance—12.5 ohms at 400 C.P.S.


Undistorted Power Output-8 watts.

Dial Lamps (4)—6.3 volts, 0.25 Amp. M.E.S.

MECHANICAL SPECIFICATIONS.

	Height	Width	Depth
Cabinet Dimensions (inches)	37	40	17
Chassis Base Dimensions (inches)	3 1	16	71/4
Weight (nett lbs.)	156		
Cabinet Finish	Walnut	Veneer.	

FIG. 5. TUNING CIRCUIT.

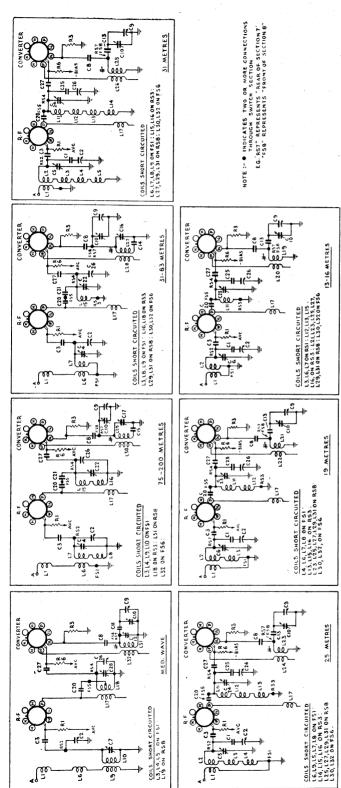

MECHANICAL REPLACEMENT PARTS.

	8147	8148	24757	24667	4704		RT8	8317	8021	8022	24789	10236	24790	23853	5458
	Screen, Valve	Cap Cab	(E19-SGZ only)	Socket, Valve Cushion Assembly	Socket, Valve, 8 pin	Socket, Valve, 8 pin,	Amphenol	Strip Tag I way	2 way	4 way	4 way	4 way	5 way	5 way	Terminal, Spring
Part No.	23543	23539	23569	23518 25913		23852	05047	25167	70107	4703		17386	17387	10274	4733
ltem	Drum "A"	Drum ''C''	Flywheel Assembly	Knob, Model E19-5G 'Model E19-5GZ	Panel, Capacitor Assembly	E19-5G	F10 CG7	F19-5G7	7)0-713	ranel, rower Cord Assembly	Panel, Pin-Jack Assembly	2 way	2 way	3 way	Register, Valve Screen
Part No.	El	23983	23984 23859	23855	23863	23857	23554	23527						0606	
ltem	Cabinet	Cable, Pick-up	Cable, Power Cable, Power Switch	Cable, Tone, Bass	Cable, Tuning Indicator	Cable, Volume	Chassis, Base	Chassis, End. Right-Hand	Lett-Hand	Clip, Grid	Dial, Frame, Assembly	Dial, Pointer Assembly	Dial, Scale	Drum, Drive	Drum, Wave Change (Fig. 4)

ALIGNMENT PROCEDURE.

The receiver is tested by the manufacturer with precision instruments and all adjusting screws are sealed ment should be necessary only when adjustments have been altered from the factory setting or when repairs have been made to the tuned circuits. Climatic conditions should not seriously affect the receiver.

It is important to apply a definite procedure, as given in this booklet, and to use adequate and reliable test equipment. Instruments ideally suited to the requirements are either the A.W.A. Junior Signal Generator, type 2R3911, or the A.W.A. Modulated Oscillators, type J6726 and C1070.

An output meter is necessary with both these instruments, the recommended type having an output impedance of 10,000 ohms and a range of 5-6000 milliwatts. The recommended meter is the A.W.A. output meter, type 2M8832.

As the calibration of the band-spread bands require great accuracy, it is recommended that an A.W.A. Crystal Calibrator, type 6795, be used after setting the oscillator calibration, to check the accuracy of the signal generator. The crystal calibrator emits a modulated signal at intervals of either 100 or 1000 Kc/s., throughout the radio frequency spectrum, thus providing a series of fixed and equally spaced calibration points of known accuracy. When using this instrument, care should be taken to select the correct signal. With the crystal set at the 1000 Kc/s. position, a spurious image signal can generally be obtained by turning the tuning control of the receiver to a point approximately 100 Kc/s. higher in frequency. This is a useful check as to whether a harmonic or spurious image is being tuned. If a crystal calibrator is not available broadcasting stations of known frequency may be used as an alternative.

When using a signal generator or modulated oscillator, with the tuning of the receiver fixed, two frequencies can be tuned from the test instrument, one 0.92 Mc/s. higher in

frequency than the other. In all cases the desired frequency is the lower of the two.

For all alignment purposes, connect the "low" side of the signal generator to the receiver chassis.

Perform alignment in the proper order as shown in the chart, starting from No. I and following all operations across, then No. 2, etc.

Keep the volume control set in the maximum clockwise position and regulate the output of the test instrument so that a minimum signal is introduced to the receiver to give a standard indication on the output meter. This will avoid A.V.C. action and overloading.

When the receiver has been satisfactorily aligned, seal the adjusting screws with a small quantity of cellulose cement.

If a type J6726 or C1070 instrument is used, see that an 0.25 megohm resistor is connected between the output terminals, and for short wave alignment a 400 ohm non-inductive resistor in series with the active output lead.

SIMPLE SHORT WAVE CALIBRATION ADJUSTMENT.

The short wave calibration may be adjusted slightly, without removing the chassis from the cabinet for alignment, by adjusting four cores, L19, L21, L23 and L25, after a station of known frequency is received.

The correct procedure is as follows:-

- (1) Set the dial pointer so that calibration is correct on the medium wave band.
- (2) To adjust the calibration of the 22.3-17.7 Mc/s. band, tune-in the known station, and to shift the pointer position to the high frequency end of the dial, turn L19 clockwise, or vice-versa, until the station can be tuned-in at its assigned frequency.

The adjustments for the 19.0-15.0, 15.0-11.7 and 12.0-9.4 Mc/s. bands are similar, using L21, L23 and L25 respectively.


ALIGNMENT TABLE.

Alignment Order	Connect "high" side of generator to:	Tune Generator to:	Tune Receiver Dial to:	Circuit to adjust.	Adjustment Symbol	Adjust to obtain.
1 2	6J8GA Cap* 6J8GA Cap*	455 Kc/s. 455 Kc/s.	540 Kc/s. 540 Kc/s.	2nd I.F. Trans. 2nd I.F. Trans.	Core L36 Core L34	Max. Peak Max. Peak
3 4	6J8GA Cap* 6J8GA Cap*	455 Kc/s. 455 Kc/s.	540 Kc/s. 540 Kc/s.	Ist I.F. Trans. Ist I.F. Trans.	Core L35 Core L33	Max. Peak Max. Peak
4	030GV Cab	•	heck I, 2, 3 and		CO16 E33 1	Max. Teak
_	l Aerial	600 Kc/s.	600 Kc/s.	 Oscillator**	Core L31	Max. Peak
5	Aerial	1,500 Kc/s.	1,500 Kc/s.	Oscillator	Cl2	Calibration
7	Aerial	1.500 Kc/s.	1,500 Kc/s.	Radio Frequency	C28	Calibration
8	Aerial	1,500 Kc/s.	1,500 Kc/s.	Aerial	C7	Max. Peak
		Re-c	heck 5, 6, 7 and	8.		
9.1	Aerial	17.8 Mc/s.	17.8 Mc/s.	! Oscillator	Core LI9 I	Calibration
10	Aerial	17.8 Mc/s.	17.8 Mc/s.	Radio · Frequency''	C23	Max. Peak
i i i i i i i i i i i i i i i i i i i	Aerial	17.8 Mc/s.	17.8 Mc/s.	Aerial	C6	Max. Peak
12	Aerial	21.0 Mc/s.	21.0 Mc/s.	Oscillator	CI0	Calibration
13	Aerial	15.2 Mc/s.	15.2 Mc/s.	Oscillator	Core L21	Calibration
14	Aerial	11.8 Mc/s.	11.8 Mc/s.	Oscillator	Core L23	Calibration
15	Aerial	11.8 Mc/s.	11.8 Mc/s.	Radio Frequency"	C24	Max. Peak
. 16	Aerial	11.8 Mc/s.	11.8 Mc/s.	Aerial	C5	Max. Peak
17	Aerial	9.5 Mc/s.	9.5 Mc/s.	Oscillator	Core L25	Calibration
, 18 j	Aerial	9.0 Mc/s.	9.0 Mc/s.	Oscillator	CI6	Calibration
19	Aerial	9.0 Mc/s.	9.0 Mc/s.	Radio Frequency	C22	Max. Peak
· 20	Aerial	9.0 Mc/s.	9.0 Mc/s.	Aerial	C4	Max. Peak
21	Aerial	4.0 Mc/s.	4.0 Mc/s.	Oscillator	Core L27	Calibration
A STATE OF	V	Re-che	ck 18, 19, 20 and	d 21.		
22	Aerial	1.6 Mc/s.	1.6 Mc/s.	Oscillator	Core L29	Calibration
23	Aerial	3.7 Mc/s.	3.7 Mc/s.	Oscillator	CI7	Max. Peak
		Re	-check 22 and 23			

Finally, re-check broadcast band. This is necessary only if the setting of C10 has been altered.

^{*}With grid clip connected. An 0.001 uF capacitor should be connected in series with the "high" side of the test instrument.

[&]quot;Rock the tuning control back and forth through the signal.

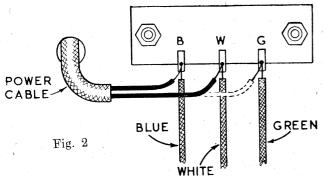


CHASSIS REMOVAL.

- 1. Remove the six control knobs by pulling them straight off their spindles.
- 2. Remove the backs from the receiver and Record Changer compartments.
- 3. Disconnect the Phono-motor, cabinet pilot lamp and pick-up cables from the chassis, the power cable from the distribution panel situated under the Record Changer compartment, and the loudspeaker cable from the loudspeaker.
- 4. The chassis is held in the cabinet by four screws, two at each end of the chassis. Removal of these enables the chassis to be withdrawn from the cabinet.


CONNECTION TO POWER SUFPLY.

Each instrument is supplied ready for use on voltages between 230 and 260 volts inclusive. Should the supply be consistently below 230 volts, it will be necessary to remove the chassis from the cabinet and re-wire the power supply connection panel. The panel has three tags, to which three leads from the power transformer—blue, white and green are connected. For 230-260 volts operation, the cables from the ON/OFF switch and the Phono-motor connection socket are connected to the blue and green leads. For voltages below 230, both should be connected to the blue and white leads. See accompanying diagram.

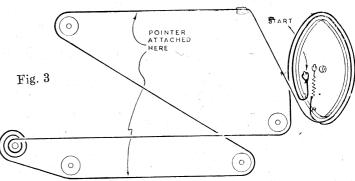

TUNING DRIVE CORD REPLACEMENT.

The accompanying diagram shows the route of the cord and the method of attachment. Whilst fitting the tuning drive cord, keep it taut, and adjust the length so that the tension spring measures approximately 2 inches long when fitted. The spring should be sheathed to prevent it from rattling against the drum.

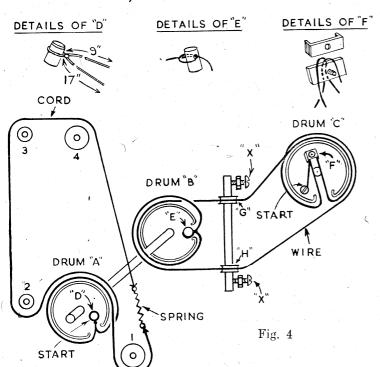

WAVE CHANGE SWITCH DRIVE REPLACEMENT.

Wave Change Switch Drive Replacement.

The following notes should be read whilst referring to Fig. 4, which shows the route and method of attachment of both the drive cord and drive wire.

When replacing either the cord or the wire, the recom mended procedure is as follows:-

(I) Drive Wire.

Turn the switch to the extreme anti-clockwise position.

Loosen screws "X" and anchor one end of the wire under the self-tapper as shown on drum "C".

Feed the wire under and over bush "F", around drum "C"

in an anti-clockwise direction, over pulley "G", around drum "B", through "E" on drum "B" twice, then, around drum "B" in an anti-clockwise direction, over pulley "H", around drum "C", and finally, fasten under and over bush "F" by the locking bracket.

Now adjust screws "X" for correct tension and lock.

(2) Drive Cord.

Tie the cord over "D" on drum "A" so that it measures approximately 17" to the left and 9" to the right of "D".

Feed the long section of the cord anti-clockwise around drum "A", under pulley "2", and over pulleys "3" and "4".

Now feed the short section clockwise around drum "A" and under pulley "I". Tie the 9" section to the tension spring, pass the 17" section through the other end of the spring, and tie after adjusting the tension.

CIRCUIT CODE E19-SGZ.

Code No.	Description F	art No.	Code No.	Description P	art No.
	INDUCTORS		CI0	1-9 uuF Air Trimmer	16347
LI, 2 LI, 2, 3	Aerial Coil 13-16 Metres Aerial Coil 16-20 Metres	9852 9852	CII CI2	490 uuF Padder ± 2½% 2-21 uuF Air Trimmer	19659
Li, 2, 3, 4 Li, 2, 3, 4, 5	Aerial Coil 20-25 Metres Aerial Coil 25-31 Metres	9852 9852	CI3	42 uuF N750 Temp.	
L6, 7 L6, 7, 8	Aerial Coil 31-83 Metres Aerial Coil 75-200 Metres	9854 9854	C14 C15	2550 uuF Mica ± 2½% 1350 uuF Mica ± 2½%	10450
L9, 10 L11	Aerial Coil 540-1600 Kc/s R.F. Coil 13-16 Metres	9748A	C16 C17	2-21 uuF Air Trimmer 2-21 uuF Air Trimmer	19659 19659 -
LII, 12 LII, 12, 13	R.F. Coil 16-20 Metres R.F. Coil 20-25 Metres	9853 9853	C18	O.I uF Paper 400 v. Working	
Lii, i2, i3, 14 Li5	R.F. Coil 25-31 Metres R.F. Coil 31-83 Metres	9853 9855	C19	0.1 uF Paper 400 v. Working	
L15, 16	R.F. Coil 75-200 Metres R.F. Coil 540-1600 Kc/s	9855 9749 A	C20 C21	200 uuF Mica 50 uuF Mica	10/50
L17, 18 L19, 20	Oscillator Coil 13-16 Metres	9747	C22 C23	2-21 uuF Air Trimmer 2-21 uuF Air Trimmer 2-21 uuF Air Trimmer	19659
L21, 22	Oscillator Coil 16-20 Metres	9746	C24 C25	52 uuF Silvered Mica ±	19659
L23, 24	Oscillator Coil 20-25 Metres	9745	C26	2 uuF 12-430 uuF Tuning	18380
L25, 26	Oscillator Coil 25-31 Metres	9744	C27 C28	200 uuF Mica 2-21 uuF Air Trimmer 8 uF 525 P.V. Electrolytic	19659
L27, 28	Oscillator Coil 31-83 Metres	9743	C29 C30	0.05 uF Paper 400 v.	**
L29, 30	Oscillator Coil 75-200 Metres	9742	C31	Working 0.05 uF Paper 400 v.	
L31, 32	Oscillator Coil 540-1600	9741 A	C32	Working 24 uF 600 P.V. Electrolytic	
L33, 34 L35, 36	Ist I.F. Transformer 2nd I.F. Transformer	8286Z 8287Z	C33 C34	70 uuF Silvered Mica 70 uuF Silvered Mica	
L37	Smoothing Choke 750 ohms	5879	C35	0.01 uF Paper 600 v. Working	
L38	Smoothing Choke	TX14	C36 C37	4 uuF Mica 50 uuF Mica	
RI	RESISTORS I megohm ½ wat't	i Kijali eti. Sila	C38 C39	70 uuF Silvered Mica 70 uuF Silvered Mica	
R2 R3	20,000 ohms watt 32,000 ohms watt		C40 C41	100 uuF Mica 100 uuF Mica	
R4 R5	16,000 ohms 2 watts 16,000 ohms 2 watts		C42	0.02 uF Paper 600 v. Working	
R6 R7	I megohm ½ watt I megohm ½ watt		C43 C44	600 uuF Mica 8 uF 525 P.V. Electrolytic	
R8	20 ohms I watt (wire wound)		C45 C46	16 uF 525 P.V. Electrolytic 0.1 uF Paper 400 v.	
. R9	II ohms I watt (wire wound)		C47	Working 0.02 uF Paper 600 v.	
RIO RII	0.5 megohms ½ watt 2.5 megohms ½ watt		C48	Working 50 uuF Mica	
RI2 RI3	0.5 megohm ½ watt		C49 C50	25 uF 40 P.V. Electrolytic 0.1 uF Paper 400 v.	
R14 R15	0.1 megohm ½ watt 50,000 ohms ½ watt		C51	Working 8 uF 525 P.V. Electrolytic	
RI6 RI7	0.25 megohm ½ watt I megohm Volume Con-	02500	C52	0.1 uF Paper 400 v. Working	
RI8	trol	23599	C53 C54 C55	3,000 uuF Mica 1,500 uuF Mica	
R19 R20	I megohm ½ watt 0.5 megohm ½ watt		C56	2,000 uuF Mica 0.005 uF Paper 600 v.	
R21 R22	3,000 ohms ½ watt 0.1 megohm 1 watt		C57	Working 0.05 uF Paper 400 v. Working	
R23 ' R24	0.5 megohm I watt 50,000 ohms I watt		C58 C59	25 uF 40 P.V. Electrolytic 0.1 uF Paper 400 v.	
R25 R26	0.25 megohm ½ watt 25,000 ohms ½ watt		C60 .	Working 0.05 uF Paper 400 v.	
R27 R28	0.25 megohm Tone Con- trol	25360 23598	C61	Working • 500 uuF Mica	
R29 R30	0.25 megohm ½ watt	25576	C62	O.I uF Paper 400 v. Working	
R31 R32	8,000 ohms ½ watt I megohm I watt 20.000 ohms I watt		C63 C64	8 uF 525 P.V. Electrolytic O.I uF Paper 400 v.	
R33 R34	0.25 megohm ½ watt 0.1 megohm 1 watt		C65	Working 25 uF 40 P.V. Electrolytic	
R35 R36	I megohin I watt 50,000 ohms I watt 10,000 ohms I watt		C66	0.0025 uF Paper 600 v. Working	
R37 R38	10,000 ohms ½ watt 0.1 megohm l watt ± 5%	•	C67	0.5 uF Paper 400 v Working	
R39 R40	0.5 megohm I watt ± 5% 5,000 ohms I wa'tt		C68	0.5 uF Paper 400 v. Working	
R41 R42	0.1 megohm I watt ± 5% 0.5 megohm I watt ± 5%		C69	0.0025 uF Paper 600 v. Working	
R43 R44	10,000 ohms ½ watt 0.5 megohm 1 watt ± 5%		C70	16 uF 525 P.V. Electrolytic	
R45	200 ohms 3 watts (wire wound)		TI	TRANSFORMERS Loudspeaker Transformer	TVA
R46	20,000 ohms I watt		T2	Power Transformer 40	TX4
CÍ	CAPACITORS 52 uuF Silvered Mica ±			C.P.S.	17886A
C2	2 uuF 12-430 uuF Tuning	18380		LOUDSPEAKER 12 in. Permanent Magnet	AU58
C3 C4	200 UUF Mica			SWITCHES	
C5 C6	14-33 uuF Air Trimmer 14-33 uuF Air Trimmer 14-33 uuF Air Trimmer	19659 19659	SI	Phono/Range Switch, 8 Wafer, 8 Position	
C7 C8	2-21 uuF Air Trimmer 70 uuF Mica	19659	S2	RotaryPower Switch D.P.S.T.	19008
Č9	12-430 uuF Tuning	18380		Rotary	20007

DESCRIPTION OF TUNING CIRCUIT ADJUSTMENTS. Broadcast Band.

The broadcast band adjustments follows usual practice with three trimming capacitors—C7 aerial, C28 R.F., C12 oscillator, and a variable magnetite core for the L.F. adjustment of the oscillator coil L31, L32.

9.7-3.6 Mc/s. Band.

Adjustments are the same as those used on the broadcast band, that is, with three trimming capacitors—C4 aerial, C22 R.F., C16 oscillator, and a variable magnetite core for L.F. adjustment of the oscillator coil L27, L28. 4.0-1.5 Mc/s. Band.

All capacitors in the aerial and R.F. sections are common with those in the 9.7-3.6 Mc/s band, the change of band being accomplished by switching tapped coils. The oscillator section, however, is provided with a separate capacitor, C17, for tracking with the signal circuits at the H.F. end, and a variable magnetite core for L.F. adjustment of the oscillator coil L29, L30.

22.3-17.7 Mc/s Band.

At the L.F. end of this band there are three adjustments, a magnetite core in the oscillator coil L19, L20, and trimming capacitors C23 R.F. and C6 aerial. Small capacitors C1, C25 and C13 are used in series with the ganged tuning capacitors to accomplish band-spreading at the L.F. end of this band. The oscillator circuit is made to track with the signal circuit at the H.F. end by adjustment of capacitor

C10. The three series capacitors are chosen to give three point tracking, between the signal and oscillator circuits. 19.0-15.0 Mc/s. Band.

The capacity system is the same as for the 22.3-17.7 Mc/s. band, the change of band being accomplished by switching coils, the oscillator coil L21, L22 being fitted with a variable magnetite core for L.F. adjustment.

15.0-11.7 Mc/s. Band.

Adjustments are similar to those on the 22.3-17.7 Mc/s. band, excepting that no H.F. adjustment is provided for the oscillator. L.F. adjustments are trimming capacitors C24 R.F., C5 aerial, and a variable magnetite core in oscillator coii L23, L24.

12.0-9.4 Mc/s. Band.

One adjustment only is provided, a variable magnetite core in the oscillator coil L25, L26.

It will be noted that the ratio max. frequency is the same on the four bands, 12.0-9.4 Mc/s., 15.0-11.7 Mc/s., 19.0-15.0 Mc/s., 22.3-17.7 Mc/s., and the tracking is practically correct, using the same series capacitor for all bands. The ratio max. frequency is also the same on the 4.0-1.5 Mc/s. and 9.7-3.6 Mc/s. bands, but, due to the greatly different frequency spectrum of the oscillator, the series capacitors in the two oscillator circuits are different.

CIRCUIT ARRANGEMENT.

R.F. Amplifier-6U7G (VI).

The 6U7G is a triple grid, super control R.F. Amplifier. The output of the aerial coil, which is tuned to signal frequency by the aerial section of the tuning capacitor, is applied to the control grid for amplification. The cathode being earthed, a minimum negative bias voltage of 2.2 volts in the E19-SG and 2.0 volts in the E19-SGZ is obtained from the back-bias circuit, and applied to the control grid via the A.V.C. line.

Amplification is also controlled automatically, due to functioning of the A.V.C. Circuit.

Converter-6J8GA (V2).

The 6J8GA is a triodeheptode converter and is employed as a frequency converter. Voltages at signal frequency are applied to the control grid from the R.F. Amplifier via the R.F. coil and associate circuit. Local oscillations are provided by the triode portion of this valve operating as a tuned grid feedback circuit comprising oscillator coil, padding capacitor and oscillator section of ganged tuning capacitor. Electronic mixing gives a resultant heterodyne frequency of 455 Kc/s. The cathode of this valve being earthed, bias voltages are applied to the control grid via the A.V.C. line from the back-bias circuit. Minimum bias on medium wave is -2.2 volts and short wave -3.4 volts for model E19-SG. For model E19-SGZ, bias on medium wave is -2.0 volts and on short wave -3.1 volts. The 6J8GA is not A.V.C. controlled on short wave.

I.F. Amplifier, Detector, A.V.C.—6G8G (V3).

The output from the 6J8GA is coupled to the control grid of the 6G8G by the 1st I.F. transformer, which is permeability tuned to 455 Kc/s. Bias conditions are similar to those of the R.F. Amplifier (VI).

The 2nd I.F. transformer, permeability tuned to 455 Kc/s., couples the output of V3 to diode No. 2 for detection. Portion of the R.F. voltage from this diode is fed to the diode No. I by coupling capacitor (C37) and a voltage is developed across the diode load resistor (RII). This voltage is applied to the grids of VI, V2 and V3 via the A.V.C. line. This voltage, so developed, varies in proportion to the strength of the carrier being received.

AUDIO SYSTEM-MODEL E19-SGZ.

1st A.F. Amplifier (V4)—6AU6. 2nd A.F. Amplifier (V5)—6AU6. The heater of V4 and V5 are supplied at a reduced voltage from a special centre-tapped winding to reduce hum to a minimum. The cathodes of both valves are also by-passed as an additional hum preventative.

Approximately 20 db of negative feedback is applied to the screen of V5 and the tone controls are also operated in a negative feedback arrangement. Under these conditions, a power output of 8 watts, with a negligible percentage of distortion, is obtainable.

OPERATION OF TONE CONTROLS.

Treble Tone Control (R27).

At middle frequencies, approximately 10 db of negative feedback is applied from the plate to the grid of V4.

At high frequencies, when the moving arm of the control is at the extreme anti-clockwise position, R25 is shunted by C55, which has low reactance at high frequencies. Feedback is, therefore, increased, giving "Treble Cut."

With the arm of the control in the extreme clockwise position, R26 is shunted by C56, giving less feedback, and consequently, "Treble Boost."

Bass Tone Control (R28).

Both C53 and C54 are of relatively high reactance at low frequencies.

With the moving arm of the control at the extreme anticlockwise position, C53 is short-circuited, making the negative feedback the same magnitude as at middle frequencies.

"Bass Cut" is obtained due to the voltage divider action of C54 and the grid resistor of V5 (R29).

With tht moving arm of the control in the extreme clockwise position, C54 is short-circuited and the negative feedback at low frequencies is reduced owing to the high reactance of C53. This naturally results in "Bass Boost."

R19, in series with the grid of V4, is to prevent the action of the Volume Control (R17) from affecting the feedback arrangements. This resistor is shunted by C48 to increase the high frequency response on "Radio."

The remainder of the audio system follows normal practice of Phase Splitter (V6-6J5GT) and Push-pull Amplifier (V7, V8, 2–6V6GT), with 20 db of negative feedback applied between input and output via R24, R30.

1	
0	
U -	
_	
ш	
ш	
ш	
_	
_	
0	
C.	
•	
4 3	
$\mathbf{}$	
-	
_	
 	
_	
_	
_	
_	
$\overline{}$	
-4	
_	
<i>T</i> 3	
$\mathbf{-}$	
_	

Part No 9 400 Poper

Sode.

art No.

Description

Code ٠ ا NDUCTORS Coi 000

Metres Metres Metres

13-16 16-20 20-25

Aerial Aerial Aerial

Part No.

Code No.

Description

art No.

Node.

C48

9 490 8

19659

2550 uuF Mica ± 2½% 1350 uuF Mica ± 2½% 2-21 uuF Air Trimmer 2-21 uuF Air Trimmer 0.1 uF Paper 400 v.

42 uuF N750 Temp. Comp.

Working 8 uF 525 P.V. Electrolytic 0.005 uF Paper 600 v 8 Paper Paper Description

Working
0.5 uF Paper
Working
1000 uvF Paper
Working
0.1 uF Paper Working 0.1 uF Paper 3 305 uF Paper Working 500 uuF Mica* 0.05 uF Paper Working 0.01 uF Paper Working 0.05 uF

0.1 uF Paper 400

Working

23599 23598

I megohm Volume Con-

2.5 megohms ½ watt

9852 9854 9854 9748**A** 9853

Aerial Coil 25-31 Metres Aerial Coil 31-83 Metres Aerial Coil 75-200 Metres Aerial Coil 1600-540 Kc/s R.F. Coil 16-20 Metres R.F. Coil 20-25 Metres

50,000 ohms 1 watt 0.25 megohms 1 watt 0.1 megohms 🕺 watt

megohm 1 Description

I megohm Tone Control 50,000 ohms I watt I.6 megohms ½ wa'tt

Working 200 uuF Mica 50 uuF Mica

C22 C23 C23 C24 C25

23598

megohm Tone Control

megohm ½ watt ,000 ohms ⅓ watt

749A

25-31 Metres 31-83 Metres

. آق ن Co:

22.2 75-200 Me'tres ..

1600-540 Kc/s Coil 13-16

R.F. Coil I Oscillator (

288

12,15

Coil 16-20 Coil 20-25

Oscillator scillator Oscillator Oscillator

Metres

Metres Metres

123, 24 .25, 26 L27, 28

8,000 ohms ½ watt 63,000 ohms I watt 0.5 megohm I watt

.2 megohms

Working
8 uF 525 P.V. Electrolytic
9.1 uF Paper 400 v.
Working
25 uF 40 P.V. Electrolytic
0.0025 uF Paper 600 v.
Working C49 C50 **C54** C55 C56 CSI

19659 19659 19659

C57 C58 C59 9 262 C62 C63 C64 18380 19659 12-430 uuF Tuning 2-21 uuF Air Trimmer 2-21 uuF Air Trimmer 2-21 uuF Air Trimmer 52 uuF Silvered Mica ± 2 uuF

C28 C27 C29 C30

9

8 UF 525 P.V. Electrolytic 0.05 uF Paper 400 v. Working 0.05 uF Paper 400 v. Working 24 uF 600 P.V. Electrolytic 70 uuF Silvered Mica 0.01 uF Paper 600 v. Working 200 uuF Mica 2-21 uuF Air Trimmer

C34 C34 C35

0.1 megohm | watt | 0.5 megohms | 0.5 megohm | 0.5 me

0.5 megohm I watt 10,000 ohms ½ watt

8286Z 8287Z 9741A

lst I.F. Transformer 2nd I.F. Transformer Smoothing Choke 750

34

L33, L35, L37,

Coil 1600-540

Metres .. Oscillator (

31, 32

Coil 75-200

Oscillator

29, 30

Metres

Coil 31-83 Coil 25-31

(punow

+1+1 +1

31

3.i megohms I watt ±

5,000 ohms I watt

1 megohm I watt 20,000 ohms I watt 50,000 ohms I watt

megohm ½ J.I megohm .5 megohm

746

C65

C66 C67 = 2 0.02 uF Paper 600 v. Working 0.005 uF Paper 600 v. Working 8 uF 525 P.V. Electrolytic 50 uuF Mica 70 uuF Silvered Mica 70 uuF Silvered Mica 100 uuF Mica

C43

18,380 19659 19659

12-430 uuF Tuning CAPACITORS 52 uuF Silver Mica ±

u u F

200 uuF Mica 14-33 uuF Air Trimmer 14-33 uuF Air Trimmer 14-33 uvF Air Trimmer

4 uuF Mica

009 400

Vorking
0.5 v.
Working
0.5 v.
Working
0.0025 v.F Pare
Working

TRANSFORMERS

400

Paper

Loudspeaker Transformer ower Transformer 40

OUDSPEAKER SWITCHES

12 in. Permanent Magnet

AU54

Phono/Range Switch, wafer 8 Position Rotary

Power Switch D.P.S.T

ડે

uF Paper

C46 C47

18380 19659

2-21 uuF Air Trimmer ... 70 uuF Mica 12-430 uuF Trimmer ... 1-9 uuF Air Trimmer ... 490 uuF ± 23% Padder 2-21 uuF Air Trimmer ...

1 megohm ½ watt 20,000 ohms 1 watt 32,000 ohms ½ watt 16,000 ohms 2 watts 16,000 ohms 2 watts

RESISTORS

ohms

megohm 1


RR1 RR5 RR5 RR7 RR7 RR9

megohm

20 ohms I watt (wire wound) II ohms I watt (wire wound) 0.25 megohms ½ wa'tt

0.25 megohms 1/2.5 megohms 1/4

0.1 uF P Working 0.02 uF P Working

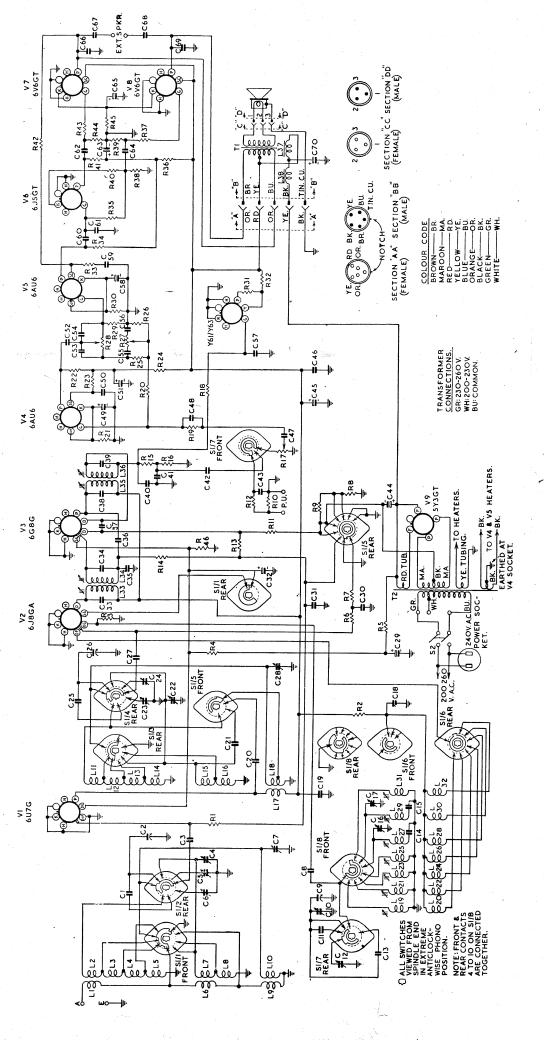

AUDIO SYSTEM-MODEL E19-SG.

Ist A.F. Amplifier (V4) -6SJ7. 2nd A.F. Amplifier (V5) -6SJ7GT.

A 6SJ7 valve is used as the 1st A.F. Amplifier and Tone

The action of this arrangement is as follows:-

At middle frequencies the gain of the valve is determined by the plate load R23, and the negative feedback developed across R22. All values have been arranged so that the normal gain occurs at 400 C/s.

Treble Tone Control (R18).

At high frequencies, the negative feedback is reduced, due to the shunting of the cathode circuit by C48, the amount of shunting being controlled by the setting of R18.

Maximum treble lift occurs when the moving arm of the control is turned fully clockwise. Treble cut is obtained, when the arm of the control is in the extreme anti-clockwise position, due to the shunting effect of C56 across the grid circuit of V5.

Bass Tone Control (R25).

In series with the plate load resistor R23 is R24, which is shunted by C50.

This combination has a new impedance at 400 C/s. The impedance rises as the frequency decreases and the gain rises correspondingly with the impedance. R23 can be effectively short-circuited by the adjustment of the Bass Control (R25). An increase of gain at low frequencies is obtained with the moving arm of the control in the extreme clockwise position. With the moving arm in the extreme anti-clockwise position, C52 is inserted into the coupling circuit and "bass cut" is obtained.

The 6SJ7 employed in this position should have low heater-cathode leakage, otherwise, hum may arise.

The remaining portion of the audio end follows normal

practice of Phase Splitter (6J5GT) and Push-pull Amplifier (2-6V6GT) with 20 db of negative feedback applied betwee input and output via R37, R27.

MODIFICATIONS TO MODEL EI9-SG.

Hum Reduction

Cause: Heater-Cathode leakage in the 6SJ7 or 6SJ7GT valves

This can occur in either valve after a period of service.

Three things should be done to deal with this:

(1) Wire heaters of V4 and V5 from the special centre tapped heater winding (already used for V4) and reduce the heater voltage by means of series resistance to 5.5 volts.

Two pieces of 32 SWG Eureka wire, 6 inches long, inserted through I mil tubing, in series with each side of the winding are very convenient for this purpose. The centre tap is earthed in the normal position. Refer to Fig. 6.

(2) By-pass the cathode of V4 with a 25/40 Electrolytic capacitor. This increases the overall gain of V4 and therefore, a voltage divider is incorporated in the grid circuit of V5. One-fifth of the available voltage is applied to this grid. See Fig. 7.

The cathode of V5 cannot be by-passed owing to the negative feedback arrangement.

(3) Improve the high tension filtering by adding to the filter unit a TX14 choke and a 16/525 electrolytic capacitor. These are inserted in the rectifier side of the filter as shown in Fig. 8.

As well as the modifications mentioned above, some other changes can be made with advantage. Two miniature valves (6AU6) can be used in place of the 6SJ7 and 6SJ7GT, and the Tone Control circuits can be altered in accordance with Fig. 9. The description of the modified audio system will then be the same as for model E19-SGZ.


SOCKET VOLTAGES AND CURRENTS. MODEL E19-SG.

VALVES	Control Grid to Chassis	Chassis	Screen to Chassis	Anode to Chassis	Anode Current	Heate
	Volts	Volts	Volts	Volts	mA	Volts
17G R.F. Amp., M.W	-2.2*	0	85	265	6.0	6.3
S.W	-2.2*	0	85	265	6.0	
8GA Converter, M.W.	-2.2*	0	85	265	0.8	6.3
S.W	-3.4*	0 '	85	265	0.6-1.3	
Oscillator, M.W.		0		130	8.0	· _
S.W		0		130	6.0-8.0	
86 I.F. Amp., Det. A.V.C., M.W.	-2.2*	0	85	265	5.4	6.3
S.W	-2.2*	0	85	- 265	5.4	· -
J7 Ist A.F. Amp		1.8	18	35	0.2	6.3
J7GT 2nd A.F. Amp.		3.5	58	88	0.8	6.3
OGI Phase Splitter		58		95	0.7	6.3
6GT Output		16	265	258	34.0	6.3
6GT Push-pull		16	265	258	34.0	6.3
3GT Rectifier				680/340 Volts A.C.		5.0

100 mA Total Current Drain.

Voltage across loudspeaker field—78 volts.

^{*}Cannot be measured with an ordinary voltmeter.

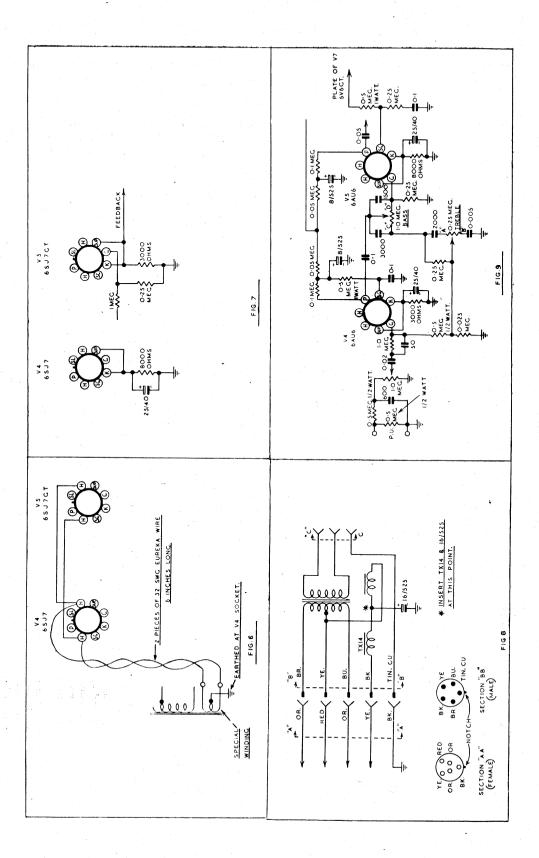

SOCKET VOLTAGES AND CURRENTS. MODEL E19-SGZ.

VALVES	Control Grid to Chassis Volts		Screen Grid to Chassis Volts	Anode to Chassis Volts	Anode Current mA	Heate Volts
U7G R.F. Amp., M.W.	-2.0*	0	85	250	6.0	6.3
S.W	-2.0* -2.0*	0	85	250	6.0	
J8GA Converter, M.W.		0	85	250	0.8	6.3
S.W.		0	85	250	0.6-1.3	
Oscillator, M.W.		0	· · · — · ·	140	0.8	· · · · · · · · · · · · · · · · · · ·
S.W		0		140	6.0-8.0	
G8G I.F. Amp. Det., A.V.C., M.W.	–2.0*	0	85	250	5.4	6.3
S.W	-2.0*	0	85	250	5.4	-
AU6 Ist A.F. Amp.		1.8	120*	140*	0.6	5.3
AU6 2nd A.F. Amp.		3.0	145*	160*	0.4	5.3
J5GT Phase Splitter		62.0		110	0.7	6.3
V6GT) Push-pull		16.0	250	245	34.0	6.3
/6GT (Output		16.0	250	245	34.0	6.3
Y3GT Rectifier				680/340 V	olts A.C.	5.0
1/3G1 Kecillel				100 mA To	tal Current D	rain

D.C. RESISTANCE OF WINDINGS.

Winding	D.C. Resistance in ohms
erial Coils	A CONTRACTOR OF THE STATE OF TH
LI	12
?	a sa
3	*
4	* · · · · · · · · · · · · · · · · · · ·
5	* * * * * * * * * * * * * * * * * * *
6	4.5
7	
8	1.5 °
9	2
.10	4
. Coils	
	*
12	*
13	•
14	*
15	1.5
16	1.5
.17	55
18	4
cillator Coils	
.19	.
.20	
21	*
	*
.23	
24	
25	*
26	*
27	*
.28	1.25
.29	*
.30	7.5
31	1.5
_32	0
Transformer Winding	750
oothing Choke L37	80
Jdspeaker Input	00
reference (TI)	
nsformer (TI)	380
4 Primary	*
4 Secondary	
wer Transformer (T2)	. 13
	280
condary	200

^{*}Cannot be measured with an ordinary voltmeter.
Voltage across L37-80 volts.
Voltage across L38-15 volts.
Measured with receiver connected to 240 volts A.C. Supply. No signal input.
Volume Control Maximum clockwise.

E19-SG.

CIRCUIT CODE

