


PHILIPS 710 BN



L	1-3-5-2-4-6	13-14	7-9-11-8-10-12	15-16	17-18													
C	3	1-6-9-12-15	4	5	18	2-17-19-16-7-8-10-11-13-14	22	23	24	25	26-33	20-27-34	21-35-28-29-36-30	31	32			
R	1		2	3	24	4	5	6	23-20	7	8-9-21	10-11-22-12	13-14	18	19	15	16	17

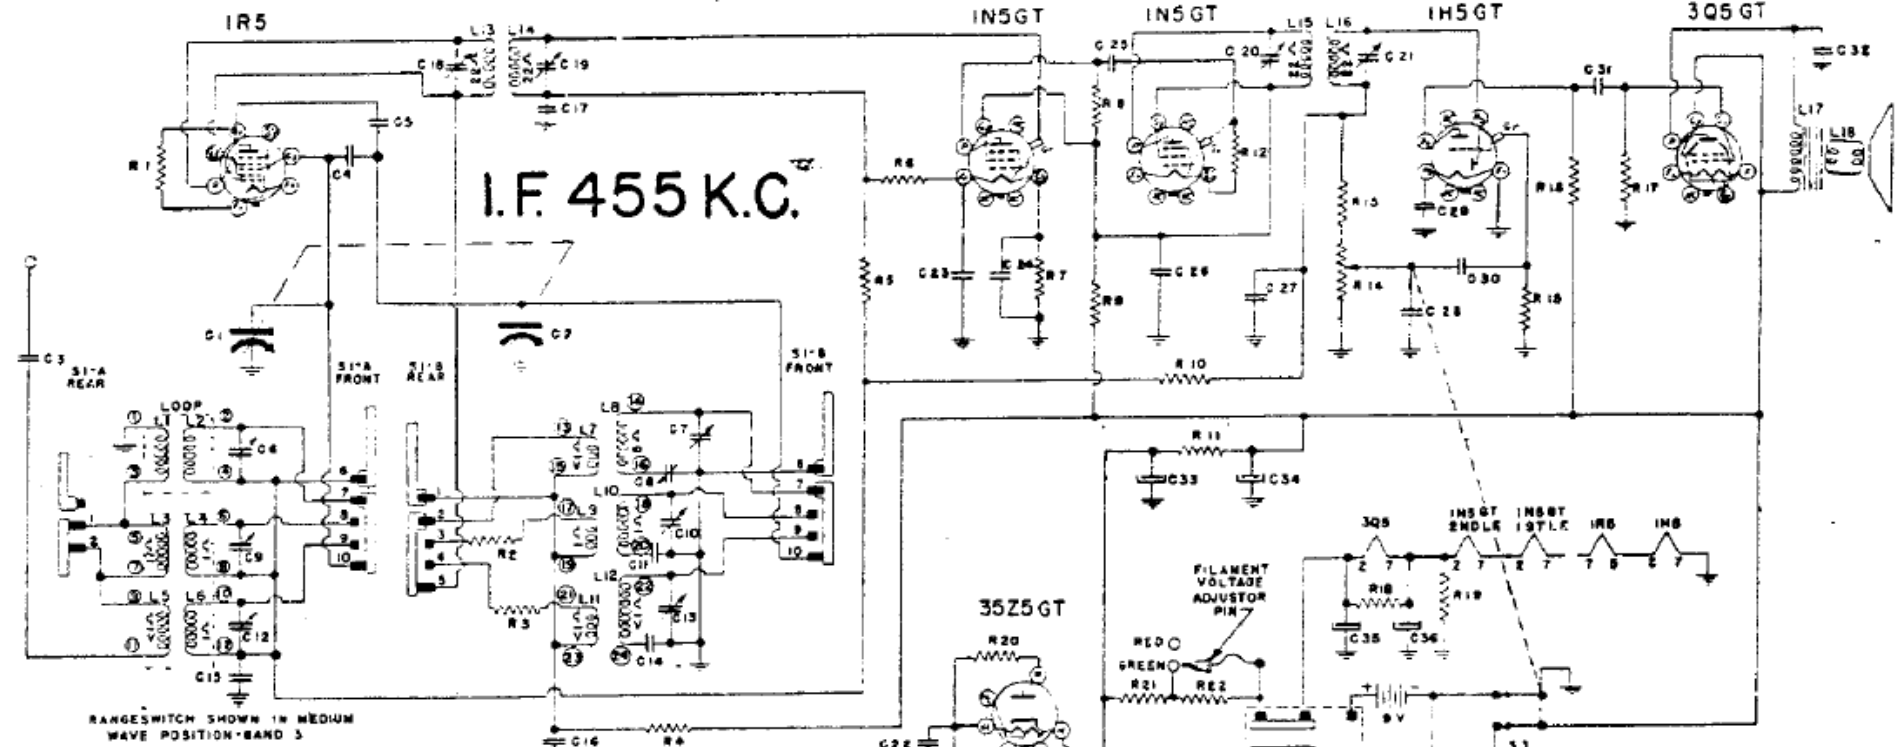


I.F. 455 K.C.

RANGESWITCH SHOWN IN MEDIUM WAVE POSITION-BAND 3

- | | |
|---------------------|-------------------|
| R1 100K. .25 W. | C1 15-450 MMF |
| R2 100 .25 W. | C2 15-450 MMF |
| R3 10 .25 W. | C3 .01 MFD. 400V |
| R4 10K. .25 W. | C4 4 MMF |
| R5 3MEG. .25 W. | C5 100 MMF |
| R6 3MEG. .25 W. | C6 2.5-25MMF |
| R7 1K. .25 W. | C7 2.5-25MMF |
| R8 15K. .25 W. | C8 200-700 MMF |
| R9 150 .25 W. | C9 2.5-25MMF |
| R10 3MEG. .25 W. | C10 2.5-25MMF |
| R11 1.5K. .25 W. | C11 .0015 MFD. |
| R12 100K. .25 W. | C12 5-40MMF |
| R13 100K. .25 W. | C13 5-40MMF |
| R14 1MEG. VOL CONT. | C14 .0035MFD. |
| R15 3MEG. .25 W. | C15 .05MFD. 200V. |
| R16 1MEG. .25 W. | C16 .05MFD. 200V |
| R17 2MEG. .25 W. | C17 .05MFD. 200V |
| R18 5K. .25 W. | C18 1N 187 1F |
| R19 1K. .25 W. | C19 1N 187 1F |
| R20 100 2 W. | C20 1N 280 1F |
| R21 1400 10 W. | C21 1N 280 1F |
| R22 700 10 W. | C22 1 MFD. 400V. |
| R23 550 | C23 1 MFD. 400V |
| R24 470 | C24 .25MFD. 200 V |

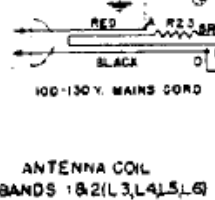
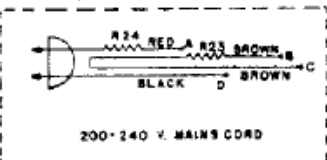


ANTENNA COIL BANDS 1&2(L3,L4,L5,L6)

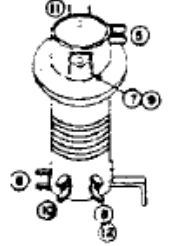


OSCILLATOR COIL BANDS 1&2(L7,L8,L11,L12)

OSCILLATOR COIL BAND 2 (L9,L10)

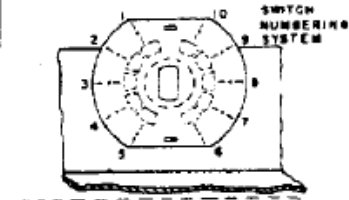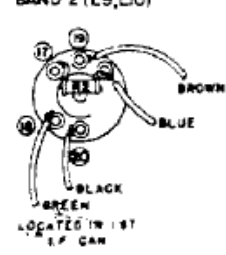

DIAL DRUM AT LOW FREQUENCY END OF DIAL, GANG CLOSED.

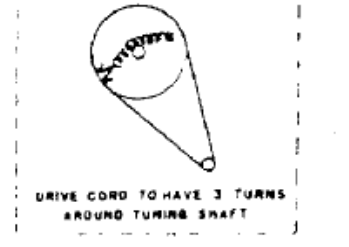

DRIVE CORD TO HAVE 3 TURNS AROUND TUNING SHAFT

PHILIPS, Modelos: 710BN