



RIDER'S **VOLUME - II**

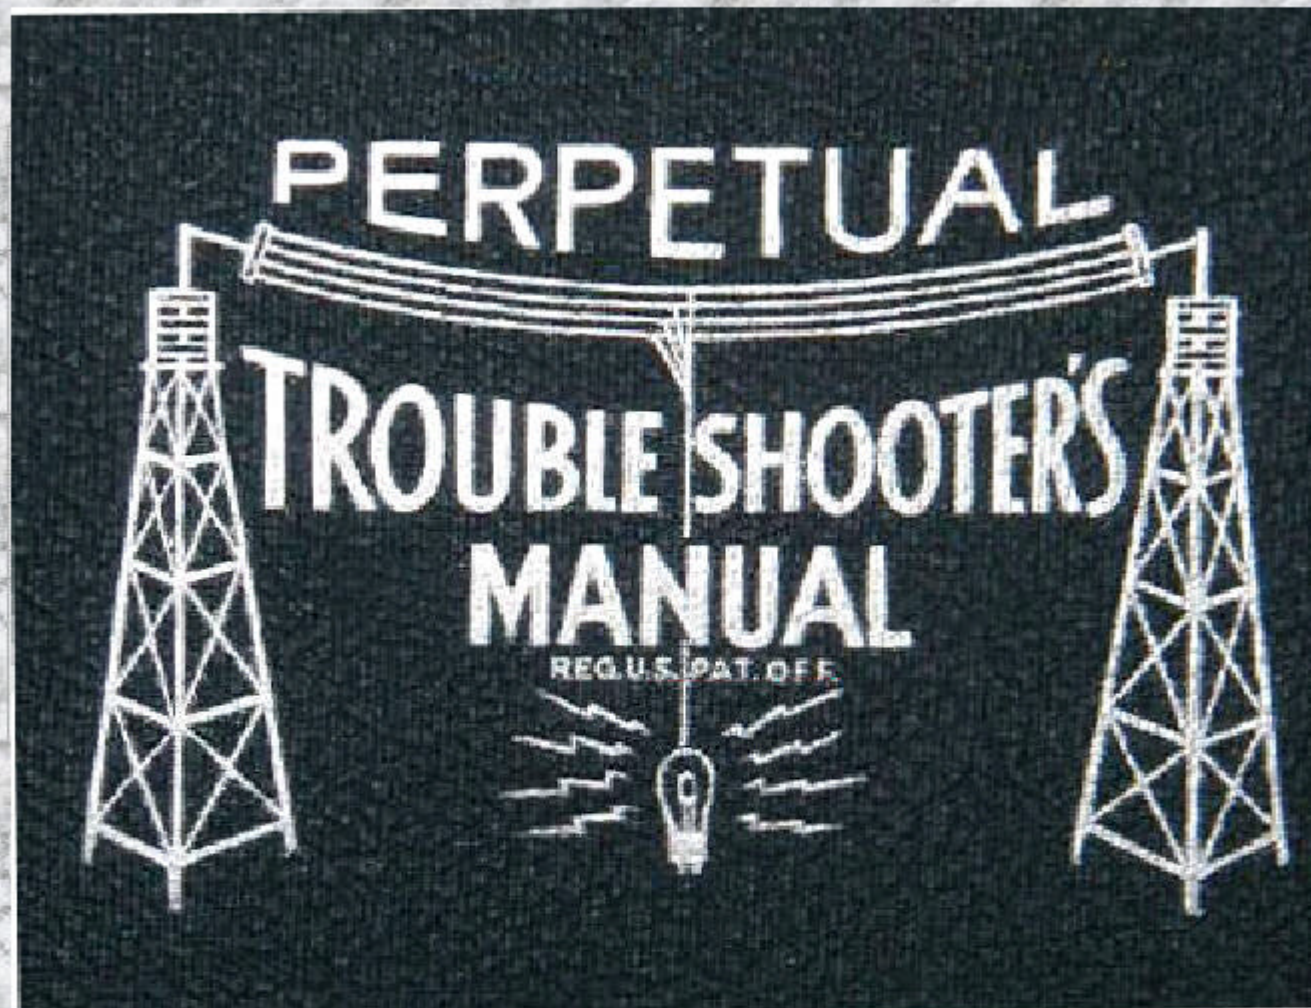


COVERING LATE 1930
THROUGH
LATE 1931

ADVANCE ELECTRIC CO.

MODEL
Falck Superhot "B"
MODEL "E"

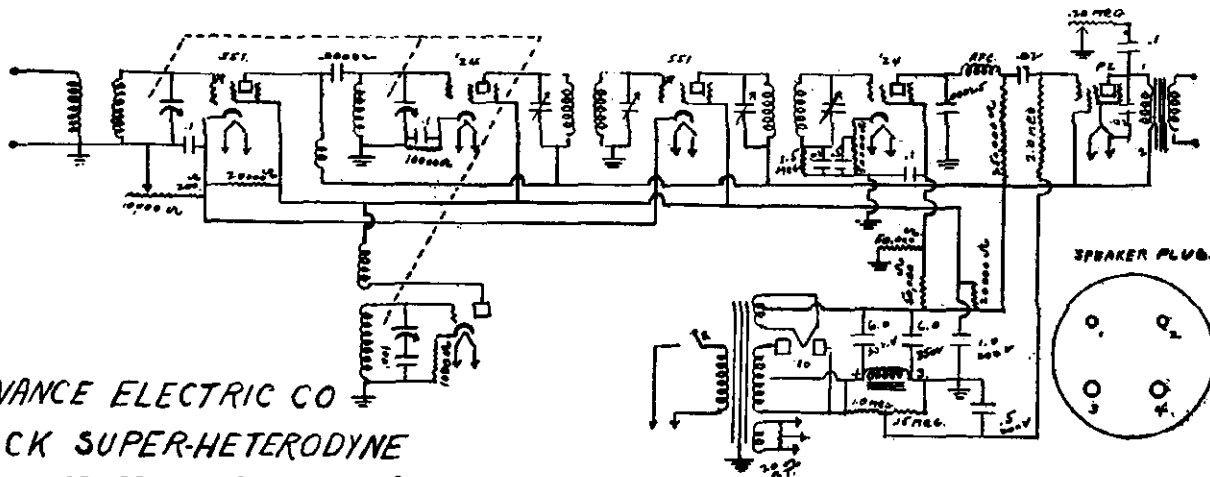

ADVANCE ELECTRIC CO
FALCK SUPER-HETERODYNE
SERIES "B" VARIABLE MU + PENTODE
1931

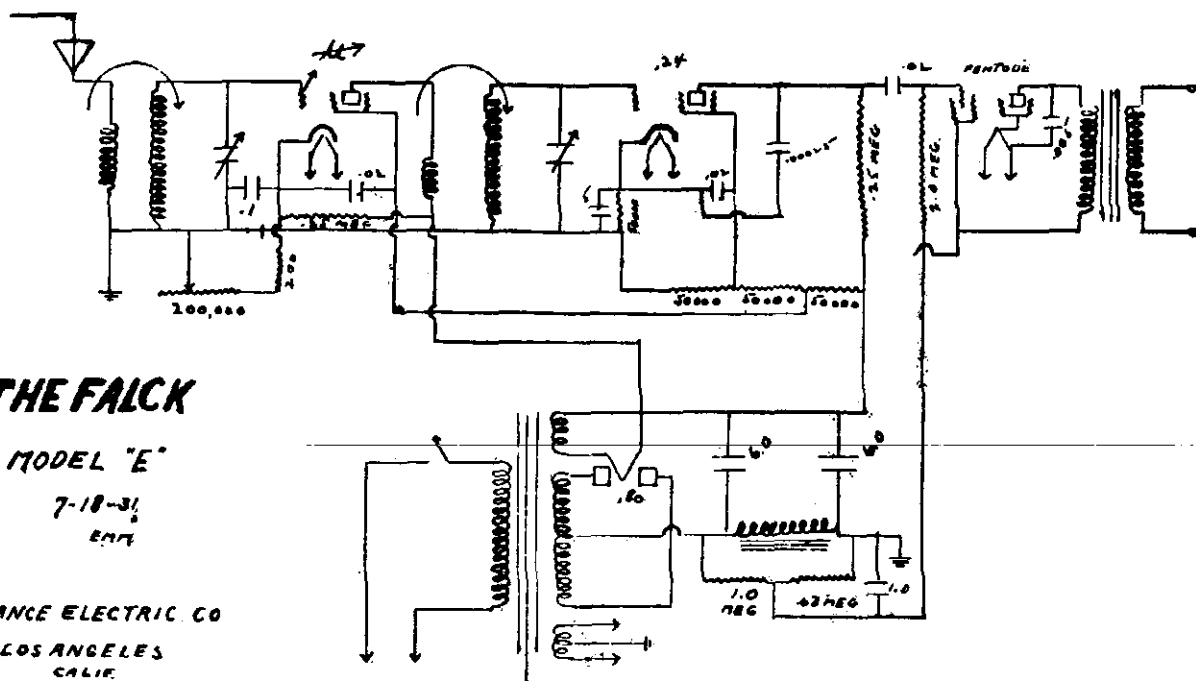

THE FALCK


MODEL "E"

7-18-31
EMM

ADVANCE ELECTRIC CO
LOS ANGELES
CALIF.

MODEL Falck 77-88-89

ADVANCE ELECTRIC CO

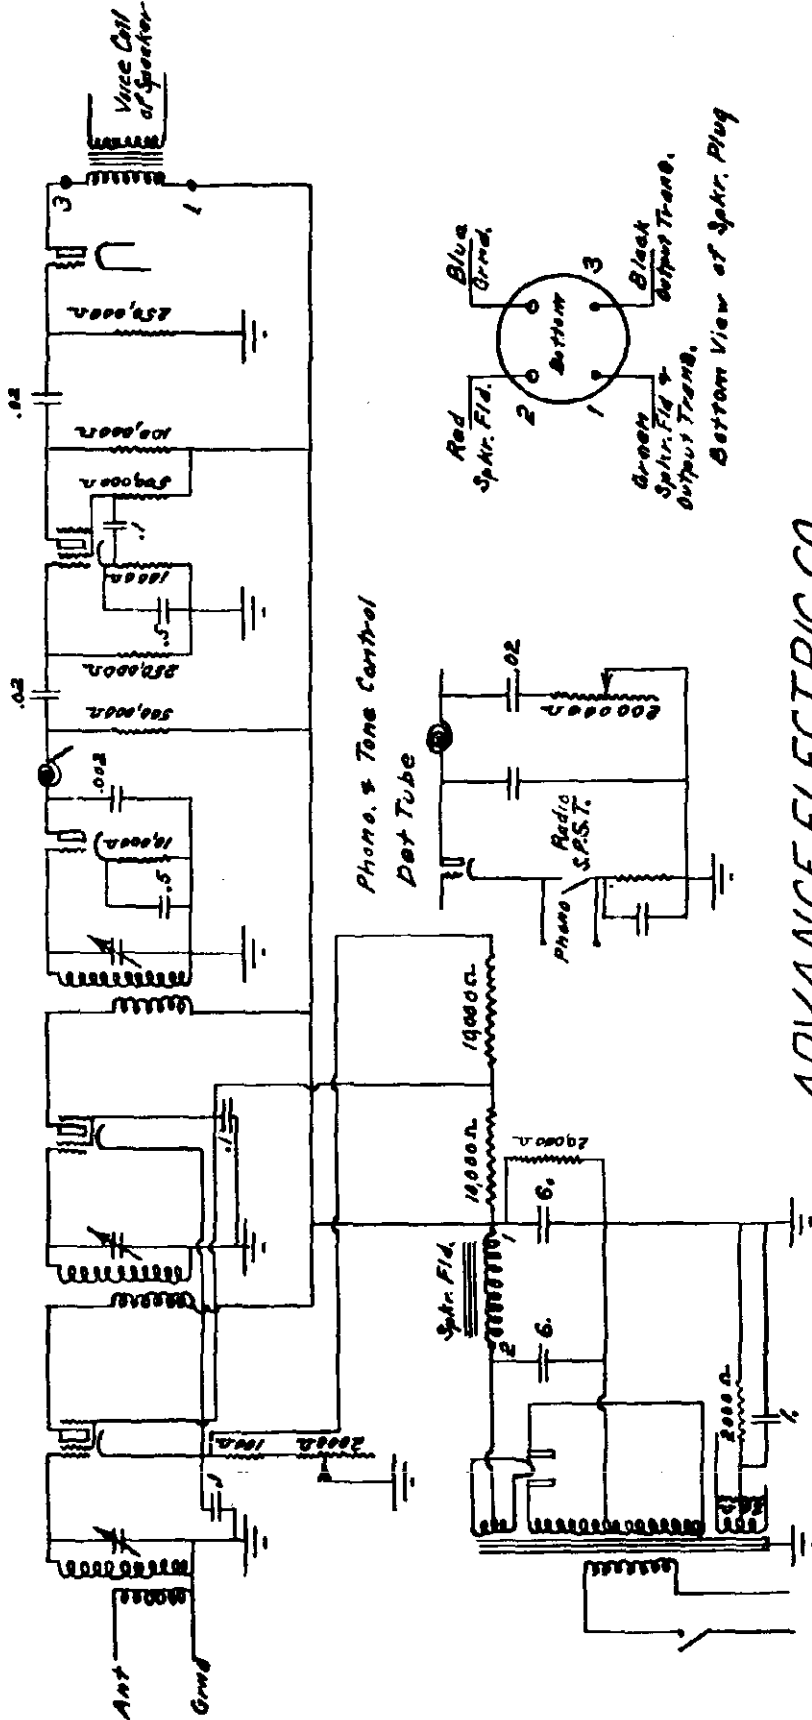


ADVANCE ELECTRIC CO.
FALCK MODELS 77-88-89

Oct, 29, 1930 Drawn by E.O. Woodward

ALLIED RADIO CORP.

MODEL KNIGHT SG-8
Bottom View

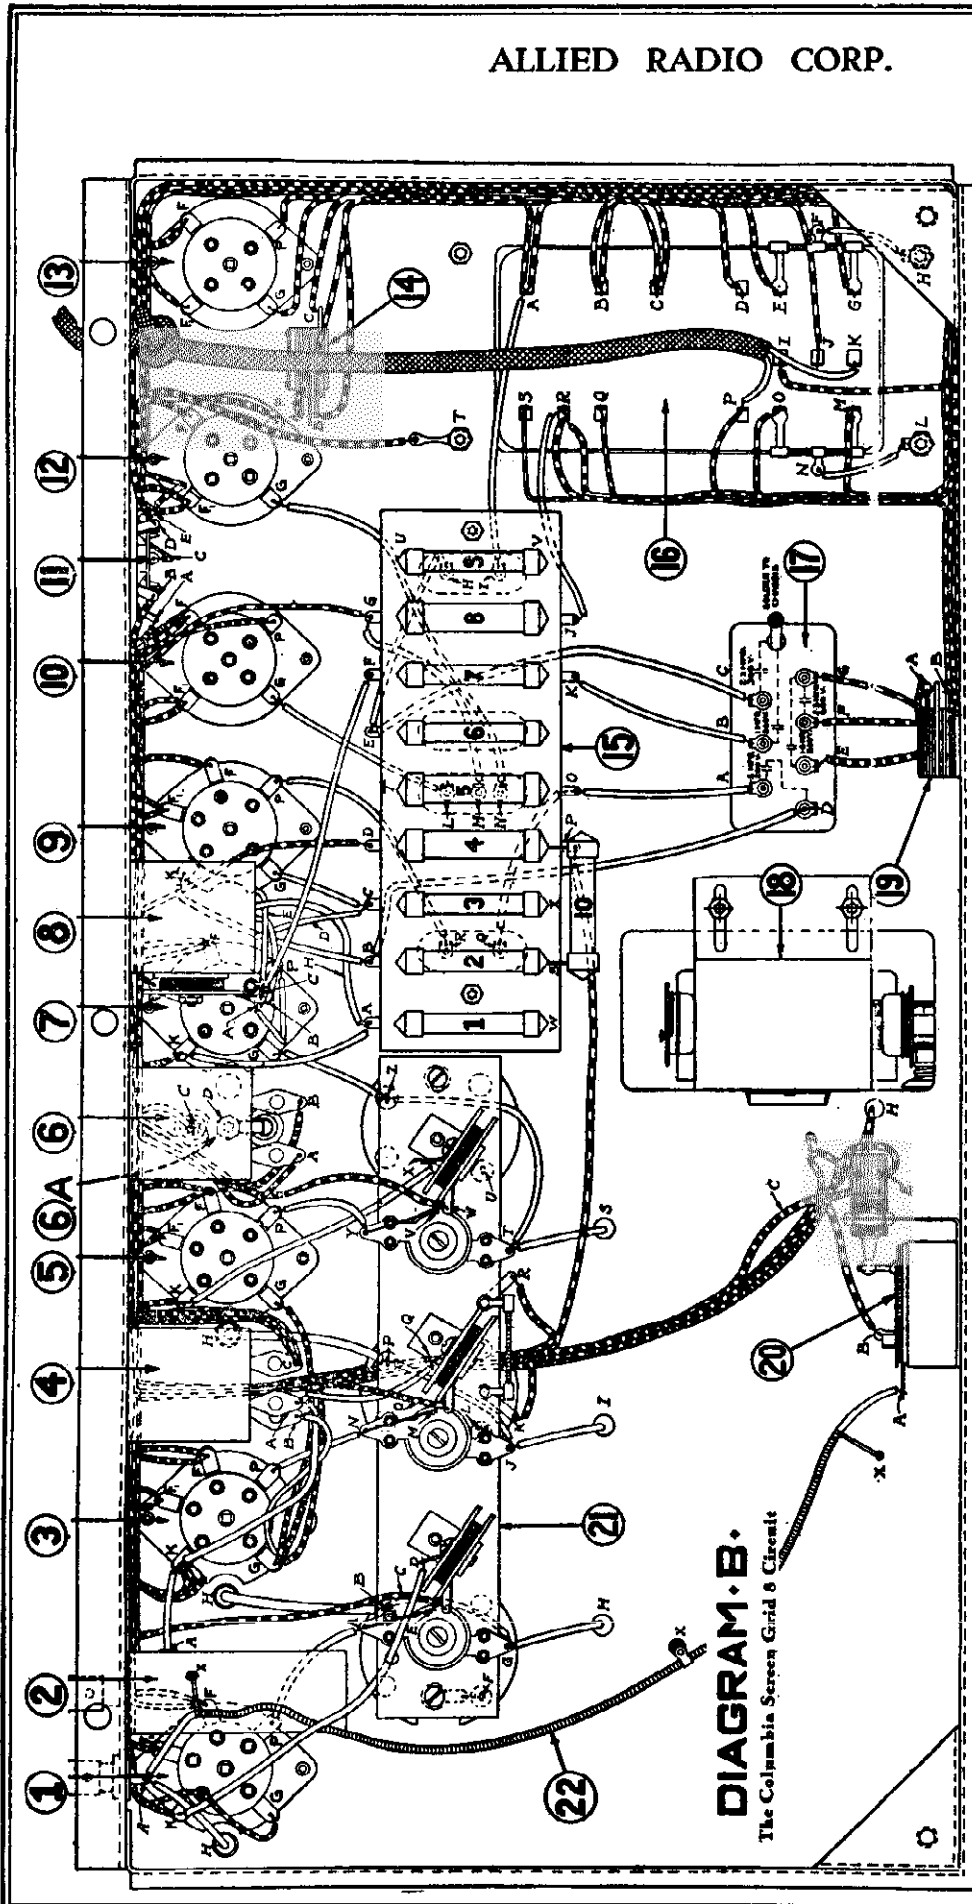


KNIGHT MODEL SG-8 BOTTOM VIEW

DIAGRAM · B ·
The Columbia Screen Grid 6 Circuit

Tube No. In Order	Type Of Tube	Position of Tube 1st, R.F. Det., Etc.	Tube Out		Readings, Plug In Socket Of Set				Tube In Tester			
			A Volts (4)	B Volts (5)	A Volts (6)	B Volts (7)	C Volts (8) (Grid) (9)	Cathode - Heater Volts (9)	Normal Plate M.A. (16)	Plate M.A. Grid Test (11)	Plate Change M.A. (12)	Screen Grid Volts (13)
1	224	1st R.F.	2.45	180	2.4	174	-1.5	1.5	4.5	6.7	2.2	80
2	224	2nd R.F.	2.45	180	2.4	174	-1.5	1.5	4.5	6.7	2.2	80
3	224	3rd R.F.	2.45	180	2.4	174	-1.5	1.5	4.5	6.7	2.2	80
4	227	Det.	2.45	186	2.4	106	-14.5	14.5	.2
5	227	1st A.F.	2.45	162	2.4	68	3	3	3.2	3.8	.6	...
6	245	2nd A.F.	2.35	230	2.2	212	-3.8	20	23	23	3.	...
7	245	2nd A.F.	2.35	230	2.2	212	-3.8	19	22	22	3.	...

MODEL KNIGHT SG-8
1930

ALLIED RADIO CORP.

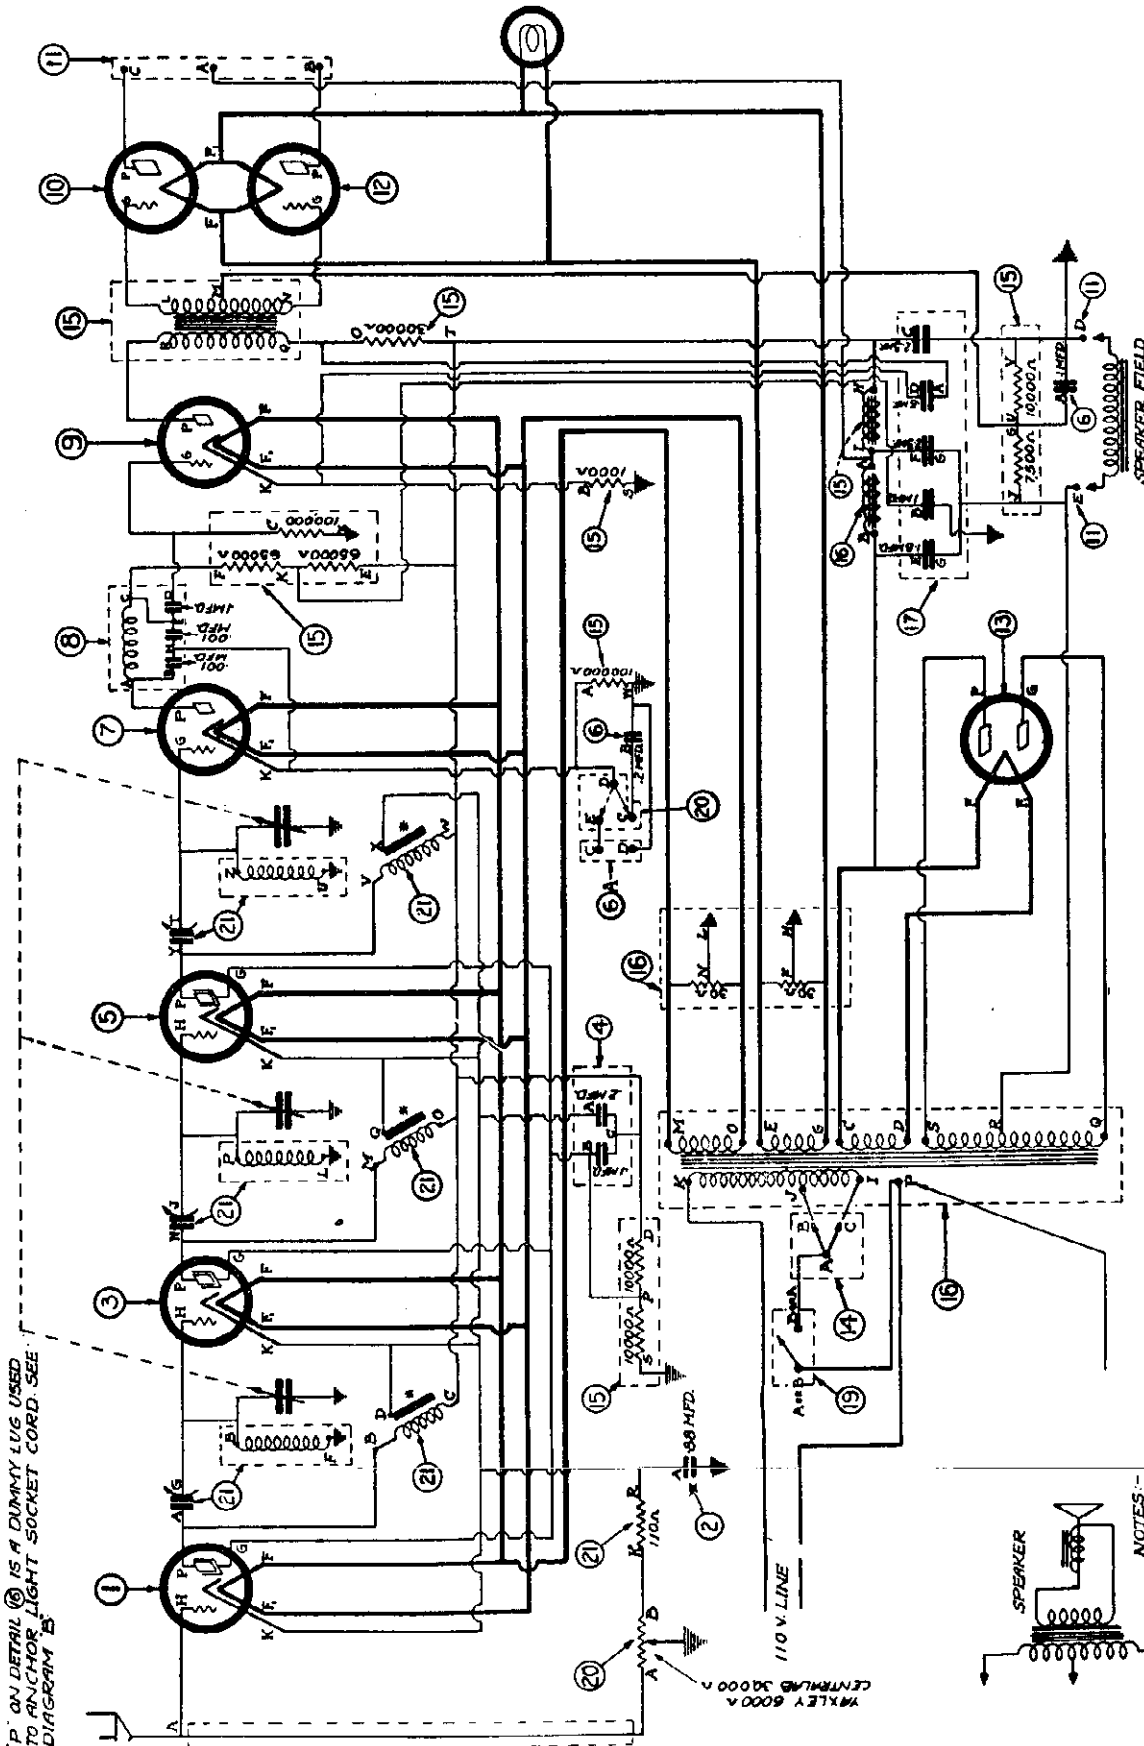


* ON DETAIL 11 IS A DUMMY LUG USED TO ANCHOR LIGHT SOCKET CORD. SEE DIAGRAM 15

NOTES--
ENCIRCLED NUMBERS INDICATE DETAILS ON DIAGRAM 15.
LETTERS INDICATE TERMINALS ON DETAILS.
* INDICATES MOUNTING BRACKETS ON DETAIL 21

KNIGHT MODEL SG-8 (1930)

Detail 11 is the Loud-Speaker Socket. Terminals D and E are the speaker field winding - 1000 ohms.


VOLTAGE DATA ON NEXT PAGE

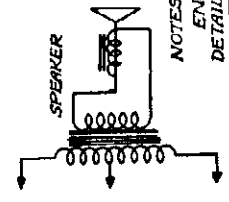

MODEL KNIGHT 118
AVC Super 1930

ALLIED RADIO CORP.

PEAK FREQUENCY = 175 K.C.

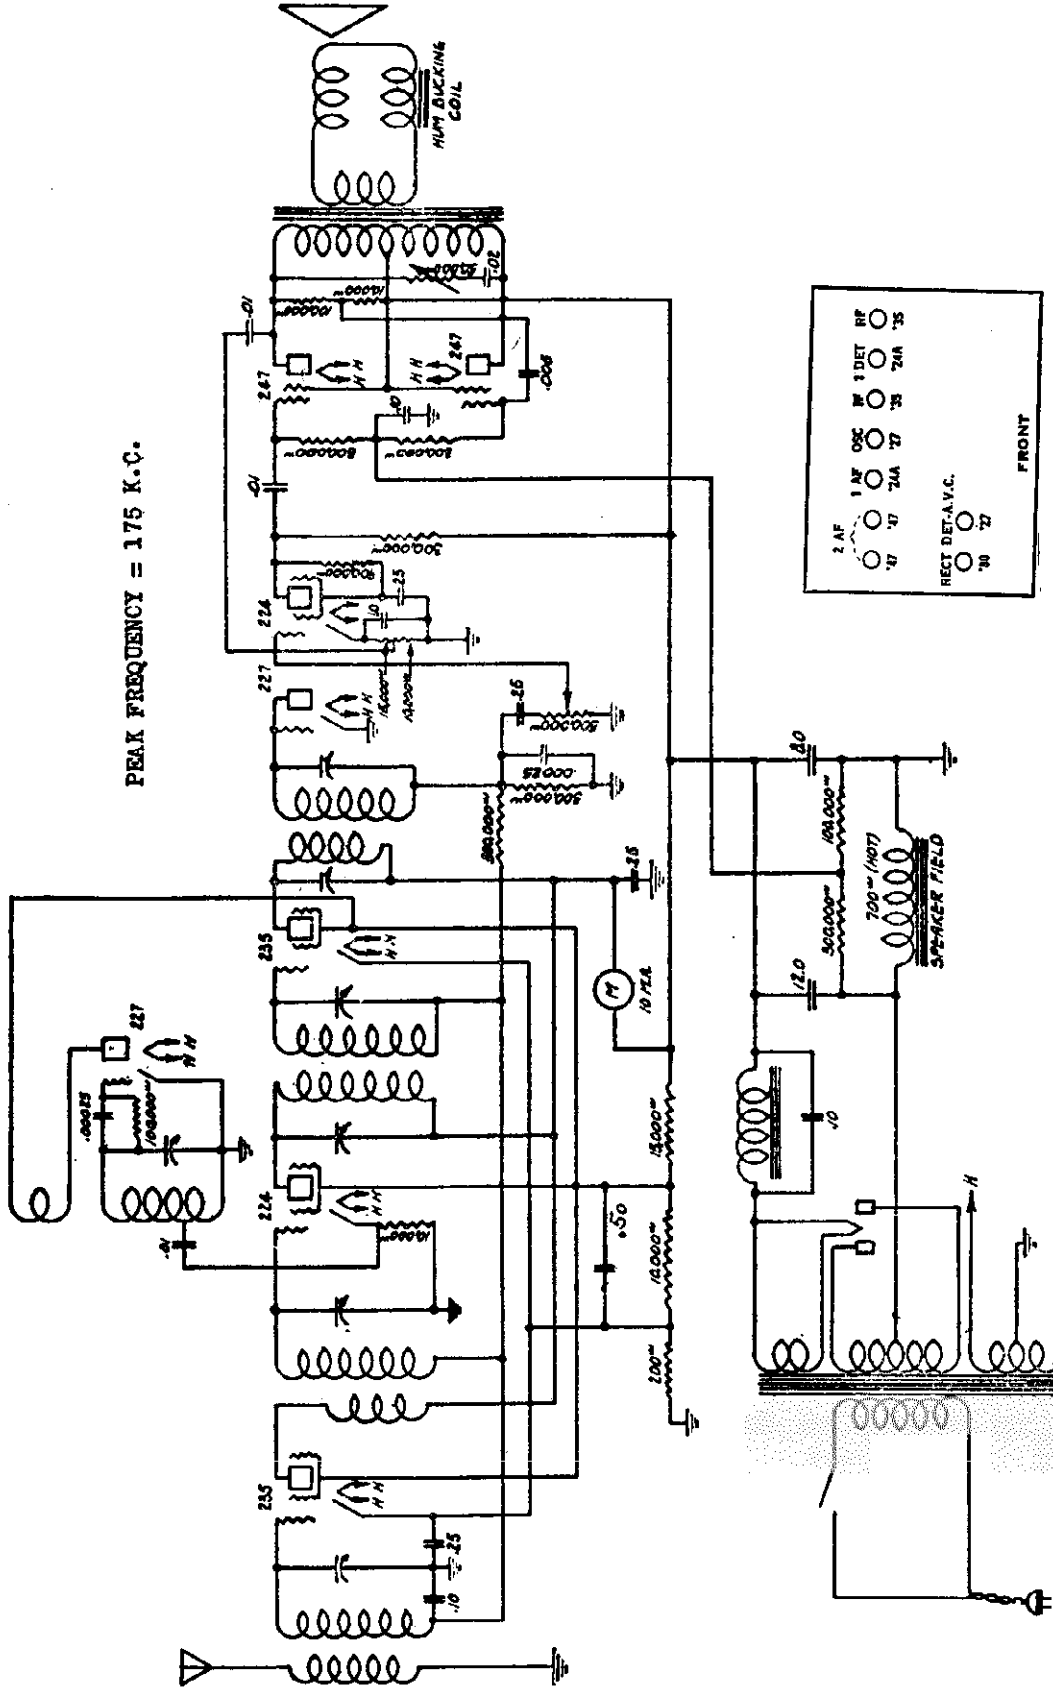


2 AF	1 AF	OSC	1 DET	RF
247	247	6X4	6A6	6A6
RECT. DET. A.V.C.				
10	10	77	77	77
FRONT				

ELECTRO-DYNAMIC SPEAKER:
The electro dynamic speaker field winding, which is 700 chas, is utilized as an additional choke in the filter circuit. The correct bias for the two 247 output tubes is obtained from the voltage drop across the speaker field shunt resistors.

ALLIED RADIO CORP.

MODEL KNIGHT 118
Service Notes

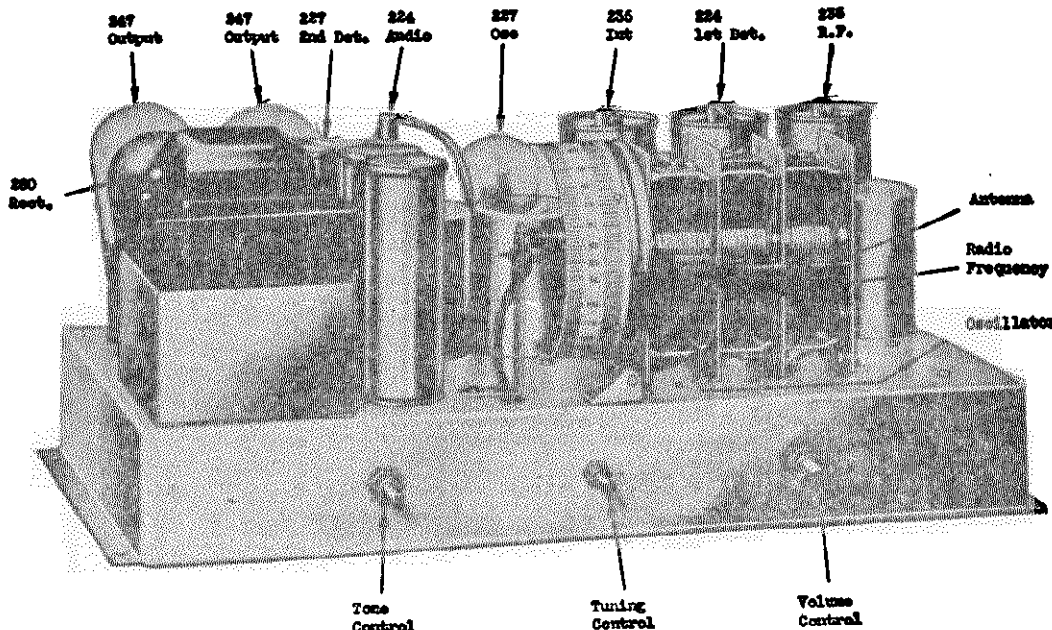

ALIGNMENT OF RECEIVER:

Because of the construction and thorough impregnation of the intermediate coils, the intermediate stages should rarely need retracking. Only when an intermediate coil has become defective due to an open or burned out winding, should it be necessary to readjust the intermediate trimmers. Should this occur, it is necessary that an oscillator be used and the intermediate trimmers be adjusted at 175 kilocycles. To align the intermediate stages, connect the high side of the oscillator output to the grid circuit of the first detector, which is done by disconnecting the grid cap of the 224 first detector and connecting the high side of the test oscillator to the control grid of this tube. The ground side of the test oscillator should be connected to the ground post on the chassis. Set the oscillator at 175 kilocycles and adjust the output of the oscillator so that a convenient reading is obtained on the output meter. Be sure that the output from the oscillator is not so large that it will overload the second detector. If during the alignment the meter goes off scale, reduce the output of the test oscillator or adjust the receiver volume control.

The trimmers of the intermediate coils are accessible through the small holes in the bottom of the chassis. There are two trimmers to each intermediate coil. Align the grid trimmer of the first intermediate coil. After a maximum reading is obtained by adjusting the grid trimmer on the first intermediate, adjust the primary for maximum reading and then recheck the grid side to make certain the alignment of the secondary has not been changed by the adjustment of the primary. The same procedure is followed in aligning the second intermediate coils. After both intermediate coils are properly aligned the adjustment of the intermediate stage is complete and they should not be further disturbed.

Replace the grid cap on the first detector and connect the oscillator output leads to the antenna and ground posts of the receiver and set the oscillator at 1435 kilocycles. Then tune the receiver to 1435 kilocycles on the dial. It is important that the receiver be tuned to this point. If the receiver is out of the cabinet it will be necessary to use some temporary indicator so that the position 1435 kilocycles on the dial may be accurately located. (This indicator should be set so that when the variable condensers are at the maximum capacity stop the indicator points to the last line on the dial at the low frequency end.) Then track the variable condensers by adjusting the trimmer condensers in the following order: Oscillator, antenna and radio frequency - (reading from the front of the receiver toward the back, the variable condenser sections are: Oscillator, antenna and radio frequency). After the variable condensers have been properly tracked at 1435 kilocycles, adjust the oscillator to 1295 kilocycles. Tune the receiver to this frequency. Check alignment of the condensers at this point by bending the end plate of the rotors in and out, noting the change in reading on the output meter. If when the plates are bent in the reading is increased, it is an indication that that particular section requires more capacity and the end plate should be permanently bent in at this point; or, if when the end plate is bent away the reading is increased, the end plate should be bent away permanently, as it is an indication that that particular section requires less capacity at that particular point. The variable condensers should be checked in this manner at 1895, 890, 650 and 500 kilocycles. These points have been chosen so as to take advantage of the slots in the end plates of the variable condensers. This procedure of bending plates should rarely be necessary on the oscillator section, as the plates of the oscillator section are especially designed to properly track over the broadcast spectrum, providing the antenna and radio frequency stages are correctly aligned.

Tube Voltages


Type of tube	Position of Tube	Filament Volts	B Volts	C Volts	Normal Plate M.A.	Screen Volts
227	Oscillator	2.4	62.5		4.75	
235	Radio Frequency	2.4	240	2.15	2.75	27
224	1st Detector	2.4	230	4.35	.5	65
235	Intermediate	2.4	237	2.15	2.75	72
227	2nd Detector	2.4				
247	Pentode	2.4	220	8.**	32.5	250
247	Pentode	2.4	220	8.**	32.5	250
280	Rectifier	4.9			47.5 ea. plate	
224	1st Audio	2.4	100	2.1*	.5	35*

115 V. line Volume Control Full On

**To read the 247 bias, read between 247 grid and ground.
*These readings are only comparative and are not true voltages applied. The volt meter, when the readings are taken at these points, is in series with a very high resistance.

ALLIED RADIO CORP.

MODEL KNIGHT 7 Tube Superhet '32

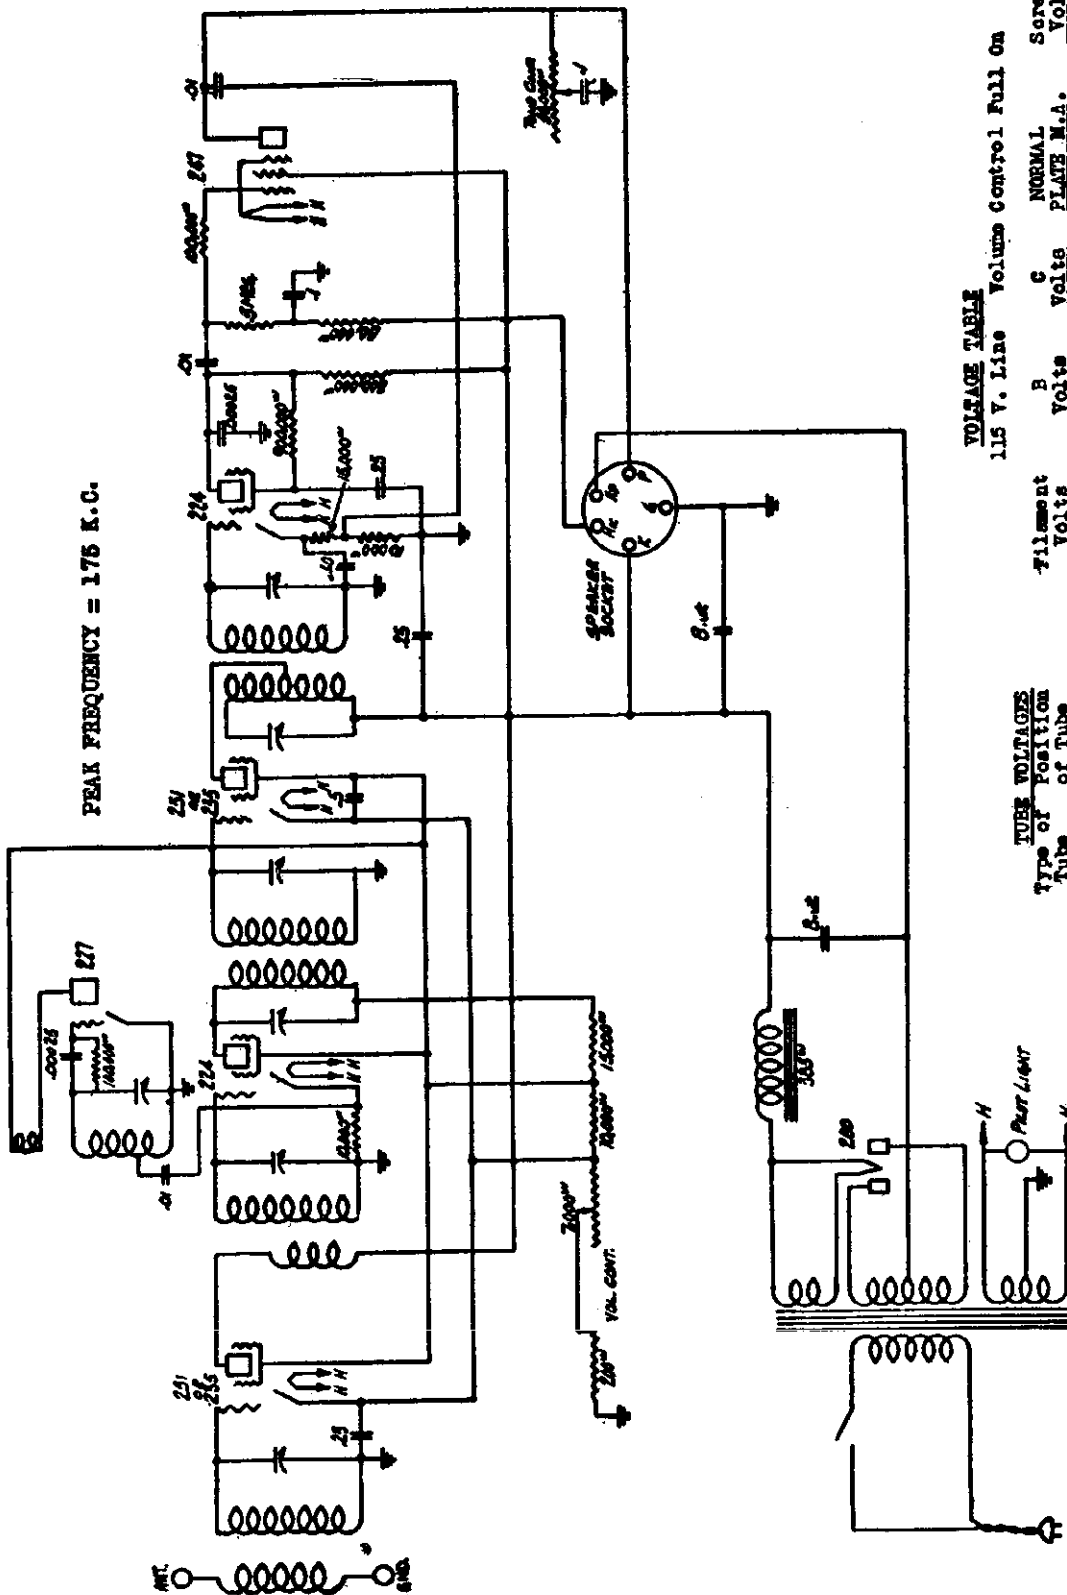

VOLTAGE TABLE
115 V. Line Volume Control Full On

TUBE	Position of Tube	Filament Volts	B Volts	C Volts	NORMAL PLATE M.A.	Screen Volts
227	Oscillator	2.4	240	2.15	4.75	27
235	Radio Frequency	2.4	250	4.25	.5	65
224	1st Detector	2.4	237	2.15	2.75	72
235	Intermediate	2.4	100*	2.1*	2.5	35*
224	2nd Detector	2.4	250	16.5**	52.5	250
247	Pentode	2.4			27. ea. plate	
280	Rectifier	4.95				

KNIGHT 7 TUBE SUPERHETERODYNE 1932 MODEL

*These readings are only comparative and are not true voltages applied. The volt meter, when the readings are taken at these points, is in series with a very high resistance.

**MODEL Knight 7 Tube
Superhet '32
Service Notes**

ALLIED RADIO CORP.

KNIGHT 7 TUBE SUPERHETERODYNE 1932 MODEL

INTERMEDIATE TRANSFORMERS:


The intermediate transformers are of the band pass type and of exceptionally high uniform gain. They are tuned to 175 kilocycles. The intermediate frequency trimmers are mounted on an isolantite base, preventing the transformer from becoming detuned due to the trimmer condensers absorbing moisture or warping. For this reason it should rarely, if ever, be necessary to re-track the intermediate frequency trimmers. In the event that it should be advisable to re-align the intermediate frequency coils, it is absolutely essential that a 175 kilocycle oscillator and an output measuring device be used.

ALIGNMENT OF RECEIVER:

Because of the construction and thorough impregnation of the intermediate coils, the intermediate stages should rarely need re-tracking. Only when an intermediate coil has become defective due either to an open or burned out winding, should it be necessary to re-adjust the intermediate trimmers. Should this occur, it is necessary that an oscillator be used and the intermediate trimmers be adjusted at 175 kilocycles. To align the intermediate stages, connect the high side of the oscillator output to the grid circuit of the first detector, which is done by disconnecting the grid cap of the 224 first detector and connecting the high side of the test oscillator to the control grid of this tube. The ground side of the test oscillator should be connected to the ground post on the chassis. Set the oscillator at 175 kilocycles and adjust the output of the oscillator so that a convenient reading is obtained on the output meter. Be sure that the output from the oscillator is not so large that it will overload the second detector. If during the alignment the meter goes off scale, reduce the output of the test oscillator or adjust the receiver volume control.

The trimmers of the intermediate coils are accessible through the small holes in the top of the intermediate shield can. There are two trimmers to each intermediate coil. Align the grid trimmer of the first intermediate coil. After a maximum reading is obtained by adjusting the grid trimmer on the first intermediate, adjust the primary for maximum reading and then re-check the grid side to make certain the alignment of the secondary has not been changed by the adjustment of the primary. The same procedure is followed in aligning the second intermediate coils. After both intermediate coils are properly aligned the adjustment of the intermediate stage is complete and they should not be further disturbed.

Replace the grid cap on the first detector and connect the oscillator output leads to the antenna and ground posts of the receiver and set the oscillator at 1435 kilocycles. Then tune the receiver to 1435 kilocycles on the dial. It is important that the receiver be tuned to this point. If the receiver is out of the cabinet it will be necessary to use some temporary indicator so that the position 1435 kilocycles on the dial may be accurately located. (This indicator should be set so that when the variable condensers are at the maximum capacity stop the indicator points to the last line on the dial at the low frequency end.) Then track the variable condensers by adjusting the trimmer condensers in the following order: Oscillator, antenna and radio frequency - (reading from the front of the receiver toward the back, the variable condenser sections are: Oscillator, antenna and radio frequency). After the variable condensers have been properly tracked at 1435 kilocycles, adjust the oscillator to 1295 kilocycles. Tune the receiver to this frequency. Check alignment of the condensers at this point by bending the end plate of the rotors in and out, noting the change in reading on the output meter. If when the plates are bent in the reading is increased, it is an indication that that particular section requires more capacity and the end plate should be permanently bent in at this point; or, if when the end plate is bent away, the reading is increased, the end plate should be bent away permanently, as it is an indication that that particular section requires less capacity at that particular point. The variable condensers should be checked in this manner at 1295, 890, 650 and 550 kilocycles. These points have been chosen so as to take advantage of the slots in the end plates of the variable condensers. This procedure of bending plates should rarely be necessary on the oscillator section, as the plates of the oscillator section are especially designed to properly track over the broadcast spectrum, providing the antenna and radio frequency stages are correctly aligned.

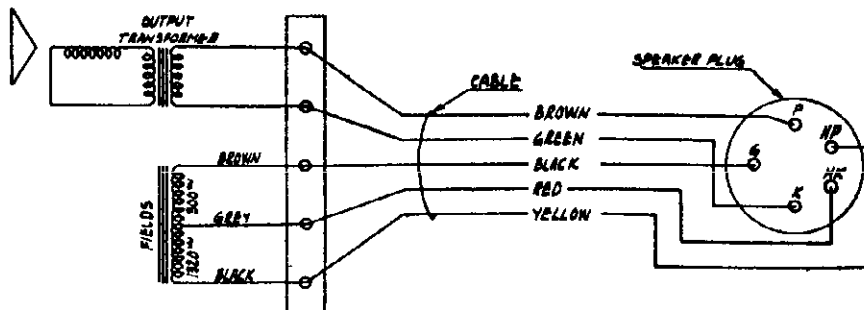


ELECTRO DYNAMIC SPEAKER:

The electro dynamic speaker has a tapped field winding - one section of which is 1320 ohms and is utilized as the second choke in the filter circuit. The other section, which is 500 ohms, is used to obtain the proper bias for the 247 tube, as well as acting as an additional filter choke.

ANSLEY RADIO LABORATORIES


MODEL U-1
AC / DC

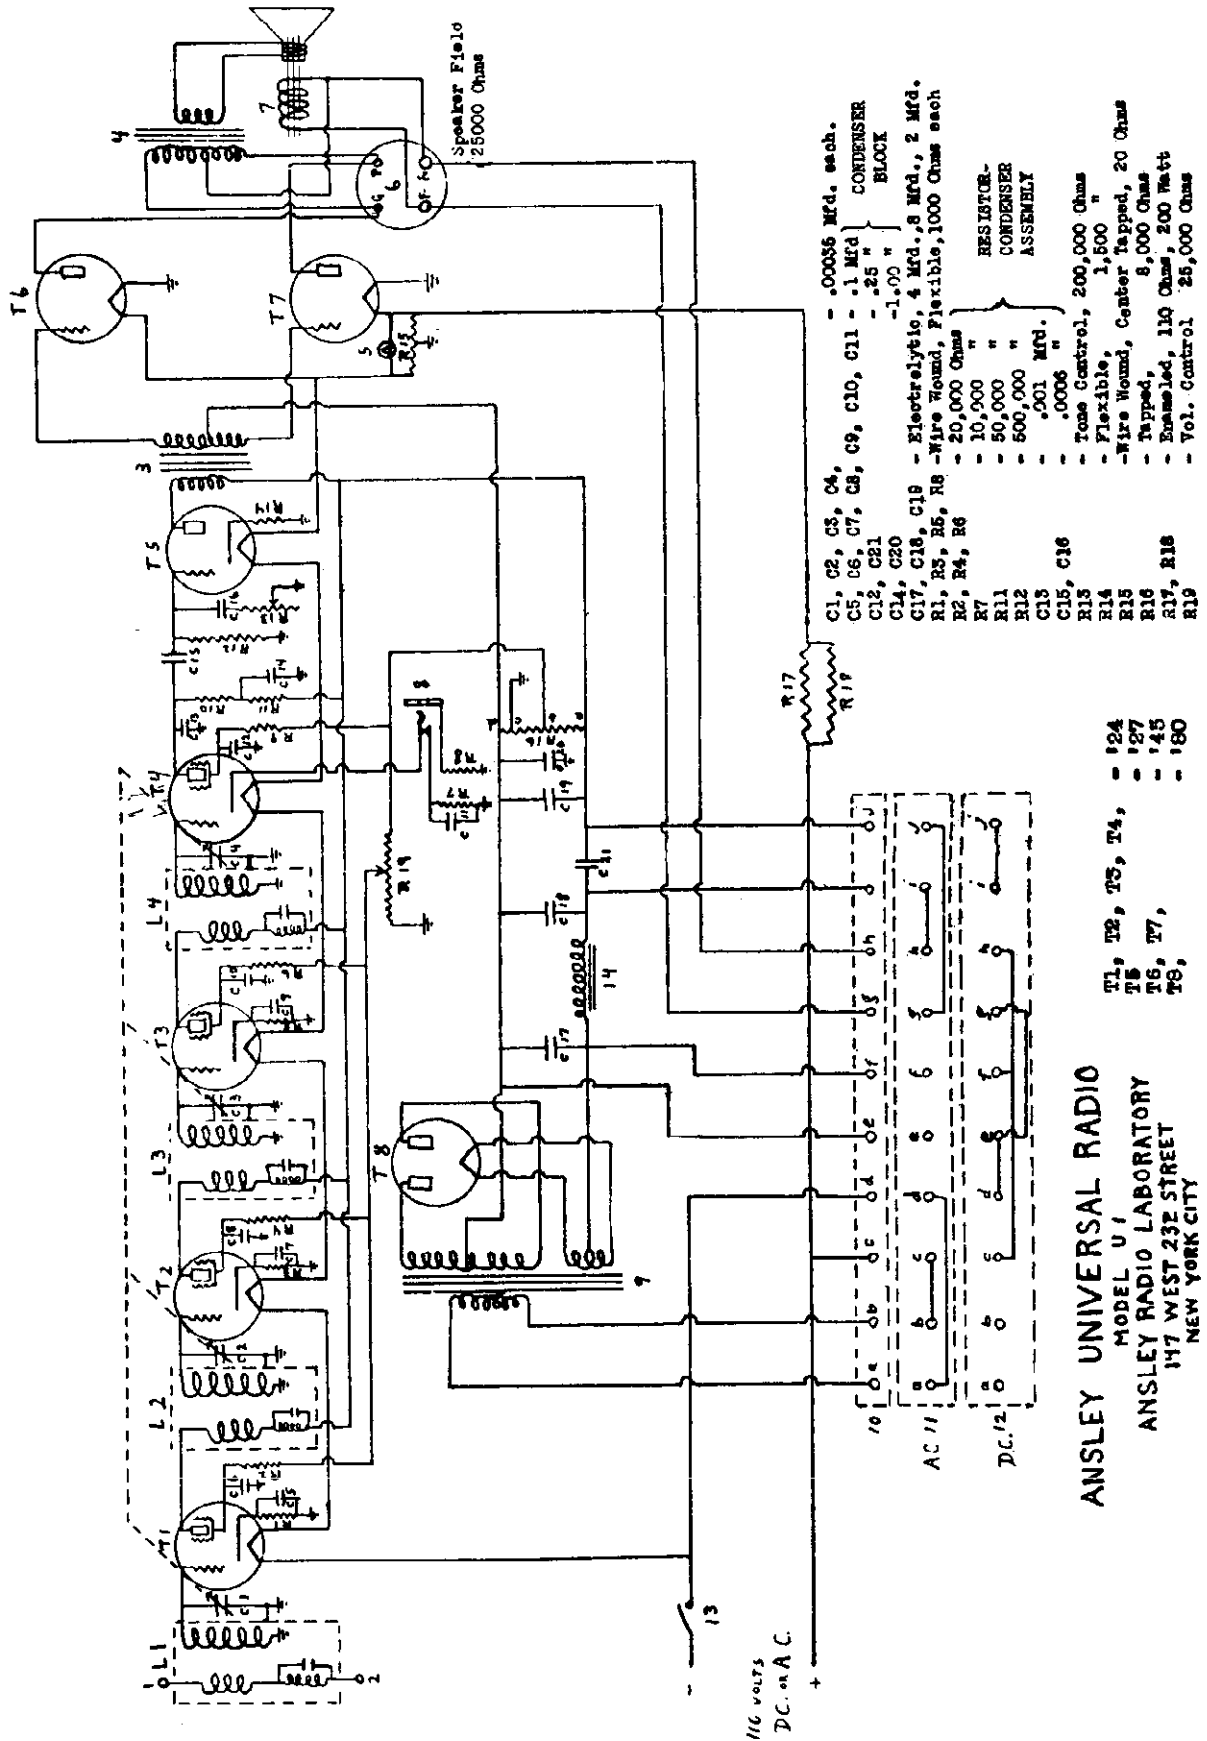

ANSLEY UNIVERSAL RADIO
MODEL U 1
ANSLEY RADIO LABORATORY
147 WEST 232 STREET
NEW YORK CITY

APPEL-HENDERSON

MODEL Silver King DC
Combination

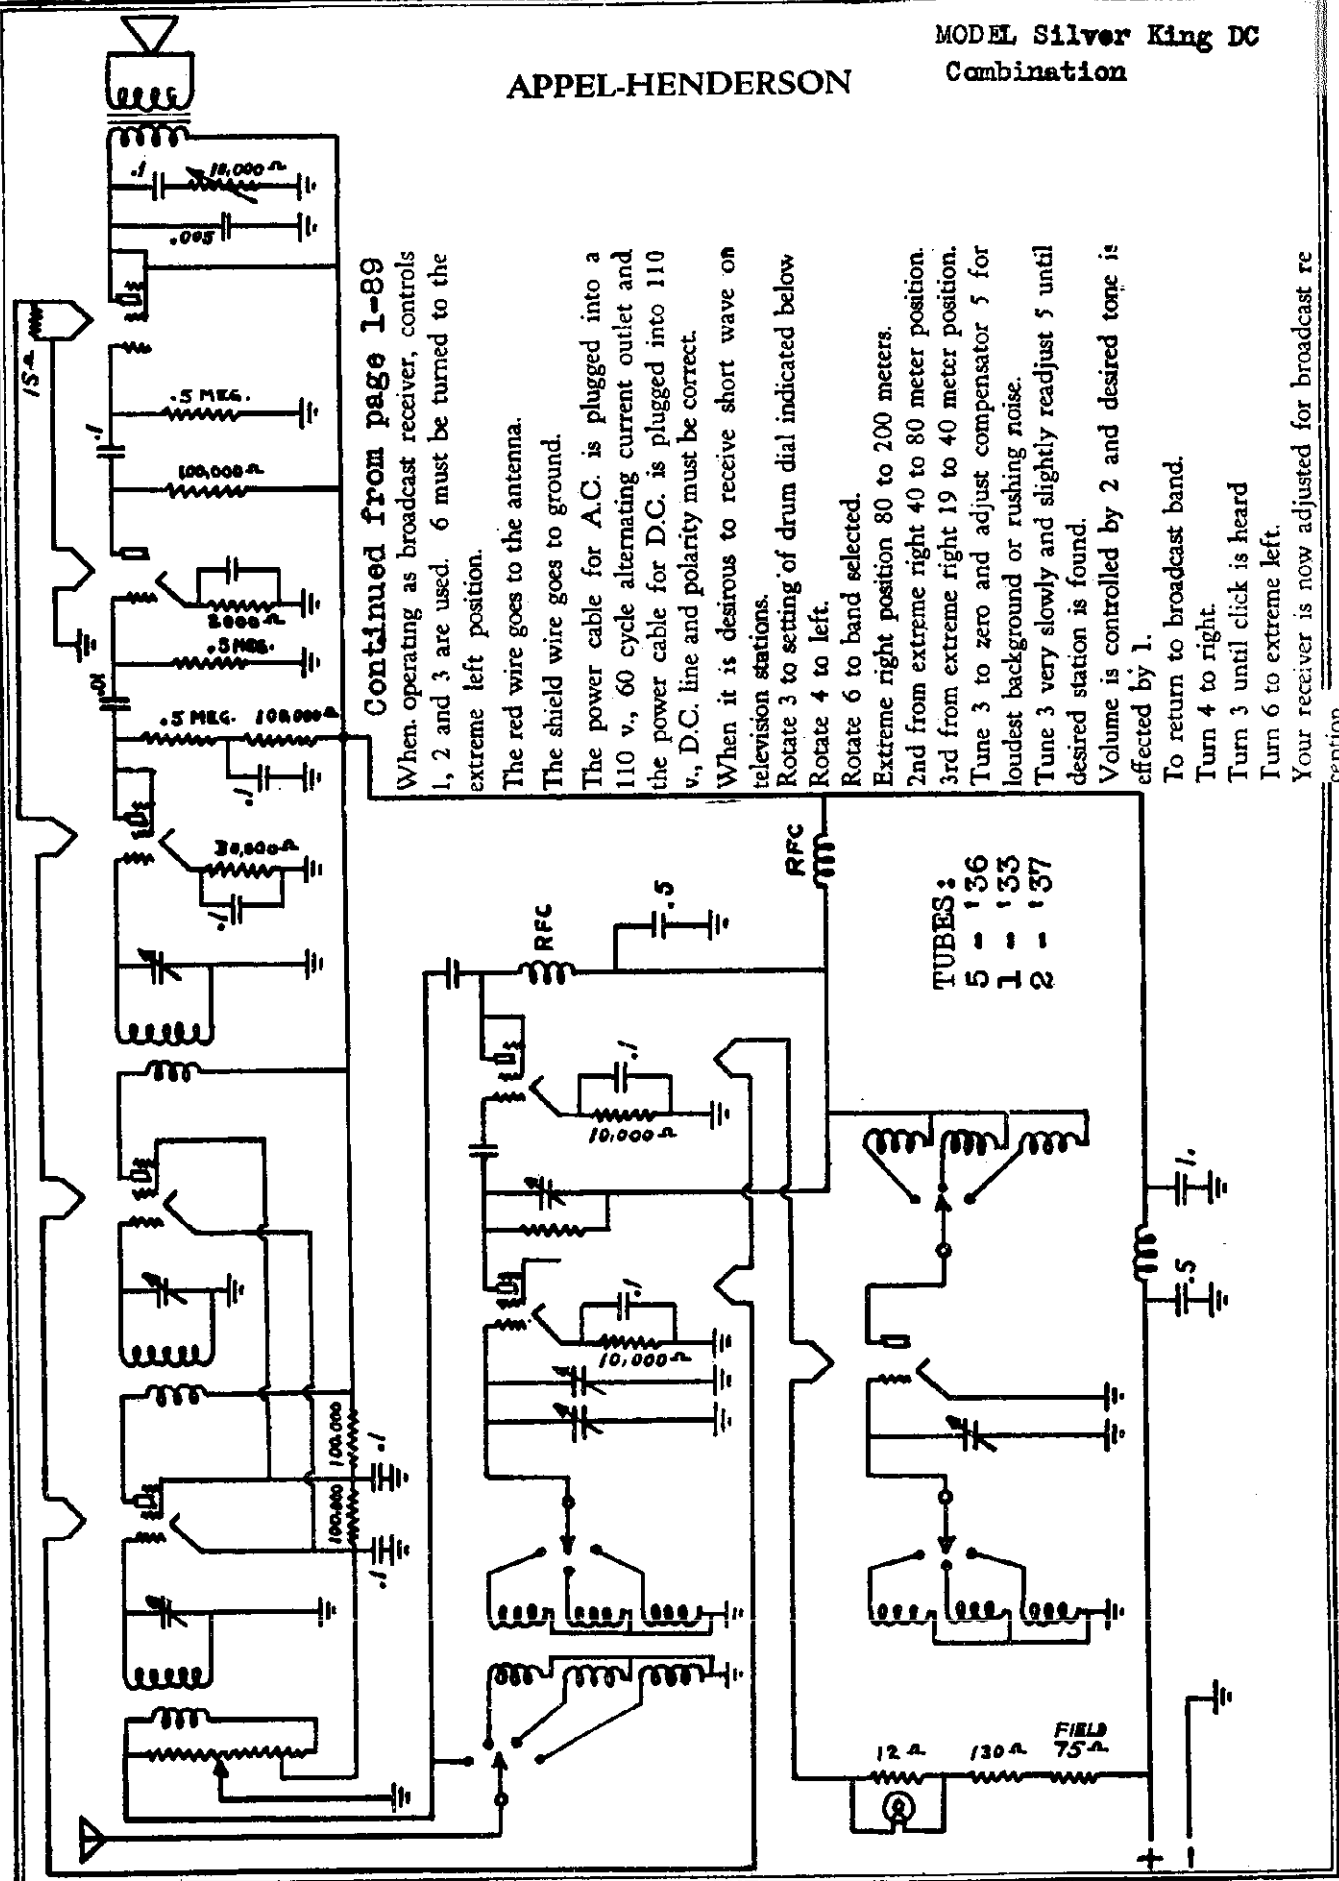

Continued from page 1-89
When operating as broadcast receiver, controls 1, 2 and 3 are used. 6 must be turned to the extreme left position.
The red wire goes to the antenna.
The shield wire goes to ground.
The power cable for A.C. is plugged into a 110 v., 60 cycle alternating current outlet and the power cable for D.C. is plugged into 110 v., D.C. line and polarity must be correct.
When it is desirable to receive short wave on television stations.
Rotate 3 to setting of drum dial indicated below
Rotate 4 to left.
Rotate 6 to band selected.
Extreme right position 80 to 200 meters.
2nd from extreme right 40 to 80 meter position.
3rd from extreme right 19 to 40 meter position.
Tune 3 to zero and adjust compensator 5 for loudest background or rushing noise.
Tune 3 very slowly and slightly readjust 5 until desired station is found.
Volume is controlled by 2 and desired tone is effected by 1.
To return to broadcast band.
Turn 4 to right.
Turn 3 until click is heard
Turn 6 to extreme left.
Your receiver is now adjusted for broadcast reception.

- TUBES:
5 - 136
1 - 133
2 - 137

MODEL 46, 47, 53

Data

ATWATER KENT MFG. CO.

Model 46, 47 and 53 Receivers

General Description

Model 46 is similar to Model 43, except that the power unit is enlarged to provide adequate plate supply for the 171A-type tubes used in the 2nd A.F. stage. Also, the voltage regulator is not used, and the condensers in the power unit are contained in a separate replaceable section. Model 53 is a Model 46 with a type F-2C electro dynamic speaker mounted in a twenty six inch high metal cabinet.

Model 47 is similar to Model 46, but has four stages of R. F. amplification, with double R.F. transformers, thus providing greater sensitivity and selectivity.

The continuity tests given on page 103 may be applied to the receiver chassis of Models 46 and 53. The same tests may be applied to Model 47, with additional tests for the 4th R.F. socket contacts, which should give the same readings as the 2nd and 3rd R.F. sockets.

Special instructions for servicing the power unit in these three models are given below

Power Units in Models 46, 47 and 53

Apply the continuity test given in the table on page 104. If any one of the condensers is shorted or leaky, replace the condenser assembly. If the power transformer, filter-choke or output transformer is defective, replace the main sealed container, salvaging all other parts.

Replacing Condenser Assembly

Release panel assembly from power unit and remove panel-mounting strip by taking out the machine screw at each end. Unscrew two bolts holding the condenser assembly retaining-spring and take out the spring and supporting strip. Cut the three leads (white, blue, and green-yellow tracer), which connect between the condenser assembly and the transformer-choke assembly, at about the mid-point of each lead. Unsolder black lead from ground lug. Unsolder yellow lead and two black-red tracer leads from panel terminals. Unsolder leads at contacts of speaker-plug socket and socket 2Aa. Pull these leads up an inch or so through the hole in the socket-mounting angle and push the cable to one side



of the unit to allow room for removal of the condenser assembly. Take-out the assembly, pulling the blue M2 lead up through the cable covering.

Insert a new condenser assembly, reversing above procedure. Insulate the joints on the blue, white, and green-yellow tracer leads which connect the condenser assembly to the transformer-choke assembly

Replacing Transformer-Choke Assembly

Unsolder leads from socket plates at both ends of container and remove these sockets. Unsolder primary winding leads at points where they connect to the toggle switch and to one side of the 110-volt cable respectively. Release panel assembly from unit. Un-screw panel-mounting strip and condenser-retaining spring. Pull the primary leads, the yellow-black tracer output leads and the brown P2Aa lead (No. 18 wire) up through the cable covering. Cut the three leads (white, blue, and green-yellow tracer) which connect the transformer-choke assembly and the condenser assembly. Cut each lead at about the mid-point. Unsolder the six filament winding leads, the brown +B, 2A lead, and the white +B, R.F. lead from terminals on panel assembly. Unsolder black lead from ground lug. Remove the condenser and panel assemblies.


Substitute a new transformer-choke assembly, mount the salvaged parts and connect exactly like the original, reversing procedure outlined above

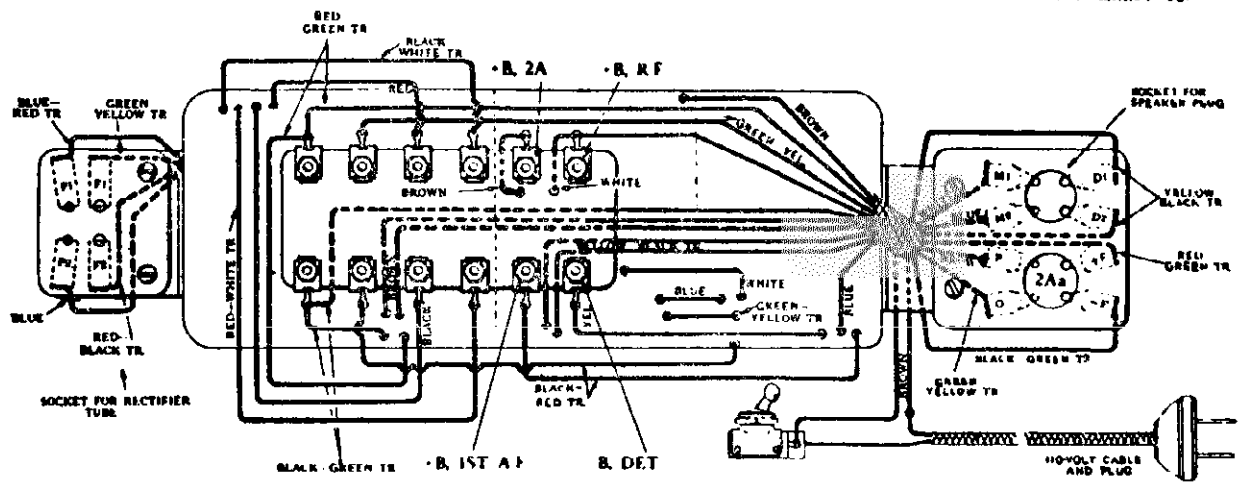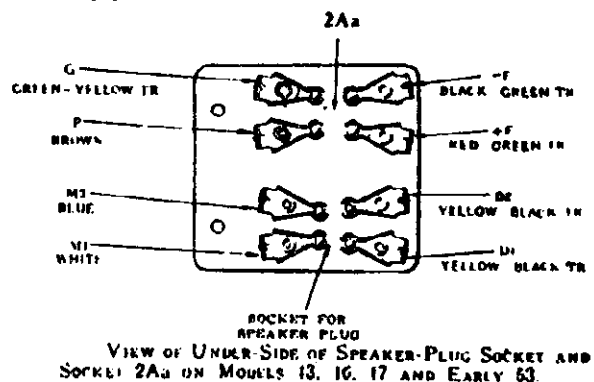

This view shows the panel assembly moved to the left of its normal position. The replaceable condenser assembly is in the right hand end of the container. A black lead from the condensers assembly and a green lead from the transformer assembly are connected to a ground lug under the left hand panel mounting angle. In some units of this type the two leads to D1 and D2 are red (No. 18 wire) instead of yellow with black-tracer

ATWATER KENT MFG. CO.

MODEL 82-Q
1st Type
Below serial
2,550,940

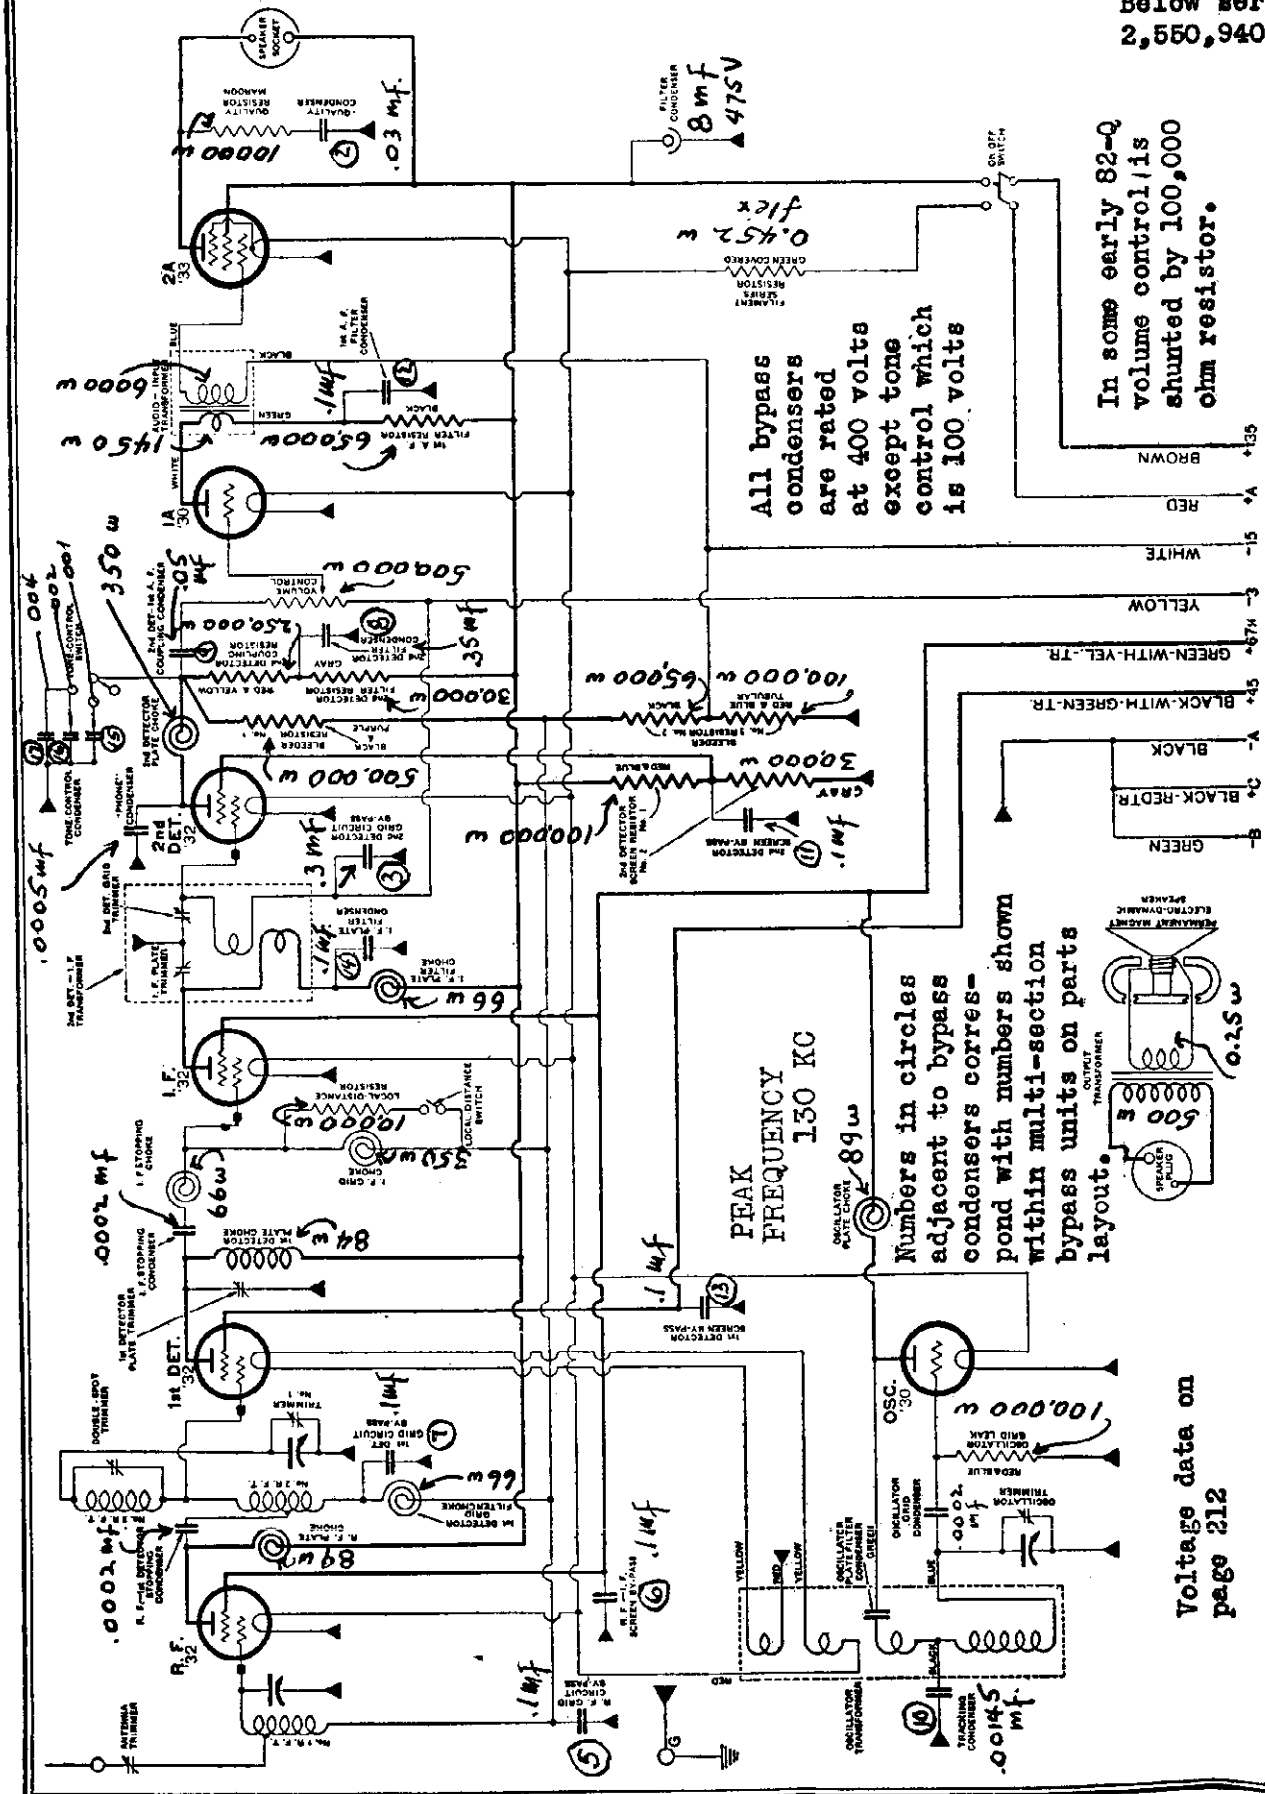

All bypass condensers are rated at 400 volts except tone control which is 100 volts

In some early 82-Q volume control is shunted by 100,000 ohm resistor.

PEAK FREQUENCY 130 KC


Numbers in circles adjacent to bypass condensers correspond with numbers shown within multi-section bypass units on parts layout.

Voltage data on page 212

In some 82-Q receivers, the primary of the audio input transformer is connected as follows: Green to the plate, and white to the 1st-A. F. filter resistor.

MODEL 82-Q
1st Type
Below serial
2,550,940

ATWATER KENT MFG. CO.

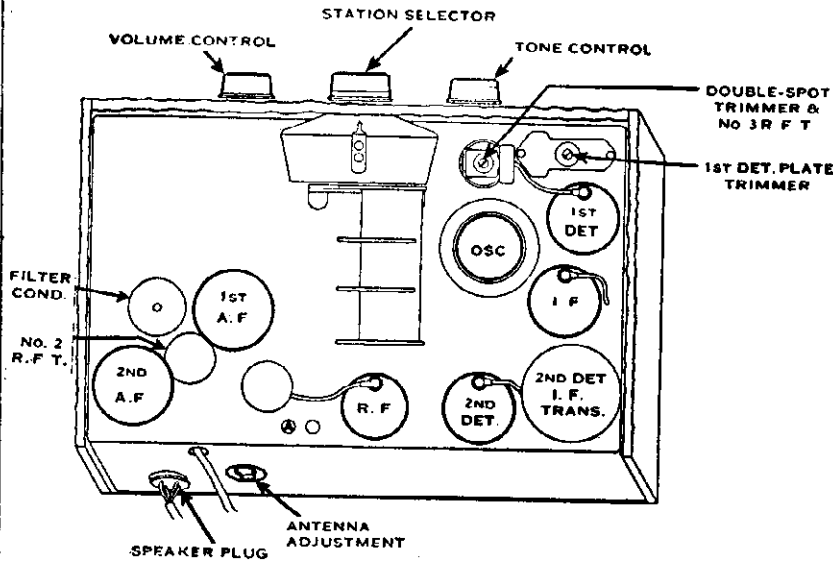

- RF Bypass # 1 # 21170
- RF Bypass # 2 # 15262
- RF Bypass #3 # 19150
- RF Bypass # 4 # 15262
- Tone Control # 16490

TOP VIEW OF MODEL 82-Q.

By-pass Condensers in Model 82-Q

R. F. By-pass No. 1

- 1—Not used.
- 2—Quality condenser.
- 3—2nd-detector grid-circuit by-pass.

R. F. By-pass No. 2

- 4—4B filter condenser.
- 5—R. F. grid-circuit by-pass.
- 6—R. F.—I. F screen by-pass.
- 7—1st-detector grid-circuit by-pass.

R. F. By-pass No. 3

- 8—2nd-detector filter condenser.
- 9—2nd-detector—1st-A. F. coupling condenser.
- 10—Tracking condenser.

R. F. By-pass No. 4

- 11—2nd-detector screen by-pass.
- 12—1st-A. F. filter condenser.
- 13—1st-detector screen by-pass.
- 14—I. F. plate filter condenser.

Tone-control Condenser

- 15—Tone condenser.
- 16—Tone condenser.
- 17—Tone condenser.
- 18—Not used.

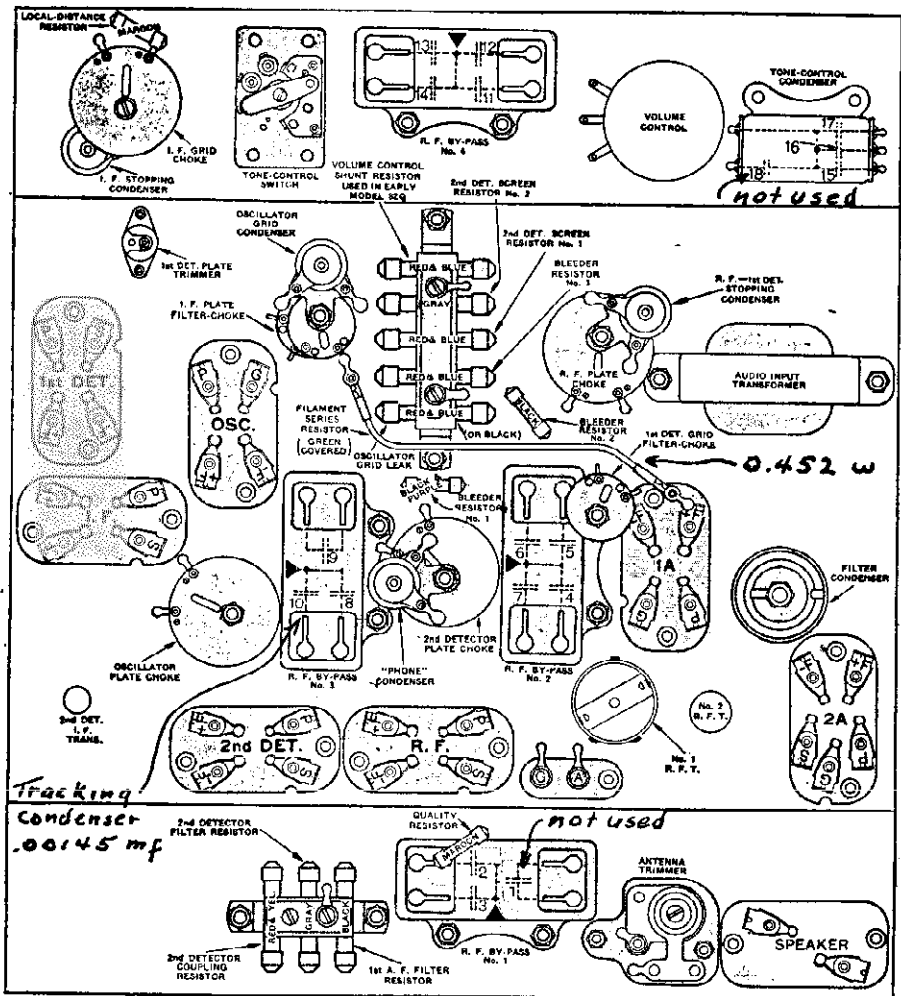


CHART OF MODEL 82-Q.

VOLTAGE DATA

ATWATER KENT MFG. CO.

VOLTAGE TABLE

FOR MODEL 80, 81, 82, 82-D, 82-Q, 83, 84, 84-D, 84-Q, 85, 85-Q, 86, 87 and 89

The voltages listed in this table are only approximate, and are measured values, not actual operating values. Turn volume control to maximum.

Use 250-volt scale of a 1000-ohm-per-volt D. C. voltmeter.

All plate, screen and grid measurements are made from cathode in heater-type tube, and from -F in plain-filament-type tube.

When replacing a tubular resistor, use a resistor of the same color as the defective unit. However, if a resistor has been removed, or its identification destroyed, replace it with a resistor having the color that is specified in the diagram for that set.


When replacing a tubular resistor, use a resistor of the same identifying color. In a few cases, owing to engineering changes, the color of a resistor in a chassis may not agree with the color specified in the diagram. In such a case, disregard the diagram and use a replacement resistor having the same color as the defective unit. However, if a resistor has been removed, or its identification destroyed, replace it with a resistor having the color that is specified in the diagram for that set.

	MODEL 80	MODEL 81	MODEL 82	MODEL 82-D	MODEL 82-Q	MODEL 83	MODEL 84	MODEL 84-D	MODEL 84-Q	MODEL 85	MODEL 85-Q	MODEL 86	MODEL 87	MODEL 89
LINE VOLTAGE	110	110	110	110	110	110	110	110	110	110	110	115	110	110
TOTAL "B" VOLTAGE	135	135	135	135	135	135	135	135	135	135	135	135	135	135
FILAMENT	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5
PLATE	135	135	135	135	135	135	135	135	135	135	135	135	135	135
SCREEN	75	75	75	75	75	75	75	75	75	75	75	75	75	75
GRID	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL
FILAMENT	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4
PLATE	235	95	70	135	235	235	205	80	135	135	135	135	170	125
SCREEN	90	50	50	40	90	90	65	50	25	50	40	35	70	45
GRID	5	7	4	5	3	5	6	5	3	3	3	4	11	4
FILAMENT	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4
PLATE	230	140	95	135	230	230	215	105	135	135	135	135	170	125
SCREEN	95	50	50	60	95	95	65	55	65	50	65	40	80	50
GRID	2	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL	SMALL
FILAMENT	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4
PLATE	110	105	55	45	110	110	90	55	60	100	40	95	90	120
SCREEN	45	65	10	35	45	45	45	10	35	65	25	60	60	120
GRID	5	8	3	3	5	5	6	1	3	7	3	8	SMALL	15
FILAMENT	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4
PLATE	230	120	75	55	230	230	205	80	55	215	55	210	90	130
SCREEN	240	120	120	120	240	240	215	120	120	235	120	220	120	130
GRID	4	11	5	3	3	4	5	2.5	3	5	3	5	3	4
FILAMENT	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4
PLATE	230	120	85	120	230	230	205	90	120	120	120	120	200	235
SCREEN	240	120	90	120	240	240	215	95	120	120	120	120	210	235
GRID	4	11	7	15	15	15	7	7	5	15	15	15	14	14
FILAMENT	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4
PLATE	95	95	100	60	100	100	70	60	100	100	40	95	85	100
SCREEN	95	95	95	95	95	95	95	95	95	95	95	95	95	95
GRID	2	2	2	2	2	2	2	2	2	2	2	2	2	2
FILAMENT	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5
PLATE	3	3	3	3	3	3	3	3	3	3	3	3	3	3
SCREEN	8	8	8	8	8	8	8	8	8	8	8	8	8	8
GRID	4	4	4	4	4	4	4	4	4	4	4	4	4	4

* The measured oscillator grid voltage will vary dependent on the capacity of the voltmeter leads. In some cases, the presence of the leads will stop oscillation and no reading will be secured for grid bias. In other cases, the reading will be only slight, or it may be as high as 10 volts. This includes the 1st, 2nd and 3rd R. F. tubes in Model 81. † This is the detector tube in Model 81.

MODEL 84,84-F
Early

ATWATER KENT MFG. CO.

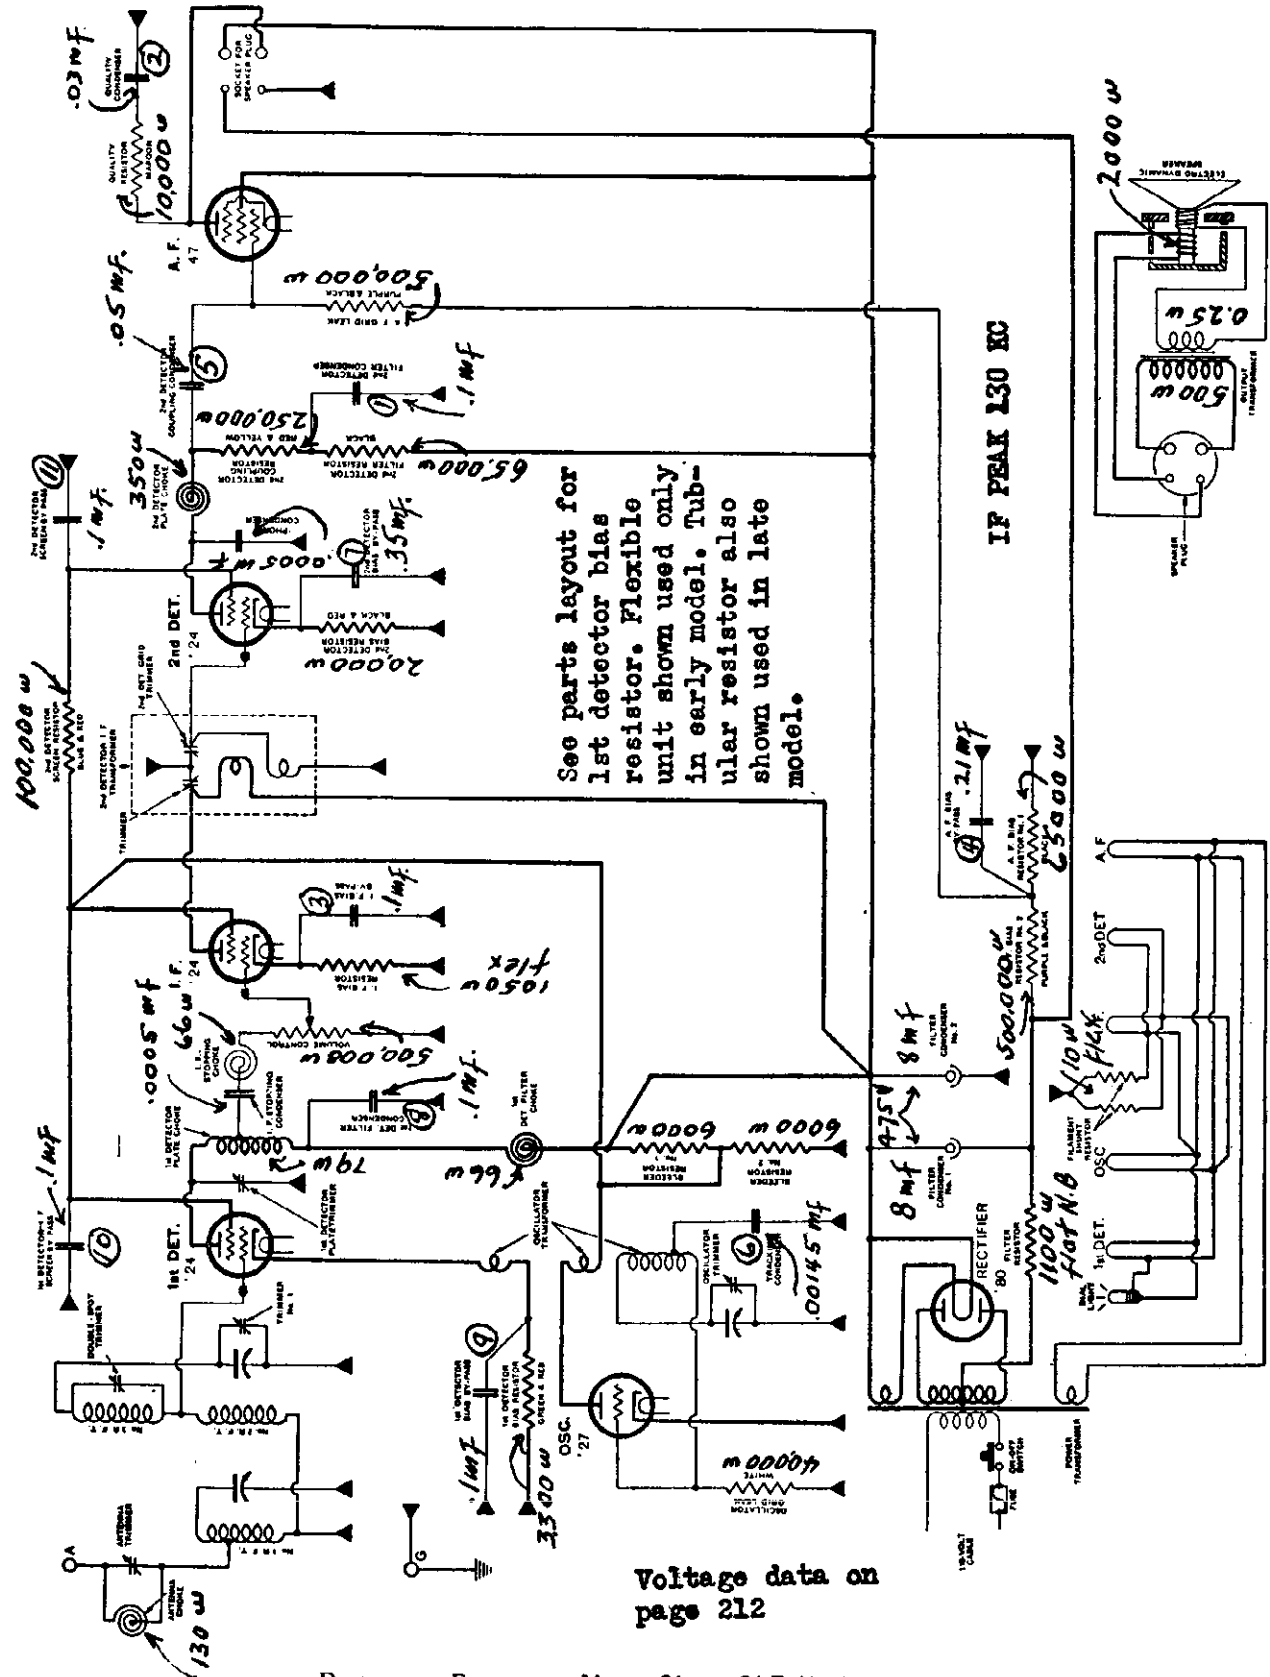

See parts layout for 1st detector bias resistor. Flexible unit shown used only in early model. Tubular resistor used in late model.


Voltage data on page 212

DIAGRAM OF EARLY-TYPE MODEL 84 AND 84-F (A. C.-OPERATED).

In Model 84-F, the filter resistor (connected in series with the center-tap of the high-voltage winding) is NOT used.

ATWATER KENT MFG. CO.

MODEL 84-Q
Early and Late

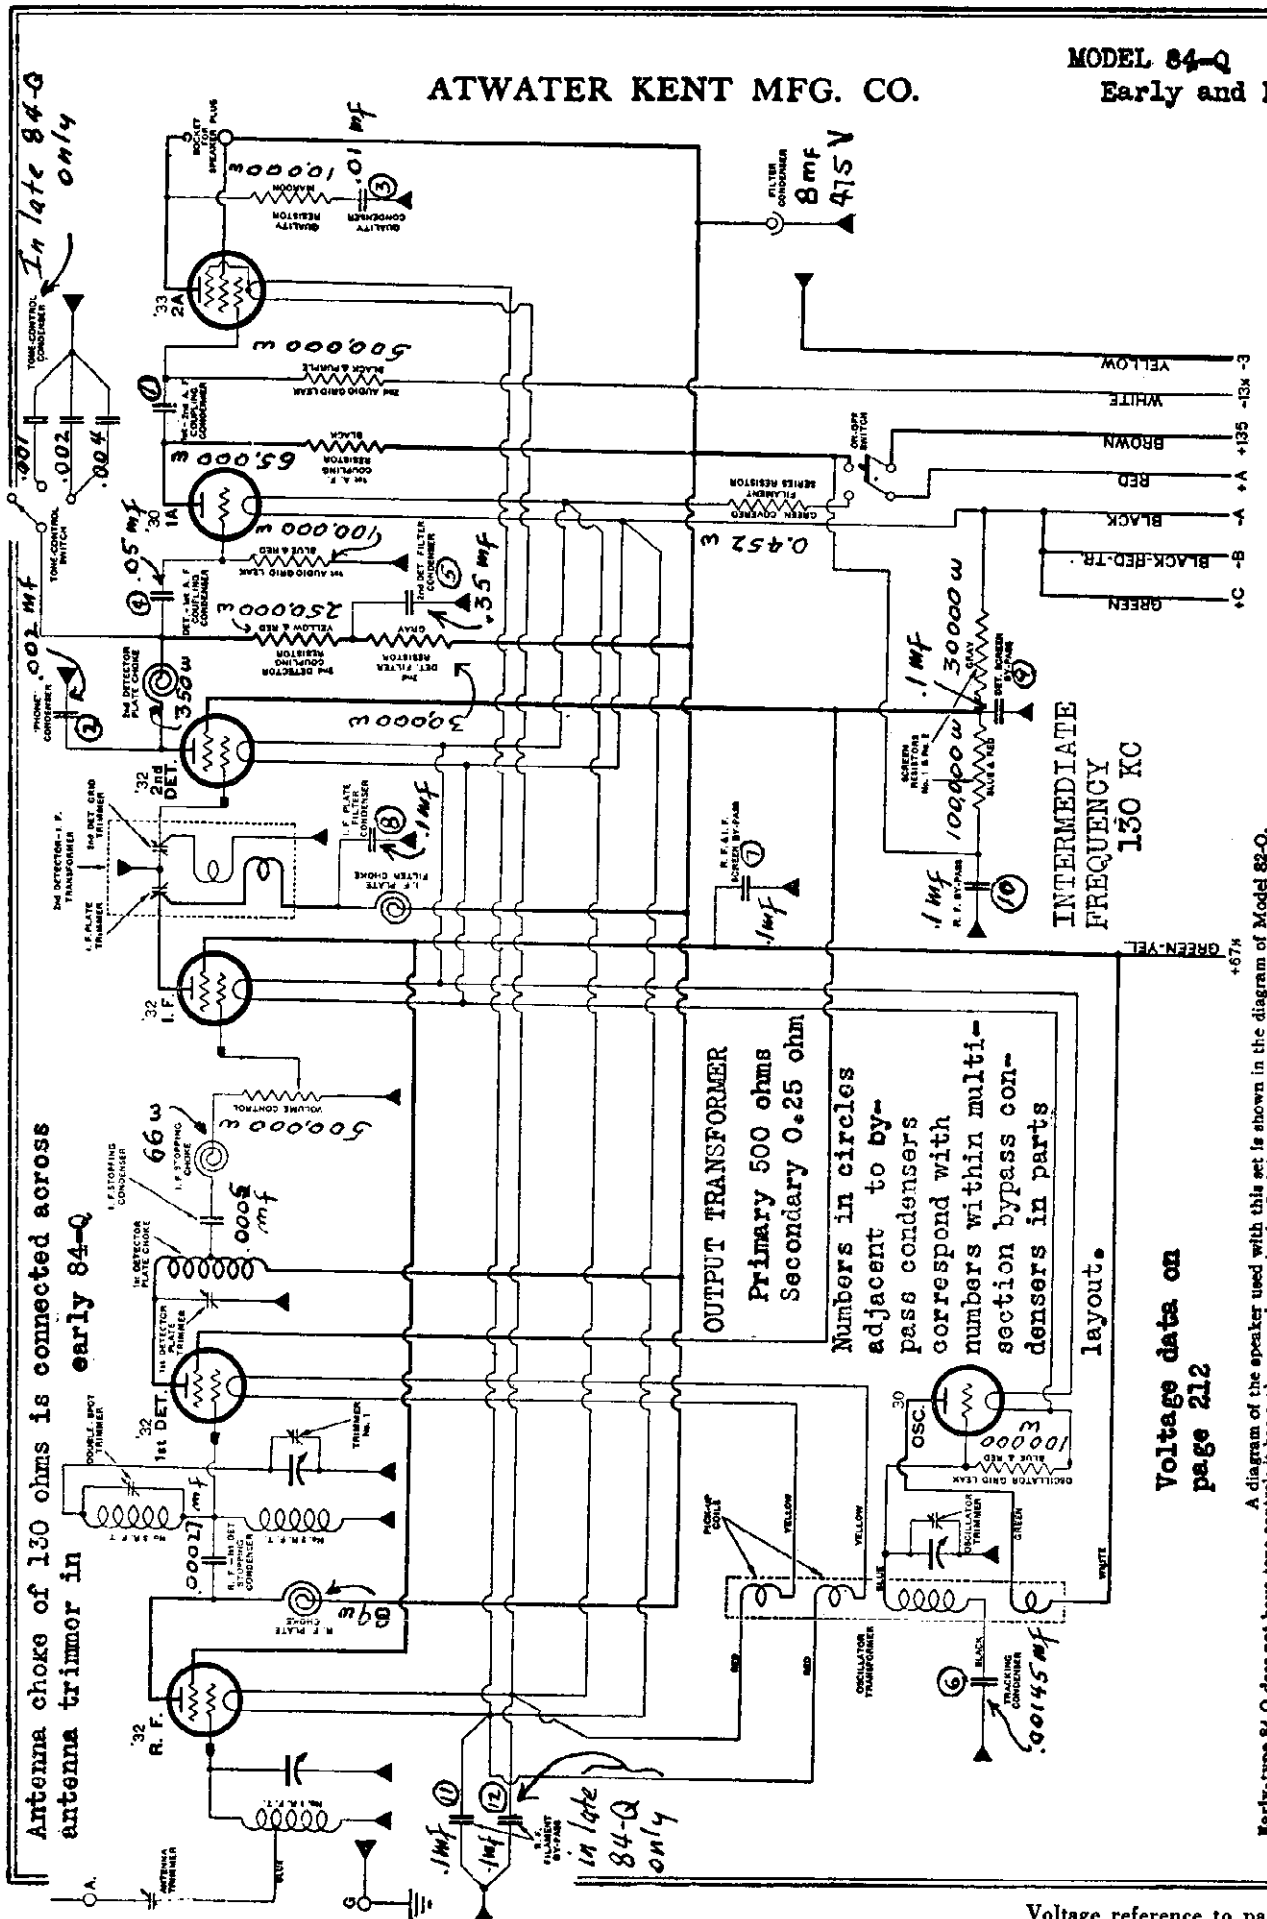


Early-type 84-Q does not have tone control; it has a phone condenser in the 2nd-detector plate circuit; and it has an antenna choke connected across the antenna trimmer. The oscillator transformer in early-type Model 84-Q is different in this way: It has only one pick-up coil, which is connected in series with the screen of the 1st-detector (The two filament-circuit pick-up coils are not used in the early model)

ATWATER KENT MFG. CO.

MODEL 85-Q
1st Type
Below serial
163767

Numerals within circles adjacent to the bypass condensers correspond with the numbers shown upon the multi-section bypass condensers illustrated in the parts layout on the next page.

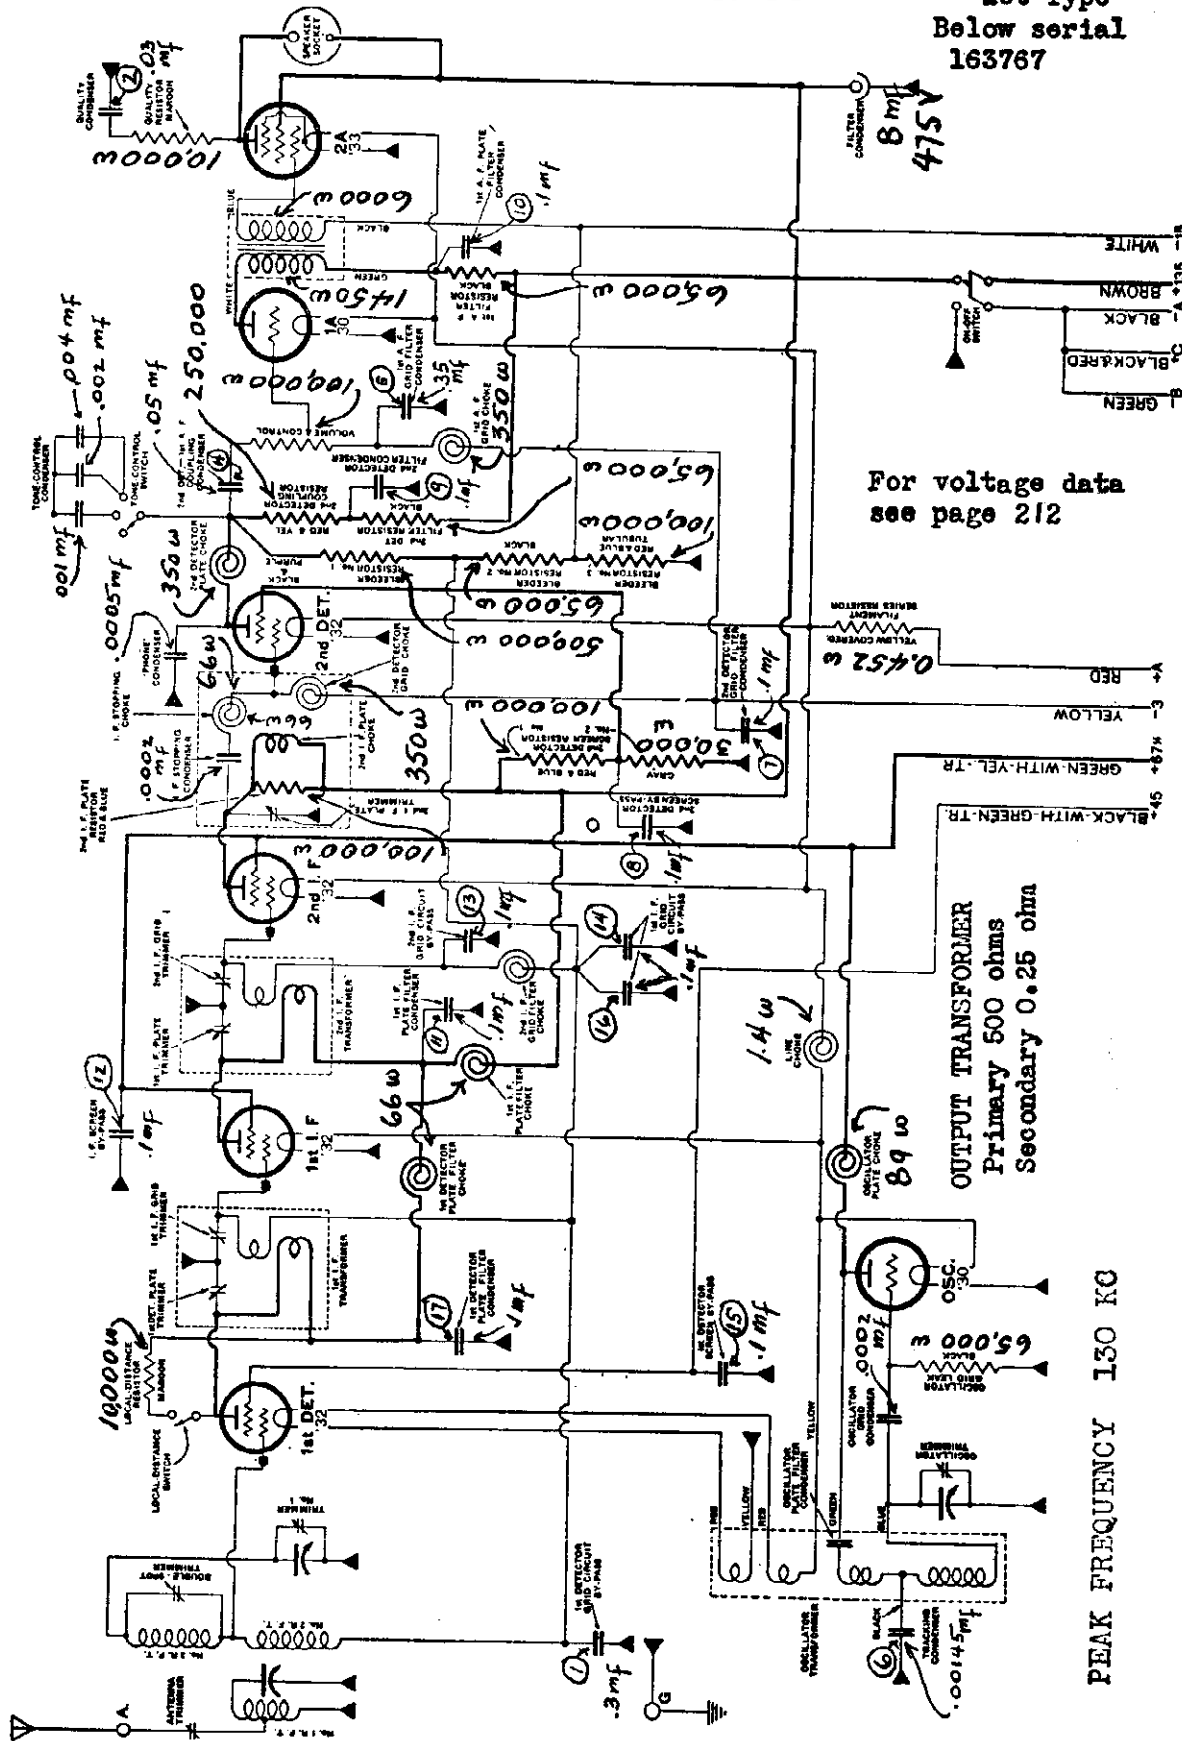


OUTPUT TRANSFORMER
Primary 500 ohms
Secondary 0.25 ohms

PEAK FREQUENCY 130 KG

MODEL 85-Q
1st Type
Below serial
163767

ATWATER KENT MFG. CO.

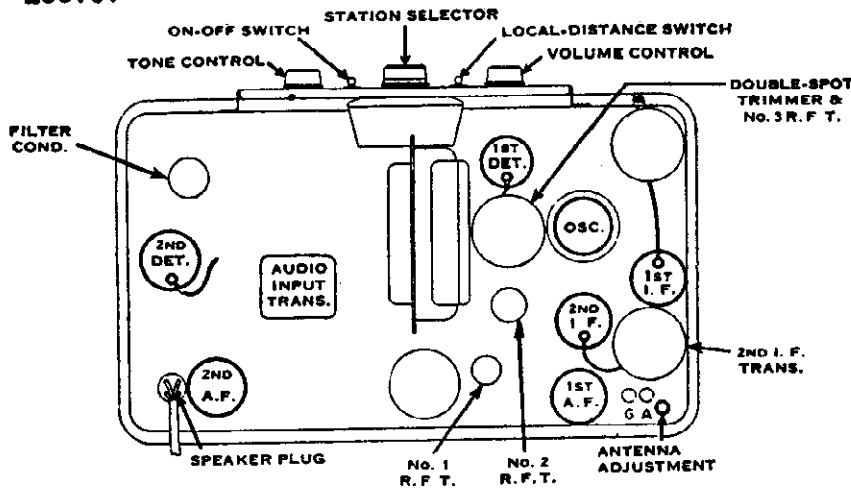


TOP VIEW OF MODEL 85-Q.

The circle in the top right corner indicates the shield for the coupling unit between the 1st-detector and the 1st-I. F. tubes. The circle in the bottom center is the shield covering the coupling unit between the 2nd-I. F. and the 2nd-detector tubes.

CONDENSERS

- RF Bypass # 1
19980
400 volts
- RF Bypass # 2
19150
400 volts
- RF Bypass # 3
15262
400 volts
- RF Bypass # 4
15262
400 volts
- RF Bypass # 5
15262
400 volts

Tone Control condenser # 16490 100 volts

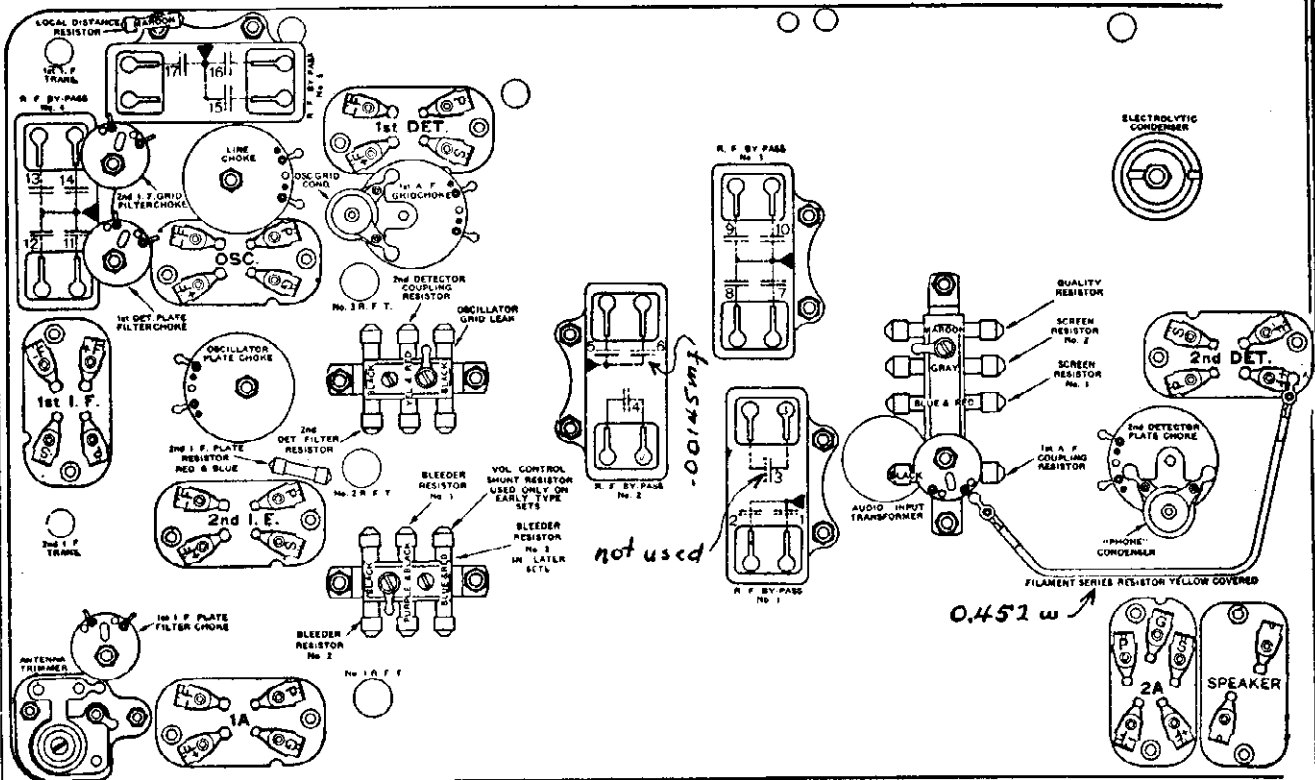

By-pass Condensers in Model 85-Q.

- | R. F. By-pass No. 1 | R. F. By-pass No. 2 | R. F. By-pass No. 3 | R. F. By-pass No. 4 | R. F. By-pass No. 5 |
|--------------------------------------|--|---------------------------------------|--------------------------------------|---|
| 1-1st-detector grid-circuit by-pass. | 4-2nd-detector-1st-A. F. coupling condenser. | 7-2nd-detector grid filter condenser. | 11-1st-I. F. plate filter condenser. | 15-1st-detector screen by-pass. |
| 2-Quality condenser. | 5-1st-A. F. grid filter condenser. | 8-2nd-detector screen by-pass. | 12-I. F. screen by-pass. | 16-1st-I. F. grid-circuit by-pass. |
| 3-Not used. | 6-Tracking condenser. | 9-2nd-detector filter condenser. | 13-2nd-I. F. grid-circuit by-pass. | 17-1st-detector plate filter condenser. |
| | | 10-1st-A. F. plate filter condenser. | 14-1st-I. F. grid-circuit by-pass. | |

MODEL 86, 86-F
 1st Type
 Below serial
 5,876,861

ATWATER KENT MFG. CO.

FILTER CONDENSER. The two small numbers adjacent to the filter condenser representations correspond with the numbers upon the condenser. The capacity between terminal (1) and the center stud is 3. mfd and between terminal (4) and the center stud it is 4. mfd.

BYPASS CONDENSER. The numbers in circles adjacent to the bypass condensers correspond with the designations within the multi-section units shown on the parts layout.

RF Bypass # 1	1.	.01 mfd	400 volts	2.	.03 mfd	400 volts	# 21170
	3.	.3 mfd	400 volts	4.	.0006 mfd	400 volts	
RF Bypass # 2	5.	.3 mfd	200 volts	6.	.02 mfd	200 volts	# 23330
	7.	.04 mfd	200 volts	8.	.05 mfd	200 volts	
RF Bypass # 3	9.	.1 mfd	400 volts	10.	.1 mfd	400 volts	# 15262
	11.	.1 mfd	400 volts	12.	.1 mfd	400 volts	
Tone Control	13.	.001 mfd	100 volts	14.	.003 mfd	100 volts	# 20010
	15.	.1 mfd	100 volts	16.	.1 mfd	100 volts	

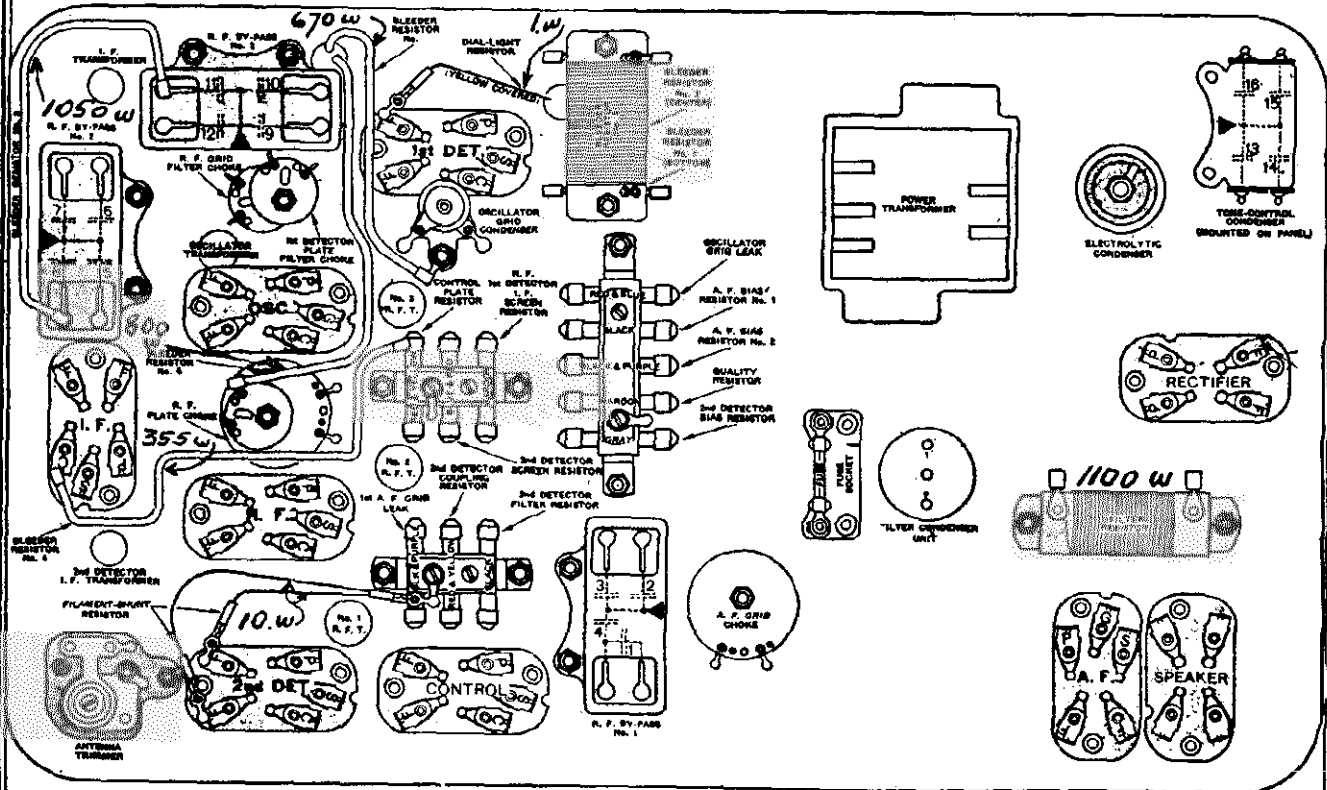


CHART OF MODEL 86, 86-F.


The filter resistor is not used in Model 86-F.

By-pass Condensers in Model 86, 86-F

- | | | | |
|--|--------------------------------|--|---------------------------------|
| R. F. By-pass No. 1 | R. F. By-pass No. 2 | R. F. By-pass No. 3 | Tone-control Condenser |
| 1—2nd-detector—A. F. coupling condenser. | 5—A. F. bias by-pass. | 9—1st-detector plate filter condenser. | 13—Tone-control condenser. |
| 2—Quality condense. | 6—R. F. grid filter condenser. | 10—R. F. 1st-detector—I. F. screen by-pass | 14—Tone-control condenser. |
| 3—2nd-detector bias by-pass. | 7—Control plate by-pass. | 11—1st-detector bias by-pass. | 15—2nd-detector screen by-pass. |
| 4—Phone condenser. | 8—R. F.—I. F. bias by-pass. | 12—2nd-detector filter condenser. | 16—2nd-detector screen by-pass. |

ATWATER KENT MFG. CO.

MODEL 87
1st Type
Below serial
2,525,871

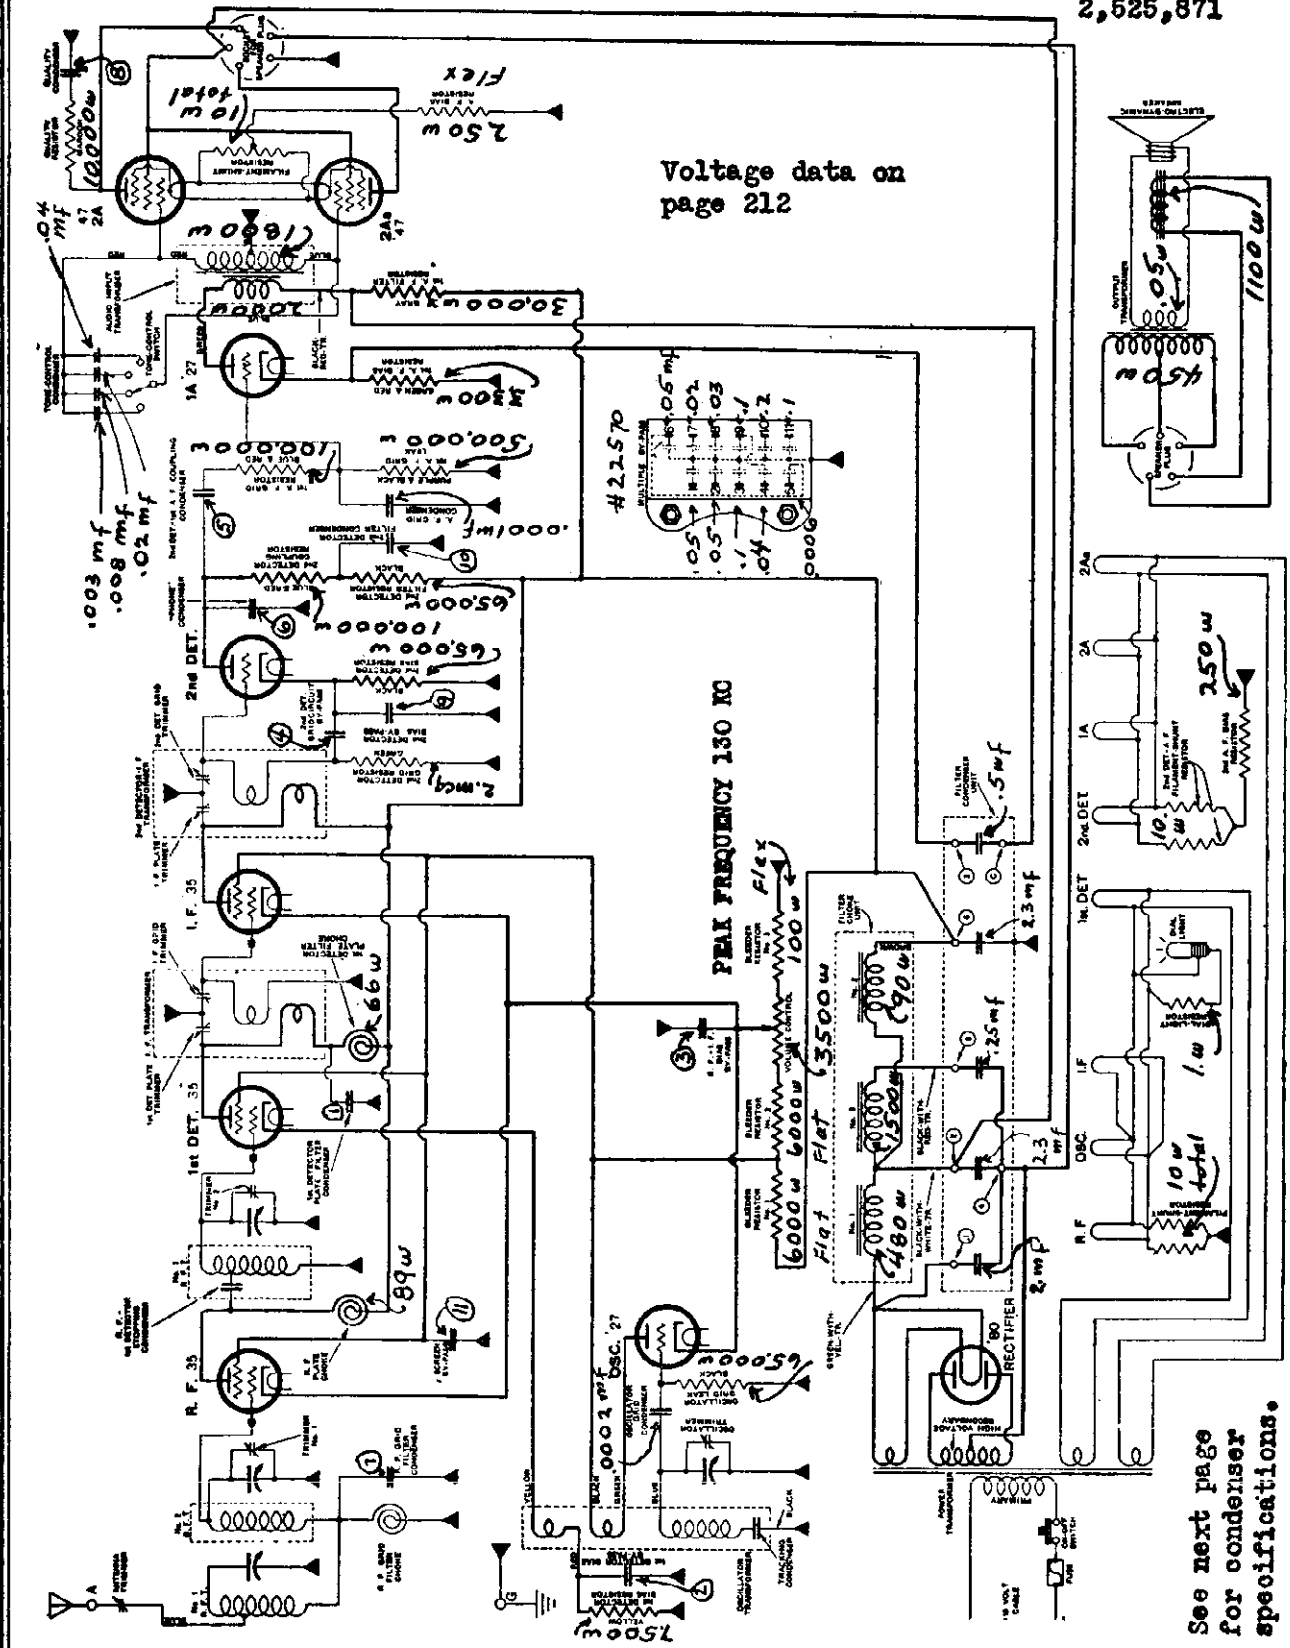

Voltage data on page 212

PEAK FREQUENCY 130 KC

See next page for condenser specifications.

DIAGRAM OF MODEL 87 (A. C.-OPERATED).

In a few early-type Model 87 receivers, No. 2 and No. 3 R. F. transformers are connected between the R. F. tube and the 1st-detector, similar to the arrangement used in early Model 89


MODEL 87
1st Type
Below serial
2,525,871

ATWATER KENT MFG. CO.

BYPASS CONDENSERS: All bypass condensers located within the multiple unit are rated at 200 volts. The numbers shown within circles adjacent to the bypass condensers correspond with the numbers shown within the multiple bypass unit shown in connection with the schematic diagram. The multiple condenser unit is not marked with numbers. The condensers and numbers closest to the mounting holes represent the side of the condenser nearest the mounting holes.

FILTER CONDENSERS. The numbers in circles correspond with the numbers marked upon the filter unit. The following are the connections.

- | | |
|--------------|---|
| Filter # 1 | 2.0 mfd connected between terminals (1) and (4) |
| Filter # 2 | 2.3 mfd connected between terminals (2) and (4) |
| Filter # 3 | 2.3 mfd connected between terminal (6) and can |
| 1st A-F Bias | .5 mfd connected between terminal (3) and center stud |
| Hum | .25 mfd connected between terminals (4) and (5) |
| | .1 mfd connected between center stud and can |
| | .1 mfd connected between terminal (2) and can |

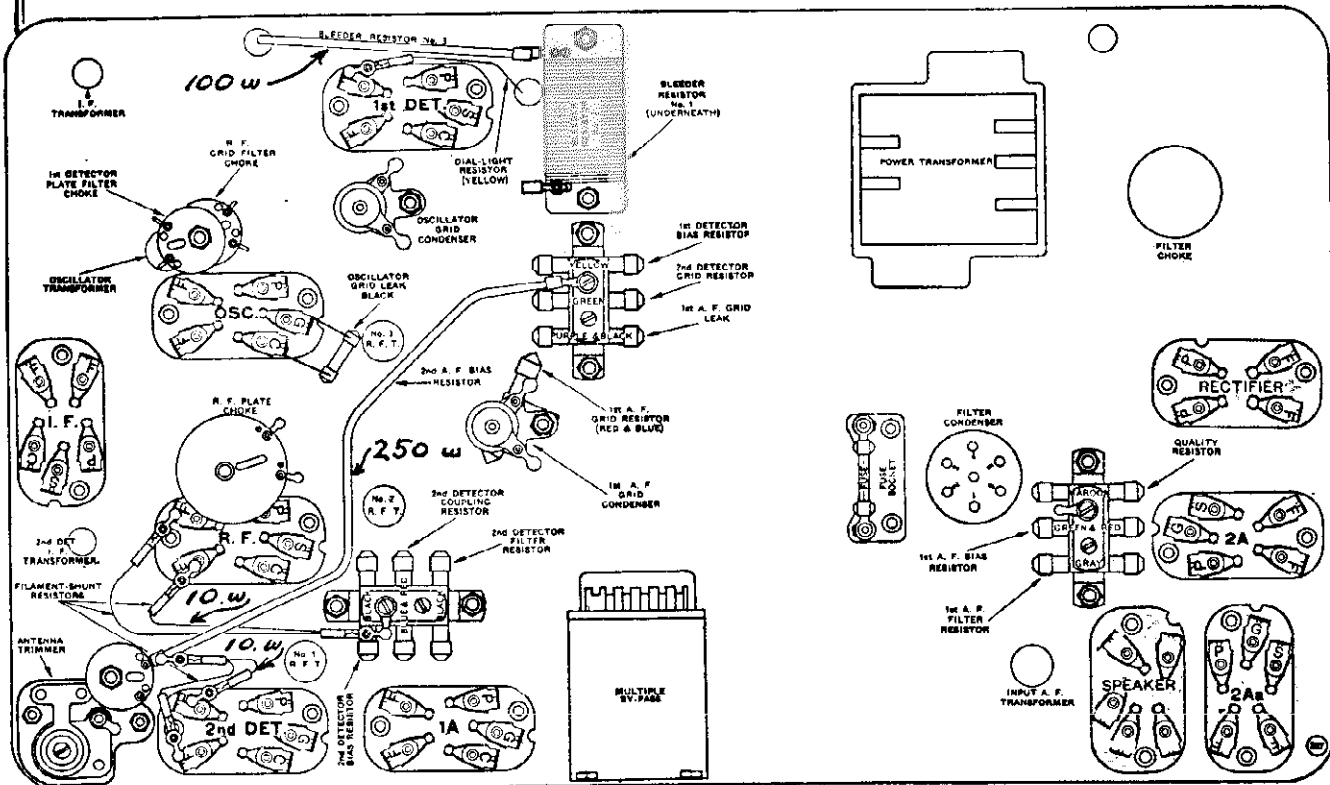

Condensers in Multiple By-pass Model 87

The internal connections of the multiple by-pass are shown

- | | | | |
|---------------------------------------|---|--------------------------------|---|
| 1—1st-detector plate filter condenser | 4—2nd-detector grid-circuit by-pass. | 7—R. F. grid filter condenser. | 10—2nd-detector filter condenser. |
| 2—1st-detector bias by-pass. | 5—2nd-detector—1st-A. F coupling condenser. | 8—Quality condenser. | |
| 3—R. F.—I. F bias by-pass. | 6—Phone condenser | 9—2nd-detector bias by-pass. | 11—R. F.—1st-detector—I. F. screen by-pass. |

ATWATER KENT MFG. CO.

MODEL 89, 89-F, 89-P
1st Type

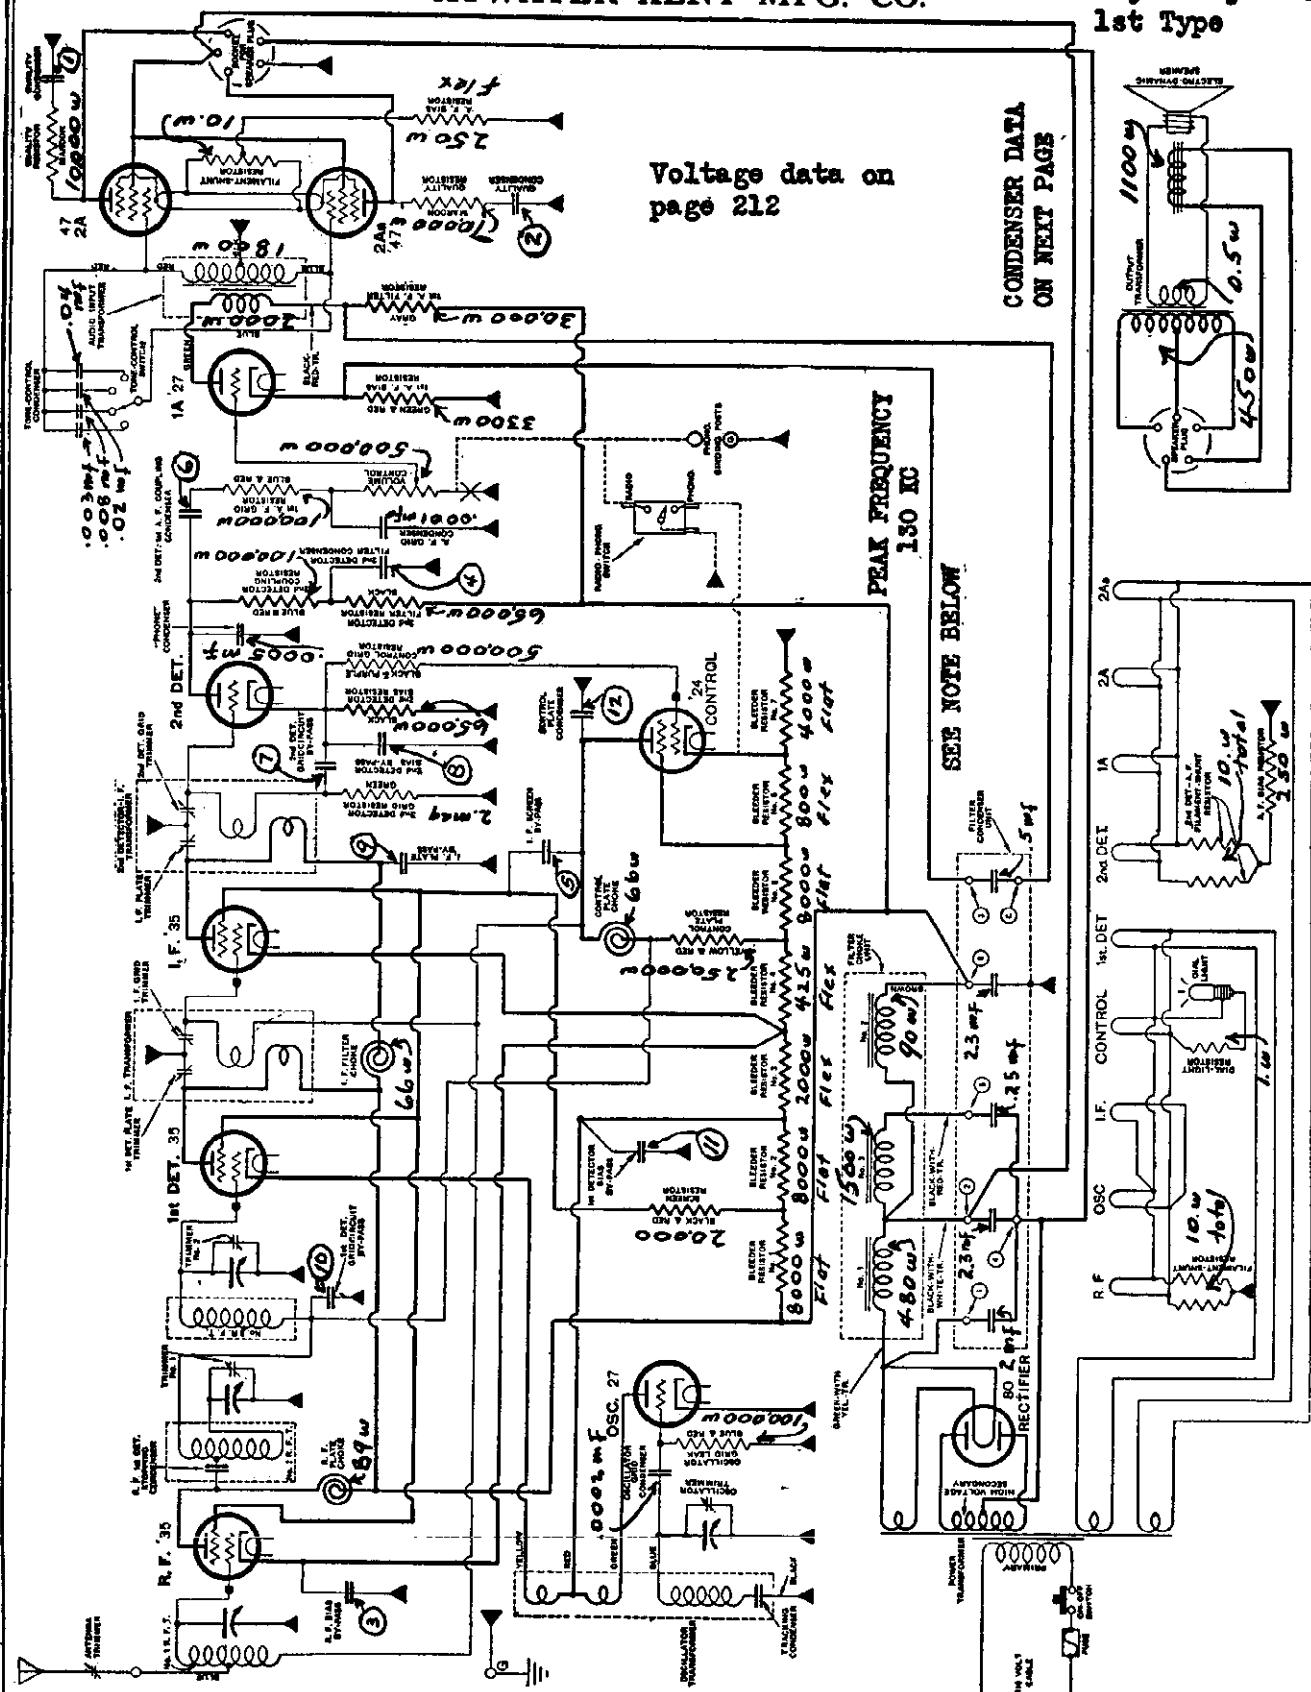


DIAGRAM OF MODEL 89, 89-F, AND 89-P (A. C.-OPERATED).
 The 2nd-detector grid resistor and the 2nd-detector grid-circuit by-pass are NOT used in this set, and the grid-returns of the 2nd-detector connect directly to the chassis.
 Later types of this Model have No. 1 and No. 2 R. F. transformers connected ahead of the R. F. tube, as shown in the diagram of Model 87.
 The phonograph-switching circuit in 89-P is shown above in dotted lines.

MODEL 89, 89-F, 89-P ATWATER KENT MFG. CO.

89 Below serial 6,755,181
 89-F Below serial 1,585,395
 89-P Below serial 1,935,904

FILTER CONDENSERS. The numerals adjacent to the filter condensers shown upon the wiring diagram correspond with the numbers stamped upon the condenser terminal block. The following are the connections:

- Filter # 1 2.0 mfd connected between terminals (1) and (4)
- Filter # 2 2.3 mfd connected between terminals (2) and (4)
- Filter # 3 2.3 mfd connected between terminal (6) and can
- Hum .25 mfd connected between terminals (5) and (4)
- A-F Filter .5 mfd connected between terminal (6) and center stud

BYPASS CONDENSERS. The numerals within circles adjacent to the bypass condensers shown upon the schematic wiring diagram correspond with the numbers shown upon the multi-section bypass units below.

Quality Condenser	1.	.03 mfd	450 volts	2.	.03 mfd	450 volts #	21450
RF Bypass # 1	6.	.05 mfd	400 volts	7.	.04 mfd	400 volts #	21440
	8.	.3 mfd	400 volts	* See Note.			
RF Bypass # 2	3.	.1 mfd	400 volts	4.	.1 mfd	400 volts #	22050
	5.	.3 mfd	400 volts				
RF Bypass # 3	9.	.1 mfd	400 volts	10.	.02 mfd	400 volts #	21430
	11.	.06 mfd	400 volts	12.	.1 mfd	400 volts	

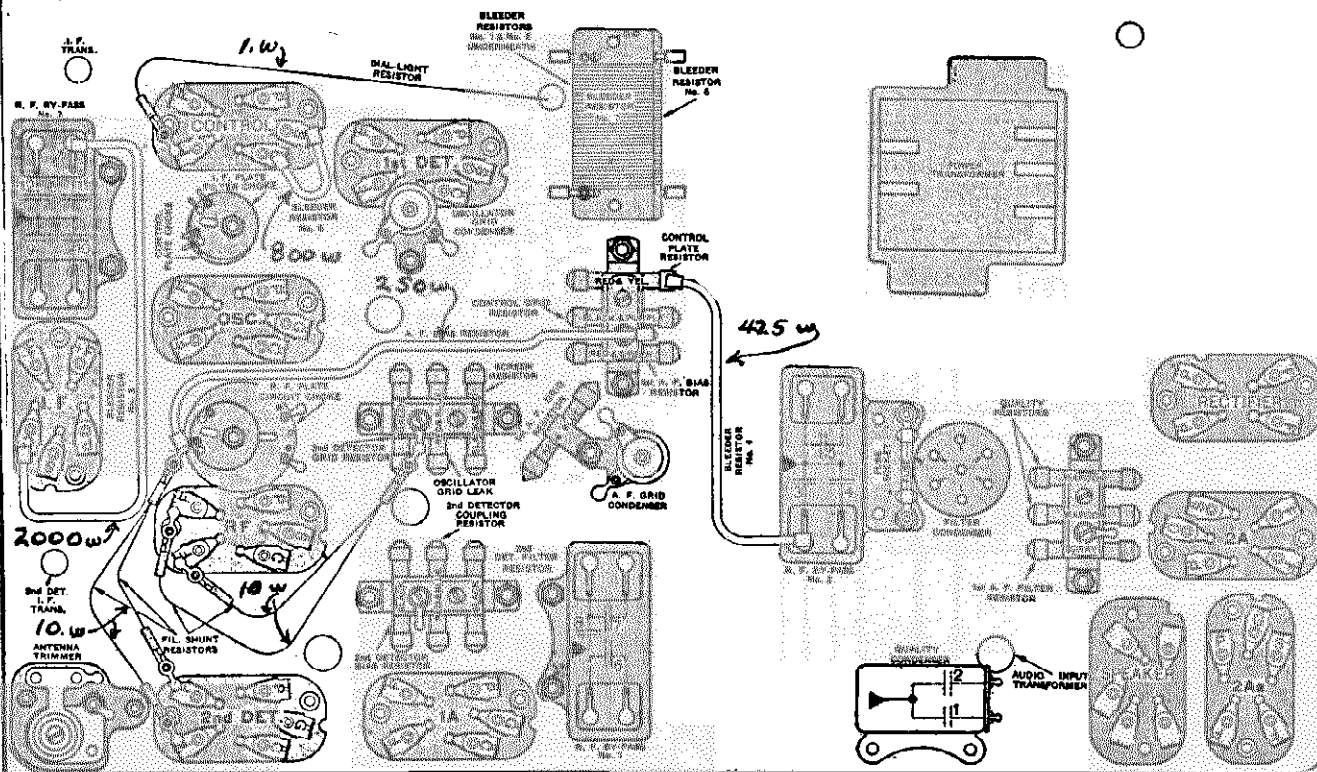


CHART OF MODEL 89, 89-F,


The 2nd-detector grid resistor is not used in late-type Model 89 89-F, 89-P.

- | | | | |
|--------------------------|--|----------------------------------|---------------------------------------|
| Quality Condenser | R. F. By-pass No. 1 | R. F. By-pass No. 2 | R. F. By-pass No. 3 |
| 1—Quality condenser. | 6—2nd-detector—1st-A. F. coupling condenser. | 3—R. F. bias-by-pass. | 9—I. F. plate by-pass. |
| 2—Quality condenser. | 7—2nd-detector grid-circuit by-pass. | 4—2nd-detector filter condenser. | 10—1st-detector grid-circuit by-pass. |
| | 8—2nd-detector bias by-pass. | 5—I. F. screen by-pass. | 11—1st-detector bias by-pass. |
| | (A small "phone" condenser, not shown, is connected internally to the lower-left terminal of by-pass No. 1.) | | 12—Control-plate condenser. |

PHONOGRAPH PICKUP

ATWATER KENT MFG. CO.

PHONOGRAPH PICKUP AND INDUCTION DISC MOTOR
(USED IN MODELS 75 AND 89-P)

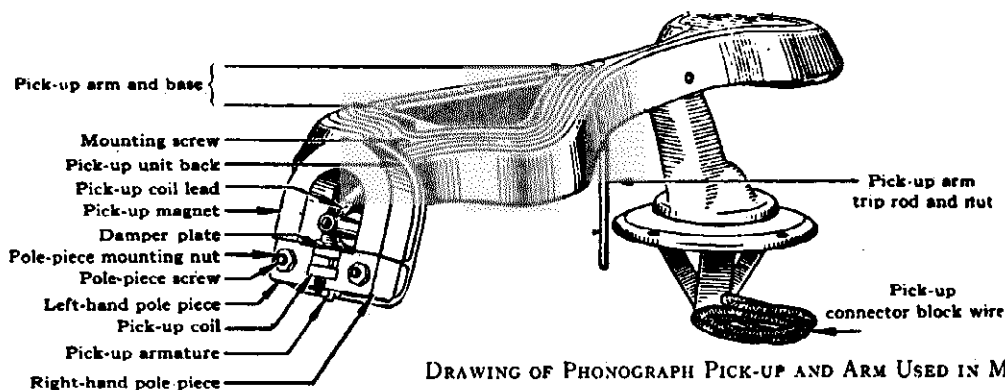

DRAWING OF PHONOGRAPH PICK-UP AND ARM USED IN MODEL 75.

PHONOGRAPH PICK-UP
ARMATURE ADJUSTMENT

The armature-pivot bearings consist of two small strips of rubber (armature spacing cushions) which space the armature from the bearing surfaces on each pole piece.

The top end of the armature fits in a slit in a flat rubber damper. The damper is fastened to a small brass plate that may be adjusted to the right or to the left, in order to center the armature in the magnet gap.

If the armature is off center, as indicated by erratic reproduction, loosen the two round-head screws that hold the damper plate, and move the plate slightly to the right or left to a point where the armature is centered. Tighten the two screws.

When the armature is correctly centered, it should take as much force to move the needle to the left as to the right.

If the rubber damper plate or armature spacing cushions are dried out, or lack life, replace them with new pieces of rubber, which may be secured from your distributor.

If the pick-up magnet must be removed from the pick-up *FIRST* place a steel or iron keeper (a large nail will do) across the sides of the magnet poles, *THEN* remove the magnet.

Do *NOT* take off the keeper until *AFTER* the magnet is placed back on its pole pieces in the pick-up.

If the magnet is weak, have it re-magnetized, but be sure to place a keeper across the sides of the magnet poles before removing it from the magnetizer, and do not remove the keeper until after the magnet is placed back on its pole pieces in the pick-up.


CONTINUITY TESTS

Test across the two contacts on the neck of the mold pick-up back. The continuity reading should be nearly full. No reading indicates an open pick-up coil or leads.

Test from either contact on the pick-up to each pole piece, and to the armature. If there is any reading, it indicates that the pick-up coil or leads are grounded. This must be eliminated. Use two small pieces of thin cambric cloth to insulate the pick-up coil from the pole piece.

AUTOMATIC ELECTRIC
SWITCH and FRICTION BRAKE

ADJUSTMENTS

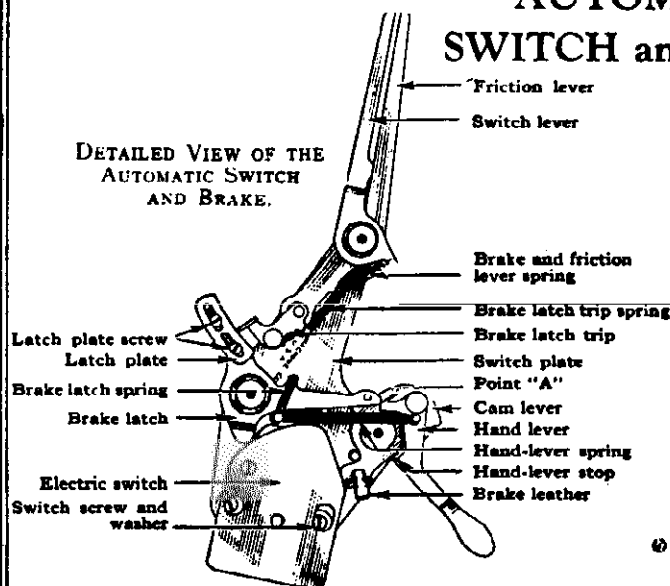

DETAILED VIEW OF THE
AUTOMATIC SWITCH
AND BRAKE.

(1) If the latch does not trip, or trips before completion of a record, bend the hand-lever stop slightly to the right or left, as necessary.


(2) If the latch trip does not engage correctly with the latch-plate, loosen the two latch-plate screws and shift the plate one way or the other, as necessary. Re-tighten the screws. Remove any burrs from the teeth of the latch plate with fine emery paper.

(3) If the electric switch does not make and break contact when the hand-lever is turned on and off, it may be necessary to bend the long contact spring, or loosen the two switch screws and move the switch until the correct position is found. In the off position, there should be at least 1/16" gap between the contact points.

PHONOGRAPH PICKUP


ATWATER KENT MFG. CO.

**PHONOGRAPH PICKUP AND INDUCTION DISC MOTOR
(USED IN MODELS 75 AND 89-P)**

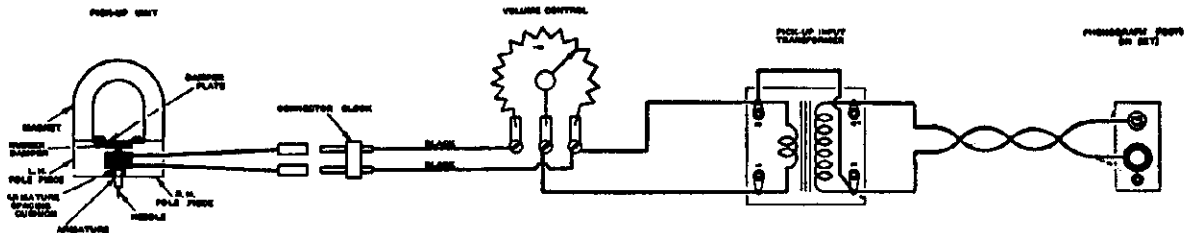

ELECTRICAL CONNECTIONS OF PICK-UP, VOLUME CONTROL AND INPUT TRANSFORMER.

**INDUCTION DISC
PHONOGRAPH MOTOR**

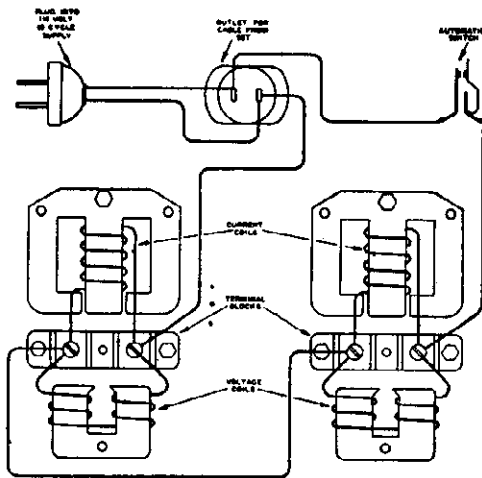

ELECTRICAL CONNECTIONS OF THE INDUCTION-DISC PHONOGRAPH MOTOR.


The induction-disc phono-graph motor has two sets of field coils or "inductors." Each inductor has three coils and five "poles." A magnetic field is produced between the poles by the alternating current flowing through the three coils.

The edge of a non-magnetic rotor disc fits in the narrow gap between the poles on each inductor. The magnetic field between the poles causes the disc to rotate.

The rotor disc itself has no coils, and there are no electrical connections to it.

The speed of the rotor disc is controlled by a governor and a regulating screw device. The correct speed is 78 revolutions per minute (with pick-up on record). The speed may be determined by counting the number of revolutions made by the turntable in one minute. It is preferable,

Inductor screw
Inductor
Inductor terminal block
Inductor connecting wire clip
Inductor connector wire
Rotor disc
Spindle ball bearing screw
Spindle ball bearing nut
Spindle bearing lock washer
Rotor disc set-screw
Governor spindle
Governor spindle collar
Governor ball and spring
110-volt plug
110-volt cable
Motor board
Volume control
Motor cord clip screw
Motor cord clip
Regulating shaft
Spindle governor drive gear
Spindles gear set-screw
Top-plate cushion (large)
Top-plate washer
Top-plate "c" washer
Top-plate spacing cushion
Top-plate bolt
Regulating lever
Regulating shaft spring
Governor friction disc
Top-plate

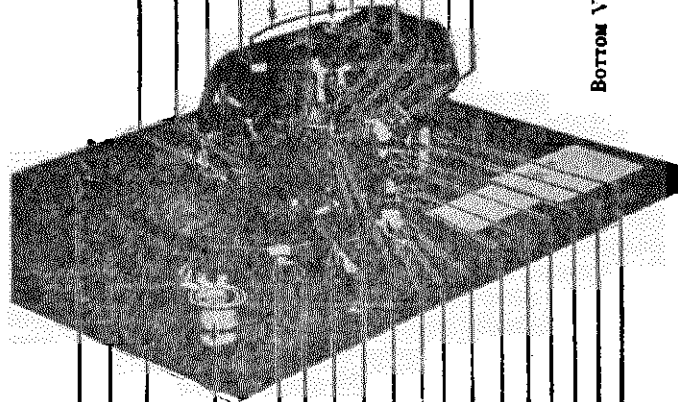

BOTTOM VIEW OF MOTOR BOARD.





however, to regulate the speed with the aid of a stroboscope disc, which may be purchased from your distributor. Simple instructions for the use of this inexpensive device are printed on the back of the stroboscope disc. The speed should be checked at least twice a year.

The motor and governor bearings and gears must be kept well greased at all times. See chart on bottom of motor board.

When an induction-disc motor requires repair, it is advisable to tear it down completely, replace the defective parts, clean and grease all parts, and reassemble correctly.

MODEL 4 Tube Pentode '31
 MODEL 5 Tube Pentode '31

AUDIOLA RADIO CO.

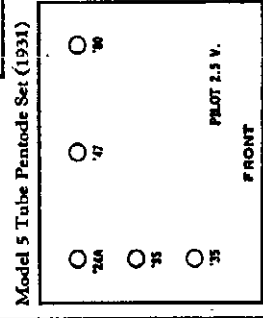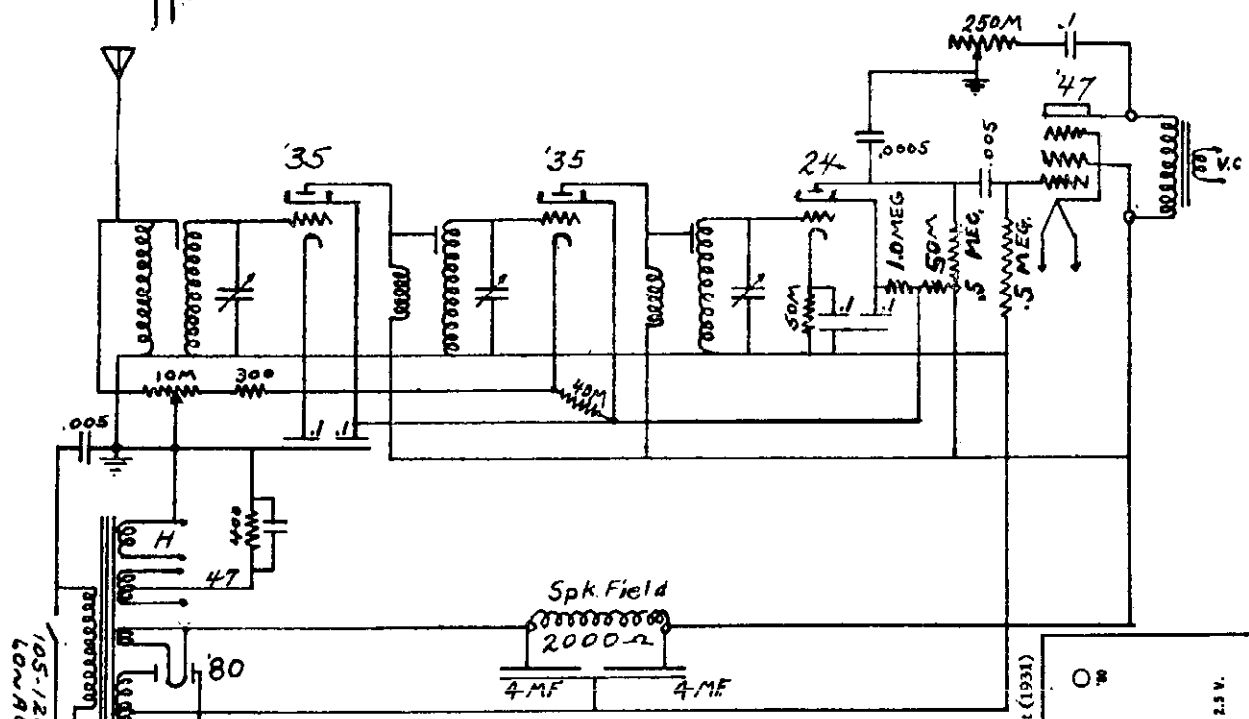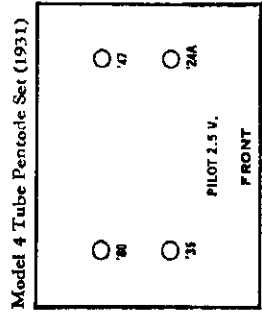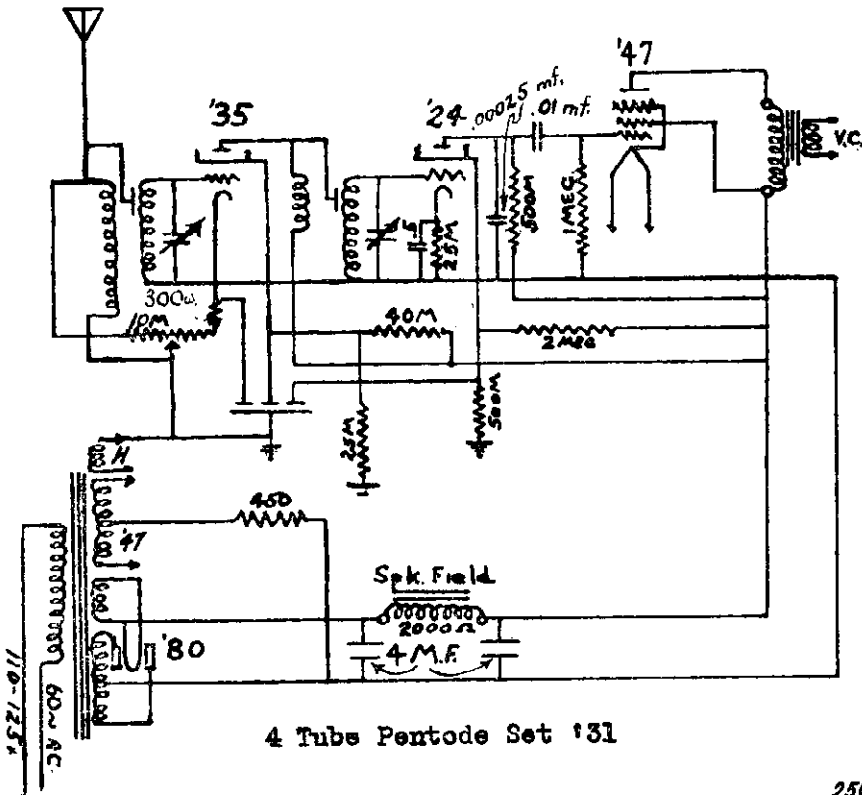

AUDIOLA RADIO CO.

MODEL '31 Super
Service Notes

4. After adjusting the third I. F. transformer shift the coupling lead to the control grid connection of the first I. F. tube and place the lead at a greater distance from the oscillator. Be sure the shields are on all tubes except that to which the coupling lead is connected. Turn the volume control up slightly and in exactly the same manner adjust the secondary and primary of the second I. F. transformer until a maximum indication is obtained. The output must be kept low enough to give a sharp peak.

5. Clip the coupling lead on to the control grid cap of the first detector tube, replacing all other shields and proceed to peak the secondary and primary of the first I. F. transformer. If the set oscillates it is due to the coupling lead being connected to the grid of the first detector and the volume control should be slightly reduced to prevent oscillation. Now with a given indication on the output meter proceed to "touch up" all of the adjusted trimming condensers to take advantage of any slight increase in reading that might be obtained by more careful peaking, and after they are all correctly balanced lock them by holding with the nut wrench and tightening the set screw with a long screw driver. The insertion of the metallic screw driver will affect the reading of the output meter but it should return to normal when the screw driver is removed. Note carefully that the locking does not throw the stage out of alignment. It may be easier for the service man who is not familiar with this operation to slightly reduce the capacity of the trimming condenser and lock the screw down fairly tight and then after removing the screw driver, slowly bring the unit up to its peak reading. This may be found difficult at first but with a little experience the I. F. stages can be rapidly balanced.

6. Now set the test oscillator in operation at exactly 1400 KC, place the set in normal operation and replace the oscillator tube and all shields. Make sure the receiver is properly grounded and has an average antenna. Set the local-distance switch in the distance position thereby connecting the antenna. Couple the test oscillator to the antenna by means of its coupling lead. Locate the 600 KC oscillator trimming condenser and turn it nearly all the way in, about one-half revolution from full in.

7. Tune in the 1400 KC signal, adjusting the volume control to give a good indication on the output meter, then adjust the tuning knob until the scale reads 1400 KC. Now adjust the 1400 KC oscillator trimming condenser (on the oscillator section of the four gang condenser), the first detector, R. F. and pre-selector circuit trimming condensers in the order given until maximum output is obtained. The oscillator section of the gang condenser is the second section from the dial. When the set is not in a cabinet the location of a pointer for dial calibration is determined at maximum capacity of the condensers by a line provided at the low frequency end of the tuning scale.

8. Tune the test oscillator to exactly 600 KC. Tune in the signal on the set and adjust the 600 KC oscillator trimming condenser for maximum output on the output meter while revolving the gang condenser back and forth, by rotating the tuning knob.

9. Set the test oscillator frequency to 1400 KC and set the selector scale at exactly 1400 KC. Adjust the four trimming condensers as in No. 7 in the order given until maximum output is obtained.

10. Place the test oscillator again in operation at 600 KC and tune in the signal and if adjustments have been properly made the signal will be received at maximum output when the scale reads exactly 600 KC. If not the operations described above must be repeated.

11. Now lock all trimmers as described in the instructions for locking the intermediate frequency trimmers (paragraph 5) while carefully watching the output meter to make sure that the locking action does not throw the stage out of alignment.

SERVICE NOTES

A. There are ten tuned circuits, all of which must be in accurate adjustment in order to allow this receiver to operate at its maximum efficiency. These adjustments are made by means of eleven trimming condensers which are carefully set and locked at the factory and should need no further attention provided they are not tampered with. These condensers are all of the compression type and are adjusted by the rotation of the long nut and locked by means of a hardened steel set screw. The service man should delicately attempt rotation of these nuts with a special nut wrench to determine if they are loose, and if all are tight and locked they should never be touched unless it is definitely assured that the set is out of alignment after every other service possibility has been exhausted.

A piece of thin fiber tubing about 7" long and with $\frac{1}{4}$ " bore which can be supplied by us for this purpose may form the nut wrench. The locking screw driver should be long and thin enough to slip down thru the fiber tubing and lock the set screw, while the nut is held from turning by the tubing wrench.

By inspection of the service wiring diagram it will be noted that there are six capacity adjustments, one on each primary and one on each secondary of the three intermediate-frequency transformers. These condensers resonate the tuned circuits of the intermediate-frequency amplifier to exactly 175 KC. There are also four trimming condensers, one on each section of the four gang variable condenser. The three trimming condensers associated with the pre-selector, R. F. and detector stages balance these three stages to resonance while the fourth trimming condenser, which is on the oscillator section of the four gang variable condenser, forms part of the network which adjusts the oscillator to its constant frequency difference of 175 KC. There is also another oscillator trimming-condenser located next to the last section of the four gang tuning condenser and adjacent to the first detector tube. In some chassis this is reached thru a hole in the top of the condenser gang near the front and in others thru a hole in the chassis in front of the dial. This condenser is called the 600 KC oscillator trimming condenser, while the one on the oscillator section of the tuning condenser gang is the 1400 KC oscillator trimming condenser.

In order to adjust all of these trimming condensers properly it is necessary that an R. F. oscillator giving a modulated signal at exactly 1400 KC and 600 KC, and also at 175 KC be secured. An output measuring instrument is also necessary. The General Radio Company type 360-A or Radio Products Co., Dayton, Ohio, HR 180 test oscillators are suitable for this purpose.

The output meter leads should be connected across the cone coil connections of the loud speaker. The cone coil may remain connected or be disconnected, satisfactory results being obtained in either case, altho if the cone is left connected an audible check on the instrument readings is obtained.

The receiver must be balanced from back to front or left to right, that is, the last I. F. transformer is adjusted first, then the next to last I. F. transformer, etc., working backwards thru the first detector, oscillator, R. F. and pre-selector.


The following procedure should be followed:

3. Adjust the secondary and then the primary trimming condenser of the last I. F. transformer until a maximum reading is obtained on the output meter. These two circuits must be accurately peaked to 175 KC and will be found quite sharp.

AUTOMATIC RADIO MFG. CO

MODEL 44
 MODEL V-45, V-46
 MODEL C-45
 MODEL P-46

MODELS NO. - 44, V45, V46, C 45, P46.

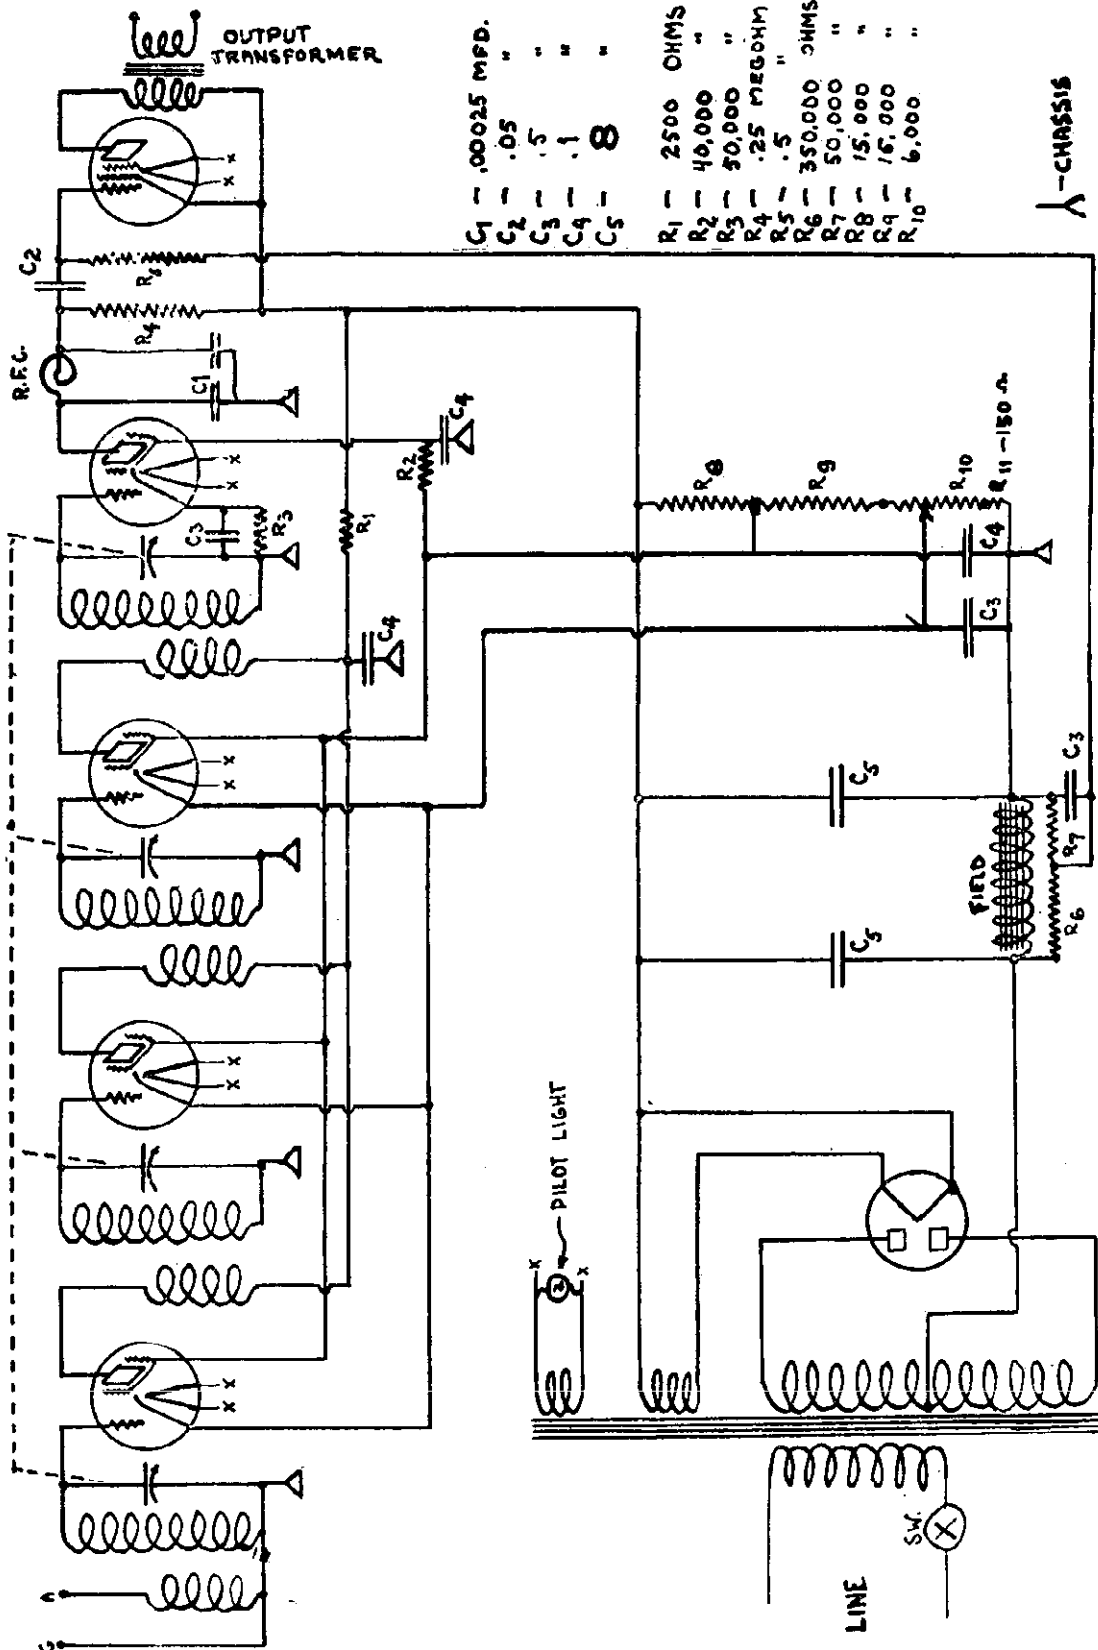




C1	.00025 MFD.
C2	.05 "
C3	.5 "
C4	.1 "
C5	8 "
R1	2500 OHMS
R2	40,000 "
R3	50,000 "
R4	.25 MEGOHM
R5	.5 "
R6	350,000 OHMS
R7	50,000 "
R8	15,000 "
R9	16,000 "
R10	6,000 "

AUTOMATIC RADIO CO. INC.
 BOSTON, MASS.

BREMER-TULLY MFG. CO


MODEL B-T 6
MODEL 8-12
Counterphase

Models 8-12, 8-16

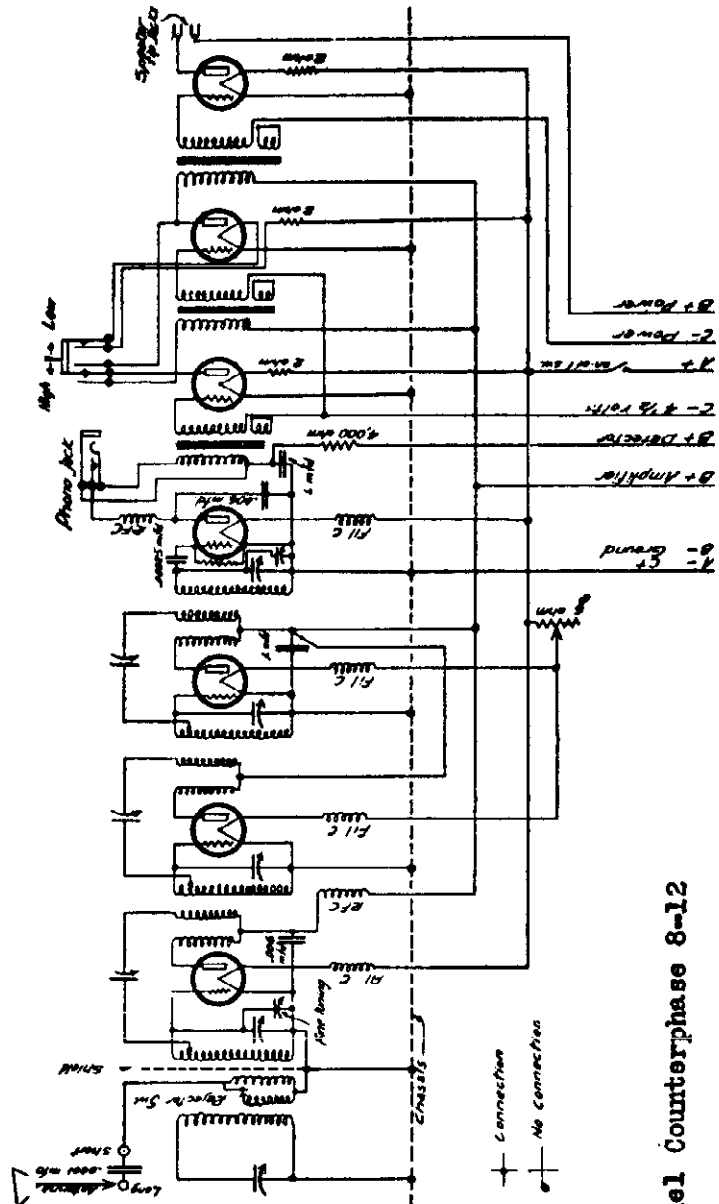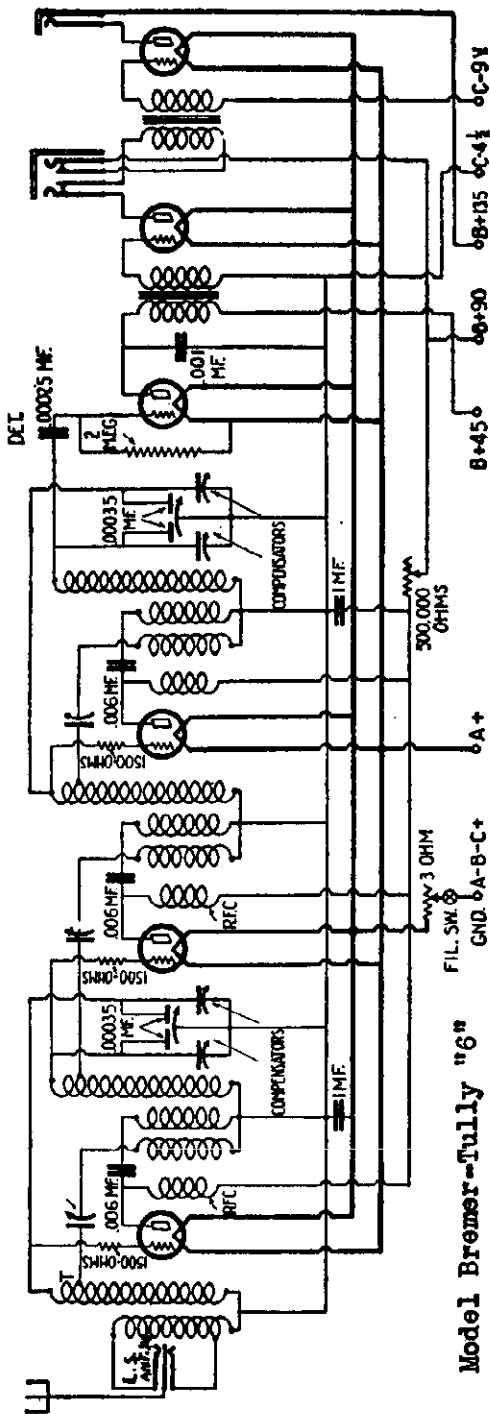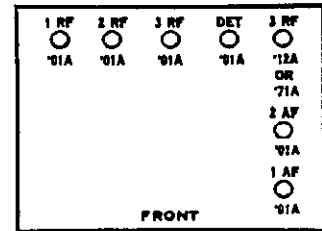


MODEL 80
MODEL 83-A

BREMER-TULLY MFG. CO

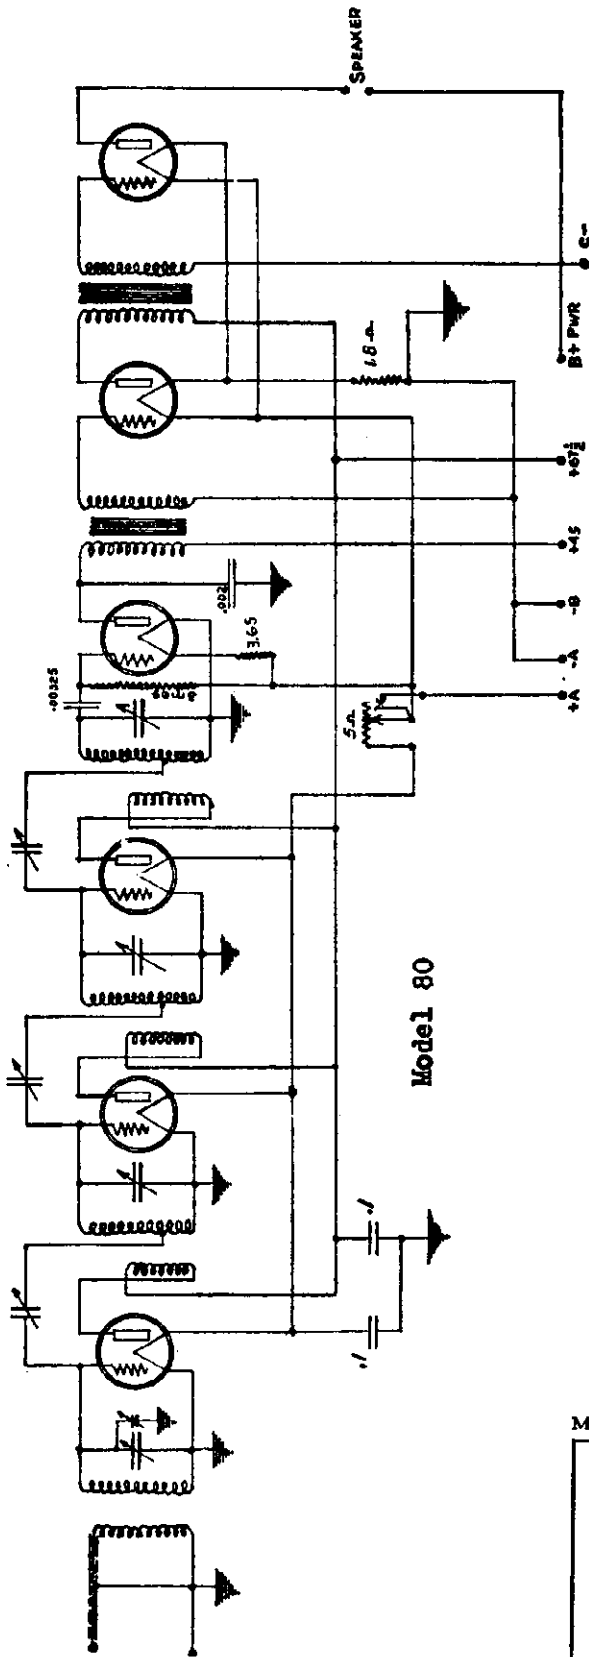


Model 80

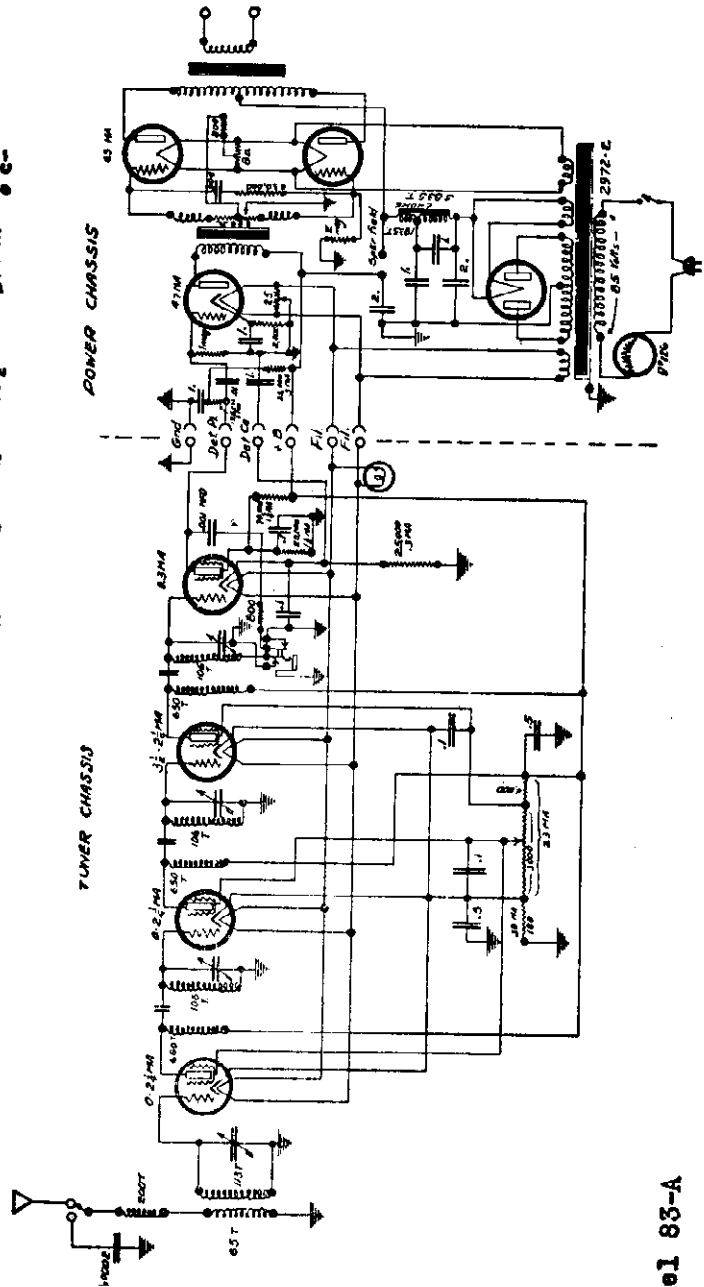


Model 83-A

Model 80

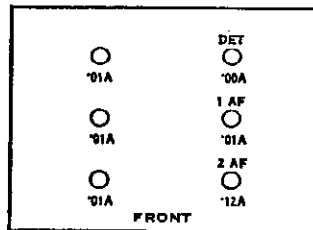

MODEL S-81, S-82
RF Chassis

BREMER-TULLY MFG. CO

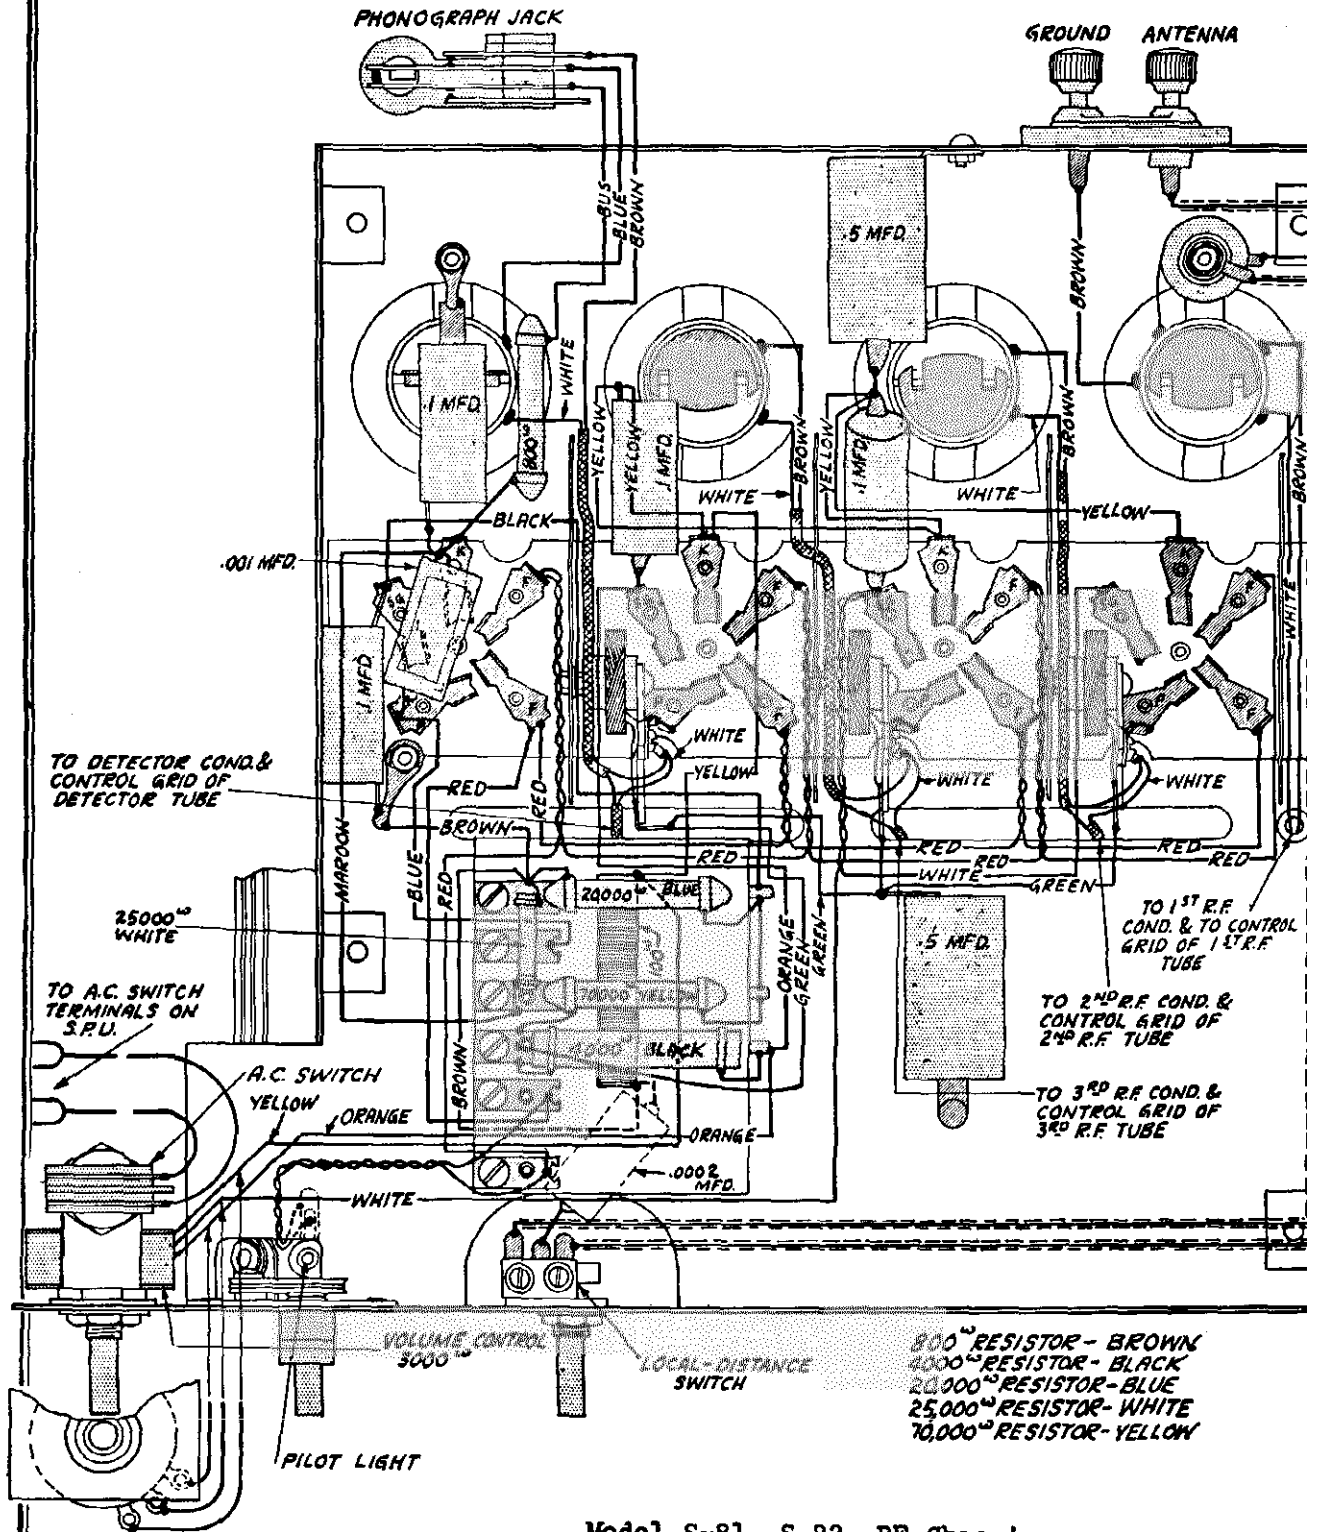


- 800^Ω RESISTOR - BROWN
- 4000^Ω RESISTOR - BLACK
- 20,000^Ω RESISTOR - BLUE
- 25,000^Ω RESISTOR - WHITE
- 70,000^Ω RESISTOR - YELLOW

Model S-81, S-82 RF Chassis

SCHEMATIC CIRCUIT OF RADIO CHASSIS USING UY-224 TUBES

BRUNSWICK RADIO CORPORATION

MODEL 11, 12, 16 and 33 AC

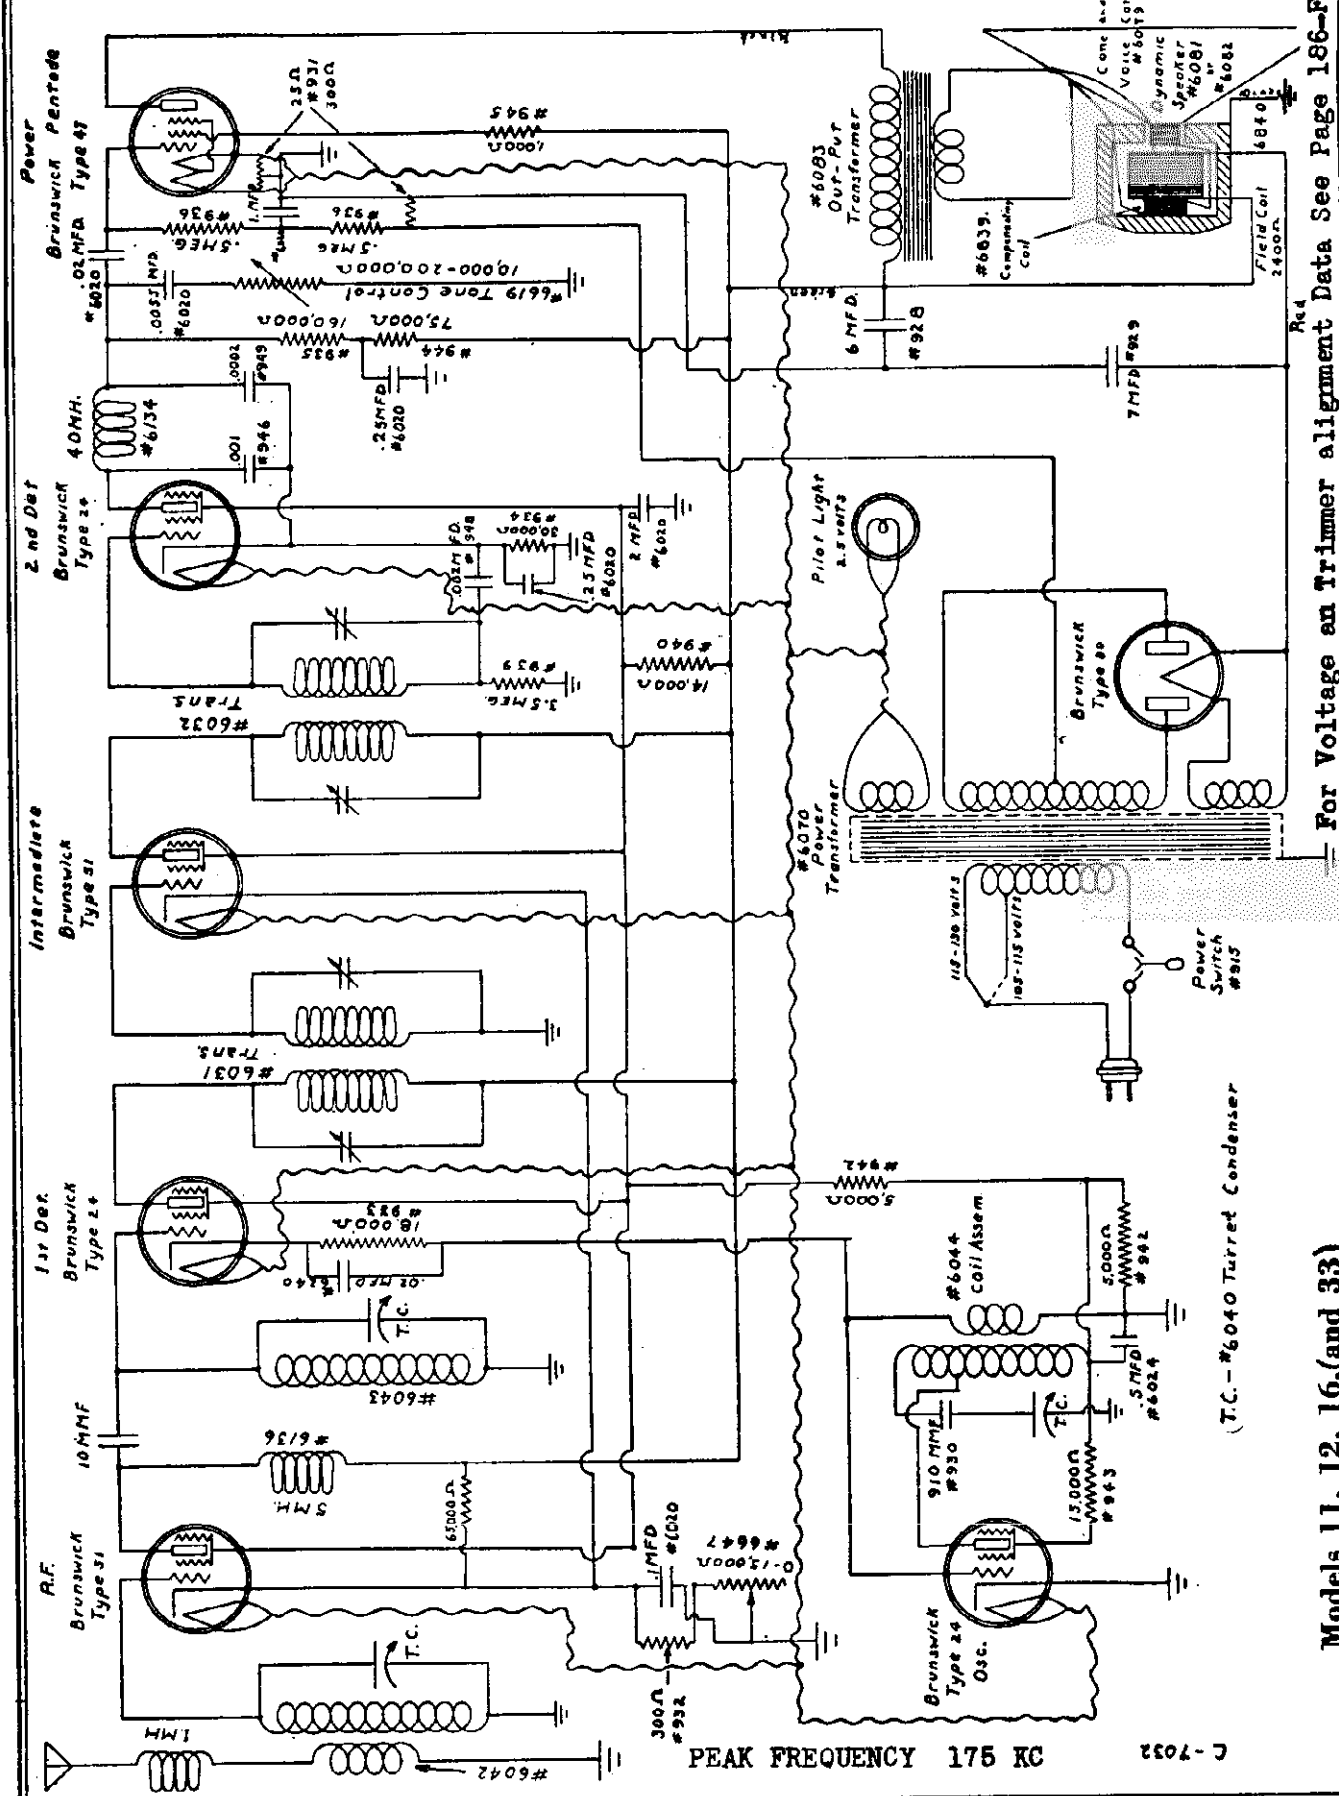

For Voltage an Trimmer alignment Data See Page 186-F

(T.C. - #6040 Turret Condenser)

PEAK FREQUENCY 175 KC

C-7032

Models 11. 12. 16.(and 33)

**MODEL 11,12,16
and 33
Service Notes**


BRUNSWICK RADIO CORPORATION

MODELS 11,12,&16.

SOCKET ANALYSIS—120 VOLT LINE

Volume Control Set at Maximum—Short Antenna to Ground

Position	Type Tube	Heater Voltage	Control Grid Voltage	Plate Voltage	Plate Current	Screen Grid Voltage
1st R.F.	—51	2.25	3.5	230	3.4 MA	70
1st Det.	—24	2.25	5.8	220	.4 MA	62
I.F.	—51	2.25	3.8	220	9 MA	60
2nd Det.	—24	2.25	.2	115*	.3 MA	60
Osc.	—24	2.25	0	35	1.2 MA	22
Power Output	—47	2.25	1	220	33 MA	220
Rec. Tube	—80	4.7		(530)	(26 MA)	(26 MA)
				(530)	(26 MA)	

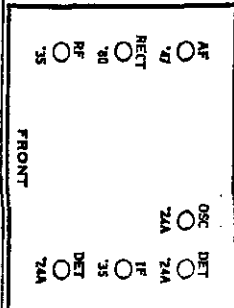

* Readings will vary according to resistance of meter. Tubes used in this test are average tubes.

METHOD OF ALIGNING R.F. CIRCUITS

In the event the antenna and first detector tuned circuits are out of alignment, they may be adjusted with the aid of a weak high frequency (1300 to 1500 K. C.) signal—produced by a distant station or a local test oscillator. Tune this signal in very carefully for maximum volume, or better still, if one is available, for maximum deflection on an output meter. Adjust the antenna tuned circuit adjustment screw (located near the type 47 tube on the top plate of the turret condenser) for maximum volume or for maximum deflection on an output meter. Then, without changing the position of the tuning knob, adjust the first detector adjustment screw—located adjacent to the A. C. switch—for maximum volume or maximum deflection on an output meter. Before tightening the lock unit on each adjustment screw, go over the adjustments a second time to secure the greatest possible accuracy. A drop of ambroid glue or collodian should be placed on each adjustment screw after the lock nut has been tightened to prevent handling and speaker vibrations from changing the adjustment.

In most cases it will be unnecessary to touch the oscillator adjustment screw (located between the antenna and first detector adjustment screws.) If this adjustment is necessary it is recommended that the intermediate frequency transformer circuits be tuned first (see following paragraph). Then tune oscillator circuit, employing same method as explained above for antenna tuned circuit and first detector circuit. In the event any circuit does not tune properly, check the circuit thoroughly for open and short circuits. If the trouble cannot be located, the coil should be replaced with a new one.

METHOD OF ALIGNING I.F. TRANSFORMERS

In the event the receiver is still insensitive and lacks proper selectivity after making the foregoing adjustments, the intermediate frequency transformers should be adjusted by one of the following methods:

1. Tuning Intermediate Transformers with 175 K.C. Oscillator


By far the best method of aligning the tuned circuits in the intermediate frequency transformers is to employ a 175 K.C. oscillator and output meter. In making this test, remove the oscillator tube and connect the output of the oscillator to the grid cap of the first detector. Usually it will not be necessary to remove the grid cap from the tube, this depending on the strength of the oscillator and the amount the I.F. transformers are out of line. Connect the output meter across the primary of the output transformer located on the speaker (terminals 3 and 7 counting from left to right). The four I.F. adjustment screws on the I.F. transformers, located inside the chassis, should be adjusted with a non-metallic screw driver for maximum deflection on the output meter. Go over all four adjustments a second time to secure maximum accuracy.

2. Tuning Intermediate Transformers without 175 K.C. Oscillator


In the event a 175 K.C. oscillator is not available a fairly close adjustment may be made by tuning in a faint broadcast signal, and with the volume control turned on full, adjust the transformers for maximum volume with a non-metallic screw driver. After adjusting the I.F. transformers, the R.F. circuits should be realigned as explained before.

BRUNSWICK RADIO CORPORATION

MODEL 11,12,
16,18,33
AVC Chassis D.

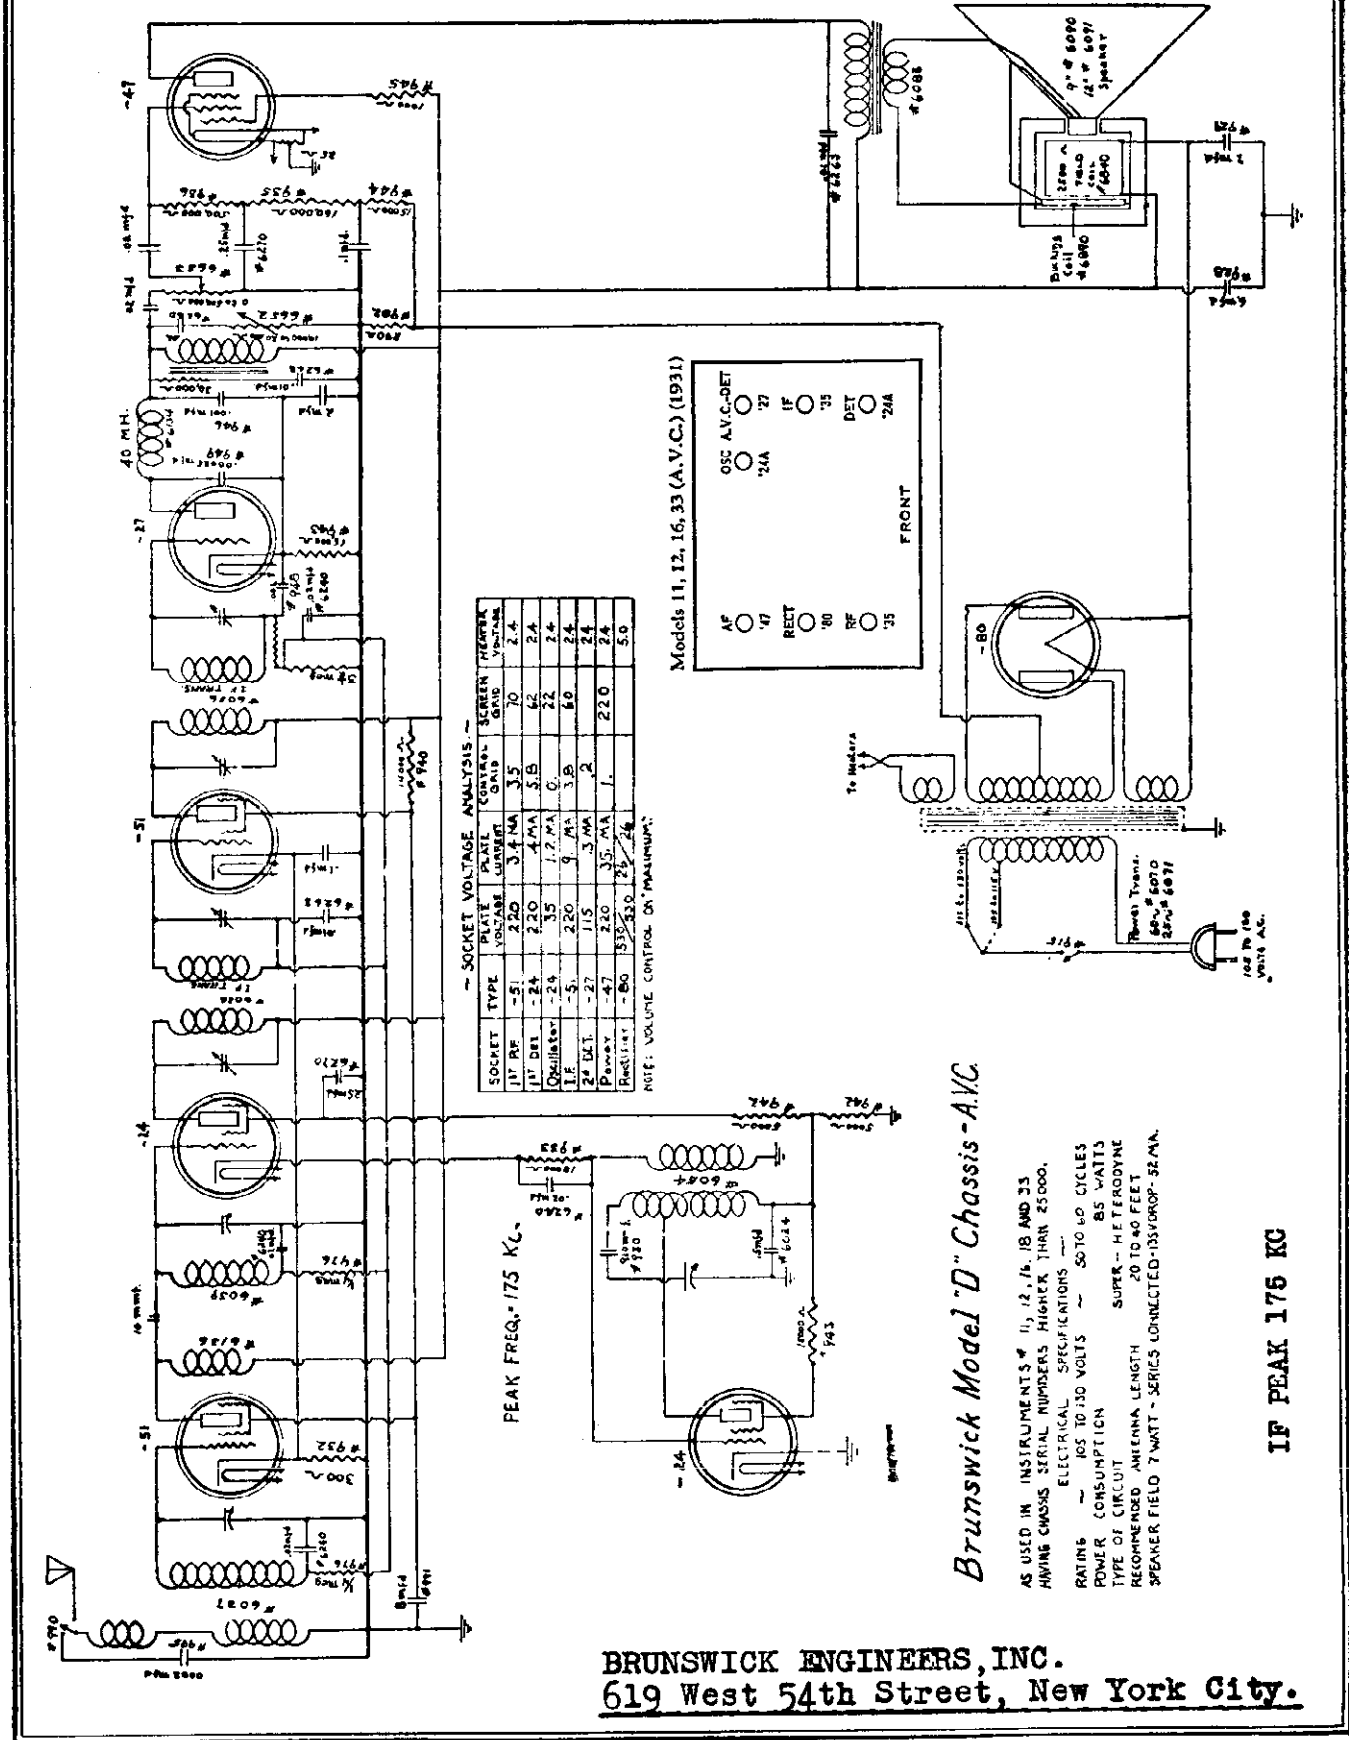

MODEL 14, 21, 31 DC
Socket and Voltage BRUNSWICK RADIO CORPORATION
Data and Notes

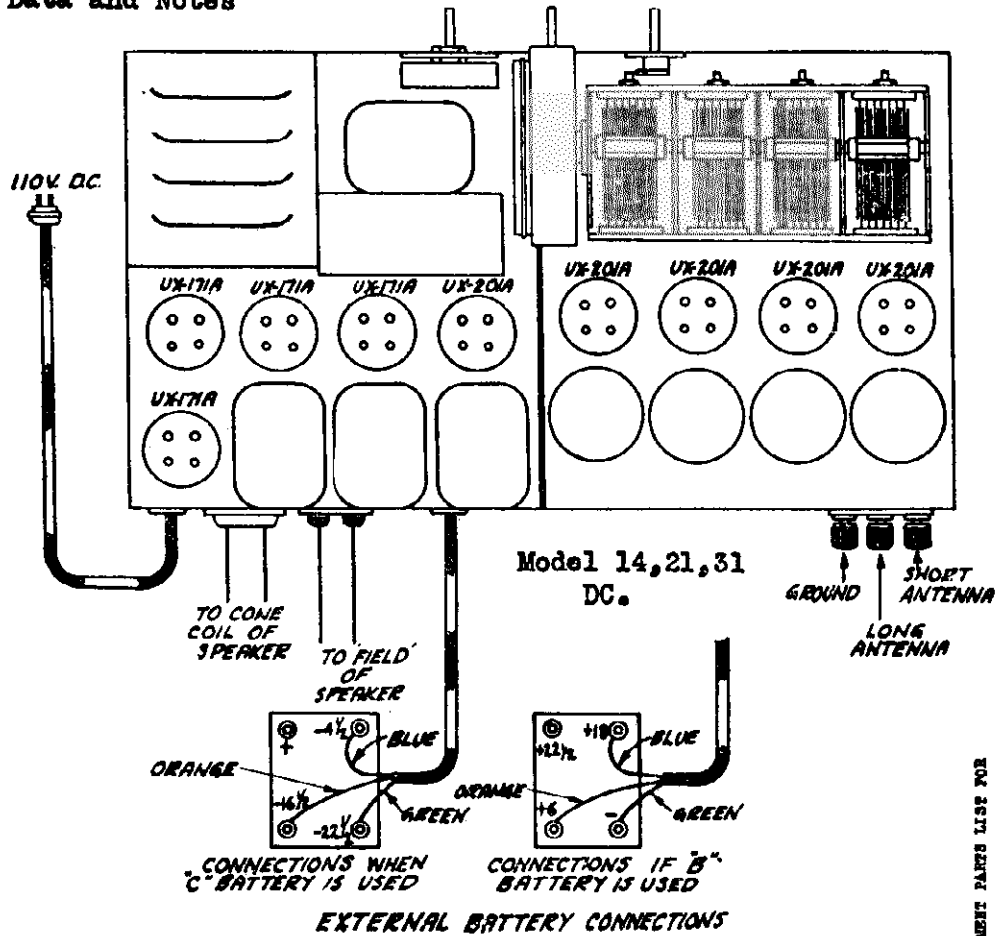

- REPLACEMENT PARTS LIST FOR**
- | | |
|-----------------|---|
| Part No. | D.C. MODELS 14, 21, & 31 |
| I-1201 | Resistance Unit, 200 ohms (Large Brown) |
| I-1202 | Resistance Unit, 220 ohms (Large Brown) |
| I-1203 | Resistance Unit, 500 ohms (Large Brown) |
| I-1204 | Resistance Unit, 120 ohms (Purple) |
| I-1205 | Resistance Unit, 200 ohms (Gray) |
| I-1206 | Resistance Unit, 25,000 ohms (Yellow) |
| I-1207 | Resistance Unit, 40 ohms (Wire Wound) |
| I-1208 | Double Filament By-Pass Cond. - 5 mfd. (W-642B) |
| I-1209 | Series Ground Cond. - .002 mfd. |
| I-1210 | Insulating Bushings for Vol. Cont. |
| I-1211 | Insulating Bushings for Grid Binding Post. |
| I-1212 | Heavy Duty Filament Choke |
-
- Part No.**
- | | |
|--------|--|
| I-1214 | Choke Mounting Brackets |
| I-1215 | 5/16" Bolt for 1/2" Resistor |
| I-1216 | 2-P. Socket Strip |
| I-1217 | 6 Volt Pilot Light |
| I-1200 | D.C. Chassis Complete - Model 14 and 21 |
| I-1211 | D.C. Chassis Complete - Model 31 |
| I-1212 | D.C. Chassis Complete - Model 14 and 21 |
| I-1213 | Radio Chassis for D.C. Model 14 and 21 |
| I-1214 | R.F. Chassis for D.C. Model 14, 21, and 31 |
| I-1220 | Radio Chassis for D.C. Model 31 |

VOLTAGE READINGS AT SOCKETS

Socket	Tube	Type	Filament	Grid	Plate
#1	1st R.F.	UX-201-A	5.5	-9	80
#2	2nd R.F.	" "	5.	-9	80
#3	3rd R.F.	" "	5.25	-5	80
#4	Detector	" "	5.25	0	32
#5	1st Audio	" "	5.75	-9	88
#6	Power Stage	UX-171-A	5.	-24	96
#7	" "	" "	5.	-15	88
#8	" "	" "	4.3	-15	92
#9	" "	" "	4.3	-22½	96

These readings will hold within 10% when taken with any reliable make of set analyzer with the tube in the socket of the set analyzer, the line voltage at 120 volts, and the volume control on maximum. Filament voltage will vary with different tubes because their filament resistance varies.

METHOD OF ADJUSTING NEUTRALIZING CONDENSERS.


In the event the receiver oscillates at any or all parts of the tuning range, the ground and antenna should be inspected to be sure there is not a poor connection at some point. If the oscillation still persists, try changing the tubes around, and if this does not eliminate the trouble, the receiver should be neutralized by the following method:

Select a good UX-201-A tube of the same make that is to be used in the receiver and cut off one filament prong close to the base. Because the filaments of all tubes are connected in series, it will be necessary to connect a 1.25 ohm resistor across the filament contacts of the socket in which the dummy tube is to be used. (The filament of another tube may be used for this purpose.) Tune the receiver to a powerful local station broadcasting on a frequency of between 1000 and 1500 kilocycles, and adjust volume control and antenna trimmer condenser for maximum volume. Insert the dummy tube in the first socket and connect the resistor or tube filament across the filament circuit - the first neutralizing condenser should now be adjusted until no sound, or the minimum sound, is heard in the reproducer. Adjust the other two stages in the same manner and the receiver is neutralized.

In the event the receiver cannot be neutralized the R.F. by-pass condensers should be tested for open circuits and a different dummy tube should be tried.

MODEL 15-B
Schematic

BRUNSWICK RADIO CORP.

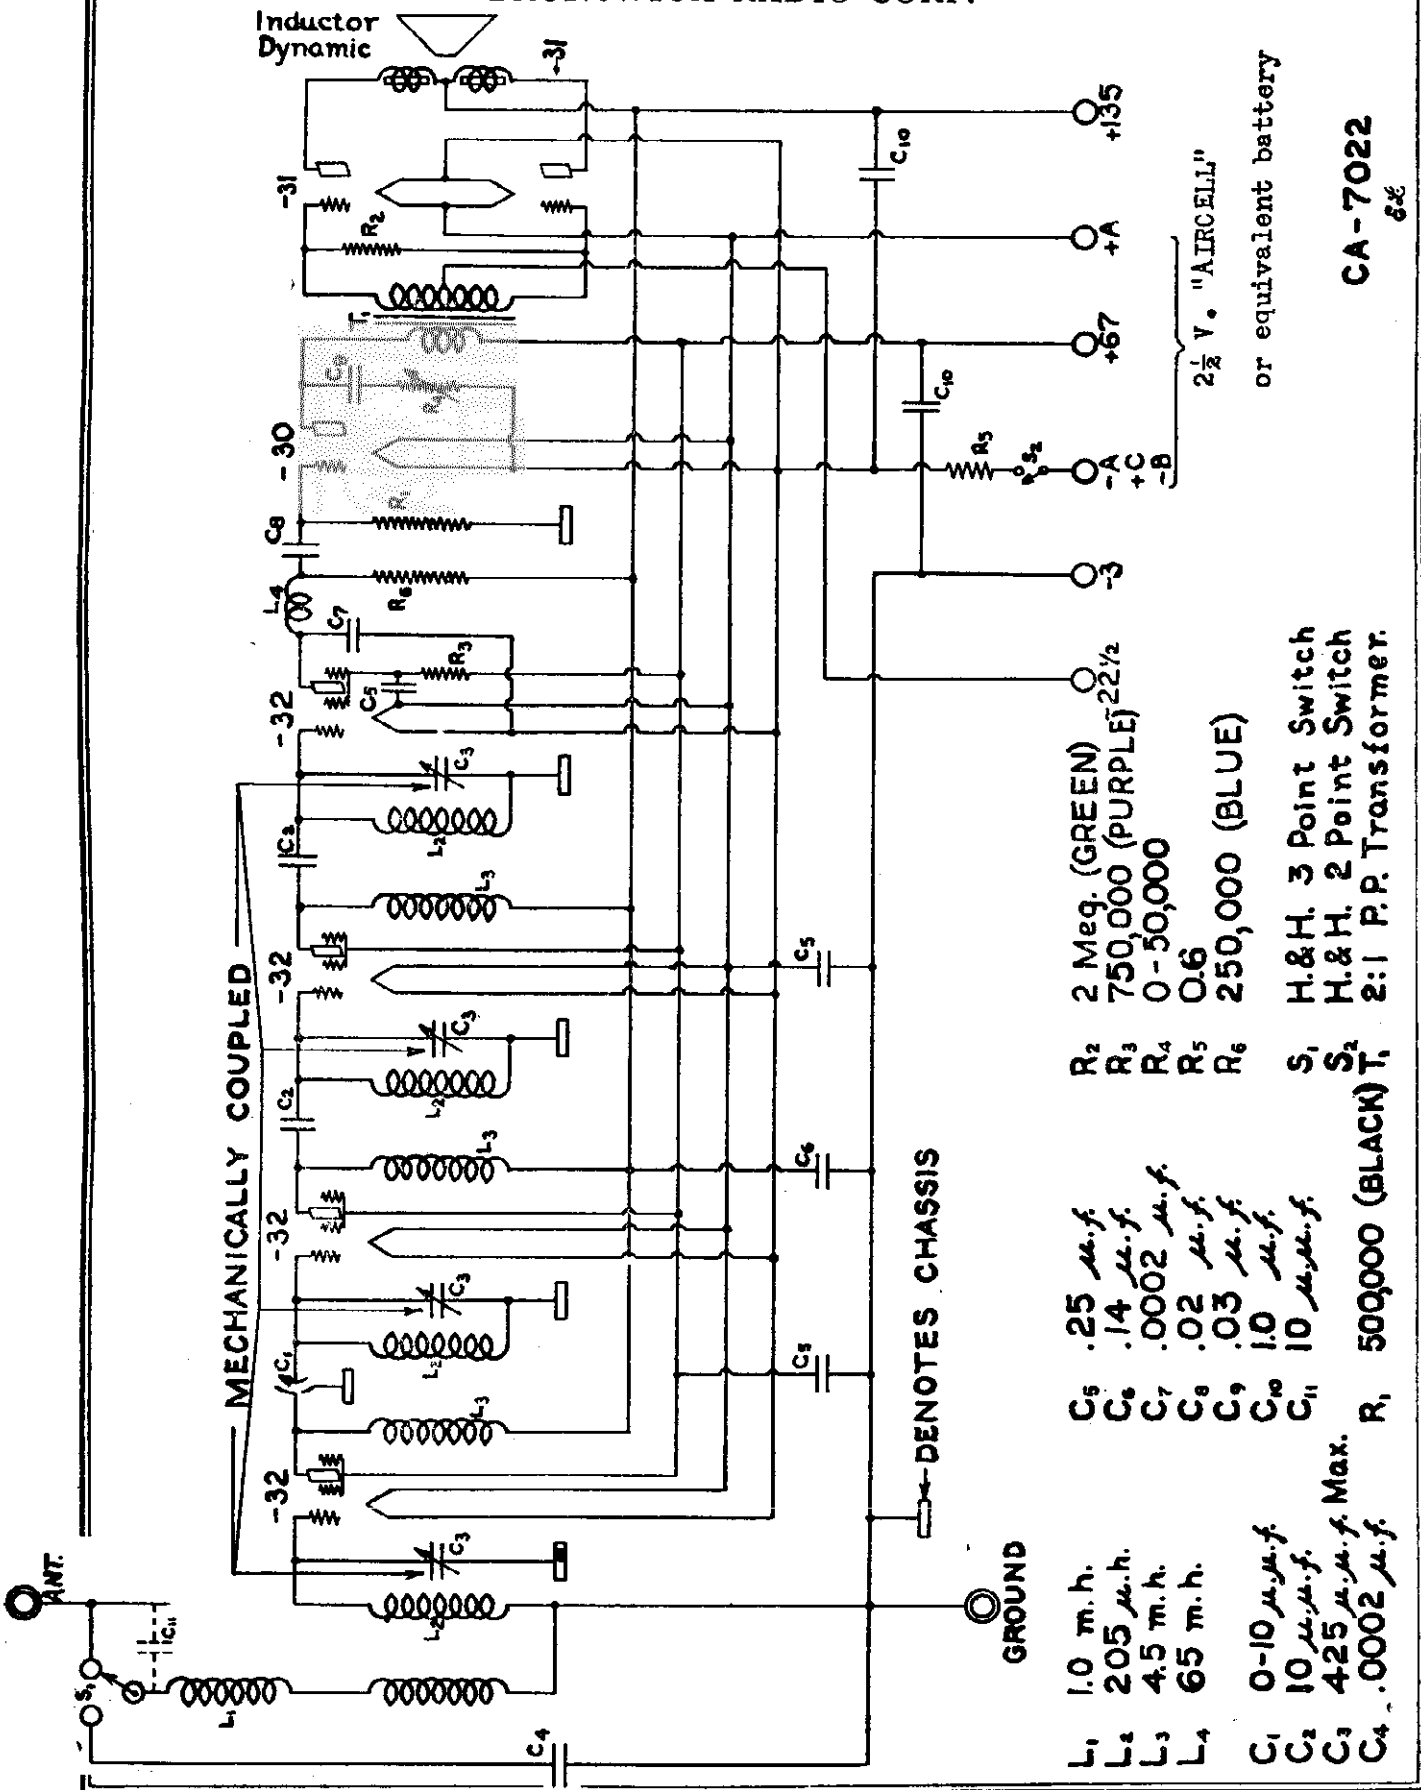

MECHANICALLY COUPLED

⊖ DENOTES CHASSIS


GROUND

- L₁ 1.0 m. h.
- L₂ 205 μ. h.
- L₃ 4.5 m. h.
- L₄ 65 m. h.
- C₁ 0-10 μ. μ. f.
- C₂ 10 μ. μ. f.
- C₃ 425 μ. μ. f. Max.
- C₄ .0002 μ. f.
- C₅ .25 μ. f.
- C₆ .14 μ. f.
- C₇ .0002 μ. f.
- C₈ .02 μ. f.
- C₉ .03 μ. f.
- C₁₀ 1.0 μ. f.
- C₁₁ 10 μ. μ. f.
- R₁ 500,000 (BLACK)
- R₂ 2 Meg. (GREEN)
- R₃ 750,000 (PURPLE)
- R₄ 22 1/2
- R₅ 0-50,000
- R₆ 250,000 (BLUE)
- S₁ H.&H. 3 Point Switch
- S₂ H.&H. 2 Point Switch
- T₁ 2:1 P.P. Transformer.

2 1/2 V. "AIRCELL"
or equivalent battery

CA-7022
62

BRUNSWICK RADIO CORP.

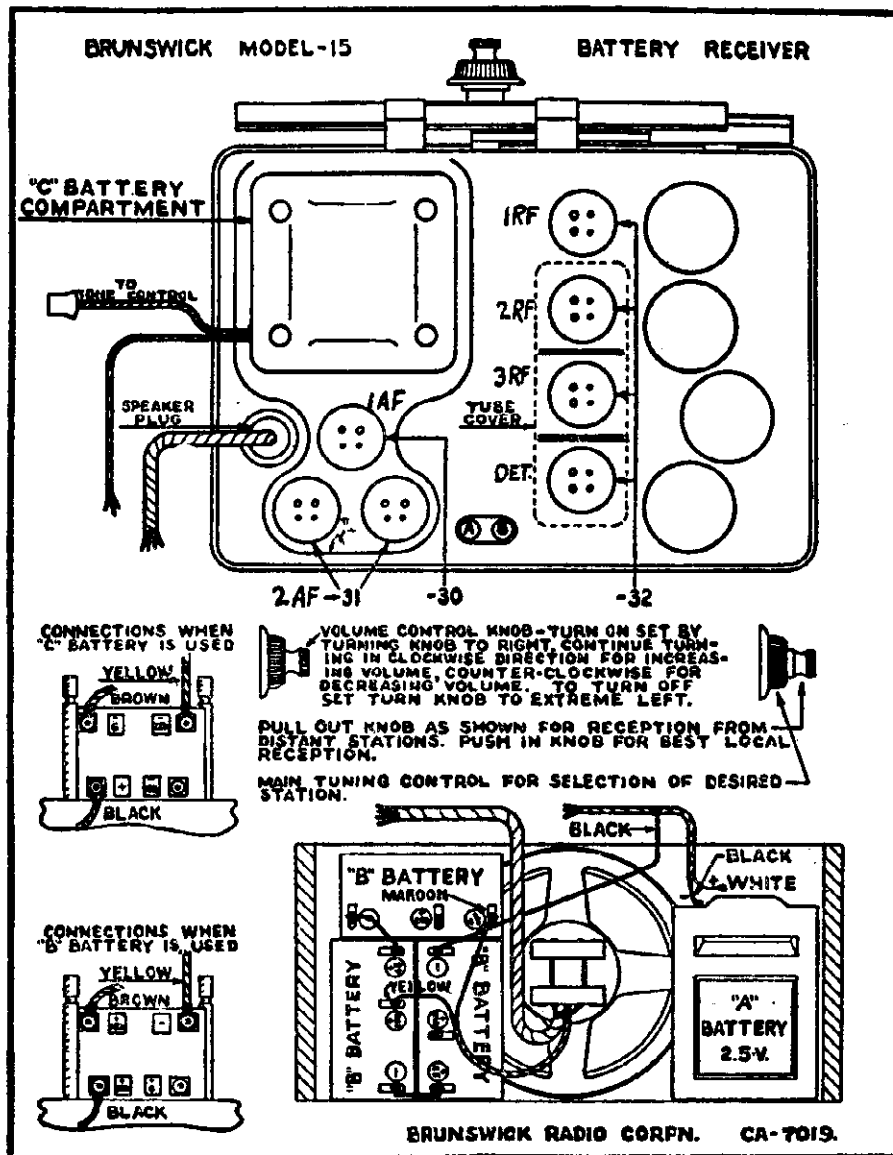MODEL 15-B Voltage
and Socket Layout

Tube Position	Filament Voltage	Plate Voltage	Plate Current	Screen Grid Voltage	Control Grid Voltage
1st R. F.	2. volts	135 volts	1.1 M. A.	69 volts	-3 volt
2nd R. F.	2. "	135 "	1.1 M. A.	69 "	-3 "
3rd R. F.	2. "	135 "	1.1 M. A.	69 "	-3 "
Detector	2. "	67.5 " *	.03 M. A.	69 "	-3 "
1st Audio	2. "	67.5 "	2.4 M. A.	—	-3 "
Power amp.	2. "	135. "	6.2 M. A.	—	-22.5"
" "	2. "	135. "	6.2 M. A.	—	-22.5"


NOTE:

(*) Because of the large resistance in the plate and screen grid circuit of this tube, the voltage reading on most analyzers will be in the neighborhood of 5. volts.

MODEL 15, 22, 32 DC
 Socket and Voltage
 Data
 Used in Model 42 DC

BRUNSWICK RADIO CORP.

MODEL DC - 32

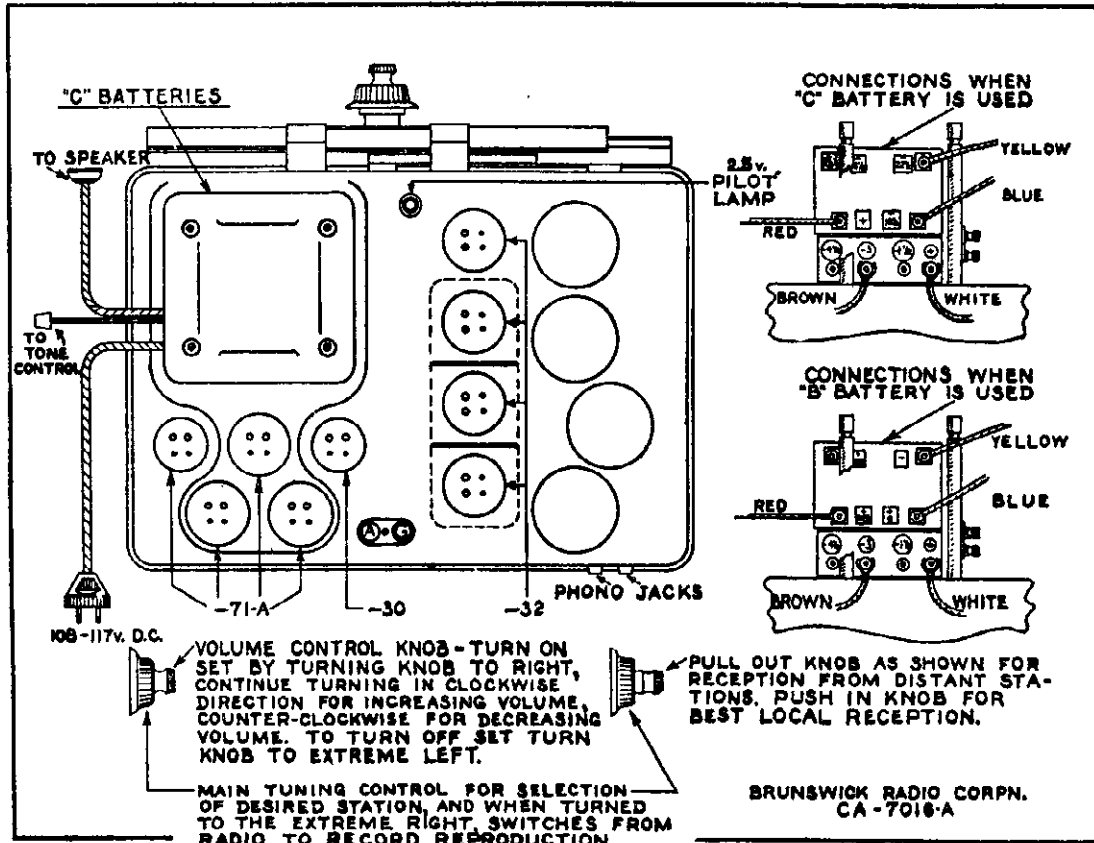

TUBE SOCKET ANALYSIS

For Models DC-15, 22 and DC-32

The values given in the following table are correct for standard analyzers on 118-volt direct current lines:


Tube Position	Filament Voltage	Plate Voltage	Plate Current	Screen Grid Voltage	Control Grid Voltage
1st R. F.	2.1 volt	100 Volt	1.4 M. A.	50	-3 volts
2nd R. F.	2.1 volt	100 Volt	1.4 M. A.	50	-3 volts
3rd R. F.	2.1 volt	100 volt	1.4 M. A.	50	-3 volts
Detector	2.1 volt	23 volt	.2 M. A.	50*	-5 volts*
1st Audio	2.1 volt	62 volt	2. M. A.	---	-3 volts**
Pwr. rear right	5.2 volt	112 volt	13. M. A.	---	17. volts
" rear left	5.2 volt	110 volt	14. M. A.	---	22. volts
" front right	5.1 volt	111 volt	11. M. A.	---	22. volts
" front left	5.1 volt	110 volt	11. M. A.	---	17.5 volts

NOTE: (*) Because of the high resistance in this circuit a much lower reading will be obtained on most analyzers.

(**) A potentiometer, located on the under side of the audio panel, varies this grid-bias and should be adjusted to give the above voltage.

BRUNSWICK RADIO CORP.

MODEL 15, 22, 32 DC
Schematic
Used in Model 42 DC

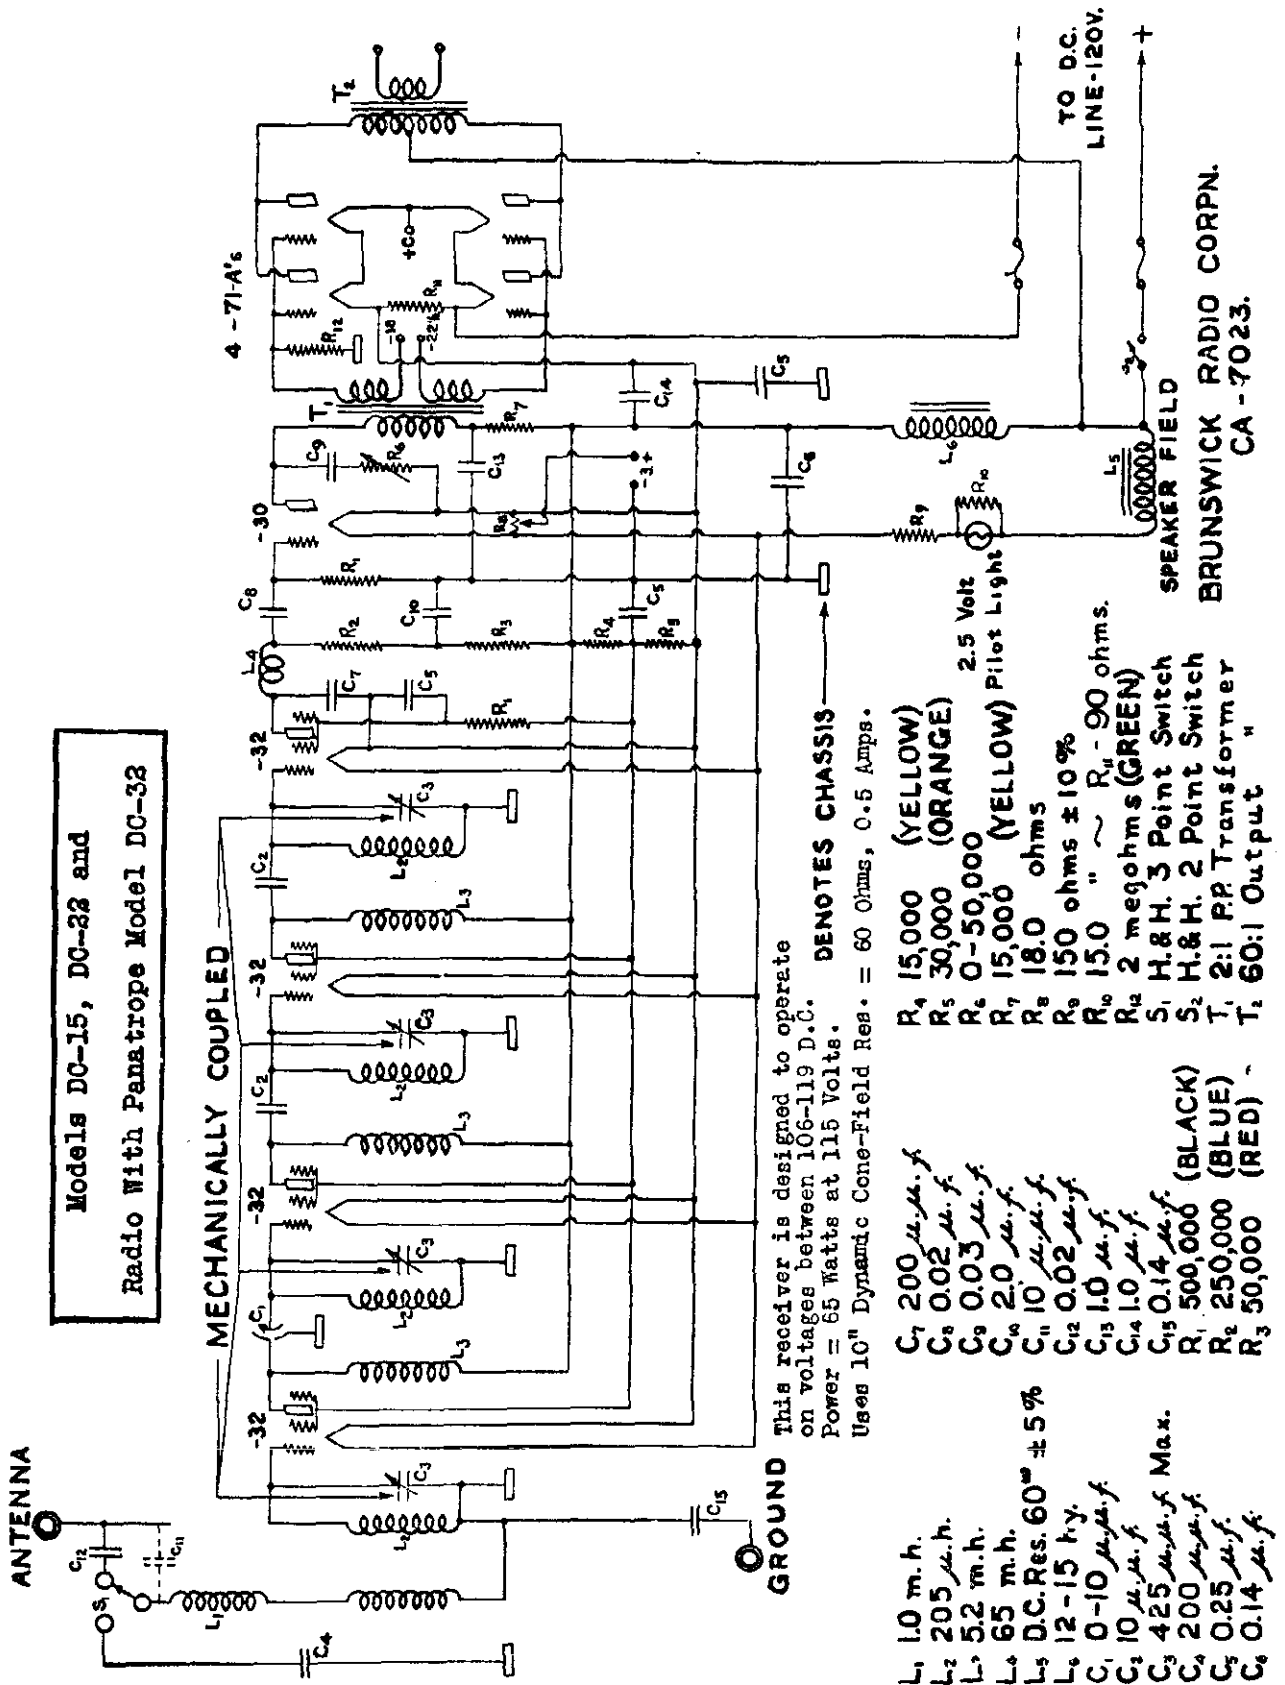

Models DC-15, DC-22 and
Radio With Panatropo Model DC-32

MECHANICALLY COUPLED

This receiver is designed to operate on voltages between 106-119 D.C. Power = 65 Watts at 115 Volts. Uses 10" Dynamic Cone-Field Res. = 60 Ohms, 0.5 Amps.

DENOTES CHASSIS

- L₁ 1.0 m. h.
- L₂ 205 μ . h.
- L₃ 5.2 m. h.
- L₄ 65 m. h.
- L₅ D.C. Res. 60 Ω \pm 5%
- L₆ 12-15 h.y.
- C₁ 0-10 μ . f.
- C₂ 10 μ . f.
- C₃ 425 μ . f.
- C₄ 200 μ . f.
- C₅ 0.25 μ . f.
- C₆ 0.14 μ . f.
- C₇ 200 μ . f.
- C₈ 0.02 μ . f.
- C₉ 0.03 μ . f.
- C₁₀ 2.0 μ . f.
- C₁₁ 10 μ . f.
- C₁₂ 0.02 μ . f.
- C₁₃ 1.0 μ . f.
- C₁₄ 1.0 μ . f.
- C₁₅ 0.14 μ . f.
- R₁ 500,000 (BLACK)
- R₂ 250,000 (BLUE)
- R₃ 50,000 (RED)
- R₄ 15,000 (YELLOW)
- R₅ 30,000 (ORANGE)
- R₆ 0-50,000
- R₇ 15,000 (YELLOW)
- R₈ 18.0 ohms
- R₉ 150 ohms \pm 10%
- R₁₀ 15.0 " \sim R₁₁ - 90 ohms.
- R₁₂ 2 megohms (GREEN)
- S₁ H.&H. 3 Point Switch
- S₂ H.&H. 2 Point Switch
- T₁ 2:1 P.P Transformer
- T₂ 60:1 Output "

SPEAKER FIELD
BRUNSWICK RADIO CORPN.
CA-7023.

TO D.C.
LINE-120V.

BRUNSWICK RADIO CORP.

BRUNSWICK AUTOMATIC PANATROPE
WITH RADIO

PART I
ELECTRICAL SPECIFICATIONS
MODEL 42

Rating.....	105 to 130 volts—60 cycles
Also available.....	105 to 130 volts—50 cycles
	105 to 130 volts—25 cycles
Power consumption of radio set—60 cycles.....	105 to 125 volts—direct current
Power consumption of Panatrope and Radio.....	85 watts
Type of circuit.....	110 watts
Type of tubes.....	Screen-grid tuned radio frequency
	—80..... 1
	—45..... 2
	—24..... 4
Recommended antenna length.....	30 to 70 feet
Average sensitivity.....	4.0 micro volts per meter
Number of radio frequency stages.....	3
Type of detection.....	Linear type—power detector
Number of audio stages.....	1
Type of audio amplification.....	Parallel operated—45 s
Type of rectifier.....	125 ma. full wave type—80
Type of loudspeaker.....	10-inch cone—dynamic
Speaker field.....	Series connected—1600 ohms—100 volts—drop—62.5 ma.—6.25 watts


INTRODUCTION

The Brunswick Model 42 Automatic incorporates the same armored chassis and dynamic speaker that is used in the Models 15 and 22. In addition it has the added feature of the Automatic Panatrope which will play twenty records without attention, and then shut itself off. It is the purpose of this bulletin to show only those features which deal with the Automatic equipment, its connections to the radio chassis, and also the information dealing with coin operation. All other data on the radio set can be obtained from Service Bulletin No. 71.

The operation of the Automatic Panatrope is extremely simple, as will be readily seen by the following explanation:

Figures 1 and 2 show top and front views of the Model 42 and indicate the various components that enter into its use.

With the station selector control turned past the 1500 K. C. mark, and twenty or less records in the record magazine, turn the

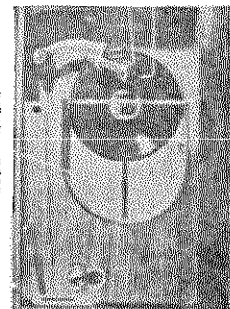

RECORD MAGAZINE

SKETCH 1

Fig. 1

"off" and "on" switch to the "on" position. Then press the "start" button. This will do the following: connect the power to the radio chassis so that the audio amplifier can be used for record reproduction; starts the motor and automatic mechanism for the cycles of playing the record and ejecting the played record into the reject compartment.

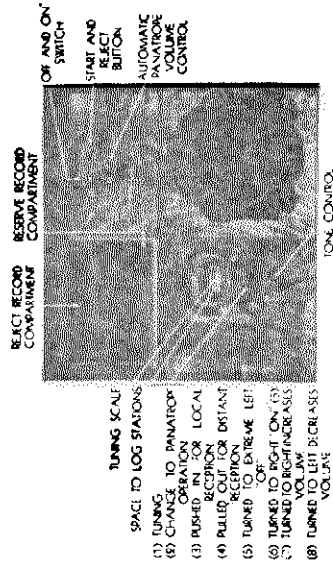


Fig. 2

PART II
THE STORY OF THE AUTOMATIC AND ITS OPERATION THROUGH A COMPLETE CYCLE

The accompanying series of sketches have been prepared in order to present a clear idea of the cycle of operations through which the Automatic mechanism goes during the playing, the rejection of a record, and the starting of a new record. In conjunction with the following explanation, these sketches should make what appears to be a complicated mechanism really a very simple piece of apparatus. An automatic record playing instrument may be made in innumerable ways, but the simplicity of its mechanism reflects the true engineering skill behind it. There should be no more apparatus necessary than that required to accomplish the purpose of the machine. In servicing such a machine, this is a factor to be appreciated.

In Sketch 1 the record is shown in the playing position. As the magnetic pickup moves toward the center of the record, beneath the top plate of the mechanism the suspension arm is pulling a special switch with it. This is shown in Sketch 2. When the end of the record is reached, this switch hits against an adjustable stop, closing the switch contacts.

From this point on, many things occur in a short space of time, ten seconds or less. Reference to the schematic circuit appearing in Figure 6 will also help to clear up a few points. In fact, it will more than pay the person who meets up with this model to sit down and follow out this circuit along with this description.

The switch just mentioned is designated as the "Suspension Arm Switch" in the schematic circuit. When this closes, the line voltage is placed directly across the solenoid coil, also shown in Sketch 3. Immediately the solenoid armature pulls the stop lever from the dotted line to the solid line position. The projection "F" on this lever (follow to Sketch 4) moves out of the way of the clutch pawl, allowing the latter under the tension of the small spring to slip in and engage with the teeth of the clutch. The only revolving parts up to now have been the motor, ejector friction disc, and the turntable. Sketch 5 shows the parts which start revolving when the clutch engages. A little further on, the reason for these gears will become evident.

As the master gear revolves, three cams on its under side function. The first is shown in Sketch 6, operating the cycle switch. This switch, closes (refer to schematic circuit and

MODEL 42
AC-DC
BRUNSWICK RADIO CORP.

steadily. The oil holes are located directly beneath the turntable. A few drops will suffice; do not flood the motor with oil as this can do more harm than good.

The Brunswick Permo-Point needle, which accompanies each instrument, will play in excess of 2,000 records. It is recommended that this needle be used in preference to all other types.

Some of the simple adjustments which may be necessary to accommodate slight differences in records, as well as some suggestions to take care of possible changes caused by shipment, are given below.

We recommend that the first time any of these adjustments are made, that the plate covering the mechanism be removed. This can be accomplished as follows:

- (a) Lift off the turntable.
- (b) Remove all screws around the edge of plate covering mechanism, as well as those around the suspension arm.
- (c) Remove the nut which holds the suspension arm to the cast iron base.
- (d) Carefully lift up the suspension arm about three-quarters of an inch and remove the plate by pulling up the front end and gently lifting out—taking care not to mar the cabinet. Removing this plate will bring the mechanism into view, permitting the adjustment of four primary points.

1. Adjustment determining the point at which the magnetic pickup is lowered to edge of record.

Replace the turntable, re-tighten suspension arm nut, and place a record in the record magazine; press the start button. As the master gear starts through the last half revolution (see Sketch 8) it will be seen that the eccentric stop "s" controls the release of the lever "w," which is pulling the suspension arm toward the record. The adjustment of this "stop" allows the needle of the magnetic pickup to drop on the edge of the record about a sixteenth of an inch from the grooves.

2. Also in Sketch No. 8 there will be seen a spring, "q."

After the needle has come in contact with the record, this spring pulls the suspension arm over until the needle rides in the starting grooves of the record. If the spring tension be too great, the needle may jump several grooves, or on the other hand, if it is too weak, will not pull the needle into the starting grooves at all. The earlier models with serial numbers up to 2,000 have this spring attached to a fixed stud and the tension can be varied by shortening or stretching the spring. Those with serial numbers above this have an adjustable bracket to which the spring is attached, permitting the tension to be varied without touching the spring. The remedy is obvious.

3. At the base of the suspension arm, see Sketch No. 2, is a switch which controls the rejection of a record at the finish of its playing. There are two types of these switches, the earlier type—on models with serial numbers less than 2,000 (this type is shown on the actual wiring diagram Figure 5)—and the later one that is indicated in Sketch 2.

Removing the cover, the action of this switch can be observed. As the record plays, the switch casting is slowly carried along with the suspension arm. In the earlier type of switch the floating contact member does not touch either side contact until the magnetic pickup reaches either the inside groove of a concentric grooved record where a stop (see Sketch 2) causes the left contact to close; or on an eccentric grooved record will cause the right contact to be closed. If either of these two contacts are too close to the floating contact there is a possibility of the record rejecting before it is finished. Also, if the separation from the right

note that the "reset" and "off-on" switches are closed) in order to maintain a closed power circuit to the motor when the "reset" switch opens a little later. Immediately thereafter, the second cam on the master gear, not shown, has revolved to a position where it actuates a lever raising the pickup arm, see Sketch 6.

Referring to Sketch 7—with the pickup raised off the record, the third cam raises the ejector wheel to a position where the friction cone rides on the ejector friction disc. As the ejector wheel comes up and starts to revolve, it also brings up the push rod opening the "reset" switch (see schematic). The revolving ejector wheel sends the finished record out into the reject record compartment.

In Sketch 8, note the lever arm marked "t." Functioning through its mechanical connection to the master gear, it starts moving the pickup suspension arm out of the way of the next record coming down from the magazine. The levers "x" and "y" are also working at the same time and through the connecting rod "z," as the pickup moves to the right, sends a new record down to the turntable. Sketches 8 and 9 show the respective positions of the mechanism and top of the Automatic Panatropes at the middle of the record change operation. The master gear only revolves once. The reasons for the two reduction gears, Sketch 5, should now be apparent; namely, because the turntable shaft revolves at 78 R.P.M., and this speed is entirely too high for direct application to the other moving parts, suspension arm, etc. Even if it were, the size of the motor would have to be much greater to supply all the power required during the record change. The gears serve to keep the power consumption of the Panatropes down to a minimum.

When the new record drops on the turntable, it hits the push rod closing the "reset" switch, thus keeping the power circuit to the motor and chassis closed even though the cycle switch is still closed. The position of the record, ejector wheel and push rod are now shown by Sketch 10.

Going back to Sketch 8, the suspension arm return lever, "w," now comes into play. This is during the last half of the master gear revolution. As the master gear returns to its original position, the suspension arm return lever, "w," catches the projecting pin that was pushed over by "t," carrying the suspension arm back until the other end of "w" hits the stud "s." This releases the pin, leaving the suspension arm and pickup in position over the first grooves of the new record. With the return of the suspension arm, the arm "v" in the record magazine has moved back ready to advance the next record. The pickup is lowered to the record and the master gear, completing its cycle, allows the stop lever arm to drop to the position indicated by the solid lines of Sketch 11 under the tension of the spring "u." The projection "r," Sketch 3, engages the clutch pawl, preventing the gears from revolving further. The cycle switch opens and the new record continues the program.

There is one more point to consider. Had the record magazine been empty, the mechanism would have worked in the same manner with one exception, the push rod would have remained up and the "reset" switch open. From the schematic circuit, it is evident that upon the opening of the cycle switch, the power supply circuit is broken and the whole machine shuts off.

PART III
ADJUSTMENT AND CARE

All initial adjustments are made at the factory so that the instrument is ready for immediate use when properly installed. The turntable speed should be 78 R.P.M., but if for any reason it is thought that this speed is not being maintained, by placing a paper clip at some point on the record's edge for an indicator and timing the turntable, it is possible to check this. The motor speed control is directly above the motor and is readily located when the cabinet back is removed.

The motor should be oiled about once a month; a little oftener if the machine is used

MODEL 42
AC-DC

BRUNSWICK RADIO CORP.

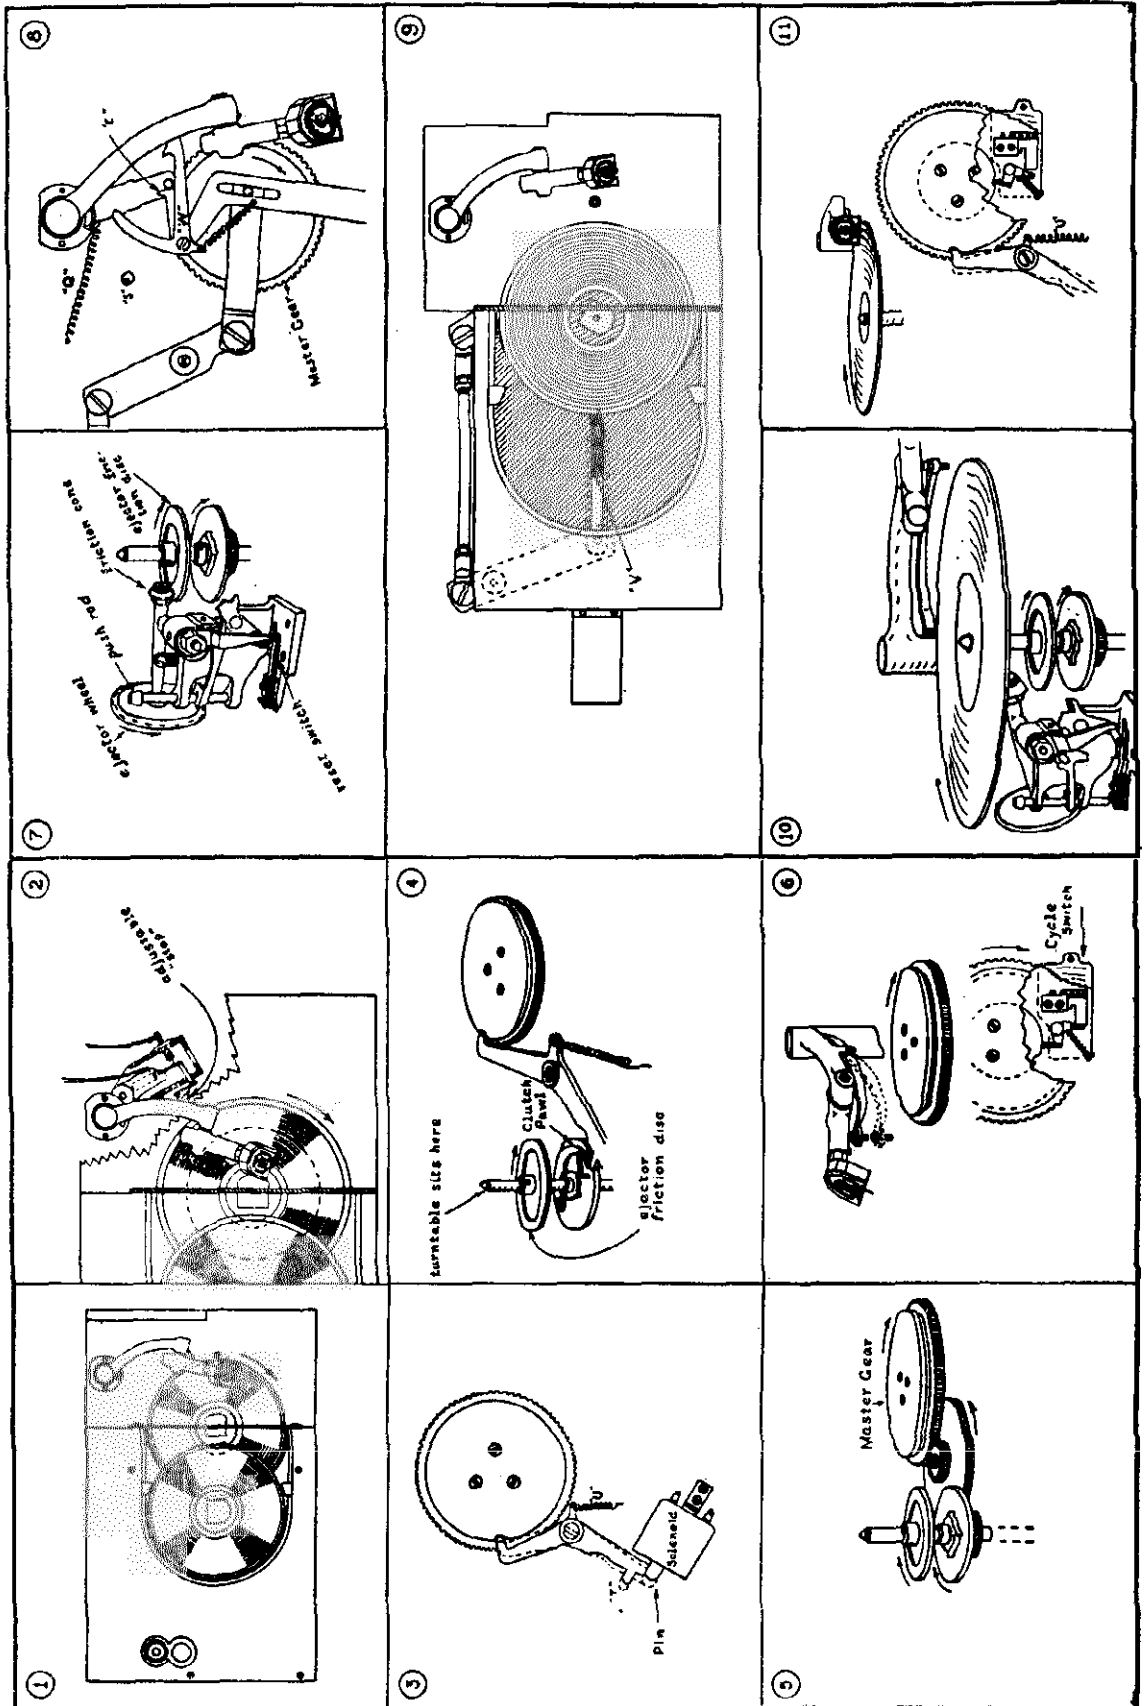


Figure 4

Figure 3

**MODEL 42
AC-DC**

BRUNSWICK RADIO CORP.


contact is too great, the switch will not close on an eccentrically grooved record. If the stop for the concentric grooved record is set too far to the left the contact will not close, and if set too far to the right, the record is rejected before the selection finishes.

The later type of switch has been simplified somewhat in construction, having only one contact, but accomplishes the same work. If the previous discussion has been carefully followed, similar reasoning applies to the adjustment and operation of this later type of switch. On the models with this later type switch the "stop" previously mentioned is adjustable through a hole in the plate covering the mechanism.

4. Solenoid operation: Remove the turntable and press the start button. This energizes the solenoid coil which in turn operates the lever, which starts the functioning of the record-changing mechanism. After the record-changing mechanism completes its cycle, the electrical circuit of the solenoid is opened and it is de-energized. The spring, "u," sketch II, pulls the lever into its normal position. If the solenoid for any reason does not draw the armature in properly or the armature vibrates against the solenoid, it can be adjusted by means of the two screws which mount the solenoid to the base. Also, if the spring "u" is too weak, the record-changing mechanism will not stop, but will continue to reject the records. If too strong, the solenoid will not have sufficient power to operate the record-changing mechanism. The solenoid armature is hollow and contains a rubber bumper which dampens out alternating current vibrations.

GENERAL POINTS TO CHECK UP IF THE AUTOMATIC PANATROPE IS INOPERATIVE

1. Be sure that the power line plug is connected to the receptacle and that this is "alive." The latter can be readily determined by plugging in a floor lamp or other similar electrical device.
 2. The power plug joining the Automatic mechanism and radio chassis should be solidly connected.
 3. The Panatrope input transformer tip leads should be well seated in the tip jacks at the rear of the radio chassis.
 4. There should be not more than twenty records in the magazine and reject record compartment at one time to prevent the possibility of jamming and record breakage.
 5. The "Off-On" switch on the Panatrope control panel should be placed at the "On" position, and the volume control turned up far enough to insure sufficient volume.
 6. The station selector scale should be turned past the 1500 K. C. mark until the clicks of the Radio-Panatrope change-over switches are heard.
 7. By pressing the "start" button for an instant, the radio tuning scale should be illuminated and the turntable set in motion. If the latter revolves, but the scale is not illuminated, the fuses under the power transformer cover should be tested and any defective ones replaced. Check the pilot light for continuity if the radio tubes light up.
 8. If everything checks up to this point, and still no reproduction is obtained, see that the group of three tubes at the left of the radio chassis (when viewed from the rear) are lighted. Remove the cover on the three screen-grid tubes and replace the tube nearest the rear of the chassis with one known to be okay.
 9. For pick-up trouble see Service Bulletin No. 70, page 9.
- In conjunction with the following possibilities of trouble and their remedies, it would be well for the one contemplating service on the instrument to stop for a moment before

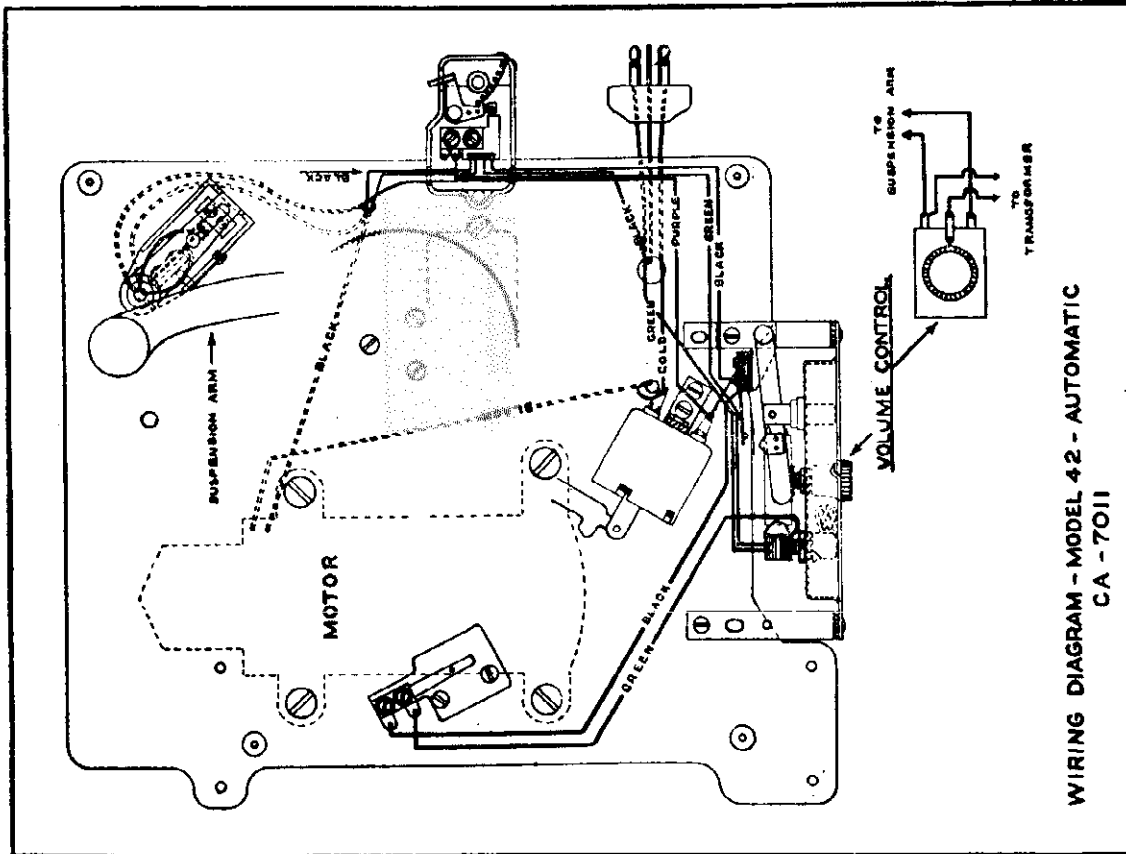

**WIRING DIAGRAM - MODEL 42 - AUTOMATIC
CA - 7011**

Figure 5

MODEL
AC-10

BRUNSWICK RADIO CORP.

delving into the machine and try to analyze the cause of the trouble. This will save much time and unnecessary work.

Records Jamming in Mechanism

There are several conditions which may cause this; the most likely are those due to (a) warped records, (b) the record feed fingers on the record magazine bent, (c) the spring on the record gate (which supports the records while stored in the magazine) adjusted too closely, allowing only thin records to pass through; or the other extreme, too wide, allowing two records to go through, (d) the space under the record feed fingers allows two records to be caught instead of a single one.

Obviously, for (a) the record should be placed on a warm flat surface until it is once more flat. For (b) it will be necessary to remove the mechanism from the cabinet (see paragraph headed "Removal of Mechanism from Cabinet") to get at the small spring which provides tension for this finger. After once seeing how this particular part functions, the average service man can effect the repair by running the mechanism to the middle of a cycle, at which point the record feed finger will be at the edge of the magazine. If the spring is broken and enough remains to permit stretching it, too much tension will not be a serious drawback on the finger; otherwise, it is necessary to replace the spring with a similar one. For (c) refer to Figure 1. This shows the record gate in question, situated immediately over the center of the record on the turntable. This has a spring clip at its center which is adjustable either up or down. To adjust for two records coming through at once, lower the gate, and for a single thick record raise it. If records of standard make, and not warped, are used, very little trouble will be experienced from this point after it is once set. In a few cases (d) it has been found that the space under the record feed finger of the magazine lever permits two records to be caught at once. Should this be the case, the part of the lever which goes under the record first can be raised a small amount, thus lowering the height of the finger when it comes forward to select the next record for reproduction. In case the turntable does not revolve after these troubles have been remedied, turn the motor governor by hand until the mechanism reaches the start position; then it will run as usual.

Adjustment of Feeder Rod

The feeder rod is located at the back of the automatic mechanism, and is made accessible by removing the wooden top cover around the record magazine. Also refer to Sketch 9. Its length controls the distance through which the magazine lever moves. This does not often need attention but can be changed in length as follows: Loosen the lock nuts at either end of the rod. To shorten, turn the rod in a clockwise direction, or in case the rod is to be lengthened, turn in a counter-clockwise direction. Then tighten the lock nuts.

Record Ejector Wheel Not Functioning Properly

Sometimes the record ejector wheel will come up but fail to turn and throw the record out. This may be due to neglect in oiling the shaft to which it is attached. As this is only a friction drive, any opposition to its turning, in addition to the ejection of the record, may be detrimental. Other possibilities are that the friction cone is covered with oil, or is worn down. Clean it off and check before going further. If it has worn down, check the spring in the plunger which pushes this wheel up. See that this spring has some life in it by noting whether the ejector wheel rebounds readily when pushed down. If, after this the trouble is not obvious, try placing a very thin washer behind the friction cone to move it forward a little or replace the cone.

Solenoid Trouble

Vibration during record changing cycle. This may be due to the solenoid being improperly centered, or caused by the rubber bumper in the hollow solenoid armature not functioning properly. Loosen the screws which hold the solenoid to the iron base, and push it forward.

action by operating it with the finger. It is absolutely essential that the armature be properly centered. It may even be necessary to place a small piece of paper beneath the bracket near either of the two screws, or one side of the bracket to center it, but be sure it is finally centered. If the solenoid rattles after this, take the armature out and determine whether the rubber has lost its elasticity, due to excessive heat or moisture. If so, replace it and center the solenoid again. Also see "Solenoid Operation" at beginning of Part III. For an open winding in the solenoid there is no alternative but to replace the coil.

Gear and Clutch Mechanism--Cycle Switch

This is the heart of the whole mechanism. Once properly set, the likelihood of its causing trouble is small. If for any reason it becomes necessary to remove the gears, the easiest way to reset the timing is to loosen the solenoid, set the solenoid stop lever (see Sketches 3 and 4) in a position such that it has the projection "r" directly over the slot in the clutch disc. To do this it will be necessary to unfasten the solenoid lever. Raise the master gear sufficiently to clear the intermediate gear and rotate it to a position such that the end of the stop lever is in position near the slot in the master gear. Lower the master gear so that it engages the intermediate gear cogs and then drop the stop lever into position. Set the stop lever snugly in place in the slot of the clutch disc. At this point, the clutch pawl is disengaged from the clutch. If this is not possible, raise the stop lever arm and master gear again and move the latter a single cog or two in the direction which will permit the stop lever to fit properly, then set the stop lever in place and fasten down the master gear by means of the nut under the base. It may be necessary to try this procedure several times before getting perfect operation, but once it has been successfully accomplished, it will be an easy point to tackle afterwards. In case it is found that the two gear segments on the intermediate gear have become loose within each other, this part should be replaced.

The cycle switch is shown in Sketch 6, and has only one moving contact. In the event this remains open circuited, the mechanism will stop just after the rejected record has left the turntable and before the next record drops down from the magazine.

Ejector Wheel Push Rod Assembly

The case may arise where the push rod does not come up high enough to open the reset switch. First, check this rod for bends by turning it around with the finger when it is in the upper position. If it is bent, carefully straighten the push rod and apply a slight amount of oil at the guide holes. The spring tension needs very little adjusting, and if the whole assembly is oiled once every six months, it should give no trouble. Also see latter part of paragraph under heading of "Record Ejector Wheel not Functioning Properly."

Removal of Mechanism From Cabinet

Whenever it is necessary to remove the entire mechanism from the cabinet, the following procedure should be followed:

1. Disconnect the instrument from the power line, and also open the power and Panatone plug connections between the radio chassis and the Automatic mechanism.
2. Four large nuts hold the mechanism in the cabinet, these being located at the four corners of the cast iron base. Remove these and the rubber cushions.
3. Remove the volume control knob on the control panel.
4. Remove the four screws that fasten the lid supports to the top cover of the cabinet, and gently lay the cover back.
5. Remove the wooden top piece which contains the "good" and "used" needle receptacles.

This exposes the entire mechanism and permits its removal from the cabinet.

**MODEL 42
AC-DC**

BRUNSWICK RADIO CORP.

- (b) Remove the rubber-covered record bumper from the top plate and also remove the rivet 9-16-inch above the record bumper hole.
- (c) Remove the rubber-covered adjustable record bumper and switch throw arm from the switch assembly supplied with the kit, so that the base plate may be used as a template.
- (d) Fasten the base plate of the switch to the under-side of the top plate (the switch should be mounted toward the outside edge of the top plate) using the two holes provided by the removal of the rubber-covered record bumper and the rivet (these two holes are referred to as "a" and "b" in the diagram).
- (e) Mark the location of the third hole (referred to as "c" in Figure No. 9) with a punch, remove the switch plate and drill this hole with a 11-64-inch or 3-16-inch drill.
- (f) The switch may now be assembled on the top plate.
- (g) Rotate the record bumper lever through its 180-degree arc several times and a 2 1/2-inch circle will be inscribed on the top plate. Turn the record bumper lever half way between its two end positions and mark the two places on the circle that are in line with holes "a" and "c." Use a 3-32-inch drill and drill at these two points two countersunk holes about 1/4 of the way through the top plate. These two holes serve as stop positions for the adjustable record bumper.
- 4. Connect Switch to Solenoid Circuit:
 - (a) Remove the black and brown leads from the right hand side of the solenoid and connect them to one of the switch leads. Connect the other switch lead to the solenoid terminal thus left vacant. This permits the operator (by turning the record bumper to the right) to disconnect the solenoid from the circuit so that the record-change mechanism will not function while a 12-inch record is being played.
- 5. Replace the Record-Change Mechanism in the Cabinet

- (e) From the dimensions given in Figure No. 9 Page 16, (see detail "b"), mark in pencil the exact shape of the cut to be made on the front record hopper support (note that only the front support is to be so cut). The important dimensions are the base line (1 1/2-inch above the turned in portion of the record hopper leg), the length of the base line (1 1/2-inch long as a minimum and 2-inch long as a maximum), the width of the cut at the front (1/2-inch to 1 inch wide) and the angle at which the top of the cut intersects the base line (the easiest way to draw this is to make the cut 1/2-inch deep at the inside).
- (b) Remove the two record-guide arms from the record hopper cross bar and remove the record hopper cross bar from the record hopper.
- (c) After marking the proposed shape of the cut on the front leg of the record hopper, as directed in paragraph "a" above, saw along the two horizontal lines with a back-saw until the inside vertical line is reached. Then bend the piece of metal to be removed back and forth until it breaks off. File the edges smooth.
- (d) File the protruding edges of the record hopper (indicated by "e" on the drawing) back at a 30-degree angle so that these points will not scratch the 12-inch records when they are placed on and removed from the turntable.
- (e) Fasten the record hopper cross bar and the two adjustable record guides (supplied with the kit) on the record hopper by means of the four machine screws and the two screw blocks (also supplied with the kit).
- 3. Fasten New Record Bumper and Switch Assembly to Top Plate:
 - (a) Remove the eight machine screws that fasten the right hand top plate to the record-change mechanism; the two machine screws that hold the suspension arm collar to the top plate and remove the top plate

- To Play 12-inch Records Manually:**
1. Turn station selector scale past the 1500 kilocycle mark until a click is heard and turn the "off-on" switch on the automatic panatrope control panel to the "on" position.
 2. Turn the two 10-inch record guide arms, located on opposite sides of the record hopper, up, and rotate the rubber-covered record bumper (located at the right of the turntable) toward the right-hand side of the cabinet as far as it will go, so as to allow 12-inch record to fit on turntable.
 3. Move the magnetic pickup toward the right-hand side of the cabinet as far as it will go and gently slide the 12-inch record on the turntable from the right side of the cabinet.
 4. The magnetic pickup can now be freely moved, and by placing it in the first playing groove of the record the 12-inch records can be played.
- To Change Back for 10-inch Record Automatic Operation:**
- Turn the record guide arms, located on the record hopper, down, and rotate the rubber-covered record bumper arm in toward the turntable. The instrument will now play 10-inch records automatically.

**PART IV
COIN OPERATION**

A coin operation kit has been made up, designated as Part No. 1000, for use in conjunction with the Automatic Panatrope mechanism. Full instructions accompany each kit showing the connections and physical locations of each part.

This equipment will permit the Panatrope to reproduce one record for each nickel inserted up to the capacity of the magazine—twenty records. The coin control device is actuated by the feeder rod at the back of the mechanism. If the machine is used exclusively for coin operation, the "Off-On" switch should be disconnected from the circuit behind the panel to prevent the whole magazine contents from playing on a single coin.

Connection to the circuit is extremely simple, as all that need be done is to separate the power plug from the chassis to mechanism and insert the extension plug provided with the apparatus. This layout and the connections are given in the accompanying diagram.

As this equipment is of rugged construction, it will give very little trouble. The most important point to check is to be sure the actuating lever is securely fastened to the protruding arm of the lever box. This lever normally assumes a vertical position and the ratchet wheel moves one notch with each record played. An improper placing of this lever results in either too much strain on it, or else it does not move the ratchet wheel.

Complete installation instructions are supplied with each coin operation kit which may be purchased from any Brunswick Distributor or Branch.

**PART V
12-INCH RECORD OPERATION**

Prior to Serial No. 2500 the Model 42 Automatic Panatrope with Radio was not provided with a means for playing 12-inch records. A demand on the part of music lovers who already had a library of 12-inch records, however, made it advisable to provide manual operation for 12-inch records. A kit of the necessary parts to make this change may be ordered from any Brunswick Distributor or Branch by specifying Part No. 1161. Directions for attaching these parts are as follows:

DIRECTIONS FOR INSTALLING PART NO. 4464 KIT ON MODEL 42 AUTOMATIC PANATROPE WITH RADIO TO PERMIT MANUAL OPERATION OF TWELVE INCH RECORDS

- Parts Required:**
- 1 Twelve-inch Record Kit (Part No. 1164) consisting of:
 - 1 Record guide plate assembly (right).
 - 1 Record guide plate assembly (left).
 - 1 Record guide screw-plates with screws.
 - 1 Switch cam and record creator assembly.
- Tools Required:**
- 1 Back-saw with paper blades for cutting 3-16 inch steel stock
 - 1 Hand drill and the following drills, sizes:
 - 1--11-1617" drill (a 3-16" drill may be used instead if available)
 - 1--3-32" drill.
 - 1--12-inch flat file
 - 1--8-inch Bastard file.
 - The usual assortment of screwdrivers, pliers, soldering iron, etc., available in every service department.
- All of the above tools should be at hand before the installation of this kit is attempted.
- METHOD OF PROCEDURE**
1. Removal of Record-Change Mechanism from cabinet:
 - (a) Slide "oil drip" board out of the back of the cabinet.
 - (b) Disconnect the power cable plugs between radio chassis and record-change mechanism.
 - (c) Remove the four large nuts and associated rubber cushions located at the four corners of the cast iron base of the record-change mechanism.
 - (d) Remove volume control knob on front control panel (fastened to shaft with one set screw).
 - (e) Remove the wood panel containing the needle cups located around record hopper (held in place with three wood and three machine screws).
 - (f) Remove four screws that fasten lid to lid supports and lay lid gently out of the way.
 - (g) Lift record-change mechanism from cabinet by pulling entire assembly straight up.

MODEL 42
AC=DC

BRUNSWICK RADIO CORP.

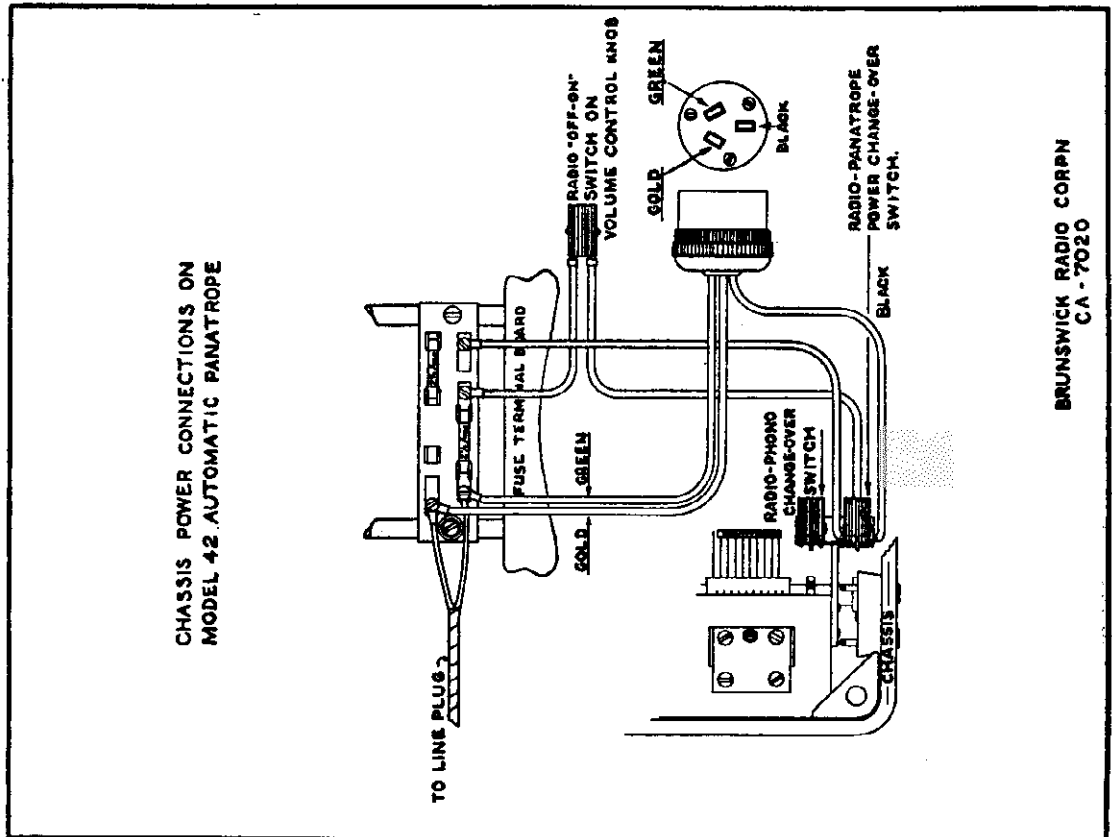


Figure 7

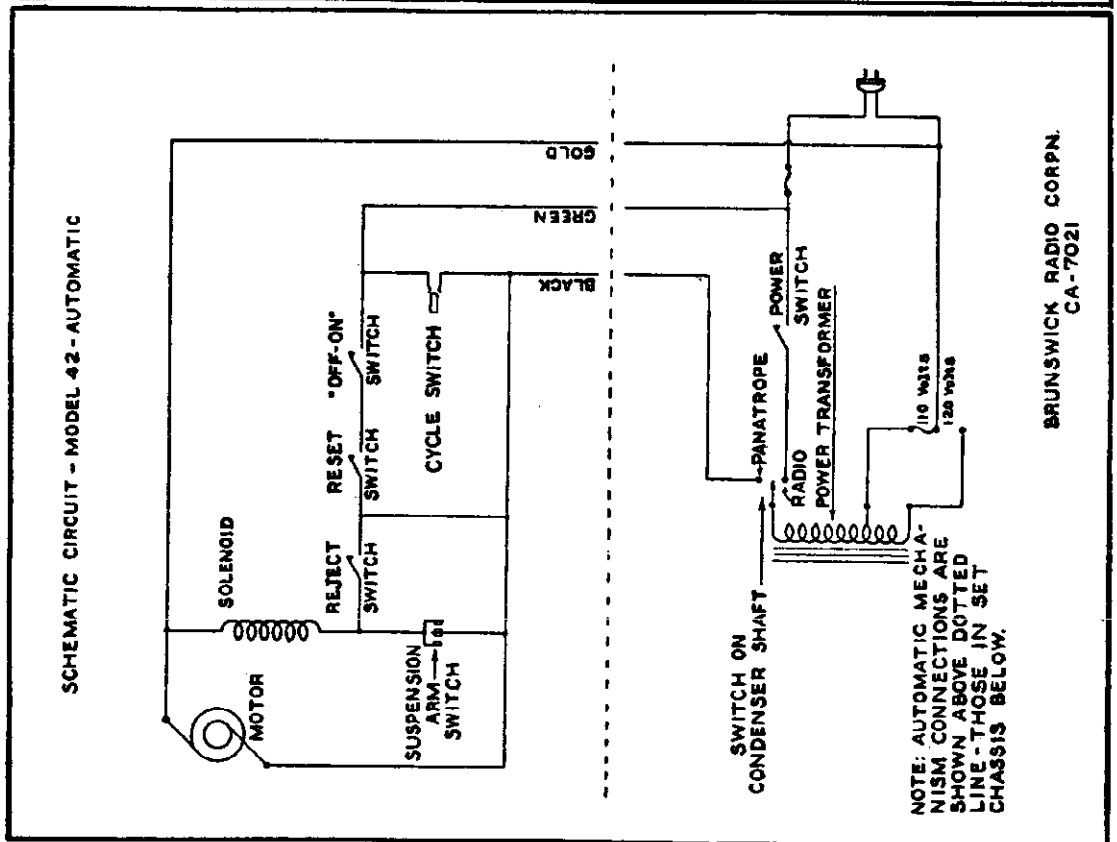


Figure 6

MODEL 42
AC-DC

BRUNSWICK RADIO CORP.

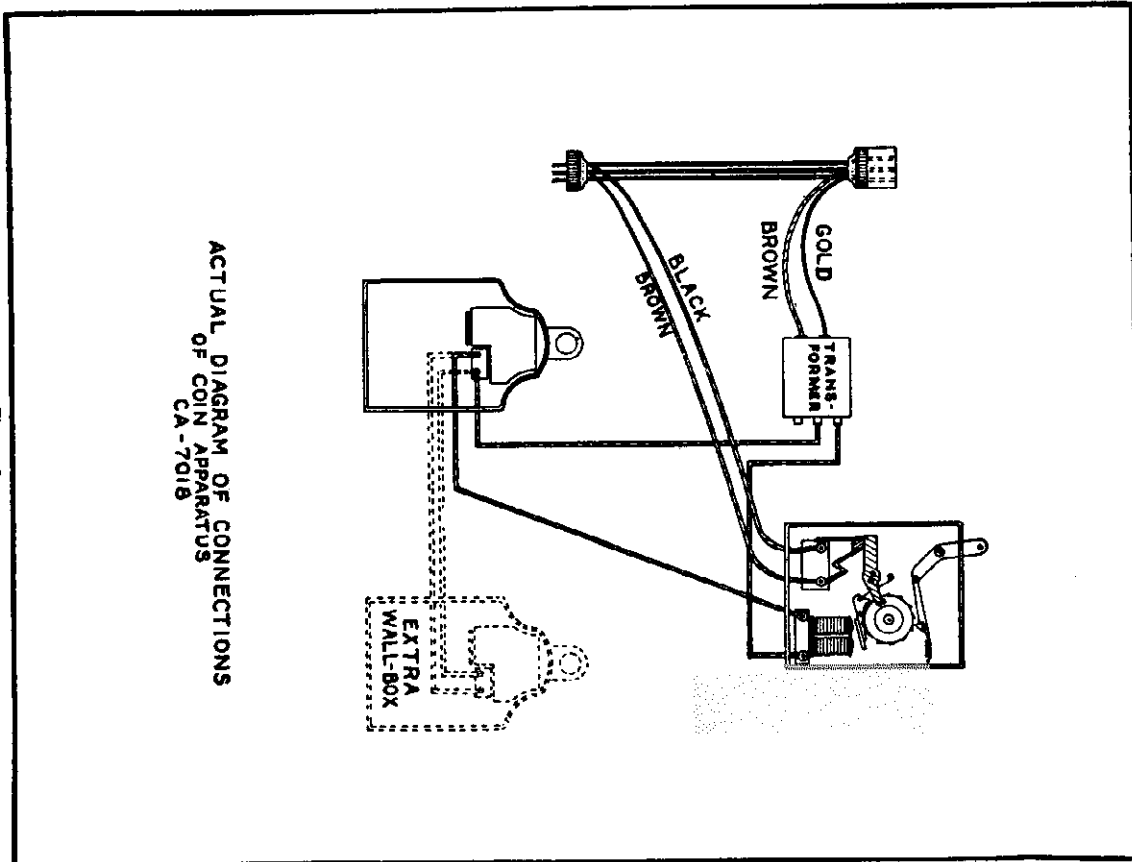


Figure 8

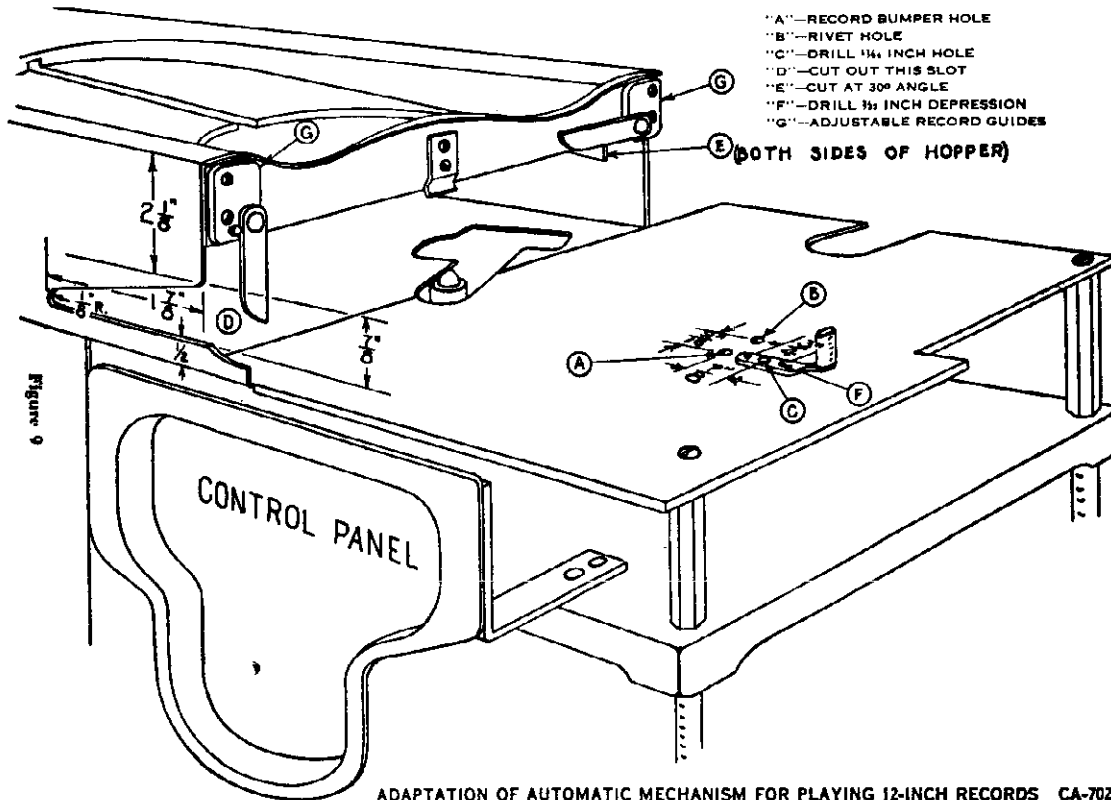


Figure 9

MODEL 3 NCS, 5 NCS

Alignment Data

BRUNSWICK RADIO CORP.

Service Operations on X-1102 and X-1103 Chassis.**A. Adjustment of R. F. Compensating Condenser.**

If it is definitely known that no other defect exists in the set, antenna or ground, and if the receiver is insensitive, distorts or oscillates over any or all portions of the dial then the R. F. compensating condenser should be adjusted as follows:

- (a) Tune in a long wavelength station to maximum volume, or use special test oscillator at 600 K. C.
- (b) Place non-metallic screw driver in slot of compensating condenser (located beneath panel on right side, see Print CA-6039) and turn screw in a clockwise direction until the receiver goes into oscillation. Then turn screw in opposite direction until set goes out of oscillation, and will not whistle, squeal or howl on local stations. This is the correct position of the compensating condenser.

B. Adjustment of Oscillator Trimming Condenser.

If after above adjustment explained in paragraph "A" the set is still insensitive and distorts the signal, proceed to adjust the oscillator trimming condensers in the following manner:

Material needed: Special radio frequency oscillator equipped with milliammeter, non-metallic screw driver and necessary leads.

- (a) Place special oscillator near receiver and secure the transfer of R.F. energy by twisting output lead from oscillator around blue antenna lead of receiver. The receiver ground connection should be connected to ground. In order that the milliammeter on oscillator panel will function as a tube voltmeter it is necessary to place this meter in series with the plate lead of the second detector tube. This is accomplished by removing the red wire from the terminal strip of the Socket Power Unit and connecting the resonance meter in series with this lead and the terminal from which it was removed. So that the current drawn by the power tube shall not flow through the resonance meter remove the red wire from the terminal strip of the Rectox unit and connect a jumper wire from the terminal left vacant to the terminal on the SPU which is now connected to the resonance meter. Turn volume control to minimum on receiver. Turn receiver on, then turn oscillator on and watch needle on resonance meter. If needle goes off scale to the left, reverse meter connections. Adjust oscillator for 1400 kilocycle operation and tune receiver to secure maximum deflection on resonance meter, turning the volume control up just far enough during tuning operation to keep needle at about three-fourths full scale deflection.
- (b) Adjust trimming condenser under 2nd detector tube (condenser No. 1 in Print CA-6039) with insulated screw driver, until maximum deflection is obtained on milliammeter.
- (c) Tune oscillator to 600 kilocycles and adjust trimming condenser No. 2 (to be found under oscillator tube) to maximum deflection on milliammeter.
- (d) Now re-adjust at 1400 kilocycles as in paragraph "B."

Oscillator circuit is now adjusted to give 180 kilocycles beat note over entire tuning range.


C. Part 1—Adjustment and Neutralization of I. F. Transformer.

This operation is only to be attempted when Technician is sure that the lack of sensitivity or oscillation is not due to some other fault or when it is definitely known that one of the transformers is burnt out, shorted or grounded. To test the I. F. transformers, use ohmmeter, resistance bridge or voltmeter, with milliammeter, and Ohms' law, i.e., resistance is equal to the voltage divided by the current in amperes. Primary resistance should be 20 ohms, secondary 100 ohms overall or 50 ohms from grid to center tap

MODEL RPA-5
Used in P-3

BRUNSWICK RADIO CORPORATION


*R.P.A.-5.
(USED IN P-3)*

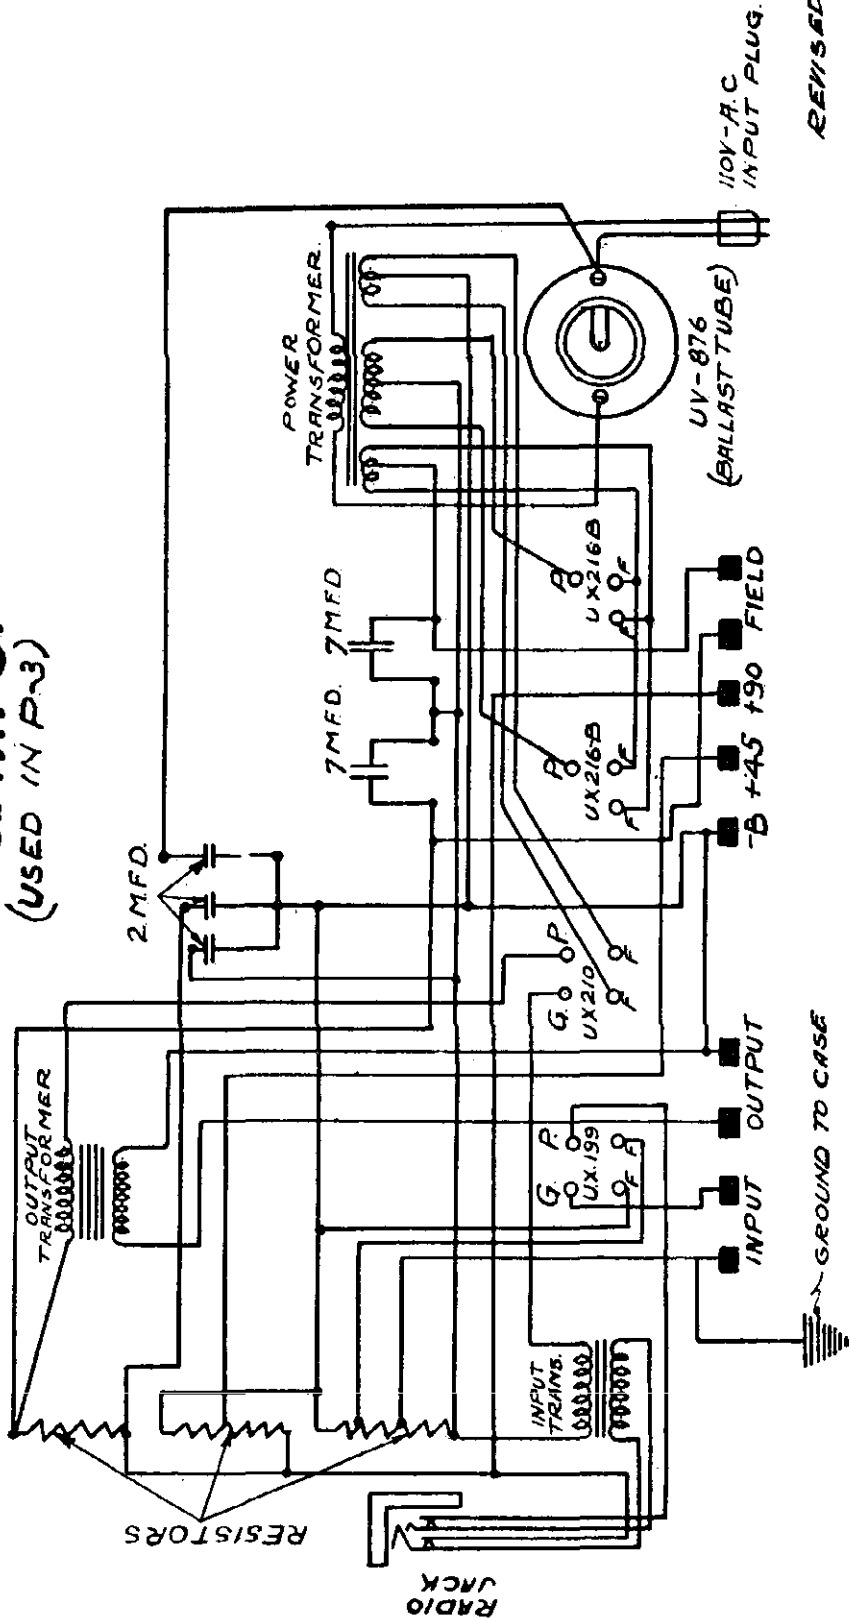

REVISED 3-18-26.

BULOVA WATCH COMPANY

MODEL M-501

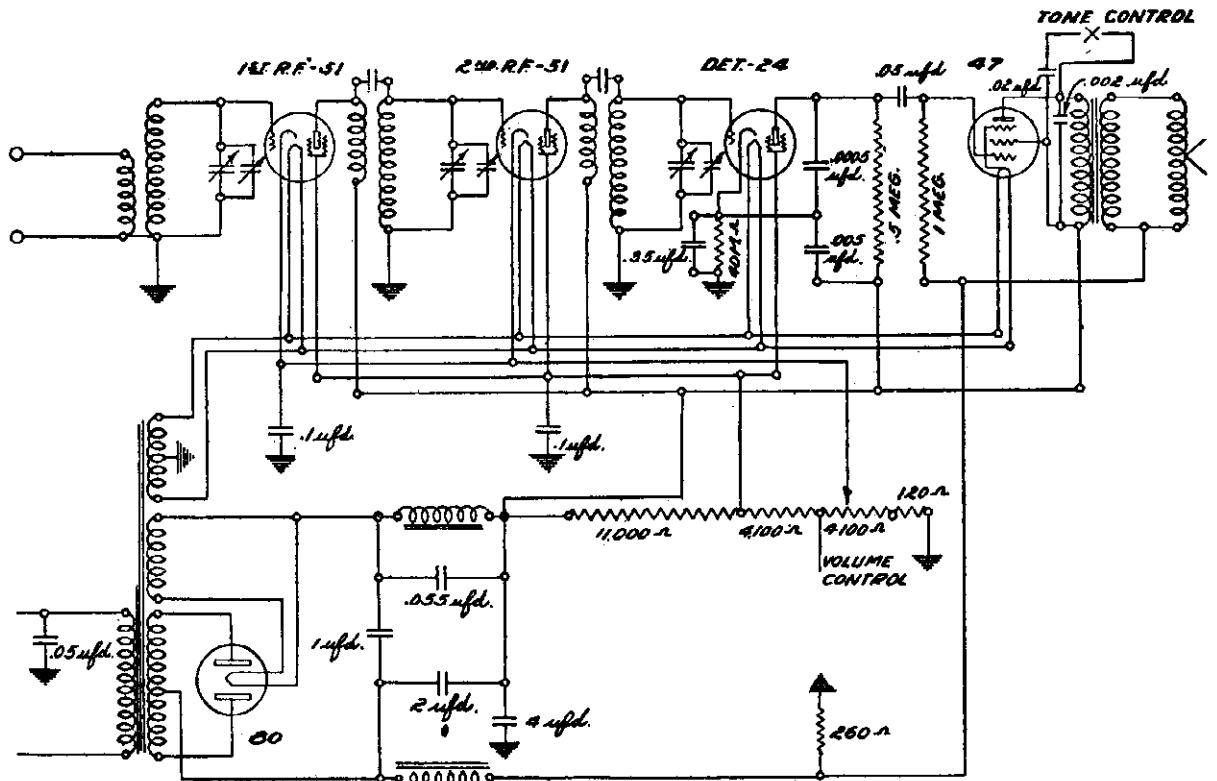

SPKR. FIELD
CONTINUITY TEST TABLES

(Using 10-volt scale 1,000 ohms per volt: meter with 6-volt battery)

Circuit Tested	From	To	Reading	Your Reading
Ant. coil pri.	Ant. post.	Ground	6.	
Ant. coil sec.	Grid 1st tube	Ground	6.	
1st R. F. Plate ckt.	Plate of tube	Brown lead of filter pack	6.	
1st R. F. Screen ckt.	Screen prong	Center lead Voltage divider	6.	
1st R. F. Cathode ckt.	Cath. prong	Center tap Volume Control "ON"	6.	
2nd R. F. Grid ckt.	Grid Clip	Ground	6.	
2nd R. F. Plate ckt.	Plate prong	Brown lead of filter pack	6.	
2nd R. F. Screen ckt.	Screen prong	Center tap Voltage divider	6.	
2nd R. F. Cathode ckt.	Cathode prong	Center tap Volume Control "ON"	6.	
Det. Grid ckt.	Grid Clip	Ground	6.	
Det. Plate ckt.	Plate prong	Brown lead of filter pack	6.	
Det. Screen ckt.	Screen prong	Center Voltage divider	6.	
Det. Cathode ckt.	Cathode prong	Ground	1.4	
P. Z. cont. grid	Grid prong	Sec output trans. black lead. (slight deflection)		
P. Z. space chg. grid ckt.	S. C. Grid Prong	Brown lead of filter pack	6.	
P. Z. Plate ckt.	Plate prong	Brown lead of filter pack	5.7	
Output Sec.	One side	Other side	5.9	
Pri Power Trans.	Across A. C. Plug	Switch on	5.9	
Hi volts Sec.	Across 280 plate prongs		5.6	
Speaker field	Red wire	Green Wire	5.4	
Speaker voice coil	Green wire	Black	6.	
Filter Choke	Across red leads		5.6	
Voltage divider	Ground	Brown lead of filter pack	2.2	

RESISTANCE TABLE



(Using 10-volt range meter 1,000 ohms per volt and 6-volt battery)

Item	Color Code	From	To	Reading	Your Resistance Reading in Ohms
Det. Cath. Resistor	Yel., Blk., Or.	Det. Cath.	Gnd.	1.3	40,000
Pent. Grid Resistor	Br. Blk., Green	Pent Grid	Spkr. Field	Slight Deflection	1,000,000
Wire-Wound	Black	Voice Coil Black	Gnd.	5.9	260
Voltage Divider, Short End	Black	Voltage Cont. Green Lead	S. G. Ckt.	4.2	4,100
Voltage Divider, Long End	Black	Plate	S. G. Ckt.	3.	11,000
Det. Plate Resistor	Gr., Blk., Yellow	Det. Plate	Pent. Space Chg. Grid	.1	500,000
Vol. Control "on"		Gnd.	R. F. Cathode	4.2	4,100

Color code: read body color first, tip second and dot last.

MODEL M-501

BULOVA WATCH COMPANY

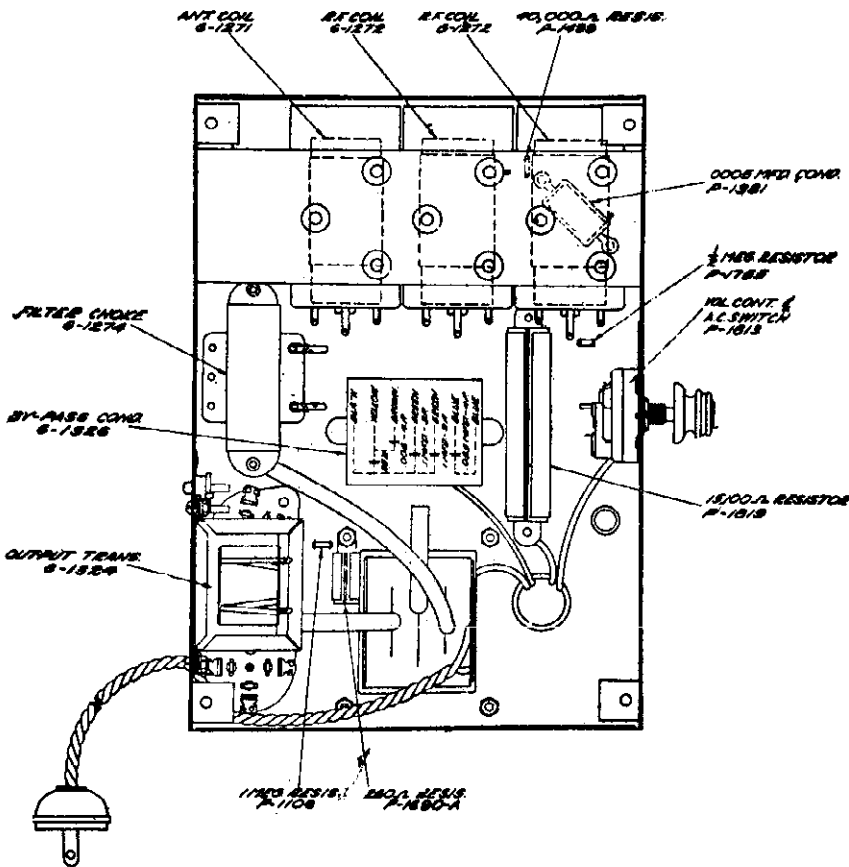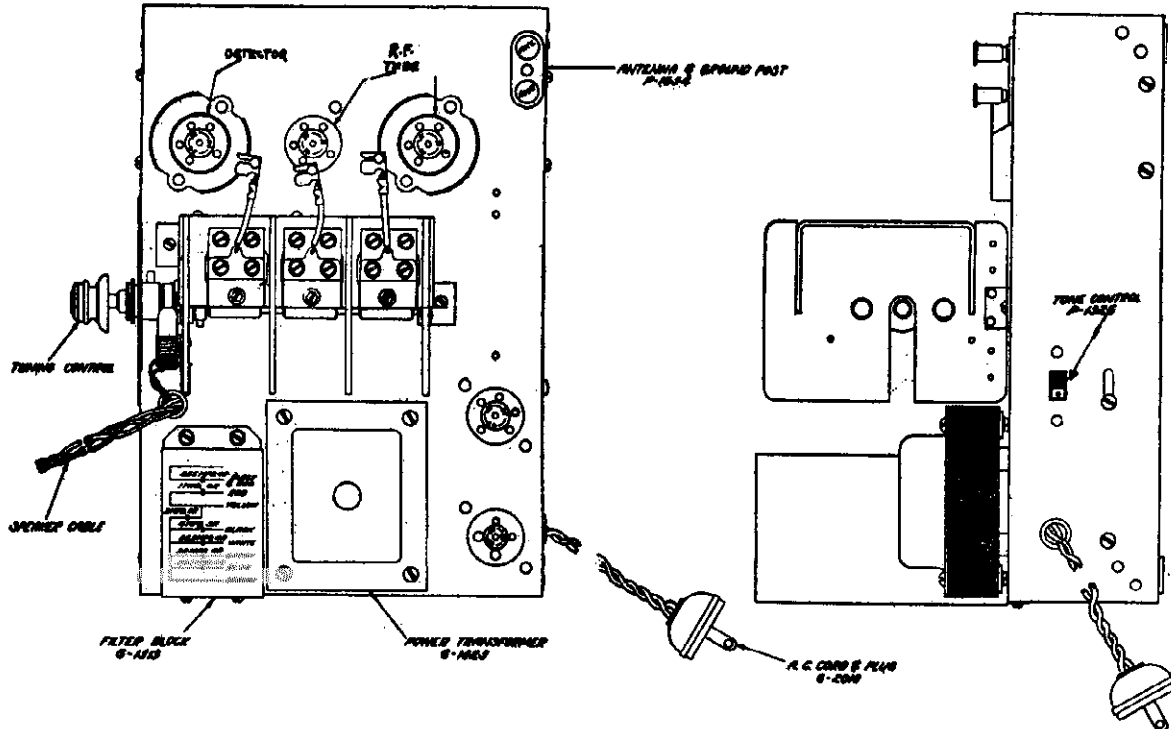


VOLTAGE ANALYSIS
 READINGS TAKEN WITH WESTON MODEL 565 ANALYZER

No.	Stage	Type Tube	PL. Volts	Plate Volts	Control Grid Volts	Cath. Volts	S. G. Volts	I _a Normal
1	1st R. F.	C. L. 51	2.1	225	2.1	2	75	5
2	2nd R. F.	C. L. 51	2.1	230	2.2	2	75	4.5
3	Det.	C. L. 24	2.1	160*	7	7.5	75	02
4	Output	C. L. 47	2.1	215	5†	0	225	26.5
5	Rect.	C. L. 80	4.8	280				100


*Reading dependent upon resistance of meter.
 †Reading taken for one anode only; 60 milliamperes would be about correct.
 Volume control position full. Line voltage 115-60 cycle.

BULOVA WATCH COMPANY

MODEL M-701
MODEL G-781

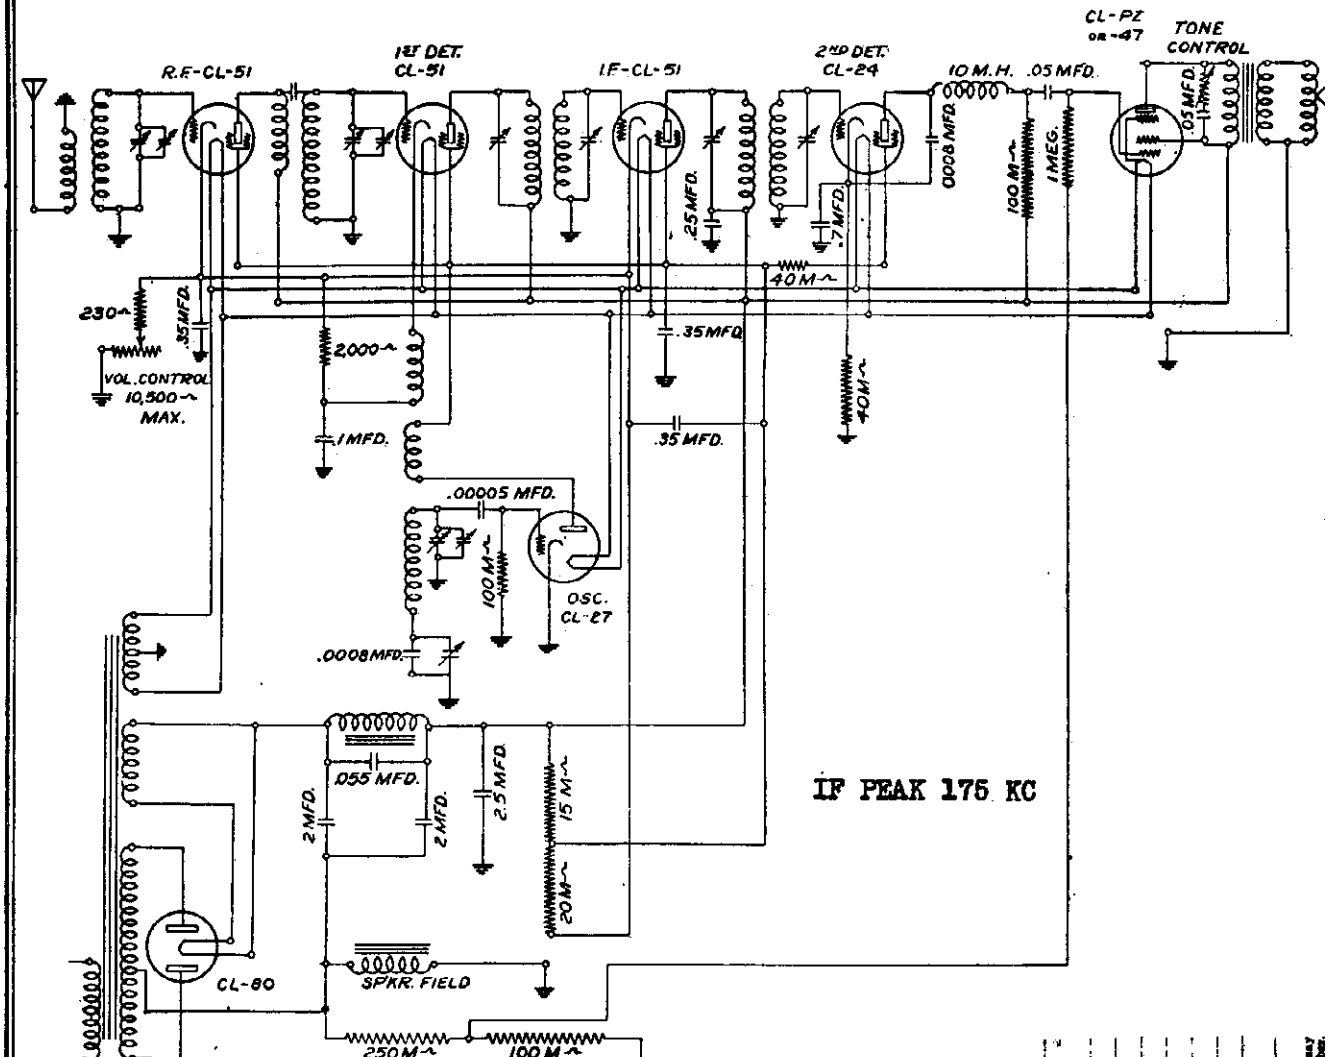

IF PEAK 175 KC

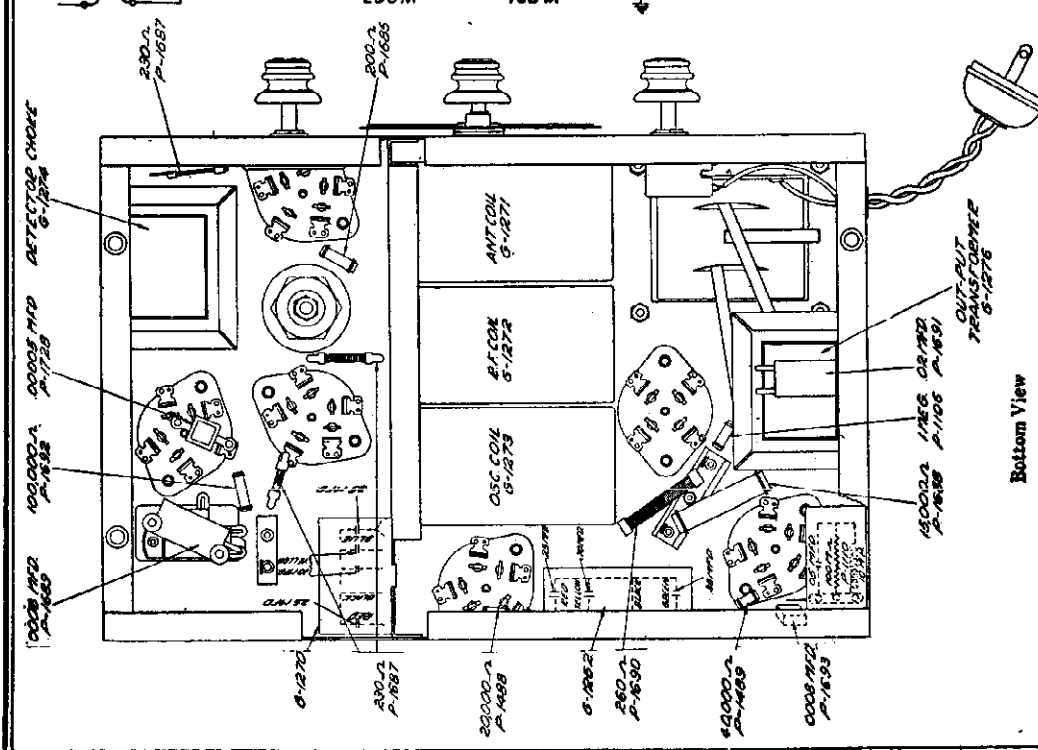

Bottom View

No.	Stage	Type Tube	A Value	B Value	Cont. Grid Value	Cath. Value	Ip Norm.	SG Value
1	r.f.	CL-51*	2.2	223	3	3	5	66
2	1st Det.	CL-51	2.2	223	7	7	2.3	73
3	Osc.	CL-27	2.2	0	0	0	4	0
4	IF	CL-51	2.2	223	2.5	3	5	77
5	2nd det.	CL-24	2.2	162	6.2	7.2	5	73
6	Output	CL-P2	2.2	228	15	0	27	223
7	Rect.	CL-80	4.8	300	0	0	50	0

Line Voltage 115
Volume control position full

Note: Since resistance tolerances in the sets are plus or minus 10%, and tube and capacitor values may vary, your readings may differ slightly from those shown on this chart. For further details, see the final issue number.

MODEL M-701
 MODEL G-781
 Automatic Clock
 Control


BULOVA WATCH COMPANY

(Using 10 volt range meter 1000 ohms per volt and 6 volt battery)

Item Tested	Description Color—Code	From	To	Resistance	Tap Reading	Ohms Resistance
r. f. grid bias resist.	Black Strap type Wire wound	r. f. cath. prong	Vol. cont. ungrounded terminal	5.9		230
Volume control	Variable at max. resistance	Test between its two terminals (connected)		3.2		Max. 10,500
1st det. grid bias resist.	Red Black tip	r. f. cath. prong	Other end of resist.	5.1		2,000
1st det. screen grid volta resist.	Black Strap type Wire wound	1st det. screen grid prong	Other end of resist.	5.9		230
1st det. plate resist.	Black Strap type Wire wound	Solder lug on Electrolytic cond.	B plus term. of 1st L. f. trans.	5.9		230
Oscillator grid resist.	Brown Yellow spot Black tip	Oscillator grid prong	Ground	0.6		43,000
1. f. and r. f. cathode-bias resist.	Red Orange spot Black tip	1. f. cath. prong	1. f. screen grid prong	2.3		20,000
1. f. and det. screen grid volta resist.	Brown Orange spot Green tip	1. f. screen grid prong	Solder lug on electrolytic cond.	2.7		15,000
2nd det. grid-bias resist.	Yellow Orange spot Black tip	2nd det. cath. prong	Ground	1.3		40,000
2nd det. plate resist.	Inside 3rd term. det. r. f. filter assem.	Test between solder lugs on det. r. f. filter assem. with red wires attached		0.6		100,000 in series with 10m.h. choke
Pentode grid-resist.	Brown Green spot Black tip	Pentode Grid prong	Dummy solder lug off output trans. sec.	0.5		1 Meg.
Pentode grid-bias	Wire wound Strap type	Dummy solder lug off-output trans. sec.	Ground	5.9		230

Resistance Table

AUTOMATIC CLOCK CONTROL WIRING DIAGRAM

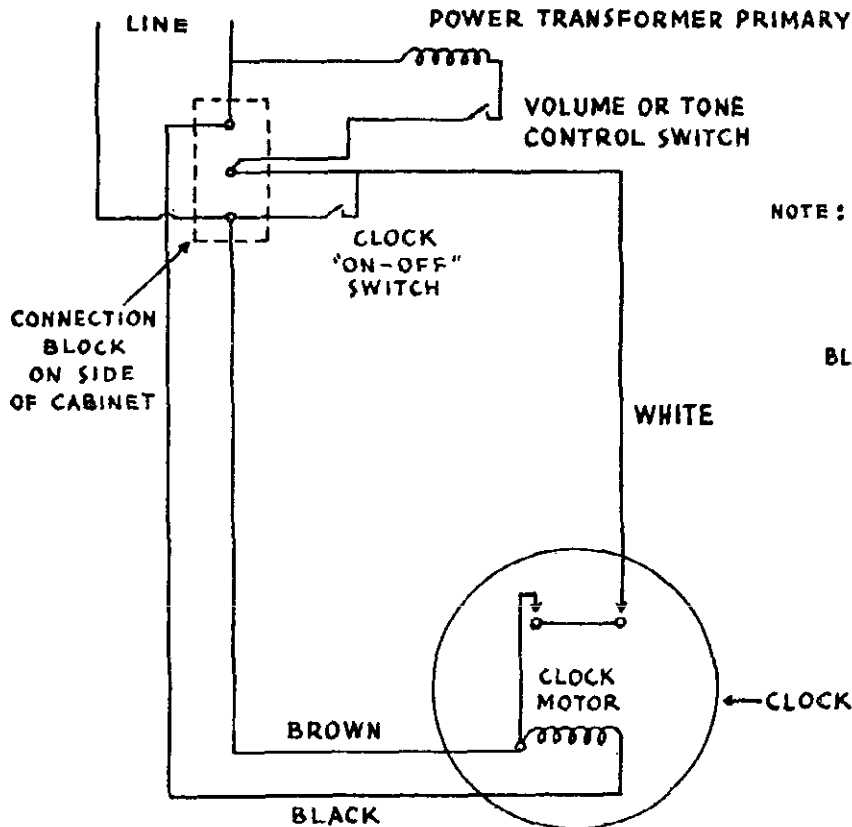

NOTE: ON SOME OF THE CLOCKS RED BLUE AND BLACK WIRES ARE USED INSTEAD OF BLACK WHITE AND BROWN

MODEL C-751
Voltage and
Service Notes

BULOVA WATCH COMPANY

BULOVA CLOCK RADIO MODEL C-751 .

VOLTAGE TABLE

Never check voltages until all tubes are fully warmed up to proper operating condition. The voltage table given below is taken at 115 volts line with a Model 547 Weston set checker. It must be remembered that the voltage readings taken vary directly as the line voltage and also with the accuracy of the meters used. A variation of 10% plus or minus is permissible.

115 V. Line Volume Control Full On

<u>TUBE VOLTAGES</u>		Filament Volts	B Volts	C Volts	NORMAL PLATE M.A.	Screen Volts
Type of Tube	Position of Tube					
227	Oscillator	2.4	48.5		4.75	
235	Radio Frequency	2.4	240	2.15	2.75	27
224	1st Detector	2.4	230	4.35	.5	65
235	Intermediate	2.4	237	2.15	2.75	72
224	2nd Detector	2.4	100*	2.1*	2.5	35*
247	Pentode	2.4	250	16.5**	32.5	250
280	Rectifier	4.95			27 ea. plate	

*These readings are only comparative and are not true voltages applied. The volt meter, when the readings are taken at these points, is in series with a very high resistance.

** To read the 247 bias, read between H.K. speaker socket and ground.

INTERMEDIATE TRANSFORMERS:

The intermediate transformers are of the band pass type and of exceptionally high uniform gain. They are tuned to 175 kilocycles. The intermediate frequency trimmers are mounted on an isolantite base, preventing the transformer from becoming detuned due to the trimmer condensers absorbing moisture or warping. For this reason it should rarely, if ever, be necessary to re-track the intermediate frequency trimmers. In the event that it should be advisable to re-align the intermediate frequency coils, it is absolutely essential that a 175 kilocycle oscillator and an output measuring device be used.

ALIGNMENT OF RECEIVER:

Because of the construction and thorough impregnation of the intermediate coils, the intermediate stages should rarely need re-tracking. Only when an intermediate coil has become defective due either to an open or burned out winding, should it be necessary to re-adjust the intermediate trimmers. Should this occur, it is necessary that an oscillator be used and the intermediate trimmers be adjusted at 175 kilocycles. To align the intermediate stages, connect the high side of the oscillator output to the grid circuit of the first detector, which is done by disconnecting the grid cap of the 224 first detector and connecting the high side of the test oscillator to the control grid of this tube. The ground side of the test oscillator should be connected to the ground post on the chassis. Set the oscillator at 175 kilocycles and adjust the output of the oscillator so that a convenient reading is obtained on the output meter. Be sure that the output from the oscillator is not so large that it will overload the second detector. If during the alignment the meter goes off scale, reduce the output of the test oscillator or adjust the receiver volume control.

The trimmers of the intermediate coils are accessible through the small holes in the top of the intermediate shield can. There are two trimmers to each intermediate coil. Align the grid trimmer of the first intermediate coil. After a maximum reading is obtained by adjusting the grid trimmer on the first intermediate, adjust the primary for maximum reading and then re-check the grid side to make certain the alignment of the secondary has not been changed by the adjustment of the primary. The same procedure is followed in aligning the second intermediate coils. After both intermediate coils are properly aligned the adjustment of the intermediate stage is complete and they should not be further disturbed.

Replace the grid cap on the first detector and connect the oscillator output leads to the antenna and ground posts of the receiver and set the oscillator at 1435 kilocycles. Then tune the receiver to 1435 kilocycles on the dial. It is important that the receiver be tuned to this point. If the receiver is out of the cabinet it will be necessary to use some temporary indicator so that the position 1435 kilocycles on the dial may be accurately located. (This indicator should be set so that when the variable condensers are at the maximum capacity stop the indicator points to the last line on the dial at the low frequency end.) Then track the variable condensers by adjusting the trimmer condensers in the following order: Oscillator, antenna and radio frequency - (reading from the front of the receiver toward the back, the variable condenser sections are: Oscillator, antenna and radio frequency). After the variable condensers have been properly tracked at 1435 kilocycles, adjust the oscillator to 1295 kilocycles. Tune the receiver to this frequency. Check alignment of the condensers at this point by bending the end plate of the rotors in and out, noting the change in reading on the output meter. If when the plates are bent in the reading is increased, it is an indication that that particular section requires more capacity and the end plate should be permanently bent in at this point; or, if when the end plate is bent away, the reading is increased, the end plate should be bent away permanently, as it is an indication that that particular section requires less capacity at that particular point. The variable condensers should be checked in this manner at 1295, 880, 650 and 550 kilocycles. These points have been chosen so as to take advantage of the slots in the end plates of the variable condensers. This procedure of bending plates should rarely be necessary on the oscillator section, as the plates of the oscillator section are especially designed to properly track over the broadcast spectrum, providing the antenna and radio frequency stages are correctly aligned.

MODEL 10,12-C
Service Notes

CAPEHART CORPORATION

RECORD CHANGER

Model 10-12-C

ASSEMBLY OF MOTOR TO BASE PLATE

The motor is attached to the base plate by three bolts, and mounted on rubber cushions. The brace that is over the turntable spindle and bolted to the base plate serves as an excellent gauge for aligning the motor in the center.

When removing the two screws that hold the turntable locating plate over the turntable spindle, preparatory to operating the instrument, be sure that the locating plate lines up with the holes that the screws are just removed from.

If the motor has become shifted in transit there will be a tendency for the holes in the locating plate and base plate to not perfectly line up.

In this case it is necessary to slightly loosen the three bolts holding the motor to the base plate and shift the motor to such position that the holes in the brace and the base plate align perfectly, and while the brace is still in place, tighten the suspension bolts to hold the motor in that particular position. The brace must then be removed before the turntable is mounted on the shaft.

In placing the turntable on the shaft, be certain that the rubber driving washer is in proper place with clips over the spindle pin.

After the turntable is put on the shaft, force it down by hand to be sure that the rubber washer and turntable are making perfect contact.

To level the turntable, place a straight edge across the turntable and adjust the three suspension bolts holding the motor to the base plate until the same distance is obtained from the bottom edge of the straight edge to the base plate near the three points where the suspension bolts are located.

This measurement should be approximately 11/16". This adjustment must be made so that there is no free movement of the motor by either of the suspension bolts being too loose.

TOPE ARM ADJUSTMENT FOR TEN INCH AND TWELVE INCH RECORDS

Pickup change lever No. 5569 is for changing the instrument from 10 inch to 12 inch record operation and vice versa.

The lever changes the position of the pickup return lever in such a manner that the needle is let down for the 10 inch or the 12 inch record, as desired.

To adjust for playing 10 inch records, loosen the forward lever stop No. 5525 and hold the lever in such a position that the needle will come down on a 10 inch record exactly 4-11/16" from the edge of the center pin. (A scale should be placed on the record with the end of the scale against the centering pin in such a position that the needle point will come down on the scale at the 4-11/16" inch position.)

When the proper location of lever No. 5569 is ascertained, then the front stop may be set snug against this lever and the screw tightened, which will allow the lever to always be thrown over to that exact position when desiring to play 10 inch records.

To adjust for playing 12 inch records, loosen the back lever stop No. 5527 and hold the lever in such position that the needle will come down exactly 5-11/16" from the edge of the centering pin. (A scale should be placed on the record with the end of the scale against the centering pin in such position that the needle point will come down on the scale at the 5-11/16" position.)

In the event you are unable to properly adjust for either 10 inch or 12 inch records by the above method, the adjustment as nearly correct as possible then refer to instructions on Page 6 and check Tone Arm Bracket Lever adjustment making certain the adjustment is correct.

Then loosen the lock nut holding the adjustment screw on the tone arm return lever No. CA5687 and turn the adjusting screw either in or out, as the occasion requires, to bring the needle to the proper location for the size record you are unable to adjust for by the lever stop method. It will then be necessary to readjust the lever stop which was originally set in position for the other size record.

The lever stop screws must be set tight so the lever stops will not be jarred out of position as the lever is thrown from one position to the other.

ADJUSTMENT OF PICKUP WEIGHT

Make this adjustment while music is being played, and only one record is on the turntable. With a delicate pair of scales, having a range of 0 to 12 ounces, catch the needle screw and lift the pickup from the record until the audio quality breaks, at which time a reading of 5/4 to 6 ounces should be shown on the scales. Raising or lowering the spring support No. 5575 which is affixed to the tone arm lifting rod No. 5553 adjusts the weight of the pickup.

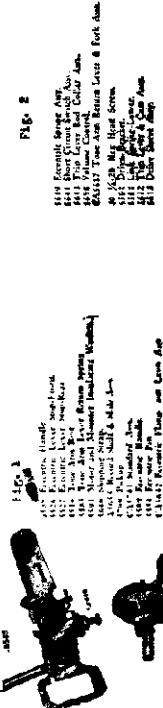
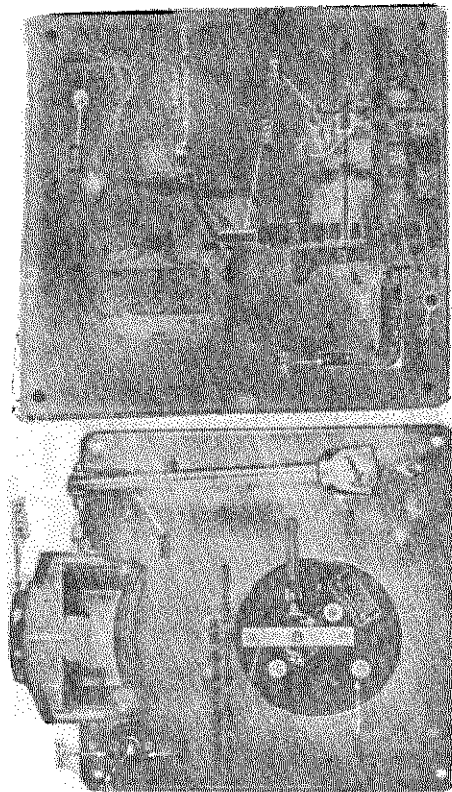


Fig. 1
100 Handle
101 Spring Lever Stop
102 Tone Arm Lever Stop
103 Tone Arm Lever Stop
104 Spring Lever Stop
105 Spring Lever Stop
106 Spring Lever Stop
107 Spring Lever Stop
108 Spring Lever Stop
109 Spring Lever Stop
110 Spring Lever Stop
111 Spring Lever Stop
112 Spring Lever Stop
113 Spring Lever Stop
114 Spring Lever Stop
115 Spring Lever Stop
116 Spring Lever Stop
117 Spring Lever Stop
118 Spring Lever Stop
119 Spring Lever Stop
120 Spring Lever Stop

Fig. 2
100 Spring Lever Stop
101 Spring Lever Stop
102 Spring Lever Stop
103 Spring Lever Stop
104 Spring Lever Stop
105 Spring Lever Stop
106 Spring Lever Stop
107 Spring Lever Stop
108 Spring Lever Stop
109 Spring Lever Stop
110 Spring Lever Stop
111 Spring Lever Stop
112 Spring Lever Stop
113 Spring Lever Stop
114 Spring Lever Stop
115 Spring Lever Stop
116 Spring Lever Stop
117 Spring Lever Stop
118 Spring Lever Stop
119 Spring Lever Stop
120 Spring Lever Stop

GOVERNOR ADJUSTMENT

If the turntable speed cannot be regulated to 78 R. P. M. by the speed control lever located under the turntable, then loosen the set screw holding the governor to the governor shaft and move the governor either in or out, as the case may be, to increase or decrease the speed of the motor. This adjustment must be made when the speed control lever under the turntable is in the center position.

To increase the speed of the turntable motor, move the governor out, and to decrease the speed of the turntable, move the governor in.

Do not, under any conditions, change the adjustment of the end thrust bearing screws. An occasional drop of oil on the governor brake will assist in maintaining a constant speed.

**MODEL 10,12-C
Service Notes**

CAPEHART CORPORATION

ASSEMBLY AND ADJUSTMENT OF OSCILLATING AND SPIRAL TRIP LEVER AND PICKUP SILENCER

To time the automatic switch so the instrument will automatically trip and change records, proceed as follows:

- First: Thoroughly acquaint yourself with the different part numbers.
- Second: Study the photographs carefully and note the relative location of the various parts.
- Third: Complete each of the following operations before going on to the next operation.

Operation No. 1.

Turn the master cam No. 5604 until the large timing mark is exactly above the timing mark on the tone arm lifting lever No. 5761.

Operation No. 2.

Hold the switch lever and cam assembly No. 5612 against the driven clutch No. 5616, so the radius of the cam will center against the clutch. (Be sure that cam No. 5612 is directly under the driven clutch No. 5616.)

Operation No. 3.

Set the pickup silencer switch No. 5643 against the casting bearing so the shaft of cam No. 5612 cannot be moved further toward the automatic switch.

Operation No. 4.

Hold the tail of cam No. 5612 against the lug on the inside of the master cam No. 5604 and adjust the trip lever No. 5611 until it is 1/16" beyond the catch in the oscillating trip lever No. 5667. This adjustment is made while the tail of the cam No. 5612 is held against the outside of the lug inside the master cam No. 5604.)

Operation No. 5.

Care must be exercised to have the end play of the oscillating trip shaft just free. This is taken care of in adjusting the pickup silencer switch No. 5643, so a good contact is made on the pickup short circuiting switch WHEN THE NEEDLE IS ON THE RECORD AND THE AUTOMATIC SWITCH HAS BEEN TRIPPED.

After the pickup silencer switch No. 5643 has been set according to the above instructions, the resetting of the automatic trip should allow the contacts on the pickup silencing switch to open. If the above operations are followed out in detail, and adjustments properly made, the clutch will automatically disengage when the pin on the clutch No. 5616 has travelled approximately one-half of the distance of cam No. 5612.

At the time the pin has travelled one-half of the distance of the clutch release cam, the small timing mark on cam No. 5604 should be exactly above the timing mark on the tone arm lifting lever No. 5761.

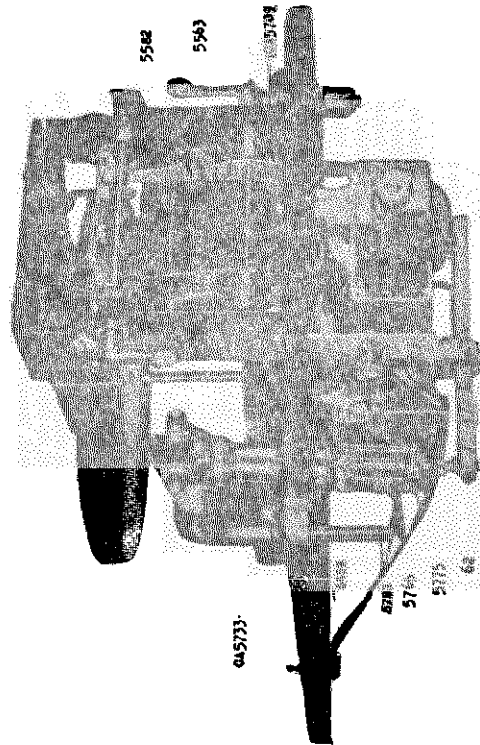


Fig. 3

- 62 1 1/2-24 Hex Head Screw.
- 5129 Spiral Trip Cam.
- 5761 Tone Arm Lift Rod.
- 5524 Eccentric Pin.
- 5563 Slide Finger Eccentric.
- 5582 Link Spring-Upper.
- 5583 Trip Lever Spring.
- 5611 Trip Lever & Hub Assy.
- 5612 Oscillating Trip Lever Assy.
- 5613 Tone Arm Bracket Lever & Pin Assy.
- 5617 Oscillating Trip Lever Assy.
- CA1709 Slide Finger & Shaft Assy.
- CA1713 Relect Stud Assy.
- CA1742 Switch Panel Assy.
- 5785 Tone Arm Weight Adj. Spring.
- 5771 Tone Arm Spring Hook.

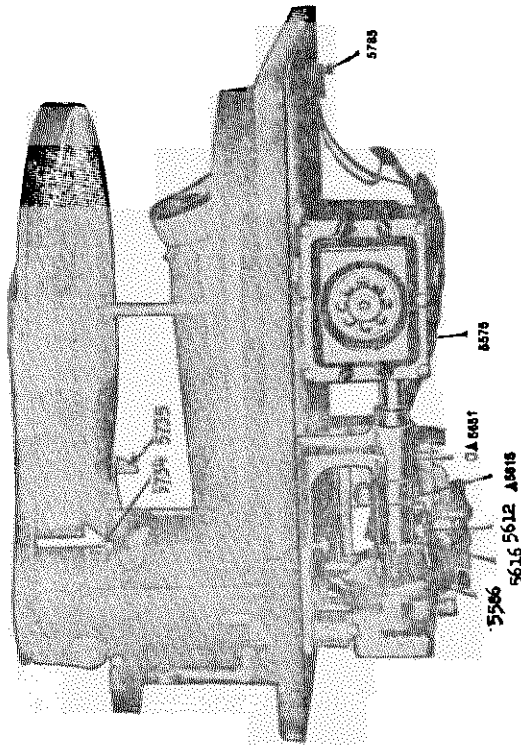


Fig. 4

- 5612 Trip Lever & Cam Assy.
- A5615 Drive Shaft Assy.
- 5615 Drive Shaft Assy.
- 5616 Driven Ratchet & Pin Assy.
- CA5681 Main Drive Assy.
- 5715 Switch Double Circuit H & H.
- 5516 Clutch Spring.
- 5575 Motor, five voltage and cycle.
- 5576 Record Lever Assy.
- 5714 Record Lock Lever & Hook Assy-Left.
- 5715 Record Lock Lever & Hook Assy-Right.

OVER

**MODEL 10,12-G
Service Notes**

CAPEHART CORPORATION

ASSEMBLY AND ADJUSTMENT OF RECORD MAGAZINE

The record magazine pin No. 5565 must be tightened in the elongated hole in the magazine top plate No. A6736 in such a manner that the offset at the bottom of the pin extends directly away from the record support shelf.

The magazine pin must also be adjusted to such a position that exactly 4/8" clearance is obtained between the back center of the offset at the bottom of the magazine pin, and the extreme right and left corners of the record support shelf. This adjustment is to be made when the record magazine is in 10 inch playing position.

TO ADJUST THE RECORD SUPPORT HOOKS

First, throw lever No. 5509 to the 10 inch position, and place a 10 inch record on the magazine pin, bringing the magazine down to playing position.

The record support hooks are adjusted by bending to proper position.

The record support hooks must be kept 1/16" from the edge of the record support shelf and must be adjusted far enough back to just clear the edge of a 10 inch record, as the record is released from the record support shelf.

The record support hooks must also be low enough to clear the bottom side of the record, as it is supported on the magazine shelf.

The record support hooks should operate freely in either 10 inch or 12 inch position.

ASSEMBLY OF RECORD MAGAZINE AND STANDARD TO BASE PLATE: AND ALIGNMENT OF TURNABLE SHAFT

Mount the magazine and standard on the base plate with four bolts, tightening the bolts only tight enough to hold the complete magazine assembly in position. The magazine assembly must be so adjusted by shifting the standard on the base plate to bring the offset at the bottom end of the magazine pin exactly over the center of the point of the turntable spindle.

This adjustment cannot be made until the motor has been aligned according to the instructions on page one.

Enough clearance is allowed in the four bolt holes to take care of this adjustment.

After the adjustment is made perfect, the bolts must be securely tightened with lock washers.

ASSEMBLY AND ADJUSTMENT OF RECORD SLIDE SHELF AND FINGER

First, set the master cam No. 5504 so the lug on the cam at the side of the large timing mark comes directly under the end of the record release finger No. CA 5709.

The eccentric stud No. 5563 affixed to the main record release finger controls the adjustment of record release finger. Turn the eccentric stud No. 5568 until the record slide shelf No. 5521 is 1/64" past the front edge of record support shelf No. 5520 at which time it should be possible to obtain a slight amount of clearance between the end of the record release finger and the point of the lug on the master cam without causing the safety spring, (which is a part of this lever assembly) to give.

The two points on the record slide shelf must come to the edge of the radius on the record support shelf at the same time.

RECORD WEIGHT ADJUSTMENT

The record weight No. 5759 must be so adjusted at the bearing pivot that the lower edge of the record weight does not touch the record slide shelf while in the 10 inch position, but comes low enough to hold one record in proper position for the slide plate to unload it on the turntable.

ASSEMBLY OF DRIVE BRACKET ASSEMBLY TO BASE PLATE AND MOTOR

The drive bracket No. 5551 must be bolted to the base plate in such a manner as to align the drive shaft with motor shaft so the coupling is free. A flexible coupling No. 5613 takes care of any minor lack of alignment between the drive shaft and the motor shaft, because of the motor hanging on rubber cushions.

ADJUSTMENT OF THE SPIRAL TRIP CAM

To adjust the spiral trip cam, turn the master cam No. 5504 until the small timing mark is exactly above the timing mark on the tone arm lift lever No. 5761 at which time the automatic trip can be manually reset or tripped at will.

Lay a steel scale, graduated in 64ths, flat on the record under the pickup, with the end of the scale against the turntable spindle in such position that the needle rests on the scale. By sliding the needle toward the center of the record, the spiral cam should cause the automatic trip to operate when the point of the needle is 1-49 64" from the edge of the turntable spindle.

If the automatic trip operates before the needle has come to 1-49 64" position, then the spiral cam is set too far ahead and must be moved very slightly back, while, if the needle comes closer to the turntable spindle than 1-49 64", then the spiral cam is set too far back and must be set ahead to the proper position.

Failure to properly adjust the spiral trip cam so the automatic trip operates when the needle is 1-49 64" from the edge of the turntable spindle will cause the instrument to change records before the music is finished, or to not change records automatically.

To adjust the spiral trip cam No. 5529, slightly loosen the two screws holding the cam to automatic switch lever No. 5637 and pry the cam forward or back as required to obtain the proper setting.

To test the position of the spiral cam, it is necessary to carry the pickup back to the edge of the record each time to manually reset the automatic trip.

ASSEMBLY OF TRIP BRACKET TO BASE PLATE

The automatic trip bracket No. CA 5742 is mounted to the base plate by two nickel plated bolts and lock washers.

The end that the bakelite panel is mounted on is to be mounted toward the front of the base plate in such a manner that the bearing aligns perfectly with the bearing in the drive bracket. The final alignment can be made when the trip lever shaft No. 5612 is being installed and adjusted.

TO NE ARM BRACKET LEVER ADJUSTMENT

Set lever No. 5509 to 10 inch record operating position, and slightly loosen the clamp screw holding the bracket lever No. 5704 to the bracket under the tone arm base, and turn the bracket lever to such position that the slot, where the bracket lever clamps together around the bracket, is exactly centered on each side of the aligning notch cut in the lower rim of the bracket.

Then lay a scale, graduated in 64ths, on the turntable, placing the end of the scale against the turntable spindle in such position that when the needle is automatically let down the point of the needle will come to exactly 4-11 16" from the edge of the turntable shaft.

If the needle does not automatically come down at the 4-11 16" position refer to page 2 and make final adjustment at lever stop on lever No. 5509.



Care should be exercised to lock the tone arm return bracket lever, allowing .015 inch clearance between the cork insert and the tone arm base.

After the adjustment is properly made, tighten the clamp holding the tone arm bracket lever No. 5704 in place, which should leave ample clearance between the cork insert and the tone arm housing to allow perfect freedom of the tone arm operation.

If needle fails to feed into music groove, lift tone arm bracket lever No. 5704 tightly against tone arm housing and manually move tone arm back and forth to relieve any unevenness that might occur on the face of the cork insert.

MODEL 33, 34, 35 AC
Layouts

COLONIAL RADIO CORP.

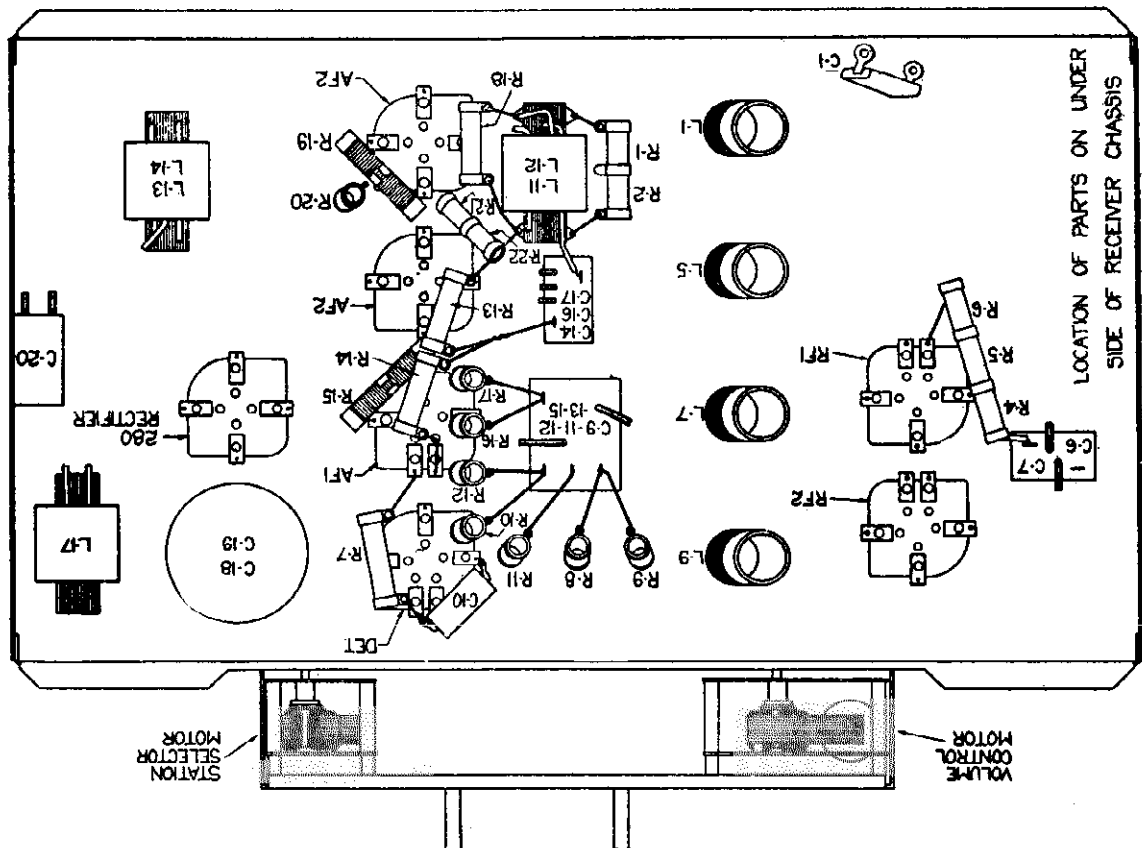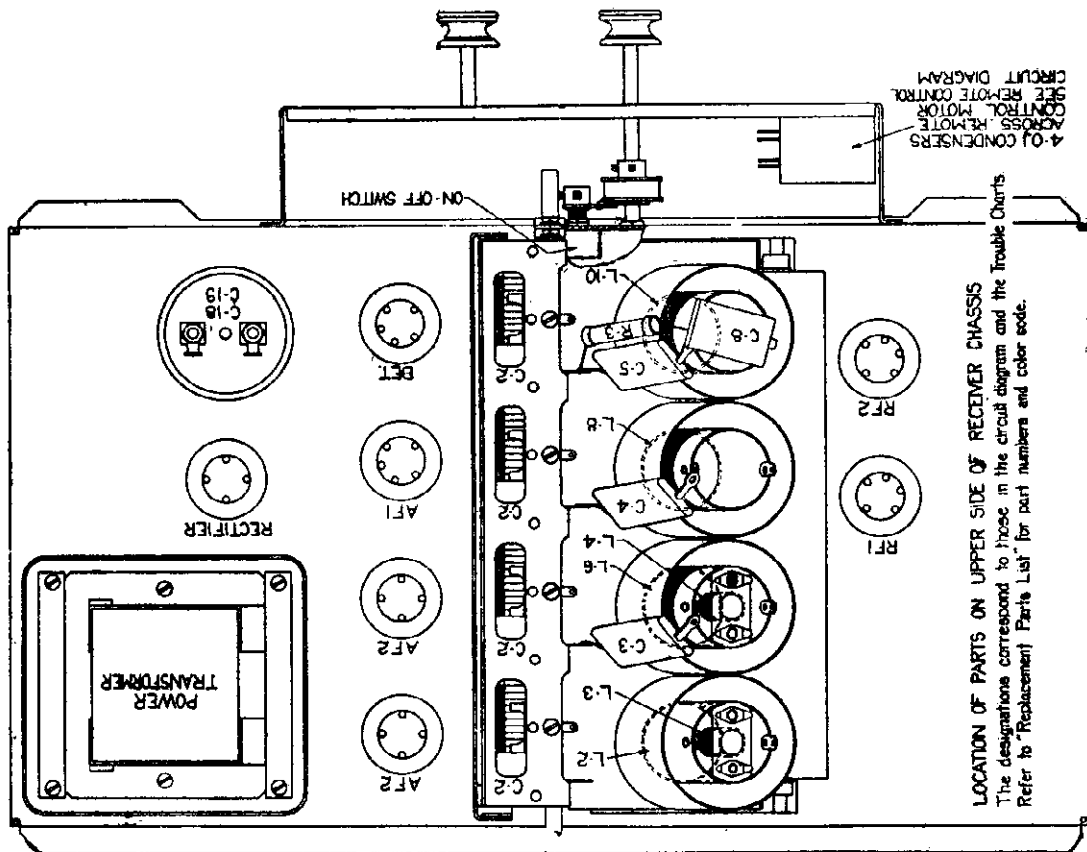

MODEL 33,34,35 AC
Remote Control Notes

COLONIAL RADIO CORP.

The Remote-Control Automatic-Tuning Unit

Since the servicing of the remote-control automatic-tuning unit will be simple if its operation is thoroughly understood, the circuit diagram and the following explanation should be studied carefully.

* Fig. 4 shows the circuit used. As is seen, it consists essentially of two motors, one for turning the volume control and the other the tuning condensers, and means for controlling the direction and amount of rotation of the motors from a remote point. Each of the motors has two field windings, poled in such way that switching from one to the other reverses the direction of motor rotation.

When the remote-control push buttons are not pressed, the circuit is open and no current flows through the motors. When the "Vol. Inc." button is pressed, the circuit is completed through that field winding of the volume control motor which will cause rotation in the proper direction to secure an increase of volume. When the "Vol. Dec." button is pressed, the other field winding is connected, and the volume control is turned to a lower setting. Just before its minimum position, the volume control operates the receiver line switch. Since a friction drive is used no damage will result if the button is kept pressed. After the volume control has reached the limit of its movement, the motor will merely continue running with the friction drive slipping.

Study of fig. 4 reveals that when any one of the station buttons is pressed, the circuit is completed through the contact stud connected to it and the station-selector motor revolves, turning the tuning condensers and the split brass disk fastened to the condenser shaft. The motor continues to drive the condenser shaft (through a friction drive) until the insulating slit in the brass disk comes directly under the contact stud and breaks the circuit. When the slit is under the contact stud, the tuning condensers are in proper position for reception of the station. Should the momentum of the motor be sufficient to carry the disk past the point where the stud and slit coincide, the stud

will make contact with the other half of the disk, energizing the other field winding. This reverses the motor direction, bringing the disk back until the insulating slit and the contact stud do coincide.

The button marked "Quiet", when pressed, removes the voltage applied to the screen-grids of the R.F. tubes, preventing reception of stations while the automatic-tuning mechanism is in action.

Should either or both of the drive-motors refuse to run, or run in only one direction the following procedure may be followed: Connect one end of a length of wire to contact "C" of the receptacle (fig. 4.) and touch the other end alternately to each lug of the condensers mounted next to the volume control drive motor. If the motors run, and in both directions, the trouble is in either the cable, the remote-control push-button box, or the contacts on the brass disk. A continuity check will reveal the open circuit.

If the motors do not run when the wire is touched to the condenser lugs, the fault may lie in the voltage supply, the motor proper or in the 0.1 mfd filter condensers. An a.c. voltmeter connected from "C" (fig. 4) to the chassis should give a reading of approximately ten volts. If no reading is obtained, the trouble may be either a blown fuse or an open transformer. If a reading is obtained the 0.1 condensers should be tested for breakdown. If they prove perfect, the trouble is in the motors and they should be tested for shorted or open windings. In particular, the brushes should be examined for good contact with the commutator, and the commutator itself brightened with a piece of very fine sandpaper. In time the spider washers in the friction drive may lose some of their tension, resulting in slippage in the drive. These washers are easily removed and bent to increase their tension.

If the line voltage is above 110, the fuse should be in the right side of its mounting, facing the rear of the set. It should be put in the left side for a line voltage of less than 110.

Sometimes it is found that volume is better without a ground connection. This is due to the electric light wires acting as an antenna and feeding signals to the receiver. Under such conditions reception will usually be noisy. Connection of the ground wire causes the line filter condensers to effectively drain off both unwanted noise and whatever signal there may be picked up by the line.

The spark obtained when the ground wire is touched to the ground binding post or to the chassis is a normal occurrence. It is due to the discharge of the condensers used in the line filter.

A poor detector tube will create an objectionable hum in the speaker.

The fuse in the double mounting on the rear of the chassis provides a means for compensating for deviation of the line voltage from normal values. Normally the fuse is in the left side of the mounting, facing the rear of the chassis. It should be put in the right side only when the line voltage is known to be consistently below 110 volts. It is important that this adjustment be made, since excessive voltage will shorten the life of the tubes, and insufficient voltage will make the set insensitive.

The two models, 33AC and 34AC, are identical electrically except that Model 34 has a more sensitive loudspeaker, capable of finer reproduction. Further, the push-pull output transformer is mounted on the speaker frame instead of in the receiver chassis, as in the model 35.

The Colonial 33AC and 34AC are obtainable both with and without the remote-control automatic-tuning unit. This unit is easily installed in those receivers not having it as an integral part. It in no way interferes with the ordinary manual operation of the receiver, should that be desired. Either method of control may be used without the necessity for disconnecting, switching or changing anything. The employment of one-control system does not render the other inoperative.

Due to an automatic anti-overloading feature incorporated in the receiver, it will be found that when receiving strong signals, advancing the volume control beyond a certain point will result in a decrease in volume.

ACTUAL VOLTAGES APPLIED TO TUBES

	RF1	RF2	Det.	AF1	AF2	280 Rectifier
Plate Voltage	180v.	180v.	150v.	100v.	240v.
Control-Grid Voltage	-3	-3	-2	-6	-45
Screen-Grid Voltage	90	90	35
Plate Current	3m.a.	3m.a.	0.2m.a.	3m.a.	28m.a.

VOLTAGES AS READ ON A 1000 OHMS PER VOLT METER
(PLATE VOLTAGES ON THE 250v. scale; GRID VOLTAGES ON THE 50 v. scale)

Plate Voltage	180v.	180v.	60v.	70v.	235v.
Control-Grid Voltage	80	80	12	-0.5	-22
Screen-Grid Voltage	3m.a.	3m.a.	0.2m.a.	3m.a.
Plate Current	3m.a.	3m.a.	0.2m.a.	3m.a.	50 m.a. plate each plate

The discrepancies between the applied and the measured voltages result from variations in tubes and from increased voltage drops in series resistors due to the current taken by the voltmeter. Unless the measured voltages differ by more than 25 per cent from those given in the chart, it should not be taken as a definite indication of a fault. Usually any deviation greater than 25 per cent means trouble. These readings assume a 120v. line. If the line voltage differs from 120 volts, the measured voltages will differ from those given in the chart in approximately the same ratio.

MODEL 33, 34, 35 AC
Parts List

COLONIAL RADIO CORP.


REPLACEMENT PARTS LIST

Circuit Designation	Value	Part No.	Remarks	Circuit Designation	Value	Part No.	Remarks
R 1	100,000 ohms	4635-P	Center-tapped 200,000 ohm resistor	L 1		1821-SA	Ant. primary
R 2	100,000	4635-P	Orange	L 2		1826-SA	R.F. transformer secondary
R 3	750,000	4595-P-6		L 3		1827-SA	Link coil
R 4	11,000	4593-P		L 4		1827-SA	Link coil
R 5	60,000	4593-P	Tapped resistor	L 5		1823-SA	R.F. transformer primary
R 6	50,000	4593-P		L 6		1826-SA	R.F. transformer secondary
R 7	20,000	4595-P-5	Grey	L 7		1823-SA	R.F. transformer primary
R 8	750,000	4595-P-6	Orange	L 8		1826-SA	R.F. transformer secondary
R 9	750,000	4595-P-6	Orange	L 9		1823-SA	R.F. transformer primary
R 10	200,000	4595-P-2	Brown	L 10		1826-SA	R.F. transformer secondary
R 11	50,000	4595-P-4	Red	L 11		1843-SA	Push-pull input transformer
R 12	200,000	4595-P-2	Brown	L 12		1843-SA	Push-pull output transformer
R 13	400,000	4595-P-1	Yellow	L 13		1835-SA	Push-pull output transformer (Model 33)
R 14	1,000,000	4595-P-7	Blue	L 14		1835-SA	Cone and voice coil (Model 33)
R 15	20	4529-P	Center tapped	L 15		1866-SA	Speaker field coil (Model 33)
R 16	20,000	4595-P-5	Grey	L 16		1904-SA-1	Speaker field coil (Model 34)
R 17	50,000	4595-P-4	Red	L 17	4.5 henries	1939-SA	Filter choke 4.5 henries
R 18	100,000	4595-P-3	Green	L 18		1829-SA	60 cycle power transformer (Model 33)
R 19	20	4529-P	Center tapped	L 19		1830-SA	60 cycle power transformer (Model 34)
R 20	800	4596-P	Blue vitreous enamel type resistor	L 20		1952-SA	25 cycle power transformer (Model 33)
R 21	210	4594-P	Center tapped 420 ohm resistor	L 21		1946-SA	25 cycle power transformer (Model 34)
R 22	210	4594-P		L 22		1983-SA	Model 34—Push-pull output transformer (Primary)
C 1	00025 mfd.	4534-P	Ant. series condenser	L 23		1964-SA	Model 34—Cone, actuating ring and secondary
C 2	.0003	1842-SA	Tuning condenser	C 14	.2	4506-P	Model 33 and 34 line switch
C 3	.2	4527-P	Red lead and adjacent lug	C 15	.25	4521-P	Black lead and adjacent lug
C 4	.2	4527-P	Black lead and adjacent lug	C 16	.2	4513-P	Black lead and solitary lug
C 5	.2	4527-P	Black lead and furthest lug in row of three	C 17	.0005	4521-P	Black lead and further lug
C 6	.5	4514-P	Red lead and middle lug in row of three	C 18	.8	4521-P	Yellow leads
C 7	.2	4514-P	Red lead and middle lug in row of three	C 19	.8	4503-P	Merahon condenser
C 8	.2	4527-P	Black lead and middle lug in row of three	C 20	.1	4503-P	Line buffer
C 9	.5	4513-P	Black lead and nearest lug in row of three		.1	4598-P	25 cycle R.F. screen-grid bi-pass condenser
C 10	.0001	4597-P				4724-P	
C 11	.005	4513-P					
C 12	.0001	4513-P					
C 13	1.	4513-P					

MODEL 36
114
Parts Illus.


COLONIAL RADIO CORP.

MODEL 36, 114.

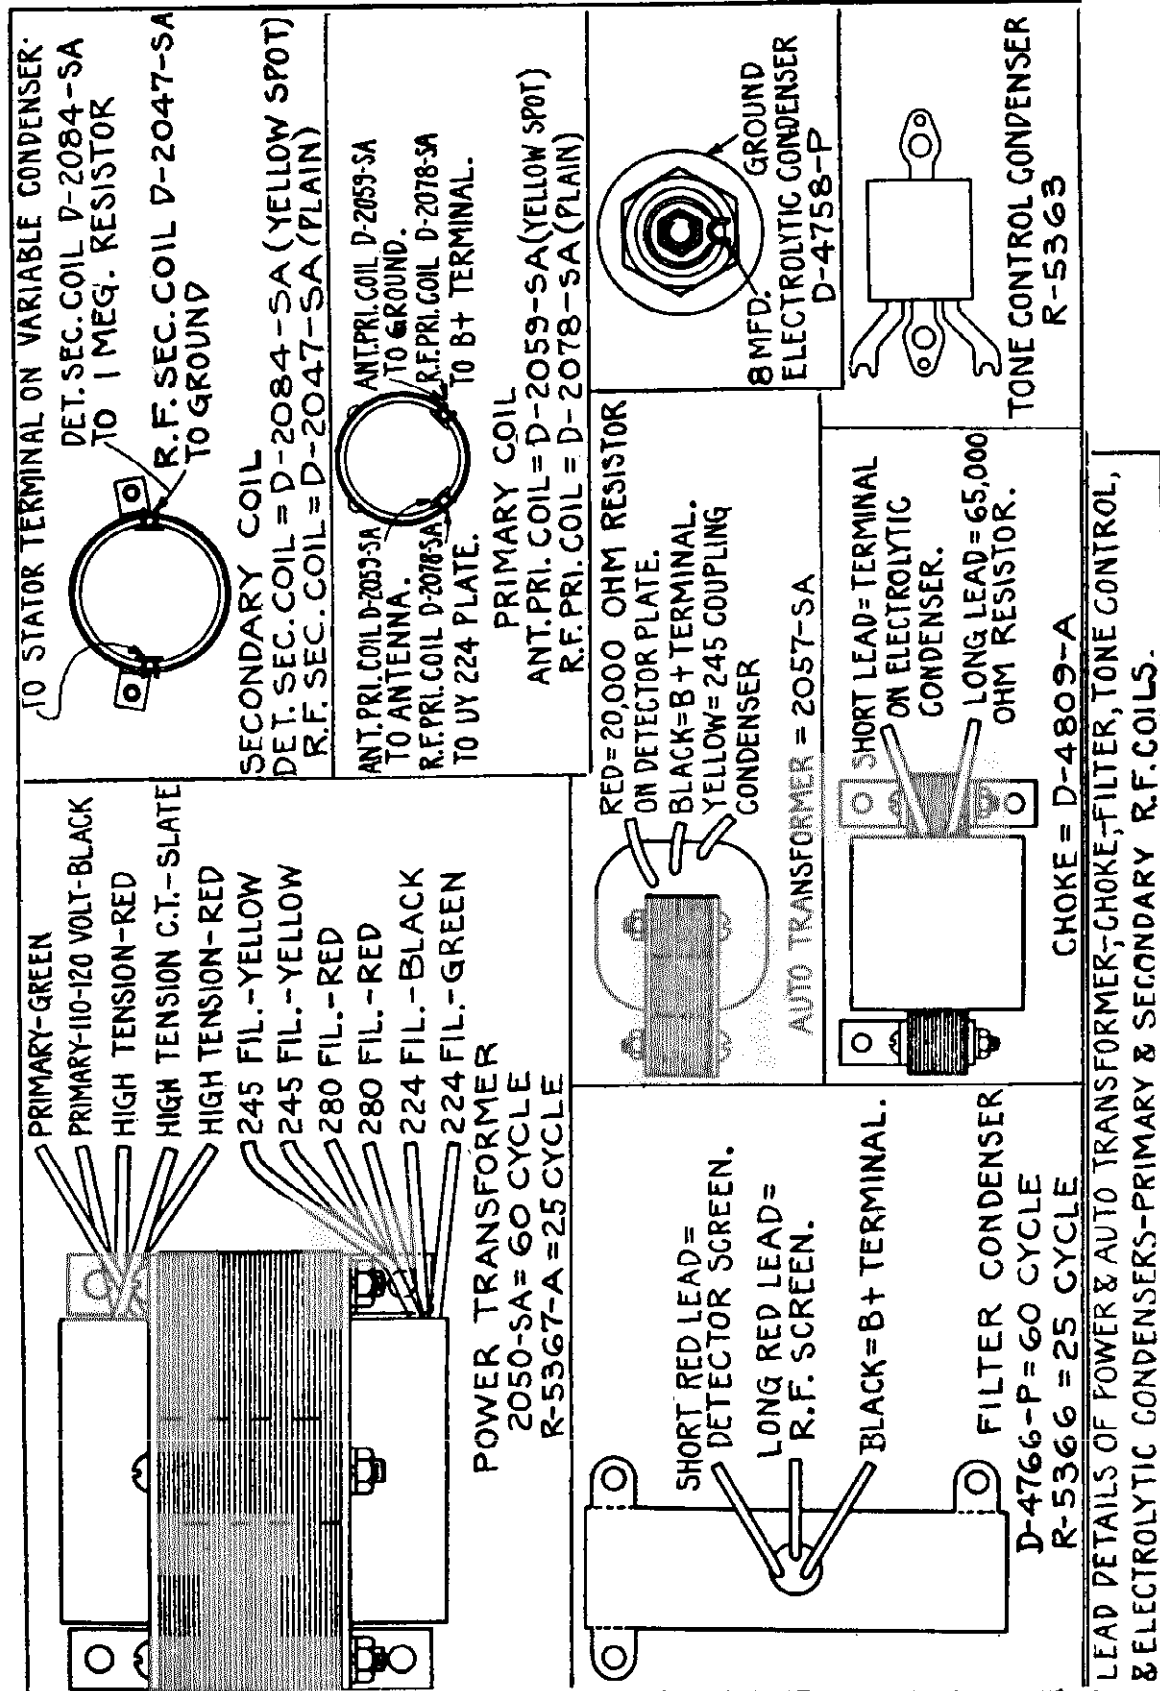

MODEL 36
114
Chassis and Parts

COLONIAL RADIO CORP.

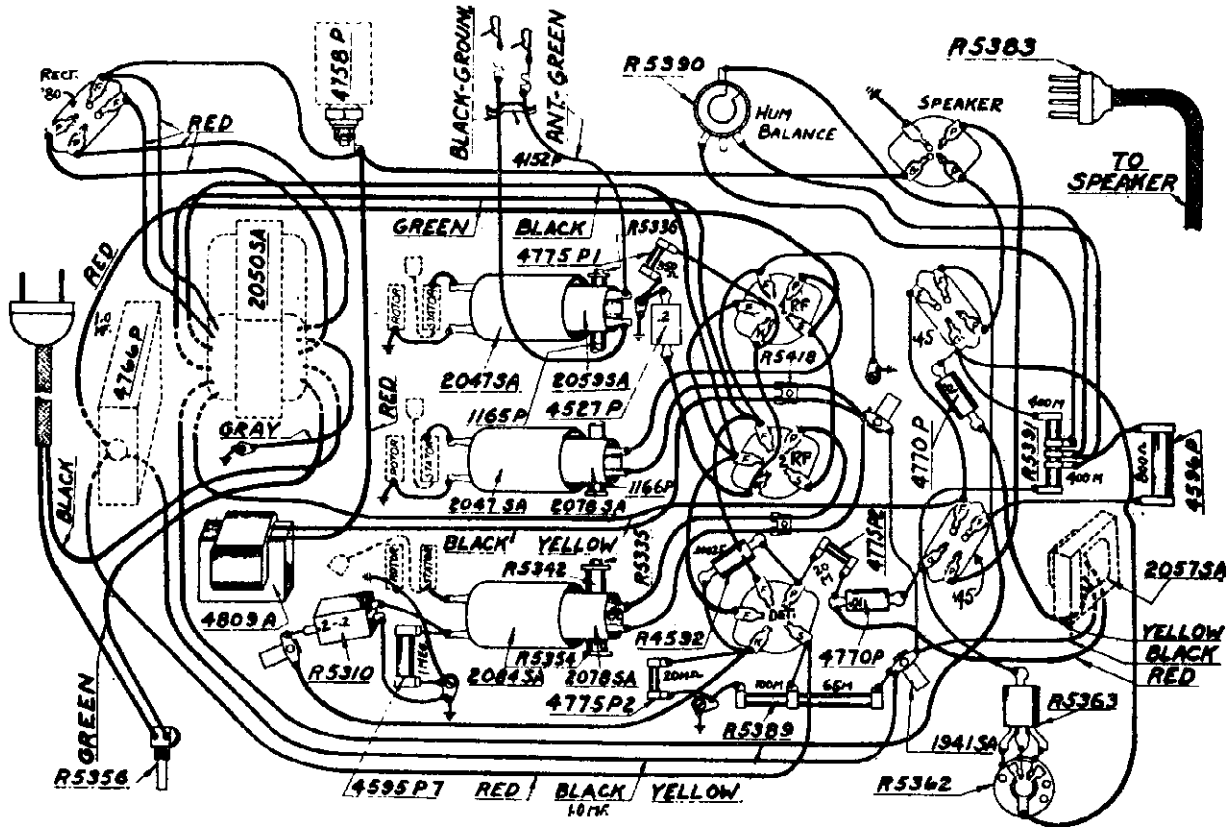


CHASSIS WIRING MODEL 36, 114.

MODELS 36, 36-P & 41-P
Parts list & color code.


- | | |
|------------|---|
| R-4354 | Resistor 50 M. ohm Grey (D.C.) |
| D-4527-P | Condenser .2 Midget |
| R-4592 | Condenser .00025 Mfd. |
| D-4595-P-7 | Resistor .1 Meg. Blue |
| D-4596-P | Resistor 300 ohm - Purple |
| D-4766-P | Condenser 1.5 Filter |
| D-4770-P | Condenser .01 Midget |
| D-4775-P-1 | Resistor - 350 ohm Black |
| D-4775-P-2 | " - 20 M ohm Grey |
| D-4782-P | Resistor 800 M ohm Yellow Tapped (D.C.) |
| R-5122 | Condenser .5 Dual (D.C.) |
| R-5310 | Condenser .2 Dual |
| R-5366 | Resistor 800 M ohm Yellow |
| R-5369 | Condenser - .5 Mfd. 25 cycle Filter |
| R-5389 | Spacer - Dual .5 cond. (D.C.) |
| R-5390 | Resistor - 165 M. ohm Green & Black |
| R-5431 | Potentiometer 600 ohm |
| R-5445 | Speaker 10" |
| R-5447 | Resistor 10 M ohm Black (D.C.) |
| R-5544 | Resistor 50 M ohm Red (D.C.) |
| R-5819 | Resistor - large (D.C.) |
| R-5820 | Resistor 100 M. ohm R.M.A. |
| R-5821 | Resistor 65 M. ohm R.M.A. |
| R-5822 | Resistor 20 M. ohm R.M.A. |
| R-5823 | Resistor 400 M. ohm R.M.A. |
| R-5824 | Resistor 1 Meg. R.M.A. |
| R-5417 | Resistor 350 ohm R.M.A. |
| | Filter Condenser |

Model 36, 36-P, 41, 42 (1930)

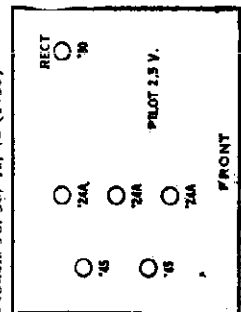

COLONIAL RADIO CORP

MODEL 37
Parts Coding
Voltage

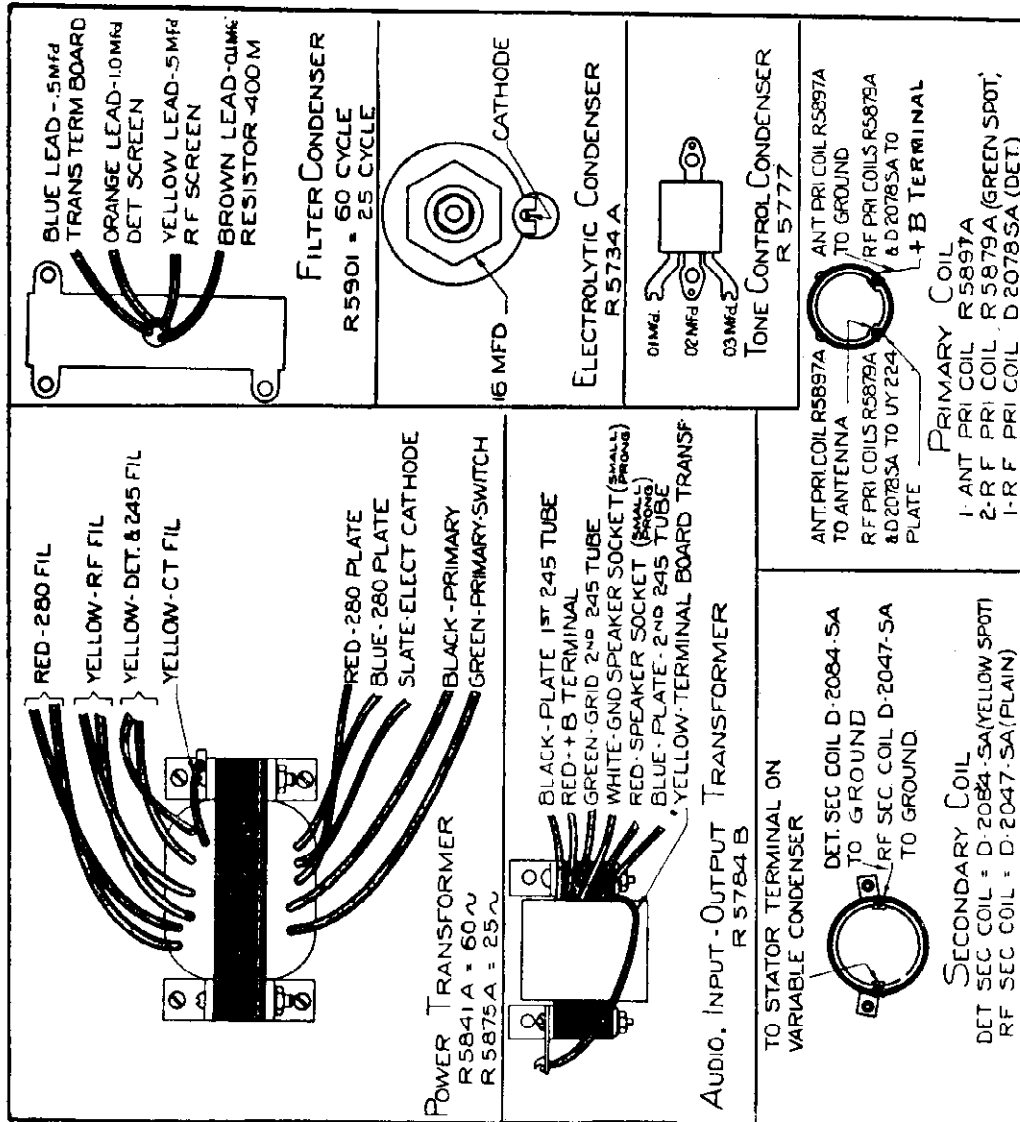

LEAD DETAILS OF POWER & AUDIO TRANSFORMER, FILTER, TONE CONTROL, ELECTROLYTIC CONDENSERS AND R.F. COILS.

VOLTAGE READINGS - MODELS 37 & 37-P



60 Cycle		Line Voltage 115							
		RF1	RF2	RF3	Det.	245#1	245#2	280AC	280DC
Plate Voltage	D.C.	250	250	250	115	250	250	345	350
Screen Voltage	D.C.	65	65	65	100				
Heater Voltage	A.C.	2.4	2.4	2.4	2.4	2.4	2.4	4.8	
Control Grid Voltage	D.C.	2.2	2.4	2.4	10	20	48		
Speaker Field Voltage		100							
Total Rectifier Current		.070							

25 Cycle		Line Voltage 115							
		RF1	RF2	RF3	Det.	245#1	245#2	280AC	280DC
Plate Voltage	D.C.	240	240	240	100	240	240	340	340
Screen Voltage	D.C.	65	65	65	100				
Heater Voltage	A.C.	2.4	2.4	2.4	2.4	2.4	2.4	4.8	
Control Grid Voltage	D.C.	2.2	2.4	2.4	10	20	45		
Speaker Field Voltage		100							
Total Rectifier Current	MADC	.070							

Control grid voltage measured from cathode to ground or from cathode to filament. 245 grid voltage measured from grid to ground.

MODEL 39, 125
Voltage
Parts Coding

COLONIAL RADIO CORP.

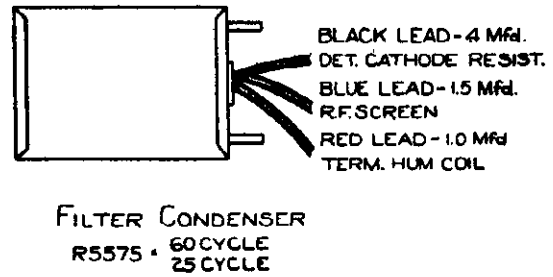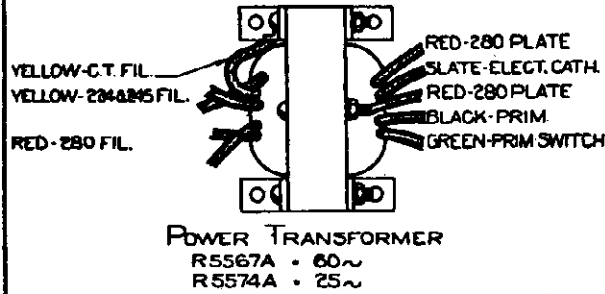

TO STATOR TERMINAL ON
VARIABLE CONDENSER.



R.F. SEC. COIL D-2047-SA
TO GND.
DET. SEC. COIL D-2084-SA
TO GROUND


SECONDARY COIL
DET. SEC. COIL - D-2084-SA (YELLOW SPOT)
R.F. SEC. COIL - D-2047-SA (PLAIN)

ANT. PRIM. COIL D-2059-SA
TO ANT.
R.F. PRIM. COIL D-2078-SA
TO UY 224 PLATE.



ANT. PRIM. COIL D-2059-SA
TO GND.
R.F. PRIM. COIL D-2078-SA
TO +B TERM.

PRIMARY COIL
ANT. PRIM. COIL - D-2059-SA (YELLOW SPOT)
R.F. PRIM. COIL - D-2078-SA (PLAIN)

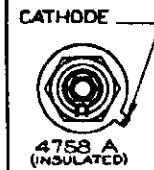

ELECTROLYTIC CONDENSERS

Model 39 — LEAD DETAILS OF POWER TRANSFORMER, FILTER & ELECTROLYTIC CONDENSERS, PRIMARY & SECONDARY R.F. COILS.

60 Cycle Line Voltage 115


	RF1	RF2	Det.	245#1	245#2	280AC	280DC
Plate Voltage D.C.	245	245	120	240		320	340
Screen Voltage D.C.	75	75	75				
Heater Voltage A.C.	2.4	2.4	2.4	2.4		4.85	
Control Grid Voltage D.C.	2.6	2.6	7	30			
Speaker Field Voltage	100						
Total Rectifier Current	.040						

25 Cycle Line Voltage 115

	RF1	RF2	Det.	245#1	245#2	280AC	280DC
Plate Voltage D.C.	250	250	110	245		325	350
Screen Voltage D.C.	75	75	75				
Heater Voltage A.C.	2.4	2.4	2.4	2.4		4.85	
Control Grid Voltage D.C.	2.5	2.5	7.5	30			
Speaker Field Voltage	100						
Total Rectifier Current	.040						


Note: Control grid volts are measured from Cathode to ground or Cathode to Heater. 245 Grid Voltage measured from Grid to Ground or Filament.

Model 39 (1931)

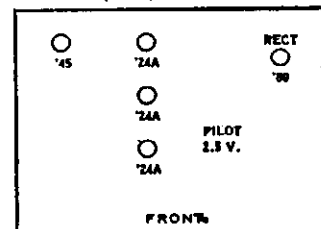


MODEL 40, 43
Battery
Chasses

COLONIAL RADIO CORP.

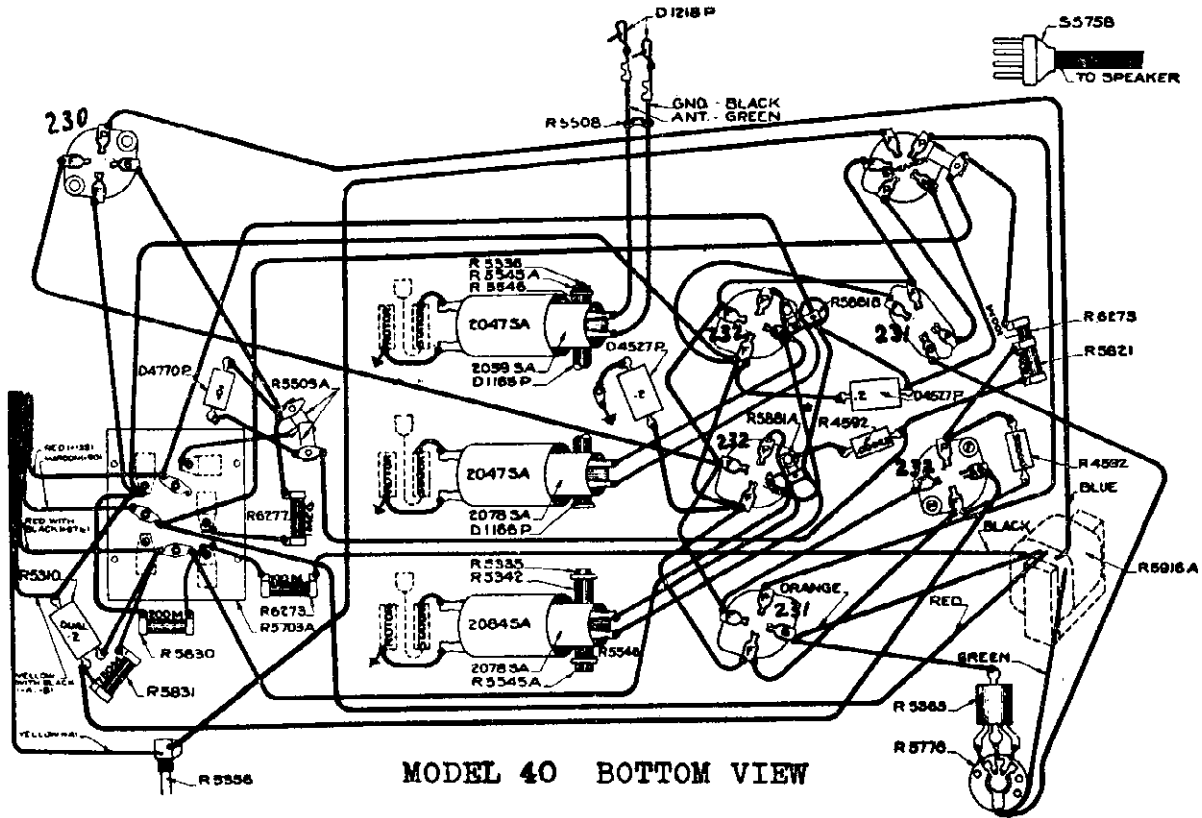

MODEL 40 BOTTOM VIEW


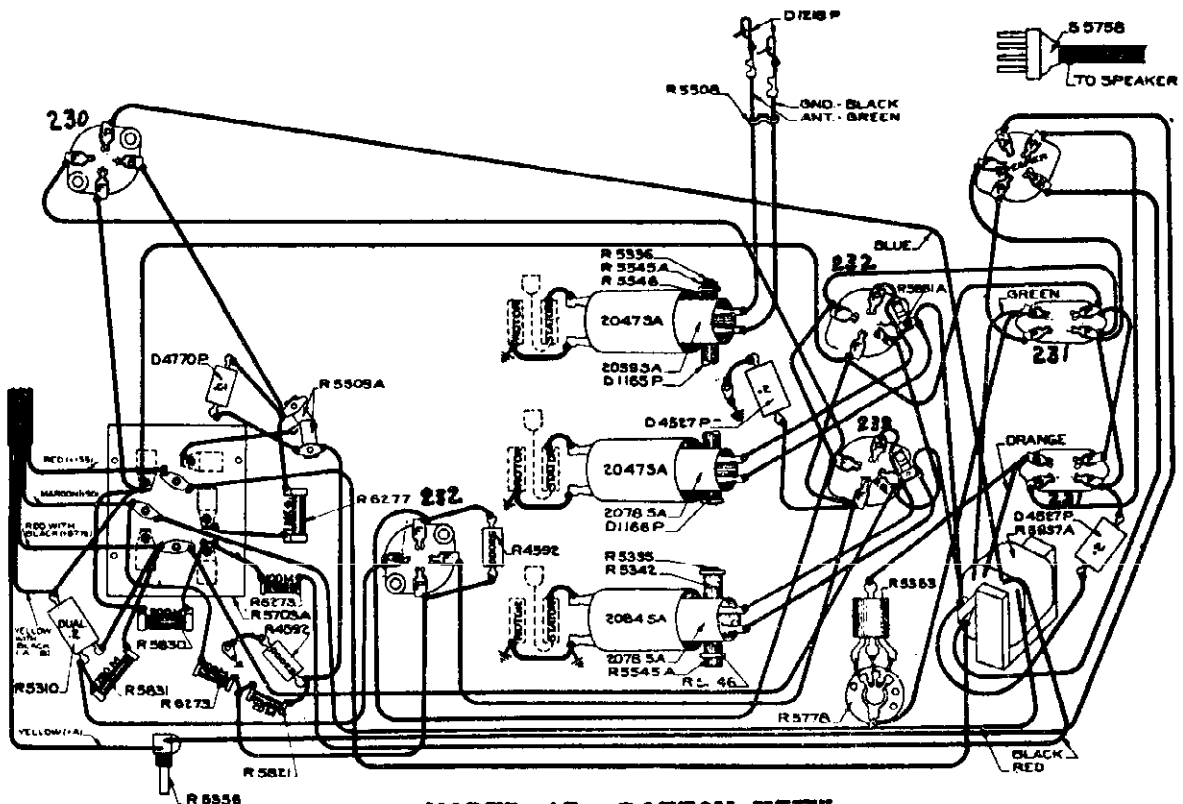


MODEL 43 BOTTOM VIEW

MODEL 40, 43
Battery
Schematic




COLONIAL RADIO CORP.

Model 40	RF1	RF2	Det.	1st Audio	331
Plate Voltage D.C.	155	155	80	90	150
Screen Voltage D.C.	87	87	25		
Filament Voltage D.C.	2.0	2.0	2.0	2.0	2.0
Control Grid Voltage D.C.	5	3		4.5	22.5

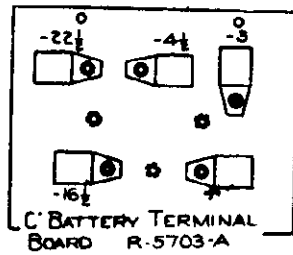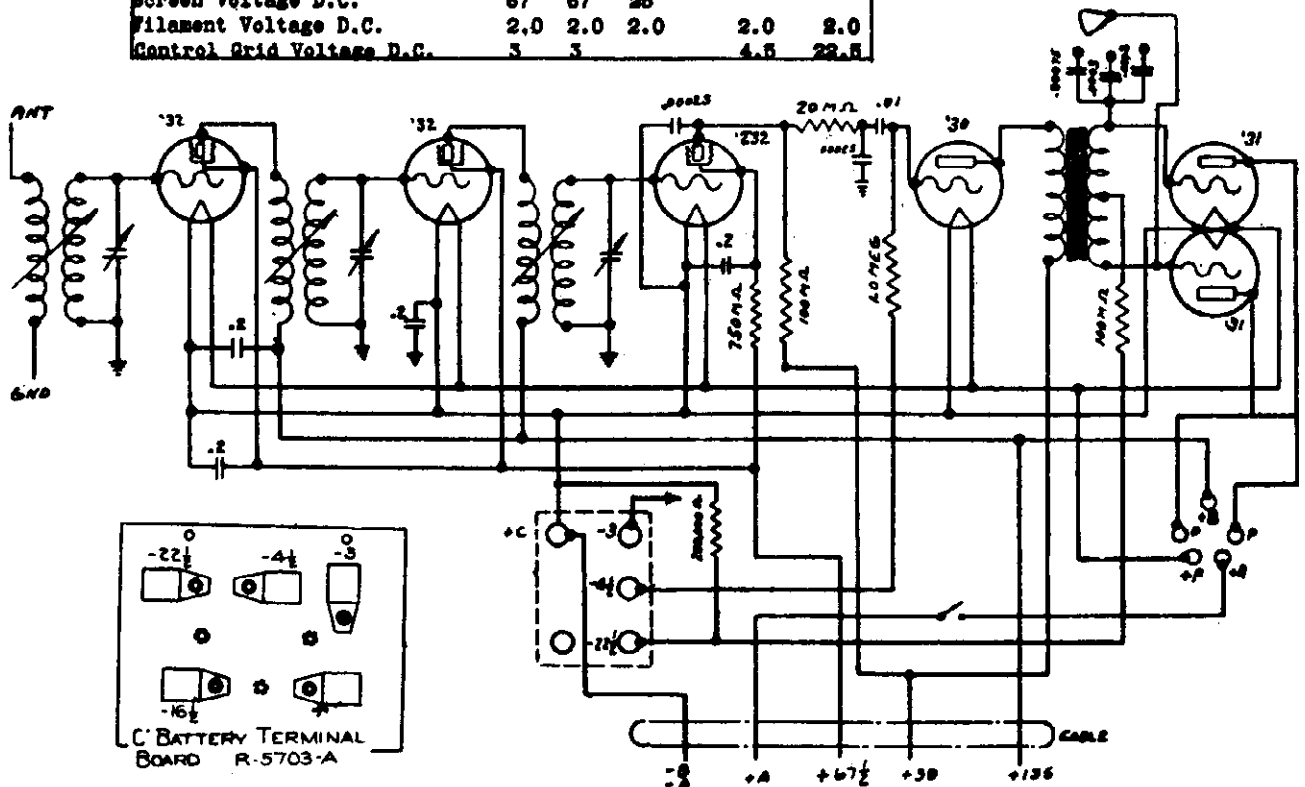


GREEN LEAD - PF GRID
 BLUE LEAD - PTAF PLATE
 BLACK LEAD - .100M RESISTOR
 RED LEAD - +B90
 ORANGE LEAD - PR GRID


AF INPUT TRANSFORMER
 R-5916-A Mod. 40
 R-5937-A Mod. 43

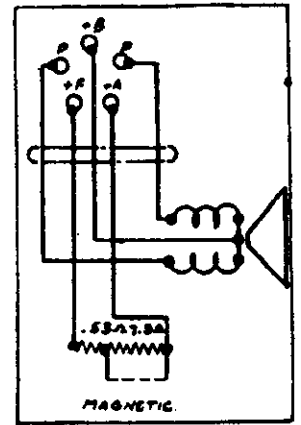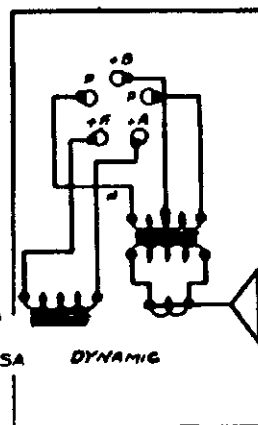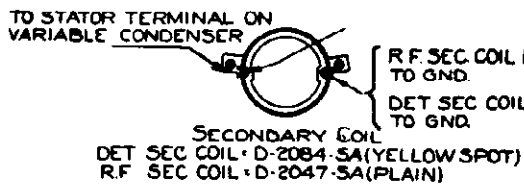

Model 40 (1931)

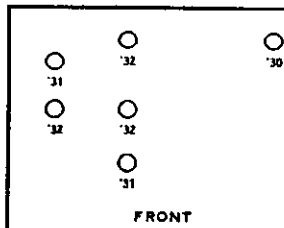


ANT. PRIM. COIL D-2059-SA TO ANT.
 R.F. PRIM. COIL D-2078-SA TO 232 PLATE



PRIMARY COIL
 ANT. PRIM. COIL D-2059-SA (YELLOW SPOT)
 R.F. PRIM. COIL D-2078-SA (PLAIN)

Model 43 (1931)

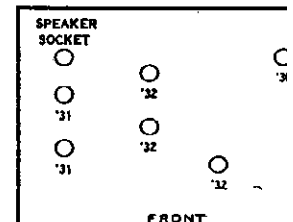


SPEAKER SOCKET

32
 31
 31
 32

30

MODEL 41-P
Schematic

COLONIAL RADIO CORP.




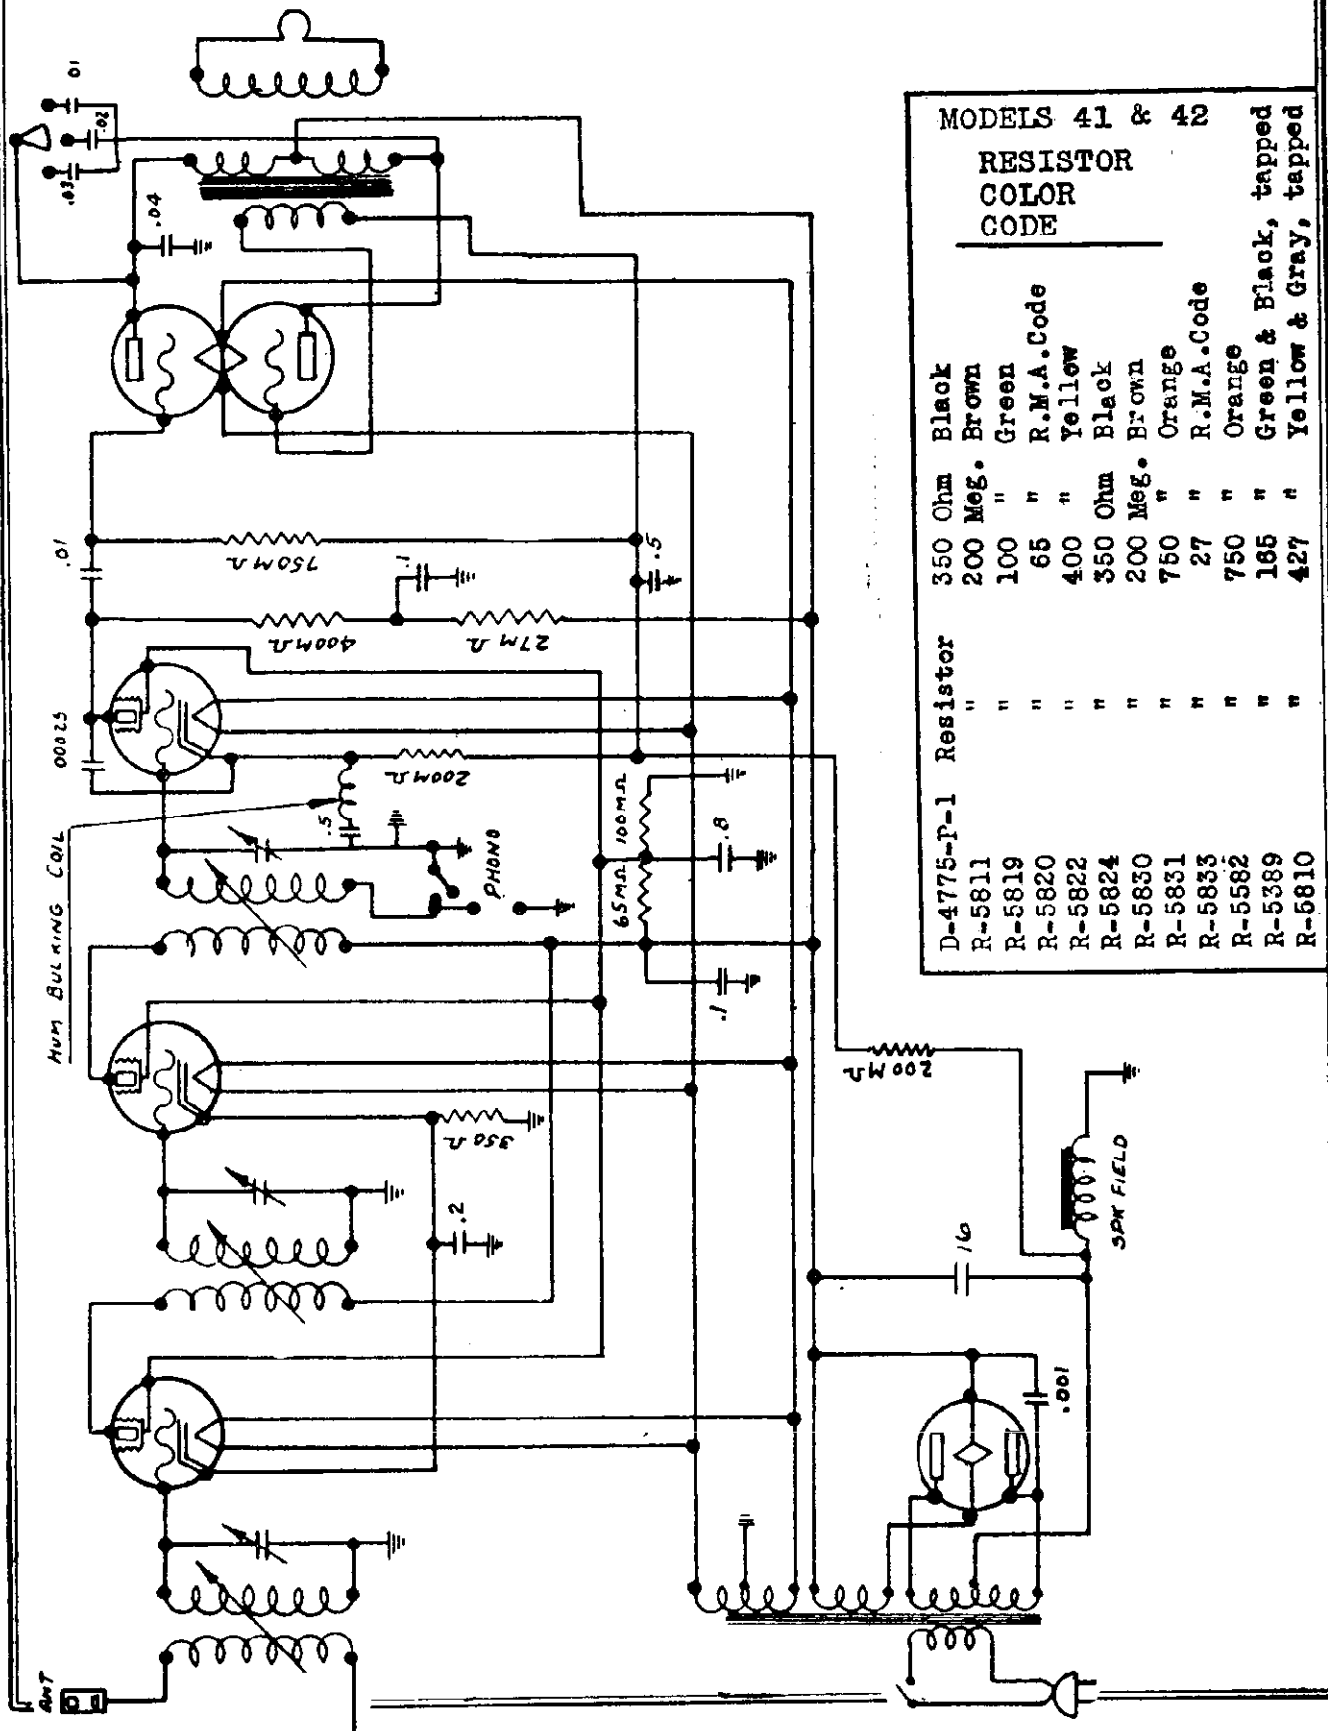



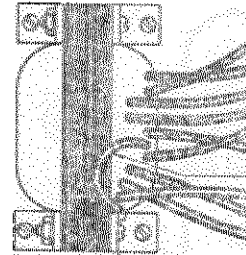
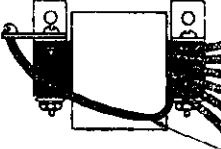

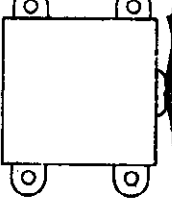
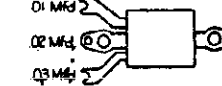
MODELS 41 & 42
RESISTOR
COLOR
CODE

Resistor	Value	Color Code	R.M.A. Code
D-4775-P-1	350 Ohm	Black	
R-5811	200 Meg.	Brown	
R-5819	100 "	Green	
R-5820	65 "	Yellow	
R-5822	400 Ohm	Black	
R-5824	350 Meg.	Brown	
R-5830	750 "	Orange	
R-5831	27 "	Orange	
R-5833	750 "	Green & Black, tapped	
R-5582	165 "	Green & Black, tapped	
R-5389	427 "	Yellow & Gray, tapped	
R-5810			

MODELS 41 and 42
Parts Coding


COLONIAL RADIO CORP.

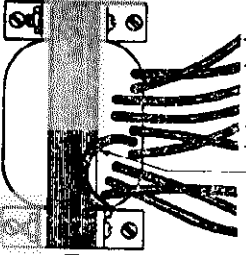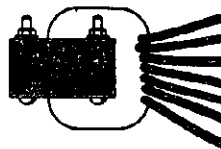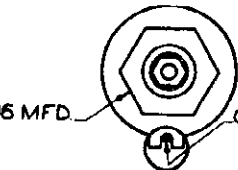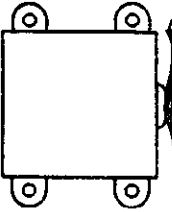 <p>RED-280 FIL GREEN-PRIM SWITCH BLACK-PRIM YELLOW-224 & 245 FIL YELLOW-CT, FIL. RED-280 PLATE BLUE-280 PLATE SLATE-ELECT CATHODE</p>	 <p>BLACK-PLATE 1ST 245 TUBE RED- +B TERMINAL GREEN-GRID 2ND 245 TUBE WHITE-SPEAKER SOCKET (SMALL) (BRONZE) RED-GND SPEAKER SOCKET (BRONZE) BLUE-PLATE-2ND 245 TUBE YELLOW-TERMINAL BOARD</p> <p>AUDIO INPUT-OUTPUT TRANSFORMER R 5784 A</p>	
<p>POWER TRANSFORMER R 5779 A - 60 ~ R 5826 A - 25 ~</p>	<p>ANT PRIM COIL D-2059 SA TO ANT R F PRIM COIL D-2078 SA TO UY 224 PLATE</p> <p>ANT PRIM COIL D-2059 SA TO GND. R F PRIM COIL D-2078 SA TO +B TERM</p>	 <p>16 MFD CATHODE</p> <p>ELECTROLYTIC CONDENSER R 5734 A</p>
 <p>GREEN LEAD-.5MFD HUM COIL TERM RED LEAD-.1MFD ELECT. CONDENSER YELLOW LEAD-.8MFD R F SCREEN BROWN LEAD-.1MFD RESISTOR 400M BLUE LEAD-.5MFD TERM BOARD</p> <p>FILTER CONDENSER R 5794 - 60 CYCLE 25 CYCLE</p>	<p>PRIMARY COIL ANT PRIM COIL - D-2059-SA (YELLOW SPOT) R F PRIM COIL - D-2078-SA (PLAIN)</p> <p>TO STATOR TERMINAL ON VARIABLE CONDENSER</p> <p>DET SEC COIL D-2084-SA TO GROUND R F SEC COIL D-2047-SA TO GND</p> <p>SECONDARY COIL DET SEC COIL - D 2084 SA (YELLOW SPOT) R F SEC COIL - D 2047 SA (PLAIN)</p>	 <p>.01MFD .02MFD .03MFD</p> <p>TONE CONTROL CONDENSER R 5777</p>
<p>LEAD DETAILS OF POWER & AUDIO TRANSFORMER, FILTER, TONE CONTROL & ELECTROLYTIC CONDENSERS, PRIMARY & SECONDARY R F COILS</p> <p style="text-align: right;"><u>MODEL 41</u></p>		


 <p>RED-280 FIL GREEN-PRIM SWITCH BLACK-PRIM YELLOW-224 & 245 FIL YELLOW-CT FIL RED-280 PLATE BLUE-280 PLATE SLATE-ELECT CATHODE</p>	 <p>BLACK-PLATE 1ST 245 TUBE RED- +B TERMINAL GREEN-GRID 2ND 245 TUBE WHITE-GND SPEAKER SOCKET (SMALL) (BRONZE) RED-SPEAKER SOCKET (BRONZE) BLUE-PLATE-2ND 245 TUBE YELLOW-TERM BOARD TRANSF</p> <p>AUDIO INPUT-OUTPUT TRANSFORMER R 5784 B</p>	
<p>POWER TRANSFORMER R 5779 A - 60 ~ R 5826 A - 25 ~</p>	<p>ANT PRIM COIL D-2059 SA TO ANT R F PRIM COIL D-2078 SA TO UY 224 PLATE</p> <p>ANT PRIM COIL D-2059 SA TO GND R F PRIM COIL D-2078 SA TO +B TERM</p>	 <p>16 MFD CATHODE</p> <p>ELECTROLYTIC CONDENSER R 5734 A</p>
 <p>GREEN LEAD-.5MFD HUM COIL TERM RED LEAD-.1MFD ELECT. CONDENSER YELLOW LEAD-.8MFD R F SCREEN BROWN LEAD-.1MFD RESISTOR 400M BLUE LEAD-.5MFD TERM BOARD</p> <p>FILTER CONDENSER R 5794 - 60 CYCLE 25 CYCLE</p>	<p>PRIMARY COIL ANT PRIM COIL - D-2059-SA (YELLOW SPOT) R F PRIM COIL - D-2078-SA (PLAIN)</p> <p>TO STATOR TERMINAL ON VARIABLE CONDENSER</p> <p>DET SEC COIL D 2084 SA TO GROUND R F SEC COIL D-2047-SA TO GND</p> <p>SECONDARY COIL DET SEC COIL - D-2084 SA (YELLOW SPOT) R F SEC COIL - D-2047-SA (PLAIN)</p>	 <p>.01MFD .02MFD .03MFD</p> <p>TONE CONTROL CONDENSER R 5777</p>
<p>LEAD DETAILS OF POWER & AUDIO TRANSFORMER, FILTER, TONE CONTROL & ELECTROLYTIC CONDENSERS, PRIMARY & SECONDARY R F COILS.</p> <p style="text-align: right;"><u>MODEL 42</u></p>		

RADIO SHOCK COMPANY, 1111 N. WASHINGTON ST., CHICAGO, ILL.


COLONIAL RADIO CORP

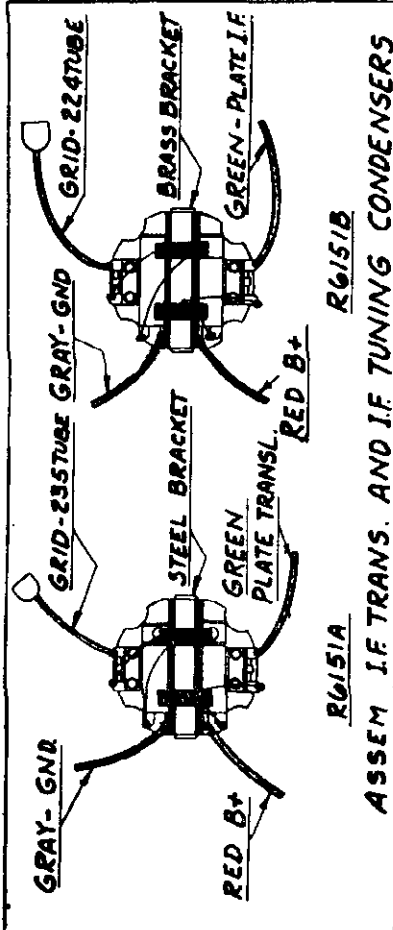

R6151A
R6151B
ASSEM I.F. TRANS. AND I.F. TUNING CONDENSERS

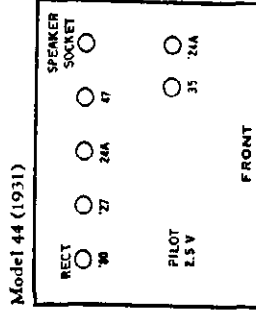


Model 44 (1931)



SUPPRESSOR COND R6218




TONE CONTROL CONDENSER R6146

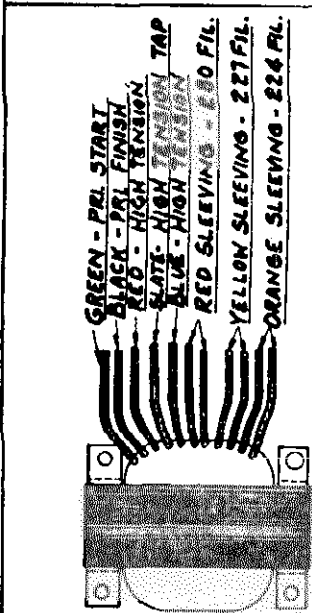


POWER TRANSFORMER
60 CYCLE R6160
25 CYCLE R6085

- LEAD - CODE**
 RED .1MF 1MΩ RESISTOR
 BLUE .5MF DET. SCREEN
 GREEN 1.0MF DET. CATH.
 BLACK .3MF CT 200MΩ RE.
 BLACK .3MF. END 200MΩ RE.
 BROWN .2MF IF PTR SCREEN
 YELLOW .2MF IF CATH.


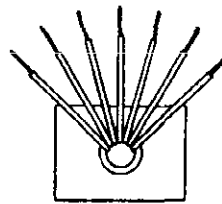


FILTER CONDENSER
R6131
CAN - COMMON

SUPPRESSOR COND. ROTOR

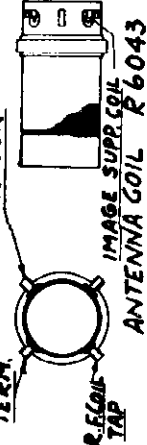

R.F. COIL R6044A

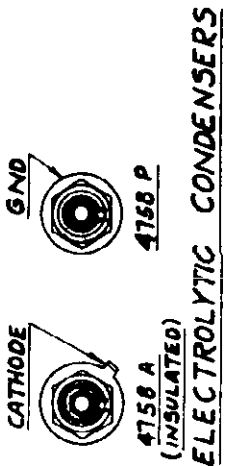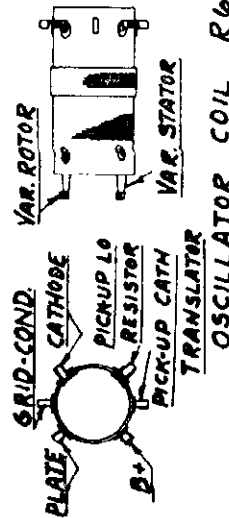


ELECTROLYTIC CONDENSERS
LEAD DETAILS OF POWER TRANSFORMER - I.F. TRANS. - I.F. TUNING COND - FILTER. TONE CONTROL ELECTROLYTIC & SUPPRESSOR CONDENSERS - R.F. - ANT OSCILLATOR COILS

MODEL-44

COLONIAL RADIO CORP.

MODEL 46 Midget
Chassis
Parts Coding

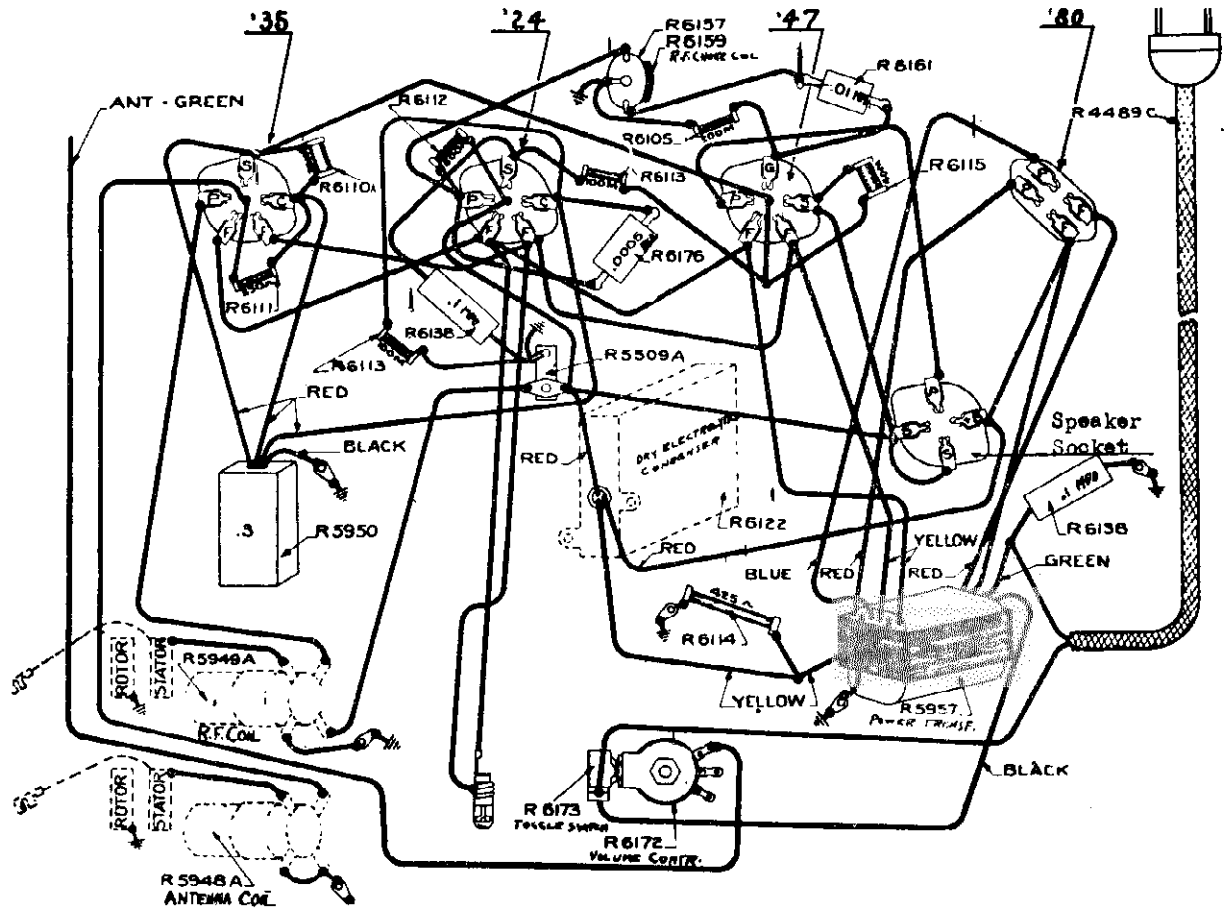

<p>YELLOW - TO 425-Ω RESISTOR</p> <p>LONG RED - 1ST FILTER SECTION</p> <p>SHORT RED TO TERM. BOARD</p> <p>DRY ELECTROLYTIC COND R6122</p>	<p>GROUND ANT</p> <p>GROUND GRID TO STATOR TERM.</p> <p>ANT COIL R5948A</p>	<p>B+ TO TERM. BOARD</p> <p>PLATE 235 TUBE</p> <p>GROUND GRID TO STATOR TERM.</p> <p>R.F. COIL R 5949A</p>
<p>GREEN PRI.</p> <p>BLACK PRI.</p> <p>RED SLEEVING 280 FIL.</p> <p>YELLOW - FIL</p> <p>YELLOW - CT TO BIAS RES.</p> <p>YELLOW - FIL.</p> <p>RED - HIGH TENSION</p> <p>SLATE - HIGH TENSION TAP</p> <p>BLUE - HIGH TENSION</p> <p>POWER TRANSFORMER 60 CYCLE R 5957</p>		<p>Model 46 (1931)</p> <p>RECT</p> <p>'80</p> <p>'47</p> <p>'24A</p> <p>'35</p> <p>NO TUBE</p> <p>PILOT 2.5 V</p> <p>FRONT</p>


MODEL 47,48 Super Schematic Voltage

COLONIAL RADIO CORP.

60 Cycle	Total Watts - 80	Tran.	Osc.	I.F.	R.F.	Det.	2-247	280AC	280DC
Line Voltage - 115									
Plate Voltage DC	230	40	240	240	160	235	240	350	
Screen Voltage DC	65		65	65	20	240			
Heater Voltage AC	2.44	2.44	2.44	2.44	2.44	2.45	4.85		
Control Grid Voltage DC	10		1.7-40	1.7-40	20	16			
Speaker Field Voltage	110 Volts.								
Total Plate Current	1075 amp.								

25 Cycle	Total Watts - 85	Tran.	Osc.	I.F.	R.F.	Det.	2-247	280AC	280DC
Line Voltage - 115									
Plate Voltage DC	220	40	230	230	160	225	325	340	
Screen Voltage DC	70		70	70	25	230			
Heater Voltage AC	2.25	2.25	2.25	2.25	2.45	2.45	4.7		
Control Grid Voltage DC	10		2-38	2-38	20	15			
Speaker Field Voltage	100 Volts								
Total Plate Current	.075 amp.								


Note: Control grid volts are measured from cathode to ground or cathode to heater. 247 grid voltage from grid to ground or filament.

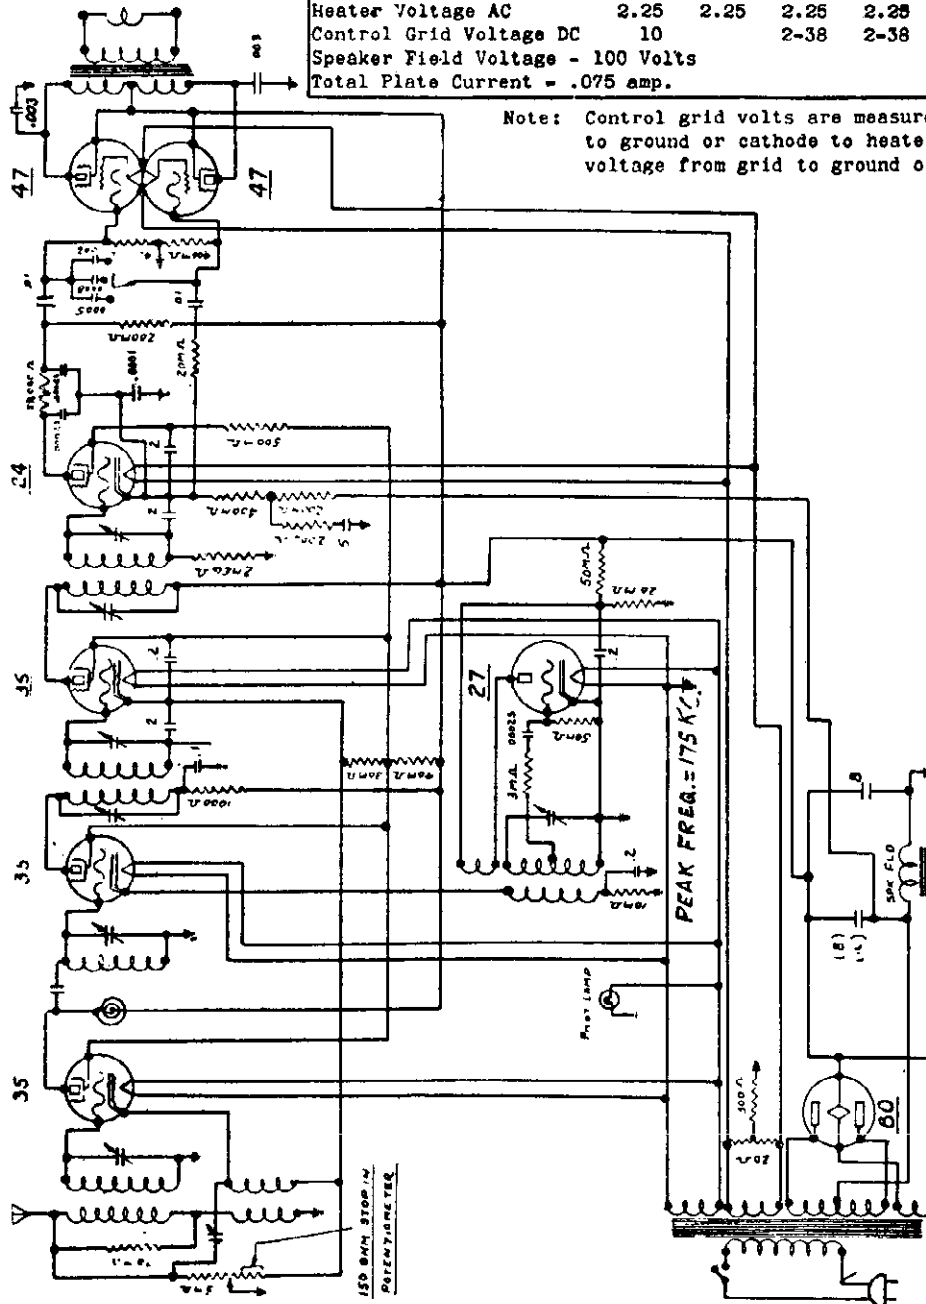

MODELS 47-48 SUPERHET.














NOTE-In this set the hum across the field coil is used to buck out hum set up in the tube circuits. Causes of hum can be traced to defective detector or output tubes. (Interchange output tubes) Shorted condenser or open resistors in hum filter circuit. The hum filter circuits consists of a 2000 ohm resistor and a 0.5 condenser in the grid bias resistor circuit. This connects from the cathode of the detector to the negative side of the speaker field. Other causes of hum are Reversed speaker field, open or shorted condensers in detector circuit, open or grounded 20 ohm center tapped resistor, defective tone control, defective speaker or a defective electrolytic condenser.

Models 47, 48 (1931)

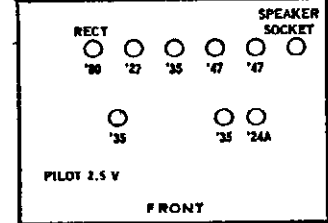

MODEL 47, 48
Parts Coding

COLONIAL RADIO CORP.

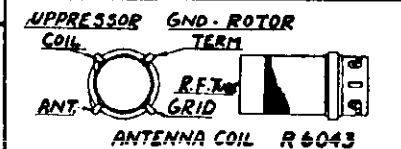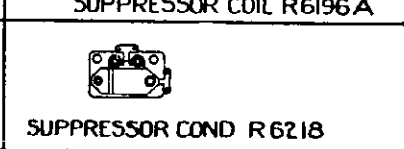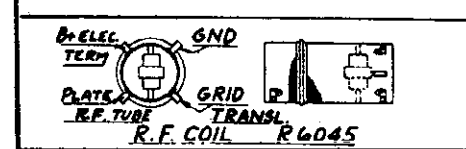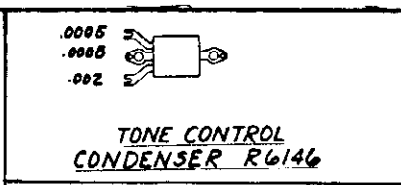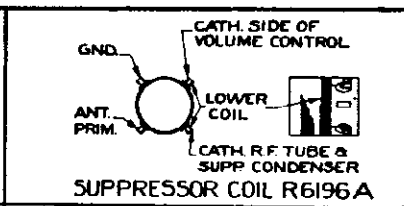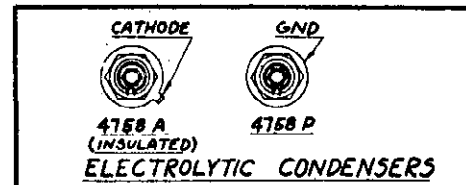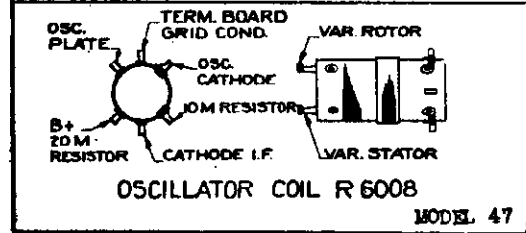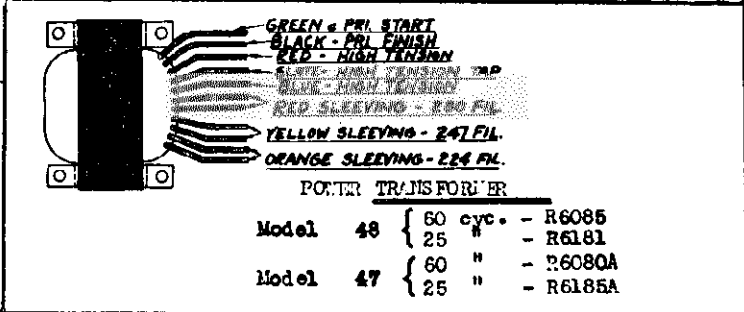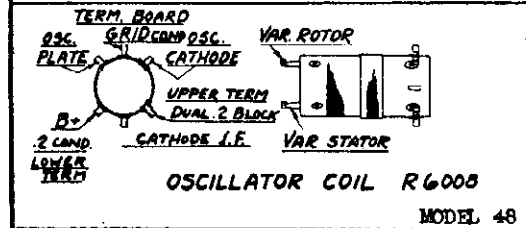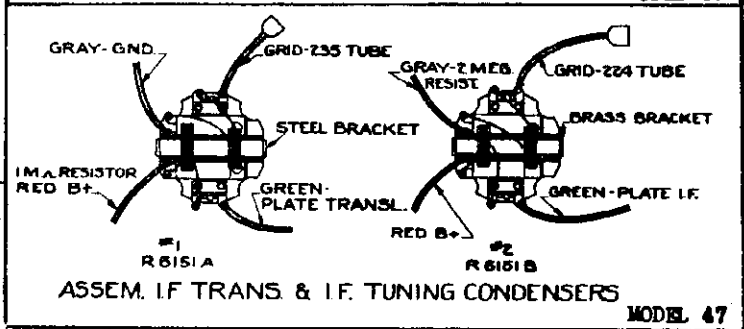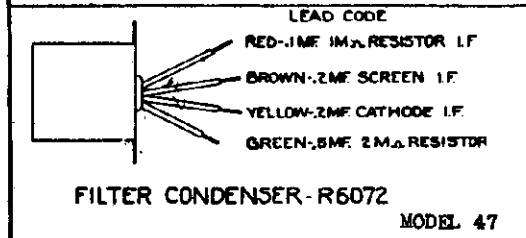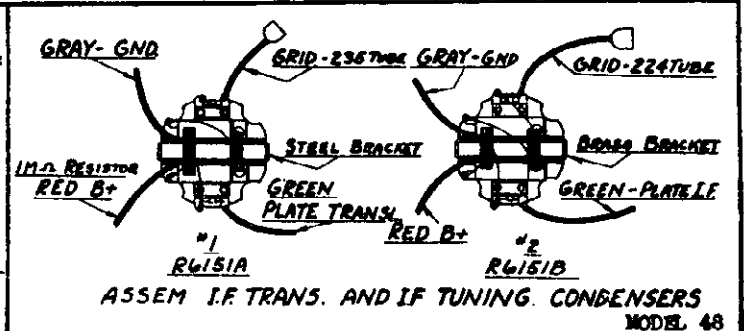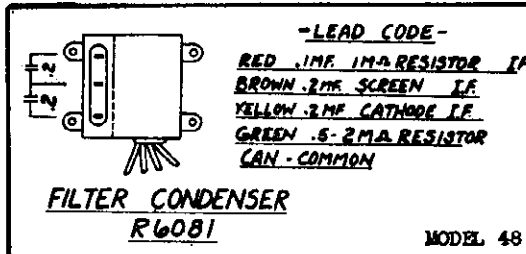


MODELS 47 & 48

MODELS 47 AND 48

MODEL 50 AVC
Voltage
Parts Coding

COLONIAL RADIO CORP.

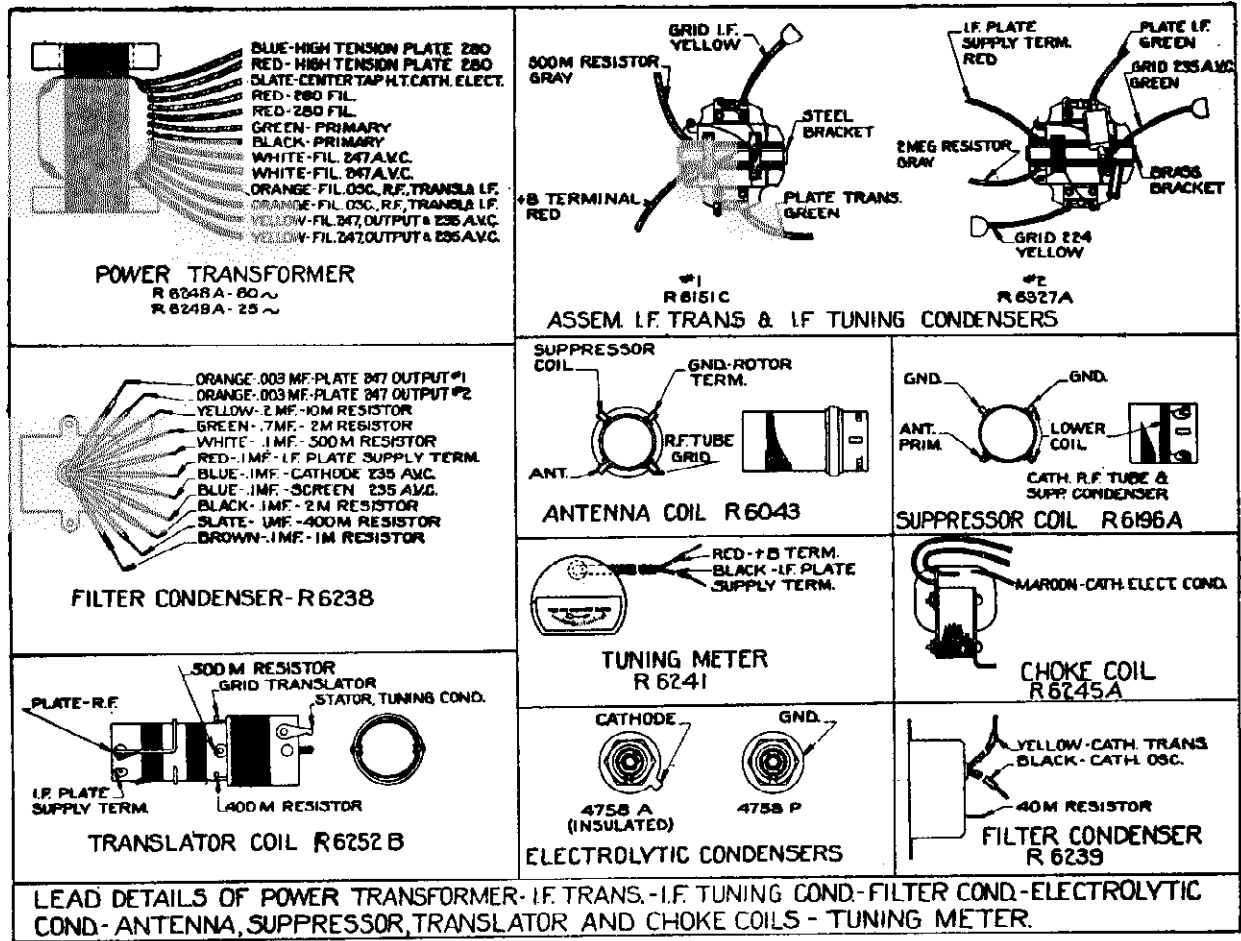

MODEL 1430 - 60 CYCLE

Line Voltage	115											
Total Watts	100											
		Trans	Osc.	IF	RF	Det	#1 Output	#2 Output	AVC 235	AVC 247	AVC 280	AVC 280
Plate Voltage		230	20	230	230	160	230	230	230	230	340	340
Screen Voltage		70		70	70	25	230	230	70	100		
Grid Voltage		var		var.	var.	20	15	15	var.	18		
Filament Voltage		2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	4.85		
Speaker Field Voltage		-	110									
Total Plate Current		-	80 ma.									

Note: All voltages measured with a 1000 ohm per volt meter, 250 volt scale, with volume level control at maximum. 247 output grid voltages were measured from filament to ground, and translator grid from cathode to ground. Grid voltages on the RF and IF will be variable when the set is operating. AVC plate voltages will be the grid voltages on RF IF and translator tubes.


Notes-Causes of no signals can be traced to some of the following reasons. Grid clips shorted to tops of tube shields. Open or shorted condensers. Unsoldered leads. Solder under tube socket terminals. Defective tubes. Oscillator not working. Open image suppressor coil. Defective speaker or shorted tone control connection. Poor quality can be traced to defective output or detector tubes. Set not tuned properly. A poor 235 in the IF, RF or translator sockets will give poor quality and unsatisfactory volume control. Shorted or open grid coupling condenser in the audio circuit, or open resistors in the audio circuits will also contribute to poor quality.

Oscillation can be traced to defective tubes, grid leads of detector and IF too close, or an open condenser in the plate circuit of the translator.

MODEL-50

COLUMBIA PHONOGRAPH COMPANY

MODEL 31, 33
Layout
Notes

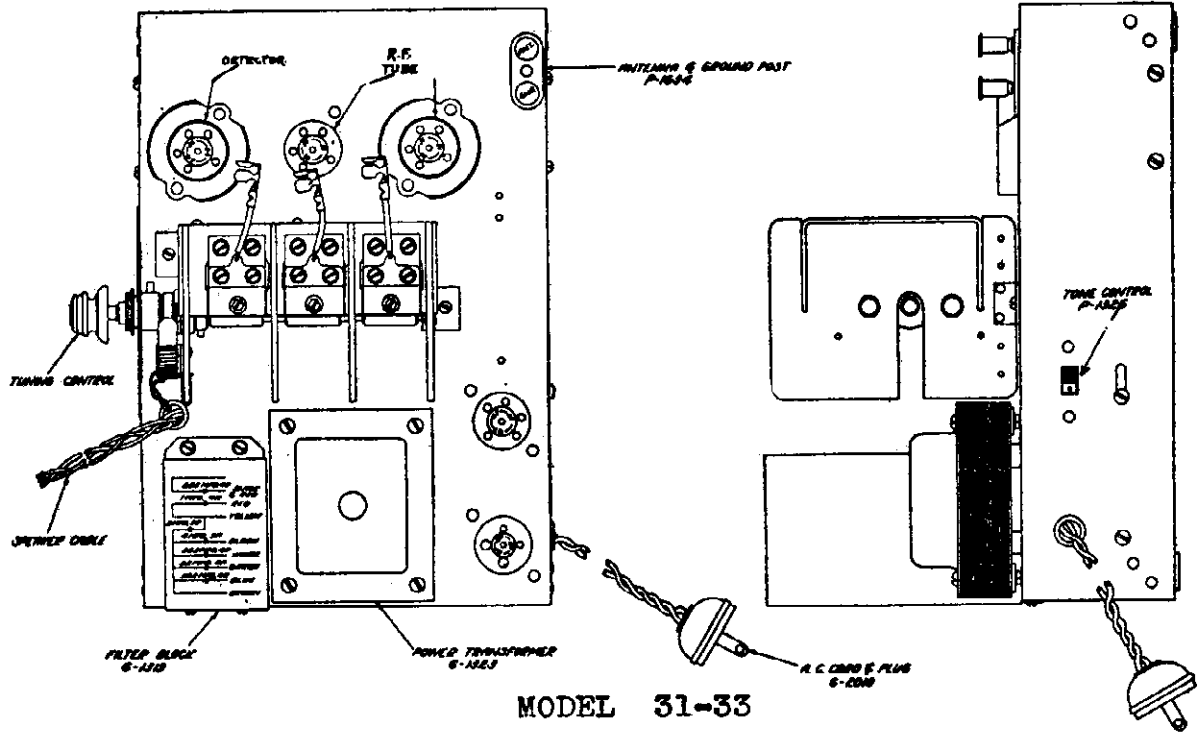

MODEL 31-33

MODEL 40 CONTINUITY TEST TABLES

(Using 10-volt scale, 1,000 ohms per volt: meter with 6-volt battery)

Circuit Tested	From	To	Reading	Your Reading
Ant. coil pri.	Ant. post	Ground	6.	
Ant. coil sec.	Grid 1st tube	Ground	6.	
1st R. F. Plate ckt.	Plate of tube	Brown lead of filter pack	6.	
1st R. F. Screen ckt.	Screen prong	Center lead, Voltage divider	6.	
1st R. F. Cathode ckt.	Cath. prong	Center tap Volume Control "ON"	6.	
2nd R. F. Grid ckt.	Grid Clip	Ground	6.	
2nd R. F. Plate ckt.	Plate prong	Brown lead of filter pack	6.	
2nd R. F. Screen ckt.	Screen prong	Center tap Voltage divider	6.	
2nd R. F. Cathode ckt.	Cathode prong	Center tap Volume Control "ON"	6.	
Det. Grid ckt.	Grid Clip	Ground	6.	
Det. Plate ckt.	Plate prong	Brown lead of filter pack	6.	
Det. Screen ckt.	Screen prong	Center Voltage divider	6.	
Det. Cathode ckt.	Cathode prong	Ground	1.4	
P. Z. cont. grid	Grid prong	Sec output trans. black lead	(slight deflection)	
P. Z. space chg. grid ckt.	S. C. Grid Prong	Brown lead of filter pack	6.	
P. Z. Plate ckt.	Plate prong	Brown lead of filter pack	5.7	
Output Sec.	One side	Other side	5.9	
Pti Power Trans.	Across A. C. Plug	Switch on	5.9	
Hi volts Sec.	Across 280 plate prongs		5.6	
Speaker field	Red wire	Green Wire	5.4	
Speaker voice coil	Green wire	Black	6.	
Filter Choke	Across red leads		5.6	
Voltage divider	Ground	Brown lead of filter pack	2.2	

RESISTANCE TABLE MODEL 40


(Using 10-volt range meter 1,000 ohms per volt and 6-volt battery)

Item	Color Code*	From	To	Reading	Your Reading	Resistance in Ohms
Det. Cath. Resistor	Yel., Blk., Or.	Det. Cath.	Gnd.	1.3		40,000
Pent. Grid Resistor	Br., Blk., Green	Pent Grid	Spar. Field	Slight Deflection		1,000,000
Wire Wound	Black	Voice Coil Black	Gnd.	5.9		260
Voltage Divider, Short End	Black	Volume Cont. Green Lead	S. G. Ckt:	4.2		4,100
Voltage Divider, Long End	Black	Plate	S. G. Ckt.	3.		11,000
Det. Plate Resistor	Gr., Blk., Yellow	Det. Plate	Pent. Space Chg. Grid.	.1		500,000
Vol. Control "on"		Gnd.	R. F. Cathode	4.2		4,100

*Color code: read body color first, tip second and dot last.

MODEL 31,33
Schematic
Voltage
Layout


COLUMBIA PHONOGRAPH COMPANY

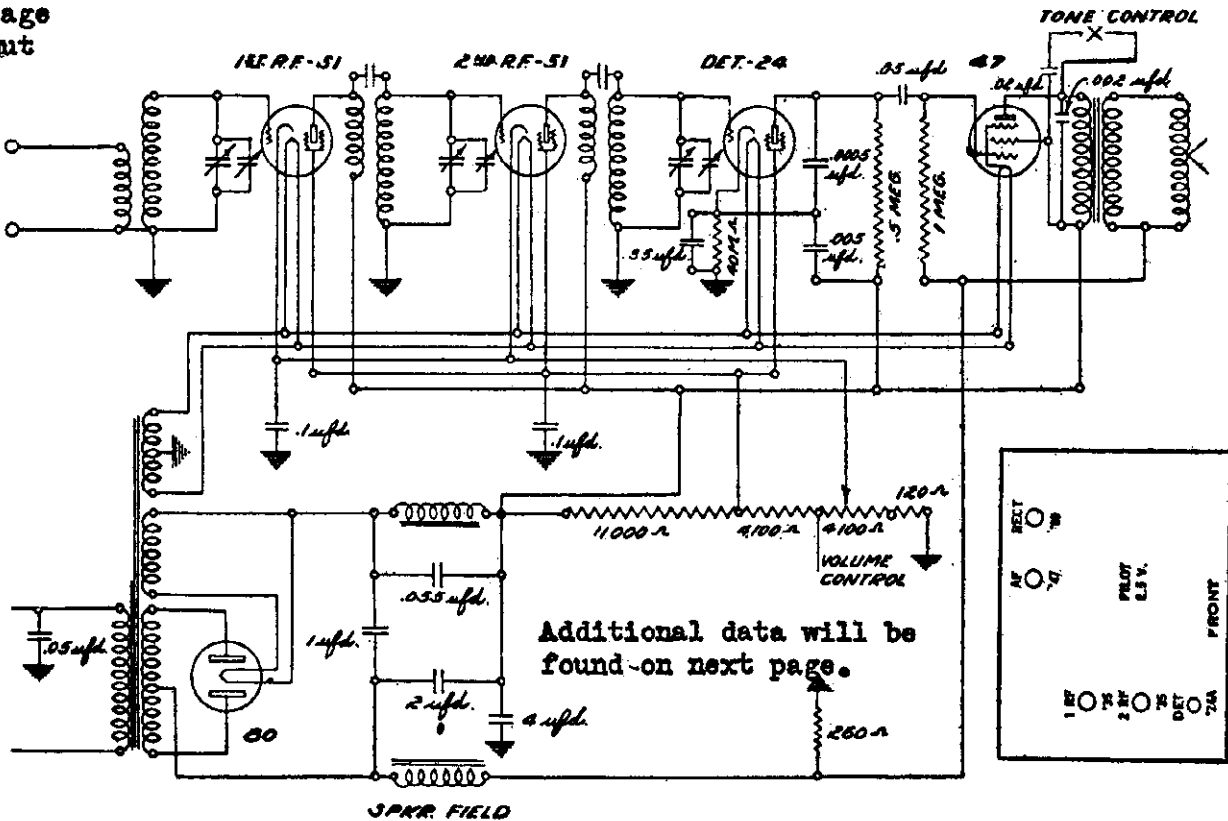

Additional data will be found on next page.

3PRR FIELD

MODEL 31-33

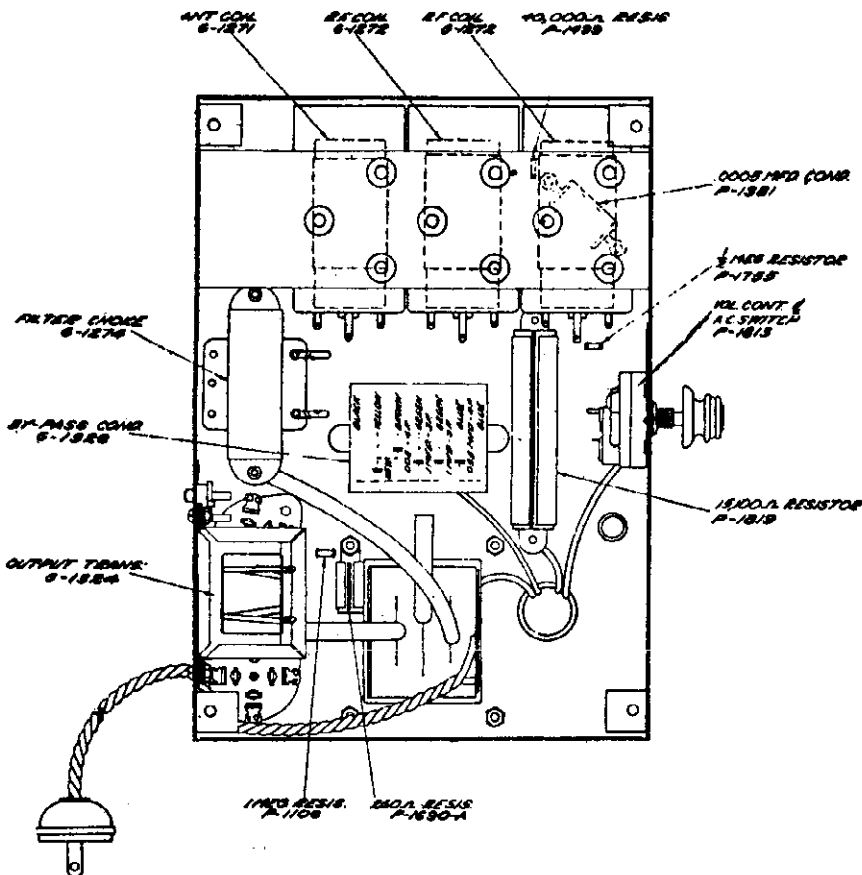



VOLTAGE ANALYSIS
READINGS TAKEN WITH WESTON MODEL 565 ANALYZER

No.	Stage	Type Tube	Fil. Volts	Plate Volts	Grid Volts	Cath. Volts	S. C. Volts	I _p Normal
1	1st R. F.	C. L. 51	2.1	225	2.1	2	75	5
2	2nd R. F.	C. L. 51	2.1	230	2.2	3	75	4.5
3	Det.	C. L. 24	2.1	160*	7	7.5	75	.02
4	Output	C. L. 47	2.1	215	5†	0	25	25.5
5	Rect.	C. L. 80	4.5	280				70

*Reading dependent upon resistance of meter.
†Reading taken for one anode only: 60 milliamperes would be about correct.
Volume control position full. Line voltage 115-60 cycle.


COLUMBIA PHONOGRAPH COMPANY

MODEL 32,34
 Top View
 Bottom View

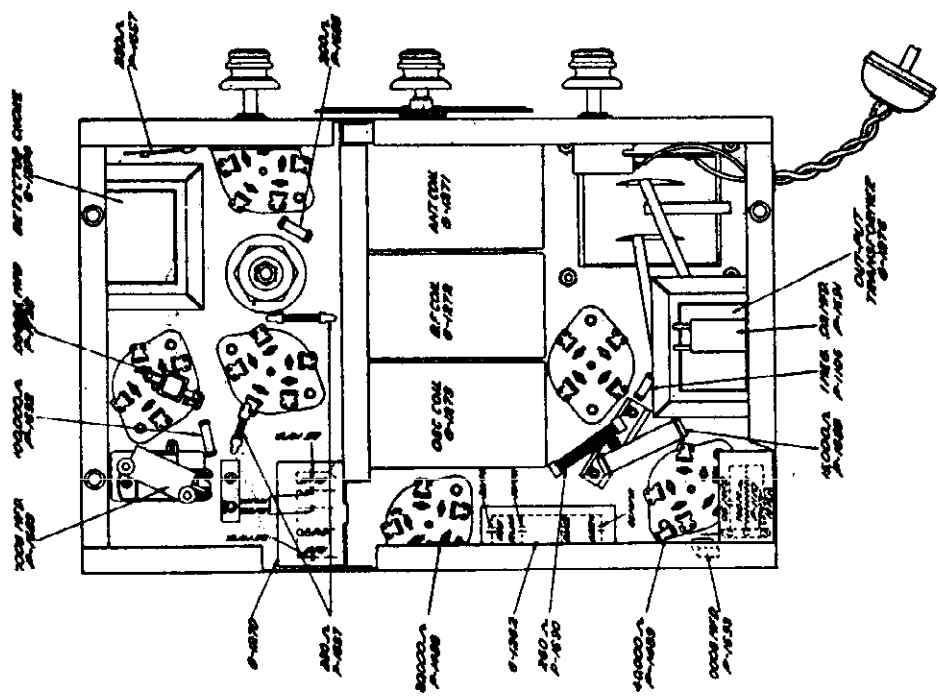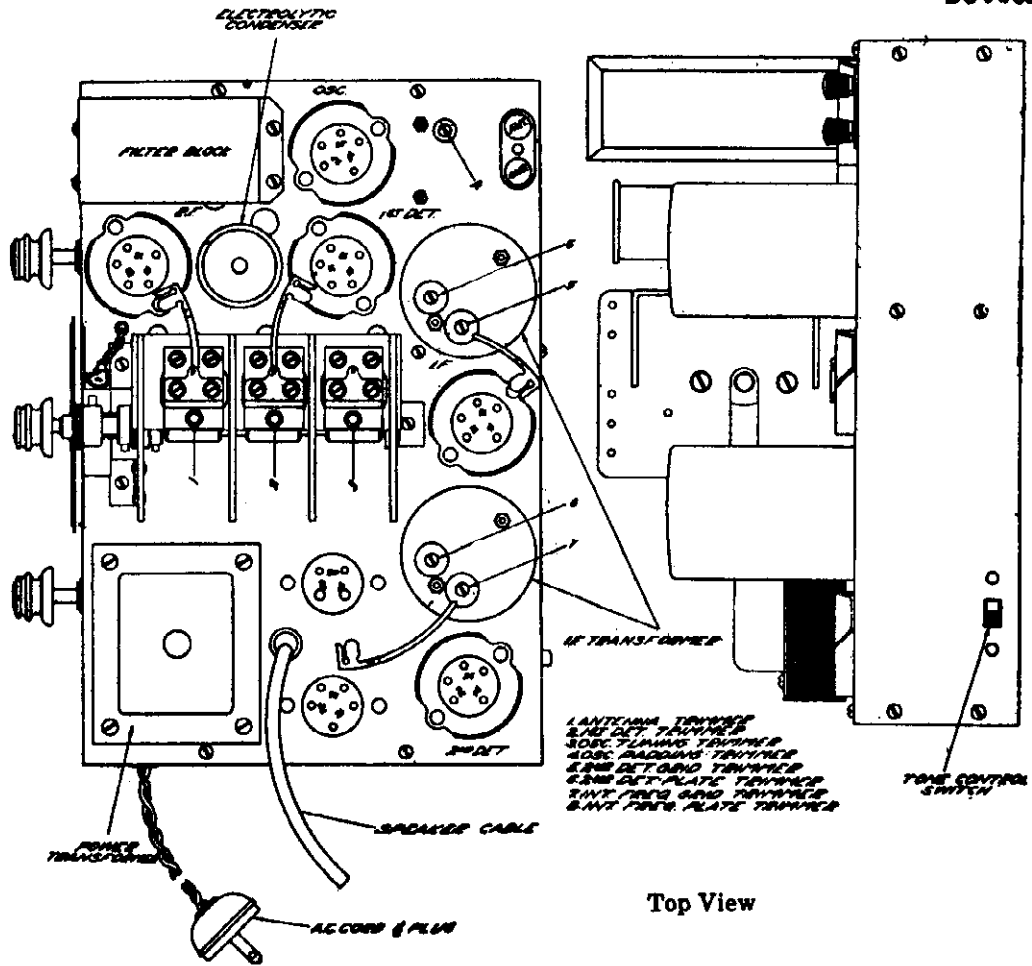

CROSLLEY RADIO CORP.

MODEL 7
MODEL 7-1
Converters

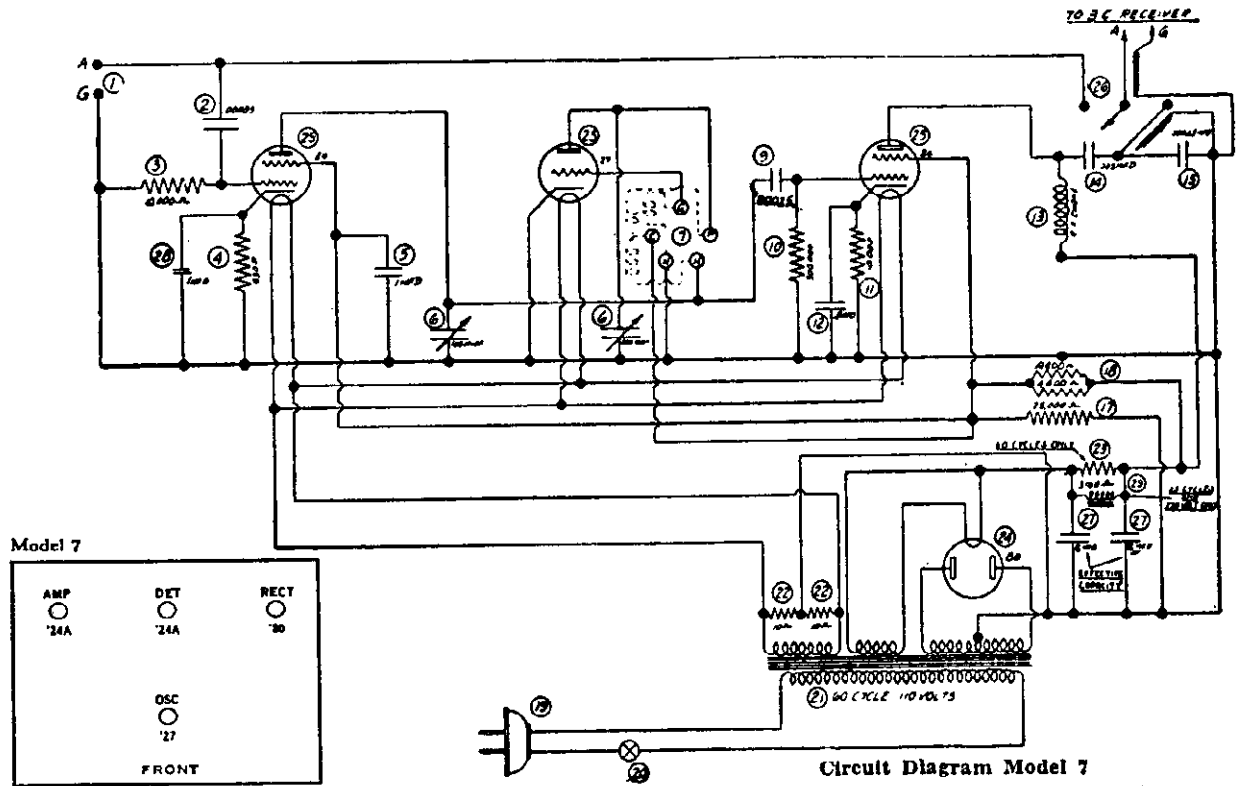

Circuit Diagram Model 7

This is a chassis for attaching to any broadcast receiver in order to adapt the latter to the reception of short-wave signals. It is of the superheterodyne type, the incoming signal being converted to a frequency within the regular broadcast range by the use of an oscillator and detector (see Service Bulletin No. A-1 for an explanation of the superheterodyne receiver).

After conversion to the appropriate frequency the signal is delivered to the aerial and ground terminals of the broadcast receiver.



The chassis incorporates a -24 type, untuned buffer amplifier, a -27 tuned oscillator, a -24 tuned detector, and a -80 rectifier. Various frequency ranges are obtainable by the use of suitable coils, as explained in the instructions accompanying the chassis.

Model 7-1

Model 7-1 is a short-wave converter similar in general operation to Model 7, which has been described previously, but incorporating one less tube and having a tuned antenna circuit.

The tubes are as follows: a -24 first detector, a -27 oscillator, and a -80 rectifier.


Model 7-1

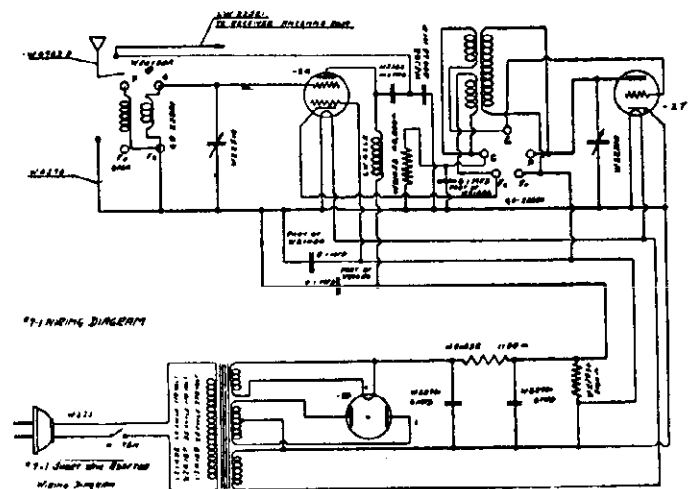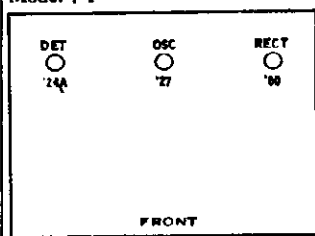

Circuit Diagram, Model 7-1

MODEL 26
Schematic, Voltage
Parts List

CROSLY RADIO CORP.

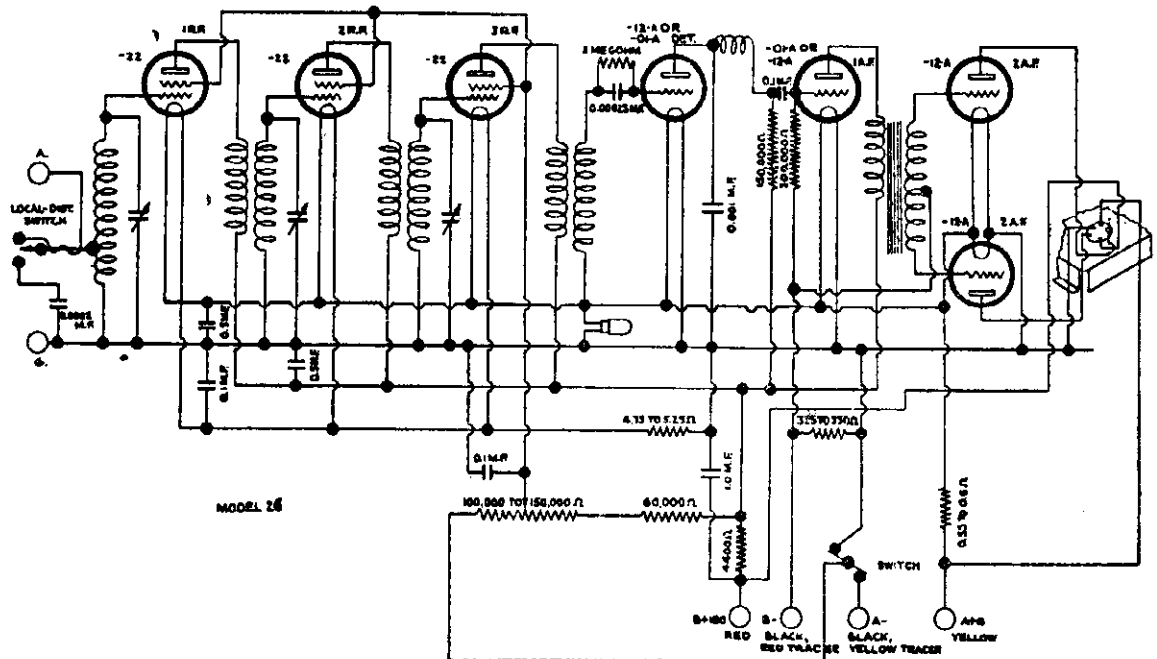

Qty.	Part No.	Description
1	W-4968	.5 Mfd. Fixed Condenser (2 paper)
1	W-0614	R. F. Choke
1	W-7753	.1 - .5 - 1 Mfd. Fixed Cond.
1	W-4013	1. Mfd. Fixed Condenser
1	W-20829	Mounting Strip
1	W-4924	.00025 Mfd. Fixed Condenser
1	W-5468	3 Meg. (Grid Leak) Resistor
1	W-4923	60000 Ohm Resistor (Blue, Orange Spot)
1	W-6754	.001 Mfd. Fixed Condenser
1	W-20829	Mounting Strip
1	W-7150	4400 Ohm Resistor (Yellow, Red Spot)
1	W-5735	150000 Ohm Resistor (Brown, Green, Yellow Spot)
1	W-4362	Plate Choke
1	W-0471	.1 Mfd. Fixed Condenser (2 paper)
1	W-5713	Mounting Strip
1	W-0704	300000 Ohm Resistor, (Brown, Blk., Yellow Spot)
1	W-20090	.55 to .6 Ohm Resistor
1	W-20100	350 Ohm Resistor

Filament Voltages

R. F. tubes	2.4 to 2.7
Detector, 1st Audio, and Output tubes	4.3 to 4.8

Plate Voltages

R. F. and 1st Audio tubes	-120 to 130
Detector tube	110 to 120
Output tubes	150 to 160

Control Grid Voltages


R. F. tubes	1.6 to 2.0
Detector tube	4.3 to 4.6
1st Audio and Output Tubes	4.3 to 4.6

Screen Grid Voltages

R. F. tubes	48 to 55
-------------	----------


The above voltages are to be measured with the speaker connected

Models 26H, 26J, 26K

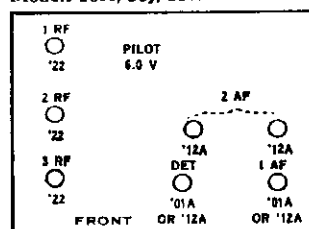

CROSLLEY RADIO CORP.

MODEL 28, 27
Schematic, Voltage
Notes

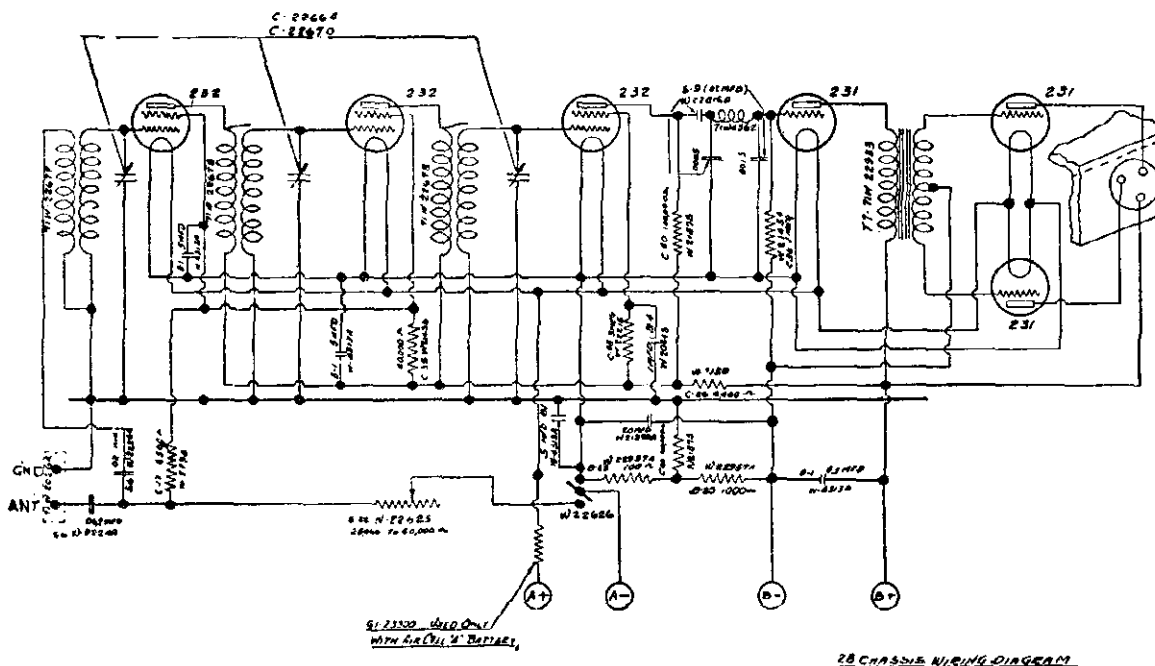

-Circuit Diagram, Model 28.

Specifications

Models 27 and 28 are battery receivers identical in circuit and electrical design but differing in mechanical construction. They are six tube receivers, incorporating two -32 r. f. amplifiers, a -32 detector, a -31 intermediate audio amplifier, and -31 push-pull output tubes.

The batteries used are a 2 volt Eveready Air Cell or 2 volt storage battery, and four 45 volt "B" batteries.

Installation Notes


An aerial of moderate size will usually be satisfactory.

There is a battery resistor in the "A" battery cable. This should be removed if a storage battery is used instead of the 2 volt Air Cell.

The color code of the battery cable is as follows: Red lead (B+ 180 volts): to +45 terminal of fourth 45 volt "B" battery. Black lead with red tracer (B-): to minus terminal of first 45 volt "B" battery. Black lead with yellow tracer (A-): to minus terminal of Eveready Air Cell or 2 volt storage battery. Yellow lead (A+2 volts): to plus terminal of Air Cell or 2 volt storage battery.

When installing the receiver, check the tubes to see that they are inserted in their proper sockets, and make sure that the clip wires are connected to the clips of the screen grid tubes.

Model 28

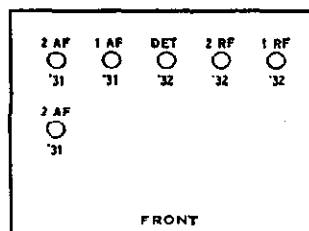

Filament Voltages	
All tubes	1.8 to 2.0
Plate Voltages	
R. F. tubes	120 to 140
Detector tube	50 to 65
First A. F. tube	125 to 160
Output tubes	130 to 160
Control Grid Voltages	
R. F. and detector tubes	2 to 3.5
First A. F. and output tubes	20 to 28
Screen Grid Voltages	
R. F. tubes	55 to 70
Detector tubes	15 to 22
Plate Current	
R. F. tubes	0.0022 to 0.0025
First A. F.	0.005 to 0.0065
Output tubes	0.007 to 0.0085
Screen Grid Current	
R. F. tubes	0.00055 to 0.0007

MODEL 59 AC
Voltage, Notes
Parts List

CROSLEY RADIO CORP.

MODEL 59 AC

Voltage Limits

Filament Voltages	
All tubes but rectifier	2.3 to 2.4
Rectifier tube	4.5 to 4.9
Plate Voltages	
R. F. Amplifiers	240 to 280
Detector	160 to 190
Output	230 to 270
Rectifier (A. C. voltage)	290 to 330 each plate
Screen Grid Voltages	
R. F. Amplifiers	55 to 65
Detector	125 to 155
Control Grid Voltages	
R. F. Amplifiers	2.5 to 3.5
Detector	11.0 to 13.0
Output tube	50 to 64

To be measured with speaker connected, volume control on full, and line voltage of 117½ (235 for 220 volt receivers). Measure plate and grid voltages with a high-resistance D. C. voltmeter (800 ohms or more per volt) from plate or grid tube contact to emitter contact. Use a low range A. C. meter for filament voltages.

Specifications

Model 59 is a compact, tuned radio-frequency receiver for operation from 110 volt and 220 volt A. C. house-lighting circuits. It is supplied in several cabinet styles in conjunction with Model 299 dynamic speaker.

The ends of the high-voltage secondary are connected to the plates of the rectifier tube, and the middle tap on it is connected to the negative side of the loudspeaker field ("B-"), and through one megohm and 300,000 ohm resistors to ground. The other side of the speaker field ("G") is connected to ground (chassis).

The positive plate supply circuit originates at the rectifier filament. One branch goes to the "B+" speaker terminal, whence it continues through the primary of the speaker output transformer to speaker terminal "P", and thence to the plate of the pentode tube.

A second branch of the B+ circuit goes through a 1100 ohm resistor to the screen grid of the pentode tube, and to the plates and screen grids of the other tubes. It is connected through a 300,000 ohm detector plate coupling resistor to the plate of the detector tube, through the primaries of the second and third radio-frequency transformers to the plates of the r. f. tubes, through a 100,000 ohm resistor to the screen grids of the r. f. tubes, a branch of the circuit returning to the r. f. cathodes through a 300,000 ohm resistor and through an additional resistor of 3 megohms to the screen grid of the detector tube.

The speaker field coil, in connection with two filter condensers—one (effective capacity 6 m. f.) of which is shunted across the speaker field and the other (effective capacity 12 m. f.) of which is connected from B+ to ground—acts as a filter circuit, eliminating hum.


Biasing of the r. f. tubes is accomplished by the volume control resistor. Adjustment of the volume control simultaneously varies the bias of the r. f. tubes and the value of a resistor shunted across the primary of the antenna coil. A 40,000 ohm biasing resistor is used in the detector emitter circuit. Biasing of the audio tube is accomplished by returning the audio grid to the negative side of the 300,000 ohm resistor in the B- circuit, connected to chassis.

Qty.	Part No.	Description	List Price	Qty.	Part No.	Description	List Price
1	D-22669A	Chassis	\$.75	1	W-22329	Dial Light Bracket Assembly Less Lamp25
4	W-7873	Socket (5 Prong)30	1	W-22410	Switch75
1	W-7871	Socket (4 Prong)25	1	W-23117	Volume Control	1.25
1	W-21207	Socket Guide (280)10	1	B-22929	Tube Shield Assembly25
1	W-22818	Socket Guide (Pen.)10	PARTS UNDER CHASSIS			
1	W-22919	Socket Guide (224)10	1	W-22995	.5 - .1 Mfd. Fixed Condenser	1.00
2	W-21820	Socket Guide (285)10	1	W-22677	R. F. Transformer (Ant)	1.50
1	W-22413	Power Trans. 110 V. 60 Cy.	6.00	2	W-22678	R. F. Transformer (Int.)	1.50
1	W-22666	Power Trans. 110 V. 25 Cy.	6.25	3	W-7358A	R. F. Coil Shields20
1	W-22667	Power Trans. 220 V. 25 Cy.	6.25	1	W-22668	Mounting Plate30
1	W-21489	Mershon Condenser 8 Mfd.	2.50	1	W-21452	Flexible Resistor 1100 Ohms25
1	W-21485	Mershon Condenser Socket25	1	W-23191	.01 Mfd. Fixed Condenser25
1	W-22689A	Mershon Condenser 12 Mfd.	3.50	1	W-21453	Fixed Resistance 40000 Ohms30
1	W-23147	Insulating Washer05	1	W-21454	Fixed Resistance 1 Megohm30
1	W-22684	Tuning Condenser Gang	7.00	1	W-21455	Fixed Resist. 300000 Ohms30
3	W-21973	Grid Connectors25	1	W-4362	R. F. Plate Choke50
CONDENSER DRIVE							
1	W-22685	Pulley25	1	W-22417	Potentiometer 10-10 Ohms15
1	W-22334	Drive Cord (39")25	1	W-22816B	.0015 - .02 - .0005 Mfd. Fixed Condenser75
1	W-22682	Idler Bracket Assem. (top)15	1	W-22412	.1 - .1 - .1 - .1 Mfd. Fix. Con.75
1	W-22683	Idler Br. Assem (lower)15	1	W-21454	Fixed Resistance 1 Megohm30
1	W-22460A	Drive Pulley Bracket10	1	W-21455	Fixed Resist. 300000 Ohms30
1	W-22827	Drive Shaft30	1	W-21875	Fixed Resist. 100000 Ohms30
1	W-22463	Stop Washer05	1	W-21455	Fixed Resist. 300000 Ohms30
1	W-22828	Stop Washer05	1	W-22395	Speaker Socket25
1	W-22681	Idler Bracket Assem. (Ten.)15	1	W-22397	Insulator05
1	W-22684	Spacer05	1	W-20264	Terminal A & G30
1	W-22464B	Spring05	1	W-21466A	Cable & Plug50
1	W-22679	Dial Strip15				



MODEL 59 AC
Schematic
Bottom View

CROSLLEY RADIO CORP.


MODEL 59 AC

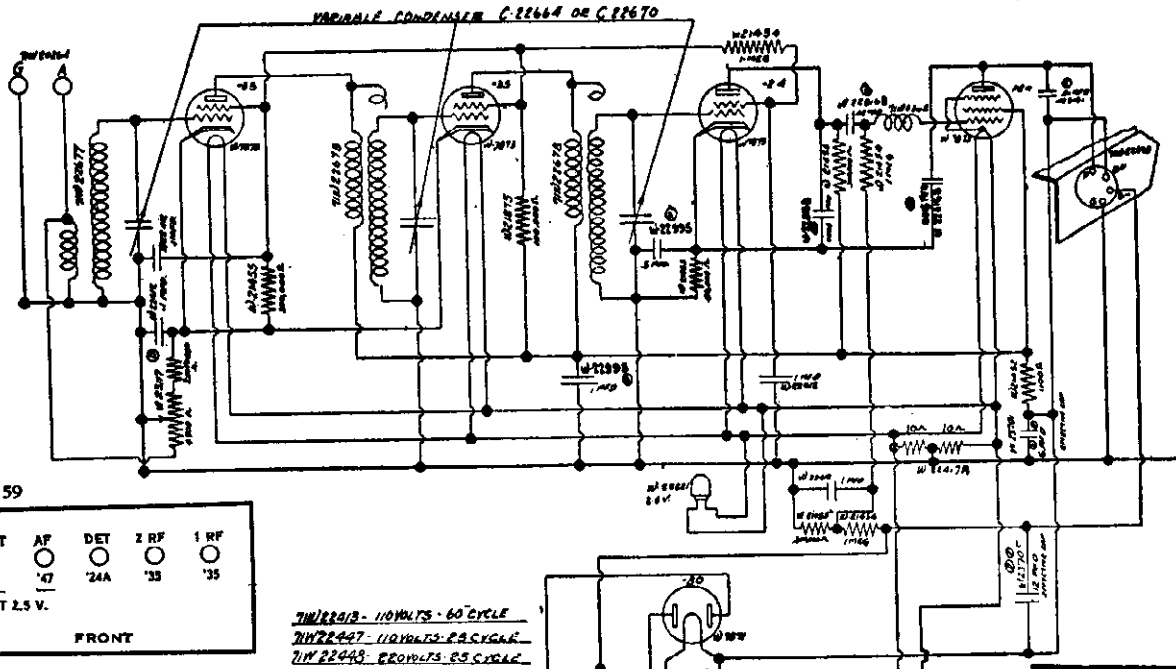

Circuit Diagram, Model 59.

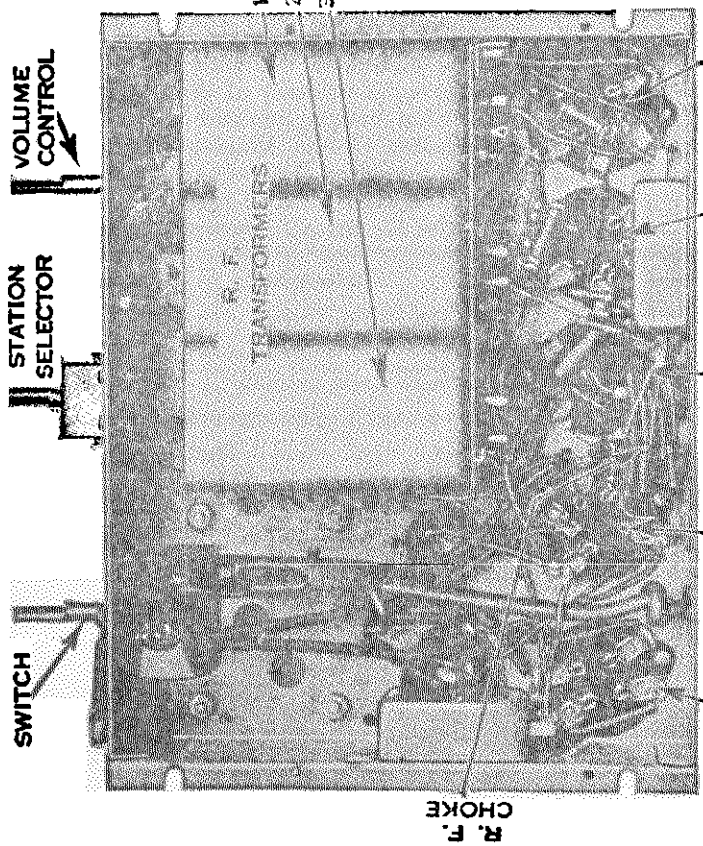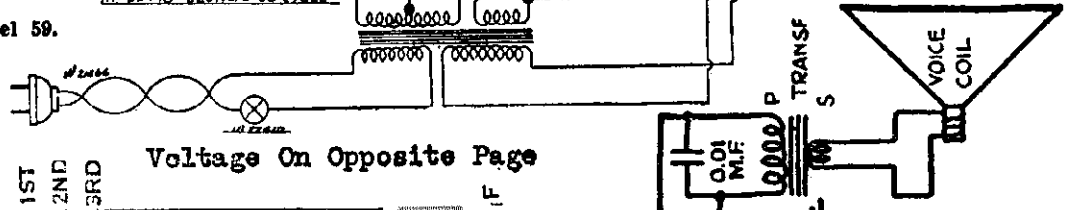


Bottom View Model 59.

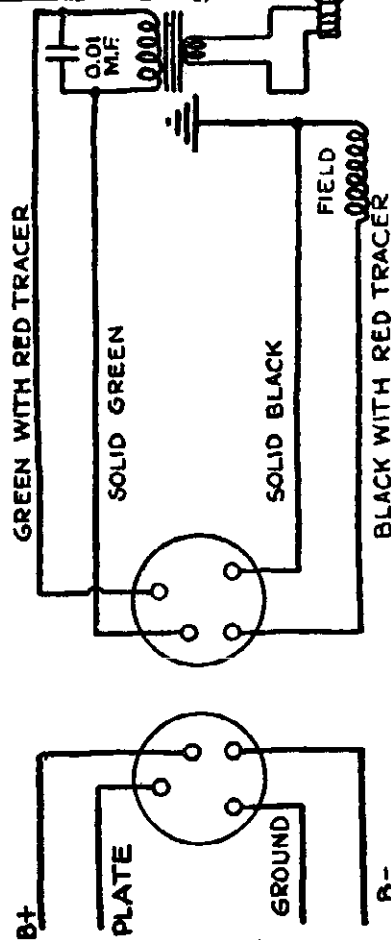


Model 299 Speaker Circuit for Chassis 59.

CROSLY RADIO CORP.


MODEL V
 MODEL 2-Step A-F. AMP.
 Schematic

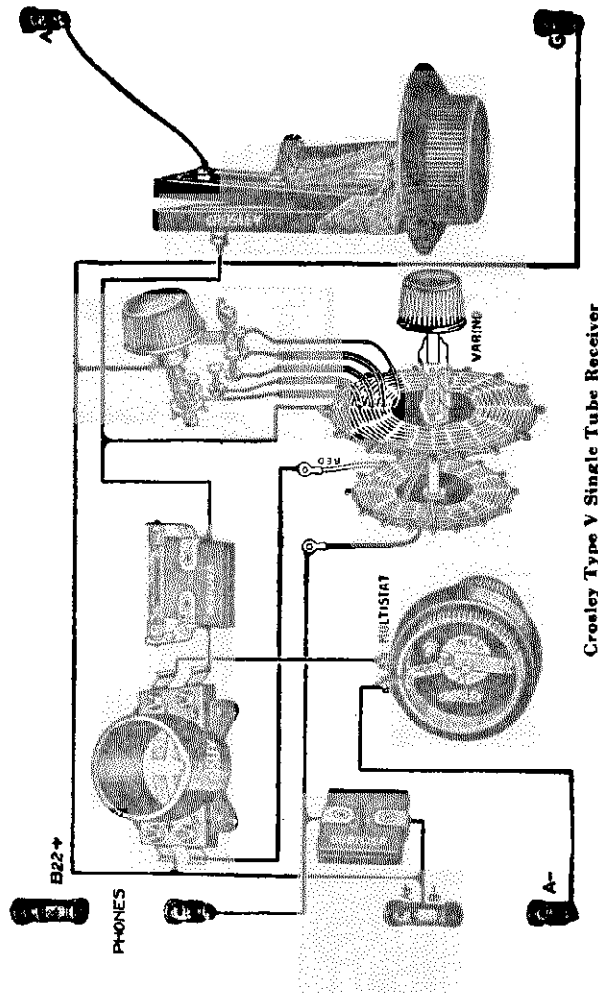


Crosley Type V Single Tube Receiver

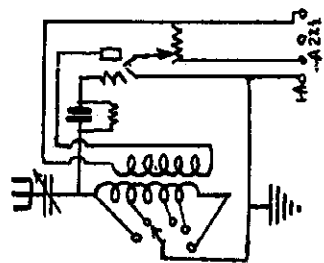

MODEL V

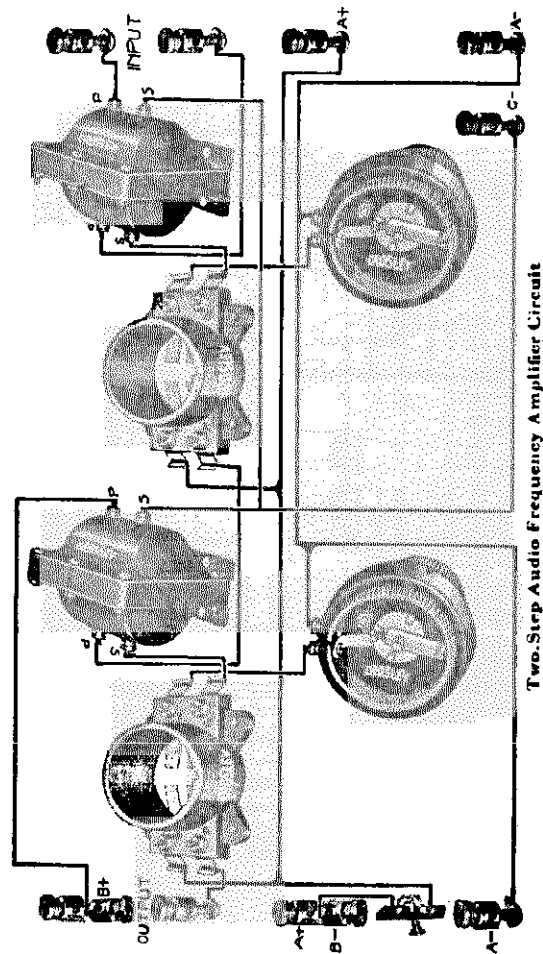


Two-Step Audio Frequency Amplifier Circuit

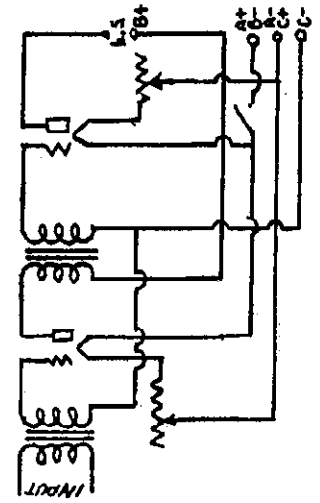

MODEL TWO-STEP A-F. AMPLIFIER

CROSLY RADIO CORP



MODEL 122
Schematic, Voltage

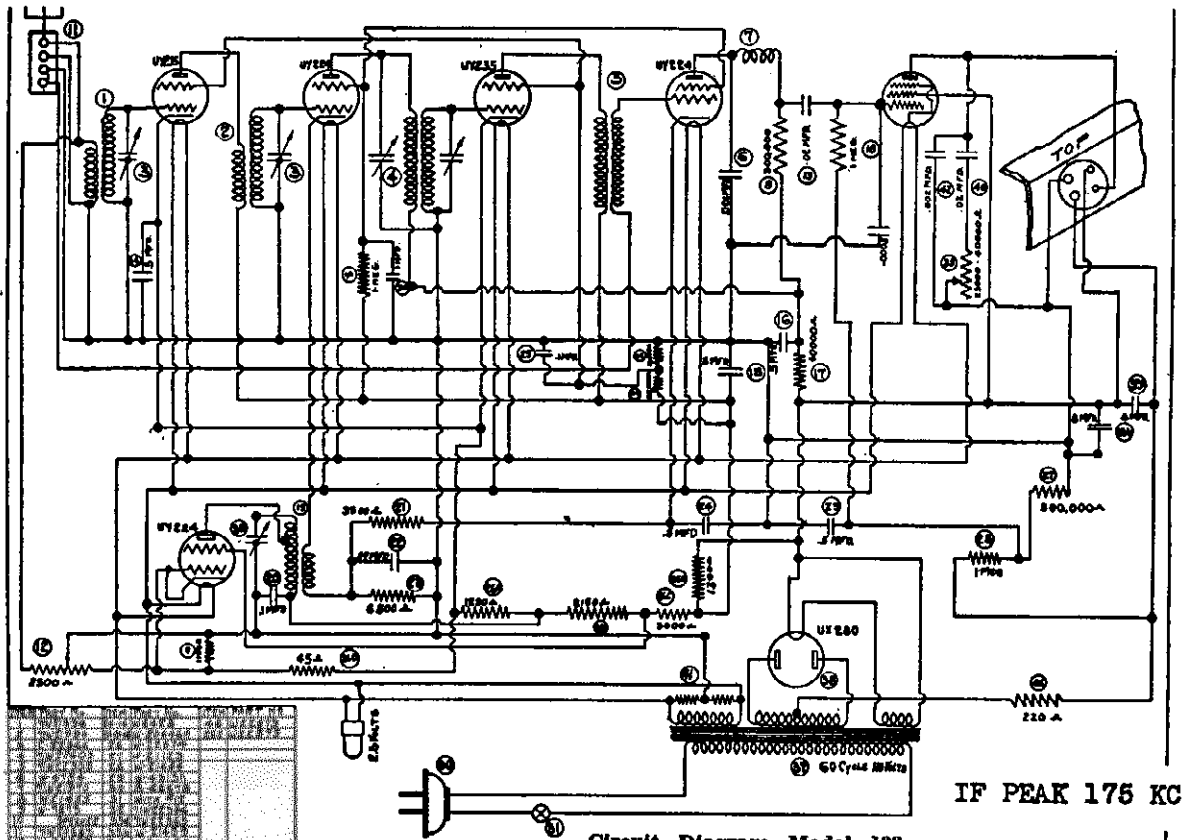

-Circuit Diagram Model 122

NOTE: Item 43 in above parts list should be No. W21876,
Item 44 should be No. W5370, item 26 E should be W82906

Model 122

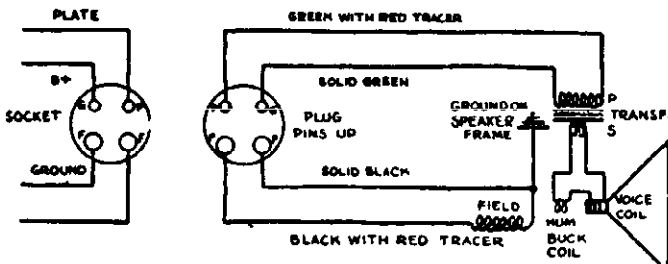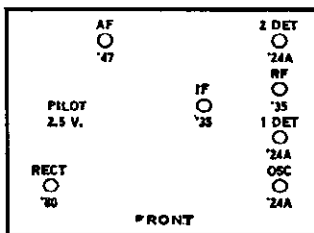

SPEAKERS 297 AND 305-J FOR CHASSIS 122

Filament Voltages

All tubes but rectifier	2.3 to 2.5
Rectifier tube	4.6 to 5.0

Plate Voltages

1st R. F. and Intermediate Amplifiers	170 to 200
Oscillator	28 to 38
1st Detector and 2nd Detector	185 to 215
Output	260 to 300
Rectifier (A. C. voltage)	280 to 320
	each plate

Screen Grid Voltages

1st R. F. and Intermediate Amplifiers	45 to 55
1st Detector and 2nd Detector	60 to 80
Oscillator	80 to 100
Output	260 to 300

Control Grid Voltages


1st R. F. and Intermediate Amplifiers	1.5 to 2.5
1st Detector	6.0 to 8.0
2nd Detector	8.0 to 10.0
Output tube	18.0 to 22.0

To be measured with speaker connected, volume control on full, and line voltage of 117½ (235 for 220 volt receivers).

For Alignment, Changes and Chassis Data see next page

MODELS 122,123,124
Condenser Notes

CROSLLEY RADIO CORP.

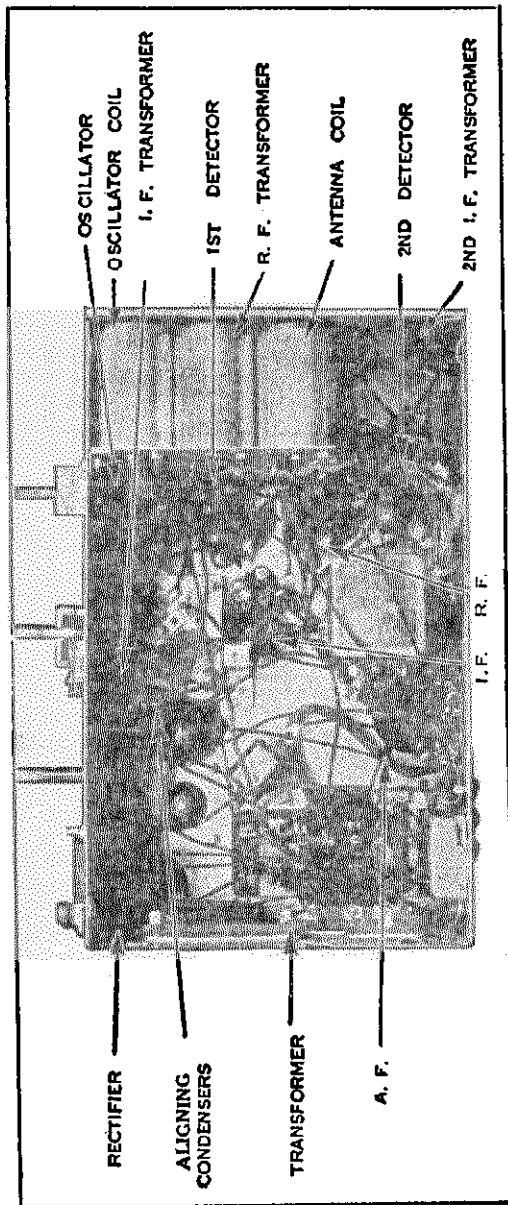

Bottom View, Model 122 Chassis

Changes In Model 122

The following changes as compared with the circuit diagram shown herein will be found in some chassis.

1. The pentode grid resistor is 300,000 ohms instead of 1 megohm as shown on the diagram.
2. The volume control resistor is 650 ohms instead of 2500 ohms, as shown.
3. The 3,000 ohm resistor shown on the diagram just to the left and above the power transformer is changed to 1790 ohms.
4. The 1100 ohm resistor shunted across a portion of the volume control is deleted.
5. The 25,000 ohm resistor in the r. f. screen grid circuit is replaced by a 20,000 ohm resistor.

MODELS 122, 123, 124

Alignment of Tuning Condensers and Intermediate-Frequency Amplifier

The procedure for aligning the tuning condensers is as follows:

1. Tune to a signal between 1300 and 1400 kilocycles.

2. Turn the volume control all of the way on. If all signals within the required range are too loud, connect a 0.00025 m. f. fixed condenser between the "A" and "G" terminals, and then couple the antenna very loosely to a wire connected to the "A" terminal.

3. If, when carefully tuned to the middle of the band, the dial reading does not correspond to the frequency of the signal, but is not more than two channels off, set the dial at the correct frequency, and adjust the padding condenser on the oscillator tuning condenser. (the tuning condenser nearest the front of the chassis) until the signal is loudest. Check the tuning by re-adjusting the station selector. It may not be possible to regulate the oscillator padding condenser so that the oscillator condenser is properly aligned with the exact dial setting, in which case align the padding condenser with a dial setting as close to the actual frequency as practicable.

4. After aligning the oscillator padding condenser, re-tune to a frequency between 1300 and 1400 kilocycles and carefully adjust the padding condensers on the other two tuning condensers until the signal is received with greatest volume.

Aligning Intermediate Frequency Stages

The primary and secondary circuits of the intermediate amplifier transformer must be tuned accurately to 175 kilocycles. They are aligned carefully at the factory, and no change should be necessary. In order to align them, an accurately tuned local oscillator operating at 175 kilocycles is essential. The procedure is as follows:

1. A local oscillator tuned accurately to 175 kilocycles frequency is required.

2. Remove the oscillator tube from the chassis. Remove the clip wire from the first detector tube. Connect the test oscillator output from the first detector grid to ground, and adjust the two screws at either side of the front I. F. coil for maximum reading on the output meter. Always re-align the tuning condenser after aligning the I. F. amplifier.


MODEL 125
Schematic
Voltage

CROSLY RADIO CORP.

MODEL 125 SUPERHETERODYNE

Model 125

PEAK FREQ. 175 KC.

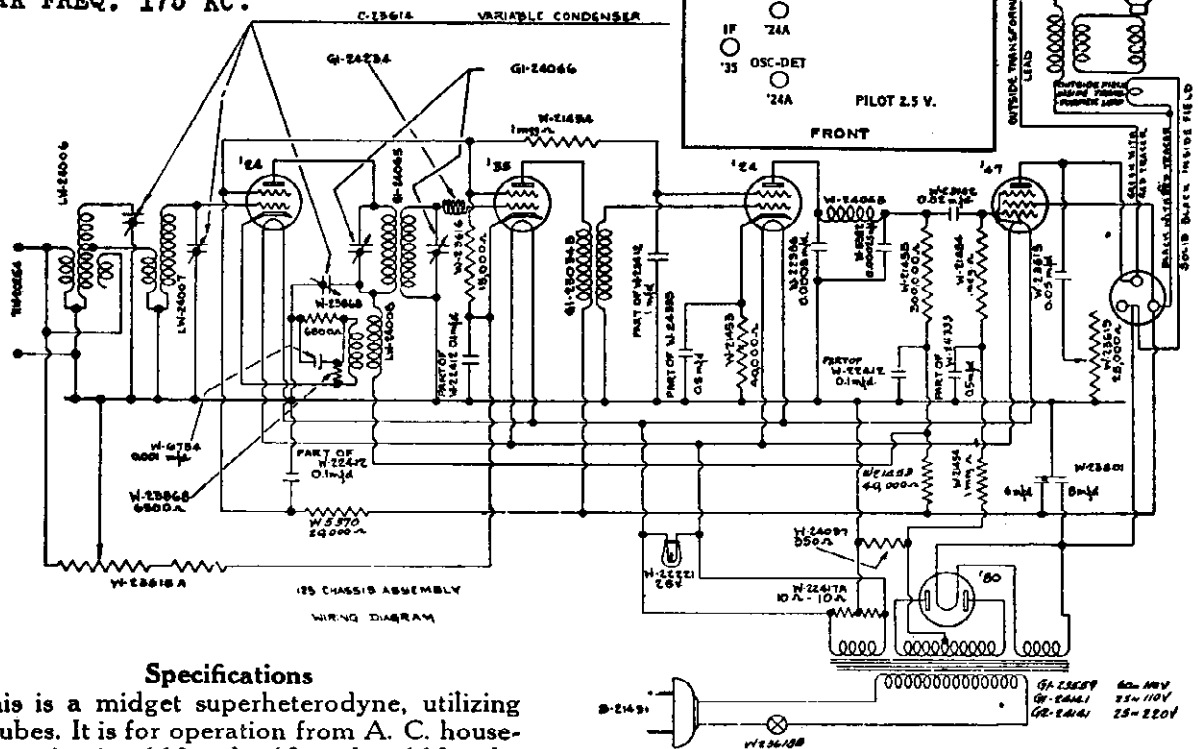

Circuit Diagram, Model 125.

Specifications

This is a midget superheterodyne, utilizing five tubes. It is for operation from A. C. house-lighting circuits, 110 volts 60 cycles, 110 volts 25 to 50 cycles, or 220 volts 25 to 60 cycles

Instead of being coupled directly to the antenna-ground system is coupled to the detector-oscillator through a double tuned selector circuit. This increases the selectivity of the circuit.

The first tube acts both as a detector and oscillator. The oscillator circuit is tuned by a variable condenser—one of the three comprising the station selector gang—as shown on the diagram. The other two station selector condensers tune the grid circuit of the detector-oscillator and the pre-selector circuit.

The detector-oscillator is coupled to the intermediate frequency amplifier stage by an I. F. transformer, both primary and secondary of which are tuned to 175 kilocycles by small adjustable condensers shunted across them. These circuits must be tuned accurately to 175 kilocycles for efficient operation. A radio-frequency choke is in the grid circuit of the I. F. tube.

The timing condenser adjustments are made from the top of the chassis through the three holes in the condenser shield; the I. F. transformer adjustments through the holes at the left side of the chassis, near the front, as viewed from the front of the receiver.

Voltage Limits

The following data shows the average voltages which will be obtained when measurements are made on Model 125 Chassis using a voltmeter of 1000 ohms resistance per volt. Some of these voltages do not represent actual voltages present at the tube elements. A typical example of this is the grid voltage of the pentode tube, which is actually about 16 volts, but only shows about 1 volt when measured in this way.

Screen Grid Voltages

- Pentode .200 to 230
- I. F. 75 to 95
- 1st Det. . 75 to 95
- 2nd Det. 15 to 25 (250V scale), 3-8 (50V scale)

Plate Voltages

- Pentode 200 to 230
- I. F. 200 to 230
- 1st Det. .160 to 180
- 2nd Det. 75 to 90 (250V scale), 20-30 (50V scale)

Control Grid Voltages


- Pentode .0.5 to 1.5
- I. F.1.5 to 2.5 (20-30 vol. cont. off)
- 1st Det. .5.5 to 7.5
- 2nd Det. .4.0 to 6.0

Filament Voltages

- All tubes but rectifier2.3 to 2.5
- Rectifier tube4.6 to 5.0

CROSLY RADIO CORP.

MODEL 127
Schematic
Voltage
Notes

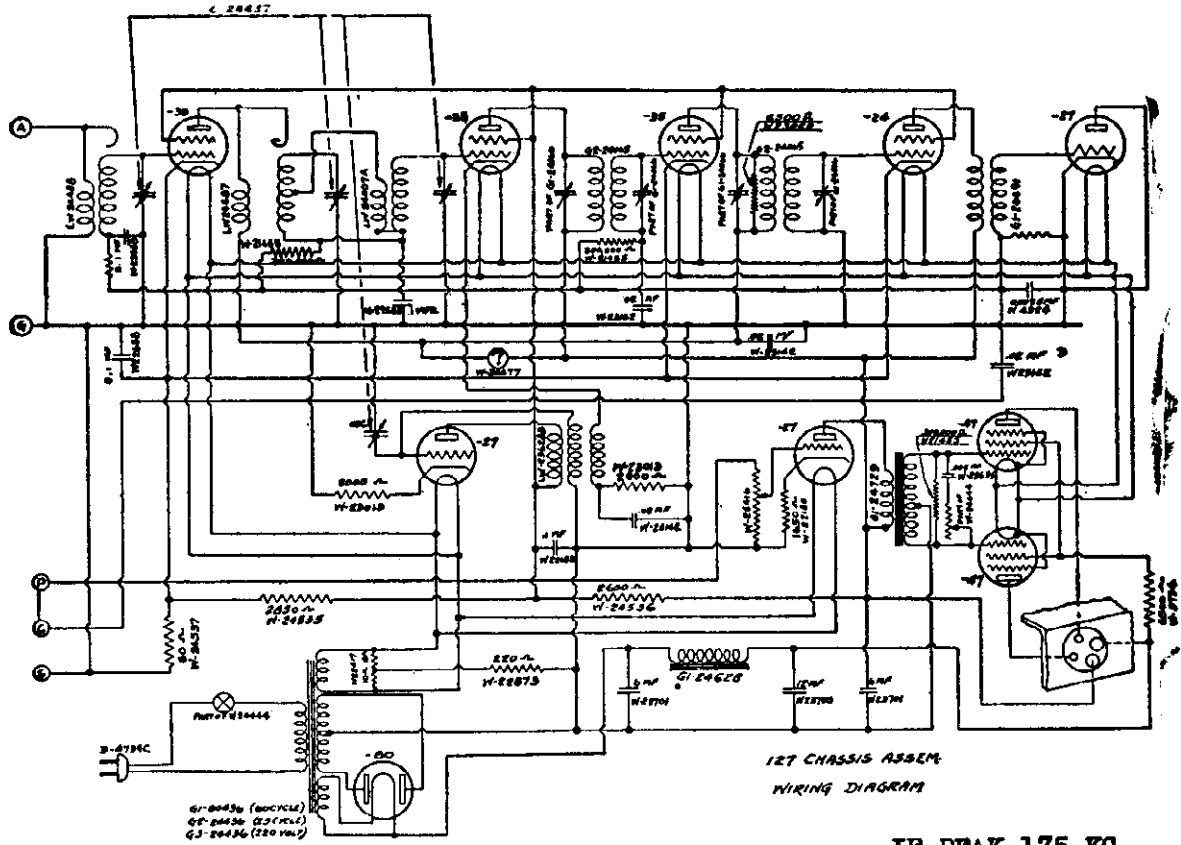

-Circuit Diagram, Model 127.

IF PEAK 175 KC


See Next Page

Voltage Limits

To be measured with tubes in place, speaker connected, and line voltage of 117½ (235 for 220 volt receivers).

Filament Voltages	
All tubes but rectifier	2.3 to 2.5
Rectifier tube	4.6 to 5.0
Plate Voltages	
All tubes but second detector and pentodes	170 to 200
Second detector	0
Pentode output tubes	270 to 300
Screen Grid Voltages	
All screen grid tubes but pentodes	75 to 95
Pentode output tubes	230 to 250
Control Grid Voltages	
R. F. and I. F. amplifiers	2.5 to 3.5
First detector	8 to 10
Oscillator	8 to 12
First A. F. amplifier	8 to 12
Pentode output tubes	14 to 18

Model 127

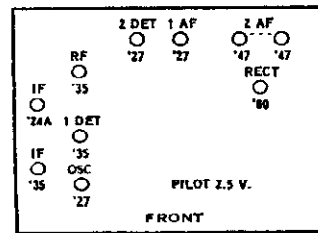

Hum Adjustment

With properly matched output tubes, the hum level of this chassis is very low. The audio transformer shield may be rotated, after loosening the three hold-down screws, and so adjusted that the hum is reduced to a minimum. This adjustment is made at the factory and should not have to be made in the field unless it is necessary in servicing the receiver to loosen or remove the audio transformer shield. If the receiver hums, try other tubes in the output before attempting to adjust the transformer shield.

MODEL 127

Parts Lists

Notes

CROSLLEY RADIO CORP.

60 cycle, or 220 volt 25 to 60 cycle circuits. The tubes used are as follows: a -35 or -51 radio-frequency amplifier, a-35 or -51 first detector (-24 tubes were used for the first detectors in the earlier chassis of this series, a -27 oscillator, a -35 or -51 first intermediate-frequency amplifier, a -24 second intermediate-frequency amplifier, a -27 diode second detector and automatic volume control tube, a -27 audio-frequency amplifier, two PZ or -47 pentode push-pull output tubes, and a -80 rectifier.

When installing the receiver, make sure that the tubes are in their proper sockets as shown on the connection diagram in the instructions, being particularly careful to see that the -24 and -35 or -51 tubes are not interchanged.

Three phonograph terminals, marked "P", "C", and "S", are provided for use with Crosley phonograph pick-ups. Before connecting a phonograph pick-up, cut the wire between terminals "P" and "C". If the phonograph pick-up is later disconnected, these terminals should be wired together again.

The second detector is of the diode type, and acts also as an automatic volume control tube.

The antenna coil and the interstage coil between the R. F. stage and the tuned selector circuit are connected so as to introduce a certain amount of capacity coupling as well as inductive coupling, as in previous Crosley Models.

Audio Coupling

The diode detector is resistance coupled to the first audio tube, the coupling resistor serving as a volume control. From the detector grid, the coupling circuit continues through a 0.02 m. f. coupling condenser to phonograph terminal "C", whence it continues through a strap between terminals "C" and "P", not shown in the diagram, and from terminal "P" to one end of the volume control resistor, the other end of this resistor being grounded. Since the emitter of the second detector is also grounded, this completes the detector circuit.

Type -24 Detector in Early Chassis
Earlier series of this chassis used a -24 type first detector tube. Connections were the same throughout, except in the tuned selector circuits between the R. F. and the first detector. The grid circuit of the first detector was connected directly to the chassis, instead of through the 300,000 ohm isolating resistor and 0.1 m.f. by-pass condenser shown on the diagram. The lower end of the interstage coil secondary, coupled to the R. F. plate circuit, was connected directly to the chassis, instead of to the grid circuit of the second detector as indicated here.

Alignment of Tuning Condensers and Intermediate Frequency Amplifier

To align the tuning condensers, the same procedure should be followed as outlined for Model 122, except that there are three, instead of two, condensers in addition to the oscillator condenser to be aligned.

Follow the procedure outlined in the same bulletin for aligning the intermediate amplifier transformers, adjusting all four aligning condensers, one at a time.

Hum Adjustment

With properly matched output tubes, the hum level of this chassis is very low. The audio transformer shield may be rotated, after loosening the three hold-down screws, and so adjusted that the hum is reduced to a minimum. This adjustment is made at the factory and should not have to be made in the field unless it is necessary in servicing the receiver to loosen or remove the audio transformer shield. If the receiver hums, try other tubes in the output before attempting to adjust the transformer shield.

Specifications

Model 127 is a compact, ten tube super-heterodyne chassis. It is for operation from A. C. house-lighting circuits, and may be obtained for 110 volt 25 to 50 cycle, 110 volt



Parts List—Model 127

Qty.	Parts No.	Description	List Price Each
1	D-2442A	Chassis	.80
1	G1-23800	Four Prong Socket (Spk.)	.15
1	G2-23800	Five Prong Socket (24)	.15
1	G3-23800	Five Prong Socket (27)	.15
1	G4-23800	Five Prong Socket (35)	.15
1	G5-23800	Five Prong Socket (47)	.15
1	G6-23800	Four Prong Socket (80)	.15
1	G1-23829	Cond. Brst. Assy.	.05
1	LW-20266C	Terminal Board (P, C, S)	.15
1	LW-20264D	Terminal Board (A & G)	.10
1	GL-24383	Junction Block	.05
1	LB-24416	R. F. Coil Group Assy.	3.75
1	LW-24488	Antenna Coil Assy.	.60
1	LW-24487	Interstage Coil Assy.	.80
1	LW-23825B	Oscillator Coil Assy.	.75
1	LW-24007A	Coupling Coil Assy.	.75
1	LW-22374	Shield Assy.	.15
1	W-24447	Mounting Plate	.10
1	G2-23823	Variable Condenser	5.50
1	W-22921	Tube Connection Assy.	.05
1	C-24410	Dial Lamp	.15
1	LW-23800	Bottom	.15
1	G1-23880	Light Bracket Assy.	.15
1	G1-23880	Dial Drive Assy.	.15
1	G1-23880	Volume Control & Switch	1.00
1	G1-24439	Cable	.30
1	G2-24439	Power Transformer (60 Cy. 110 V.)	5.00
1	G3-24439	Power Transformer (25 Cy. 110 V.)	0.50
1	LW-22302	Power Transformer (25 Cy. 220 V.)	0.50
1	G2-24065	Tube Shield Assy.	.15
1	G1-24068	I. F. Coil Assy.	.60
1	G1-24101	I. F. Condenser Assy.	.30
1	W-24316	I. F. Coil	.70
1	W-24444	Volume Control & Switch	1.00
1	B-4739C	Cable	.30
1	W-24511	Shield	.05
1	W-24477A	Panel Meter	2.00
1	G1-24028	Filter Choke Assy.	1.25
1	W-24476A	Meter Bracket	.05
1	G1-23729	A. F. Transformer	2.00
1	W-22317	(10-10) Ohms	.15
1	W-22180	1650 Ohms	.25
1	W-22573	220 Ohms	.25
1	W-24537	50 Ohms	.25
1	W-24535	2850 Ohms	.25
1	W-24536	2600 Ohms	.25
1	W-5704	6500 Ohms	.25
1	W-23818	4500 Ohms	.25
1	W-24013	2000 Ohms	.25
1	W-21453	300,000 Ohms	.25
2	W-23101	6 Mfd.	1.00
1	W-22705	12 Mfd.	1.25
1	W-4924	.00025 Mfd.	.25
1	W-23165	.006 Mfd.	.25
1	W-23142	.02 Mfd.	.25
1	W-22988	.1 Mfd.	.25
1	C-24422A	Tube & Cond. Shield	.25
1	LB-24022C	Tennboard Assy.	.15
1	W-22400	Knob	.15
1	W-24536	Knob	.15
1	LC-23884	30M Speaker (Magnavox)	8.50
1	LC-23884	30M Speaker (Jensen)	10.00
1	LC-23884	IQ Cabinet Assembly	8.00
1	L-24401	I. T. Cabinet Assembly	30.50

DEWALD RADIO




MODEL AC 145
MODEL AC 245

Schematic

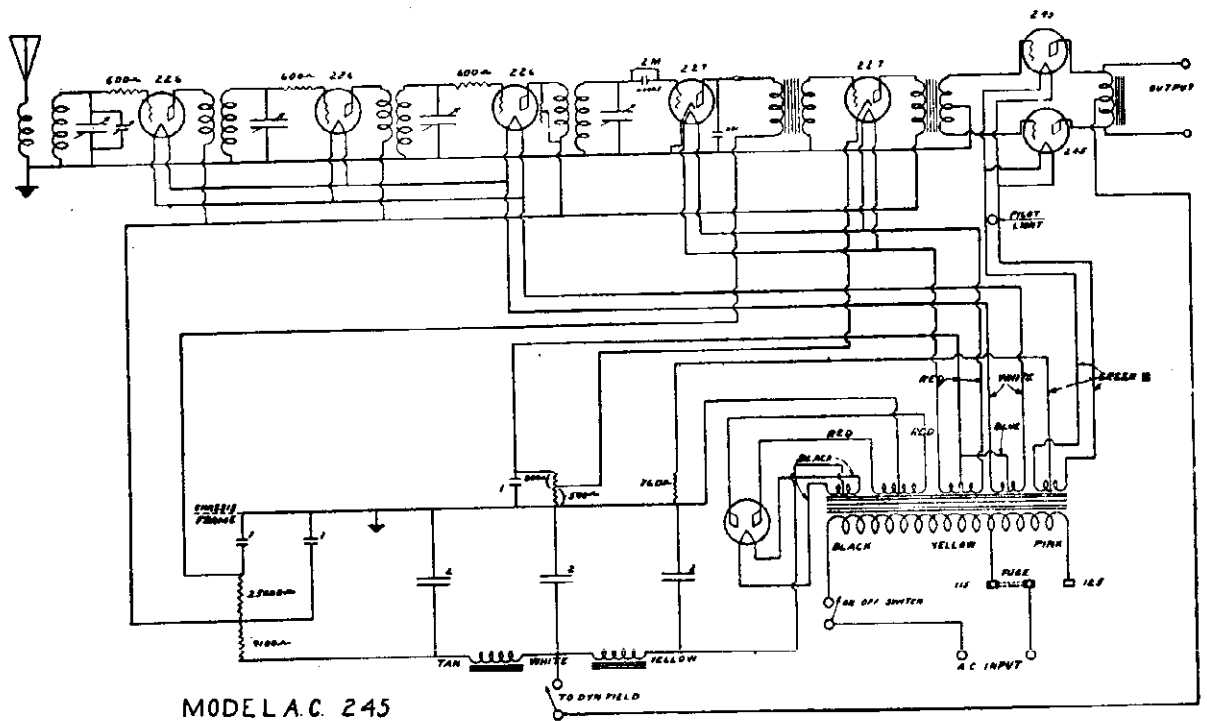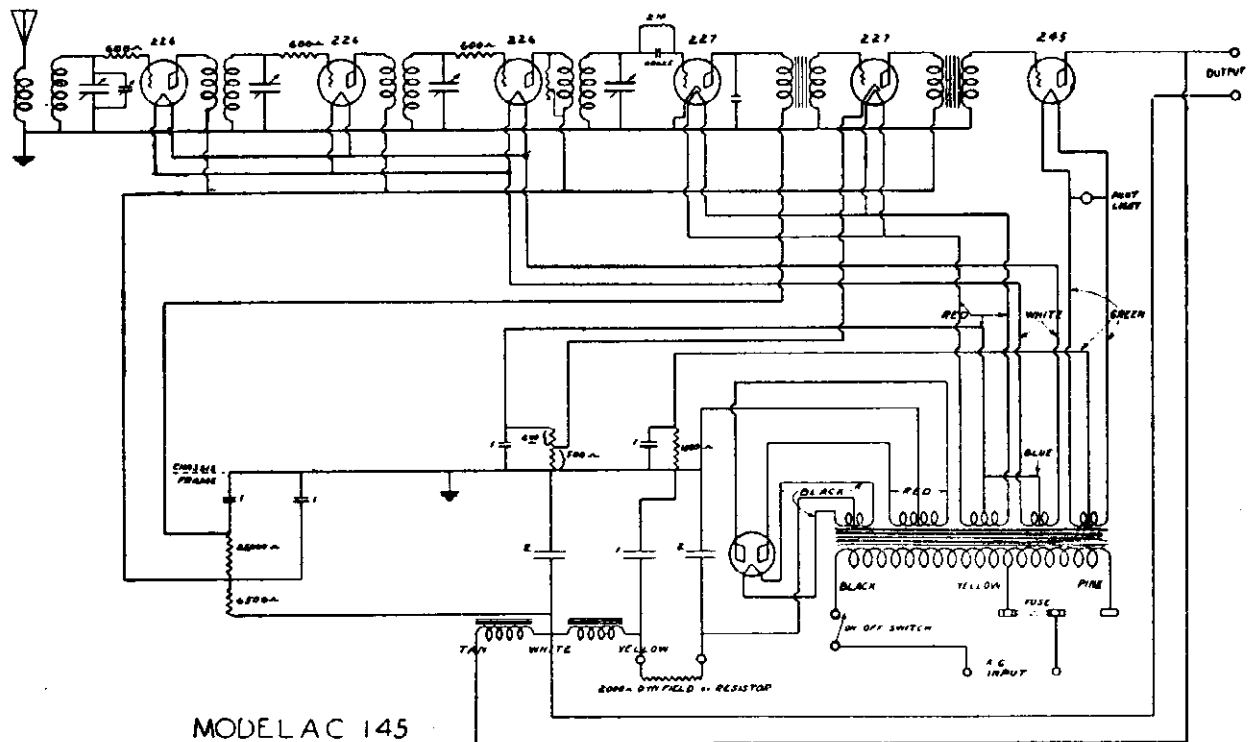

DEWALD RADIO


MODEL AC 171-2
 MODEL DC 173-4
 MODEL DC 273
 Schematic

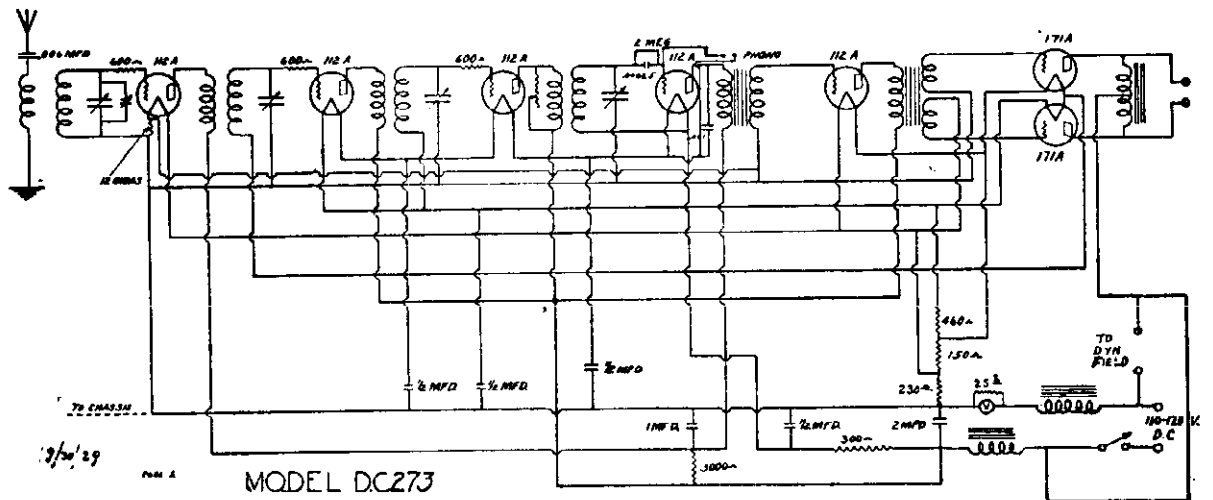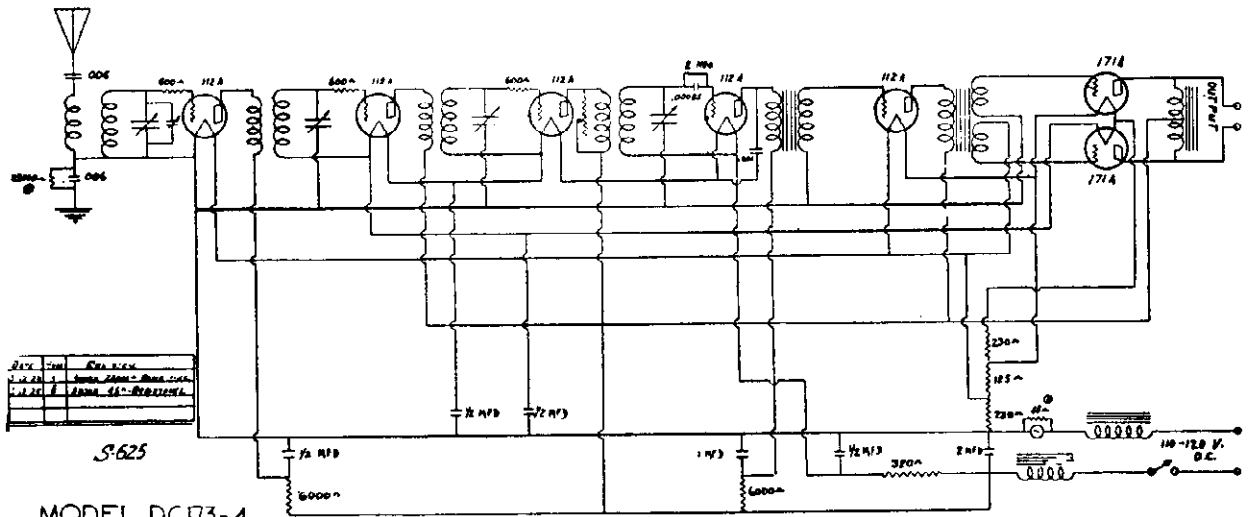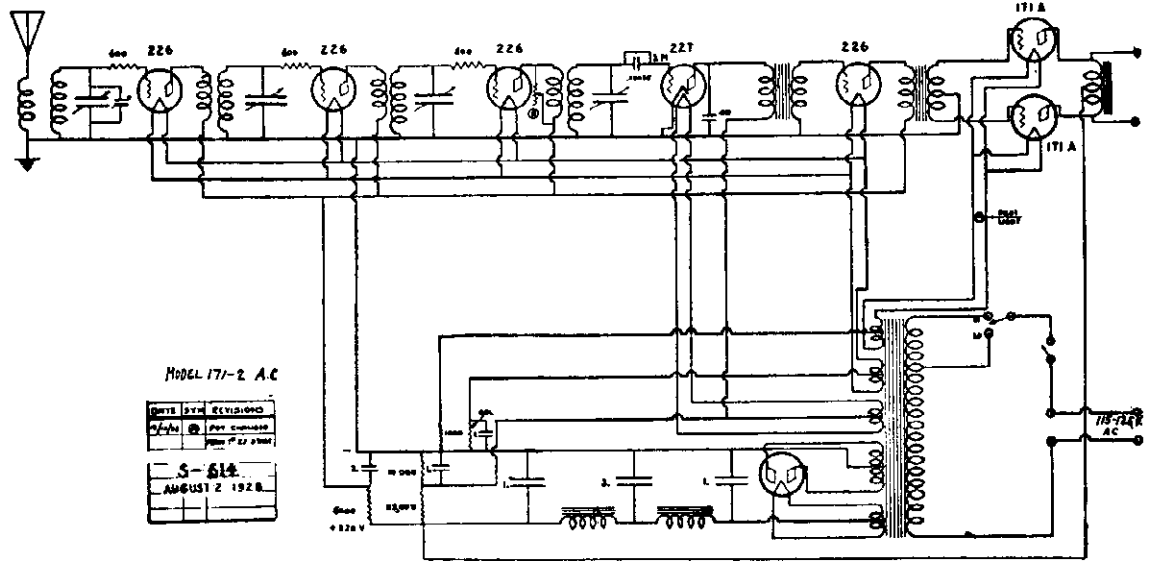

MODEL AC-524



DEWALD RADIO

Schematic

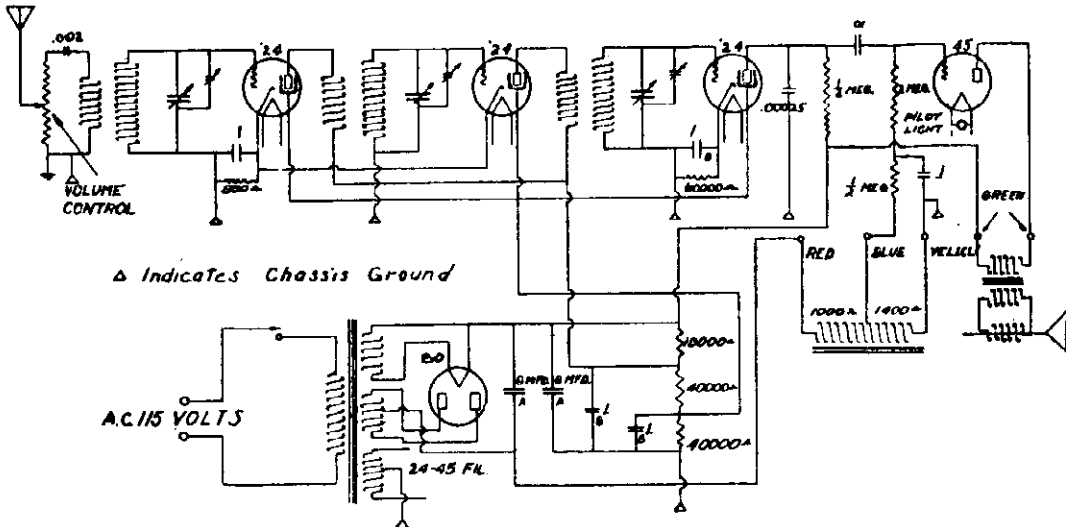

-NOTE-


CONDENSORS MARKED A, B, MFD ARE ELECTROLYTIC
CONDENSORS MARKED B ARE IN FILTER BLOCK

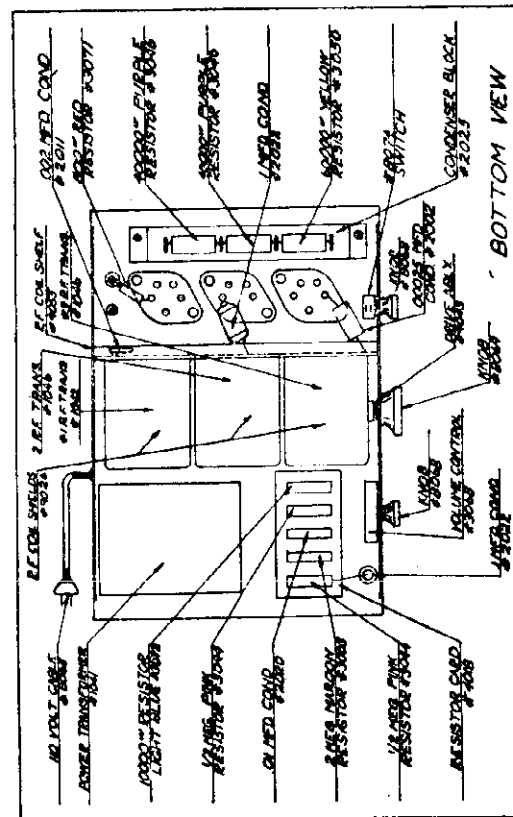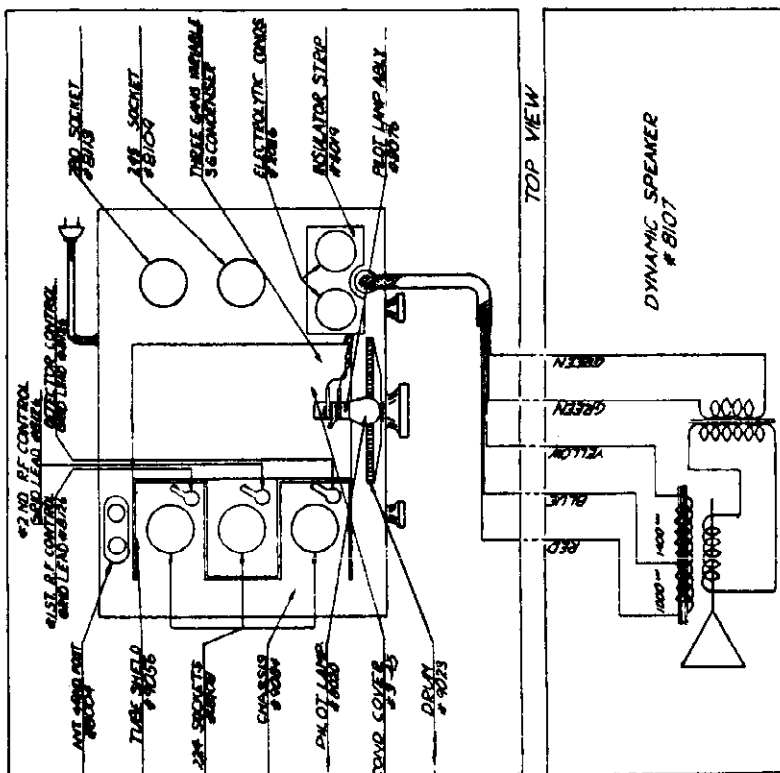

DEWALD RADIO

MODEL AC 724

Schematic


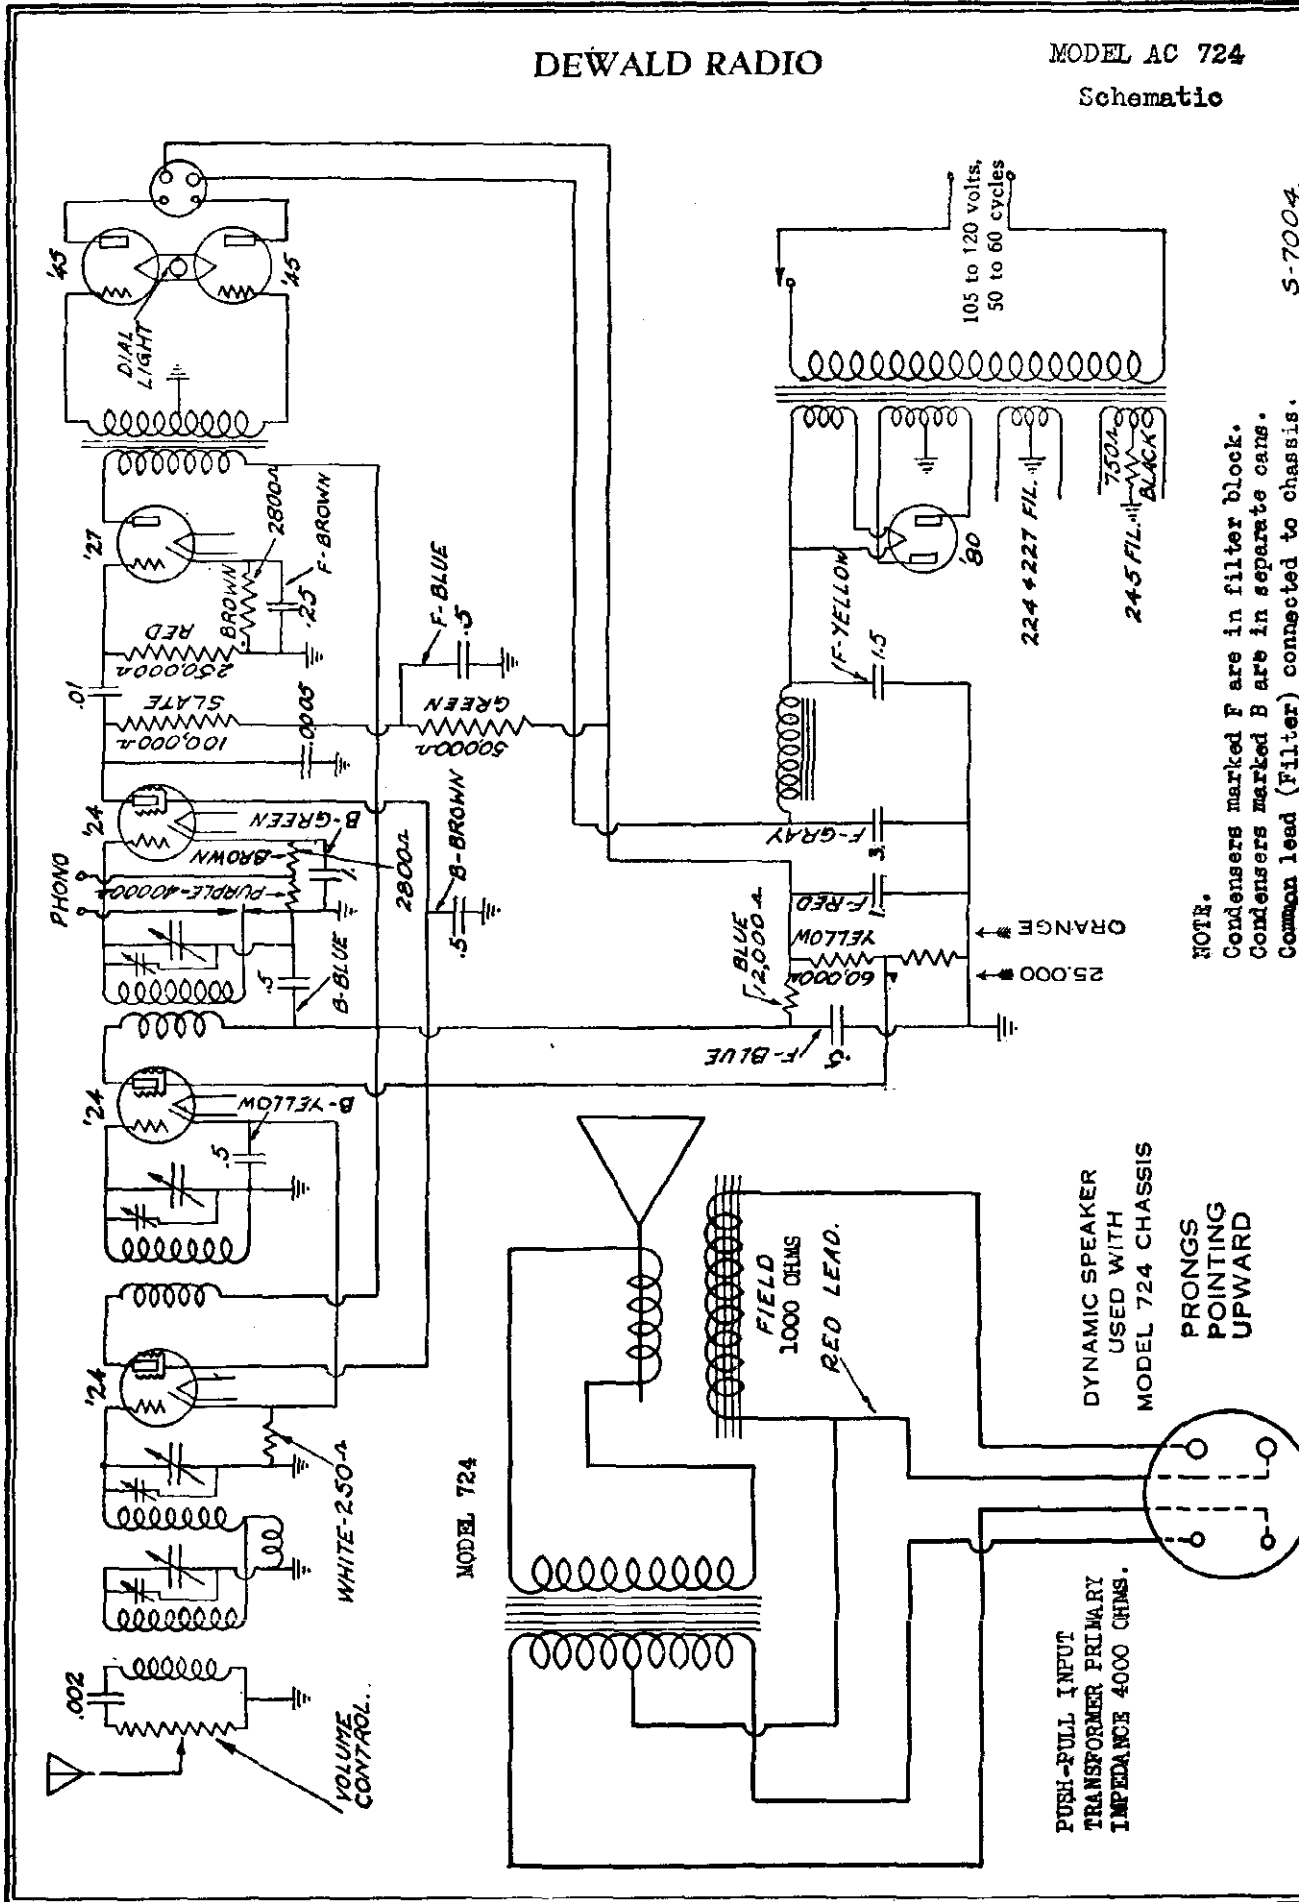


NOTE.
 Condensers marked F are in filter block.
 Condensers marked B are in separate cans.
 Common lead (Filter) connected to chassis.

MODEL AC 724

DEWALD RADIO

Socket Data

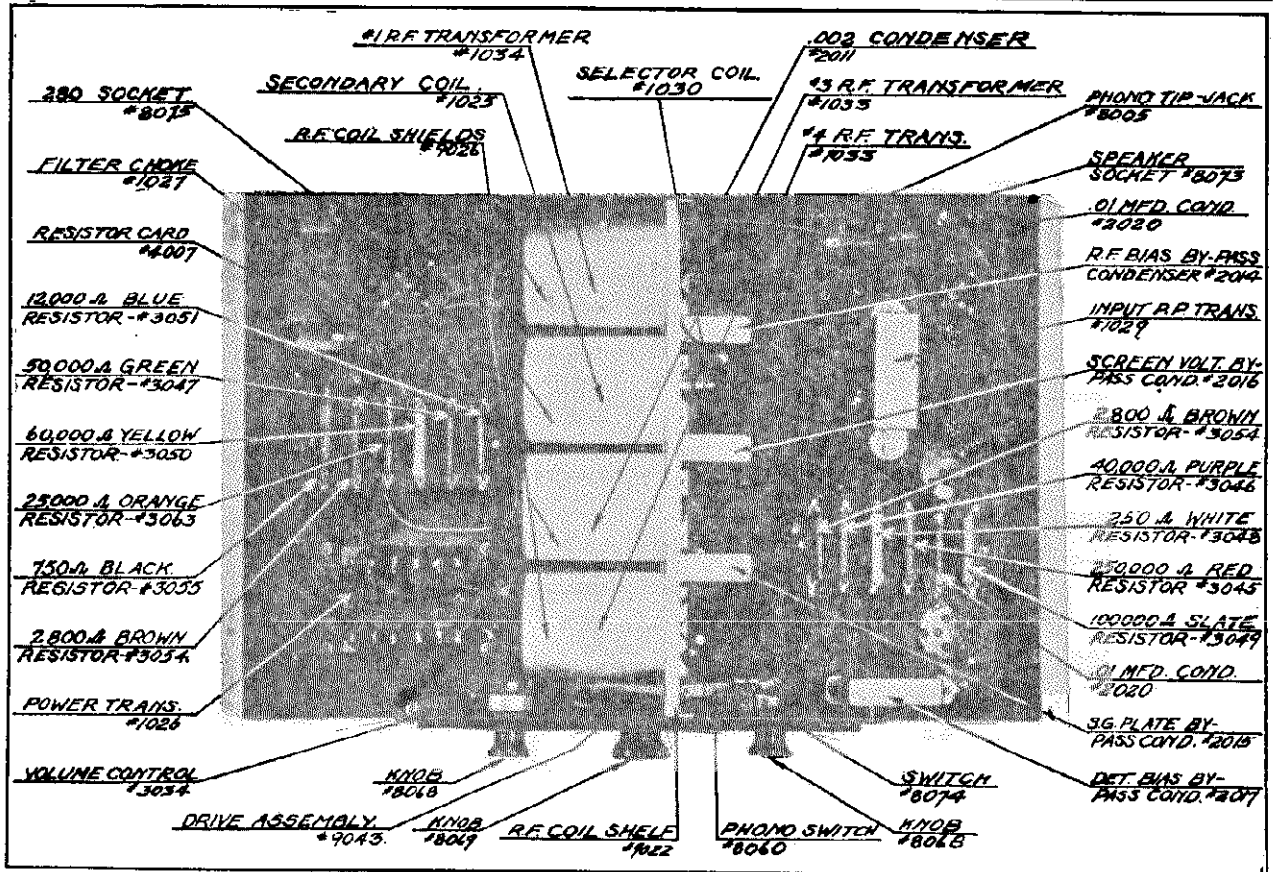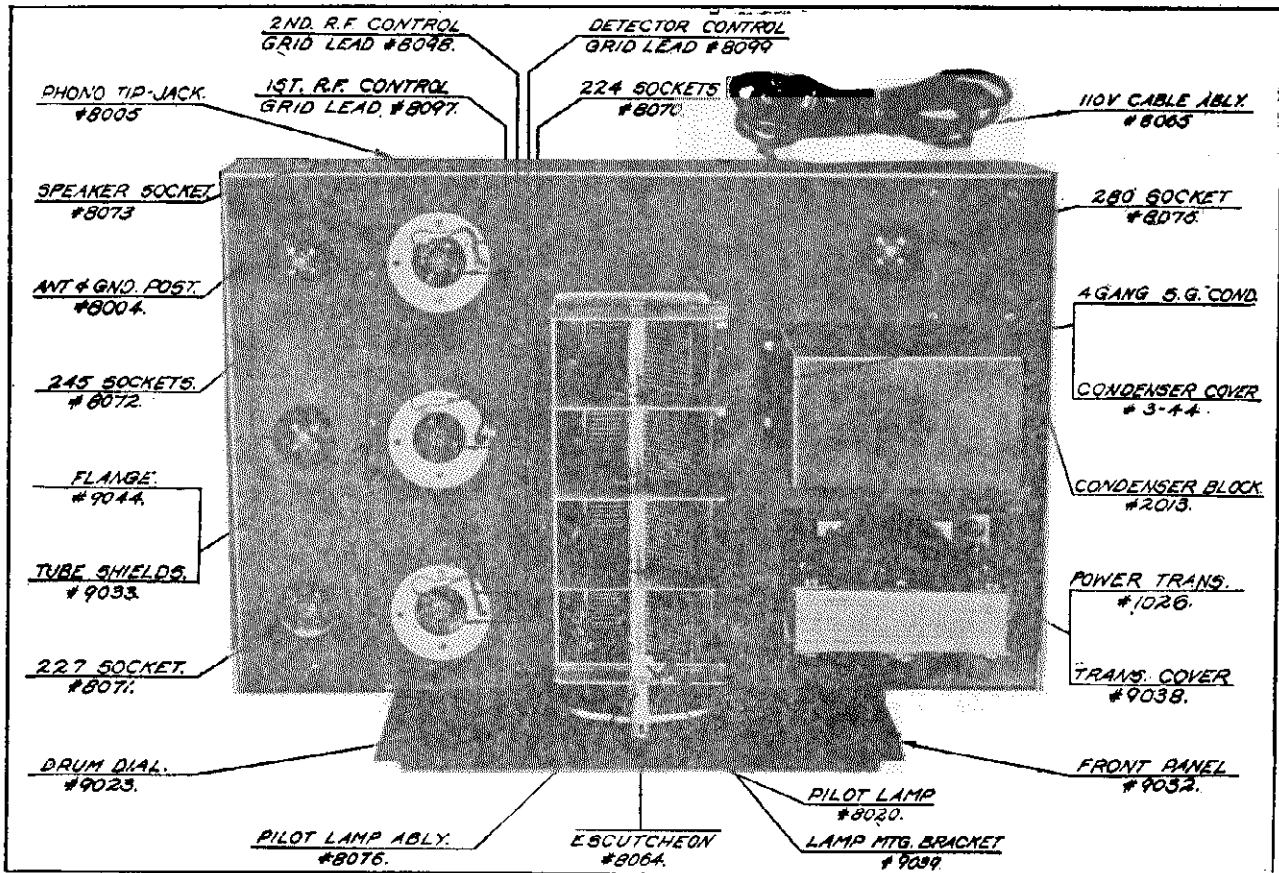

EARL RADIO CORP.

MODEL 21, 22 AC
Data.

PARTS IDENTIFICATION BY COLOR

Resistances:

Large carbon resistances:

Black — 500 Ohms
 Yellow—4700 Ohms
 Green —1000 Ohms

Small carbon resistances:

Yellow—25000 Ohms
 Gray — 2000 Ohms
 Brown—15000 Ohms
 Green —2 Megohms

Condensers:

Moulded bakelite fixed condensers:

These condensers can be identified by a colored spot as follows:

Red spot —.0001 mfd.
 Yellow spot—.00021 mfd.
 Green spot—.00025 mfd.
 Blue spot —.002 mfd.

Bypass condenser:

This condenser is equipped with one terminal lug and one lead, and may be identified by the color of the latter.


Green—0.5 mfd.—200 V.

Filter condenser block:

The individual sections of this condenser block can be identified by the color lead as follows:

Orange—1 mfd.—200 V.,
 Gray—2 mfd.—200 V.,
 Blue—4 mfd.—400 V.,
 Yellow—1 mfd.—400 V. for 60 cycles
 2 mfd.—400 V. for 25 cycles

Red—1 mfd.—400 V.
 Green—0.5 mfd.—200 V.
 Brown—0.1 mfd.—400 V.

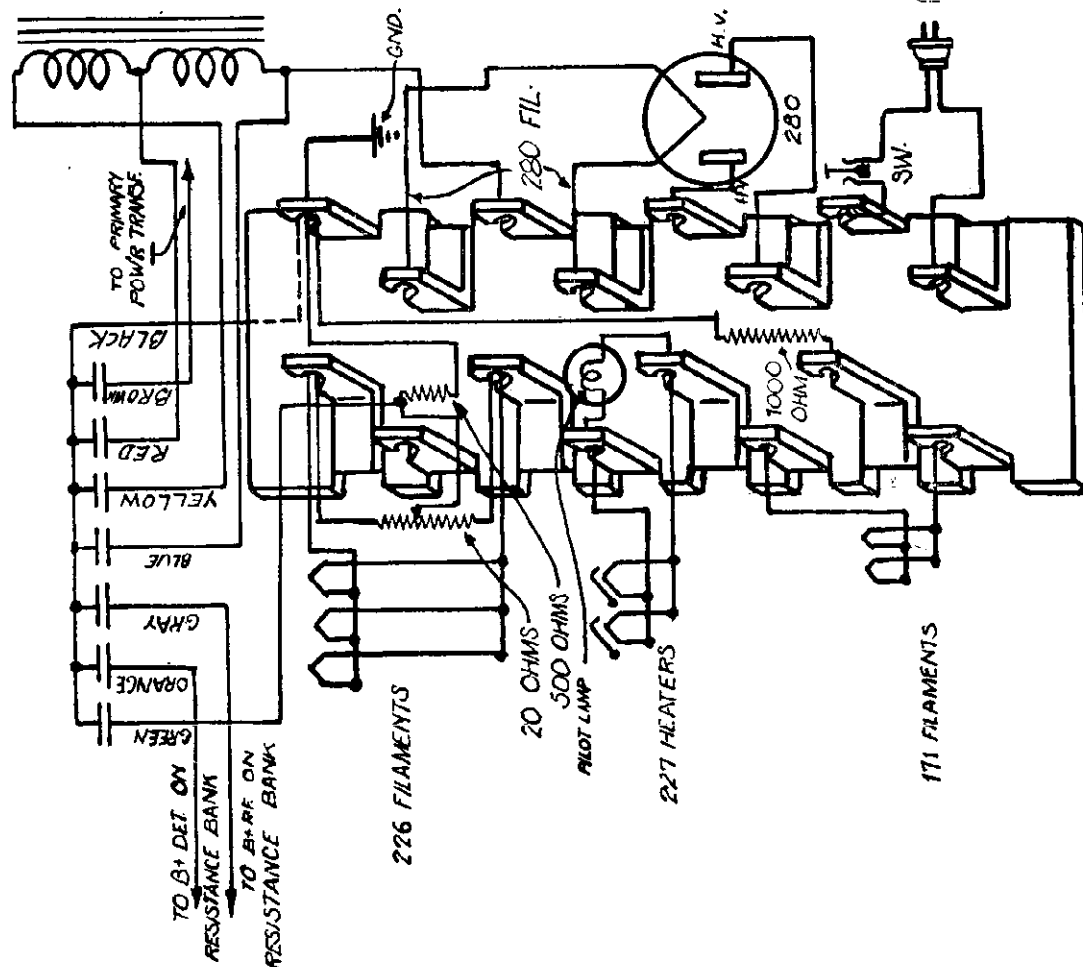

PARTS IDENTIFICATION BY COLOR

Resistances:

Large enameled wire-wound resistances:
Green—4000-750 Ohms
Red —5000 Ohms

Small carbon resistances:
Gray — 2000 Ohms
Brown—15000 Ohms
Yellow—25000 Ohms
Green —2 Megohms
Red — 375 Ohms
Black — 500 Ohms

Condensers:

Moulded bakelite fixed condensers:
These condensers can be identified by a colored spot as follows:
Blue spot —.002 mfd.
Green spot —.00025 mfd.
Red spot —.0001 mfd.
Yellow spot—.00021 mfd.

Bypass condensers:


These condensers are equipped with one terminal lug and one lead, and may be identified by the color of the latter.

Red —0.1 mfd.
Green—0.5 mfd.—200 V.

Filter condenser block:

The individual sections of this condenser block can be identified by the color lead as follows:

Black—Common lead to all sections except 0.1 mfd.
Brown (2 leads)—0.1 mfd.—400 V.
Blue—4 mfd.—400 V.
Green—1 mfd.—600 V. for 60 cycles
2 mfd.—600 V. for 25 cycles
Red —1 mfd.—600 V.
Yellow—1 mfd.—400 V.
Orange—1 mfd.—400 V.

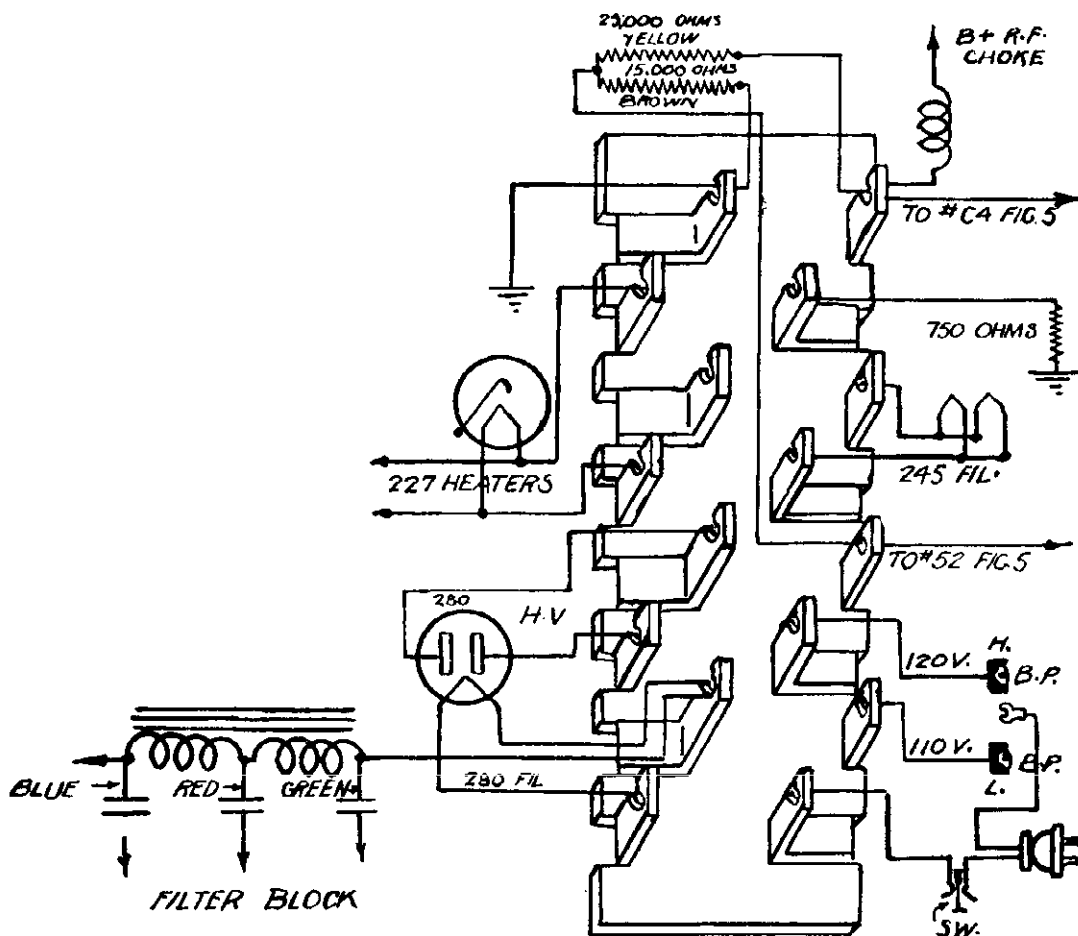

"BOTTOM VIEW"

"POWER TRANSFORMER TERMINAL STRIP"

MODEL 41, 42 AC
Data

EARL RADIO CORP.

PARTS IDENTIFICATION BY COLOR

Resistances:

- Large enameled wire-wound resistances:
 Green—4000-750 Ohms
 Red —5000 Ohms
- Small carbon resistances:
 Gray — 2000 Ohms
 Brown—15000 Ohms
 Yellow—25000 Ohms
 Green —2 Megohms
 Red — 375 Ohms
 Black — 500 Ohms

Condensers:

- Moulded bakelite fixed condensers:
 These condensers can be identified by a colored spot as follows:
 Blue spot —.002 mfd.
 Green spot —.00025 mfd.
 Red spot —.0001 mfd.
 Yellow spot—.00021 mfd.

Bypass condensers:


These condensers are equipped with one terminal lug and one lead, and may be identified by color of the latter.

- Red —0.1 mfd.
 Green—0.5 mfd.—200 V.

Filter condenser block:

The individual sections of this condenser block can be identified by the color lead as follows:

- Black—Common lead to all sections, except 0.1 mfd. section.
 Brown (2 leads)—0.1 mfd.—400 V.
 Blue—4 mfd.—400 V.
 Green—1 mfd.—600 V. for 60 cycles
 2 mfd.—600 V. for 25 cycles
 Red —1 mfd.—600 V.
 Yellow—1 mfd.—400 V.
 Orange—1 mfd.—400 V.

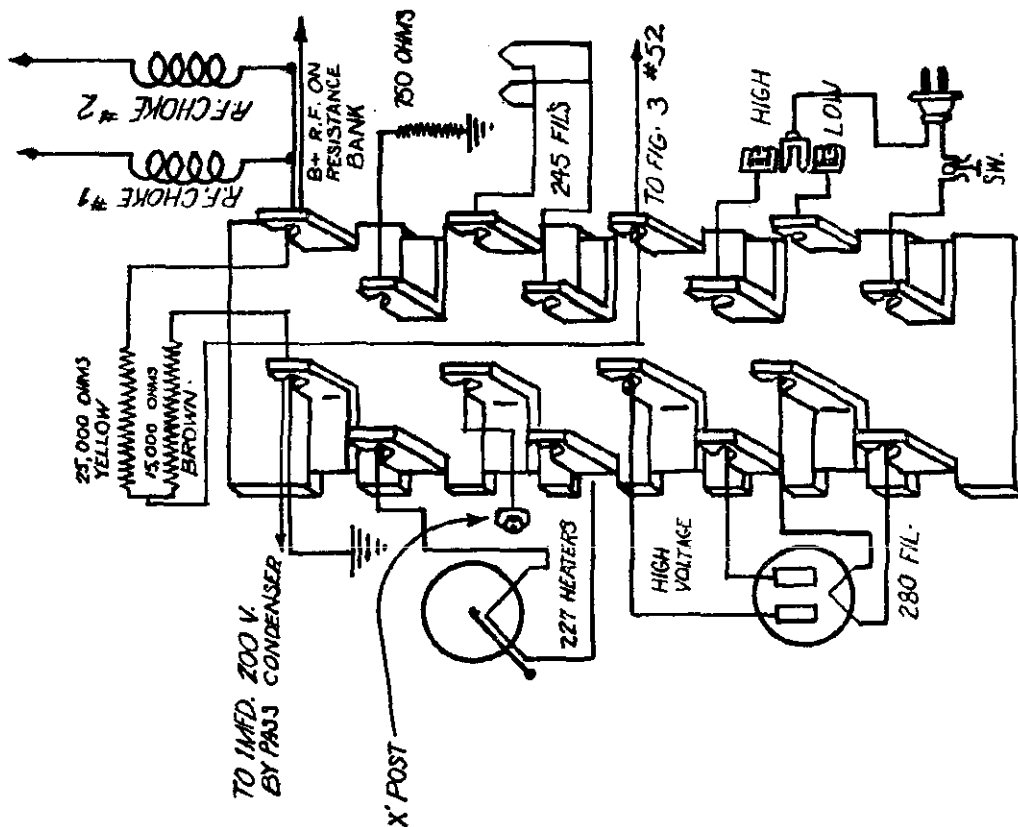

Power Transformer Terminal Strip
 Bottom View

ECHOPHONE RADIO MFG. CO.,

MODEL F
Voltage
MODEL 40
Voltage

Model F

VOLTAGE TESTS

Voltages given are tested on 250 volt scale of 1000 ohms per volt meter.

All voltage tests were made with volume control on full and tone control in off position, no signal in receiver, line voltage 115 volts. Speaker must be connected to receiver.

R. F. Plate		Detector Cathode	
Low	210 volts		3 to 6 volts
Normal	220 "	245 Plate	
High	230 "	Low	210 volts
R. F. Screen		Normal	220 "
Low	75 volts	High	230 "
Normal	80 "	245 Bias	
High	90 "		20 to 40 volts
R. F. Cathode		280 Filament	
	1.5 to 2.5 volts		4.5 to 5.2 volts
Detector Plate		Filaments for all 2.5 Volt Tubes	
Low	55 volts		2.2 to 2.5 volts
Normal	65 "	Speaker Field Voltage Drop	
High	75 "		90 to 110 volts
Detector Screen			
Low	25 volts		
Normal	30 "		
High	35 "		

Model 40 Echoette

VOLTAGE TESTS

All voltages given were tested on 250 volt scale of 1000 ohms per volt meter.

All voltage tests were made with volume on full and no signal in receiver, line voltage 115 volts with A. C. line connected to tap of transformer as shipped from factory.

247 Plate to ground
280 to 250 volts

R. F. Plate to ground
240 to 260 volts

247 Screen to ground
240 to 260 volts

R. F. Screen to ground
70 to 85 volts

247 Grid to ground
6 to 8 volts

R. F. Bias—Cathode to ground
2.5 to 3.5 volts

Det. Plate to ground
25 to 35 volts

Filament All 2.5 volt tubes
2.4 to 2.6

Det. Screen to ground
30 to 40 volts

Filament 280 tube
4.8 to 5 volts

Det. Bias cathode to ground
7 to 9 volts


R. F. Cathode volume control in off position
40 to 50 volts

Voltage across speaker field
90 to 110 volts.


MODEL F
Schematic

ECHOPHONE RADIO MFG. CO.

Model F (1931)

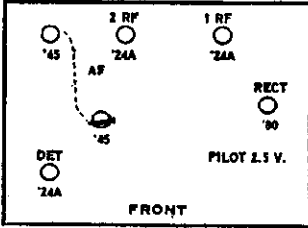

The bias for the 45 tubes is obtained through a one megohm resistor connected to the midpoint of the two resistors across the dynamic speaker field which is in the negative lead.

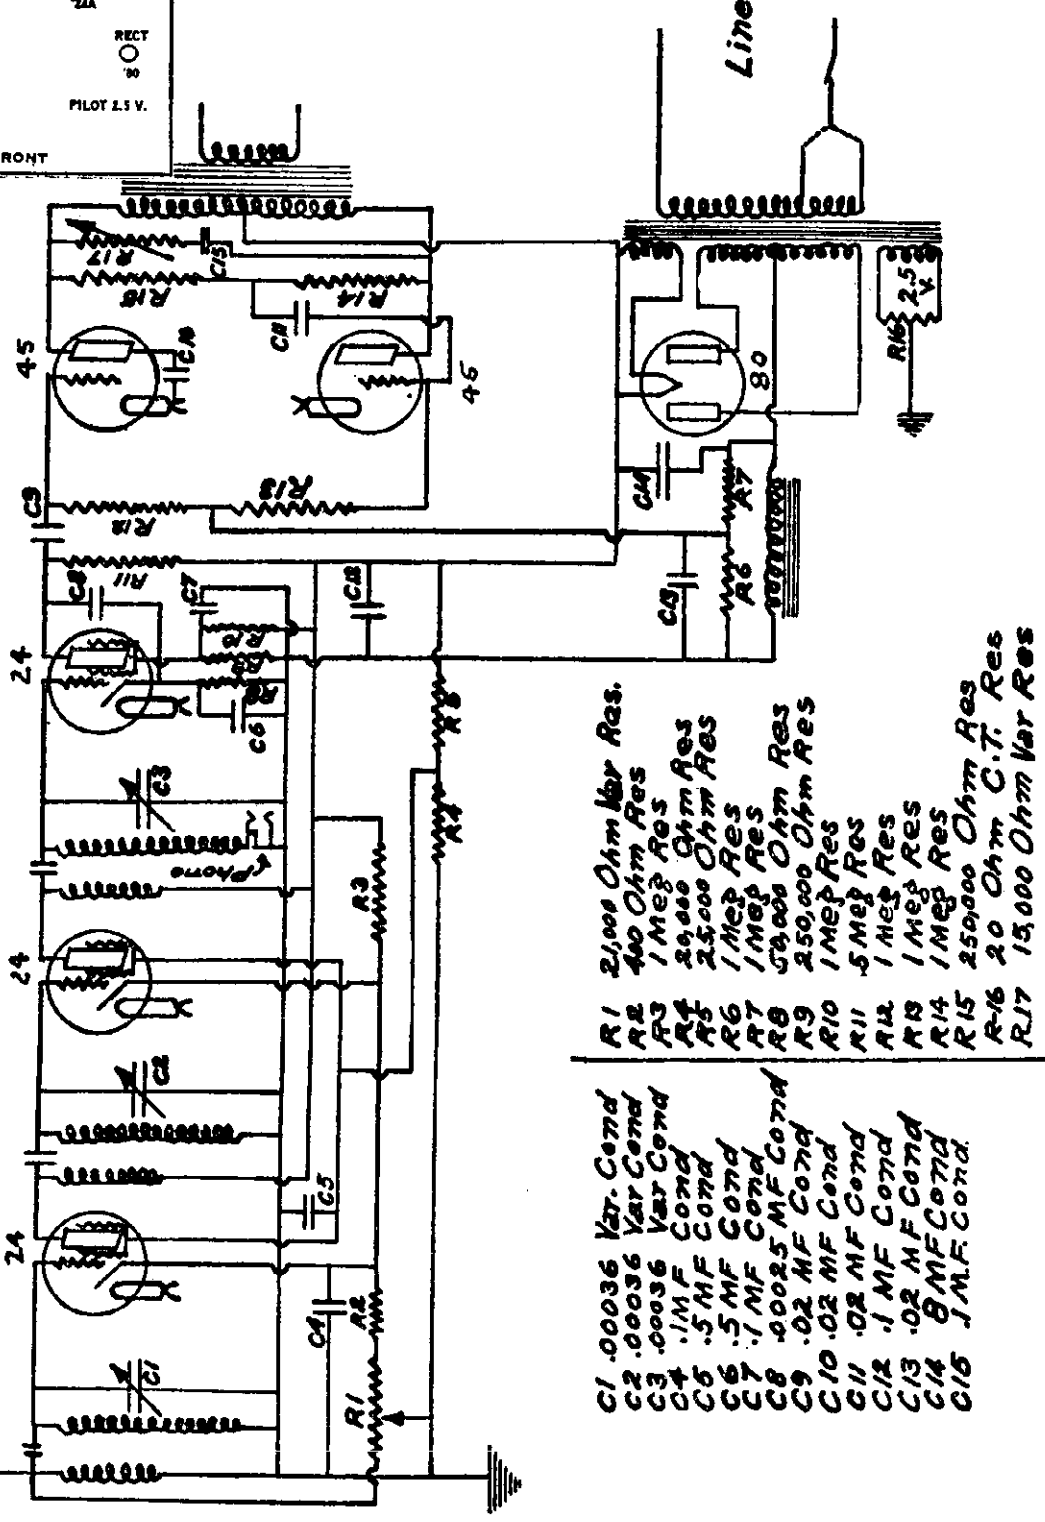

- | | | |
|-----|--------|-----------|
| C1 | .00036 | Var. Cond |
| C2 | .00036 | Var Cond |
| C3 | .00036 | Var Cond |
| C4 | .1MF | Cond |
| C5 | .5MF | Cond |
| C6 | .5MF | Cond |
| C7 | .1MF | Cond |
| C8 | .0025 | MF Cond |
| C9 | .02 | MF Cond |
| C10 | .02 | MF Cond |
| C11 | .02 | MF Cond |
| C12 | .1MF | Cond |
| C13 | .02 | MF Cond |
| C14 | 8MF | Cond |
| C15 | 1MF | Cond. |
-
- | | | |
|------|-------------|----------|
| R1 | 2,000 Ohm | Var Res. |
| R2 | 400 Ohm | Res |
| R3 | 1 Meg | Res |
| R4 | 20,000 Ohm | Res |
| R5 | 25,000 Ohm | Res |
| R6 | 1 Meg | Res |
| R7 | 1 Meg | Res |
| R8 | 50,000 Ohm | Res |
| R9 | 250,000 Ohm | Res |
| R10 | 1 Meg | Res |
| R11 | .5 Meg | Res |
| R12 | 1 Meg | Res |
| R13 | 1 Meg | Res |
| R14 | 1 Meg | Res |
| R15 | 250,000 Ohm | Res |
| R-16 | 20 Ohm | C.T. Res |
| R17 | 15,000 Ohm | Var Res |


The filter circuit consists of an 8 M. F. electrolytic condenser and the 1500 ohm field of the dynamic speaker. The hum balance is used in connection with the bias resistors of the 45 tubes, a condenser of proper capacity being connected from the midpoint of these resistors to ground.

ECHOPHONE - Model F

MODEL 40
Schematic


ECHOPHONE RADIO MFG. CO.

ECHOPHONE
Model 40 Echoette

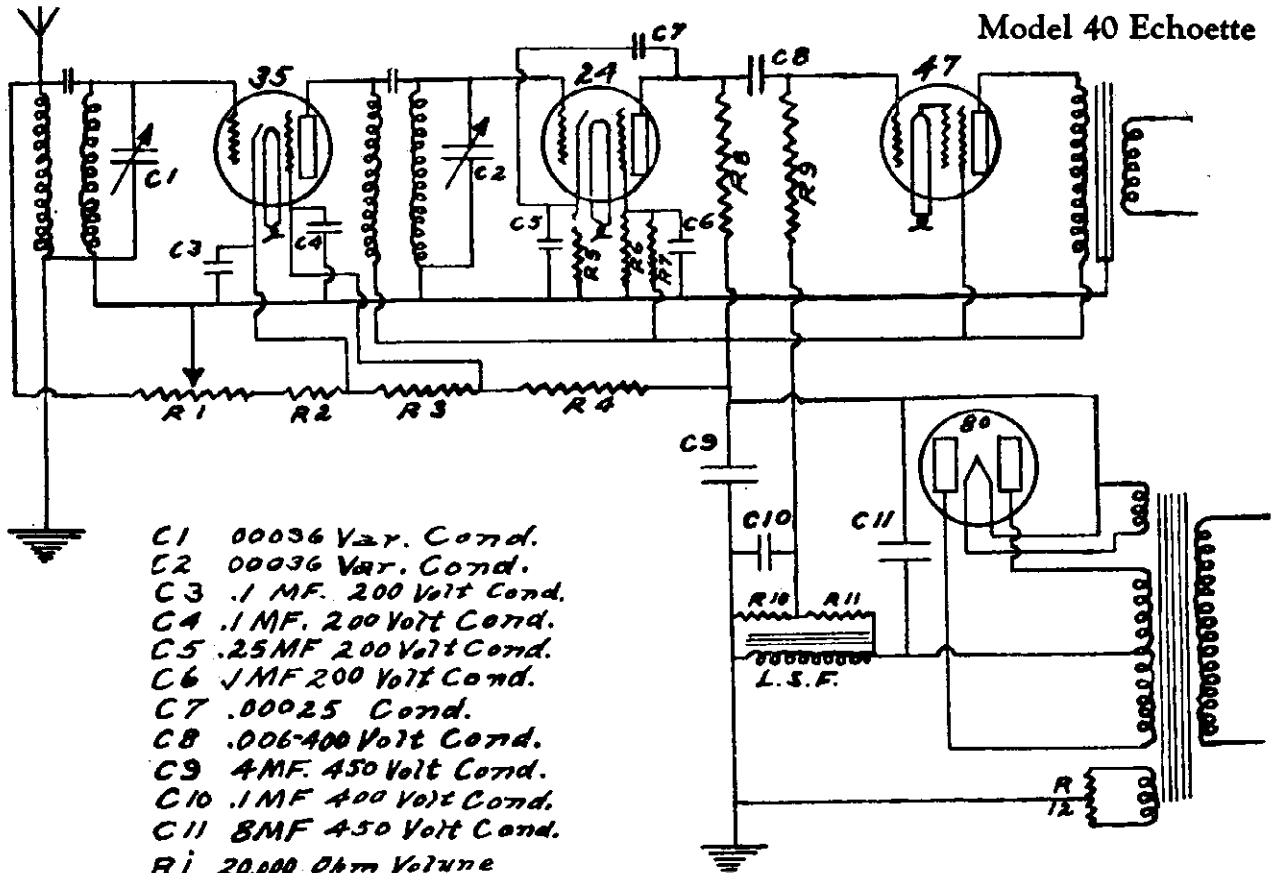

- C1 00036 Var. Cond.
- C2 00036 Var. Cond.
- C3 .1 MF. 200 Volt Cond.
- C4 .1 MF. 200 Volt Cond.
- C5 .25 MF 200 Volt Cond.
- C6 .1 MF 200 Volt Cond.
- C7 .00025 Cond.
- C8 .006-400 Volt Cond.
- C9 8 MF. 450 Volt Cond.
- C10 .1 MF 400 Volt Cond.
- C11 8 MF 450 Volt Cond.
- R1 20,000 Ohm Volume Control With R2 300 Ohm Fixed Bias
- R3 35000 Ohm .5 Watt
- R4 50000 Ohm 1 Watt
- R5 50000 Ohm 1 Watt
- R6 .5 Meg 1 Watt
- R7 1 Meg .5 Watt
- R8 1.5 Meg .5 Watt
- R9 .5 Meg 1 Watt
- R10 .2 Meg .5 Watt

R11 1 Meg .5 Watt
R12 20 Ohm C.T. Resistor
Model 40 (1931)

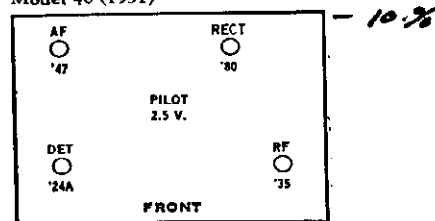


In the later models the speaker field is in the negative lead and part of the drop across it is used to bias the grid of the power tube. A bucking coil is used in the speaker to keep the field ripple out of the voice coil.

The R. F. stage is impedance coupled and there is a small coupling condenser fastened on the lower end of the R. F. coil. If the set is weak or oscillates at the high frequency end of the band a slight adjustment of this condenser will remedy the trouble. After adjusting this condenser the gang condenser should be checked for alignment with the rotor plates nearly open.

The filter circuit consists of an 8 M. F. and 4 M. F. electrolytic condenser and the 2000 ohm speaker field. The speaker field is in the positive lead and the power tube is self biased by a resistor from the filament circuit to ground. This resistor is by-passed by an 8 M. F. condenser.

ECHOPHONE RADIO MFG. CO.

MODEL 60
Schematic

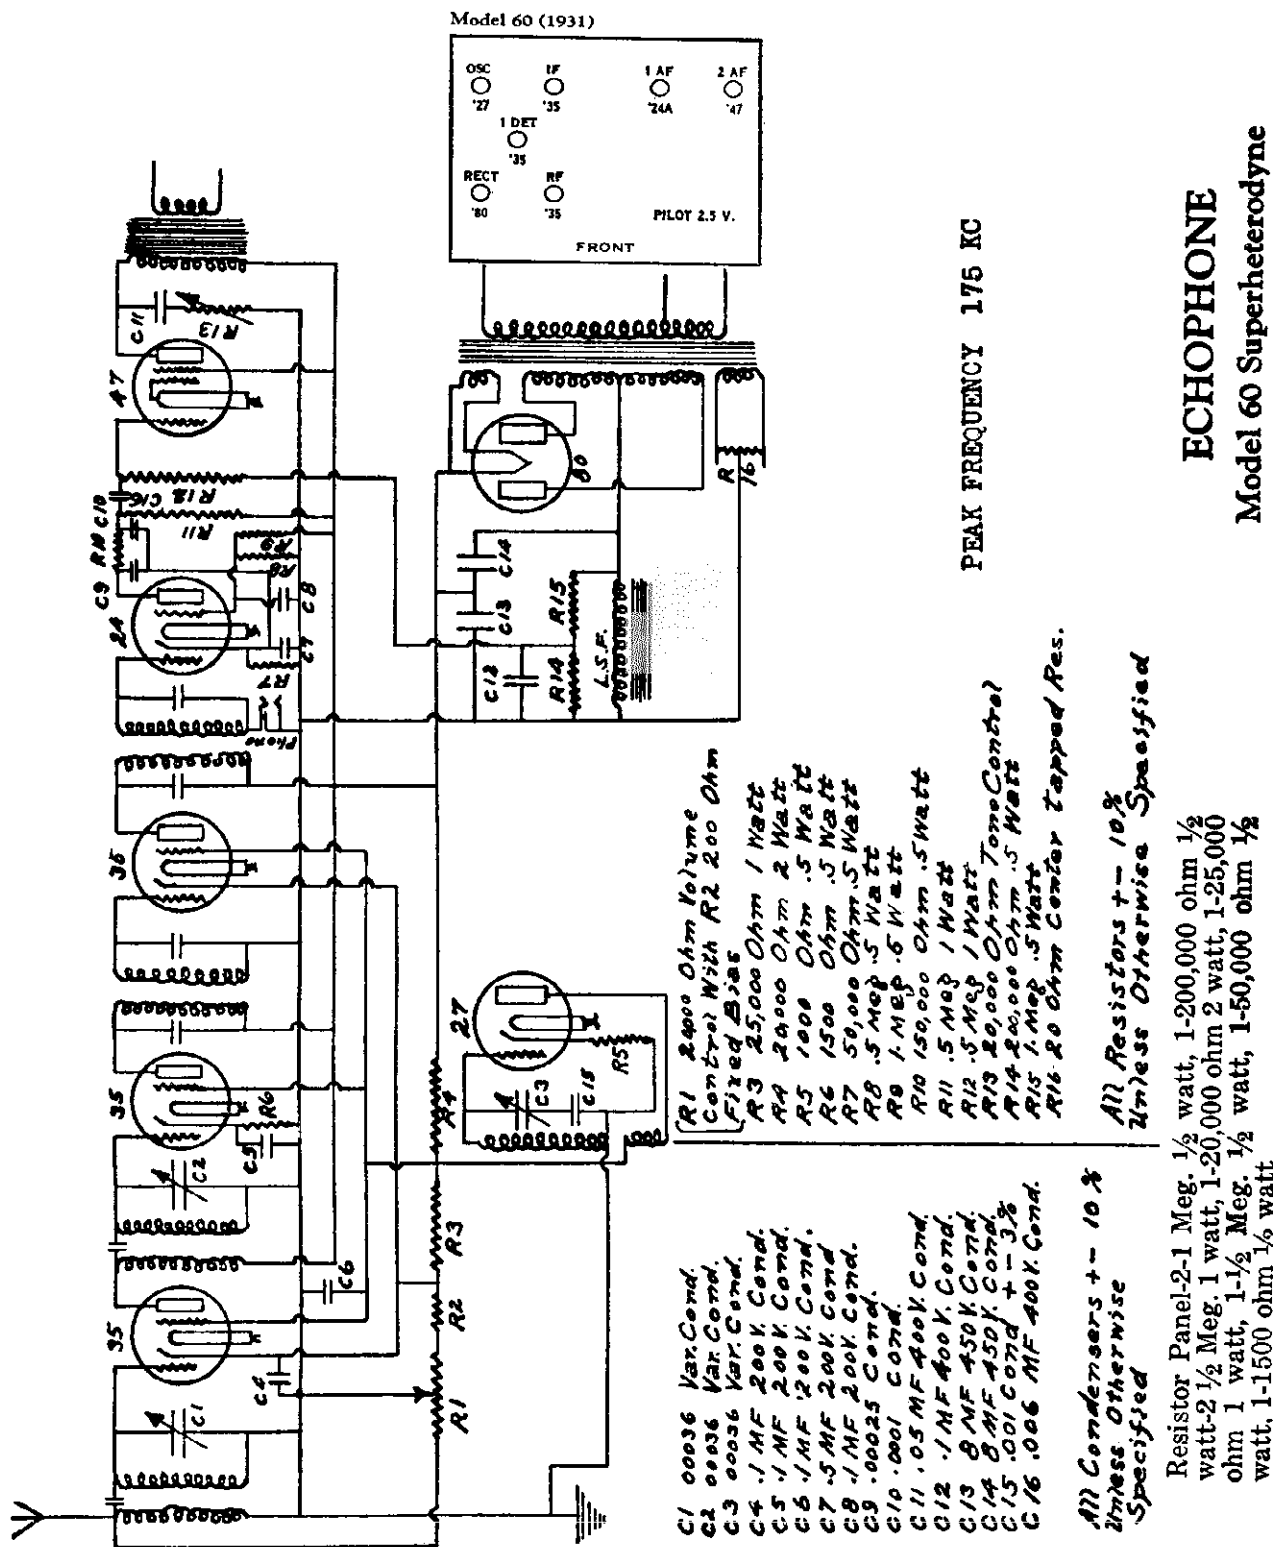


The filter circuit consists of two 8 MF electrolytic condensers and the 1500 ohm speaker field. The hum balance circuit is used in connection with the power tube bias resistors. The speaker field is in the negative lead and part of the voltage drop across it is used for biasing the power tube. A bucking coil is used in the speaker to keep the field ripple out of the voice coil.

ECHOPHONE RADIO MFG. CO.

MODEL 80
Schematic

The volume control acts as a dual control by varying the bias on the RF and IF tubes and by varying the antenna input to the antenna stage.

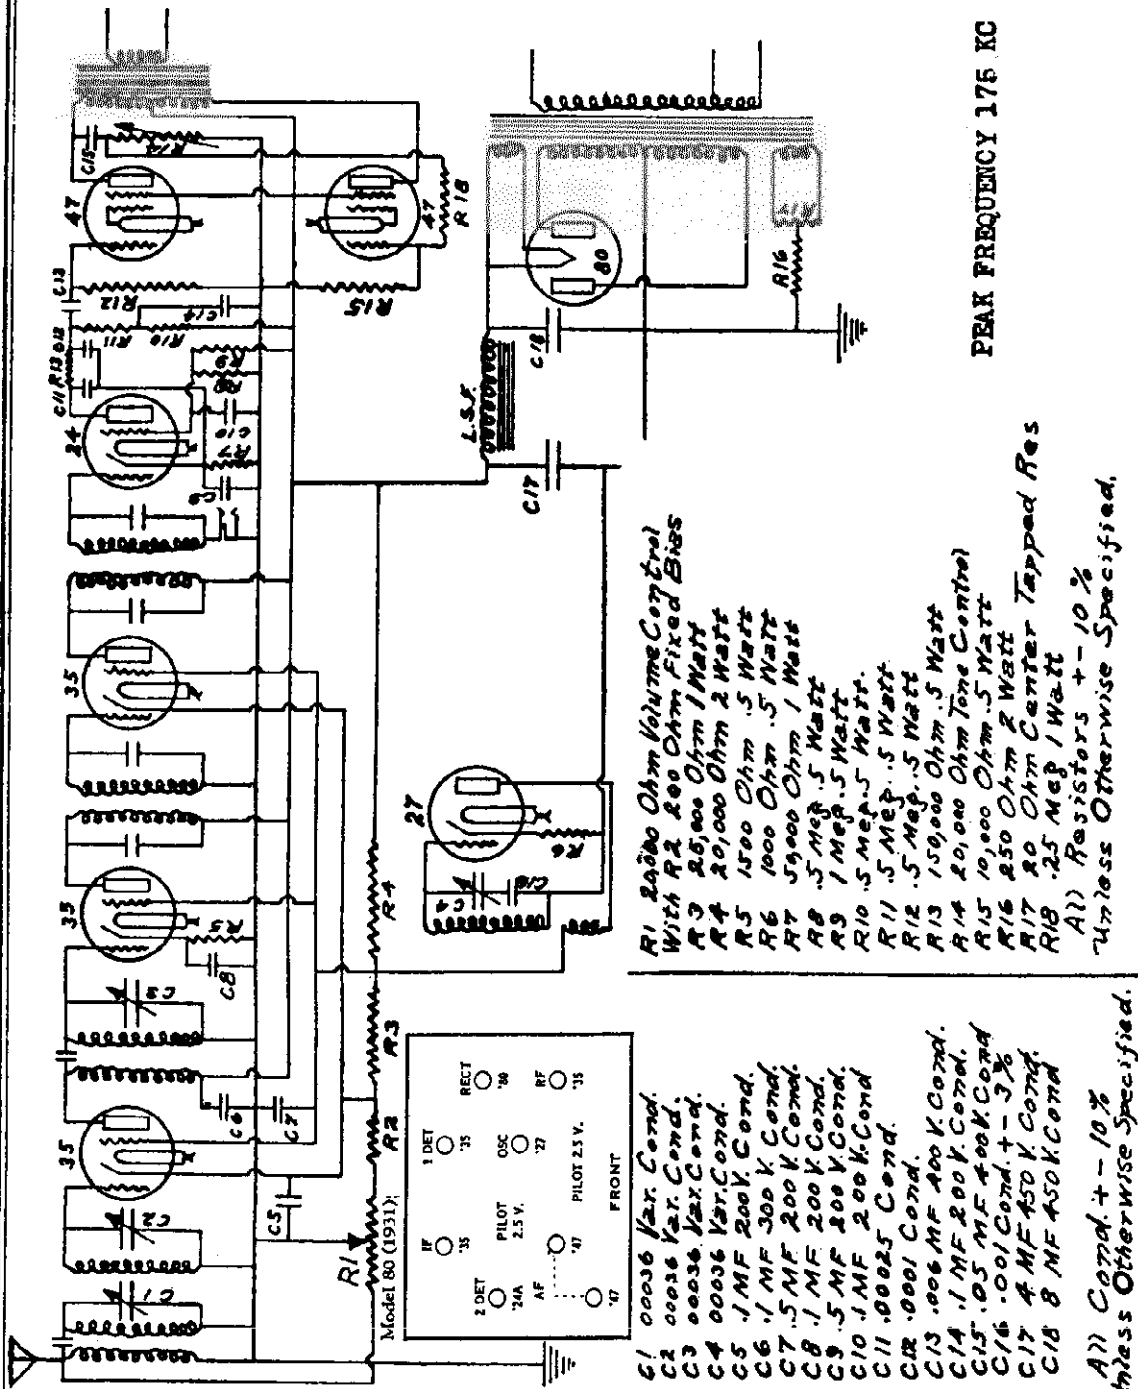

PEAK FREQUENCY 175 KC

ECHOPHONE

Model 80 Superheterodyne

- R1 2000 Ohm Var. Control
- With R2 200 Ohm Fixed Bias
- R3 25,000 Ohm 1 Watt
- R4 20,000 Ohm 2 Watt
- R5 1500 Ohm .5 Watt
- R6 1000 Ohm .5 Watt
- R7 59,000 Ohm 1 Watt
- R8 .5 Meg. .5 Watt
- R9 1 Meg. .5 Watt
- R10 .5 Meg. .5 Watt
- R11 .5 Meg. .5 Watt
- R12 .5 Meg. .5 Watt
- R13 150,000 Ohm .5 Watt
- R14 20,000 Ohm Tone Control
- R15 10,000 Ohm .5 Watt
- R16 250 Ohm 2 Watt
- R17 20 Ohm Center Tapped Res
- R18 .25 Meg. 1 Watt
- R19 25 Meg. 1 Watt
- A1) Resistors + - 10 %
Unless Otherwise Specified.

- C1 00036 Var. Cond.
- C2 00036 Var. Cond.
- C3 00036 Var. Cond.
- C4 00036 Var. Cond.
- C5 .1 MF 200 V. Cond.
- C6 .1 MF 300 V. Cond.
- C7 .5 MF 200 V. Cond.
- C8 .1 MF 200 V. Cond.
- C9 .5 MF 200 V. Cond.
- C10 .1 MF 200 V. Cond.
- C11 .00025 Cond.
- C12 .0001 Cond.
- C13 .006 MF 400 V. Cond.
- C14 .1 MF 200 V. Cond.
- C15 .05 MF 400 V. Cond.
- C16 .001 Cond. + - 3 %
- C17 4 MF 450 V. Cond.
- C18 8 MF 450 V. Cond.
- A1) Cond. + - 10 %
Unless Otherwise Specified.

- Resistor Panel-4-1/2 Watt
- 1-10,000 Ohm 1/2 Watt, 1-250,000 Ohm 1 Watt
- 1-1 Meg. 1/2 Watt, 1-20,000 Ohm 2 Watt
- 1-25,000 Ohm 1 Watt, 1-250 Ohm 2 Watt
- 1-50,000 Ohm 1 Watt

The filter circuit consists of an 8 MF and a 4 MF electrolytic condenser and the 1200 ohm speaker field. The field is in the positive lead and the output tubes are self-biased by a resistor between the filament circuit and ground. A bucking coil is used in the speaker to keep the field ripple out of the voice coil.

MODEL 60
Voltage
MODEL 80
Voltage

ECHOPHONE RADIO MFG. CO.

VOLTAGE TESTS

All voltages given were tested on a 250 volt scale of 1000 ohms per volt meter.

All voltage tests were made with volume on full, and tone control in off position, no signal in receiver, line voltage 115 volts with A. C. line connected to tap of transformer as shipped from factory.

Model 60 Superheterodyne


First Det. Plate to ground 230 to 250 volts	247 Plate to ground 230 to 245 volts
First Det. Screen to ground 70 to 80 volts	247 Screen to ground 230 to 250 volts
First Det. Bias—Cathode to ground 4 to 6 volts	247 Bias grid to ground 6 to 8 volts
Oscillator Plate to ground 70 to 80 volts	Second Det. Plate to ground 35 to 45 volts
Oscillator Bias—Cathode to ground 4 to 6 volts	Second Det. screen to ground 30 to 40 volts
R.F. & I.F. Bias with volume control in off position 40 to 50 volts	Second Det. Bias—Cathode to ground 7 to 9 volts
Filament for all 2.5 volt tubes 2.4 to 2.6 volts	R.F. & I.F. Plate to ground 230 to 250 volts
Filament of 280 tube 4.8 to 5 volts	R.F. & I.F. Screen to ground 70 to 80 volts
Voltage across speaker field 80 to 90 volts	R.F. & I.F. Bias—Cathode to ground 2.5 to 3.5 volts

Model 80 Superheterodyne

First Det. Plate to ground 230 to 245 volts	247 Plate to ground 225 to 235 volts
First Det. Screen to ground 70 to 80 volts	247 Screen to ground 230 to 245 volts
First Det. Bias—Cathode to ground 4 to 6 volts	247 Bias—Center Tapped resistor to ground 16 to 18 volts
Oscillator plate to ground 70 to 80 volts	Second Det. Plate to ground 30 to 40 volts
Oscillator Bias Cathode to ground 4 to 6 volts	Second Det. Screen to ground 25 to 35 volts
R.F. & I.F. Bias with volume control in off position 40 to 50 volts	Second Det. Bias—Cathode to ground 7 to 9 volts
Filament for all 2.5 volt tubes 2.4 to 2.6 volts	R.F. & I.F. Plate to ground 230 to 245 volts
Filament of 280 tube 4.8 to 5 volts	R.F. & I.F. Screen to ground 70 to 80 volts
Voltage across speaker field 90 to 110 volts	R.F. & I.F. Bias—Cathode to ground 2.5 to 3.5 volts

ECHOPHONE RADIO MFG. CO.

MODEL 90
Schematic

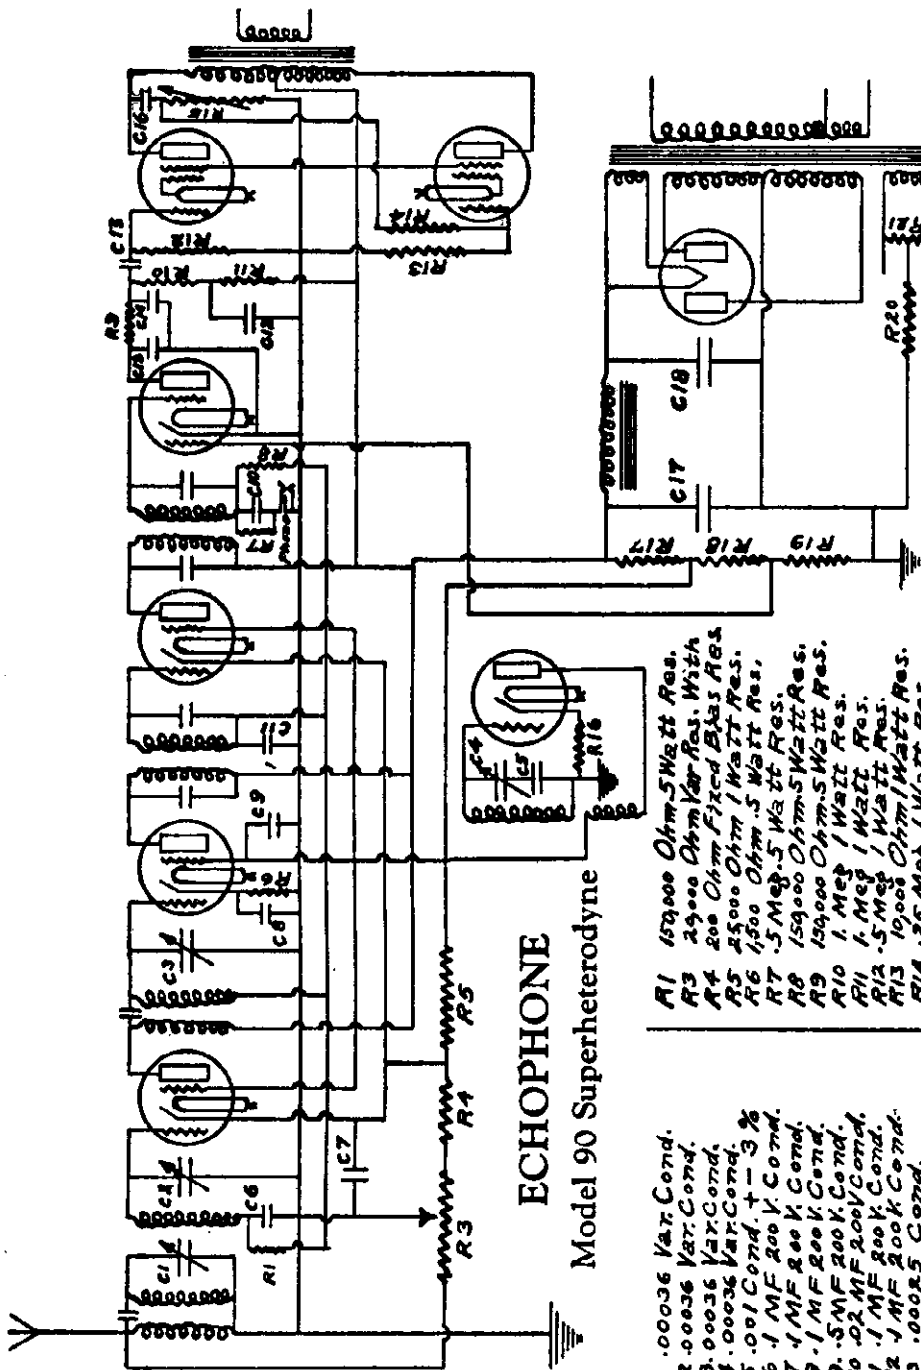

ECHOPHONE

Model 90 Superheterodyne

- C1 .00036 Var. Cond.
- C2 .00036 Var. Cond.
- C3 .00036 Var. Cond.
- C4 .00036 Var. Cond.
- C5 .001 Cond. + 3%
- C6 .1 MF 200 V. Cond.
- C7 .1 MF 200 K. Cond.
- C8 .1 MF 200 K. Cond.
- C9 .5 MF 200 V. Cond.
- C10 .02 MF 200 V. Cond.
- C11 .1 MF 200 V. Cond.
- C12 .1 MF 200 K. Cond.
- C13 .00025 Cond.
- C14 .0001 Cond.
- C15 .02 MF 400K Cond.
- C16 .05 MF 400V. Cond.
- C17 .8 MF 450 V. Cond.
- C18 12 MF 450 V. Cond.


All Condensers + - 10%
Unless Otherwise Specified

- R1 150,000 Ohm 5 Watt Res.
- R3 25,000 Ohm Var. Res. With
- R4 200 Ohm Fixed Bias Res.
- R5 2500 Ohm 1 Watt Res.
- R6 1500 Ohm .5 Watt Res.
- R7 .5 Meg 5 Watt Res.
- R8 150,000 Ohm 5 Watt Res.
- R9 150,000 Ohm 5 Watt Res.
- R10 1. Meg 1 Watt Res.
- R11 1. Meg 1 Watt Res.
- R12 .5 Meg 1 Watt Res.
- R13 10,000 Ohm 1 Watt Res.
- R14 .25 Meg 1 Watt Res.
- R15 20,000 Ohm Tune Control
- R16 1,000 Ohm .5 Watt Res.
- R17 15,000 Ohm 1 Watt Res.
- R18 50,000 Ohm 1 Watt Res.
- R19 2,000 Ohm 1 Watt Res.
- R20 250 Ohm 2 Watt Res.
- R21 20 Ohm Center Tapped Res.

All Resistors + - 10%
Unless Otherwise Specified

- Resistor Panel .5 Meg 1 Watt, 1; 10,000 Ohm 1 Watt, 1; .25 Meg 1 Watt, 1; 250 Ohm 2 Watt, 1; 1 Meg 1 Watt, 2; 15,000 Ohm 1 Watt, 1; 2,000 Ohm 1 Watt, 1

PEAK FREQUENCY=175 KC

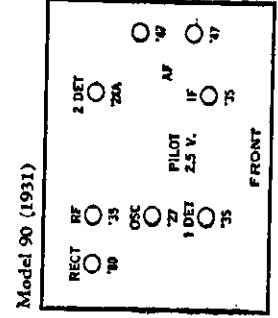

Model 90 (1931)

The Echophone, Model 90, is an 8-tube Superheterodyne, employing variable MU and Pentode Tubes.

The circuit consists of a pre-selector; one stage of high gain R.F. amplification using a type 235 tube; a first detector using a type 235 tube; one stage of intermediate frequency amplification using a type 235 tube; a second detector using a type 235 tube; a single audio stage using two type 247 Pentode tubes in a resistance coupled push-pull circuit; an oscillator using a type 227 tube, and a power supply system using a type 280 tube.

The antenna and pre-selector coils are mounted on top of the chassis, and are tuned by the first and second sections of the gang condenser.

MODEL 90

Voltage

Notes

ECHOPHONE RADIO MFG. CO.

Model 90—Superheterodyne

The first detector is of the grid biased type. The second detector is a type 235 tube used as a space charge detector. In this system, the screen grid is used as a control grid and a small positive voltage is applied to the top grid which is normally used as the control grid. A grid leak and condenser are used in the control grid circuit, and the negative voltage developed across the grid leak when strong signals are received is fed back to the R.F., first detector and I.F. grids which gives the semi-automatic volume control, and prevents overloading of the second detector. A phonograph pickup jack is incorporated in the grid return of this tube.

The R.F. Circuit is a high gain impedance coupled type with capacity coupling condenser mounted on coil. This condenser should require no adjustment after leaving factory. The fourth section of variable condenser tunes the R.F. circuit.

The oscillator circuit is of the conventional tuned grid type with plate feed back, and is inductively coupled to the grid circuit of the R.F. stage.


The intermediate frequency amplifier has a total of four tuned circuits, and is adjusted to 175 K.C.

The volume control acts as a dual control by varying the bias on the R.F. and I.F. tubes, and by varying the antenna input to the antenna coil.

The filter circuit consists of an 8 MF and a 12 MF electrolytic condenser, and the 1200 ohm speaker field. The field is in the positive lead, and the power tubes are self-biased by a resistor from the filament circuit to ground. A bucking coil is used in the speaker to keep the field ripple out of the voice coil.

THOMAS A. EDISON, INC.

MODELS R4, R5, C4
Chassis Views

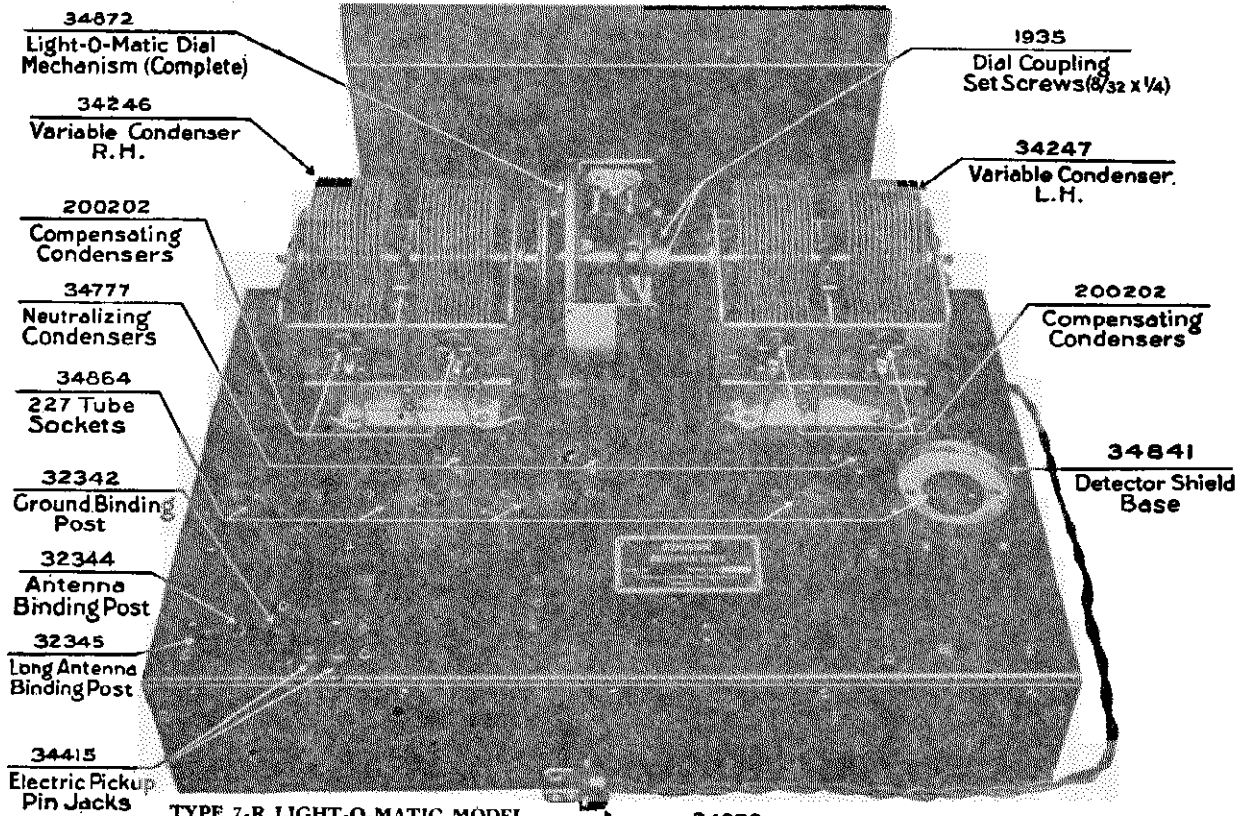

34872
Light-O-Matic Dial
Mechanism (Complete)

34246
Variable Condenser
R.H.

200202
Compensating
Condensers

34777
Neutralizing
Condensers

34864
227 Tube
Sockets

32342
Ground Binding
Post

32344
Antenna
Binding Post

32345
Long Antenna
Binding Post

34415
Electric Pickup
Pin Jacks

1935
Dial Coupling
Set Screws (8/32 x 1/4)

34247
Variable Condenser
L.H.

200202
Compensating
Condensers

34841
Detector Shield
Base

TYPE 7-R LIGHT-O-MATIC MODEL
60 CYCLE A.C. RECEIVER UNIT
(TOP VIEW)

34876
Line Switch Plug
(Black-Male)

TYPE 7-R LIGHT-O-MATIC MODEL
60 CYCLE A.C. RECEIVER UNIT
(BOTTOM VIEW)

34882
Connecting
Cable

34792
Cable Terminal
Board (Female)

34876
Line Switch Plug
(Male)

34827
Terminal Board and
Resistor Assy

34816
2.5 Mfd By-Pass
Condenser

34785 Bleeder
Resistor 40,000 Ohms

34811
1.1 Mfd. By Pass
Condenser

34867
R.F. Choke and
Hum Adjuster
Assy

34886
1st Audio
Transformer

34864
Type '27
Tube Sockets

34777
Neutralizing
Condenser
40 to 80 Mmfd.

200080
Matched Set (4)
R.F. Coils

34562
.00025
Condensers

34401
Coil Shield
Base

34959
Det. Plate
Condenser
.001 Mfd.

34978
Det. Choke and
Can Assy

34779
Det. Grid Leak
1.5 Megohms

34961
Det. Neutralizing
Condenser
.000125 Mfd.

34962
Det. Grid Condenser
.0001 Mfd.

34833
Phono Switch


34828
Volume Control

34830
Line Switch


MODELS R4,R5,C4
Power Unit Chassis Views

THOMAS A. EDISON, INC.

Thomas A. Edison
TYPE 8-P LIGHT-O-MATIC MODEL
DIRECT CURRENT POWER UNIT
(TOP VIEW)

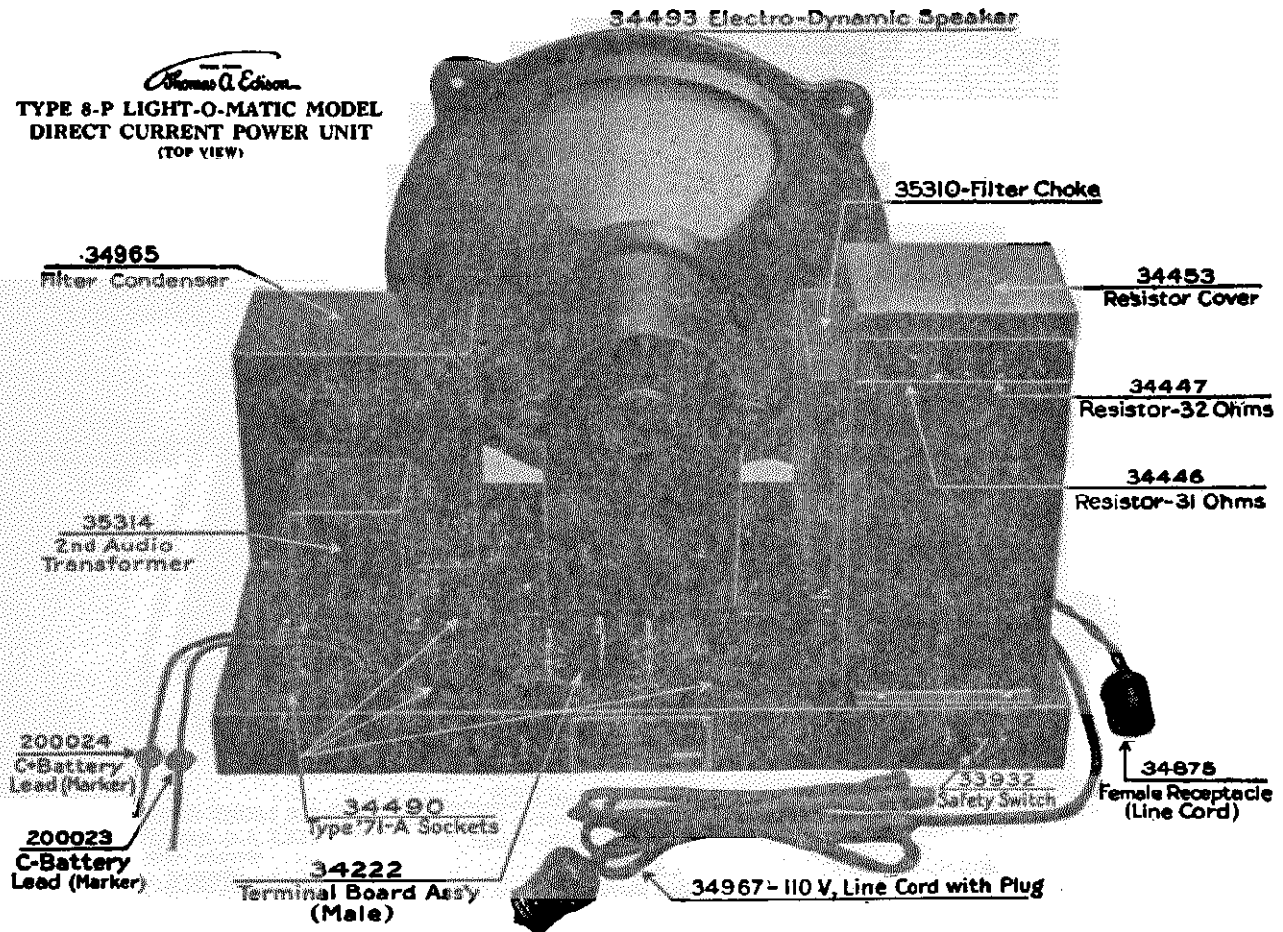


TYPE 8-P LIGHT-O-MATIC MODEL
DIRECT CURRENT POWER UNIT
(BOTTOM VIEW)

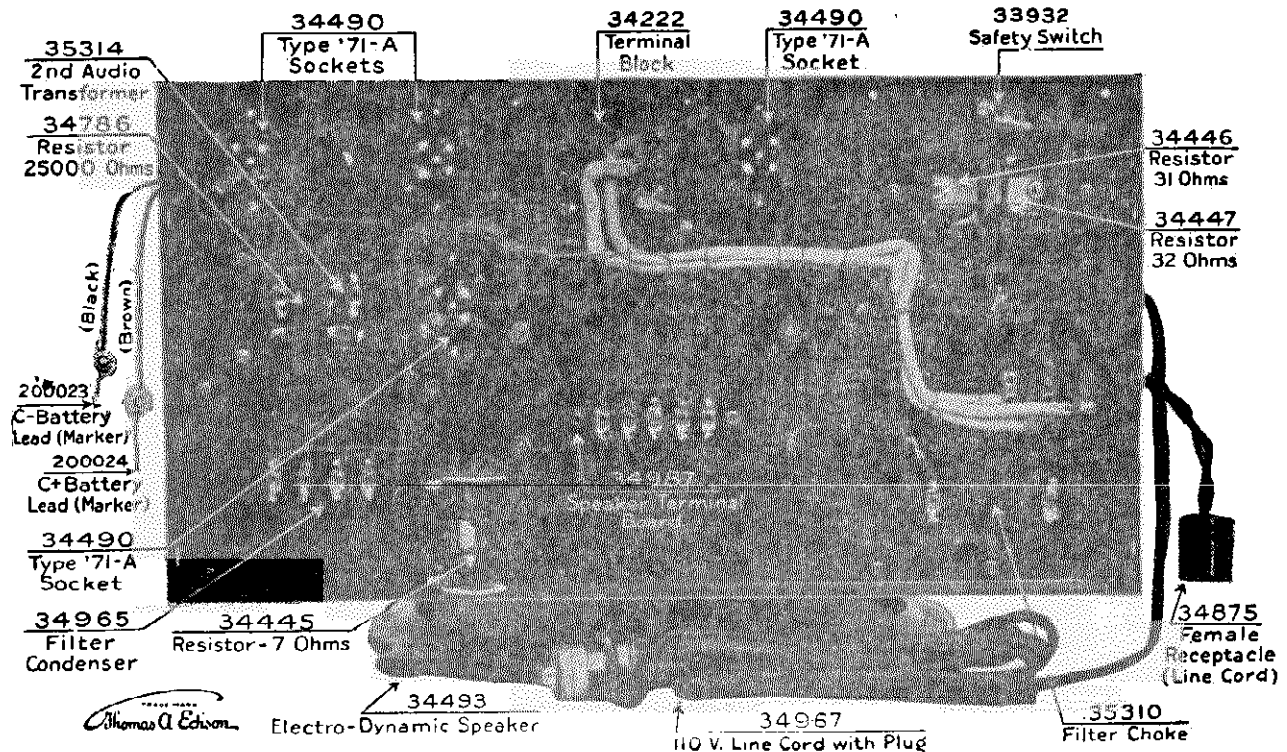


ELECTRAD, INC.

MODEL A-25C
MODEL C-25C

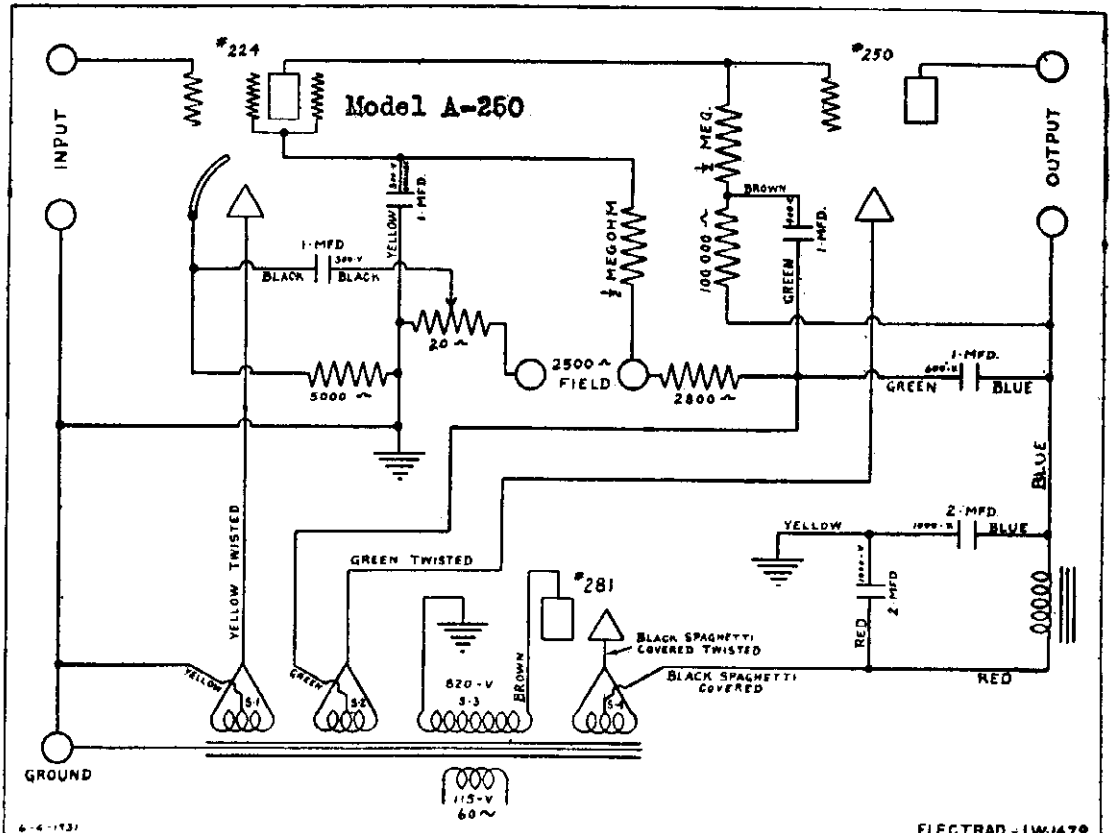

6-4-1931

ELECTRAD - LW1679


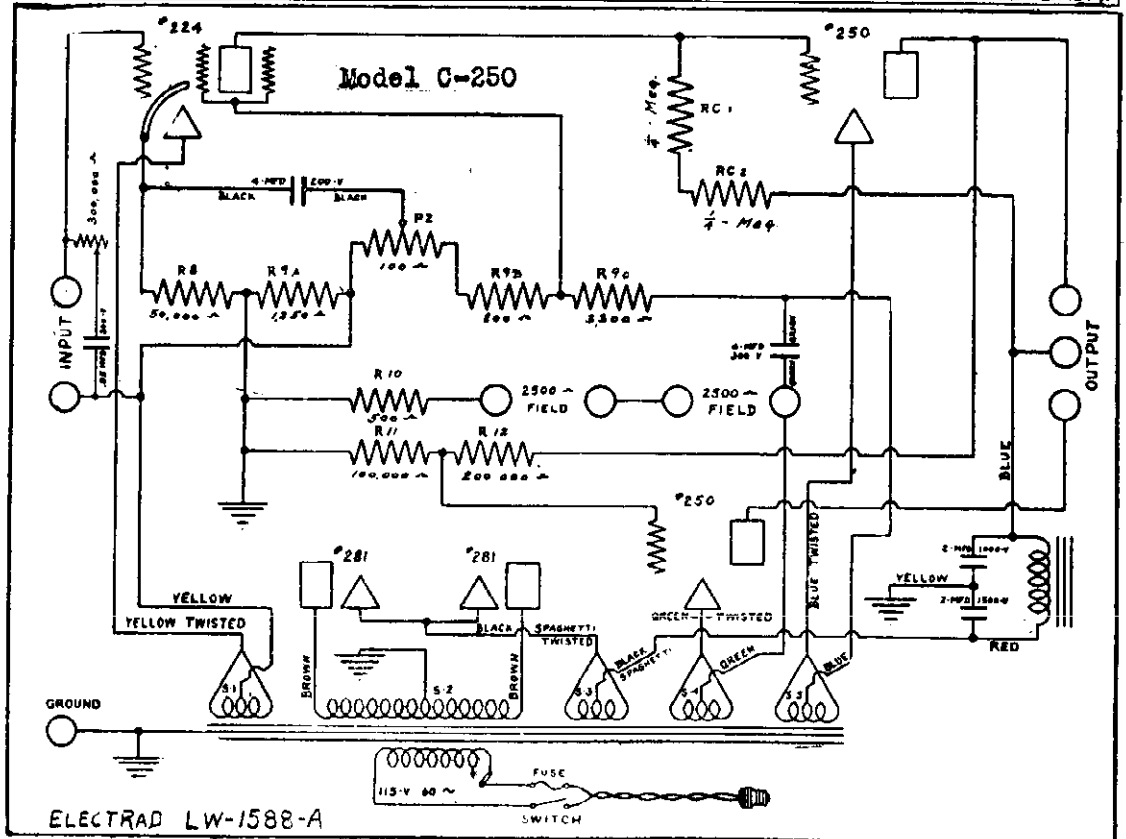


ELECTRAD LW-1588-A

FUSE SWITCH

MODEL D-250
MODEL E-250


ELECTRAD, INC.

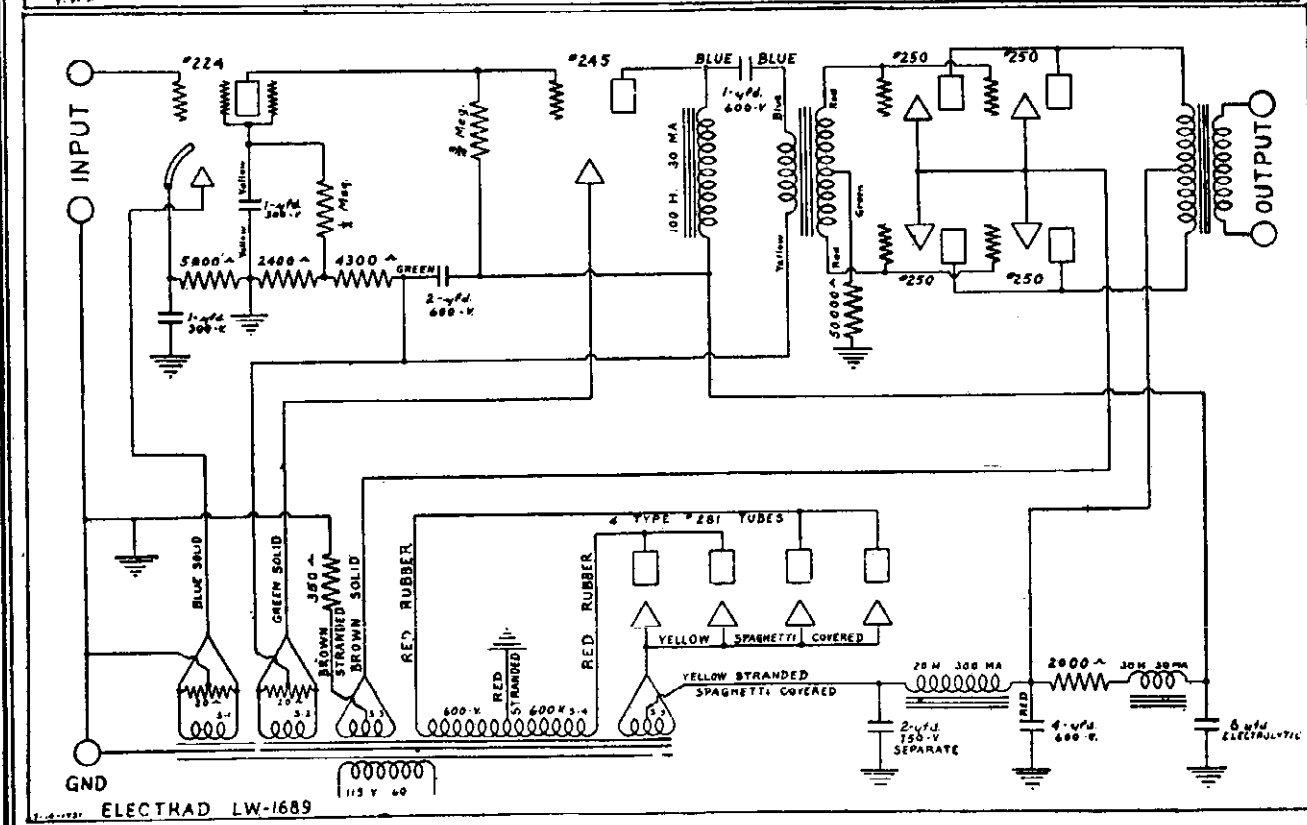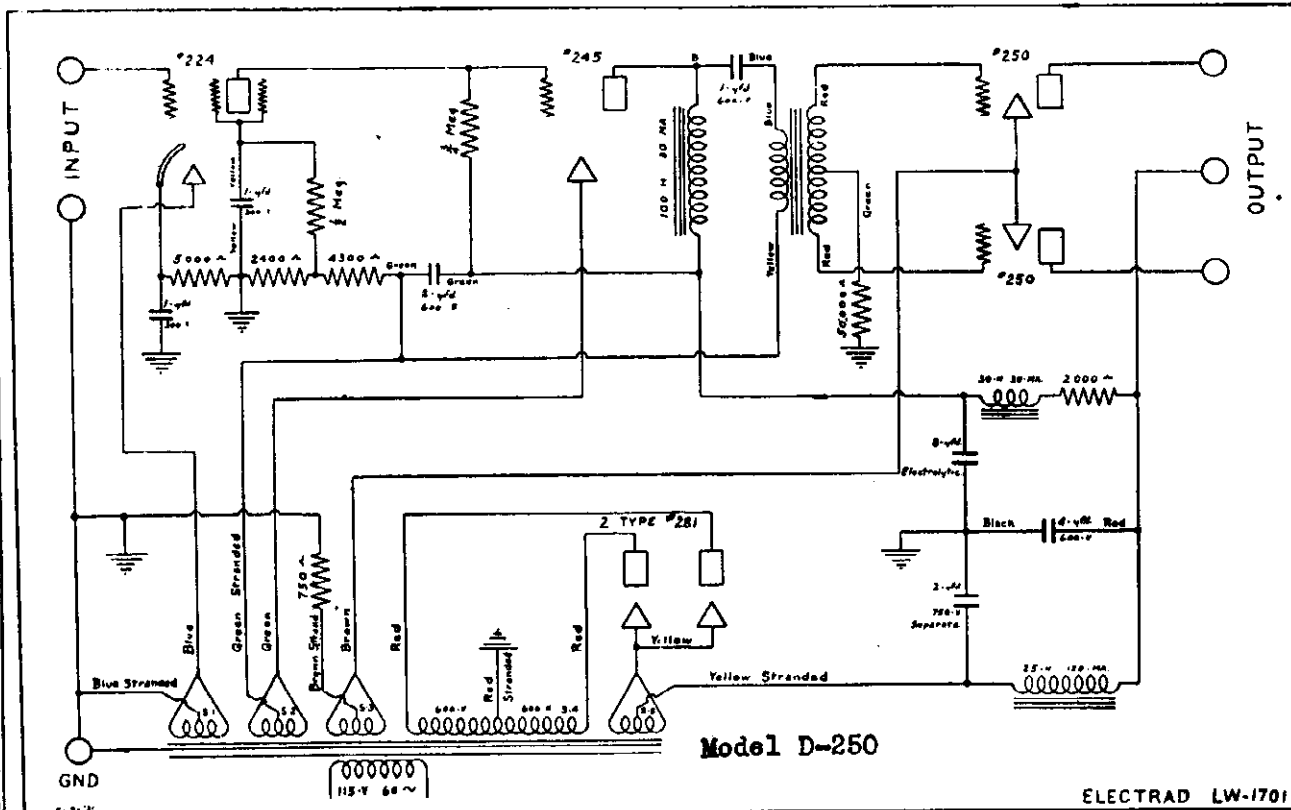

Model E-250

MODEL 74, 76 (210)
Schematic

ELECTRICAL
RESEARCH LABORATORIES, Inc.

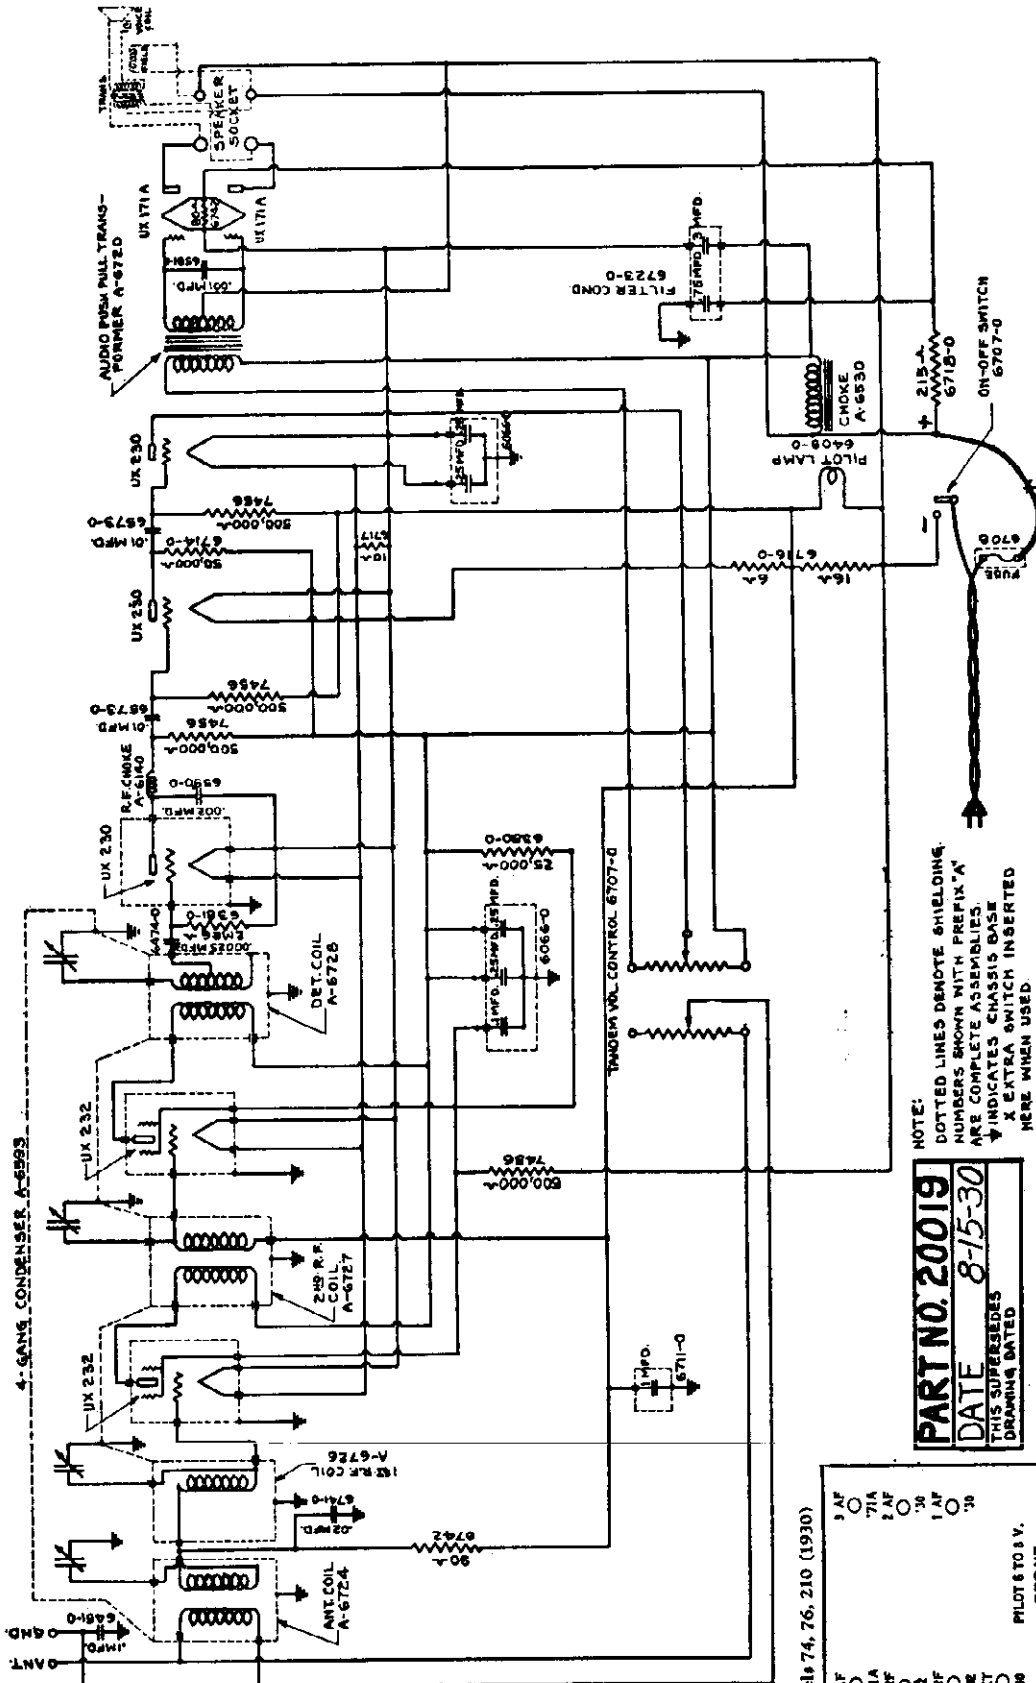

NOTE:
DOTTED LINES DENOTE SHIELDING.
NUMBERS SHOWN WITH PREFIX "A"
ARE COMPLETE ASSEMBLIES
V INDICATES CHASSIS GROUND
X INDICATES SWITCH BASE
HERE WHEN USED.

PART NO. 20019
DATE 8-15-30
THIS SUPERSEDES
DRAWING DATED

Models 74, 76, 210 (1930)


3 AF	71A	1 RF	2 RF	DET	38
9 AF	71A	2 AF	38	1 AF	38

PILOT 6 TO 1 V.
FRONT

110 Volt DC.


ELECTRICAL RESEARCH LABORATORIES, Inc.

ERLA MODEL 224-B RECEIVER

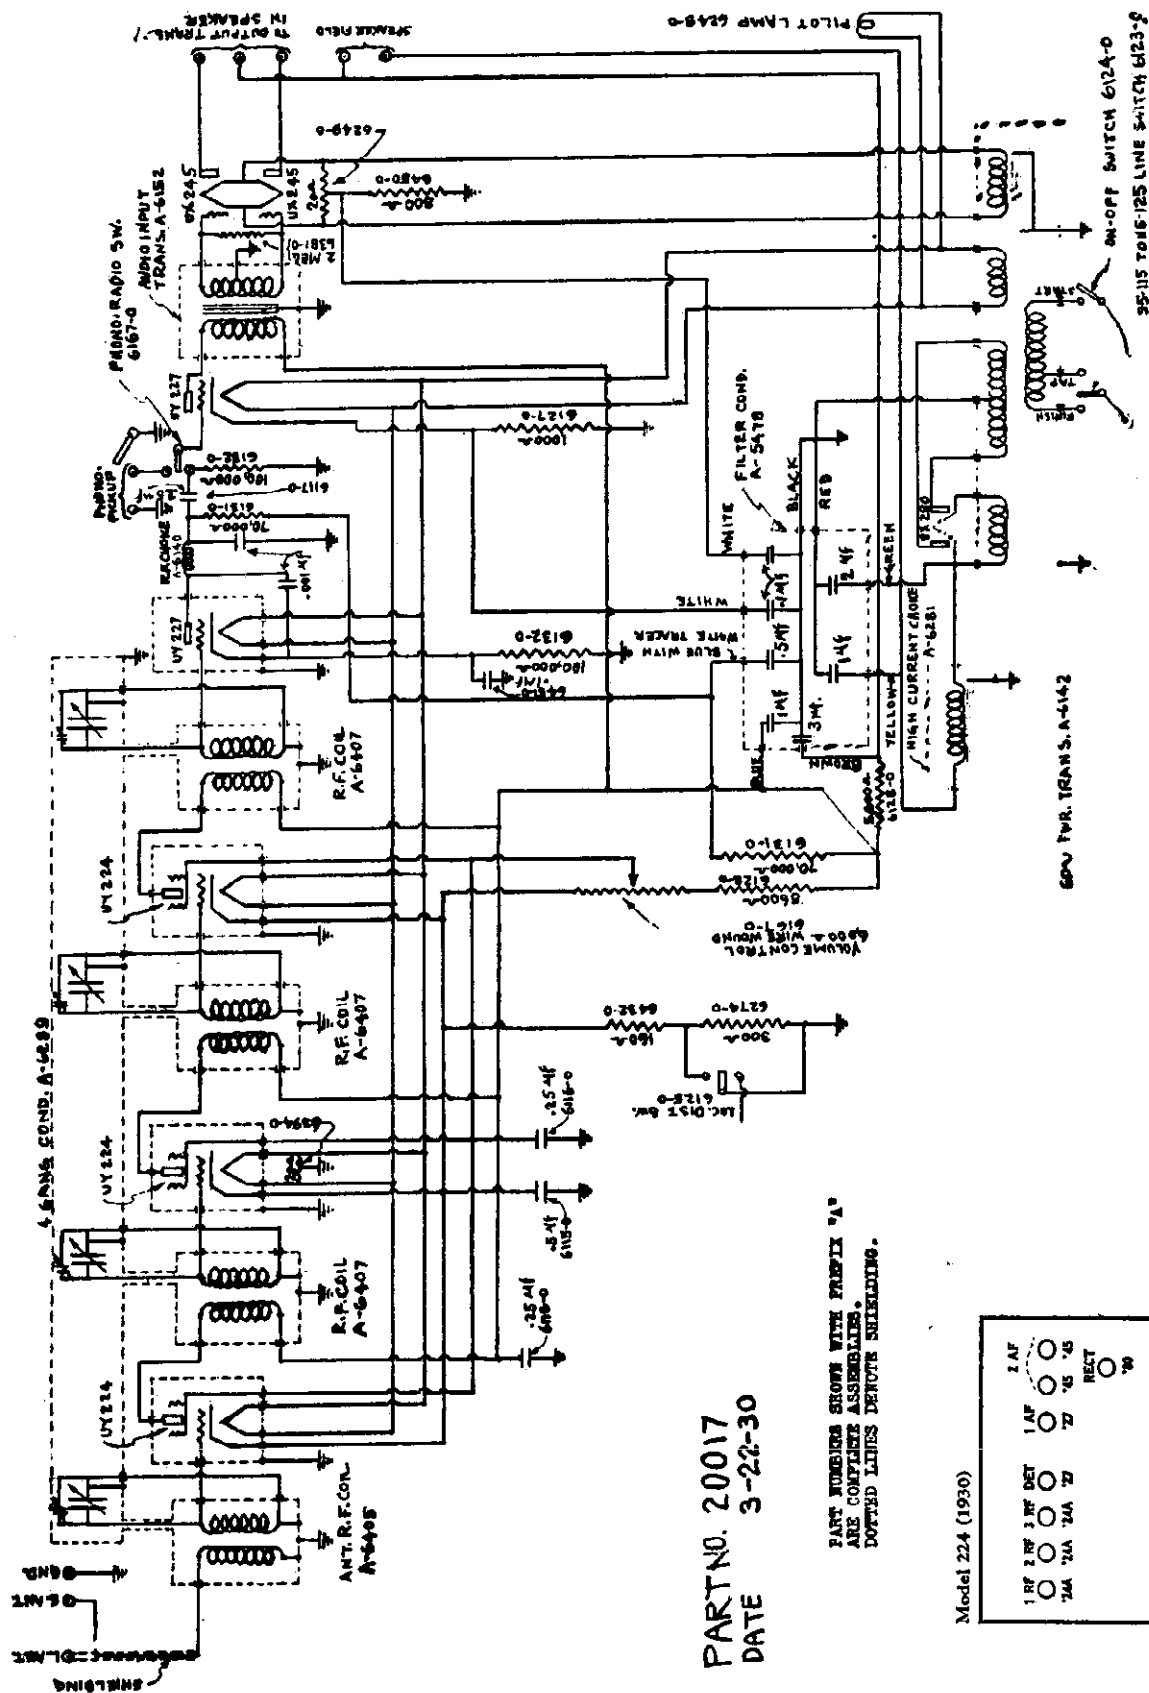


PART NO. 20017
DATE 3-22-30

PART NUMBERS SHOWN WITH PREFIX "A"
ARE COMPLETE ASSEMBLIES.
DOTTED LINES DENOTE SHIELDING.

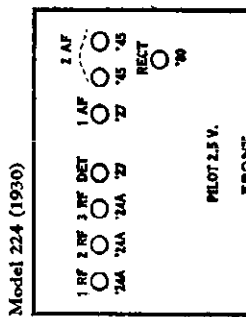

MODEL 225
Schematic

ELECTRICAL
RESEARCH LABORATORIES, Inc.

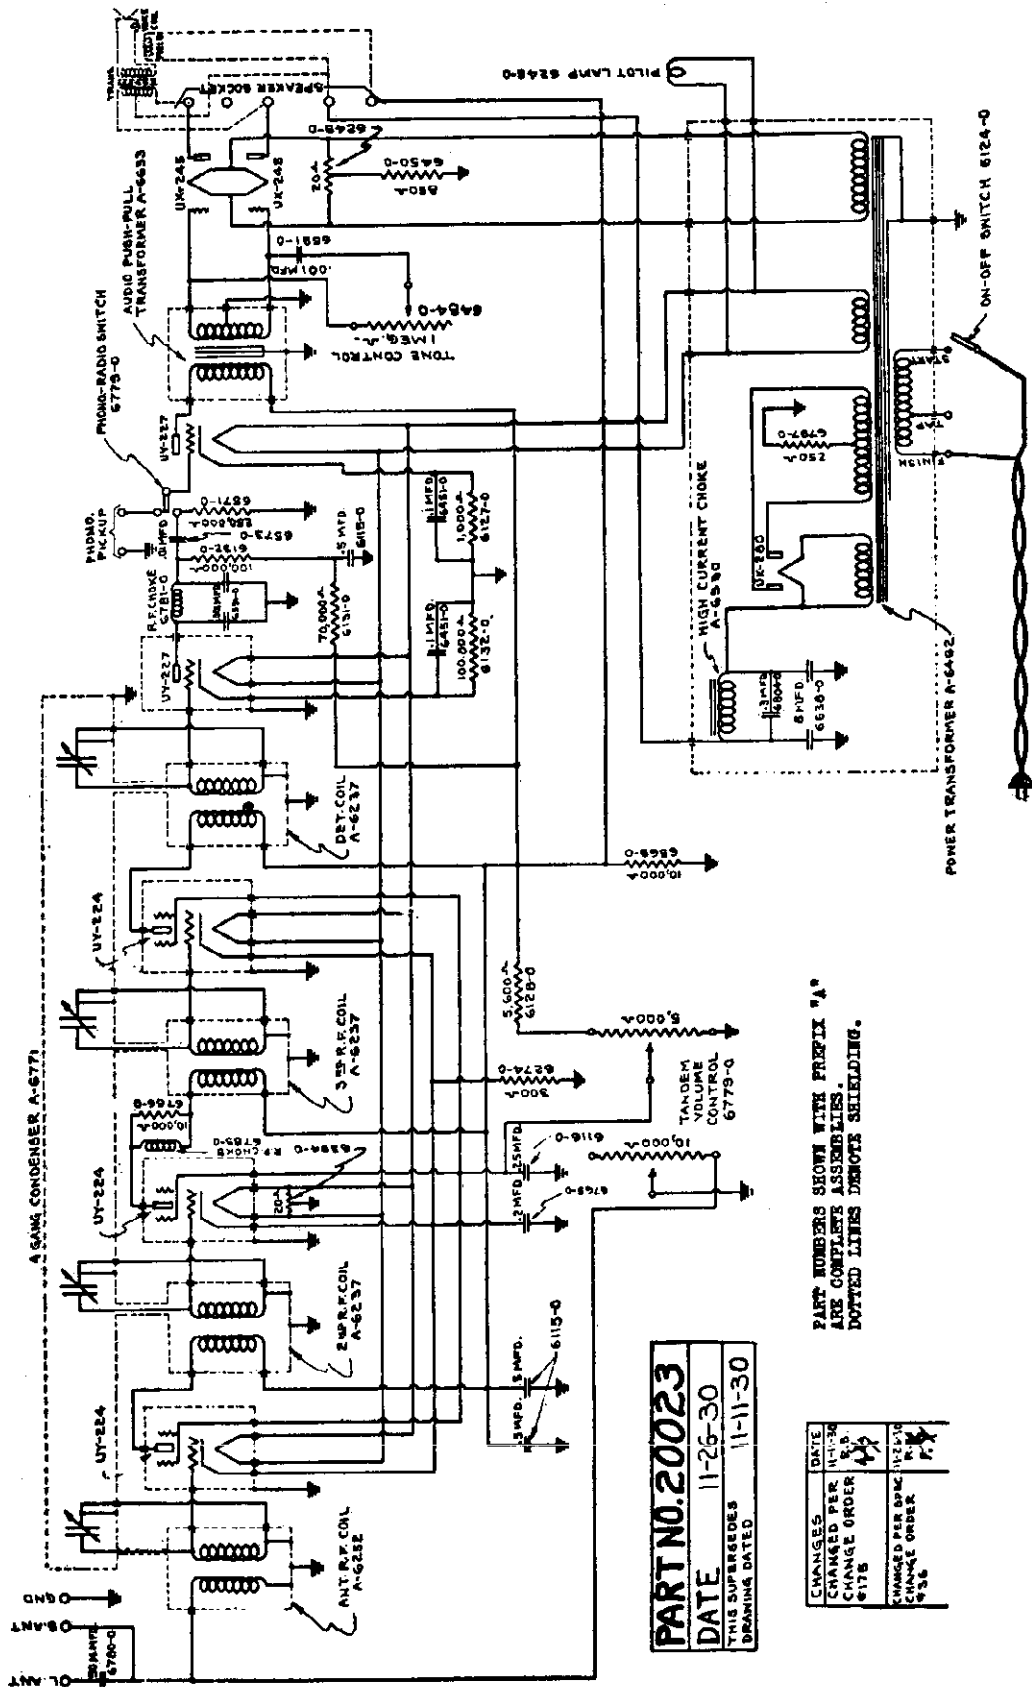

PART NO. 20023
DATE 11-26-30
THIS SUPERSEDES DRAWING DATED 11-11-30


PART NUMBERS SHOWN WITH PREFIX "A"
ARE COMPLETE ASSEMBLIES.
DOTTED LINES DENOTE SHIELDING.

CHANGES	DATE
CHANGED PER 11-26-30	11-26-30
CHANGE ORDER 6178	
CHANGED PER DWM	11-11-30
CHANGE ORDER 4236	

ERLA MODEL 225 RECEIVER

MODEL 75, 77 (231)
Schematic

ELECTRICAL
RESEARCH LABORATORIES, Inc.

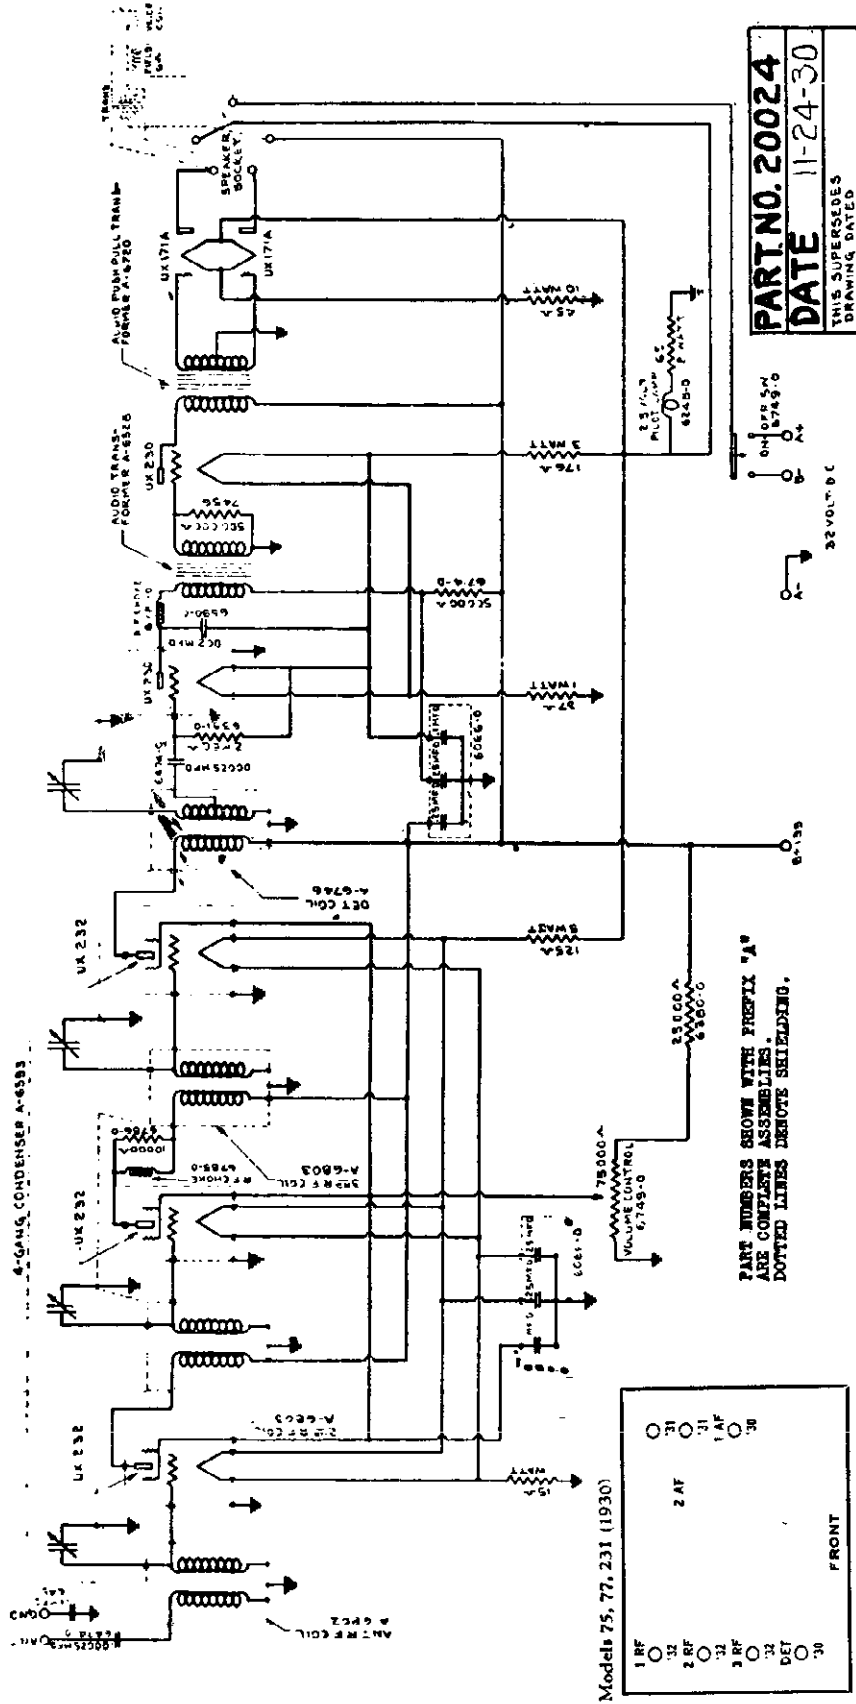

PART NO. 20024
DATE 11-24-30
THIS SUPERSEDES
DRAWING DATES

PART NUMBERS SHOWN WITH PREFIX "A"
ARE COMPLETE ASSEMBLIES.
DOTTED LINES DENOTE SHIELDING.

Models 75, 77, 231 (1930)

1 RF	31	1 AF	36
2 RF	32	2 AF	37
3 RF	33	3 AF	38
DET	34		
30			


FRONT

For 32 volt operation.

MODEL 271-A
Schematic

ELECTRICAL
RESEARCH LABORATORIES, Inc.

ERLA MODEL 271-A RECEIVER

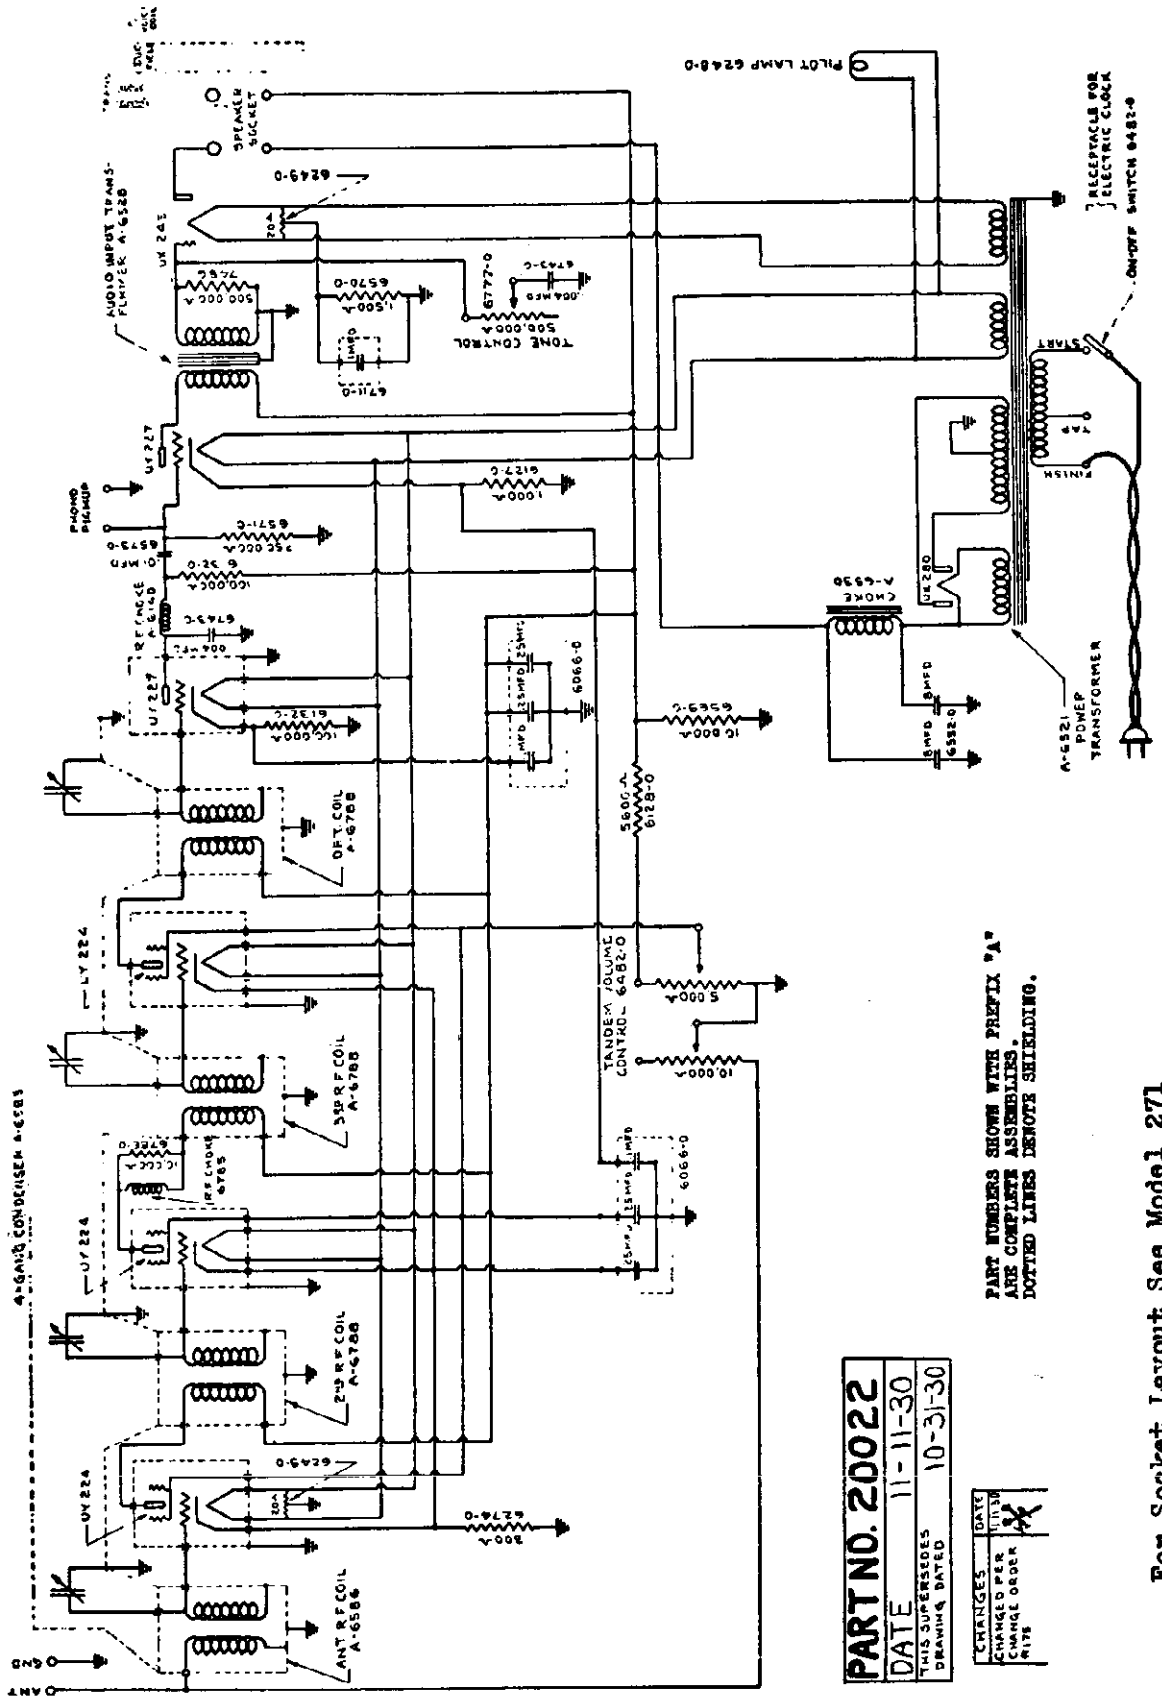

PART NO. 20022
DATE 11-11-30
THIS SUPERSEDES
DRAWING DATED 10-31-30

CHANGES	DATE
CHANGED PER CHANGE ORDER #178	11/11/30

PART NUMBERS SHOWN WITH PREFIX "A"
ARE COMPLETE ASSEMBLIES.
DOTTED LINES DENOTE SHIELDING.

For Socket Layout See Model 271

FADA RADIO & ELECTRIC CORP.

MODEL 10,11,30,31
 MODEL 10Z,11Z,30Z,31Z
 Notes

NEUTRALIZING AND COMPENSATING INSTRUCTIONS FOR
 Fada 10, 11, 30, & 31 Receivers - 60 cycles
 Fada 10Z,11Z,30Z,& 31Z Receivers - 25 cycles

NEUTRALIZATION: The first neutrodon is located to the right of the 1st RF tube; the second neutrodon is in front and slightly to the right of the 2nd RF tube; the third neutrodon is directly between the 3rd RF and detector tubes. The neutrodons are numbered according to their respective RF stages. The tube positions are indicated on the card attached to the cabinet lid or back, or back drop door in console model. The use of headphones is strongly recommended.

1. Tune in a strong low wave station or local oscillator of about 250 to 300 meters.
2. Remove the 3rd RF tube and insert a dead tube (a good tube with one heater prong cut off close to base)
3. Using the Fada special adjusting tool (part No. 1356-Ms) turn the third neutrodon to the left or right to point of MINIMUM signal. Replace the live tube.
4. Repeat operations 2 and 3 in the second and first RF stages.

COMPENSATION: Turn the tuning control towards the 100 degree mark until the edges of the rotor plates on tuning condensers two and three (numbered from left to right facing front of set) are exactly flush with the stator plates. Next, using the vernier knob set the rotor plates of the first condenser flush with the stator plates. **DO NOT MOVE THE VERNIER KNOB DURING REMAINING OPERATIONS.** The compensating condensers are mounted on the top of each tuning condenser. They are adjusted by using a socket wrench on the large nut. After the adjustment has been completed the large nut should be held with a flat open end wrench while the small lock nut is tightened with a socket wrench. These wrenches do not need to be insulated. The small lock nut should be removed before starting to compensate.

1. Using headphones if possible, tune in a weak low wave station of about 250 to 300 meters.
2. Adjust each compensating condenser by turning the large nut either to the left or right to point of MAXIMUM signal. As the signal increases during the compensation it should be reduced by the volume control so that small changes in the compensating condensers will be effective on the ear.

The order of compensating is immaterial. If the maximum points are not pronounced enough, decrease the dial setting by about one or two degrees and bring the signal back to maximum with the compensating condensers. Check the set for performance over entire range. Always recompensate whenever the setting of a neutrodon is changed.

FADA RADIO & ELECTRIC CORP.

MODEL 16,17,32
 MODEL 16-Z, 32-Z
 Notes

NEUTRALIZING AND COMPENSATING INSTRUCTIONS FOR
FADA 16, 17 & 32 RECEIVERS - 60 CYCLES
FADA 16-Z & 32-Z RECEIVERS - 25 CYCLES

NEUTRALIZATION: There are three neutrodon, one for each rf stage, each numbered to correspond with the stage neutralized, located as follows - 1st between 1st & 2nd rf tubes - front row, that is second and third tubes from electric unit; 2nd between 2nd and 3rd rf tubes, and 3rd between 3rd rf tube and detector.

To neutralize receiver, substitute head phones for loud speaker and proceed as follows: -

- 1st Carefully tune receiver to strong station or local oscillator at 250 to 300 meters.
- 2nd Remove 3rd rf tube and substitute a dead tube (prepared by cutting off one heater prong of a good tube close to base.)
- 3rd Using special Fada adjusting tool (Part No. 1356-Ms) adjust neutrodon to position of minimum signal. Replace live tube.
- 4th Repeat procedure on two remaining rf stages.

COMPENSATION: The compensating condensers are located on the top of their respective tuning condensers. They are adjusted by using a socket wrench on the large nut. After completing the adjustment, the large nut should be held with a flat open-end wrench while the small lock-nut is tightened with a socket wrench. Since the movable plate is at ground potential, it is not necessary to insulate wrenches. The first tuning condenser (nearest electric unit) holds the antenna compensator which is adjusted by means of its knurled nut.

To compensate receiver, substitute head phones for loud speaker and proceed as follows: -


- 1st Carefully tune receiver to weak station or local oscillator at 250 to 300 meters by adjusting tuning control knob.
- 2nd Beginning with antenna compensator carefully adjust each compensator for maximum volume. (It is always good practice to keep the volume control set at maximum when compensating.)
- 3rd After receiver has been compensated in accordance with above instructions, carefully retune and repeat the procedure.

1225-Ms	.25 mfd (across 16-Z speaker field)
1341-Ms	Carbon - 20,000 ohms (green)
1418-Ms	.25-.25 mfd - 200-400 volts (3 term)
1477-Ms	.000125 mfd - grid (Mld.Mica)(green dot)
1478-Ms	.001 mfd - detector (Mld.Mica) (yellow)
1485-Ms	Pilot lamp - 6 volts (orange)
2-1256-Ms	.0125 mfd- tubular (yellow dot)
2-1299-Ms	Carbon- 250 ohms (light brown)
2-1300-Ms	Carbon- 750 ohms (green)
2-1303-Ms	6,000 ohms (3 conn)(antenna circuit)
2-1307-Ms	Condenser - .07 mfd
2-1308-Ms	Carbon - 5,000 ohms (orange)
2-1316-Ms	3,000 ohms (red dot)(cathode circuit)
2094-Y	Choke - 1,400 ohms

MODELS 25, 35-B

FADA RADIO & ELECTRIC CORP. Sensitivity Adjustments

Sensitivity Adjustment Fada-25 Receiver

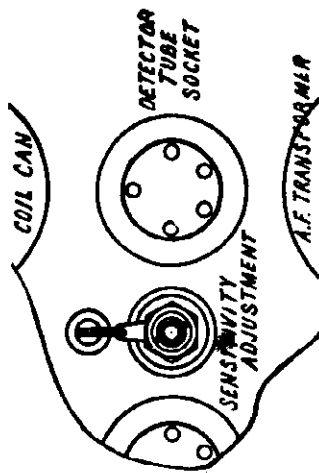


Present production FADA-25 receivers incorporate a sensitivity adjusting tool. Adjustment is made with a special neutralizing tool part number 1356MS. Facing the rear of the receiver there appears a row of three neutrons between the r.f. tube sockets. The one on the extreme right, however, is not connected to the usual neutralizing circuits, but is a sensitivity adjustment. Turning this neutron up (i.e., to the left) results in minimum circuit reaction and in a more stable receiver. Turning this neutron down (i.e., to the right) increases circuit reaction, and consequently sensitivity and selectivity. Advancing this neutron too far (i.e., down to the right) will cause long wave oscillation. Maximum sensitivity and selectivity occur when the receiver is adjusted almost to the point of oscillation.

Care should be exercised to insure that everything is in order before the sensitivity adjustment is moved. This adjustment must never be advanced to a point at which sustained oscillation occurs. This adjustment is a useful tool only when carefully used—never attempt to make up for poor compensation or defective tubes.

Sensitivity Adjustment On Fada 35B

A sensitivity adjustment is incorporated in the FADA 35B. The adjustment appears as a neutron (which must be adjusted) with special neutralizing tool part number 1356MS located between the detector tube and the fourth r.f. coil as shown in sketch. The receiver is adjusted at the factory for best operation on an average antenna. Under no circumstances should this adjustment be disturbed until:

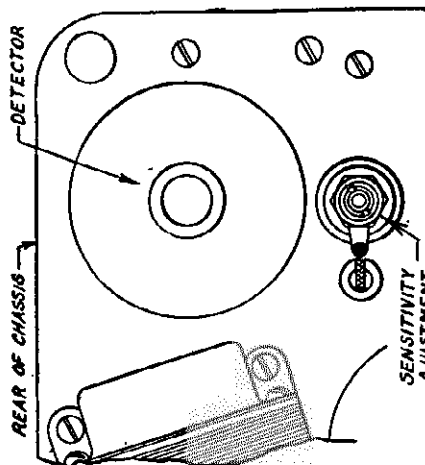

The sensitivity adjustment effects long wave (i. e. 350 meters to 550 meters) sensitivity and selectivity. Turning the adjustment to the right (i. e. down) increases circuit reaction and consequently long wave sensitivity and selectivity. Turning the adjustment to the left (i. e. up) decreases circuit reaction and consequently long wave sensitivity and selectivity. To make sensitivity adjustment proceed as follows:

Make sure the receiver, tubes, antenna and ground are right. Carefully compensate for antenna in use following instructions of receiver instruction sheet. Carefully tune receiver to long wave station (above 500 meters). Turn volume control to maximum. Turn adjustment up or down as required a short distance (say one half turn at a time) and tune thru station noting swish as station is tuned in and out. Adjust to desired point being sure receiver does not squeal (i. e. oscillate).

The Fada 35-B has a hum adjustment located on the rear of the receiver chassis near the phonograph jacks. This adjustment appears as a small shaft with a slot adapted for a screw driver. This is sealed with ambroid after being adjusted at the factory, but the seal may be broken if installation conditions warrant. To adjust receiver for minimum hum, insert screw driver in slot and turn slightly to right and left to position of minimum hum. During this operation the volume control must be turned to zero and the power line plug must be inserted in the socket in the position of minimum hum

FADA RADIO & ELECTRIC CORP.

MODEL 40
NotesCOMPENSATING INSTRUCTIONS FOR
FADA 40 Receiver - 60 CYCLES ONLY

The compensating condensers are located on the top of their respective turning condensers. They are adjusted by using a socket wrench. Since the movable plates are at ground potential it is not necessary to insulate the wrench.

The first tuning condenser on the extreme right (facing rear of Receiver) holds the antenna compensator which is adjusted by its knurled nut.

The static shield which is mounted on four studs, should be removed by loosening the four thumb nuts. This shield has no effect whatsoever on Receiver adjustment, consequently it may be left off during compensation, etc.

INSTRUCTIONS FOR
SENSITIVITY ADJUSTMENT

The sensitivity adjuster appears as a neutrodon (which must be adjusted with special neutralizing tool, part No. 1356-Ms) located between the detector tube and the fourth R.F. coil as shown in instruction sheet which accompanies each Receiver. The Receiver is adjusted at the factory for best operation on an average antenna.

The sensitivity adjustment effects long wave (i.e. 350 meters to 500 meters) sensitivity and selectivity. Turning the adjustment to the right (i.e. down) increases circuit reaction and consequently long wave sensitivity and selectivity. Turning the adjustment to the left (i.e. up) decreases circuit reaction and consequently long wave sensitivity and selectivity. To make sensitivity adjustment proceed as follows:

Make sure the Receiver, tubes, antenna and ground are right. Carefully compensate for the antenna in use, following instructions given in Receiver instruction sheet. Carefully tune Receiver to a long wave station (as near 500 meters as possible). Turn volume control to maximum. Advance the sensitivity adjustment (i.e. tune down to right) a short distance (say one-half turn at a time) and tune through the station, noting the swish as the station is tuned in and out. Continue this procedure until the Receiver squeals (oscillates) and then retard neutrodon until Receiver is just below the point of oscillation (i.e. does not oscillate). This adjusts the Receiver for maximum radio frequency performance. If the Receiver oscillates at long waves before the adjustment of the neutrodon has been altered, the reverse procedure is followed. That is, the neutrodon is retarded (i.e. up to the left) a half turn at a time until the oscillation, noted when turning thru a station, ceases. Oscillation is evidenced by a pronounced squeal or note with changes in pitch as the tuning dial is moved. Do not confuse carrier swish or heterodynes between stations with oscillation.

FADA RADIO & ELECTRIC CORP.

MODEL 41,42,44,46,47
(KA)

Voltage

Model 41,42,44,46,47 (KA)

VOLTAGE READINGS ON 60-CYCLE KA RECEIVER

The following voltage readings are to be taken at points beneath the chassis. Be sure that the overall condenser and tube shield housing cover is fastened in place or else oscillation will occur which will affect voltage readings. The speaker field coil must remain connected in the circuit and all tubes must be in their correct sockets, otherwise extensive damage will be done.

1. General Information

Volume Control set at any position but no signal
Voltage regulator tap in high position.

Line Volts	Line Watts	Filament Volts			Plate-Cathode Volts			Screen Volts RF
		Rect.	Pwr.	Amp.	Pwr.	RF	Detector Det.Amp.	
100	78	4.2	2.1	2.1				
110	96	4.8	2.35	2.35				
115	100	5.0	2.5	2.5	233	152	**	85
120	114	5.15	2.6	2.6				
130	132	5.5	2.8	2.8				

** A voltage reading cannot be obtained at the plate prong of the two (2) element detector. The plate voltage reading on the detector amplifier should also be ignored, because to take such a reading, it becomes necessary to shunt the voltmeter across several of the resistances in the circuit and the result is a reading of about 20 volts which will vary in accordance with the intensity of the signal received.


Voltages Across Condenser Block Sections (Line Voltage 115)

1st	2nd	3rd	4th
390	352	280	152

Bleeder Circuit Voltages (Line Voltage 115)


Volts Across 100 ohms	-	2.5	NOTE:- Use a high resistance voltmeter (1000 ohms per volt). Readings may vary slightly due to commercial tolerance allowable in the manufacture of electrical equipment and tubes.
Volts Across 300 ohms	-	10	
Volts Across 800 ohms	-	47.5	
Volts Across 5,000 ohms	-	118	
Volts Across 6,700 ohms	-	53	
Volts Across 13,000 ohms	-	89	
Volts Across Speaker Field	-	72	
Volts Across 400 ohm choke	-	38	

FADA RADIO & ELECTRIC CORP. MODEL 61, 66 (KX)

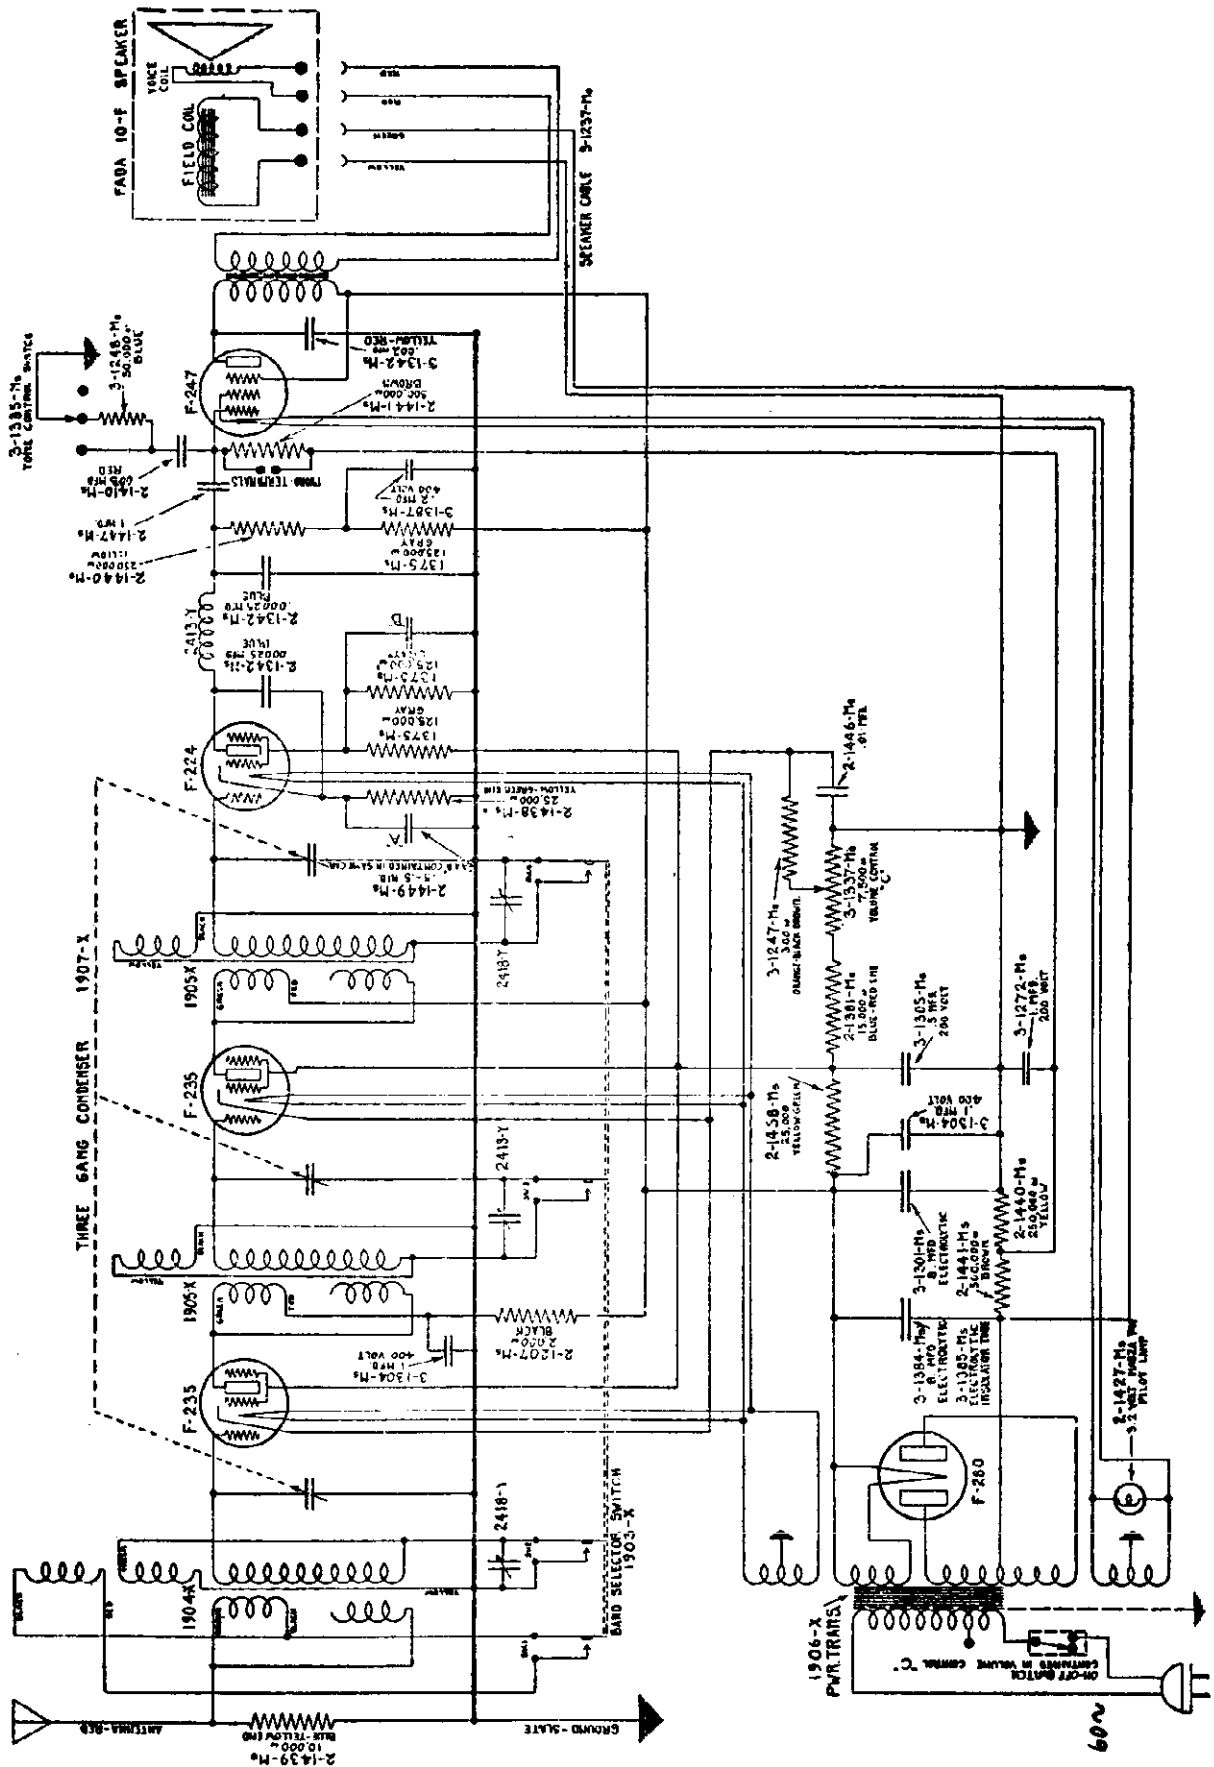


MODEL 122 (KE)

FADA RADIO & ELECTRIC CORP.

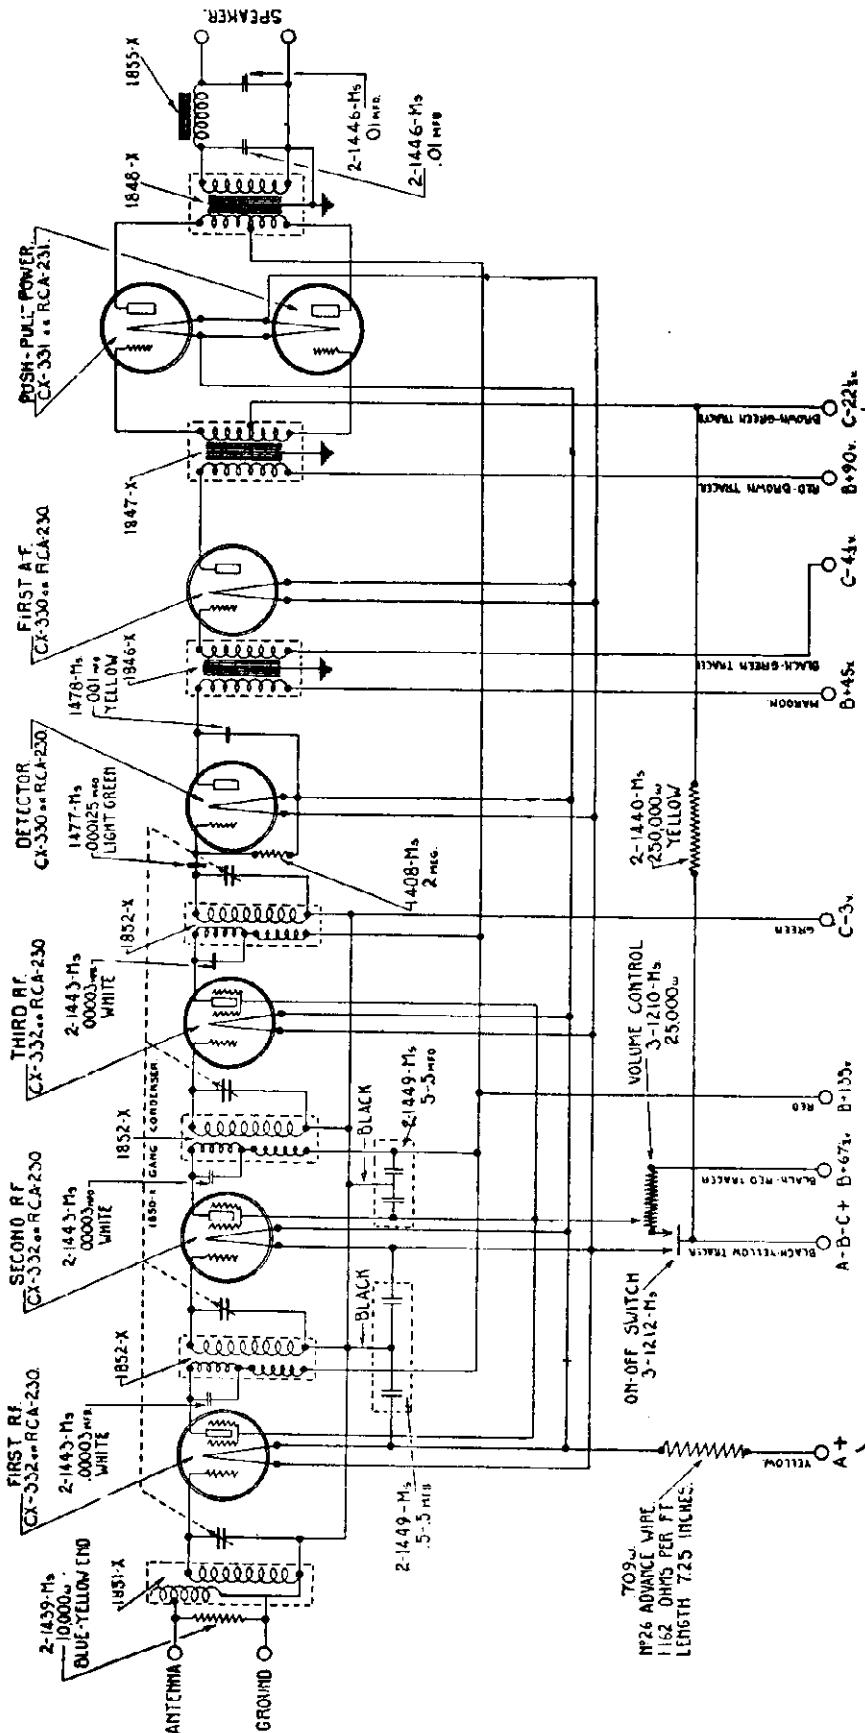


NOTE: GANG CONDENSER (1450-H) HAS 2 TRIMMER CONDENSERS ON 1st, 2nd, AND 3rd RADIO FREQUENCY STAGES, AND ONE TRIMMER ON DETECTOR TUNING CONDENSER.

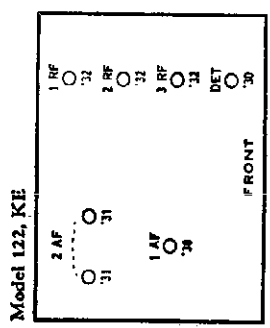

Wiring Diagram Fada Battery Model 122 (KE)

MODEL Acratone 5
Schematic


FEDERATED PURCHASER

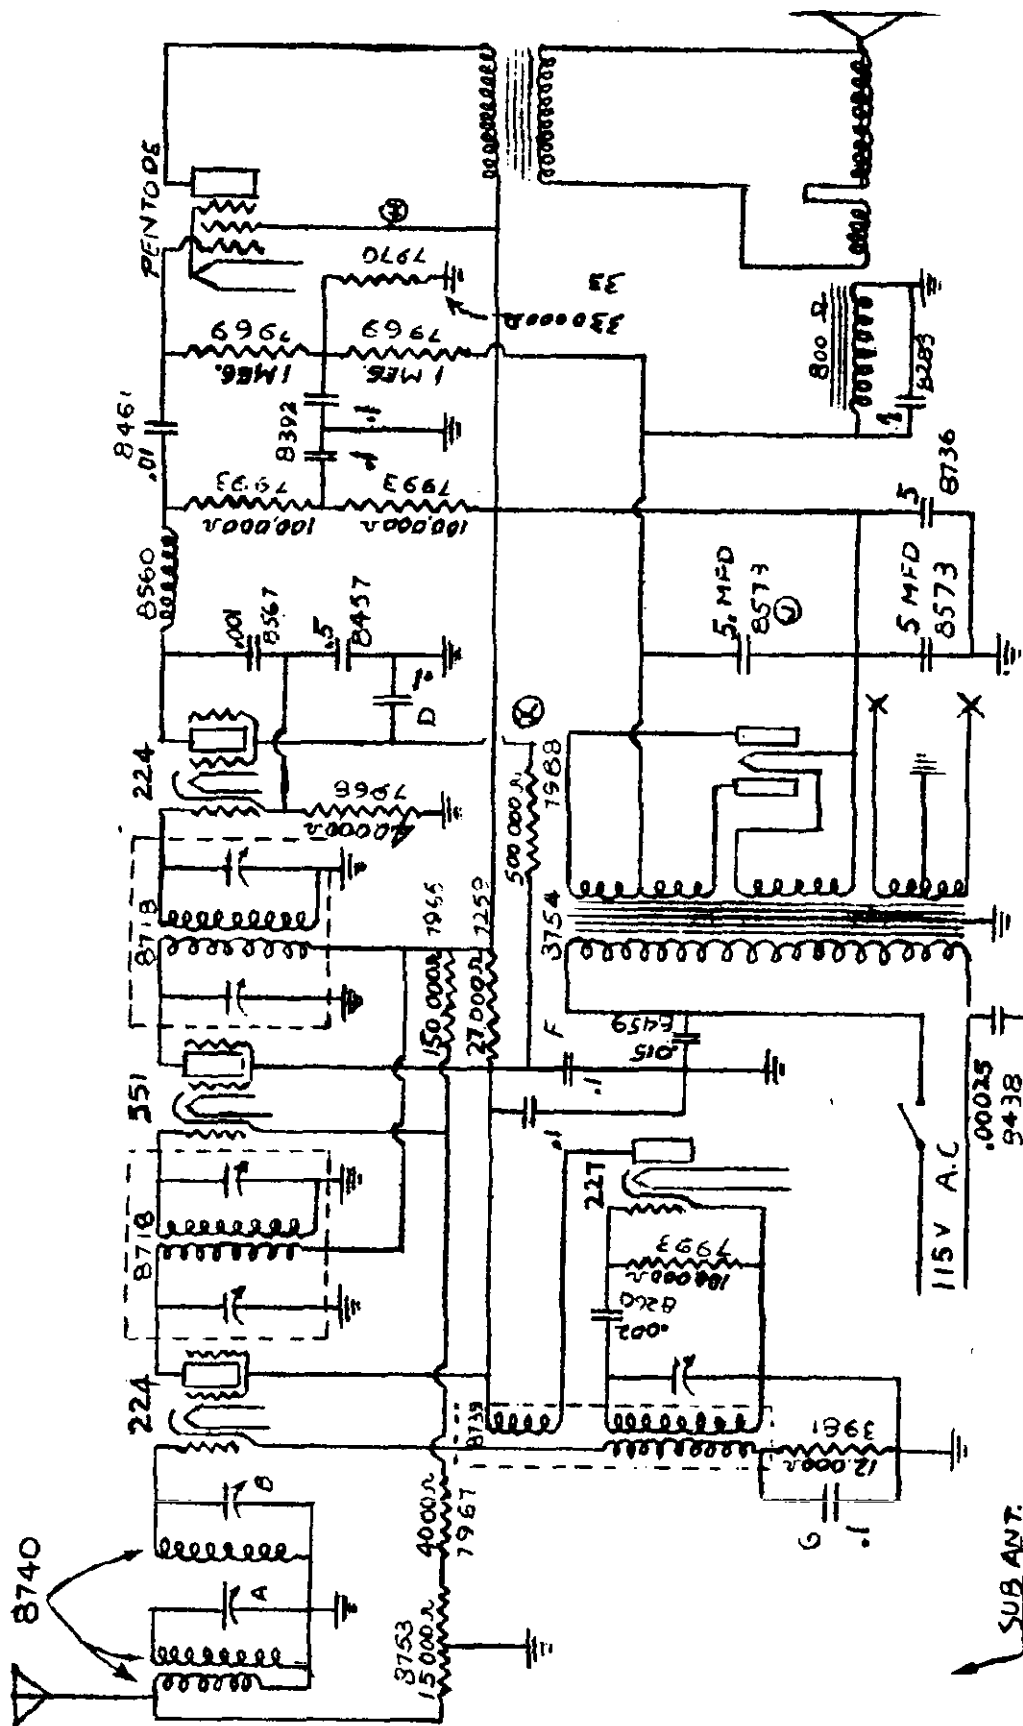

ACRATONE MODEL 5

JESSE FRENCH & SONS PIANO CO.

MODEL "G" Junior Schematic

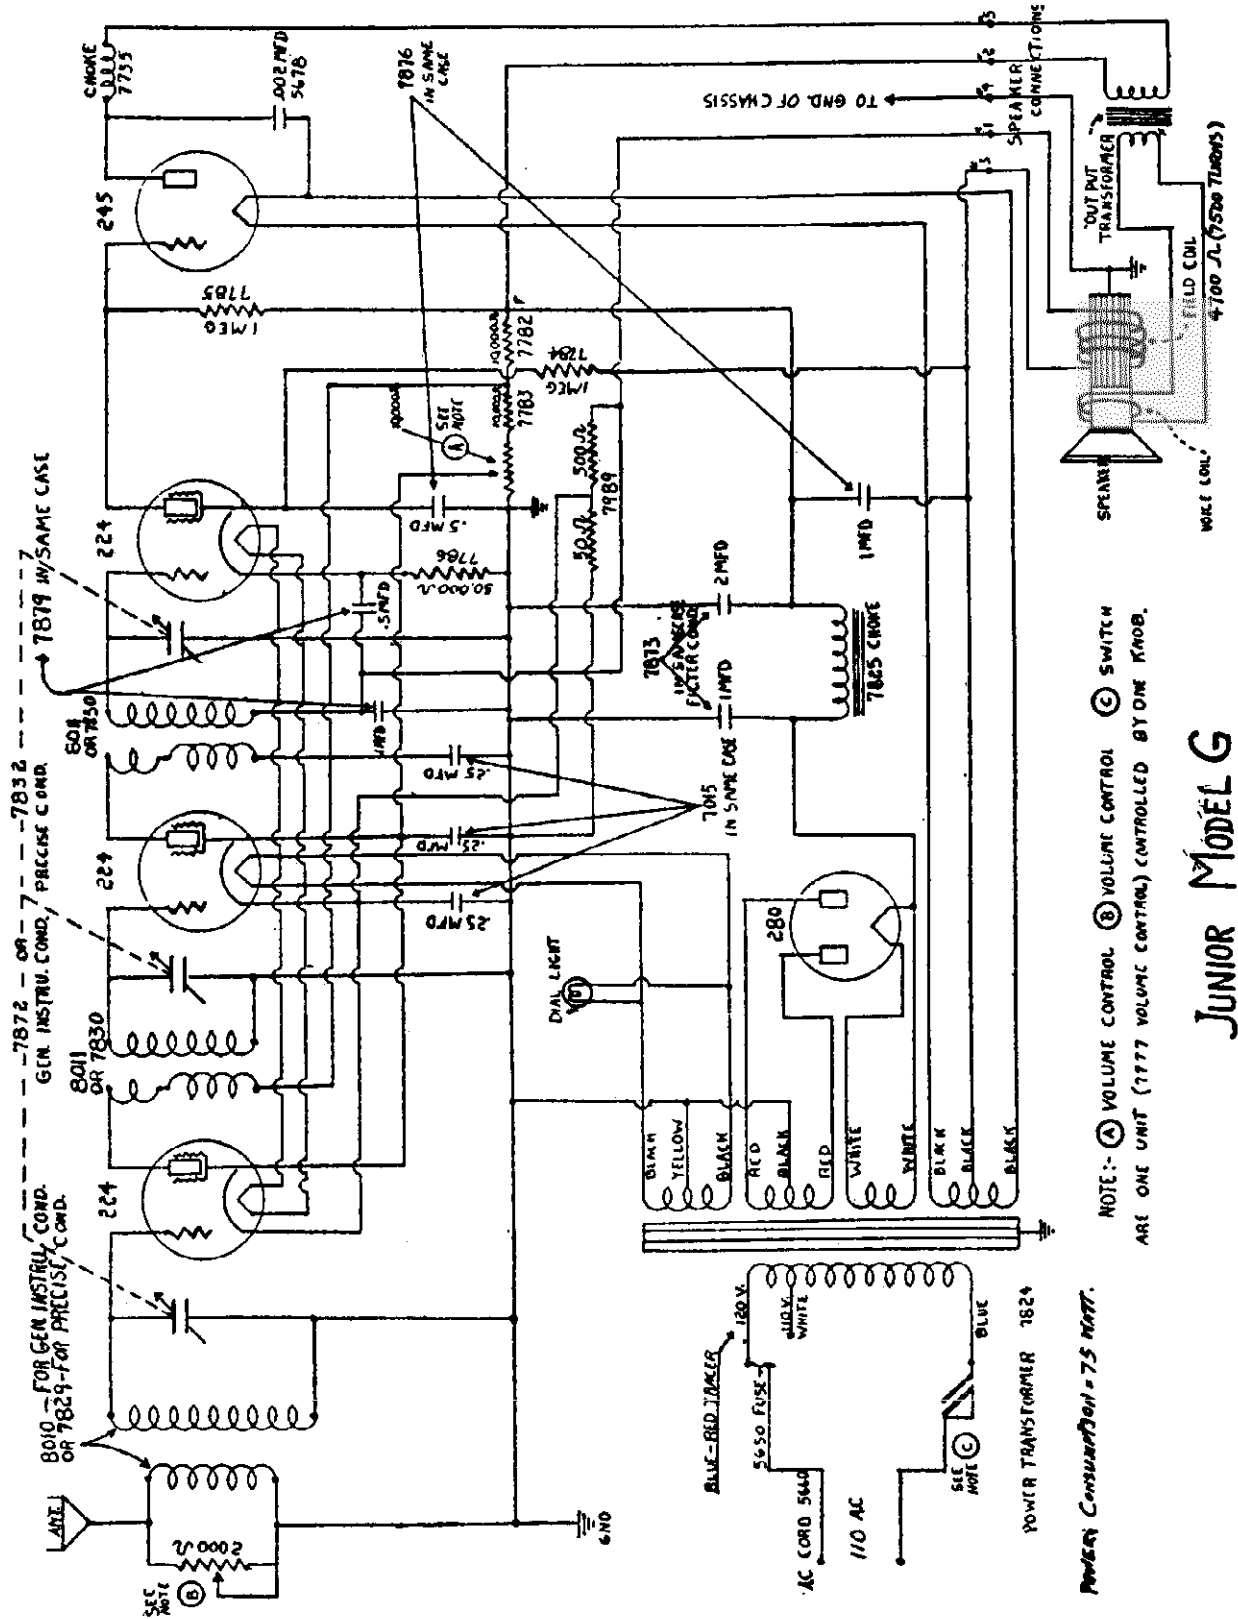

NOTE: (A) VOLUME CONTROL (B) VOLUME CONTROL (C) SWITCH
 ARE ONE UNIT (1877 VOLUME CONTROL) CONTROLLED BY ONE KNOB.

JUNIOR MODEL G

POWER Consumption = 75 WATT.

MODEL "G" Junior
Service Notes

JESSE FRENCH & SONS PIANO CO.

JUNIOR MODEL G

Radio Frequency Coils:

The R. F. Coils are of the high reactance type, accurately matched with the condensers.

There are two types of coil sets as well as two types of condenser gangs, and are designated by the markings as follows:

A. The coils used first with precise type condensers, are wound with 116 turns, space wound, and have no color designations on tubing.

B. No. 7829—7830. These coils used with precise condensers, are wound with 122 turns, space wound and have a red mark of paint on base of tubing.

C. No. 8010—8011. These coils used with General instrument condensers, have 126 turns, space wound, have a marking of white paint on base of tubing.

Positions:

Coils No. 8010—7829. The first R. F. coil is located at the front of chassis and is not interchangeable with the second and third R. F. coils.

Coils No. 8011—7830. The second and third R. F. coils are interchangeable and are located in their respective places.

The first R. F. coil differs from the others, as it does not have a choke bucking coil inside of the tubing as the others.

Coil cans are very essential to aid selectivity and reduce interference.

The Condenser Gang:

The tuning condensers are graded in three types.

The condensers can be defined as follows:

The first precise type, have no extended shields between the condensers.

No. 7832. The second precise type have two shields extending between the center and outside condensers.

No. 7872. The general instrument type have four shields and can be easily distinguished from the others.

VOLTAGES

Referring to the Circuit Diagram, the following voltages are given throughout the circuit using straight A. C. or D. C. meters.

CHECK FROM GROUND OF CHASSIS TO POINT DESIGNATED.

GROUND IS NEGATIVE. POINT DESIGNATED IS POSITIVE.

SET VOLUME CONTROL AT MINIMUM.

SET CHASSIS ON ONE END WITH BOTTOM IN VIEW.

Use 600 volt D. C. meter—1000 ohms per volt.

Rectifier filament or choke No. 7825 (beginning).....	440 volts
Choke No. 7825 (ending).....	390 volts
245 power tube plate or choke No. 7735.....	368 volts

Use 300 volt D. C. meter—1000 ohms per volt.

Detector plate or resistor No. 7785 (ending).....	48 volts
R. F. Plate or red wire of condenser No. 7015.....	242 volts
245 grid or resistor No. 7785 (ending).....	48 volts
Detector grid or green wire of condenser No. 7879.....	22 volts
Detector cathode or resistor No. 7786.....	12 volts
R. F. cathode or black wire condenser No. 7015.....	2 volts
R. F. Screen Grid at red wire volume control or at Resistor No. 7783 (end).....	120 volts

USING A WESTON SET TESTER MODEL 537

Volume control set at maxim.

SETTINGS	R. F. TUBES	DETECTOR	AMPLIFIER
PLATE (300)	190 d. c.	55 d. c.	210 d. c.
CATHODE POS.	2 d. c.	65 d. c.	none
FIL. (4)	2.8 a. c.	2.7 a. c.	2.7 a. c.
PL. MA. (30)	none	none	25 d. c.
BIAS (c60)	2 d. c.	2 d. c.	12 d. c.

Rectifier pl. ma. (30) 19 D. C.—Fil. volts 4.5 a. c.
Det. grid on 50 volt d. c. meter 12 volts.
R. F. grid on 250 volt d. c. meter 89 volts.



Det. cathode on 50 volt d. c. meter 21 volts.
Line voltage 114 volts a. c.

SPEAKER CONNECTIONS:
A. Yellow No. 4 goes to speaker ground.
B. Black No. 3 goes to speaker field.
C. Black No. 1 goes to speaker field.
D. Red No. 2 goes to output transformer.
E. Red No. 5 goes to output transformer.

SPEAKER SERVICING
The speaker color chart and the respective wiring connections. As follows: Chassis connections:
A. Yellow No. 4 goes to ground of set.
B. Black No. 3 goes to center tap of 245 tube filament, and resistor No. 7784.
C. Black No. 1 goes to No. 7989, 500 ohm resistor and grid return of detector, at R. F. coil.
D. Red No. 2 goes to No. 7782, 10,000 and 7785 resistors.
E. Red No. 5 goes to plate of 245 or No. 7735 choke coil.

JESSE FRENCH & SONS PIANO CO.


MODEL H-2 Pentode
110 Volt AC
MODEL H-2 Special
110 Volt DC

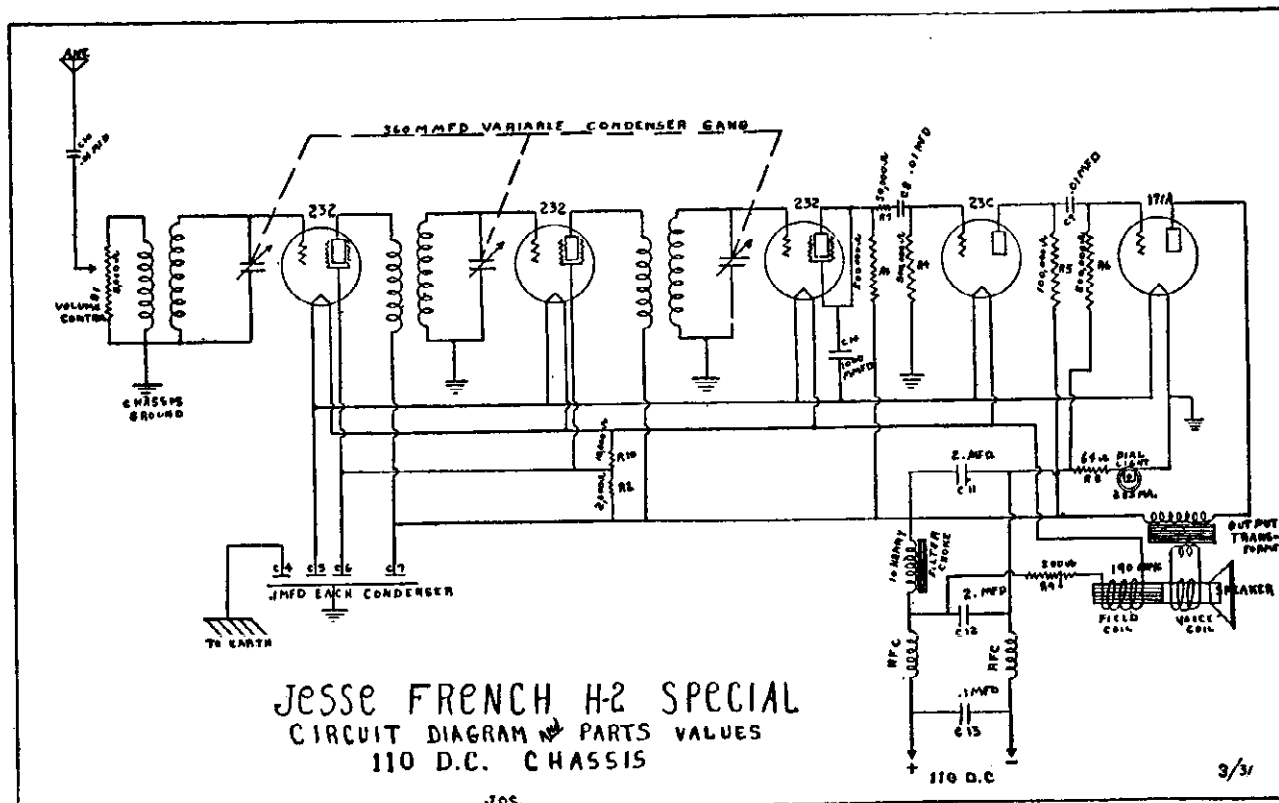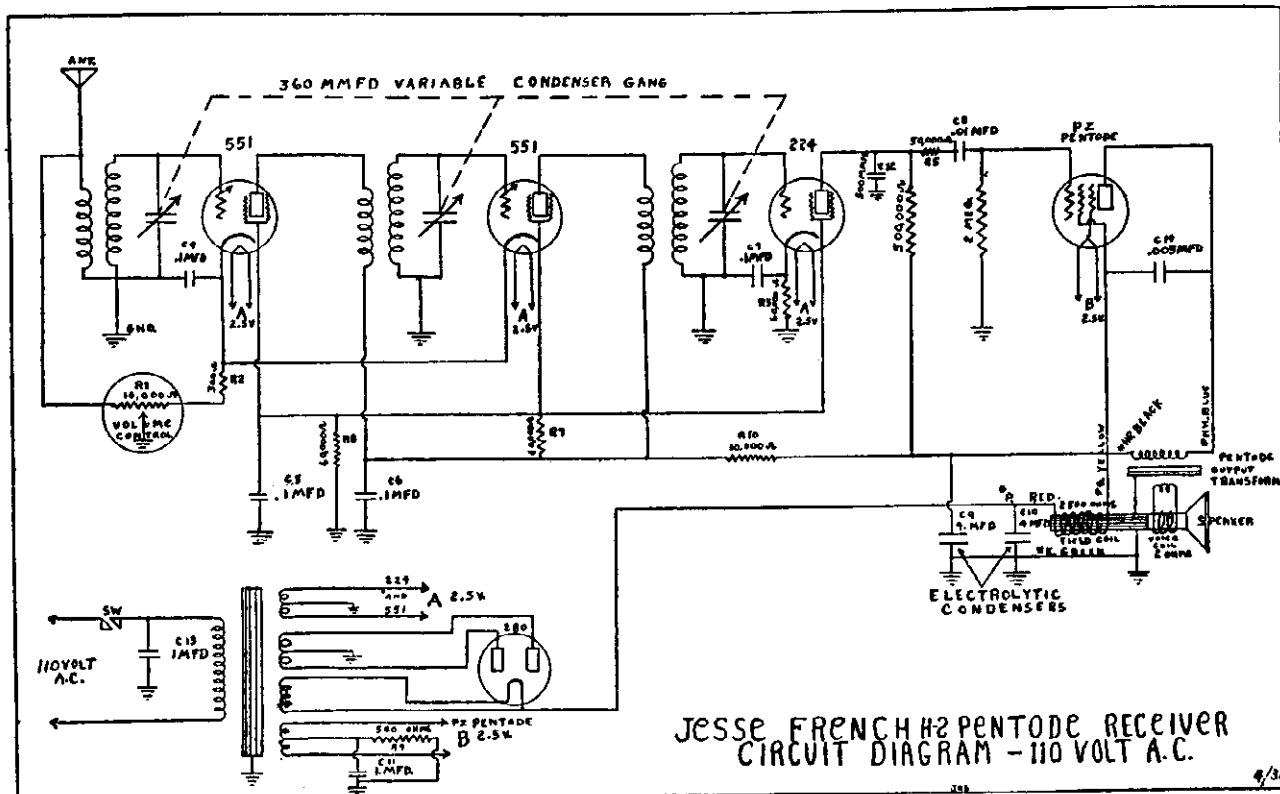

JESSE FRENCH & SONS PIANO CO.

MODEL H-1
Schematic

For Service Notes, see page following.

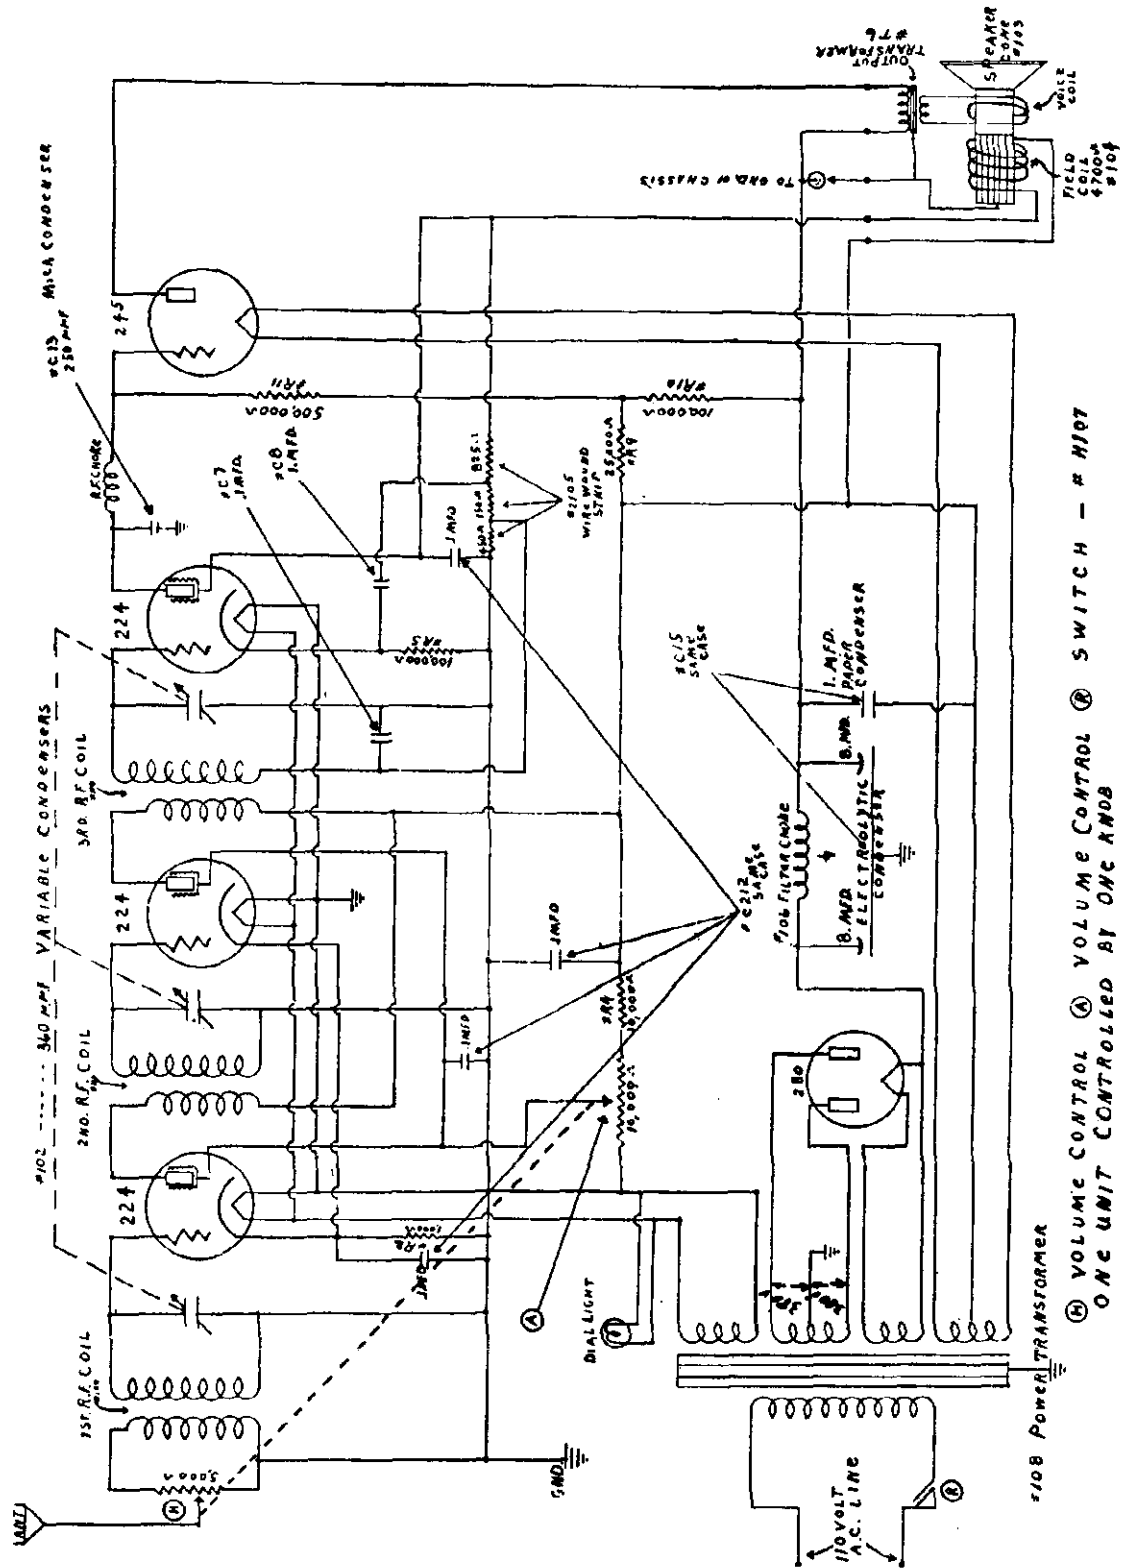


① VOLUME CONTROL ② VOLUME CONTROL SWITCH - # 1107
ONE UNIT CONTROLLED BY ONE ANDB

JUNIOR MODEL H-1

JESSE FRENCH & SONS PIANO CO.

MODEL U-1
Schematic

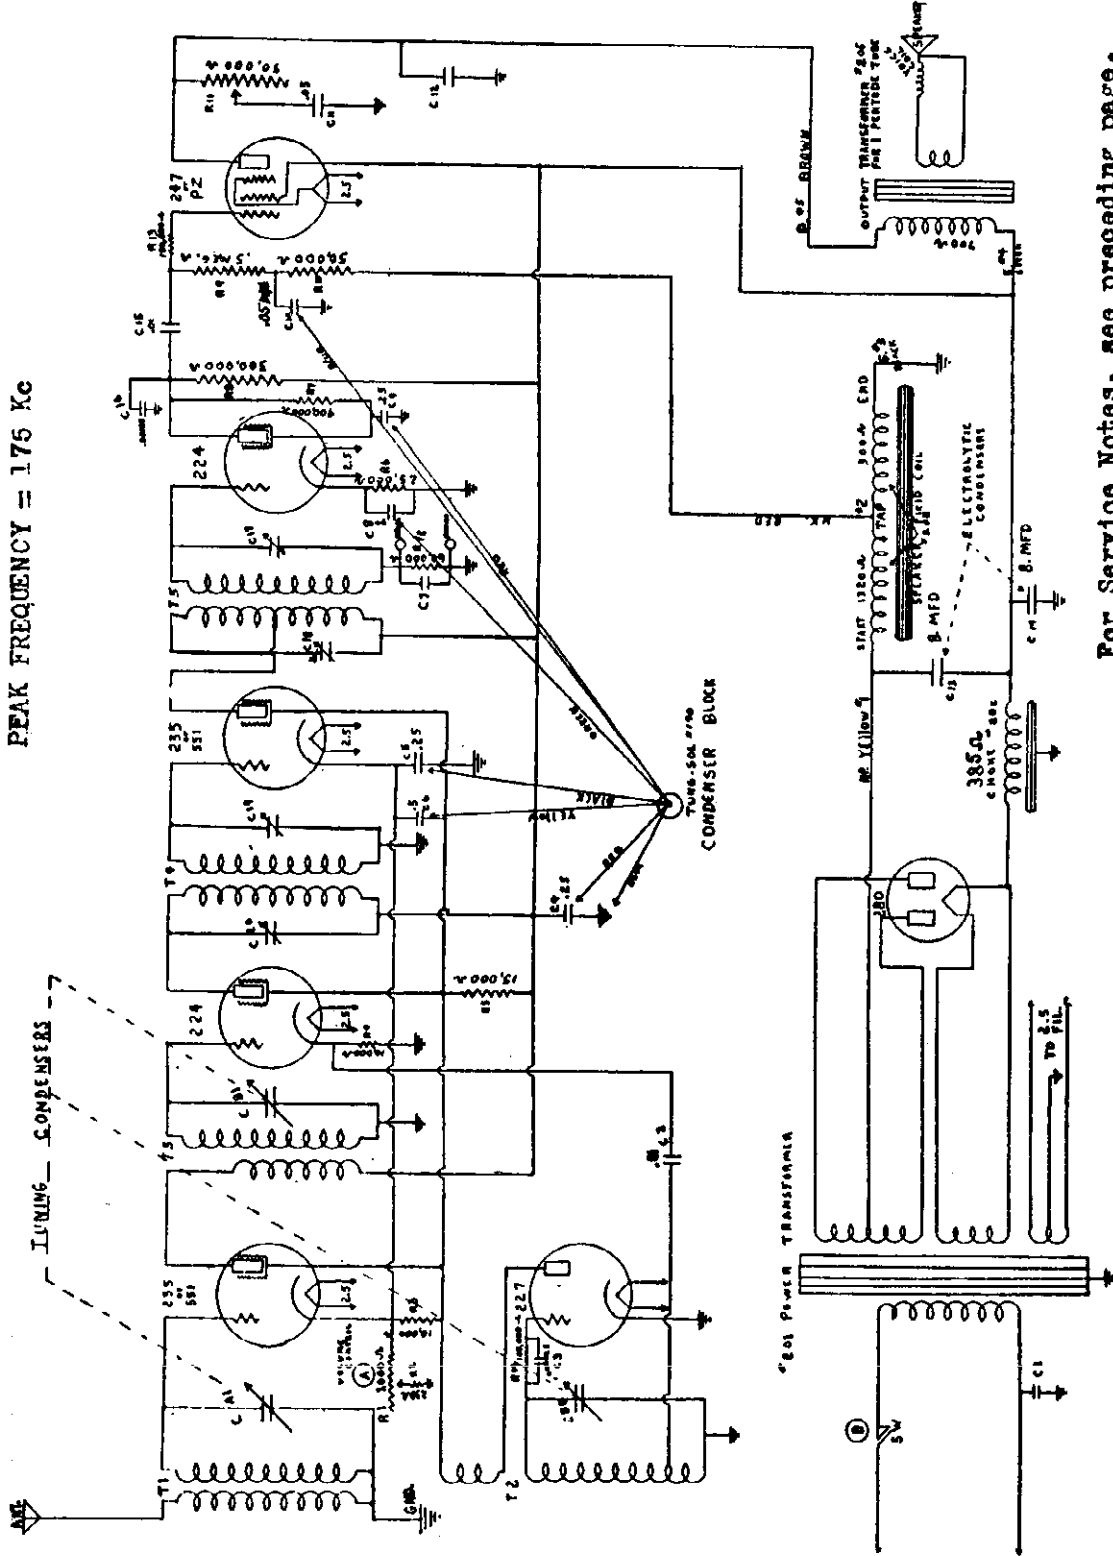

PEAK FREQUENCY = 176 Kc

TUNING CONDENSERS

CONDENSER BLOCK

600 POWER TRANSFORMER

For Service Notes, see preceding page.

JESSE FRENCH U-1 SUPERHETERODYNE
SCHEMATIC WIRING DIAGRAM AND PARTS DESIGNATIONS

MODEL H-1
Service Notes
MODEL U-1
Service Notes

JESSE FRENCH & SONS PIANO CO.

JUNIOR MODEL H-1

DETECTOR

It is quite a question in the Loftin-White direct coupled amplifier where detection actually takes place, but for the time being, we will call the type 224 tube the detector, and the type 245 tube the audio frequency amplifier. The detector can be considered of the high bias type. A 100,000 ohm resistor in the cathode circuit of the 224 tube connects the cathode approximately 15 volts positive with respect to ground. This is too high a bias for the 224 to operate as a detector. Therefore the grid return is brought back to a position on the network about 12 volts position with respect to ground. This leaves a three volt bias on the grid of the detector which is the proper value for detecting weak signals. When a strong signal is delivered to the grid of the detector, the detector plate current increases. This changes the cathode voltage from 15 volts approximately to 20. At the same time, the plate current in the network decreases making the grid return approximately 8 volts positive with respect to ground. The effective bias on the grid of the detector tube is therefore about 12 volts which is the proper value for detecting the strong signal. In measuring the bias on the detector, the readings will be affected a great deal by the type of voltmeter used. It is best for the service man to take these readings on a set which is known to be good with his own voltmeter. In the future these readings can be taken as standard and questionable sets compared to them.

AUDIO

The peculiar part of measurements on this audio system is the high voltage from the 245 tube plates to ground, the high voltage from the filament to ground and the impossibility to read the grid voltage with a meter. The best indication of the Loftin-White detector amplifier condition is the plate current of the type 245 tube. This should be approximately 38 milliamperes. This reading will vary quite a bit with different tubes and with the line voltage.

Tube	Filament V	Plate V	Cathode V	Grid V	Plate Current
1st R. F.	2.5	160	3	0	3.
2nd R. F.	2.5	160	3	0	3
Detector	2.5	varies	14	12	.25
Audio Rectifier	2.5	380	160	varies	40
					20 ma. per Plate

Line Voltage 120—
 All plate voltages are read from plate of the tube to ground.
 All cathode voltages are read from the cathode to ground.
 All grid voltages are read from the grid of the tube to ground.

A special dynamic speaker with a 4700 ohm field coil is used as part of the Loftin-White resistance network. The rectifier tube is used as a full wave rectifier and supplies the total plate current of the set which is approximately 38 milliamperes at 400 volts.

THE U1 SUPERHETERODYNE CIRCUIT

The U1 Chassis uses seven tubes as follows: one 5Y1 variable Mu tube for the first tuned R. F. stage, one 224 screen grid tube for first tuned detector, with a 227 oscillator tube signal beating into the first detector stage. One 5Y1 Variable Mu tube for the intermediate R. F. stage and a 224 for power detector. This second detector or Power Detector is resistance coupled to the power tube which is a 2Z Pentode type tube. One 280 tube is used as a rectifier.

The grid bias of the Pentode is obtained by the center tap of the Rectifier Plate passing through the 1620 ohm field coil to ground instead of leading direct to ground for negative potential. The power grid is tapped into the field coil at 1320 ohms or 300 ohms from ground, making a positive flow to ground. The resistances are so arranged in the grid circuit of this power tube, that it gives excellent tone quality because it presents a constant positive flow to ground of circuit.

A 385 ohm filter choke connects the source of the plate or 280 filament with the plate filter by passes which are of the 8 mfd wet electrolytic type condensers and the remainder of the circuit being by-passed by paper and mica condensers.

The first electrolytic condenser by-passes the plate positive source to the center tap of the rectifier plate winding or negative potential which will have a negative voltage of approximately 83 volts before it passes through the field coil to ground. The body or negative of the electrolytic case being insulated from the chassis permits this by-passing arrangement.

LINE VOLTAGE 110 VOLTS A.C. - VOL. CONTROL AT MIN.

Tubes	227	551	224	561	224	2ZPentode	280
Plate	95	246	246	246	98	226	278
Screen Grid	none	95	95	95	30	246	
Cathode	none	57	7.5	37	4.75	0	
Grid	-5.75	0	0	0	0	-1.5	

VOL. CONTROL AT MAX.



Plate	68	240	240	94	220	275
Screen Grid	0	68	68	28	240	
Cathode	0	3.5	5	3.5	4.5	0
Grid	3.4	0	0	0	0	1.5

The following are the given voltages at the speaker terminals: Brown lead 220 volts - Green lead 240 volts - black lead 0 - Red lead 14 volts - Yellow lead 83 volts.

Resistors are marked according to the standard R.M.A. color code.


GENERAL MOTORS RADIO CORP.

MODEL Day-Fan A-5005
A-5020
Schematic, Voltage

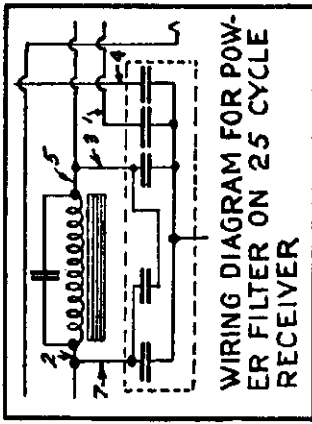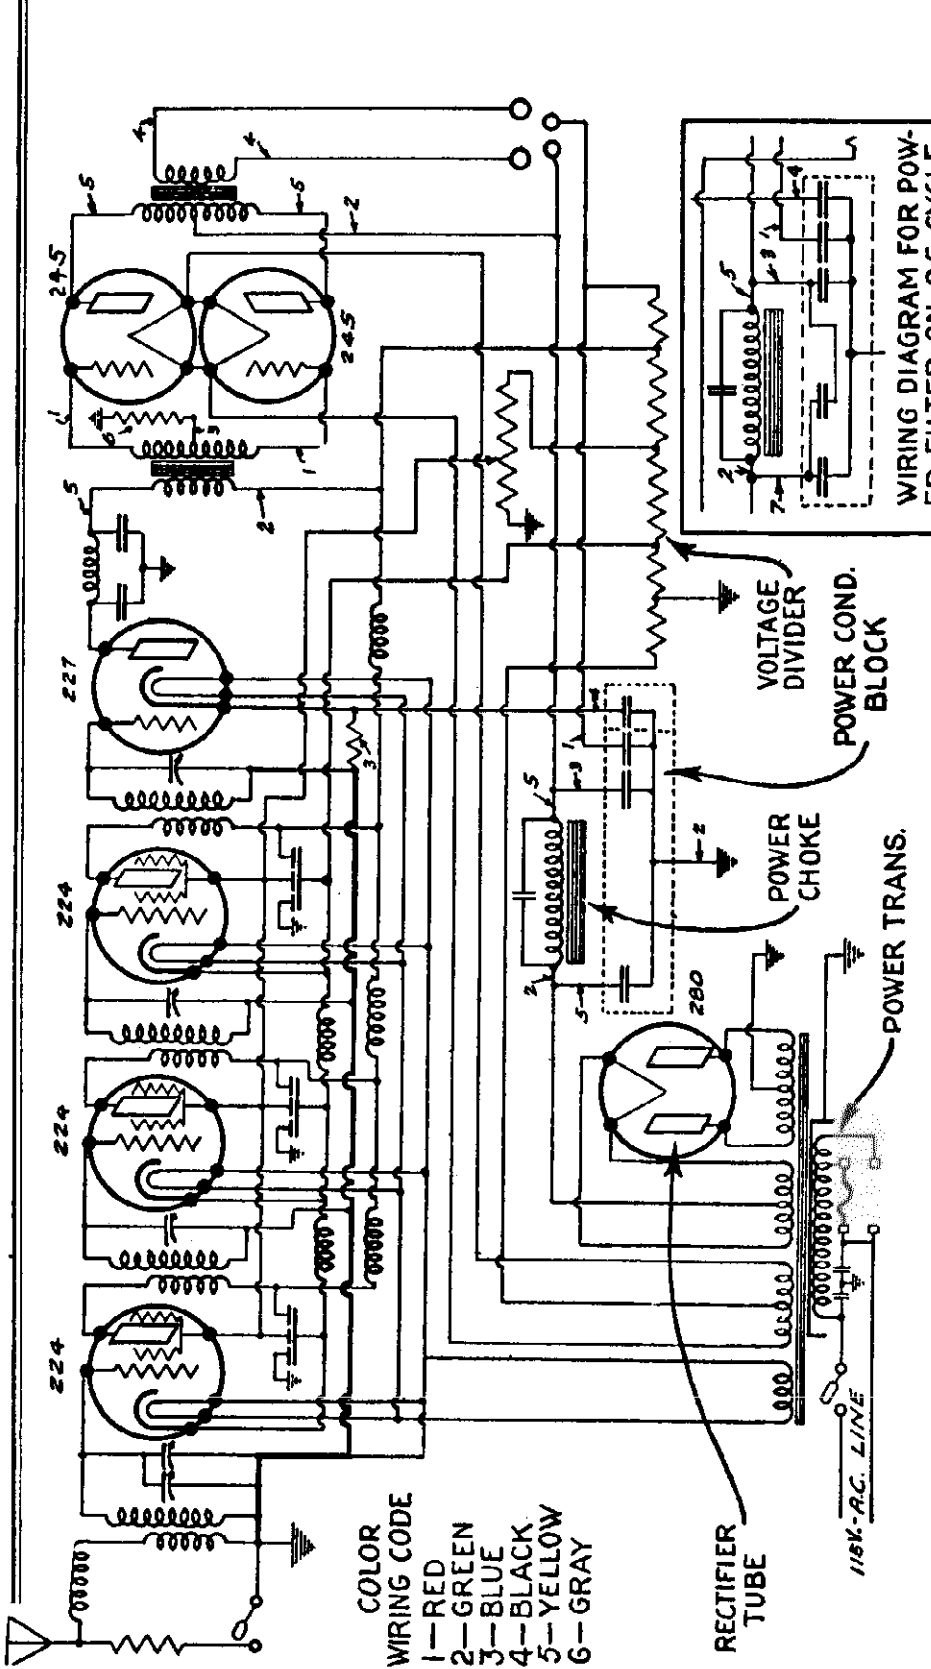

- COLOR WIRING CODE**
 1-RED
 2-GREEN
 3-BLUE
 4-BLACK
 5-YELLOW
 6-GRAY

Type of Tube	Position of Tube	TUBE IN SET ANALYZER						
		"A" Volts	"B" Volts	Con. Grid "C" Volts	Screen Volts	Cathode Volts	Normal Plate Ma.	Gd. Test Ma.
224	1-R. F.	2.2	145	3	+66	+3	2.0	4.0
224	2-R. F.	2.2	145	3	+66	+3	2.0	4.0
224	3-R. F.	2.2	145	3	+66	+3	2.0	4.0
227	Det.	2.2	130	13	...	+13
245	A. F.	2.2	220	8	32.0	37.0
245	A. F.	2.2	220	8	32.0	37.0
280	Rect.	4.4	105.0	...

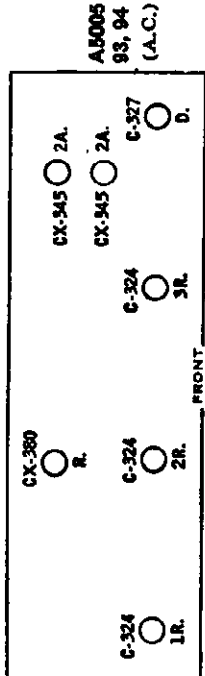


Line Voltage During Test — 110 Volts
 Volume Control — On Full
 Position of Fuse — 115 Volt Clips

MODEL Day-Fan A-5005
A-5020

GENERAL MOTORS RADIO CORP.

Chassis

DAY-FAN
MODEL A-5005
MODEL A-5020

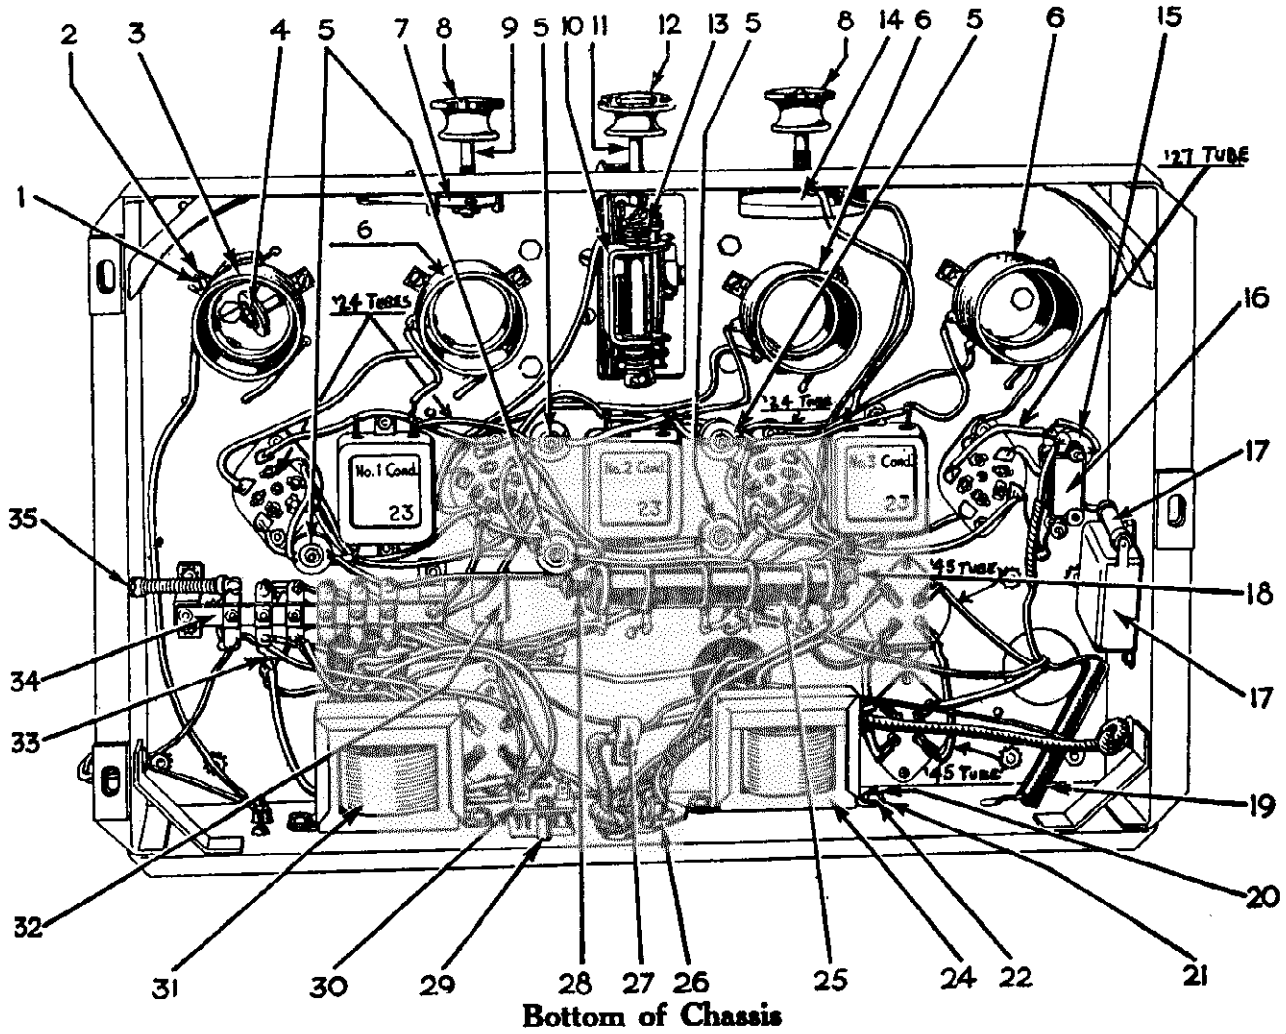

Illus. No.	Part Number	Description	Illus. No.	Part Number	Description
1	26758	Screw	18	26568	Mounting Bracket
2	128164	Lock Washer	19	1201604	Resistor, 500,000 Ohms
3	14609	No. 1 R. F. Coil	20	21678	Screw
4	14650	Antenna Coil	21	138475	Shake-proof Washer
5	14556	Choke Coils	22	25591	Nut
6	14603	No. 2, 3, 4 R. F. Coils	23	1200473	Condenser, .1-.1-.1 Mfd.
7	14766	Trimmer Drive Pulley & Pin	24	14597	Output Transformer
7	26682	Belt	25	1200187	Voltage Divider
8	14351	Knob	26	14594	Speaker Plug Receptacle
9	26679	Trimmer Shaft	27	24981	Strap
10	14591	Selector Bracket Assem.	28	26562	Spring
11	26175	Selector Shaft	29	24901	Spacer
12	14664	Knob-Tuning Condenser	30	1200195	Fuse Block Assem.
18	14662	Windlass	31	1200135	Power Choke
14	14588	Volume Control	32	14788	Line By-Pass Condenser
15	14556	Det. Plate Choke	33	13075	Condenser
16	1200413	Condenser	34	14566	Terminal Strip Assem.
17	1201610	Resistor, 25,000 Ohms	35	14624	Local and Distance Resistor.
17	14686	No. 4 Condenser			

GENERAL MOTORS RADIO CORP.

MODEL 120, 130, 140
Service Notes

MODELS 120, 130 and 140 CHASSIS MODELS "A" and "B"

MODELS 120, 130 and 140

The Models "A" and "B" chassis are divided into three groups having slightly different circuits.

Serial Numbers below 29100A and 1700B:
In the original models, with serial numbers below approximately 29100A and 1700B, one Audio Choke is not used and the Power Condenser side of the Dual Volume Control is in the Antenna Condensers.

Serial Numbers Above 62100A and 1964B:
The circuits of sets with serial numbers above approximately 62100A and 1964B, are practically the same as those in sets with serial numbers between 29100A and 62100A, except that the Audio Choke is not used and the Power Condenser is replaced by three 8 mfd. Electrolytic Condensers.

Above serial numbers approximately 64372A and 1964B, new R. F. coils are used. These coils have single turn primaries, and are "capacity coupled."

Sets above 62100A and 1964B can be distinguished by the presence of the Electrolytic Condensers.

Sets having the "capacity coupled" R. F. coils the presence of five similar R. F. chokes, one can be distinguished by the presence of three R. F. chokes located near the first 224 tube socket, and Chokes mounted on brackets at the bases of the four between the second and third 224 tube R. F. Coil Shields.

Serial Numbers between 29100A and 62100A, Model "B" Chassis:
The circuits of the Model "B" (25 cycle) chassis are the same as those of Model "A" (60 cycle), except that one 1.0 mfd. condenser, Part No. 1200160, is added in parallel with the power choke.

Sets with this circuit can be distinguished by the presence of three resistors between the cathodes of the 224 tubes and the R. F. terminal are used, one in series between the cathode of strip, located between the second and third 224 tube and the volume control.

Electrolytic Condensers:
To test the Electrolytic condensers used in chassis above 62100A and 1964B use an "Open Test" or "Continuity Test" meter with a 22 1/2 volt battery. The test being made similar to other continuity tests. It should be noted that by reversing the test leads, different readings will be obtained. The condenser to be tested should be removed from the chassis and tested as follows:

Pos. Test Point	Neg. Test Point	Correct Reading
Center Terminal Condenser Can	Condenser Can Center Terminal	Hand Should Jump and Return Hand Should Rise Slowly, Almost to Full Scale

If both readings are the same, the condenser is defective and should be replaced. When in doubt try replacing the condenser.

Trimmer Adjustment on Tuning Condensers:

A small Trimmer Condenser is located on each of the four variable condenser units which comprise the Gang Tuning Condenser. The trimmer screws may be adjusted by means of screw-driver, through the holes in the top of condenser shield.

The No. 1 Trimmer (Left side when viewed from the front) should be adjusted when the set is installed as it balances the antenna stage to meet the requirements of the antenna used. This Trimmer should be adjusted by tuning a station whose frequency is at the high end of the scale near 1400 Kilocycles. No. 2, 3, and 4 Trimmers should be adjusted only when the complaint is very definitely lack of volume or broad tuning. If the sensitivity or selectivity is not normal, the Trimmers should be adjusted before attempting to calibrate the Tuning Condenser. To adjust the Trimmers, tune in a station around 1400 Kilocycles and turn the volume down by means of the volume control until the station is just audible. Start with the Trimmer which is on the left side of the chassis, when viewed from the front, and adjust the screw either to the right or left until the loudest signal is obtained. This adjustment should bring the receiver back to normal operation. If not, the Trimmer on the right should be adjusted in the same manner. The two center trimmers should not be adjusted except in rare cases, and extreme care should be taken when adjusting these Trimmers so that the selector Pointer will not be thrown off adjustment and read incorrectly.

Condenser Adjustments:
If the selector pointer will cover only 1500 to 600 Kilocycles on the selector strip, the two-fingered washer has become bent so that the stop washer will slide over it. To correct this, remove the selector shaft assembly and invert the flat, two-fingered washer.
If the Pointer washer will not trip, set the selector pointer at 1460 Kilocycles, loosen the set screws holding the switch lever and turn the switch lever until it just engages the switch. Tighten the set screws in this position.

Selector Strip Adjustment—Mechanical:
If the selector pointer appears to be off mechanically, i. e., if a station close to 700 Kilocycles is off 1/2 inch and a station close to 1400 Kilocycles is also off the same amount, the adjustment of the selector strip to log one station would bring them all into line.

To make such an adjustment, tighten all set screws, then tune in a station of known frequency. Reduce the volume by means of the volume control so that the selector can be set on the exact peak of the incoming wave. Loosen the screws holding the selector strip and shift the strip until it indicates properly the frequency of incoming signal.

If the selector frequency cannot be shifted far enough, loosen the set screws by which the selector windshield is attached to the selector shaft, and shift the pointer to its approximate position before shifting the selector strip.

Selector Adjustment—Electrical:

The adjustment of the selector electrically, is known as "logging". If it becomes necessary to re-log the set, tune in a station between 660 and 700 Kilocycles, preferably as close to 650 as possible, which is known to be broadcasting exactly on its assigned wave length. Set the selector pointer to log this station accurately as described in the preceding paragraph.

Then set the pointer on the exact frequency of a station known to be operating at that time between 1350 and 1500 kilocycles. Adjust the volume control until the station is just audible, without moving the pointer, adjust the left trimmer condenser (viewed from the front of the chassis) until maximum volume is obtained. Repeat the operation on the remaining three trimmers, one at a time, going from left to right until the station is peaked exactly on the correct reading.

Now try the station which was used to set the low frequency point and if it logs properly, all other stations will be in line. If the station does not log properly, repeat the above operation.

Hum:

If the No. 245 Tubes are unmatched, or if one or the other is defective, a hum will result which is very similar to what is known as 60 cycle hum. This can be eliminated by replacing one or both of the No. 245 Tubes.

It is to be understood that the No. 245 Tubes may not necessarily be defective. They may operate satisfactorily in another set, but may be merely unmatched with respect to each other.

The No. 227 Detector Tube will sometimes cause a similar trouble, except that the No. 227 Tube causes more of a buzz than a hum. If this buzz or hum cannot be eliminated by switching the 227 Tubes, the defective Tube should be replaced.

Volume Control:

Many complaints of unsatisfactory volume control action are not caused by defective volume controls, but in reality the faulty action is due to variation in the cut-off point of the No. 224 screen grid tubes. It is necessary to have, in the first R. F. stage at least, one tube which has a low cut-off point.

If the complaint is not due to a volume control which is actually defective, it usually can be eliminated by switching the No. 224 tubes from one socket to another until the proper arrangement is obtained.

In chassis with serial numbers between 29100A and 62100A (also 1700B and 1964B) a 7000 Ohm Resistor (Black and Blue) is connected between the cathodes of the screen grid tubes and ground, in parallel with one side of the volume control. When near a powerful local broadcasting station, the volume control, because of this resistor, may not cut the volume down low enough. This can be improved by removing the resistor mentioned. This is resistor No. R-21 shown in the wiring diagram

MODEL 150,160,
Pick Up-Trans.
Service Notes.

GENERAL MOTORS RADIO CORP.

COMBINATION MODELS No. 150 & 160.

PART 1. THE ELECTRIC PICK-UP & TRANSFORMER (Continued)

Description:
The electric pick-up provides an electrical means for sound reproduction. The pick-up is composed of three major parts:

1. A permanent magnet.
2. A small generating coil.
3. A vibrating armature which is caused to vibrate by the phonograph needle.

The generating coil is located in the center of the field of the permanent magnet which causes a constant flow of magnetic lines of force through the coil. In order to generate current in the coil, it is necessary to vary the strength of the magnetic field. This is accomplished by placing a vibrating armature in the center of the coil with a needle inserted in the needle holder.

The needle rides in the grooves on the record and as it vibrates back and forth it also causes the armature to vibrate. By the vibration of the armature in the magnetic field, the field strength is varied accordingly and a pulsating current of electricity is generated in the coil. The pulsations of this current correspond to the sound waves of the music, but they are too weak to be audible in the speaker.

The generating coil is connected, through a volume control, to the radio wiring and the electrical pulsations are amplified many times by means of the radio amplifying tubes.

When the pulsations of current generated in the generating coil have passed through the amplifying tubes, they are carried to the speaker unit where they set the diaphragm in motion which generates audible sound waves in the air.

- Pick up Transformer - Part No. 1,200,877
- Cord Assembly - Part No. 1,200,866
- Choke Coil - Part No. 1,200,869
- Condenser - Part No. 1,200,418

(Cord Assembly Part No. 12,001,194 used on Models 150-A and B -)

PART 1. THE ELECTRIC PICK-UP & TRANSFORMER

The advantages of this method of reproduction are the ease with which the volume of sound may be varied by the volume control which varies the strength of the electrical pulsations before delivery to the amplifying tubes, and the truer reproduction through the radio speaker.

Serviceing:

Adjusting Vibrating Arm:

Place a good needle in the needle holder and a record on the turntable. Turn the power switch on and the selector pointer to the right until the Phono-switch trips. After the tubes have had sufficient time to heat properly, tap the needle lightly with your finger, first on one side and then on the other. Each time the needle is tapped, a click should be heard in the speaker. If the click is louder when striking the needle on one side than it is on the other, the pick-up is out of adjustment. Remove the metal cover from the pick-up and note whether the vibrating arm, which is operated by the needle, is directly

in the center of the space between the two pole pieces.

If the vibrating armature is off center, loosen the two brass round head screws which hold the small brass plate in position on the pole pieces. Center the armature between the pole pieces and tighten the brass screws securely.

Testing for Open Coil or Wiring:

If there is no click at all, when tapping the needle, put the pick-up in place on the record and allow the record to rotate. Place the terminals of a set of ear phones on the two connections of the volume control to which leads from the pick-up connect. Reproduction of the record should be heard faintly.

Provided no sound is heard, remove the pick-up leads from the volume control and check for open circuit in those leads and the pick-up. (Note: Inspect the contacts on the pick-up end of the leads, to insure good contact in the socket on the pick-up.)

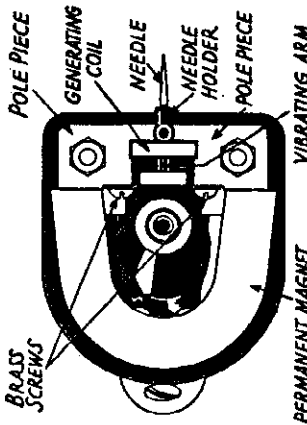


Figure 1

PART 1. THE ELECTRIC PICK-UP & TRANSFORMER (Continued)

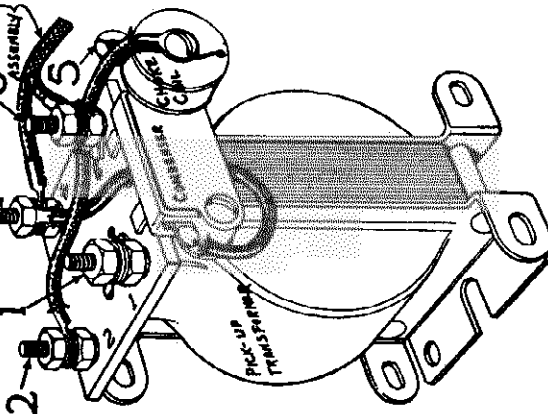


Figure 2

Repair Instructions:

Pick-ups that cannot be adjusted properly or that have open coils, should be replaced with new ones and the old ones returned to the nearest service station for repair.

Next Step if Pick-Up is O. K.:

If reproduction of the record can be heard faintly through the ear phones, check the volume control or the connections between the pick-up and the radio unit for the trouble.

Testing Pick-Up Transformer:

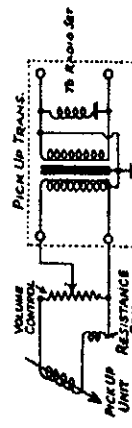


Figure No. 3—Pick-Up Wiring Diagram

Make the following tests with an open test meter. (See Figure 3 for contact numbers.)

From Contact Number	To Contact Number	Expected Reading	Increased Reading Caused by
1	2	Full Scale	Open Winding
3	4	1/4 Scale	Open Winding
3	5	Full Scale	Open Choke
Cond. Lead from No. 4	5	*Hand should jump and Return to Zero	Shorted or Open Condenser

*The Condenser Lead must be disconnected from No. 4.

GENERAL MOTORS RADIO CORP.

MODEL 150,160
Disc Motor
Service Notes

COMBINATION MODELS No.150 & 160

PART 2. INDUCTION DISC MOTOR

Description:

The motor consists of an induction disc of aluminum arranged to revolve between the poles of two sets of field magnets. The coils of the field magnets, commonly called field coils, receive current from the house lighting circuit and are the only parts electrically connected to that circuit.

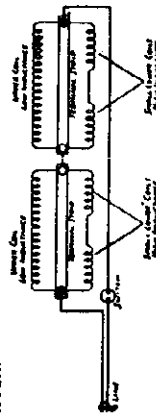


Figure 4—Wiring Diagram of Induction Disc Motor

The main shaft of the motor operates in a vertical position, is supported at the bottom by a single ball bearing, carries the induction disc and turntable, and drives the governor shaft through a set of gears. The speed of the shaft is controlled by a mechanical fly ball governor.

The induction disc motor has no commutator, slip rings, or other moving electrical contacts, and this, with the natural slow speed, makes it very well suited for the service for which it is used.

Servicing:

Any servicing which the motor may require is in general, of a minor nature, and in most cases, adjustments will be mechanical rather than electrical. Two of the most common causes of motor failure are incorrect power voltage and lack of lubrication.

Power Voltage Variations:

High voltage will cause the motor coils to heat excessively and thus destroy the insulation and dry the lubrication.

Low voltage will cause a lack of power and unstable operation. When servicing the induction disc motor, always check the power line voltage at the socket to which the motor is connected and, if possible, while the motor is running. This voltage should be between 105 and 120 volts A. C.

Lubrication:

It is important that the motor be lubricated at least once every six months with the proper

PART 2. INDUCTION DISC MOTOR (Continued)

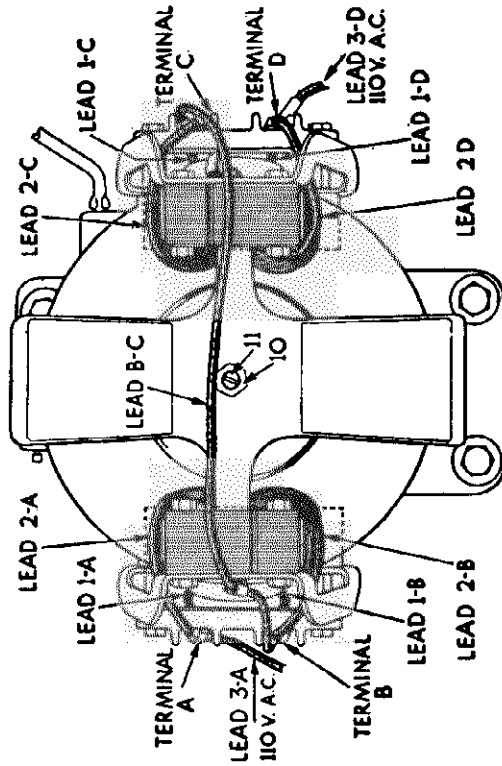


Figure 5

core and coil assembly may be taken off by removing the three screws holding the coils to the frame and top plate.

When the coils are replaced, be sure that the wire terminals marked with the same letter are placed together. That is, 1A, 2A and 3A must be attached to the terminal strip at the point "A", etc. See Figure 5.

Failures to Maintain Constant Speed:

There are four points to be checked if the motor fails to maintain constant speed.

Hardened or Gummy Lubrication. Examine the moving parts. If necessary, remove them and wash with kerosene. Replace the parts and lubricate them.

Shifting of Motor on Motor Board. In some cases a slight shifting of the motor on the motor board during shipment will cause binding. Loosen the three motor screws, and retighten, alternately, while the motor is running until the binding has been eliminated and the motor runs steadily.

Weak Coils. If the lubrication and mounting of the motor have been examined as described above, and the condition still exists, replace one

or both of the motor coils as described under subject "Motor Does Not Operate."

Mechanical Causes. All the points mentioned in subject entitled "Reducing Mechanical Noise" of speed and should be taken into account even though there is no actual mechanical noise present.

Reducing Hum: There are a number of causes for hum in the induction disc motor, but in most cases any existing hum can be eliminated by proper adjustment.

Loose Coil Winding on Iron Core. The condition can be corrected by forcing a small wooden wedge between the outside of the coil and the core. It may be necessary to wedge both the upper and lower sections of each coil.

Coil Loose on Top Plate. The three screws holding the coil on the top plate should be tightened securely.

Loose Laminations of Iron Core. The bolts clamping the iron laminations together should be tightened securely. In some cases, however, it may be found that the hum can be minimized by adjusting the tension of these bolts.

MODEL 150,160
Disc Motor
Service Notes

GENERAL MOTORS RADIO CORP.

COMBINATION MODELS No. 150 & 160

PART 2. INDUCTION DISC MOTOR (Continued)

Motor Not Fastened Securely to Motor Board. Make certain that the nuts holding the motor to the motor board are fastened securely and with equal tension and that the felt washers between the motor and the motor board are not injured.

Motor Not Properly Secured to Cabinet. In many cases motor hum can be eliminated or minimized by adjusting the four screws which hold the motor board to the cabinet. Placing a piece of felt between the motor board and the motor board rail will often help to eliminate hum.

Reducing Mechanical Noise: There are several features which may cause motor noise other than a hum.

Governor Springs. A noise or rattle may sometimes be caused by loose or broken governor springs. Tighten all the governor spring screws. If this does not stop the noise, loosen the screws on the disc end of the governor springs and allow the motor to run for a minute or so to allow the springs to assume their correct position. Stop the motor and retighten the screws. If any of the springs are broken or badly out of balance, they should be replaced. Removal of the governor can be accomplished by loosening the two governor bearing screws, one at each end of the shaft, and lifting the governor from the frame.

Governor Thrust Bearing. The thrust bearing at the disc end of the governor may sometimes cause noise while the motor is running. Hold one finger over the end of the bearing and loosen the set screw which holds the bearing in position. Adjust the bearing to the most quiet running position, and retighten the set screw.

Governor Spindle. A bent governor spindle will cause binding in the gears and bearings as well as a noise. The bent spindle should be replaced with a new one.

Governor Driving Gear. Remove the turntable spindle as described above and examine the gear for wear. If the wear on the teeth is greater on one side than on the other, the turntable spindle is bent and should be replaced. The gear should also be replaced.

Turntable Spindles and Disc. A bent turntable spindle or a bent or improperly adjusted

disc will cause noise. The bent spindle may cause the disc to rub against the iron core of one of the coils as described above. A bent spindle can be detected by placing a pencil flat on the motor board with the point against the spindle. If the pencil point touches the spindle on one side only while the motor is running, the spindle is bent and should be replaced.

Speed Regulation:

The governor will maintain a constant speed of the motor within a range of sudden voltage changes of 15 volts, provided all parts are correctly adjusted.

The speed regulator is adjusted before leaving the factory to that speed which is proper for perfect reproduction, namely 78 revolutions per minute.

However, if this adjustment is altered for any reason it is possible to reset the speed regulator by placing a small piece of white paper on the outer edge of the turntable. By counting the number of times the paper passes a given point per minute, it can be determined whether the speed should be increased or decreased. The motor may be adjusted to the proper speed by turning the speed regulator screw in the direction indicated on the regulator plate.

Removal of Disc:

The motor disc and the governor drive gear are each fastened to the turntable spindle with two set screws, and pull the spindle away from the top plate. Care should be observed that the ball bearing on which the lower end of the spindle rests is not lost. When replacing the disc, it will be noted that the spindle is spotted for the governor drive gear and disc set screws, and that these spots are in line with the pin on the turntable spindle.

Adjusting Position of Disc:

The disc should be properly aligned between the upper and lower section of each coil so that it does not touch the iron core of either and does not cause binding of the governor gears. In case the disc rubs against the iron, it should be adjusted by means of the spindle adjusting screw 11. See Figure 5, page 5. Loosen the lock nut and turn the screw until the disc is evenly spaced between the upper and lower coils.

PART 3. THE AUTOMATIC SWITCH & BRAKE

Description:

The automatic switch and brake consists of a system of cans and levers operating in such a manner that the movements caused by the eccentric groove at the end of the record trips the switch, forcing a friction leather against the turntable and, at the same time, cutting off the power to the motor.

Servicing:

The switch will ordinarily require no adjustment. In some cases, however, the upper spring shown in Figure 6 may become bent upward far enough to prevent the contacts from coming together when the hand lever is turned.

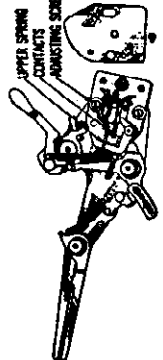


Figure 6

When such a condition is found, bend the upper spring down until the contact points make a firm contact when the hand lever is turned on. When replacing the switch on the brake plate, care should be observed in properly locating the switch on the plate, so that the switch will make and break contact when the hand lever is turned on and off. The two adjusting screws can be loosened and the switch moved in the slot until the correct position is located. When the hand lever is in the off position, the contact points should be at least 1/16 inch apart to prevent excessive sparking when the switch is turned off.

Adjustments:

The following adjustments will eliminate a majority of the troubles encountered:

1. Switch Fails to Trip. Bend the lug B (Figure 7) so that there will be less contact at point A.

Failure to trip may sometimes be caused by a loose trip arm. Make certain that all screws of this assembly are tight.

2. Switch Trips Before the Completion of a Record. Bend the lug back, so that there will be more contact at point A. (Figure 7.)

Warning: Do not bend the lug too far, as bending too often in opposite directions will snap off the lug

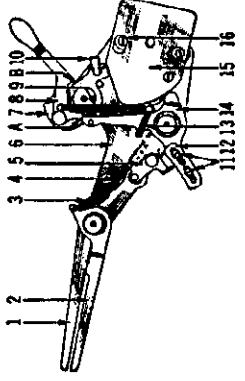


Figure 7

3. The two surfaces at the point A must be square. If they have become worn round, they should be squared with a fine file.

4. If the switch lever 1 swings with the eccentric groove, but the friction lever 2 fails to swing, or swings but slightly, the latch trip 5 is probably caught in a burr on one of the teeth of the latch plate 12. Rub the teeth of the latch plate with a piece of emery cloth, taking off any burrs that may be present.

5. If the latch trip does not engage with the latch plate properly when the tone arm is swung to the starting position, loosen the screw 11, adjust the plate 12 the required amount, and tighten the screws.

Note: The adjusting of the latch plate has nothing to do with the tripping of the latch.


6. If the brake does not stop the turntable soon enough the condition can be remedied by one of the following:

- a. Examine the friction leather, making certain it is not worn down too far to make proper contact with the inside rim of the turntable.
- b. Increase the tension of the spring 9 (Figure 7) by cutting off one or more of the coils and then replacing the end of the spring over the lug.

7. If the latch 14 does not strike the lug A when the hand lever is pulled to the ON position:
 - a. Increase the tension of the spring 13 in the same manner as described above in "B" of 6.
 - b. Decrease the tension of the spring 4 by stretching the coils if necessary

GENERAL MOTORS RADIO CORP.

MODEL 216, 217
 219, 250
 (S-1A, S-1B)
 Schematic

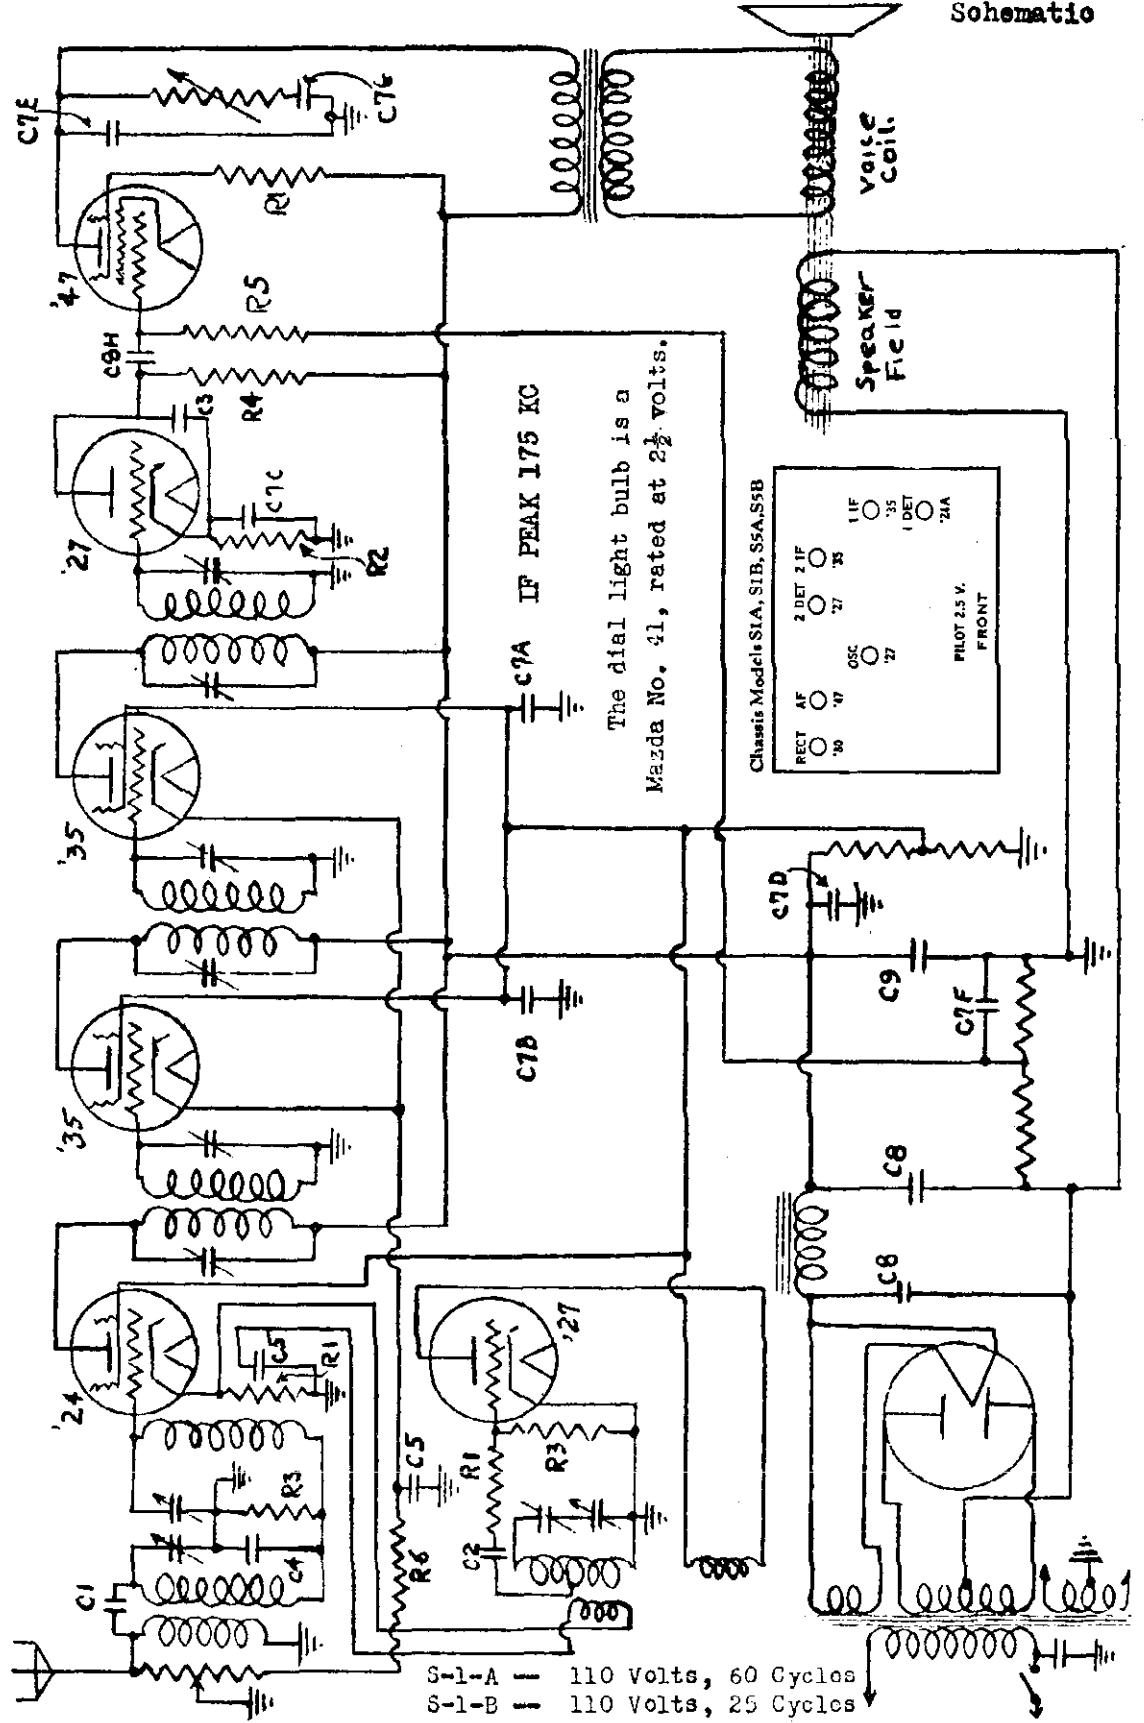

S-1-A — 110 Volts, 60 Cycles
 S-1-B — 110 Volts, 25 Cycles

MODEL 216, 217, 219, 250 SUPERHETERODYNE RECEIVERS. (CHASSIS MODELS S1A & S1B)

MODEL 216, 217
219, 250
(S-1A, S-1B)
Voltage-Data

GENERAL MOTORS RADIO CORP.

MODEL 216, 217, 219, 250 SUPERHETERODYNE RECEIVERS.

ANTENNA AND GROUND CONNECTIONS

On Models 216, 217 and 219 a special antenna is installed in the cabinet and an antenna and ground terminal strip with three clips is located, on the bottom of the speaker baffle board.

If an outside antenna and ground are used, connect the antenna lead-in wire to the clip marked "A" and the ground wire to the clip marked "G". The jumper wire provided should connect clips marked "G" and "X".


If the local reception special antenna in the cabinet is used, connect the special antenna lead to the clip marked "A". The jumper should connect clips marked "G" and "X".

If the power line is to be used as an antenna, simply connect clips "A" and "X" by means of the jumper. If possible connect a ground wire to clip marked "G".

CONDENSERS					Voltage Divider			
NO.	CAPACITY	NO.	CAPACITY	LEAD COLOR				
C1	.00001 Mfd.	C7A	.25	Green				
C2	.0005 Mfd.	C7B	.25	Green				
C3	.002 Mfd.	C7C	.1	Brown				
C4	.01 Mfd.	C7D	.25	Terminal				
C5	.1-.1 Mfd.	C7E	.006	Red				
C6	.1 Mfd.	C7F	.25	Green				
		C7G	.03	Blue				
		C7H	.03	White-White				
	C8 4-4 Mfd. (Electrolytic)							
	C9 8 Mfd. (Electrolytic)							
Condensers C7A to C7H, inclusive, are included in the Bypass Condenser Pack.								
RESISTORS					Pentode Bias			
NO.	BODY	END	SPOT	RESISTANCE	WATTS			
R1	Yellow	Green	Red	4,500				
R2	Red	Green	Orange	25,000				
R3	Yellow	Black	Orange	40,000				
R4	Brown	Black	Yellow	100,000				
R5	Green	Black	Yellow	500,000				
R6	In Metal Cover			400				
Type of Tube	Position of Tube	Fil. Volts	Plate Volts	Control Grid Volts	Screen Grid Volts	Cathode Volts*	Pentode Screen Volts	Normal Plate M.A.
224	1st Det.	2.1	225	2.0	85	7	--	1
235	1st I.F.	2.1	225	3.3	79	5	--	14
235	2nd I.F.	2.1	225	3.3	75	5	--	13
227	Oscillator	2.15	75	0	--	0	--	5
227	2nd Det.	2.15	125	15.0	--	15	--	1
247	A. F.	2.15	210	1.0	--	--	200	3.5
280	Rect.	4.5	300	--	--	--	--	25-25
Line Volts 110.				Volume Control on Full.				


GENERAL MOTORS RADIO CORP.

MODEL 251
(S-2A, S-2B)
Schematic

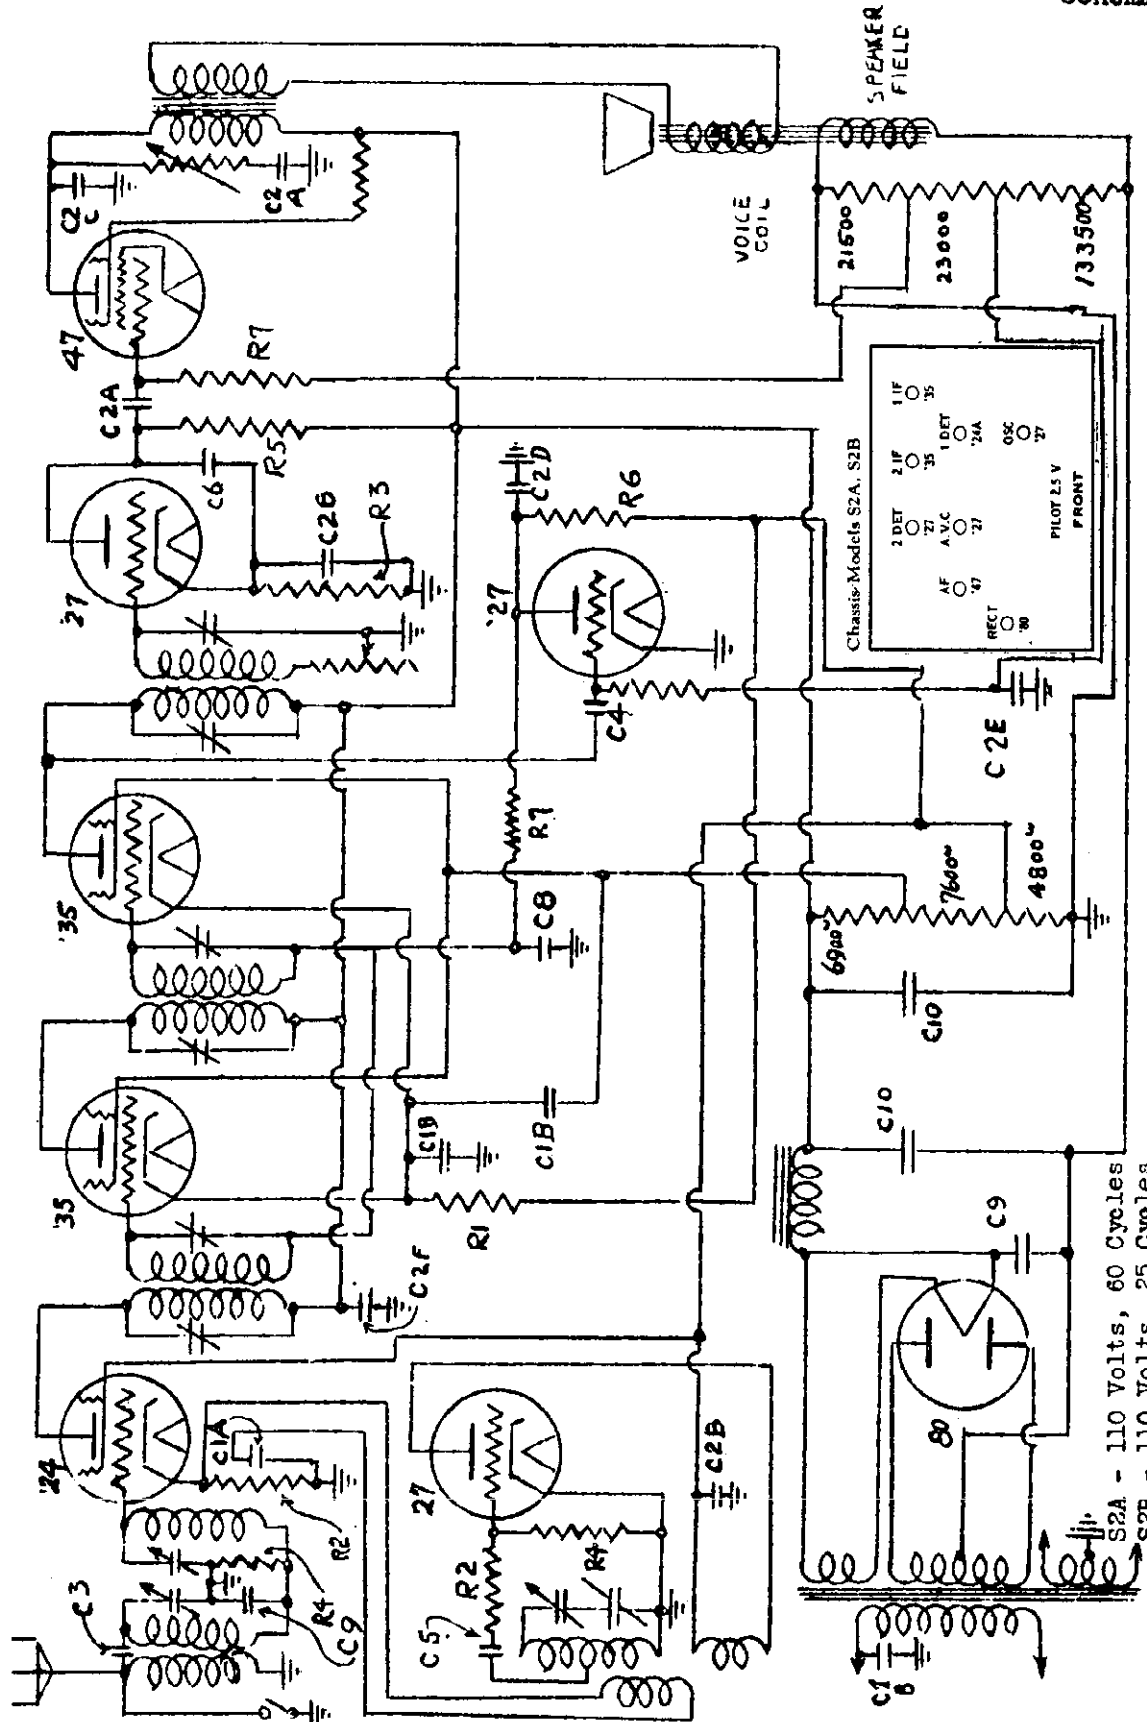

PEAK FREQUENCY - 175 KC

S2A - 110 Volts, 60 Cycles
S2F - 110 Volts, 25 Cycles

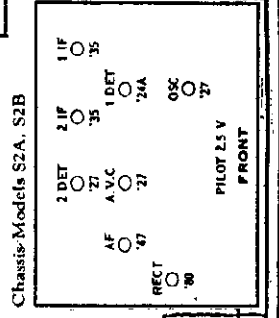

MODEL 251
(S-2A, S-2B)
Voltage-Data

GENERAL MOTORS RADIO CORP.

MODEL 251 SUPERHETERODYNE (CHASSIS MODELS S2A & S2B)

Type of Tube	Position of Tube	Fil. Volts	Plate Volts*	Control Grid Volts	Screen Grid Volts	Cathode Volts#	Pentode Screen Volts	Normal Plate MA	Rated Fil. Volts
224	1st Det.	2.1	255	1.9	77	6.0	--	1.0	2.20
235	1st I.F.	2.1	200	.3	100	95.0	--	1.6	2.20
235	2nd I.F.	2.1	200	.3	100	95.0	--	1.6	2.20
227	2nd Det.	2.15	145	.0	--	15.0	--	.5	2.25
227	Osc.	2.15	75	.0	--	0	--	7.0	2.25
227	A.V.C.	2.15	60	.0	--	0	--	.0	2.30
247	A.F.	2.15	235	1.0	--	--	215	30.0	2.30
280	Rect.	4.5	200	--	--	--	--	30-30	4.70


Line Volts 110

Volume on Full


* Use 600 Volt Scale.

Measured from Cathode to Heater.

Pentode Bias

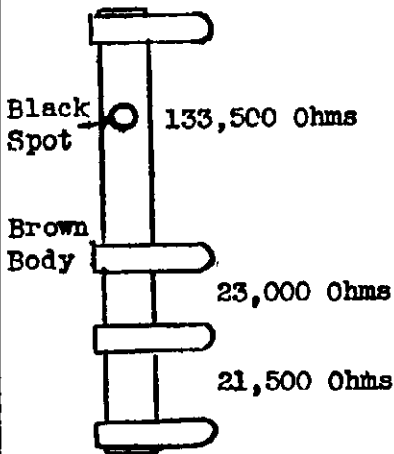

Voltage Divider

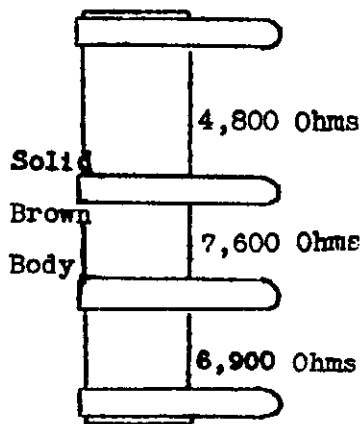

No. Capacity

C1A	.1 Mfd.	} By-Pass Cond. Pack No. 1
C1B	1.0 Mfd.	
C2A	.03 Mfd.	} By-Pass Cond. Pack No. 2
C2B	.1 Mfd.	
C2C	.006 Mfd.	
C2D	.25 Mfd.	
C2E	1.0 Mfd.	}
C2F	.25 Mfd.	
C2G	.1 Mfd.	}
C3	.00001 Mfd.	
C4	.00025 Mfd.	}
C5	.00075 Mfd.	
C6	.002 Mfd.	}
C7	.01 Mfd.	
C8	1.0 Mfd.	}
C9	4.0 Mfd. (Electrolyt.	
C10	8.0 Mfd. (Electrolyt.	

Resistors


No.	Body	End	Spot	Resistance	Watts
R1	Orange	Black	Brown	300	1/4
R2	Yellow	Green	Red	4,500	
R3	Red	Green	Orange	25,000	
R4	Yellow	Black	Orange	40,000	
R5	Brown	Black	Yellow	100,000	
R6	Red	Green	Yellow	250,000	
R7	Green	Black	Yellow	500,000	
R8	Red	Black	Green	2 Megohms	

The dial light bulb is a Mazda No. 41, rated at 2½ volts.

GENERAL MOTORS RADIO CORP.

Chassis Models S3A, S3B, S4A, S4B

MODEL 252, 253, 254,
255, 256, 257,
258
(S-3A, S-3B)
Schematic

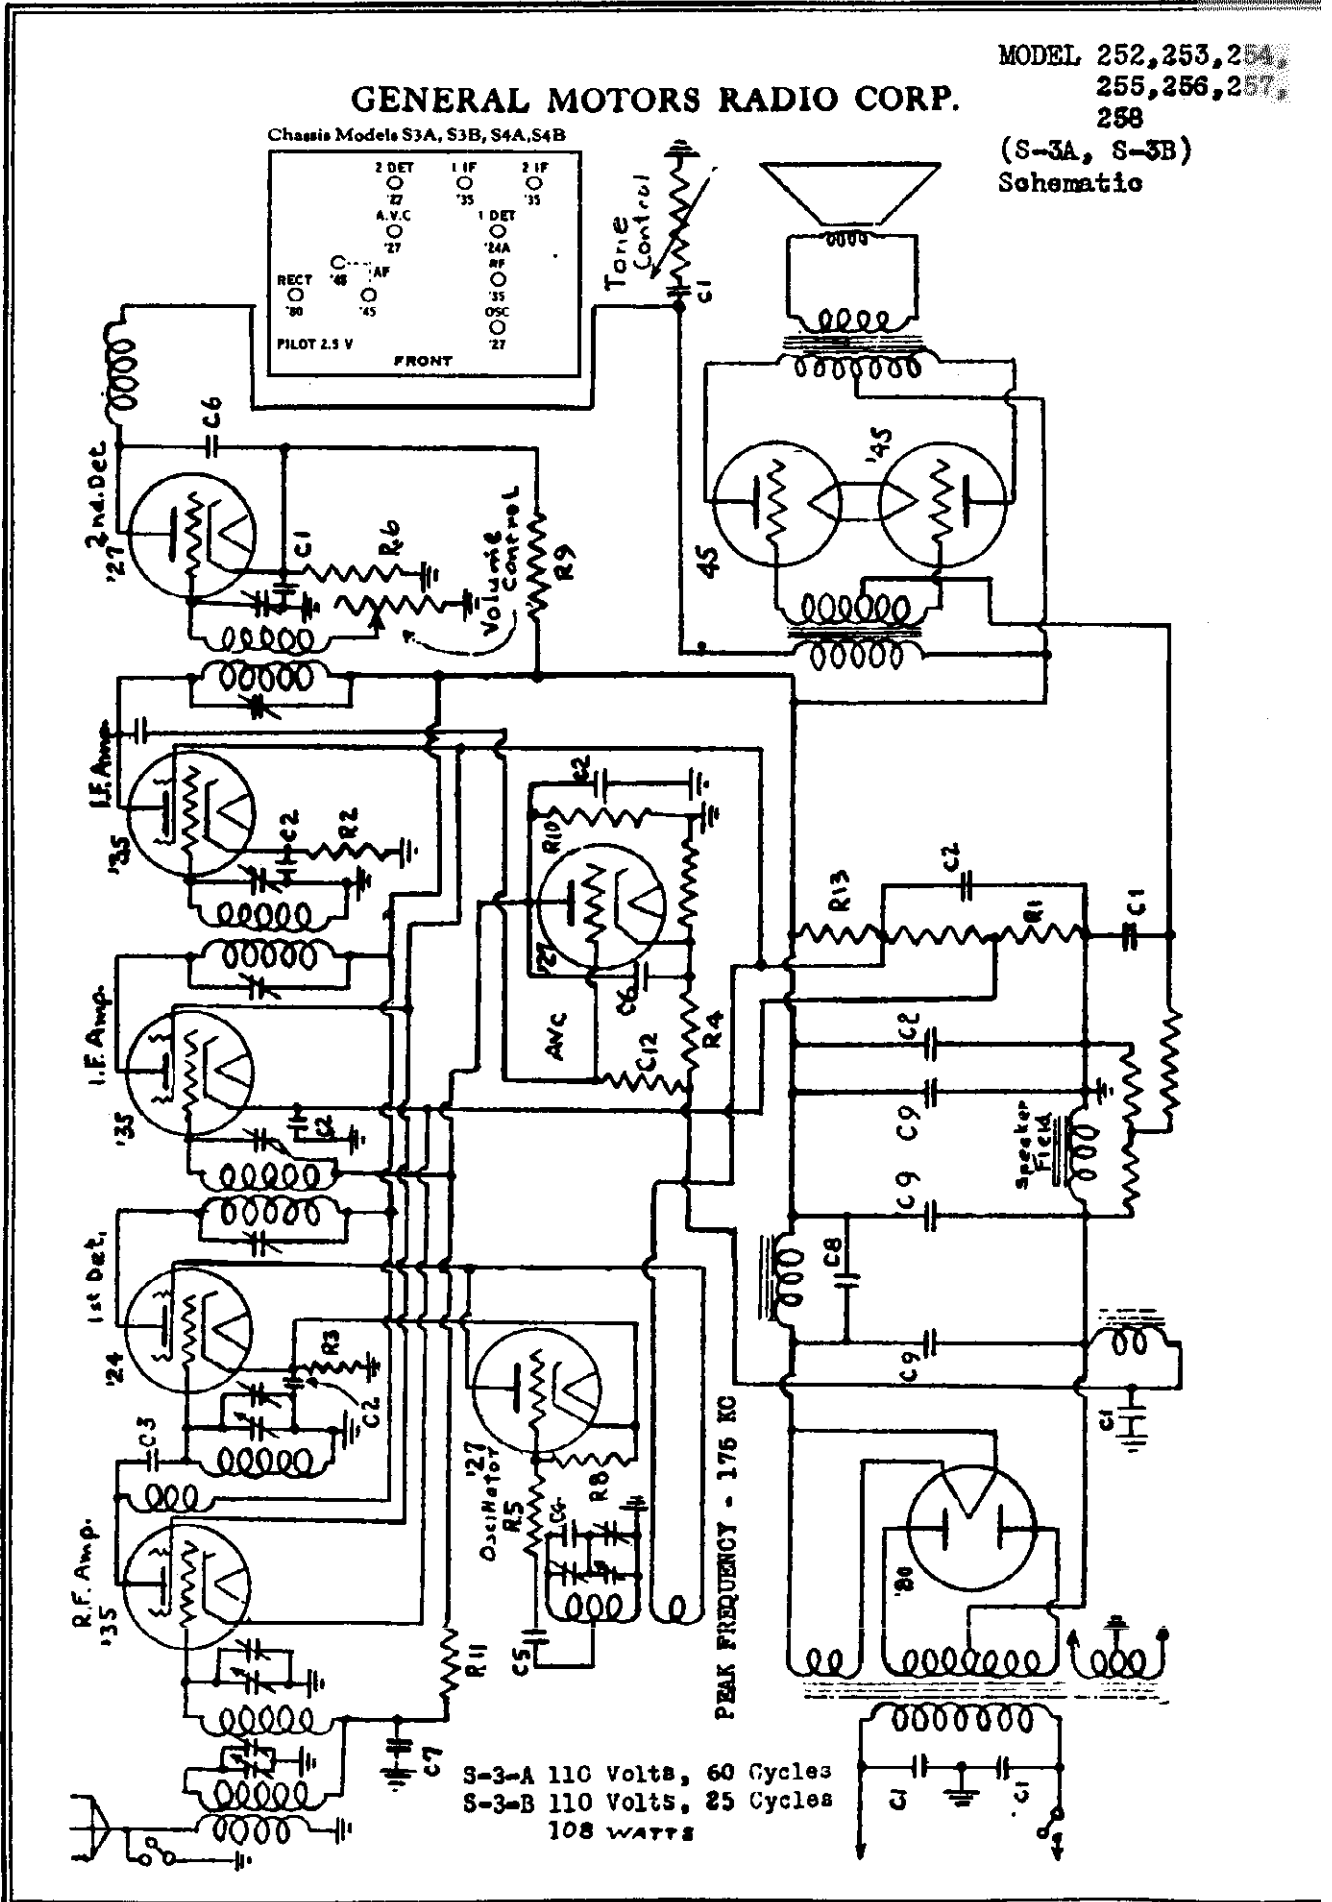

MODEL 220
(S-10A, S-10B)
Trimmer Notes

GENERAL MOTORS RADIO CORP.

PEAKING THE I.F. STAGES

CONNECTIONS

(1) Connect the test oscillator to the control grid of the first detector tube, with a fixed .002 Mfd. condenser connected in series between the test oscillator and the grid terminal of the tube. The grid cap and lead must be left in place on the tube. Connect the GND terminals of both the test oscillator and the receiver to a common ground.

NOTE: DO NOT CONNECT TO THE GRID OF ANY OTHER TUBE BECAUSE IT WILL CHANGE THE BIAS VOLTAGE OF THE SET.

If the test oscillator has a dummy antenna which cannot be disconnected, connect a 1 megohm resistor between the test oscillator output terminal and ground.

(2) Remove the 227 oscillator and the 227 A.V.C. tube and plug the dummy oscillator and A.V.C. tubes in their sockets.


TRACKING PROCEDURE

(1) Feed a signal of exactly 1400 K.C. into the chassis from the test oscillator.

(2) Screw all parallel trimmers down tight and then adjust the oscillator parallel trimmer condenser to obtain a maximum output.


(3) Adjust the remaining parallel trimmer condensers to obtain maximum output.

NOTE: Models S10A or S10B chassis do not employ an oscillator series condenser. It is not necessary to make the tracking adjustment at 580 K.C.

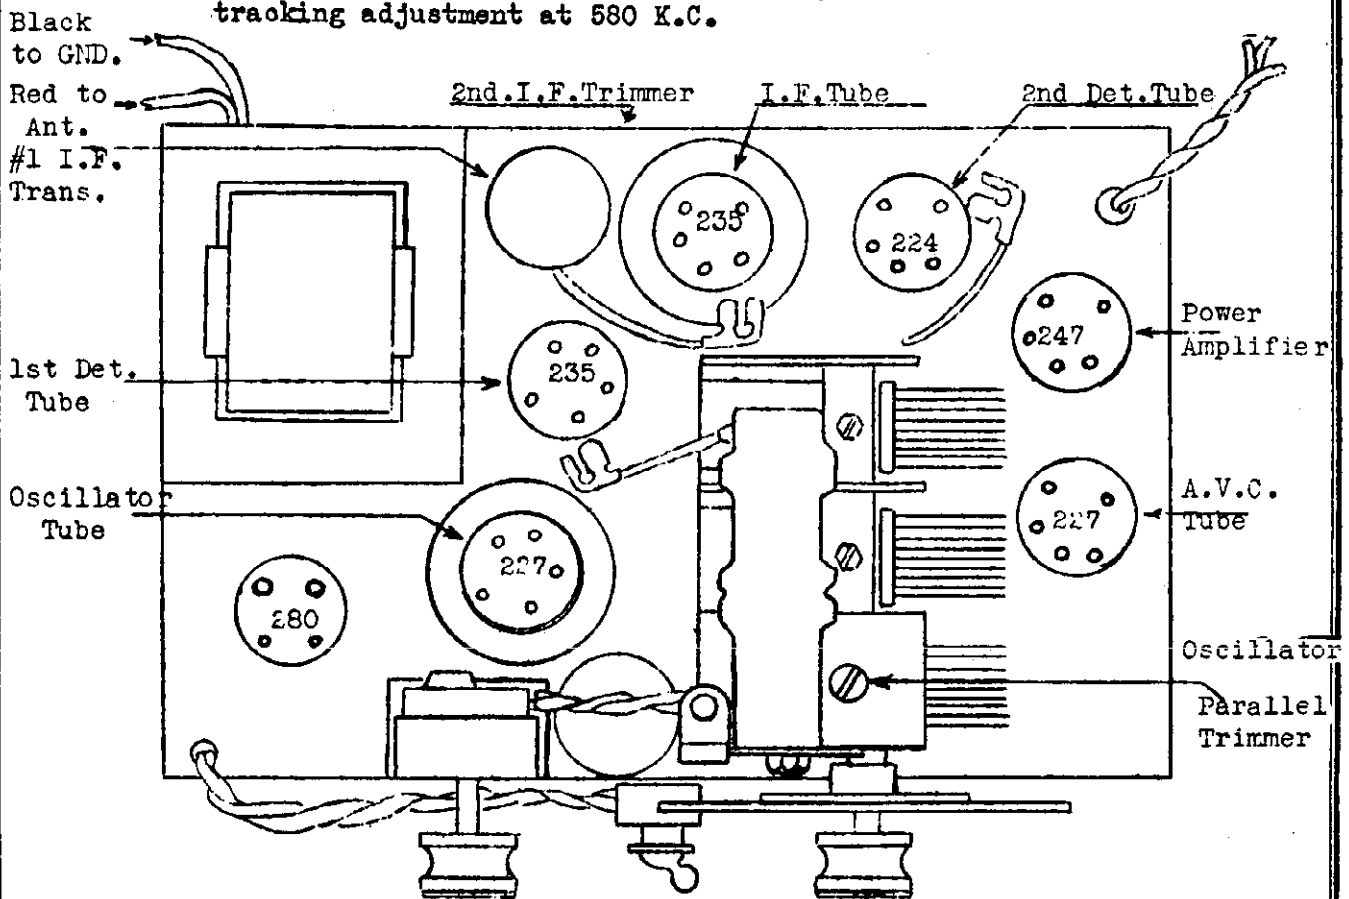


MODEL 70-B
Chassis


GRIGSBY GRUNOW CO.

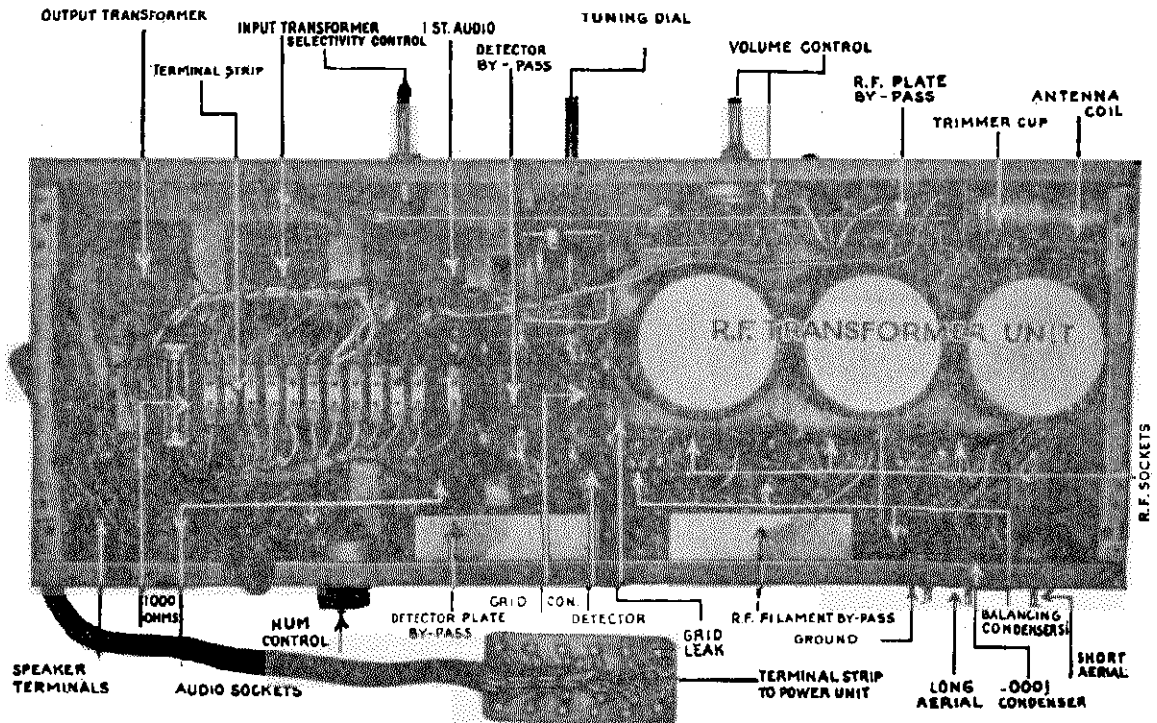


Model 70-B Chassis

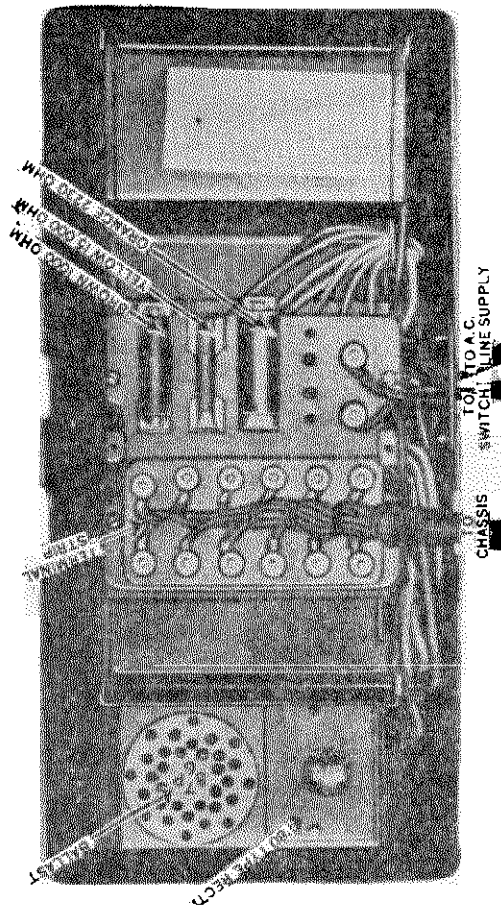

7-BP-6-7-BP-3 Power Unit

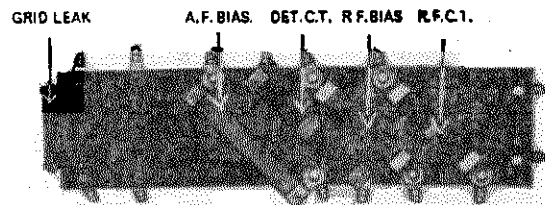


Bottom View of Terminal Board in 70-B Chassis, Showing Resistors Employed

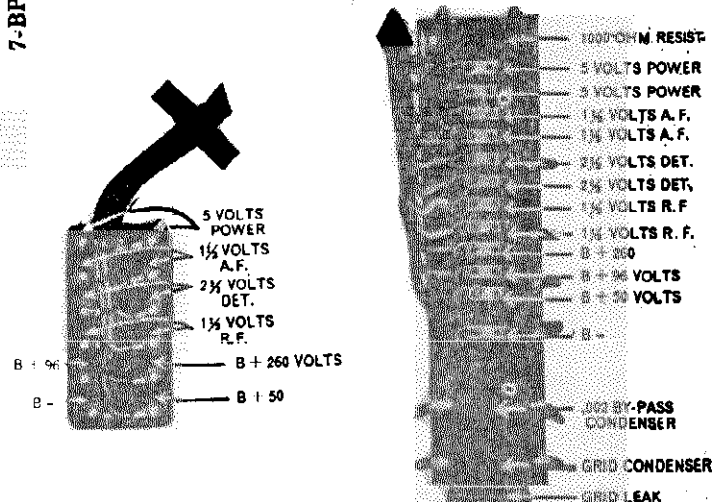


Cable for 70-B Chassis, Showing Resistors, Grid Condenser and Leak, and Voltages at Terminals.

GRIGSBY - GRUNOW CO.

MODEL 90
MODEL 100
Chassis

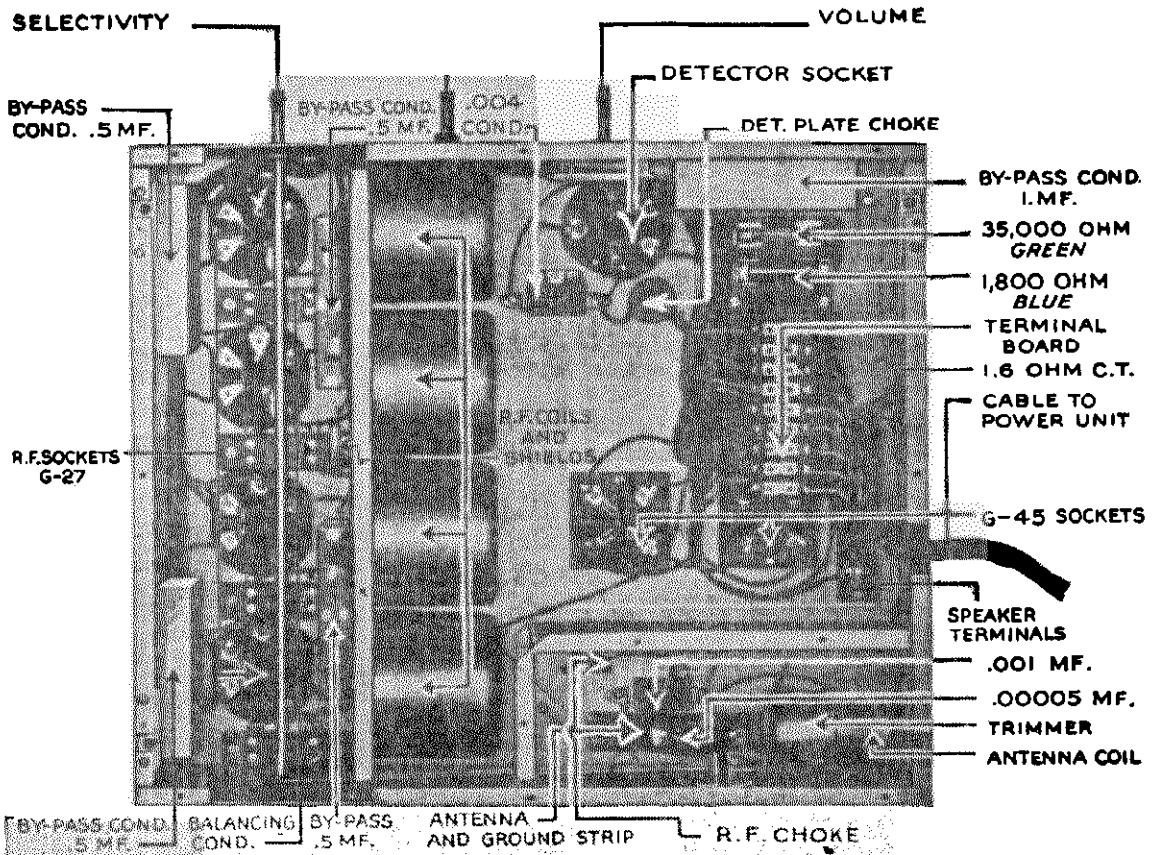

Position of Parts, and Wiring of Model 90 Receiver

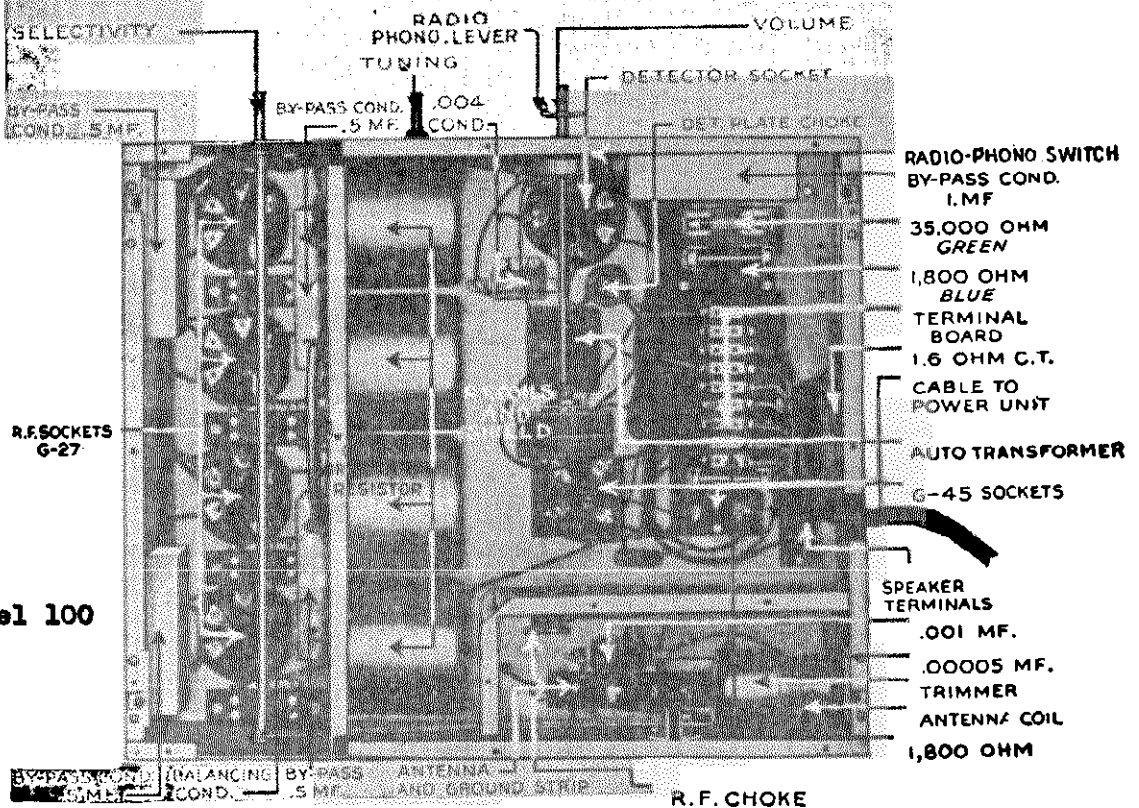


Model 100

MODEL 15
Schematic
Below Serial
65149

GRIGSBY - GRUNOW CO.

SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETERODYNE RECEIVER
 MODEL 15 (65,149 TO INCLUSIVE) CHASSIS 115 AND 230 VOLTS, 25-50 AND 50-60 CYCLES
 POWER REQD.—60 WATTS

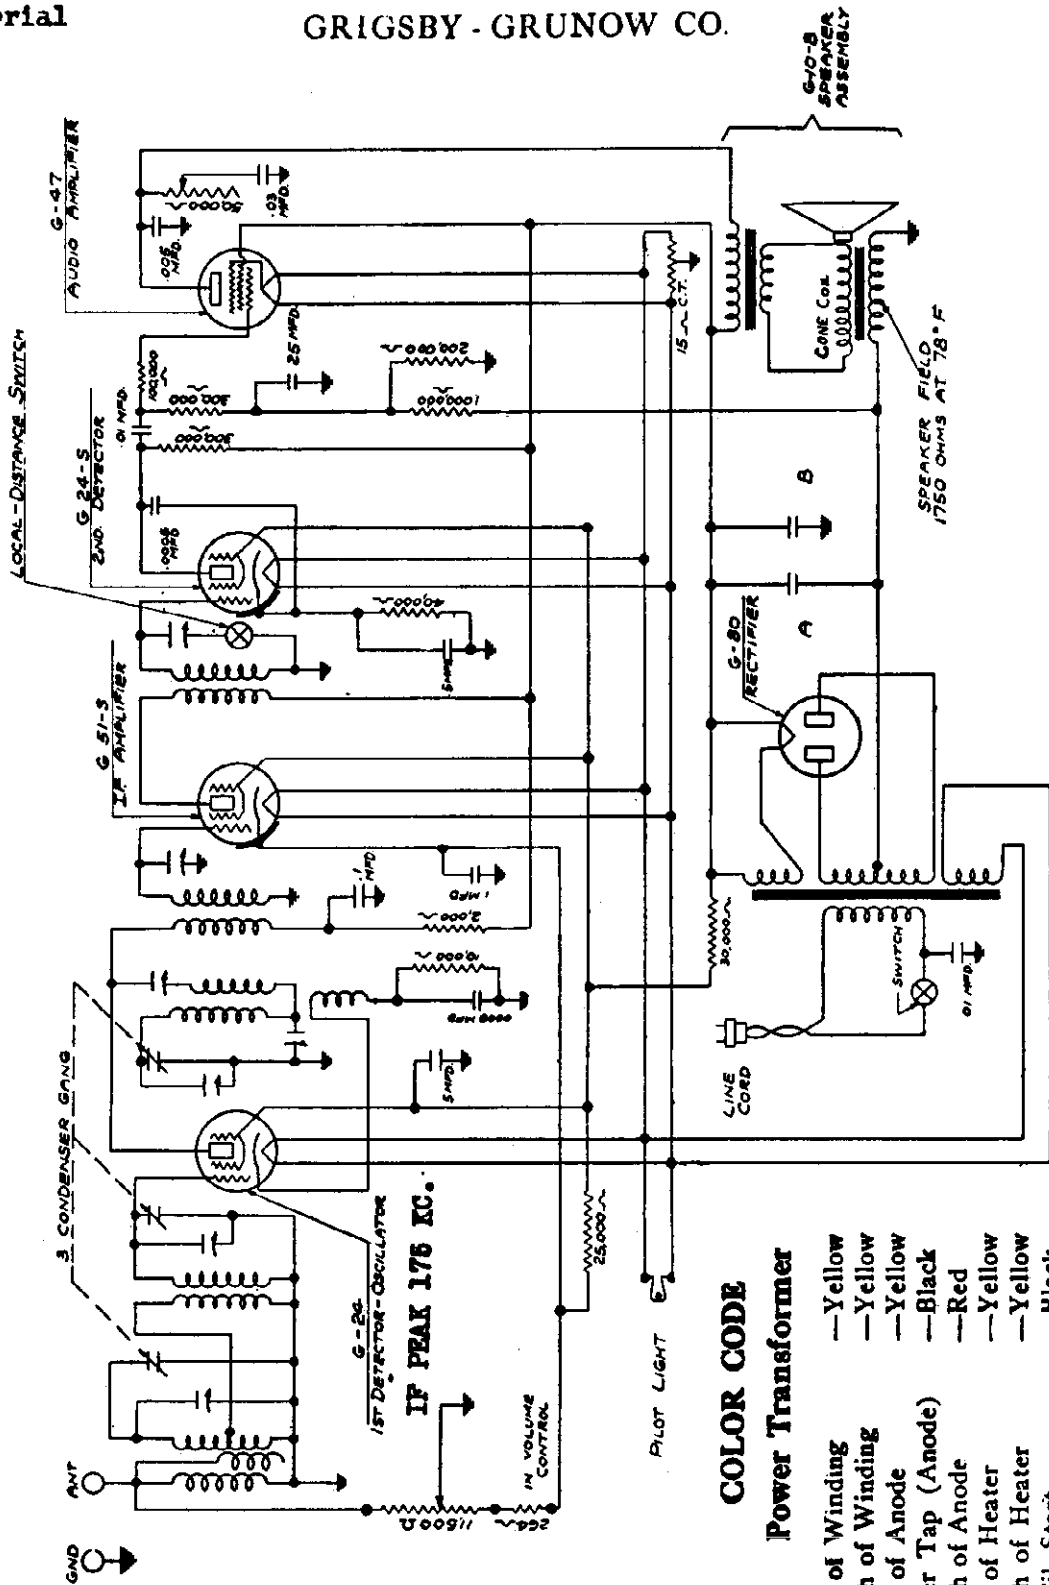

COLOR CODE

Power Transformer


- Yellow Start of Winding
- Yellow Finish of Winding
- Yellow Start of Anode
- Black Center Tap (Anode)
- Red Finish of Anode
- Yellow Start of Heater
- Yellow Finish of Heater
- Black 280 Fil. Start
- Black 280 Fil. Finish

MODEL 15 Chassis (up to 65, 149 Incl.) 115-230 V. 25-50 & 50-60 Cycles - 60 Watts.

Model 15 Chassis
Employed in Havenwood, Ellswood and Sherwood Models

GRIGSBY - GRUNOW CO.

MODEL 15
Chassis Views

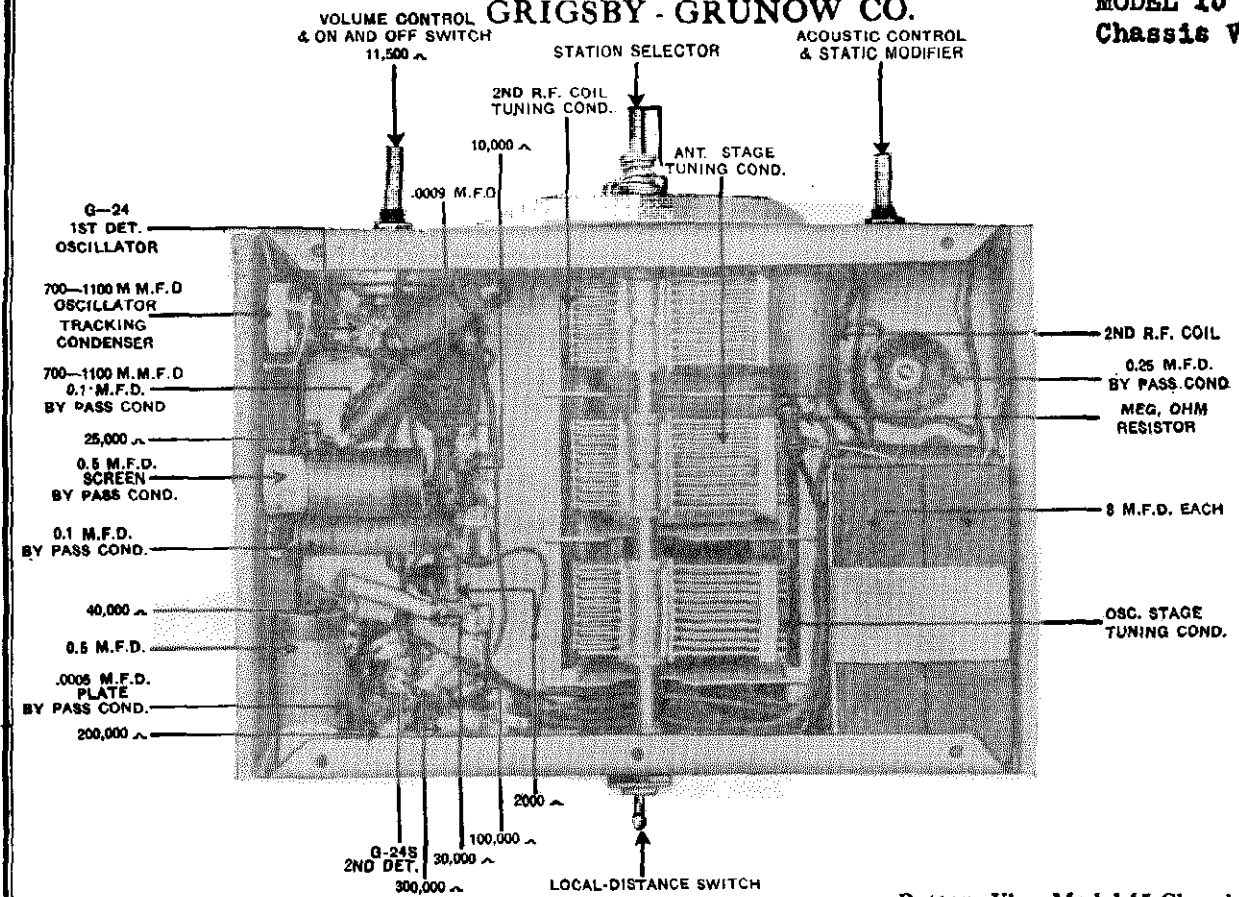


Bottom View Model 15 Chassis.

Tube Purpose	Type	Table of Voltages to Ground		
		Fill. Volts A.C.	Plate Volts D.C.	Grid Volts D.C.
1st Det.—Osc.	G-24	2.5	250	0
L.F. Amplifier	G-51-S	2.5	250	3.0**
2nd Detector	G-24-S	2.5	250	9
Power Amplifier	G-47	2.5	250	-16.5*
Rectifier	G-80	5.0

*This cannot be measured with the customary 1000 ohm per volt meter because of the high resistance between the grid and ground. If there is any doubt about the pentode bias, check the 100,000 ohm, 1 megohm, 200,000 and 300,000 ohm resistors and .25 M.F.D. Condenser in this circuit and be sure the speaker field voltage is correct, 112 volts. Also measure the pentode plate and screen voltages and if they are 250 volts, the plate current should be 32 M.A.

**This should rise to 42 when the volume control is turned to minimum.

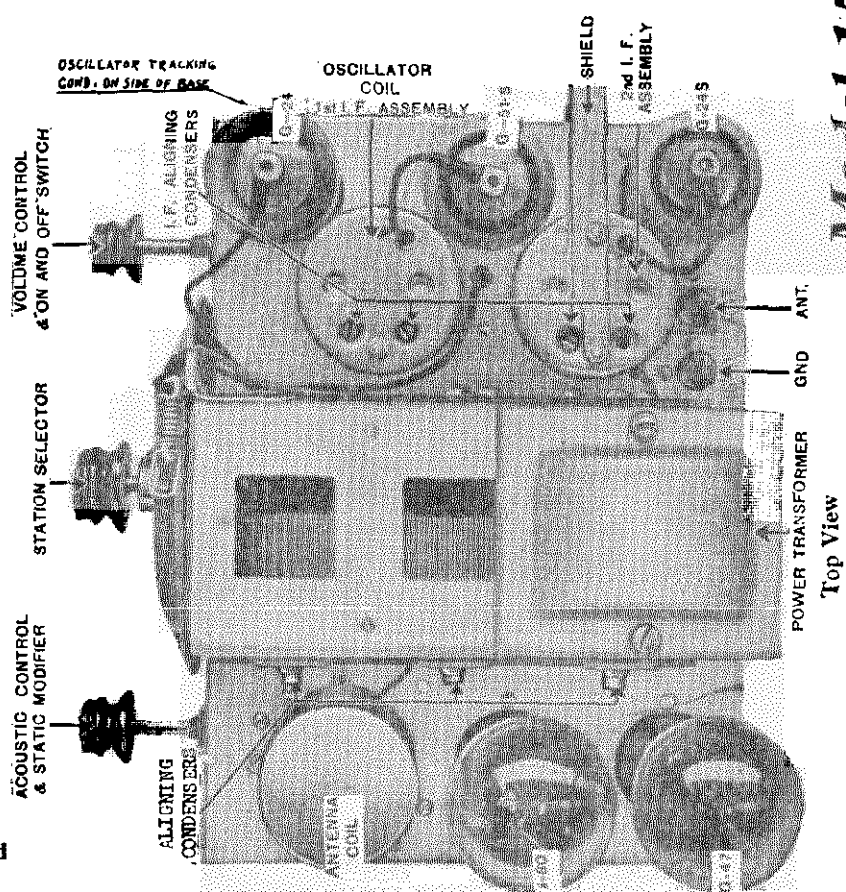


Top View

Model 15 Chassis

MODEL 15,15-B
Schematic
Above Serial
65150

GRIGSBY - GRUNOW CO.

SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETERODYNE RECEIVER
MODEL 15 AND 15-B CHASSIS (SERIAL NO. 65,150 AND OVER) 115 AND 230 VOLTS, 25-50 AND 50-60 CYCLES.
POWER REQD. - 60 WATTS.


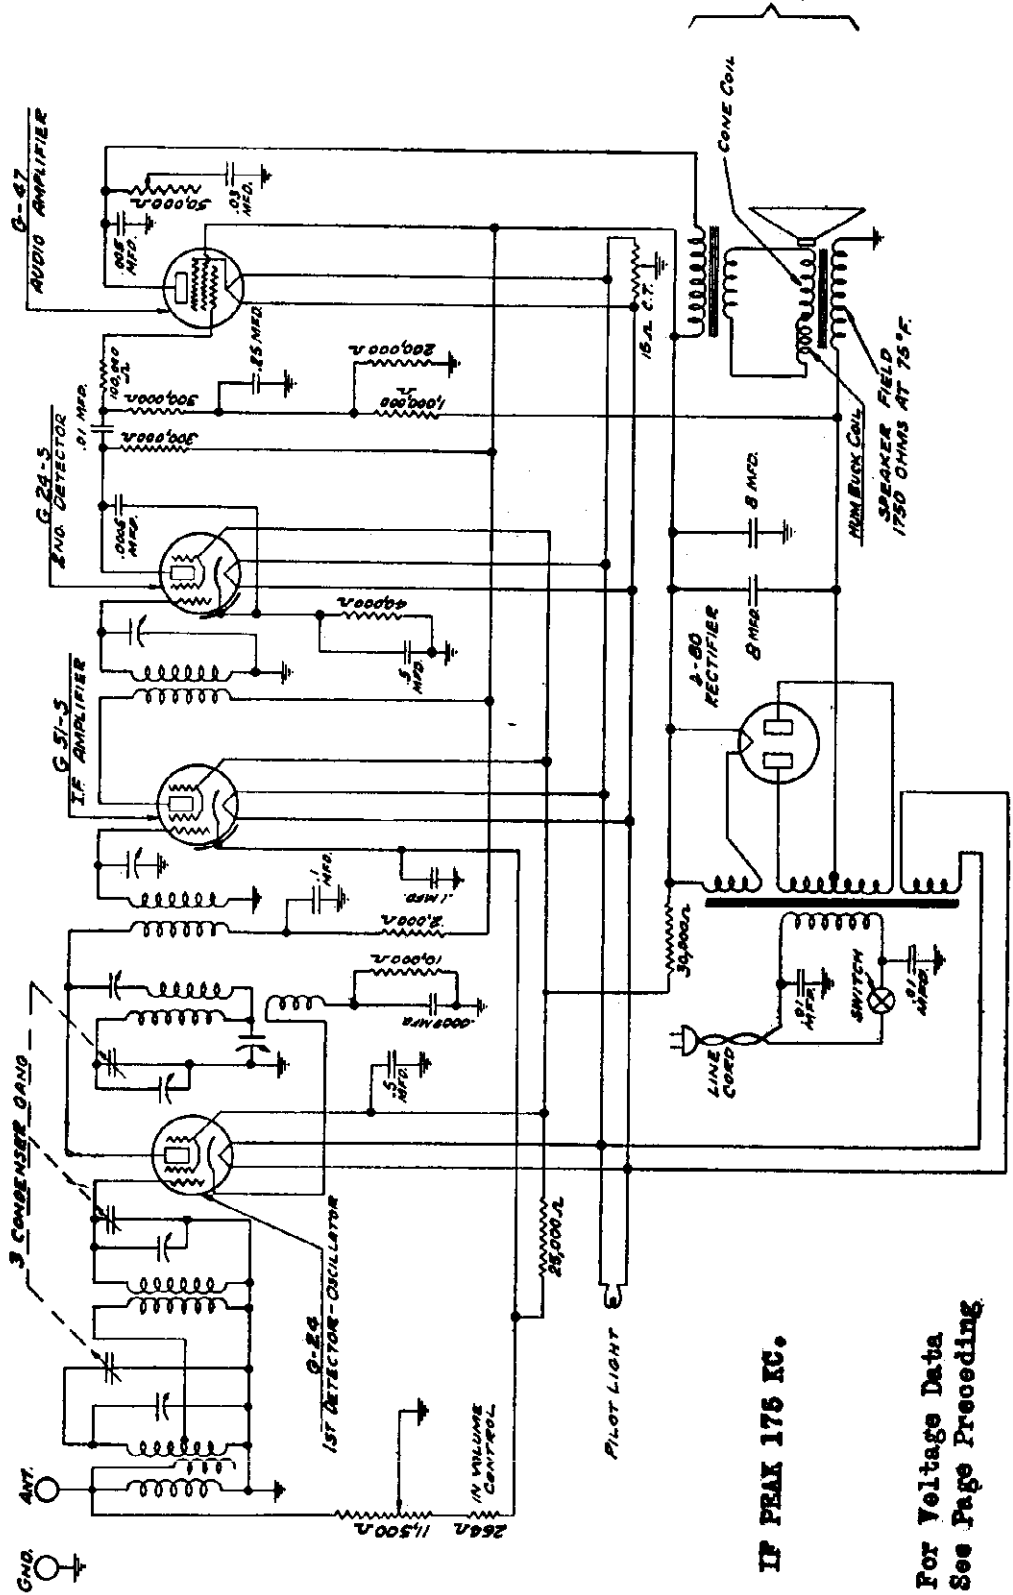


IF PEAK 175 KC.

For Voltage Data
See Page Preceding.



MODEL 15-B
Chassis Views

GRIGSBY - GRUNOW CO.

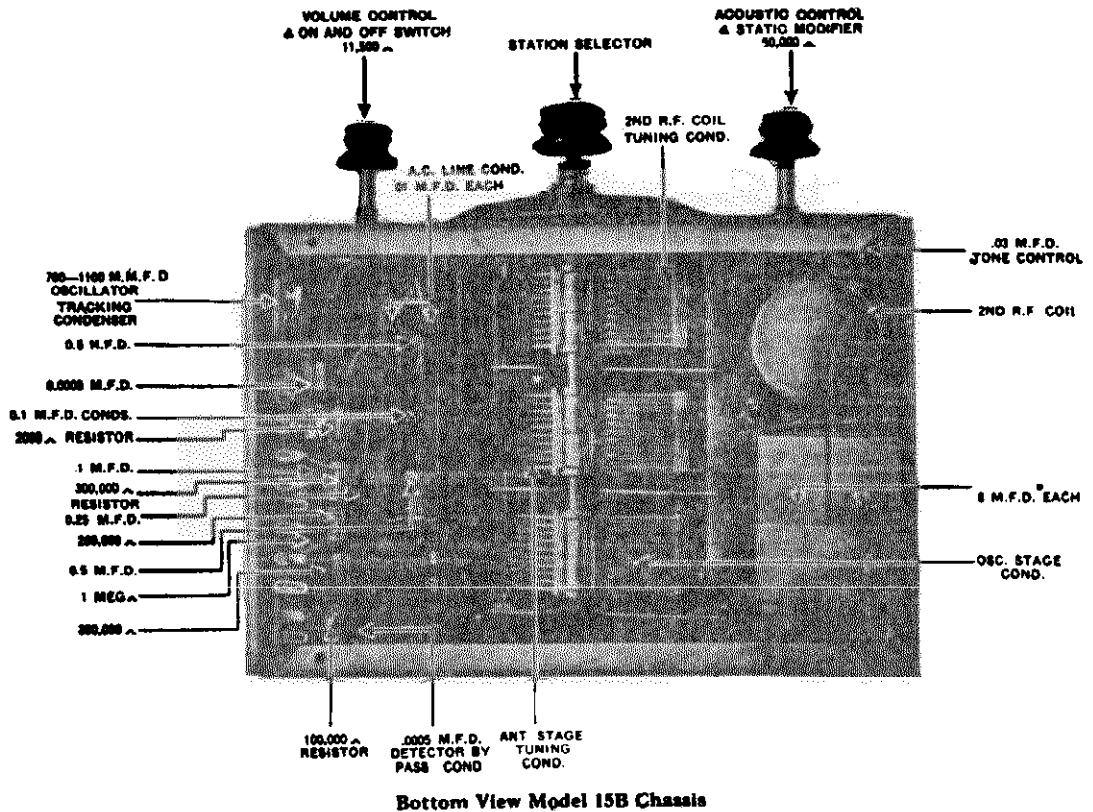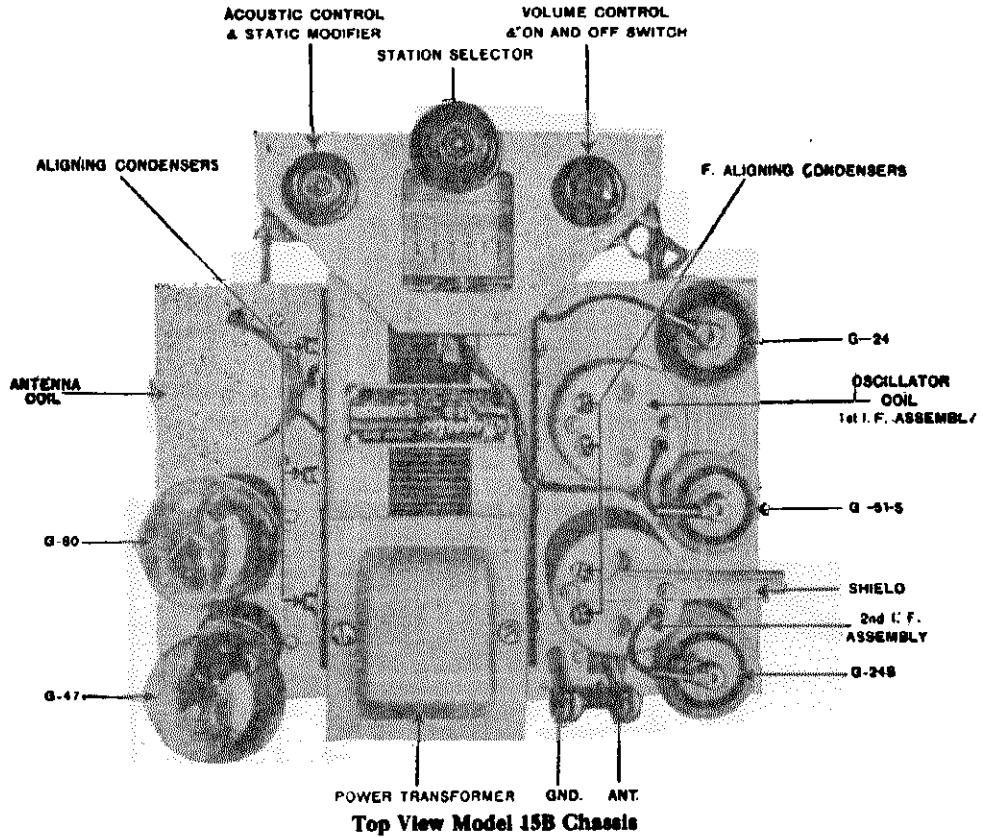

GRIGSBY - GRUNOW CO.

MODEL 25
Chassis Views
Voltage

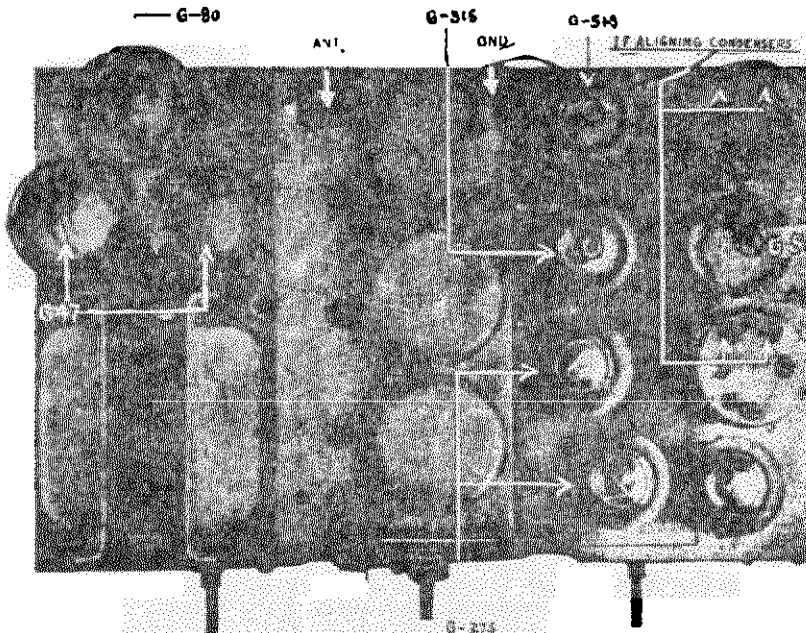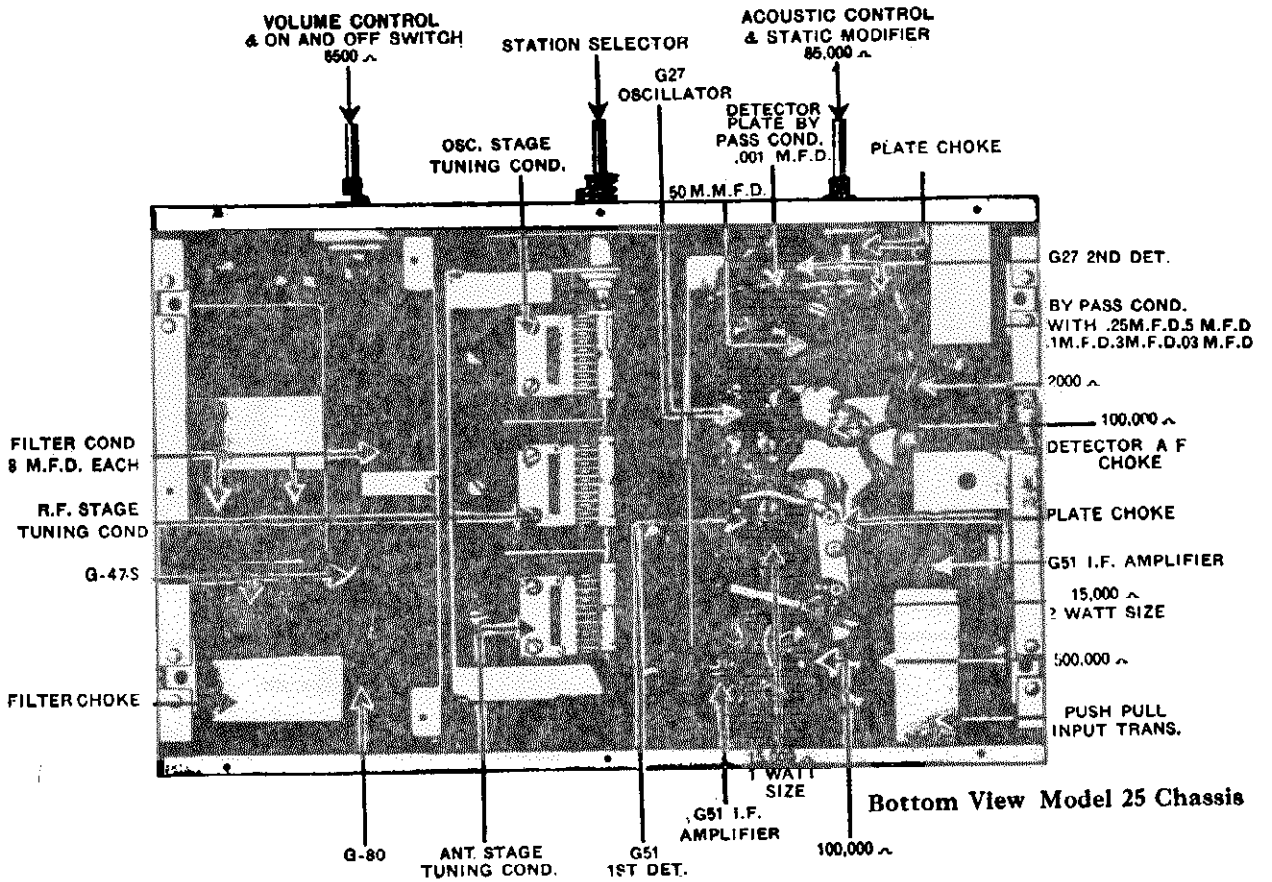

Tube Purpose	Type	File A.C.	Plate Voltage D.C.	File to Ground D.C.	Cathode Voltage	Plate Current M.A. D.C.	Screen Voltage
R. F. Amp	G-517s	2.5	260	—	3.5	5.0	90
1st Det	G-517s	2.5	260	—	8.0	1.0	90
Det	G-27	2.5	90	—	—	3.5	—
I. F.	G-517s	2.5	260	—	3.5	5.5	90
2nd Det	G-277s	2.5	115	—	—	14	—
3rd Det	G-277s	2.5	115	—	—	14	—
Power Amp.	G-47	2.5	245	-16.5	—	32	260
Power Amp	G-47	2.5	245	16.5	—	32	260
Rectifier	G-80	5	400	—	—	—	120 (Total)

Speaker Field 70 Volts

Volume Control—Maximum


Table of Voltages to Ground Model 25

D 1 - First Condenser .385 Volts
D 2 - Second Condenser 130 Volts
Line Voltage 115 Volts

MODEL 25-B
251, 253, 254
Schematic

GRIGSBY - GRUNOW CO.

MAJESTIC MODEL 25-B CHASSIS
RECEIVER MODELS CHELTENWOOD (251) - BRENTWOOD (253) - BRUCEWOOD (254)

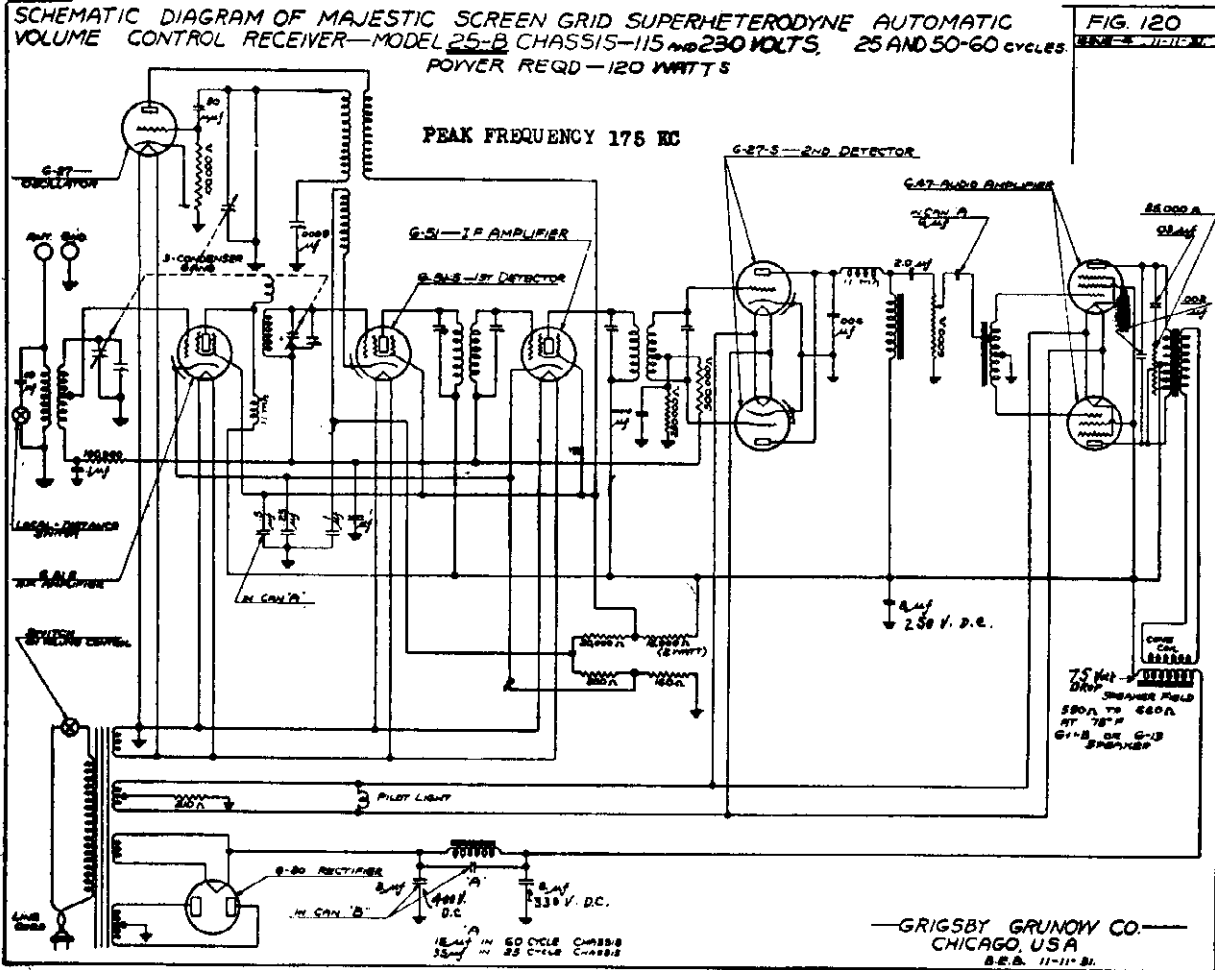

The audio system is tuned to give full bass response as low as forty cycles, also an image rejector circuit is used in the pre-selector to reduce image response.

Power Supply System

The power supply system on the Model 25B Chassis consists of a power transformer, G80 rectifier, filter choke (runda) speaker field 3 mfd paper condenser and two 8 mfd. electrolytic condensers.

Color Code for Model 25-B Power Transformer


- Start of Primary..... Yellow
- Finish of Primary..... Yellow
- Start of Anode..... Red
- Center Tap (Anode)..... Black
- Finish of Anode..... Red
- Start of No. 1 Heater..... Black
- Center Tap No. 1 Heater... Red
- Finish of No. 1 Heater... Black
- Start of No. 2 Heater... Yellow
- Finish of No. 2 Heater... Yellow
- Start 5 v. Fil..... Black
- Finish 5 v. Fil..... Black

MODEL 25-B		Line 115 Volts			Vol. Contr. Max.			
TUBE	CIRCUIT	FIL.	PLATE	F.to GkND.	CATH.	CURRENT	S.G. VOLTS	S.G. CURRENT
G-51-S	R.F. Amp.	2.5	260	5	4.2	90	1.2
G-51-S	1st Det.	2.5	260	7	1.3	90	.4
G-27	Osc.	2.5	90	3.5
G-51-S	I.F.	2.5	260	3	5.	90	1.6
G-27-S	1st Det.	2.5	135	16	14.
G-27-S	2nd Det.	2.5	135	16	14.
G-47	Power	2.5	250	18	30.	250	7.2
G-47	Power	2.5	250	16	30.	250	7.2
G-80	Rect.	5.	400	120 Total

—GRIGSBY GRUNOW CO.—
CHICAGO, U.S.A.
S.E.S. 11-11-31


MODEL 25-B
251, 253, 254
Chassis Views

GRIGSBY - GRUNOW CO.

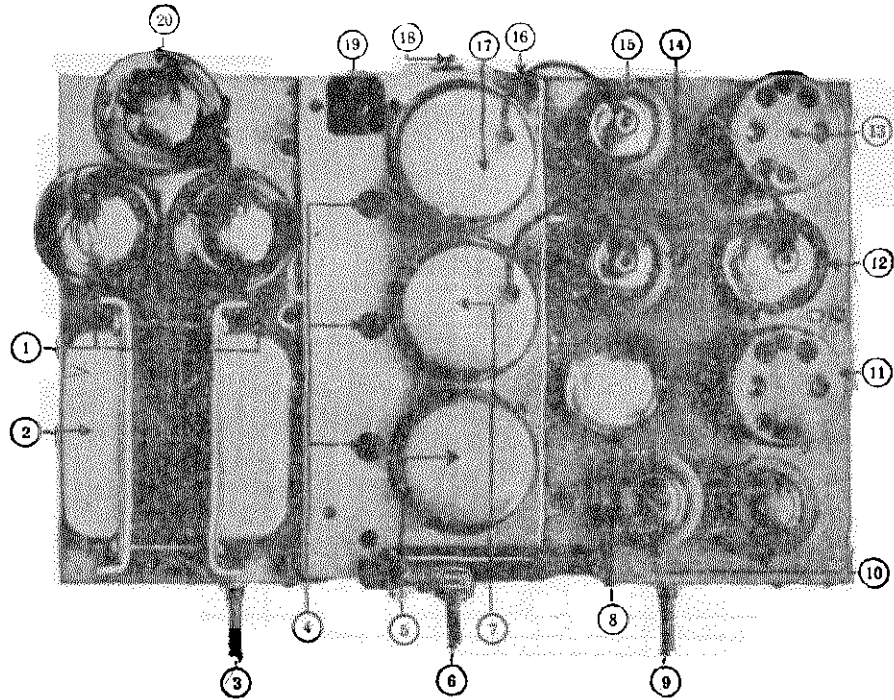

Top View of Model 25B Chassis

- | | | | |
|---------------------------------------|--|---------------------------------|---------------------------------|
| 1. G-47 Pentode Audio Amplifier Tubes | 6. Tuning Control | 10. G-27-S Second Detector Tube | 15. G-51-S R. F. Amplifier Tube |
| 2. Power Transformer | 7. R. F. Coil | 11. 2nd I. F. Transformer | 16. Ground Post |
| 3. Tone Control | 8. G-27 Oscillator Tube | 12. G-51 I. F. Amplifier Tube | 17. Antenna Coil |
| 4. Aligning Condensers | 9. Volume Control and Line On-Off Switch | 13. First I. F. Transformer | 18. Local-Distance Switch |
| 5. Oscillator Coil | | 14. G-51-S 1st Detector Tube | 19. Antenna Post |
| | | | 20. G-80 Rectifier Tube |

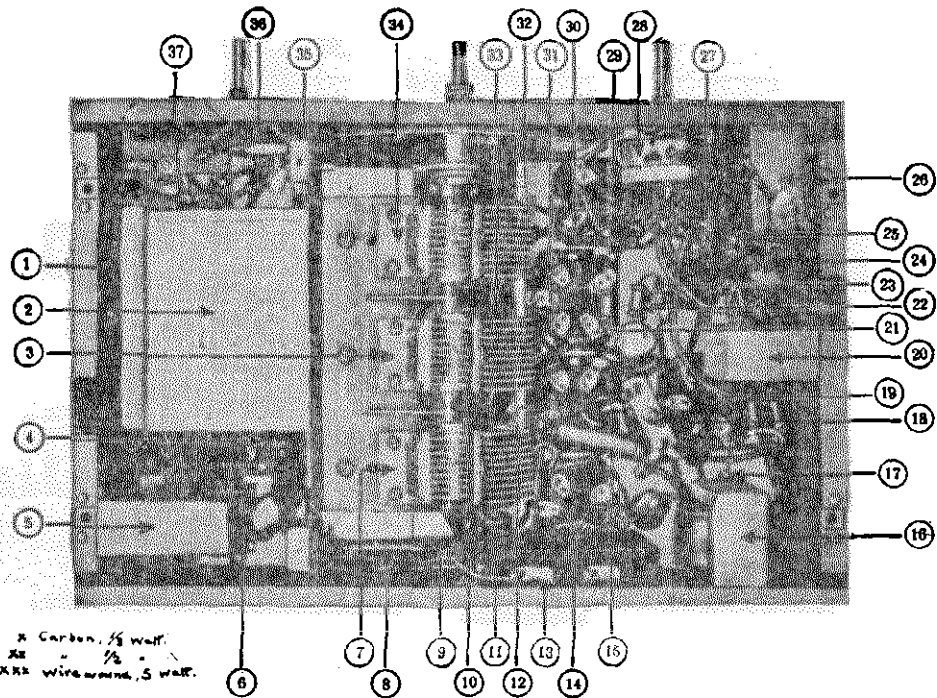

Bottom View of Model 25B Chassis

- X Carbon, $\frac{1}{8}$ watt.
XX $\frac{1}{2}$ " "
XXX Wire wound, .5 watt.
- | | | | | |
|------------------------------|---|---|------------------------------------|-----------------------------------|
| 1. 8 mfd. Cond. (2) | 8. .05 mfd. Local-Distance Cond. (Carriage) | 15. 15,000 Ohm Resistor | 26. "Can A" Cond. Assembly | 32. .00005 mfd. Mica Cond. |
| 2. 3 mfd. and .15 mfd. Cond. | 9. Local-Distance Switch | 16. Push-Pull Input Choke | 27. .00013 mfd. Mica Cond. | 33. .1 mfd. Cond. |
| 3. R. F. Stage Tuning Cond. | 10. 100,000 Ohm Resistor | 17. 100 Ohm Resistor | 28. Volume Control and Line Switch | 34. Oscillator Stage Tuning Cond. |
| 4. G-47 P.P. Audio Sockets | 11. .1 mfd. Cond. (Carriage) | 18. R. F. Choke | 29. .006 Mfd. Mica Cond. | 35. Oscillator Tracking Cond. |
| 5. Filter Choke | 12. G-51-S First Det. Socket | 19. G-51-S I. F. Amplifier Det. Plate A. F. Choke | 30. G-27-S 2nd Det. Sockets | 36. Tone Control |
| 6. G-80 Rectifier Socket | 13. "Can C" Cond. Assembly | 20. 250,000 Ohm Resistor | 31. G-27 Oscillator Socket | 37. .01 mfd. Tone Control Cond. |
| 7. Ant. Stage Tuning Cond. | 14. G-51-S R. F. Amplifier Socket | 21. 100,000 Ohm Resistor | | |
| | | 22. 500,000 Ohm Resistor | | |
| | | 23. 500 Ohm Resistor | | |
| | | 24. 20,000 Ohm Resistor | | |

MODEL 35
351,353
Schematic

GRIGSBY - GRUNOW CO.

MODEL 35 CHASSIS
RECEIVER MODELS ABBEYWOOD (353) and COLLINGWOOD (351)

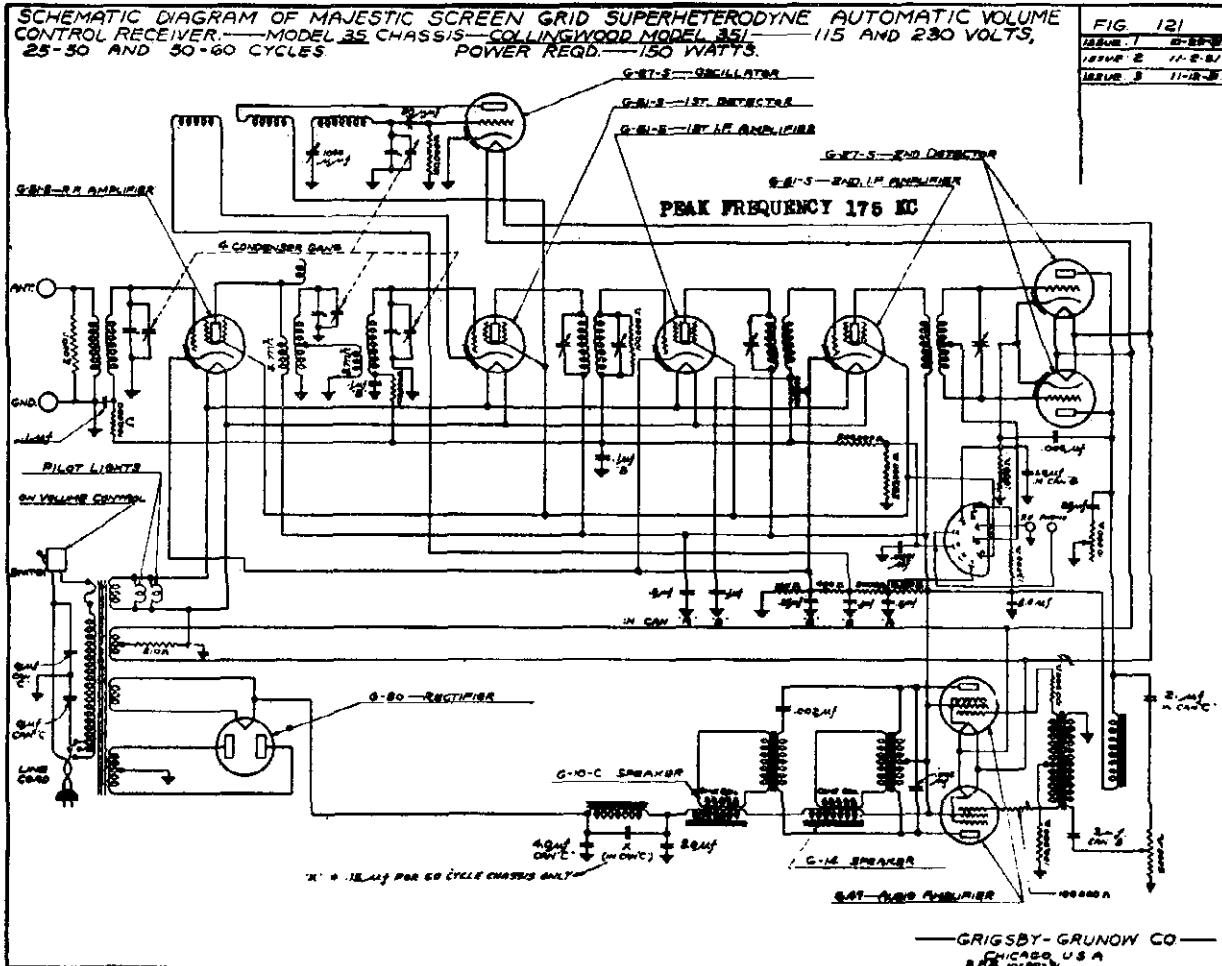


FIG. 121
ISSUE 1 6-25-34
ISSUE 2 11-2-34
ISSUE 3 11-12-34

Radio-Phonograph Switch

Both the COLLINGWOOD and ABBEYWOOD Models have a radio-phonograph switch which is located below the central control or station selector. This switch is turned to the right for radio operation and to the left for phonograph operation. There are pick-up terminals on the Model 35 chassis employed in both these sets, although the COLLINGWOOD Model is not a combination receiver. There should always be a jumper across the pickup terminals when the pickup is not attached.

Power Supply System

The power supply system of the Model 35 chassis consists of a power transformer, G-80 rectifier, a filter choke which is tuned to hum frequency, a 4 mfd. paper condenser, and two 8 mfd. electrolytic condensers. The condenser employed across the filter choke is a .15 mfd. for sixty cycle operation, and a .35 mfd. for twenty-five cycle operation. The output from this filter section passes through the fields of both dynamic speakers which act as additional chokes to the filter circuit.

MODEL 35		Line 115 volts						
TUBE	CIRCUIT	FIL.	PLATE	F. to GRND.	CATH.	CURRENT	S.G. VOLTS	S.G. CURRENT
G-51-S	R.F. Amp.	2.5	265	4	5	90	0.5
G-51-S	1st Det.	2.5	265	8	1	90	0.5
G-27	Osc.	2.5	90	4
H-51-S	1st I.F.	2.5	265	4	5	90	0.5
G-51-S	2nd I.F.	2.5	265	4	5	90	0.5
G-27-S	2nd Det.	2.5	115	12
G-27-S	2nd Det.	2.5	115	12
G-47	Power	2.5	250	16.5	32	260	7
G-47	Power	2.5	250	16.5	32	260	7
G-80	Rect.	5.0	130 total

Color Code for Model 35 Power Transformer

Start of No. 1 Heater Black
 Center Tap No. 1 Heater Red
 Finish of No. 1 Heater Black
 Start of No. 2 Heater Yellow
 Finish of No. 2 Heater Yellow
 Start G-80 Filament Black
 Finish G-80 Filament Black

Start of Primary Black
 1st Tap of Primary Green
 2nd Tap of Primary Yellow
 Finish of Primary Blue
 Start of Anode Red
 Center Tap (Anode) Black
 Finish of Anode Red

GRIGSBY - GRUNOW CO.

MODEL 25-B
MODEL 35
Alignment

Technical Data
Models 25B and 35 Chassis

Procedure for Alignment

WARNING: The Power Line shall never be connected to the receiver until the speaker and tubes are connected in the receiver.
The receiver shall be aligned with the volume control set at maximum and input reduced to keep output below 1 watt.

1. Supply 175 K.C. on 1st detector grid and adjust all I.F. tuning condensers to give maximum sensitivity.
2. Set dial at 1500 K.C. and line up all radio frequency circuits on 1500 K.C. signal for maximum output.
3. Set dial at 550 K.C. and adjust oscillator tracking condenser for maximum sensitivity with 550 K.C. feeding into the set. For each adjustment of the oscillator tracking condenser, there will be a different dial setting for maximum sensitivity. The combination of tracking condenser adjustment and dial setting which gives maximum sensitivity, disregarding calibration is the correct adjustment. If this adjustment falls within 5 K.C. of the 550 K.C. calibration point, readjust trimmers at 1500 K.C. and check dial calibration at 1000 K.C.

Each Receiver Must Be Aligned for Maximum Sensitivity. Check volume control throughout its range for noise, open or short circuit and irregularity of control operation. Check acoustic control over entire range for noise, open, short circuit and operation.

Automatic Volume Control System

The manual control is a 6,000 ohm potentiometer between second detectors and output tubes, operating entirely independent of the automatic control.

Automatic control is accomplished by applying the second detector grid bias on the R.F., Detector and I. F. Stages to control their amplification, and by the inherent control of audio amplification in the second detector stage, due to the same bias.

Sensitivity


In cases where low sensitivity is encountered, the first step taken to remedy the condition, should be to check the G51S Tubes, which may be drawing abnormal grid current. This procedure should always be taken prior to any attempt to remedy by aligning the condenser gang.

Method of Biasing

The necessary bias obtained on the R. F., First Detector and I. F. is obtained from a bleeder circuit. The Oscillator is self-biasing with grid current drop across the 100,000 ohm grid resistor. The second detectors are self-biasing from a grid current drop across the 250,000 ohm grid resistor. The pentodes are also self-biasing by the 110 ohm wire-wound resistor in the filament circuit.

"Off" and "On" Line Switch


The "Off" and "On" Line Switch is attached to the volume control shaft. Turning the volume control completely to the left shuts the receiver off. The first fifteen degrees rotation of the control to the right will turn the receiver on. The balance of rotation to the right controls the volume of the receiver.

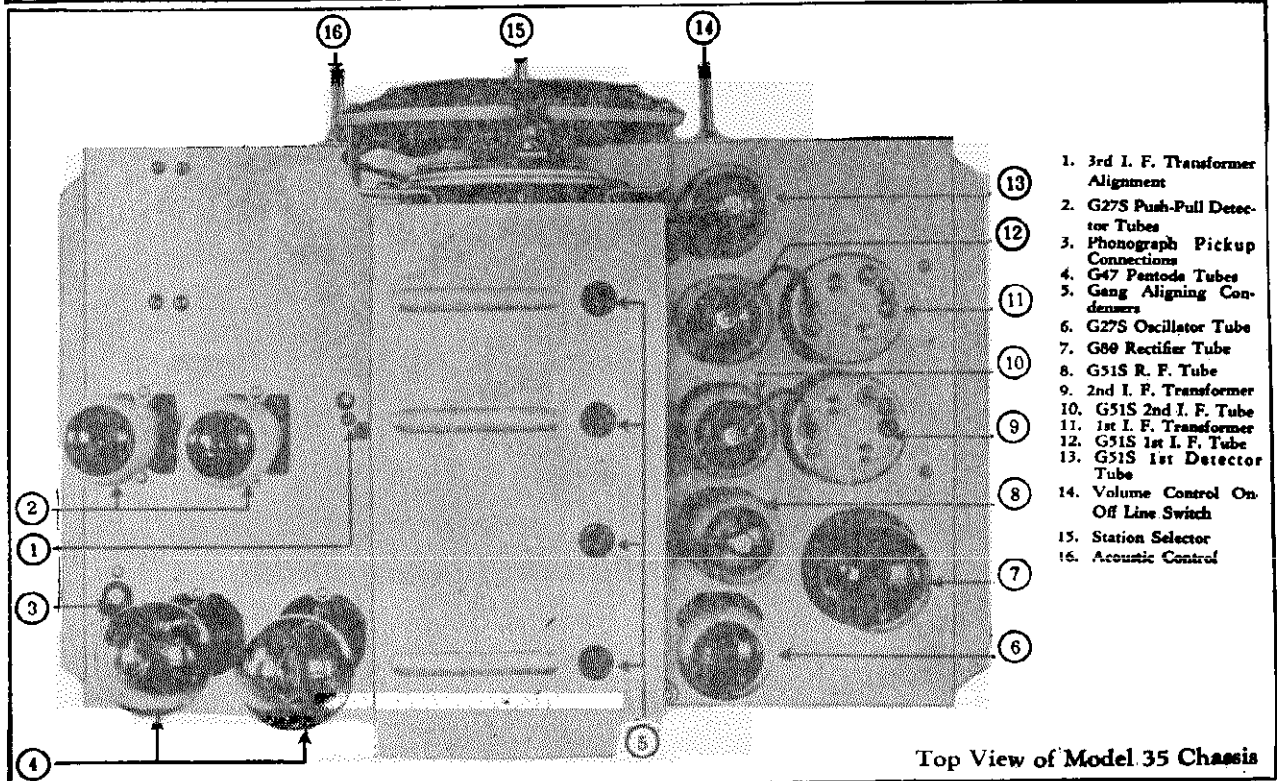

Top View of Model 35 Chassis

MODEL 35
351,353
Chassis Views


GRIGSBY - GRUNOW CO.

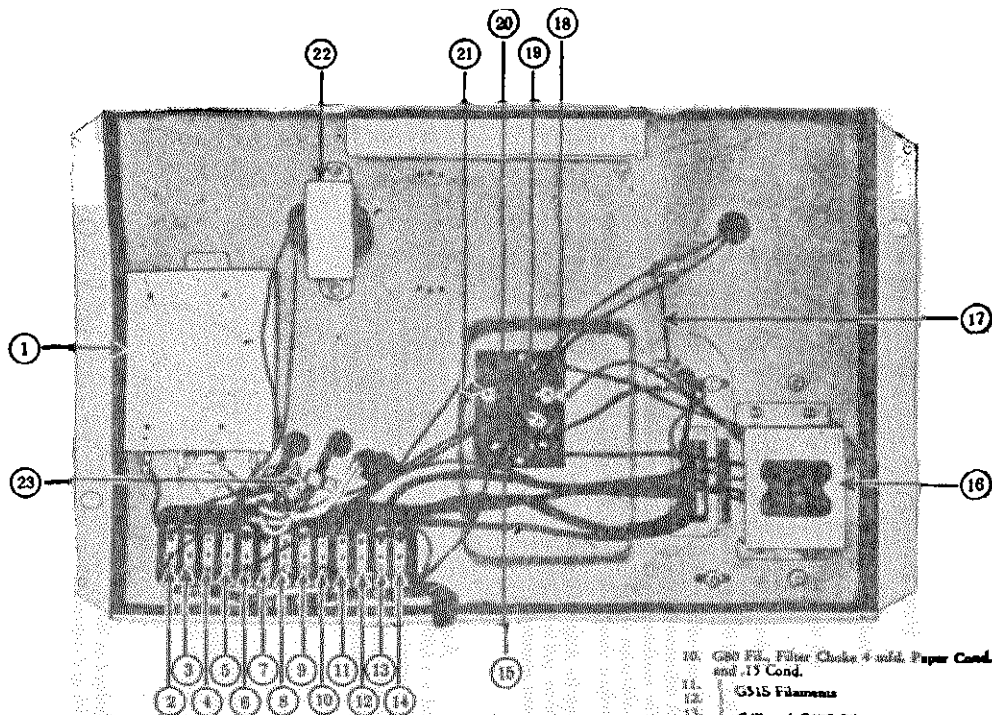

View Showing Power Supply Circuit of Model 35 Chassis

- | | |
|--|--|
| 1. 2-8 mfd. Electrolytic Condensers | 5. 110 V. Line Cord—On and Off Switch and .01 Cond. |
| 2. 285 V. ea G47 Screens, 8 mfd. Electrolytic Cond. Det. Audio Choke and G14 Speaker Field | 6. 110 V. Line Cord—Primary Switch and .01 Cond. |
| 3. 2 mfd. Cond. Det. Audio Choke and Sec. and Det. Plates | 7. G47 Plate and Input to Speakers |
| 4. 2 mfd. Cond. and Volume Control | 8. G47 Plate and Input to Speakers |
| | 9. Power Filter Choke G-10C Speaker Field, .15 Cond. and 8 mfd. Electrolytic Cond. |

- | |
|---|
| 10. G80 Fil., Filter Choke 4 mfd. Paper Cond. and .15 Cond. |
| 11. G51S Filaments |
| 12. G51S Filaments |
| 13. G47 and G27S Filaments |
| 14. Four |
| 15. Four |
| 16. G80 Rectifier Socket |
| 17. 210 Ohm Resistor |
| 18. 125 V. Primary Tap |
| 19. 115 V. Primary Tap |
| 20. 105 V. Primary Tap |
| 21. Line |
| 22. Audio Frequency Choke |
| 23. Junction G10C—G14 Speaker Fields |

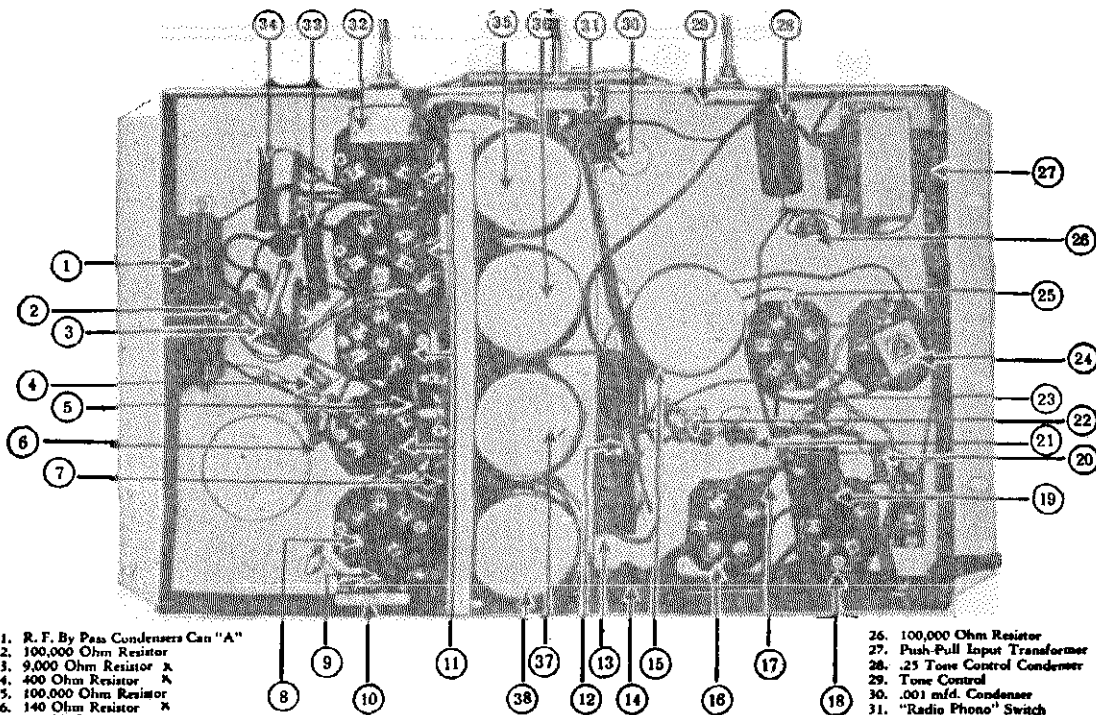

Interior View of Model 35 Chassis

- | |
|-------------------------------------|
| 1. R. F. By Pass Condensers Can "A" |
| 2. 100,000 Ohm Resistor |
| 3. 9,000 Ohm Resistor \times |
| 4. 400 Ohm Resistor \times |
| 5. 100,000 Ohm Resistor |
| 6. 140 Ohm Resistor \times |
| 7. .1 mfd. Condenser |
| 8. G27S Oscillator Tube Socket |
| 9. 100,000 Ohm Resistor |
| 10. Oscillator Tracking Condenser |
| 11. G51S Tube Sockets |
| 12. 100,000 Ohm Resistor |
| 13. R. F. By Pass Condenser Can "B" |
| 14. 5000 Ohm Resistor \times |
| 15. 3rd I. F. Transformer |

- | |
|-------------------------------------|
| 16. } G47S Tube Sockets |
| 17. } G47S Tube Sockets |
| 18. } G47S Tube Sockets |
| 19. 100,000 Ohm Resistor |
| 20. .002 mfd. Condenser (Misc.) |
| 21. 100,000 Ohm Resistor |
| 22. 500,000 Ohm Resistor \times |
| 23. 1000 Ohm Resistor \times |
| 24. .006 mfd. Condenser (Misc.) |
| 25. G27S Push-Pull Detector Sockets |


- | |
|--|
| 26. 100,000 Ohm Resistor |
| 27. Push-Pull Input Transformer |
| 28. .25 Tone Control Condenser |
| 29. Tone Control |
| 30. .001 mfd. Condenser |
| 31. "Radio Phono" Switch |
| 32. Manual Volume Control and (Off and On) Line Switch |
| 33. 10,000 Ohm Resistor \times wire |
| 34. 13,000 Ohm Resistor \times wband |
| 35. Link R. F. Coil |
| 36. R. F. Coil |
| 37. Antenna Coil |
| 38. Oscillator Coil |

GRIGSBY - GRUNOW CO.

MAJESTIC CHASSIS MODELS 25-B and 35


MODEL 25-B
MODEL 35
Speaker Conn.

G-14-B Speaker
ABBEYWOOD Model

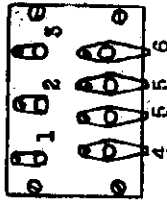

- 1 Output Sec. & Voice Coil of G-14-B & G-13-B Junction
- 2 Voice Coil of G-13-B & Output Secondary Junction
- 3 Voice Coil of G-14-B & Output Secondary Junction
- 4 Field Coil & Primary Tap Junct.
- 5 Primary Plate Lead Terminals
- 6 Field Coil Terminals


G-13-B Speaker
ABBEYWOOD Model

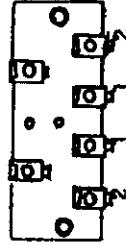

- 1 Voice Coil & Output Sec. Junct.
- 2 Field Coil Terminals


CHASSIS 25-B	
DYNAMIC SPEAKER	
MODEL	G-10-C
"	G-13-B
"	G-14
"	G-14-B
CHASSIS 35	
DYNAMIC SPEAKER	
MODEL	G-11-B
"	G-13

G-14 Speaker
COLLINGWOOD Model

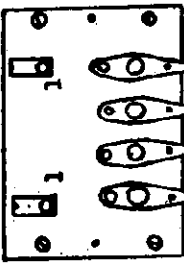

- 1 Voice Coil & Output Sec. Junct.
- 2 Field Coil & Primary Tap Junct.
- 3 Primary Plate Lead Terminals
- 4 Field Coil Terminal

G-10-C Speaker
COLLINGWOOD Model

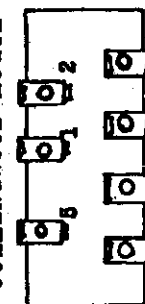

- 1 Primary Plate Lead Terminal
- 2 .002 Cond. Plate Terminal
- 3 Speaker Field Terminals
- 4 Voice Coil & Secondary Junct.
- 5 Primary & .002 Cond. Junction


Models G-10-C, G-13-B, G-14 and G-14-B Dynamic Speakers

Employed in Models Collingwood and Abbeywood

Both the COLLINGWOOD and ABBEYWOOD Models are equipped with twin speakers. The COLLINGWOOD Model employs the G-10-C, a small dynamic speaker (field resistance 200 ohms) for the high notes and the G-14, a large dynamic speaker (field resistance 750 ohms) for the low notes. The ABBEYWOOD Model employs the G-13-B dynamic speaker (field resistance 300 ohms) for the high notes and the G-14-B dynamic speaker (field resistance 550 ohms) for the low notes. The voice coil of the G-14-B is excited by one-half of the secondary of the output transformer which is located in the base of the speaker, and the voice coil of the G-13-B is excited by the other one-half of the same secondary. These speakers operating simultaneously produce an almost flat audio frequency response curve that gives these receivers a truly faithful reproduction.

G-15 Speaker


BRENTWOOD and BRUCEWOOD Models

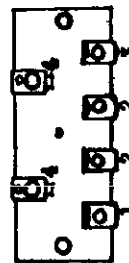

- 1 Field Coil Terminal
- 2 Voice Coil & Output Sec. Junct.
- 3 Field Coil & Primary Tap Junct.
- 4 Primary Plate Lead Terminals

G-11-B Speaker

CHELLENWOOD Model

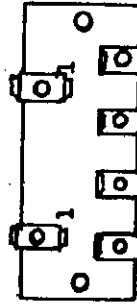

- 1 Primary Plate Lead Terminals
- 2 Field Coil Terminal
- 3 Voice Coil & Output Secondary Junct.
- 4 Field Coil & Primary Tap Junction

Models G-11-B and G-13 Dynamic Speakers

Employed in Models Cheltenham, Brentwood and Brucewood

The Models G-11-B and G-13 Dynamic Speakers have a field resistance of 570 ohms at 78° F. The G-11-B Speaker which is employed in the Cheltenham Model, has a field structure of heavy "U" construction, and a 9.5" paper weight cone which responds readily to the slightest excitation. The output transformer with its terminal board is rigidly fastened to the cone housing. The G-13 speaker, which is employed in the Brentwood and Brucewood Models, has a field structure of heavy "U" construction mounted on a 6" base which is also used as a case for the output transformer. The 12" cone is a special made paper weight cone which responds readily to the slightest excitation.

MODEL 353
Record Changer
Notes

GRIGSBY - GRUNOW CO.

Instructions for Care and Operation of Automatic Record Changer Employed in the Majestic Model 353 Receiver

IMPORTANT.—The following instruction should be used in operating the MAJESTIC Automatic Record Changer employed in the Model 353 Abbeywood Receiver.

WARNING.—Before attempting to operate the automatic record changer, three screws which pass through the base plate of the record changer and the wood shelf, should be loosened so that the chassis is resting freely on the rubber cushions.

WARNING.—At no time for any reason should the turntable be stopped by hand. If this warning is not adhered to, serious damage may result.

RECORDS.—It is possible to play the two types of records available for home entertainment, that is, the ordinary records and the new long playing records. Each of these two types can be obtained in both twelve and ten inch diameter. The approximate playing time of these records is as follows:

Ordinary Records.
10 inch—2½ minutes.
12 inch—3½ minutes.

New Long Playing Records.
10 inch—10 minutes.
12 inch—15 minutes.

SPEED.—The standard record turns at a speed of 78 revolutions per minute, whereas the long playing record turns at the rate of 33 1/3 revolutions per minute. The mechanism is provided with a speed control lever to give either of these speeds, as required.

SWITCHES.—The line switch for the phonograph motor is located near the front of the turn table.

Directly under the main tuning dial is the "Radio-Phonograph" switch, which should be thrown to phonograph position for record playing. The line switch for the radio receiver is incorporated in the volume control assembly, which is located to the left of the phonograph switch.

NEEDLES.—The long playing records should be played using only the special needles designed for this type of record. After the special needle has once been removed from the pick-up head, do not use it again. Replace with a new one.

Do not play ordinary records with the special needle designed for long playing records.

Instructions for Setting Selector Device

It will be noted that to the right of the turn table there is a selector lever for the purpose of playing ten inch records automatic, ten inch records repeat, twelve inch records repeat, and universal or manual operation.

10" AUTOMATIC.—This is the only position in which the ten inch records are changed automatically.

10" REPEAT.—In this position, the mechanism will repeat the playing of the same record as many times as desired.

12" REPEAT.—The mechanism in this position will keep repeating a 12" standard record. Do not, however, attempt to repeat a 12" long playing record as it should be played manually with the lever in the universal position.

"UNIVERSAL."—In this position, the automatic changing and the repeat mechanism are not in operation, and the playing is controlled manually as with the ordinary phonograph. This position should always be used for playing the 12" long playing record and may be used for playing standard records.

Instructions for Operating Automatic Record Changer

Select the desired records and place them carefully in the record holder or magazine. The record at the bottom of the magazine will be the first one to be played.

The automatic changing magazine handles from one to ten of the 10" records. Do not mix standard records with long playing records in the magazine for automatic playing, as each type requires a different speed and a different type of needle.

It is best to place the first record on the table by hand and start the needle very carefully in the first groove with the selector lever in the "Universal" position; then the lever may be turned to the automatic position if desired, after which the changer will operate as outlined in paragraph II under "Instructions for Setting Selector Device." This procedure protects the needle and the record, and assures longer life for both.

REJECT LEVER.—While playing in the automatic position, if it is desired to interrupt the record and to play the following one, pull forward the reject lever which is located to the right of the turn table. This will cause the mechanism to go through a complete cycle of changing the record.

RELOADING.—When all of the records have been played through, and the magazine is empty, the mechanism will repeat the last record over and over. In reloading the magazine, switch off the motor at the time the magazine has travelled to the extreme left position, and carefully remove the stack of records from the turn table. Then replace them in the magazine in any desired sequence, with the side facing up which you desire to play. *The magazine may be swung up and down, but do not try to force it sideways manually.*

ARM REST.—When changing records, the pick-up should be placed on the rest, to the right. If it cannot be placed there without straining, this is a sign that the automatic mechanism has not completed its cycle. In this case, hold the pick-up loosely, turn on the motor switch and wait until the record magazine has moved to the extreme left, which will allow the pick-up to be placed on its rest.


Instructions for Operating Manually

By placing the lever in the "UNIVERSAL" position, the records will be played manually. The 12 inch long playing records should always be played in this position.

Oiling

Every two or three months, the turn table should be removed and three or four drops of oil placed in each of the six holes provided.

GRIGSBY - GRUNOW CO.

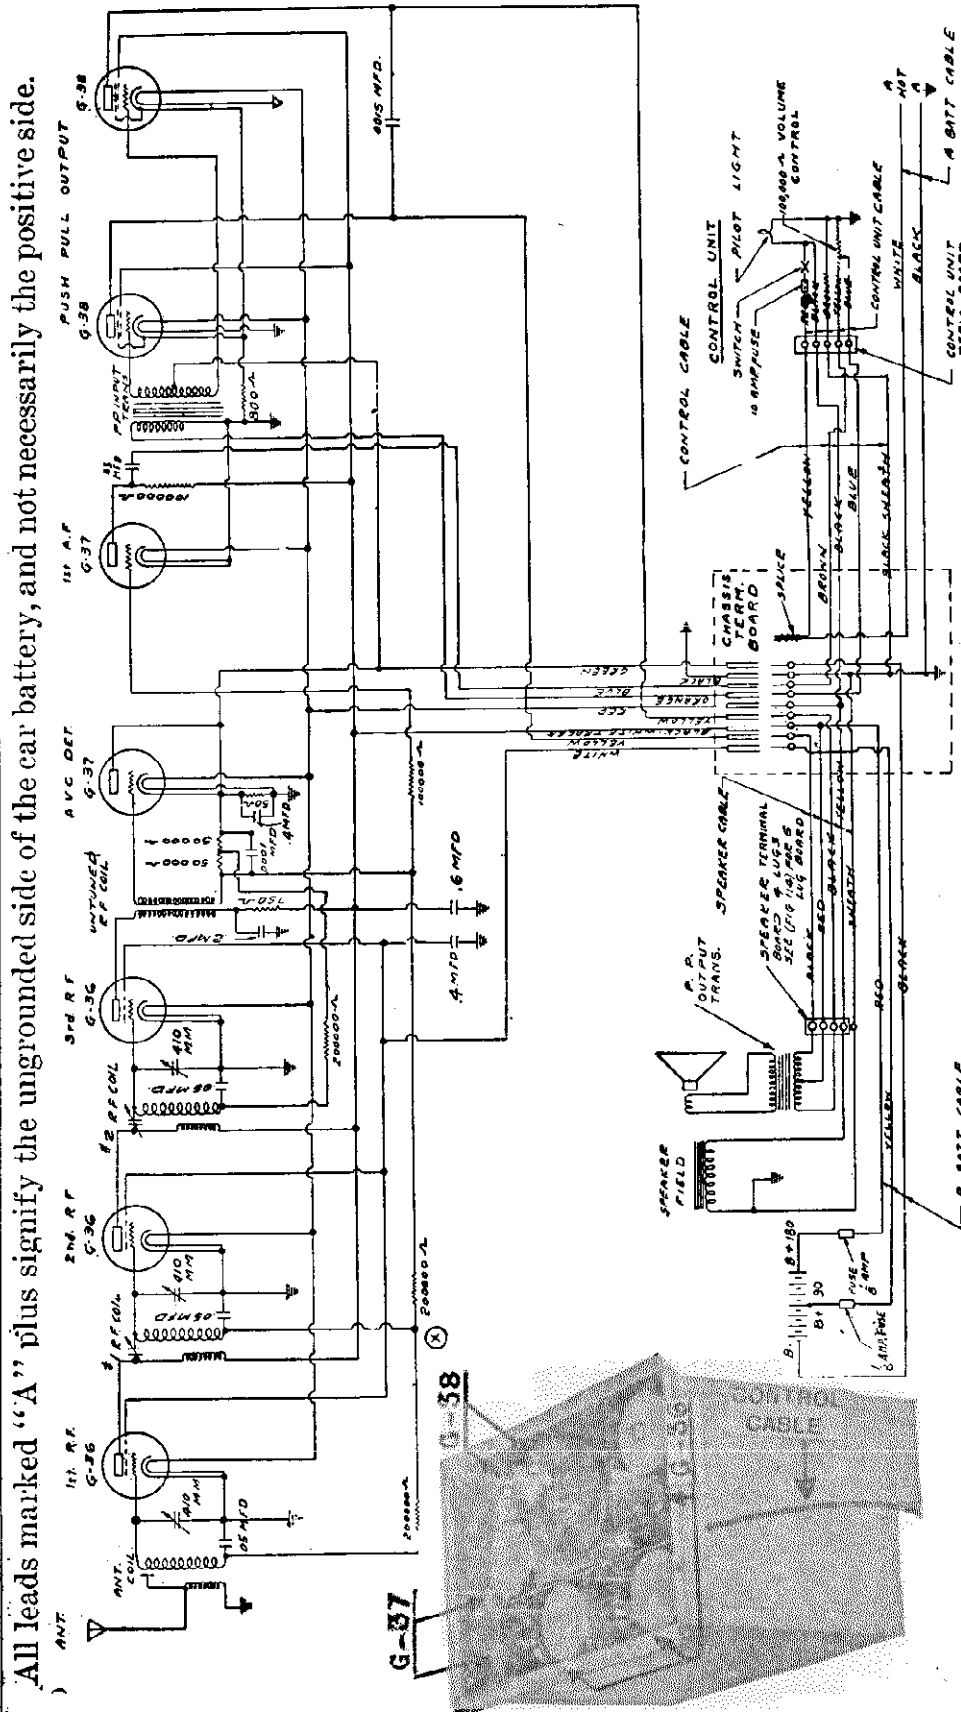

All leads marked "A" plus signify the ungrounded side of the car battery, and not necessarily the positive side.

Note on Alignment of Gang Condenser: Should a receiver need realignment in the field, a station should be tuned in at approximately 1300 kilocycles and the alignment made in the usual manner. In case one alignment condenser will not indicate a peak of sensitivity, slightly advance or retard the tuning control and proceed to readjust the alignment condenser as before.

Note on Automatic Volume Control System: The Model 110 chassis utilizes an automatic volume control system in combination with a diode detector, the G-57 detector serving both functions.

Majestic Model 110
Auto Radio

MODEL 120
Schematic

GRIGSBY - GRUNOW CO.


BIAS VOLTAGES

	Volume Control at Maximum	Volume Control at Minimum	
R.F.	3 volts	R. F.	11 volts
Osc.	0 volts	Osc.	0 volts
1st Det.	8 volts	1st Det.	14 volts
I. F.	3 volts	I. F.	3 volts
2nd Det.	8 volts	2nd Det.	8 volts
Pentode	13.5 volts	Pentode	13.5 volts

IF PEAK 175 KC.


SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETRODYNE HOME BATTERY RECEIVER MODEL -120

The Model 120 chassis is employed in the Model 121 receiver.

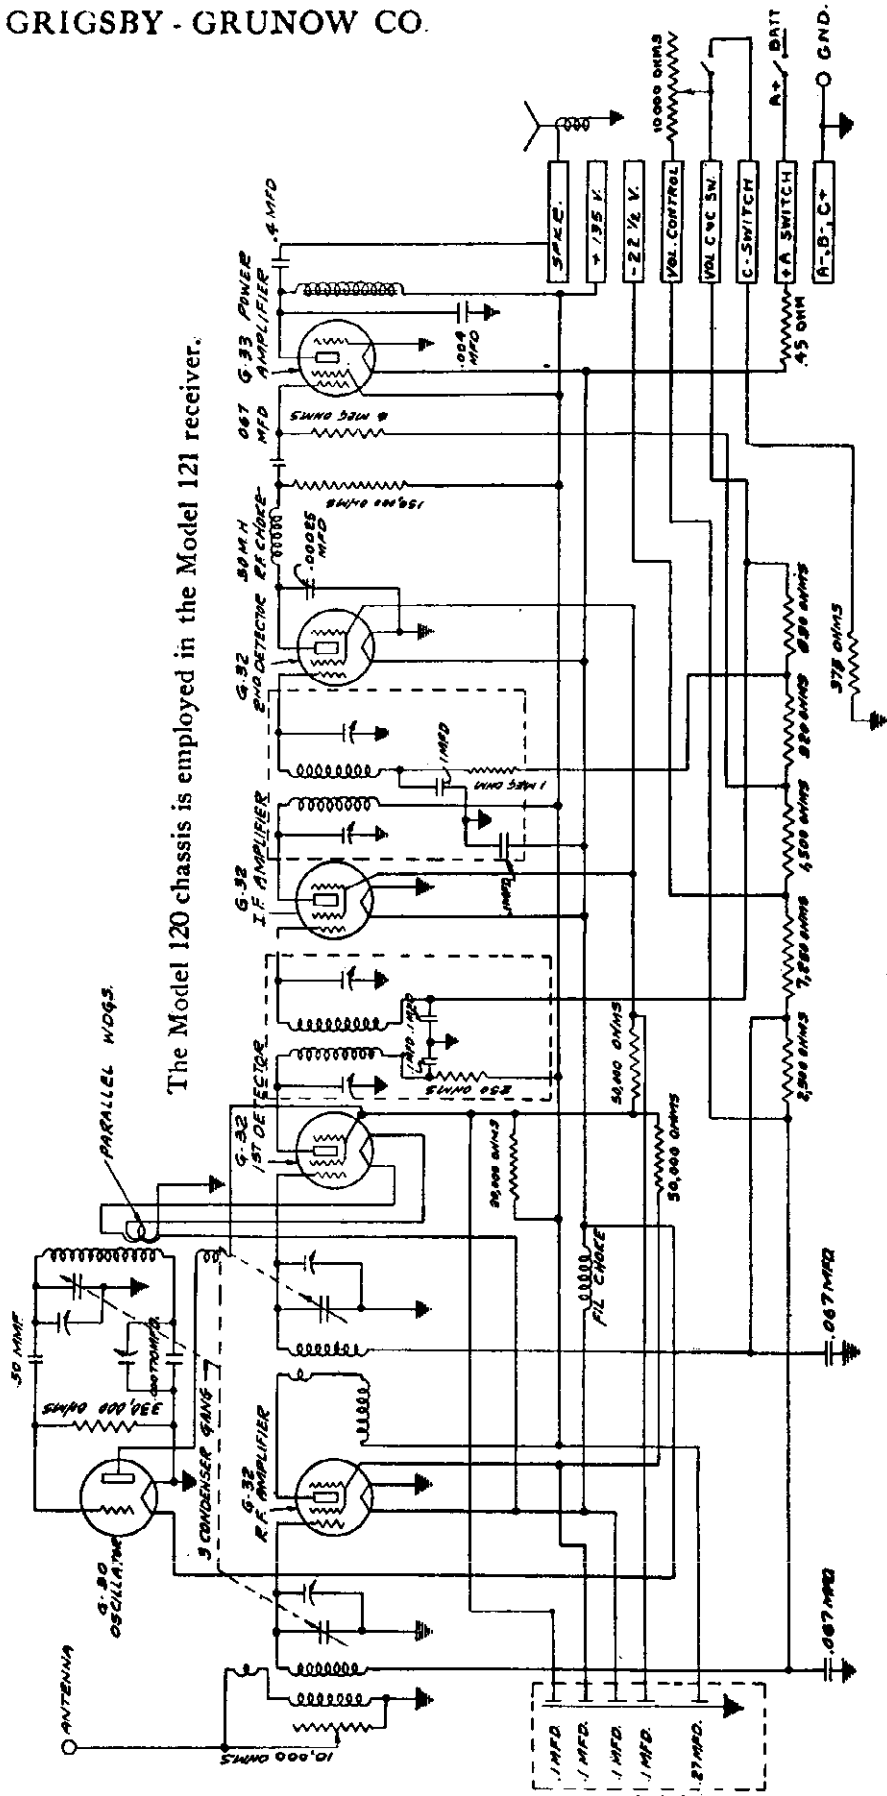

MODEL 120
Chassis View

GRIGSBY - GRUNOW CO.

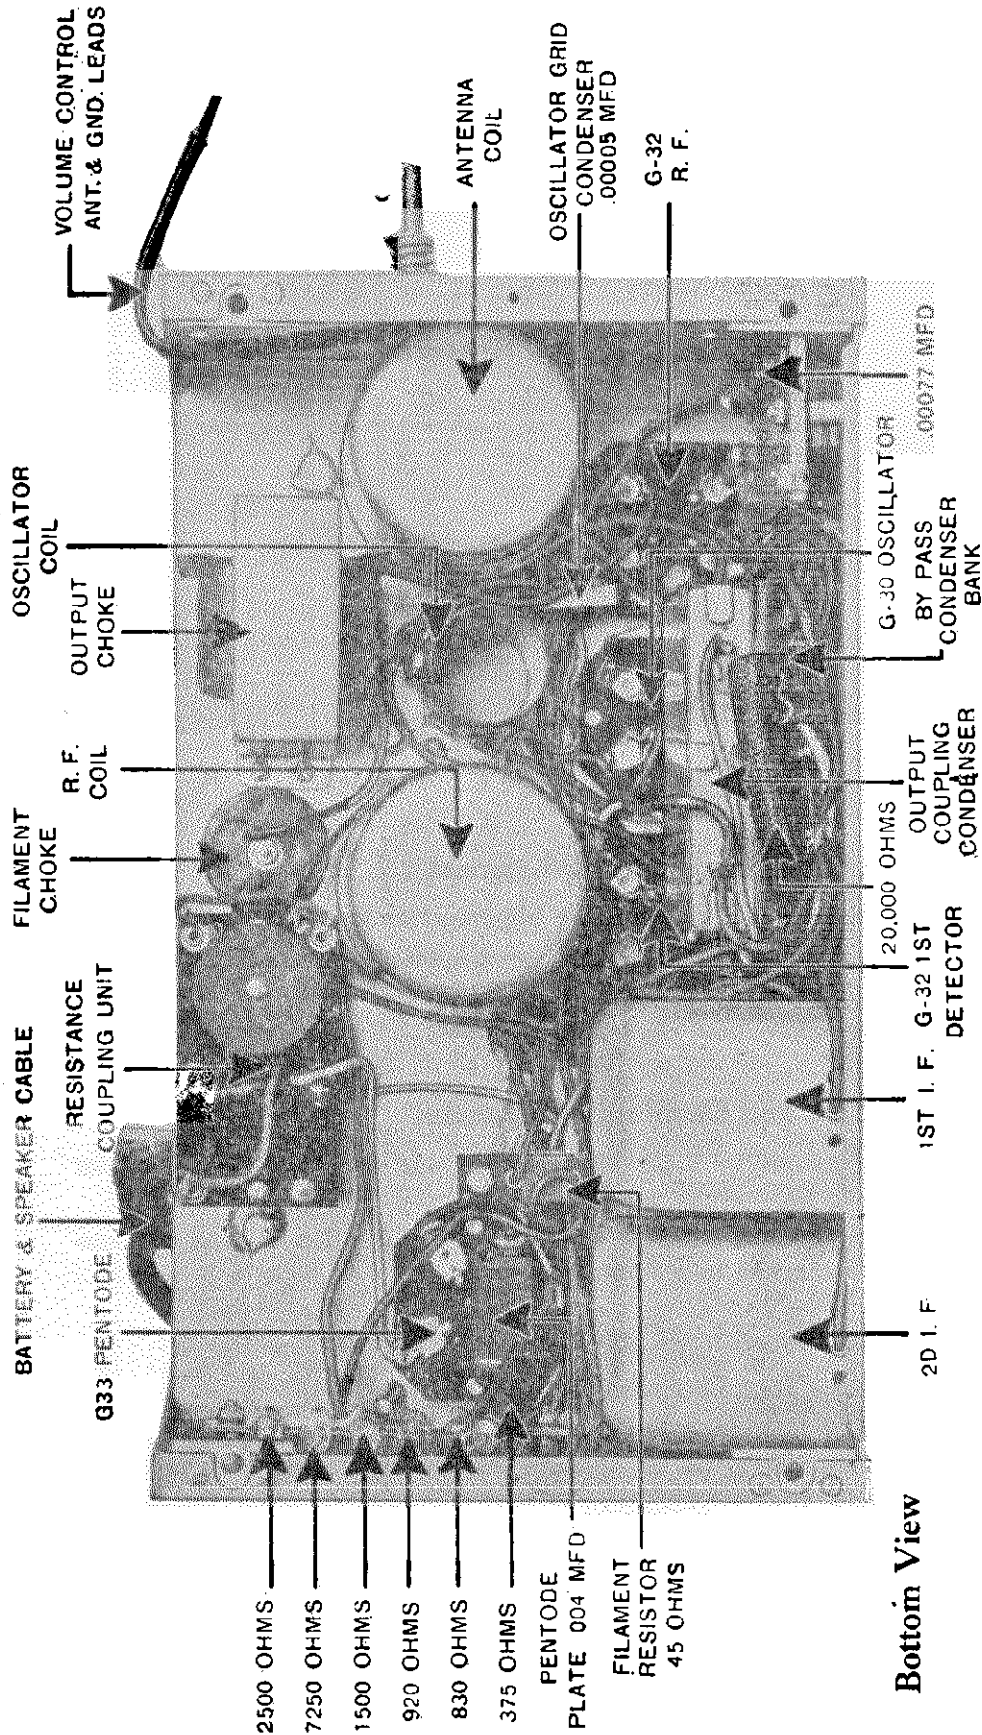

Bottom View

Battery Connections


- 3 wire cable plus 135 volts—Red. minus 22½ volts—Green. plus "C" minus "B"—Black.
- 2 wire cable to speaker—Red and Black and Red. minus "A" Black.

Volume Control and Switch Connections

- Antenna section of volume control—Red and Black.
- "C" bias section of volume control—Blue and Yellow.
- "A" battery side of switch—Red.
- Jumper switch to volume control—Blue.
- Switch to "C" bias—White.

MODEL 120
Notes

GRIGSBY - GRUNOW CO.

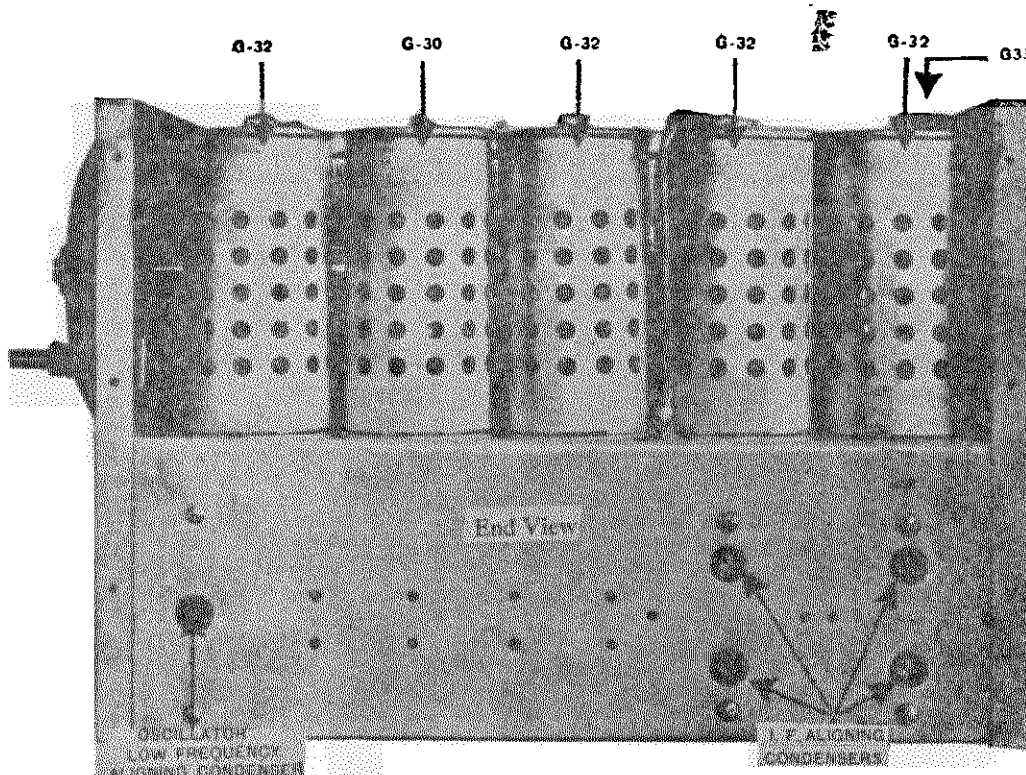

120 CHASSIS

I. F. Transformers Alignment

1. Connect oscillator for intermediate frequency alignment and set it in operation.
2. Align each aligning condenser on the intermediate frequency transformers to give maximum signal output.
3. After all four condensers have been aligned at 175 kilocycles, this stage should not be again adjusted.

R. F. and Oscillator Alignment

1. Tune in station in the vicinity of 1,500 kilocycles, or put output of local oscillator (if available) into receiver
2. Align R. F. stages and oscillator tuning condenser. The position of these condensers is shown on illustrated photograph in this manual.

Oscillator Tracking Condenser Alignment


1. Tune in local oscillator to 600 kilocycles.
2. Adjust both tuning control and tracking condenser simultaneously to give maximum signal as noted on output meter. This will be obtained by rocking tuning control across resonance point while adjusting tracking condenser to give maximum output at the point of resonance. This operation cannot be performed without local oscillator and output meter.

Check

Check the alignment previously made of R. F. and oscillator aligning condensers in the vicinity of 1,500 kilocycles.

MODEL 13
Chassis

GULBRANSEN CO.

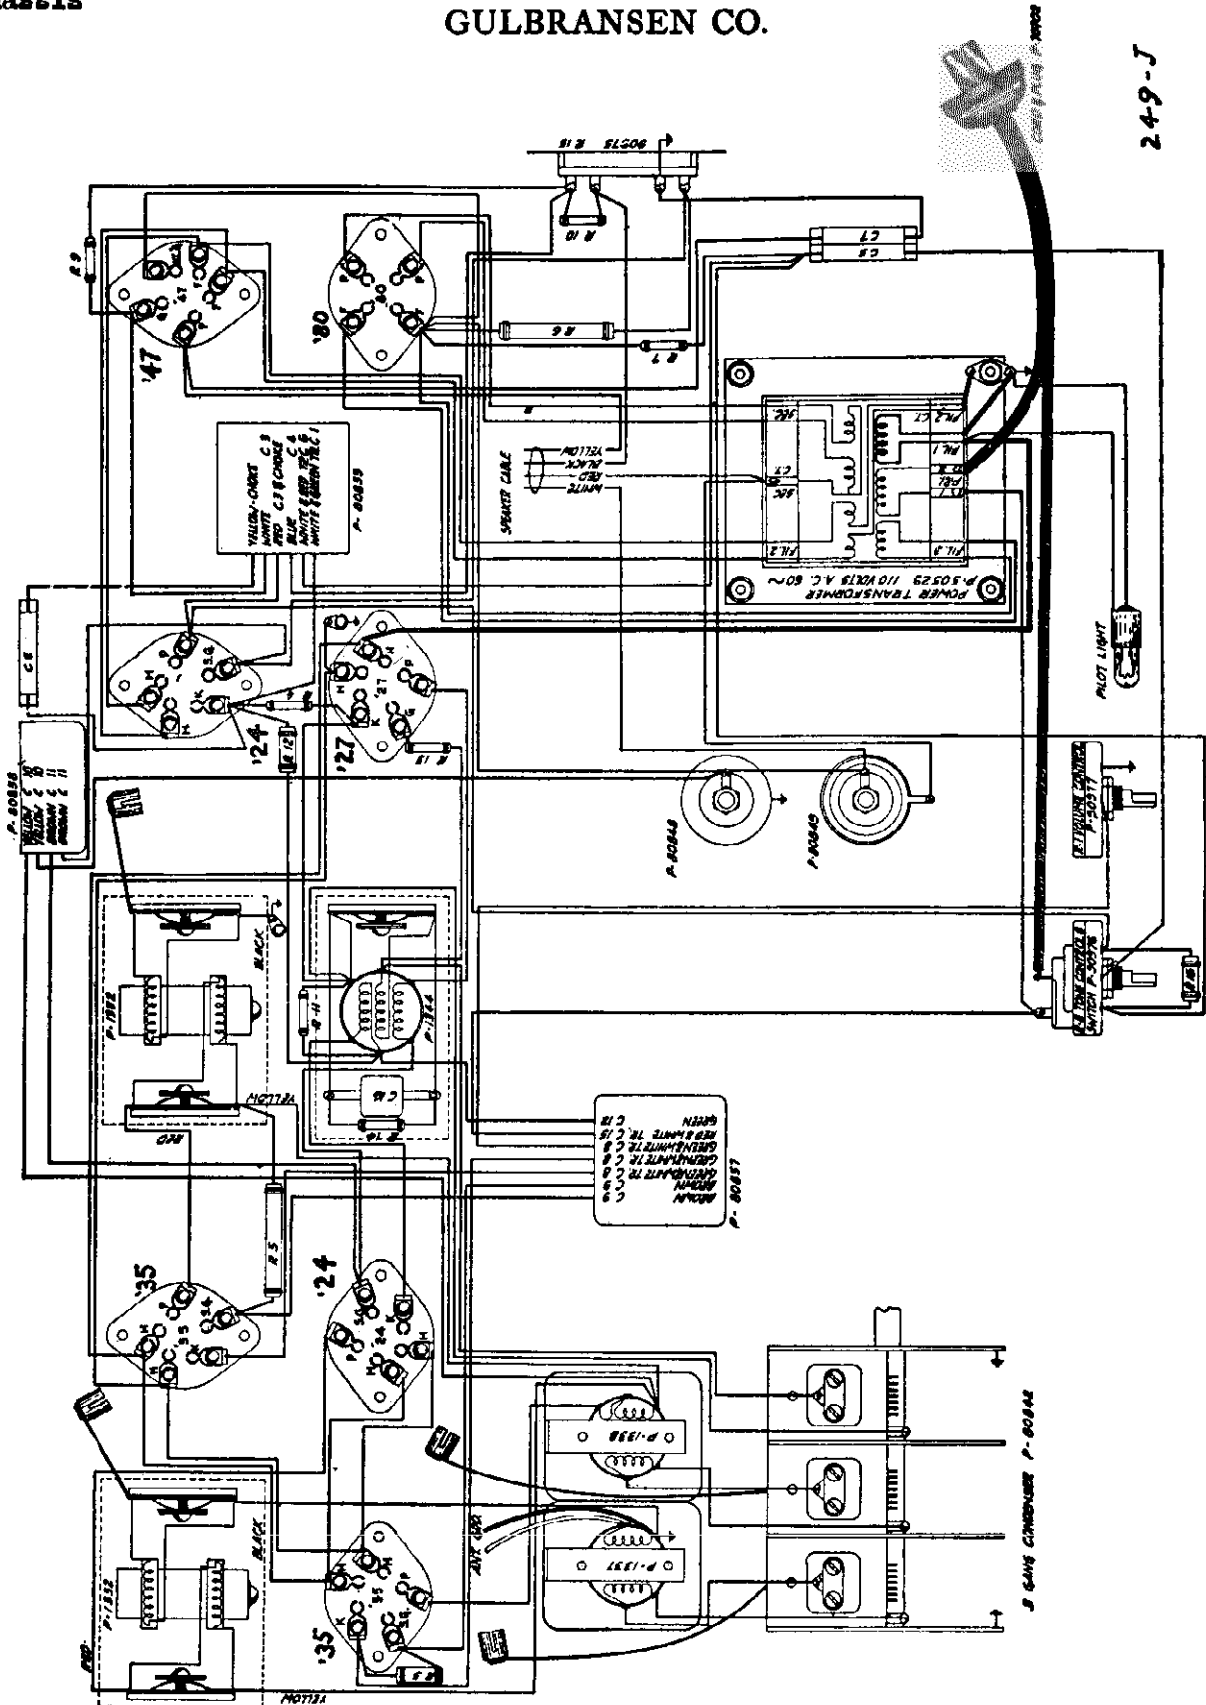

24-9-J

SERIES 13 SUPERHETERODYNE


MODEL 15
Voltage-Data

GULBRANSEN CO.

POWER TRANSFORMER

One side of the 110 volt line is connected to the terminal marked Pri. 2" and the other side to one switch terminal on the receiver. The switch completes the circuit to the "Pri. 1" terminal.

The 25 cycle transformer is especially designed for operation on 110 volt, 25 cycle current but may also be used on any 110 volt, A.C. supply having a higher frequency.

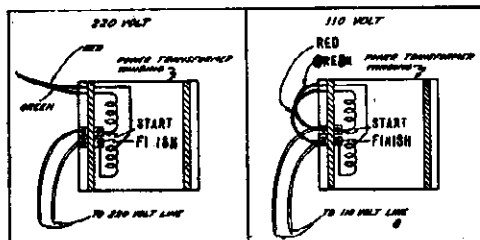

Receivers having a 220 volt, 40 to 60 cycle power transformer may also be operated on 110 volt, 40 to 60 cycle current when connections on the primary of the transformer have been changed.

The red and green wires shown in the sketch, (220 volt) must be disconnected and then connected as shown in the 110 volt sketch. No other changes are necessary.

CONDENSERS AND RESISTORS


Three blocks contain the majority of condensers. The choke in the plate circuit of the second detector tube is also contained in one of these blocks. The common leads of condenser blocks No. 1 and No. 2 are grounded. C1, C4, and C6 in block No. 3 have a common lead which is grounded, and the choke and C3 in this block have a common lead connected to the plate of the 2nd detector.

ANALYZER CHART

All voltages taken with a 1,000 ohm per volt voltmeter on the scale indicated in the column headed "Meter Scale." Turn the volume all the way on and connect the antenna and ground leads together. The grid, plate, and screen grid voltages are measured to cathode of the '24 and '35 tubes and to filament of the '47 tube.

The grid voltage on the '27 oscillator cannot be taken except with a very sensitive, low scale voltmeter. The voltage is approximately .05 volts when the A.C. line voltage is 110 volts.

Tube	Circuit	Meter Scale	110 V.
R.F. (Ant) '35	Grid	0—10	1.9
	Screen Grid	0—100	63.
	Plate	0—250	225.
1st Det. '24	Grid	0—25	14.5
	Screen Grid	0—100	65.
	Plate	0—250	220.
Int. '35	Grid	0—10	1.9
	Screen Grid	0—100	63.
	Plate	0—250	225.
2nd Det. '24	Grid	0—25	14.5
	Screen Grid	0—100	65.
	Plate	0—250	135.
Osc. '27	Grid	0—100	80.
Aud. '47 (See Caution Above)	Grid	0—10	2.7
	Accelerating	0—250	225.
	Plate	0—250	205.
'80 Rect.	Filament to Ground	0—1000	233.

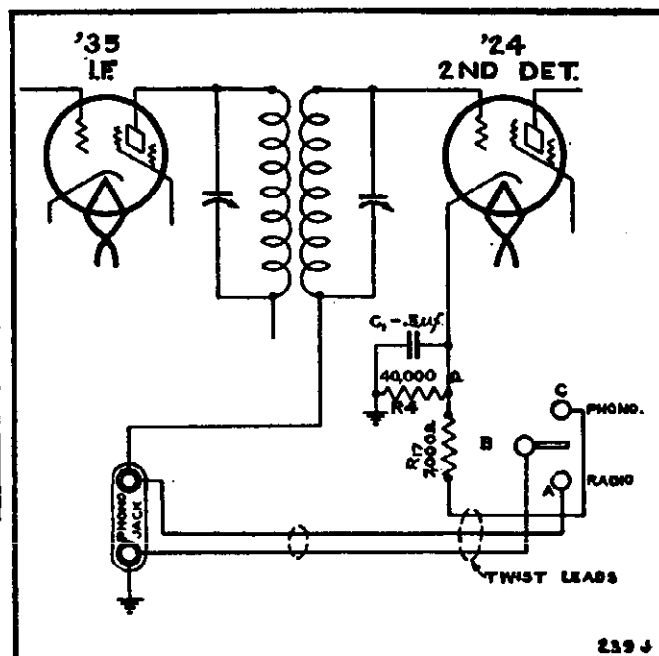

Phonograph Hook-up

**MODEL 13
Color Code
Data**

GULBRANSEN CO.

RESISTORS

Diagram Key	Part No.	Resistance in ohms	Type	IDENTIFICATION	
				Base	Dot
R1	P-90976	Vol. Cont.			
R1	P-90978	Vol. Cont.	With Phonograph Switch		
R3	P-90905-B	15,000	Carbon	Brown	Green
R4	P-90916-B	40,000	Carbon	Yellow	Black
R5	P-90927-A	25,000	Carbon	Red	Green
R6	P-90926-A	30,000	Carbon	Orange	Black
R7	P-90956	30,000	Carbon	Orange	Black
R8	P-90977	1 Meg.	Tone Cont.		
R9	P-90938-A	500,000	Carbon	Green	Black
R10	P-90941-A	50,000	Carbon	Green	Black
R11	P-90959-A	20,000	Carbon	Red	Black
R12	P-90930-C	10,000	Carbon	Brown	Black
R13	P-90906-B	2,000	Carbon	Orange	Black
R14	P-90958-A	30,000	Carbon	Red	Black
R15	P-90975-A	270	Candohm	Orange	Black
R16	P-90963-A	150,000	Carbon	Brown	Green
R17	P-90979	7,000	Carbon	Lavender	Black

For phonograph installation

CONDENSERS

Key No.	Part No.	Capacity	Type	Voltage Rating	Indentification Mark
C12	P-80857-A	1 mfd.	Block	200 V.	White, Green Tr.
C8	Block	3 mfd.	Block	200 V	Brown
C9	No. 1	3 mfd.	Block	200 V	White, Red Tr
C15		02	Block	750 V	Green
C10	P-80858	3 mfd.	Block	500 V	Brown
C11	Block No. 2	3 mfd.	Block	500 V.	Yellow
C1	P-80859-C	5 mfd.	Block	200 V	White and Red
C3	Block	01 mfd.	Block	600 V	White, Red Tr
C6	No. 3	1 mfd.	Block	500 V	Blue
C4	Choke	1 mfd.	Block	200 V	Yellow and Red
C2	P-80855	0005 mfd.	Moulded		Red
C5	P-80860	.004 mfd.	Moulded		Tan
C7	P-80860	004 mfd.	Moulded		Tan
C13	P-80848-Hi.	8.0 mfd.	Electrolytic		Red
C14	P-80849-Lo.	8.0 mfd.	Electrolytic		Green
C16	P-80856	00075 mfd.	Moulded		Violet
	P-80842-D	Complete Gang Assembly with Shield (No Dial Assembly)			

SERIES 13 SUPERHETERODYNE

PHONO RADIO INSTALLATION

When phonograph equipment is to be connected to a receiver, the installation should be of a permanent nature. The circuit shown in Fig. 2 is the best possible method of permanently connecting phonograph equipment to this chassis. The circuit consists of a pickup with self-contained volume control, connected in the grid circuit of the second detector tube.

PICKUP AND PHONO TRANSFORMER

To obtain good tone and volume, a pickup with medium or low impedance and a transformer are recommended for use with this receiver. A pickup with high impedance should be used when a transformer is not available.

INSTALLATION

The following parts must be supplied from the factory to make the installation:

- 1 Volume control, Stock No. P-90978
- 1 7,000 ohm Resistor, Stock No. P-90979
- 1 Tip Jack Assembly, Stock No. P-1193

The volume control must be mounted in the same position as the original. The switch is operated by turning the volume control knob to the left as far as possible. The connections on the volume control are the same as on the original.

Removal of the license plate on the rear of the chassis will disclose a slot with small holes at each end. The tip jack assembly should be bolted to the chassis (inside), through the small holes. Bolt the license plate through the small holes, directly above its original position.

Locate the black wire under the chassis, leading from the secondary of the second intermediate transformer. This transformer is directly behind the gang condenser. Disconnect this wire where it is grounded on the chassis and solder the end to the tip jack nearest the center of the back of the chassis. If it does not reach to the tip jack, splice an extra length of wire to it but make the lead as short as possible. Solder and tape the splice so it is firm and well insulated.

Ground the OPPOSITE tip jack on the chassis by soldering one end of a short length of wire on the jack and the opposite end on a lug placed under the nut on the bolt holding the nearest end of the tip jack assembly.

Solder one end of the 7,000 ohm resistor (R17, Fig. 2) to the cathode connection on the second detector tube socket.

Three wires, twisted together and long enough to reach from the switch on the volume control (around the closed ends of the R.F. transformer shields), to the tip jacks are connected as shown in Fig. 2.

Wire No. 1 connects the grounded tip jack and the switch terminal farthest from the center of the volume control.

Wire No. 2 connects the jack on which the black lead from the I.F. transformer is connected, and the raised switch terminal near the center.

Wire No. 3 connects one end of the 7,000 ohm resistor and the remaining open lug on the switch.

When the receiver volume control is turned to the left as far as possible, the S.P.D.T. switch is thrown and opens the circuit from "A" (Fig. 2) to "B" and closes the circuit from "B" to "C."

This action places the pickup in the circuit and connects the 7,000 ohm resistor so that a proper grid bias is obtained for phonograph reproduction.



If a transformer is used, a ratio of 4 to 1 will prove satisfactory. The secondary is connected to the tip jacks and the primary to the pickup cords.

Reversing the pickup leads will determine the correct position in which they should be left. Some pickups have one side grounded and that side should be connected to the grounded pickup jack in the receiver.

If the pickup is disconnected, a wire "jumper" MUST be placed across the tip jacks before broadcast signals may be received. The receiver must never be turned on for even a moment without the jumper in place. A jumper will close the circuit between "A" and "B." This grounds the circuit, thereby placing the proper grid bias on the detector tube, even though the volume control may be thrown to the phonograph position. This jumper may be a piece of solid wire, the ends of which are bent at right angles and plugged into the tip jacks.

GULBRANSEN CO.

MODEL 20 Series
Schematic
Early-Late

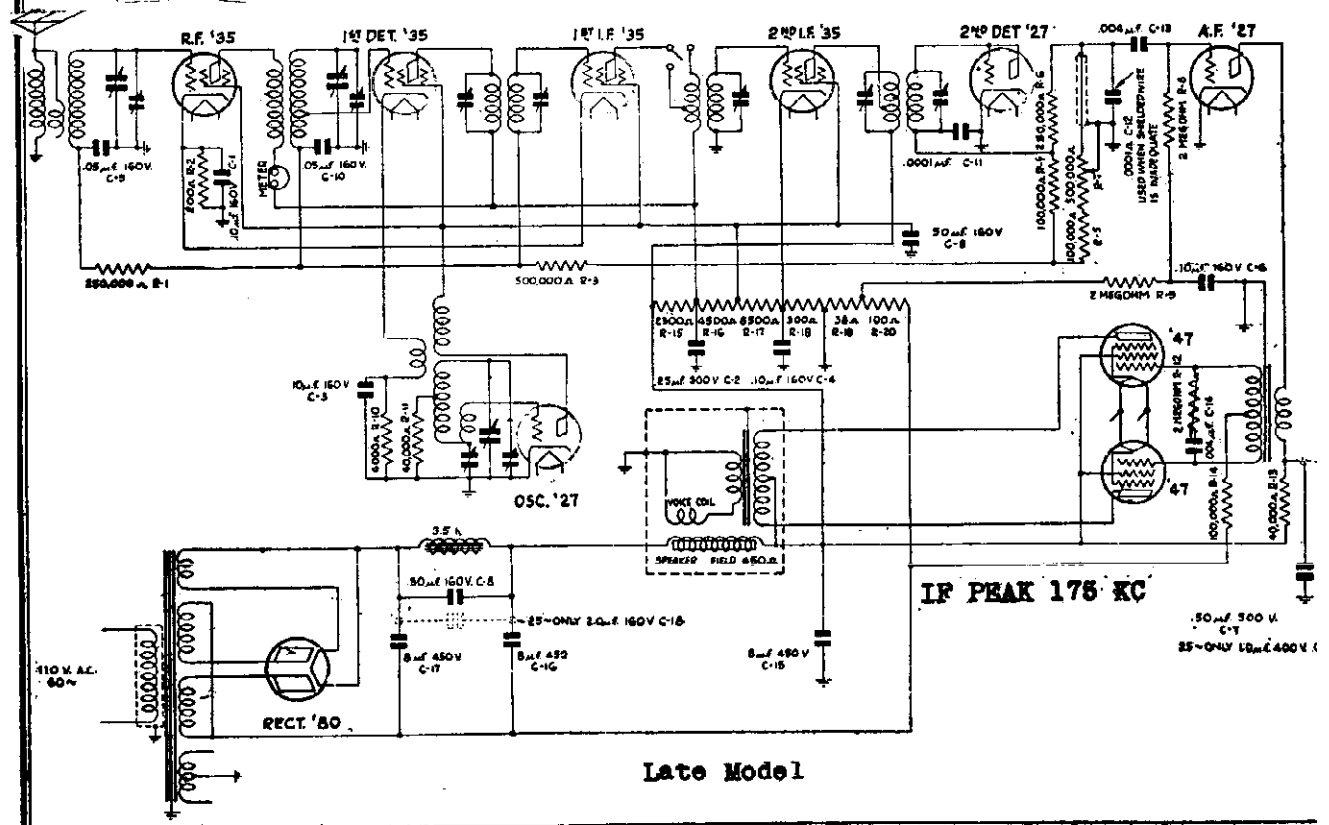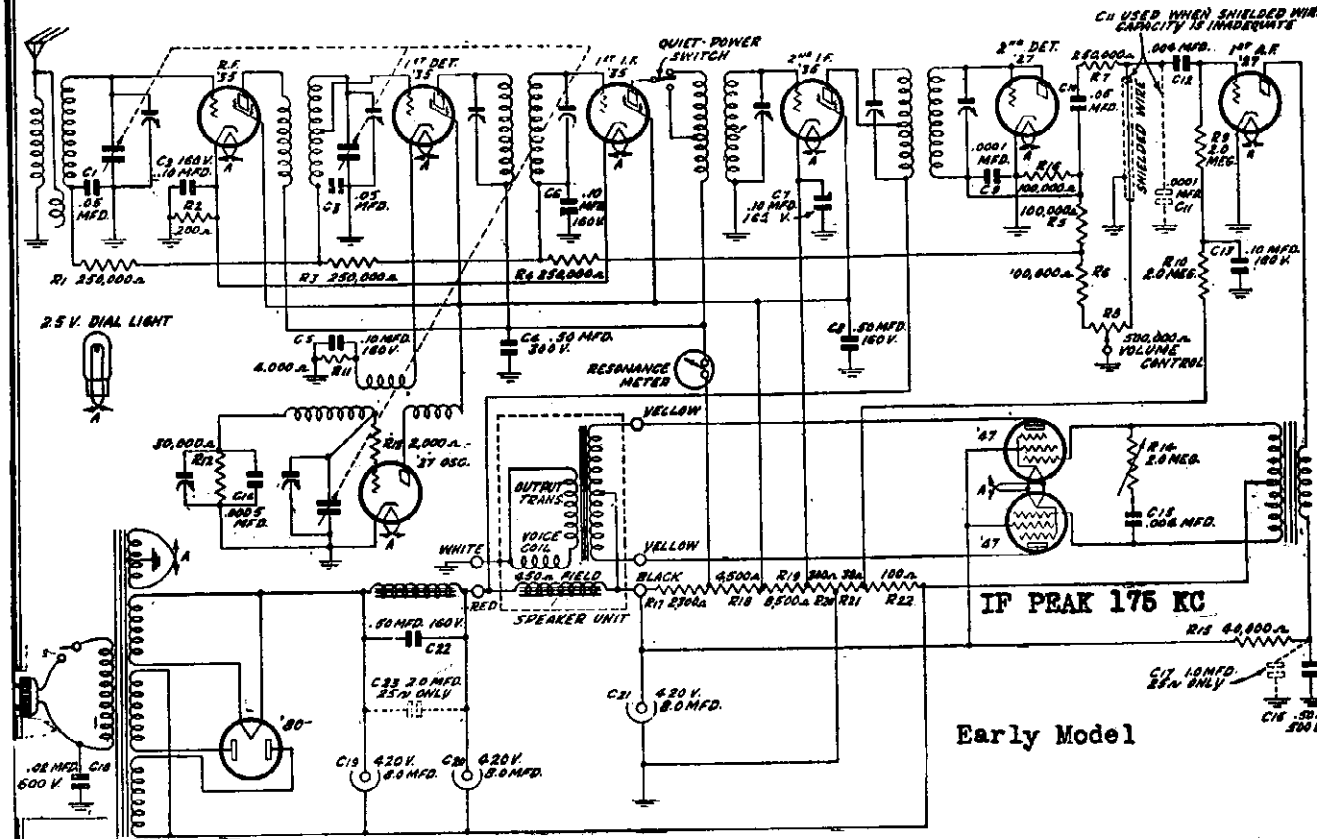

MODEL 20 Series
Voltage
Alignment

GULBRANSEN CO.

ALIGNMENT

A thorough check of the receiver should be made before any attempt is made to re-align any circuits. Examine the antenna and ground connections. Test all the tubes and check all voltages to determine if the failure of the receiver to operate properly is not due to some fault other than mis-alignment. A superheterodyne receiver must be accurately aligned to be selective and sensitive. This receiver has been accurately aligned at the factory and, due to the mechanical design of the gang and adjustable condensers, will not lose its alignment unless damaged by abuse or accident.

A modulated test oscillator and an output meter **MUST** be used when aligning this receiver to insure accurate alignment. It is important that the oscillator deliver a signal at exactly 175 K.C. in addition to frequencies in the broadcast band.

The adjustable condensers which tune the secondaries of the I. F. transformers are located under the hole in top of the shield where the grid lead to the tube is brought out. The condensers which tune the primaries of the first and third I. F. transformers are located under the small hole opposite. The capacity of each condenser is varied by rotating the small adjustment screw under the hole.

A trimmer condenser is mounted over each condenser in the gang and is adjusted by turning the screw located under the hole in top of the gang shield. The shield should not be removed.

The oscillator 600 K. C. tracking condenser is located under the hole in the oscillator unit shield.

Make each adjustment in the order given below or the receiver may be thrown further out of alignment and it will then be a difficult task to align it properly.

The receiver and test oscillator must be well grounded and the output kept within the range of the output meter at all times. All shields must be in place when making the adjustments.

Tube	Circuit	Meter Scale	90 V.	100 V.	110 V.	120 V.
R.F. '35	Screen Grid Plate	0—100	67.	75.	82.	90.
		0—250	136.	151.	166.	181.
1st Det '35	Screen Grid Plate	0—100	63	70.	77.	84.
		0—250	132.	147.	163.	179.
Oscillator '27	Plate	0—100	70	77	85.	92.
1st I.F. '35	Screen Grid Plate	0—100	67	75	82.	90.
		0—250	136.	151.	166.	181.
2nd I.F. '35	Screen Grid Plate	0—100	65.	72.	79.	86.
		0—1000	227.	252.	277.	303.
1st A.F. '27	Plate	0-100	87.	95.	104.	115.
2nd A.F. '47	Grid Accelerating Grid Plate	0-25	12.7	14.	15.4	17.
		0-1000	192	208.	235.	252.
		0-1000	180	200.	220.	240.
80 Rect	Current (Both Plates)	0-100	89. M.A.	98. M.A.	108. M.A.	118. M.A.
(See below)	Plate to Plate voltage	0-1000	547	568.	690.	712.

GULBRANSEN CO.

MODEL 20 Series
Parts List
Socket-Data


RESISTORS

Part No.	Name	List Price	Part No.	Key No.	Resistance	Type	List Price
P-20408	Tube Shield Base	.10	P-90954-B	R1	250,000	Carbon	.25
P-1193	Laminated Phono Jack	.15	P-90935-A	R2	200	Carbon	.25
P-1336	Control Knob	.25	P-90938	R3	500,000	Carbon	.25
P-1092	Grid Clip Assembly	.10	P-90912-A	R4	100,000	Carbon	.25
P-20365	Wire Clamp	.10	P-90912-A	R5	100,000	Carbon	.25
P-1273	Dial Light Bulb, 2.5 volts	.25	P-90954-B	R6	250,000	Carbon	.25
P-1011	S. P. D. T. Switch (Quiet-Power or Phono)	.70	P-90980	R7	0-500,000	Volume Control	1.35
P-1384	Resonance Meter	2.75	P-90923-A	R8	2 meg.	Carbon	.25
P-50534	Power Supply Choke	1.40	P-90923-A	R9	2 meg.	Carbon	.25
P-10180	Rubber Chassis Support (Large)	.10	P-90947	R10	4,000	Carbon	.25
P-10181	Rubber Chassis Support (Small)	.10	P-90916	R11	40,000	Carbon	.25
P-1146	Terminal Strip (Large)	.10	P-90986-B	R12	0-2 meg.	Tone Control	.95
P-1173	Terminal Strip (Small)	.10	P-90945	R13	40,000	Carbon	.30
P-20422	Chassis Mounting Stud	.10	P-90912-A	R14	100,000	Carbon	.25
P-1388	Dial Escutcheon Plate (Give Model number of set)	.60	P-91000	R15	2,300	Vitreous Enamel Resistor	1.8
P-20286	Resistor Spring Mtg. Bracket	.10		R16	4,500		
P-1054	On-Off Toggle Switch	.75		R17	8,500		
P-80889	3 Gang Condenser less drive for rubber pinion drive only	6.40		R18	300		
P-1383-B	Drive Bracket & Bearing Assembly	.30		R19	38		
P-30365	Bushing for rubber pinion	.10		R20	100		

CONDENSERS

Part No.	Key No.	Capacity	Type	Voltage Rating	List Price	
P-80862	C9	.05	Tubular	160 V.	\$0.3	
P-80862	C10	.05	Tubular	160 V.	.3	
P-80865	C11	.0001	Molded		.3	
P-80865	C12	.0001	Molded		.3	
P-80863	C13	.004	Tubular		.3	
P-80863	C14	.004	Tubular		.3	
P-80901	C15	8.0	Electrolytic	450 V.	1.5	
P-80900	C16	8.0	Electrolytic	450 V.	1.6	
P-80900	C17	8.0	Electrolytic	450 V.	1.6	
P-80861-F (Block)	C1	.1	Block	160 V.	White, Green Tr.	Common Black Lead
	C2	.25		300 V.	Blue	
	C3	.1		160 V.	White, Green Tr.	
	C4	.1		160 V.	White, Red Tr.	
	C5	.5		160 V.	Brown	
	C6	.1		160 V.	White	
	C7	.5		500 V.	Red	
	C8	.5		160 V.	Yellow (2 Leads)	
P-80879	C18	2.0	Block	160 V.	{ 25 cy. only }	2.2
	C19	1.0		400 V.	{ 25 cy. only }	

*Asterisk refers to parts used on drum dial models.

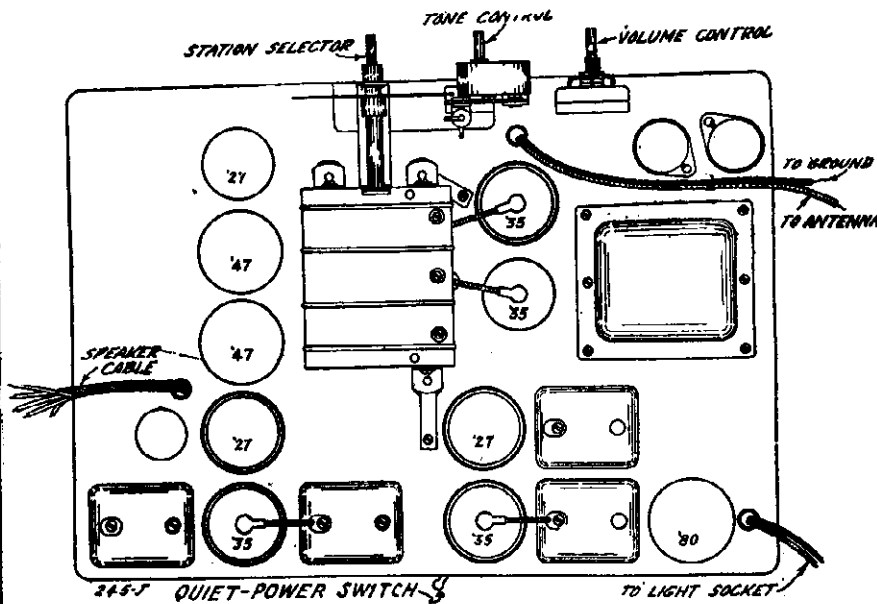


Key No.	Capacity	Lead Color	Lead Color
C22	.5 mfd.	Yellow	Yellow
C16	.5 mfd.	Red	Common Black
C4	.5 mfd.	Blue	Common Black
C8	.5 mfd.	Brown	Common Black
C5	.1 mfd.	White, Green Tr.	Common Black
C2	.1 mfd.	White, Green Tr.	Common Black
C7	.1 mfd.	White, Red Tr.	Common Black
C6	.1 mfd.	White, Red Tr.	Common Black
C13	.1 mfd.	Black, White Tr.	White

Referring to sections C6 and C13 in the above list, it will be noted that these have two leads each with the same color code. This was changed in a later model to one lead each, the other lead of each section being connected to the common black lead.

At a later date, two further changes in this condenser block were made. Section C6 which bypassed the grid return of the first I.F. tube to ground was discontinued and section C4 was changed to .25 mfd. These changes bring the block up to date.

The key numbers (C5, etc.) in the above description of the condenser block refer to the key numbers as shown in the schematic circuit diagram of the early chassis. The key numbers of the condenser block as shown in the parts list in the foregoing service manual conform with the key numbers as shown in the schematic of the present chassis, Fig. 1. As explained at the beginning of this supplement, the two sets of key numbers do not coincide.

GULBRANSEN CO.

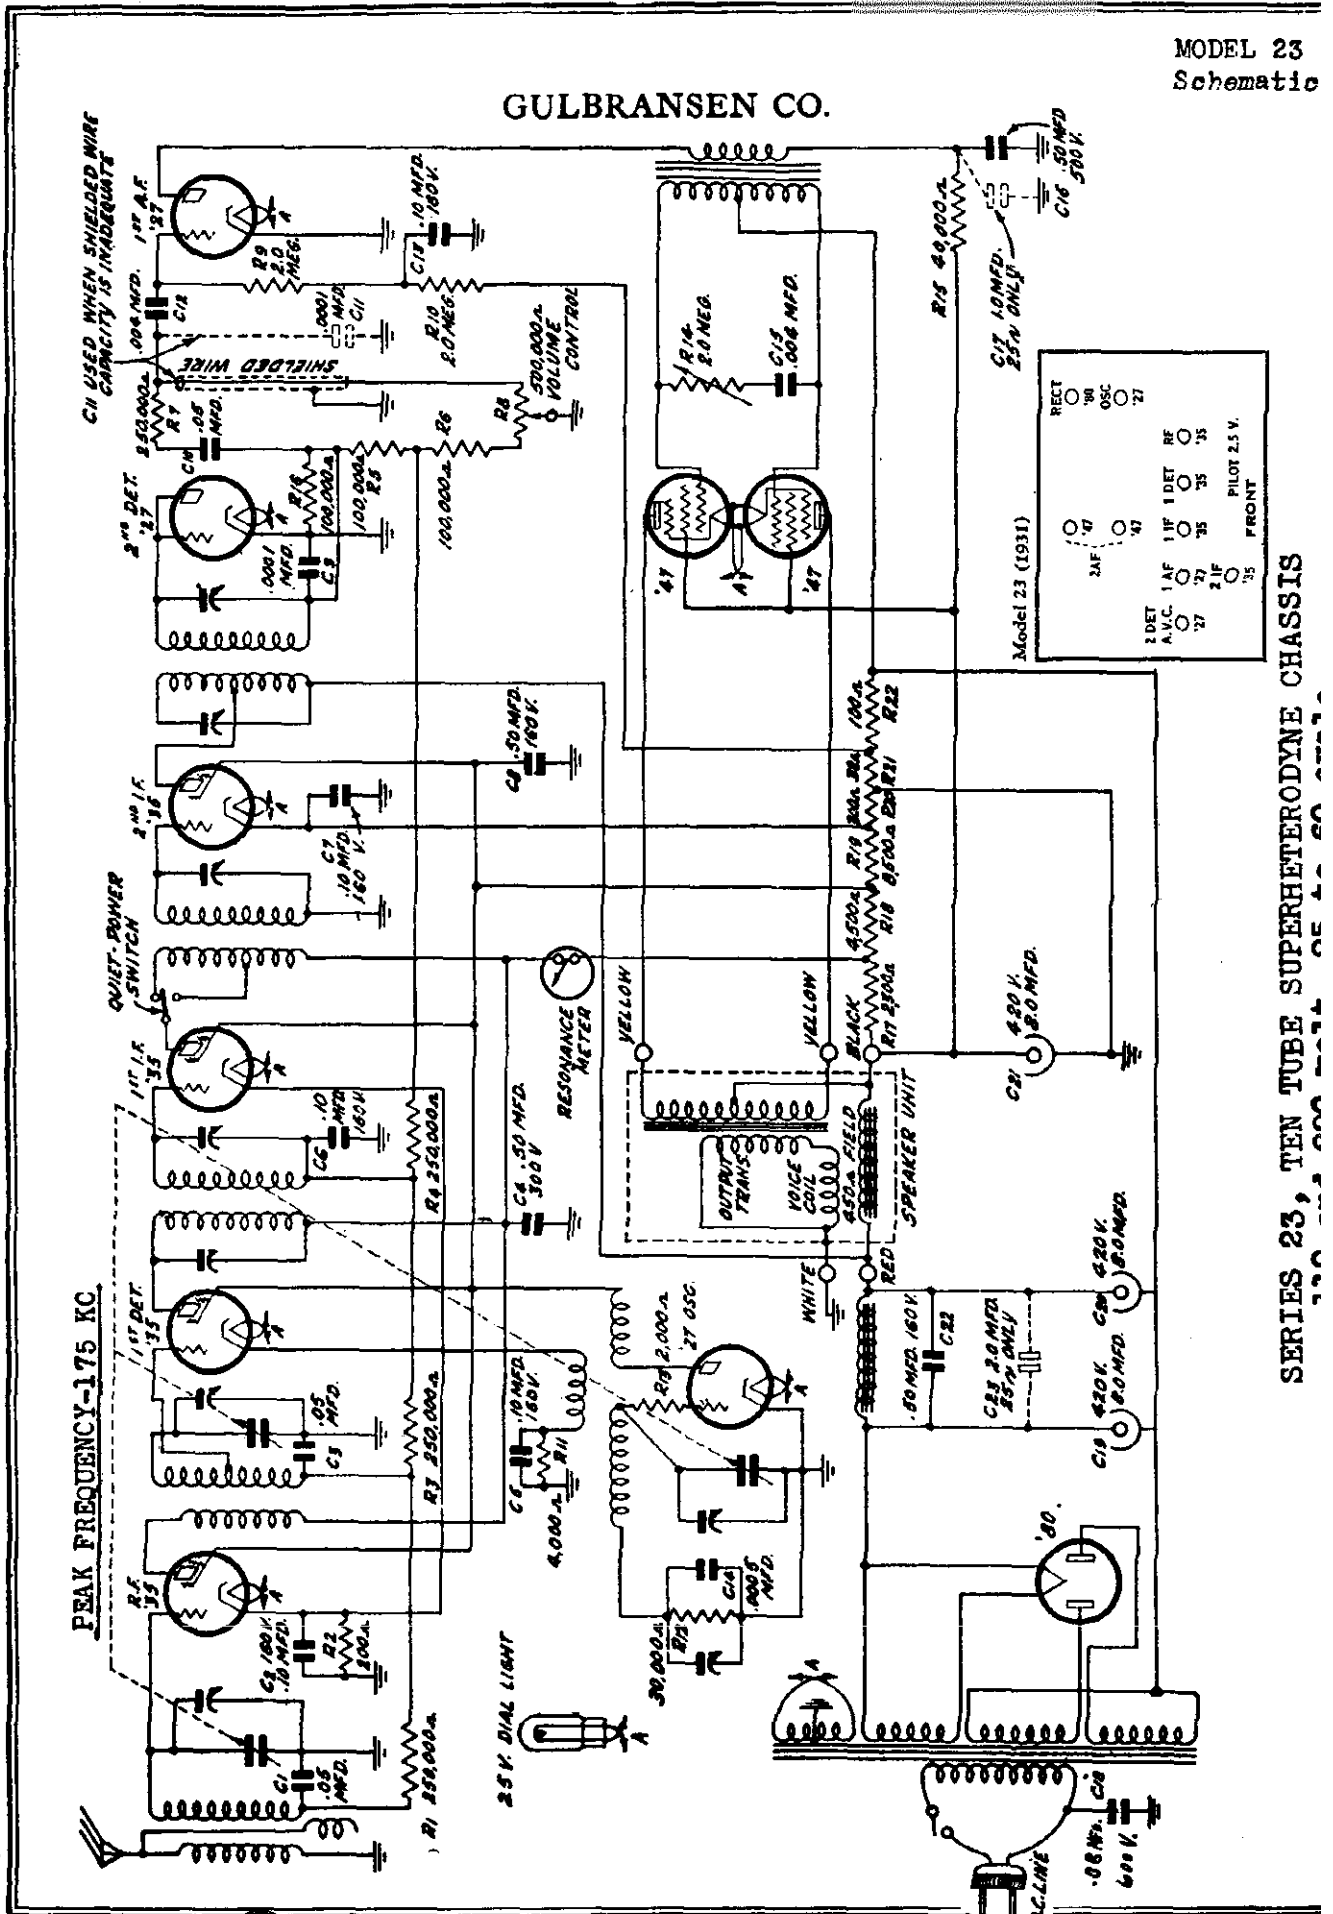

SERIES 23, TEN TUBE SUPERHETERODYNE CHASSIS

Model 23 (1931)

RECT	90	OSC	27
2 DET	1 AF	1 DET	15
A.V.C.	27	27	27
2 AF	27	27	27
2 AF	27	27	27
PILOT 2.5 V.			
FRONT			

CH USED WHEN SHIELDED WIRE CAPACITY IS INADEQUATE

PEAK FREQUENCY-175 KC

QUIET-POWER SWITCH

25V. DIAL LIGHT

RESONANCE METER

SPEAKER UNIT

AC-LINE

MODEL 23
Parts List
Phono Data

GULBRANSEN CO.

SERIES 23 SUPERHETERODYNE

PHONO PICKUP INSTALLATION

The following parts must be supplied from the factory to make the installation:

- 1 S. P. D. T. Switch, Stock No. P-1011
- 1 Tip Jack Assembly, Stock No. P-1193.

Removal of the license plate on the rear of the chassis will disclose a slot with small holes at each end. The tip jack assembly should be bolted, inside, through the small holes.

Drill a 31/64" hole one inch from the tip jack nearest the center of the rear of the chassis and place the barrel of the switch through the hole with the body of the switch in a horizontal position.

The terminal strip mounted in the left front corner of the base has the resistor, R7. (Red body, green end, yellow dot), connected to the first and second terminals on the end of the strip nearest the center of the chassis. One end of the .05 mfd. condenser, C10, is also connected to the second terminal. See Fig. 4.

Disconnect the resistor, R7, at the second terminal of the strip. Splice a piece of wire to the disconnected end of the resistor and connect the other end of the wire to two terminals, one on each end and on the same side of the switch.

Connect another wire to the terminal where the resistor was disconnected and connect the other end to one of the two open terminals on the switch.

The remaining open terminal on the switch is then connected to the tip jack nearest the corner of the chassis base.

Ground the opposite tip jack on the grounded terminal of the candohm resistor.

Make all wires and connections short, firm, and well insulated.

When the switch is thrown so that the circuit from "A" to "B," is open and the circuit from "B" to "C" is closed, the pickup is then properly connected for phonograph reproduction. The switch is thrown in the opposite direction for the reception of broadcast signals.

Reversing the pickup leads will determine the correct position in which they should be left. Some pickups have one side grounded and that side should be connected to the grounded pickup jack in the receiver.

C6 and C15 contained in the block have one side grounded and the balancer of the condensers in the block, with the exception of C22, have a common lead which is also grounded. C22 tunes the choke in the power supply. C17 and C23 are used in the 25 cycle chassis only, as shown in the schematic diagram.

RESISTORS

Part No.	Key No.	Resistance	Type	Base	End	Dot
P-90954-B	R1	250,000	Carbon	Red	Green	Yellow
P-90935-A	R2	200	Carbon	Red	Black	Brown
P-90954-B	R3	250,000	Carbon	Red	Green	Yellow
P-90954-B	R4	250,000	Carbon	Red	Green	Yellow
P-90912-A	R5	100,000	Carbon	Brown	Black	Yellow
P-90954-B	R6	250,000	Carbon	Brown	Black	Yellow
P-90980	R8	500,000	Volume Control	Red	Green	Yellow
P-90923-A	R9	2 meg.	Carbon	Red	Black	Green
P-90923-A	R10	2 meg.	Carbon	Red	Black	Green
P-90947	R11	4,000	Carbon	Yellow	Black	Red
P-90956-A	R12	30,000	Carbon	Orange	Black	Orange
P-90906-C	R13	2,000	Carbon	Red	Black	Red
P-90977-B	R14	2 meg.	Tone Control			
P-90945	R15	40,000	Carbon	Yellow	Black	Orange
P-90912-A	R16	100,000	Carbon	Brown	Black	Yellow
	R17	2,300				
	R18	4,500				
	R19	8,500				
	R20	300				
	R21	38				
	R22	100				
P-90974-C			Candohm			

CONDENSERS

Part No.	Key No.	Capacity	Type	Voltage Rating	Identification
P-80862	C1	.05	Tubular		Red - Orange
P-80862	C3	.05	Tubular		Red - Orange
P-80865	C9	.0001	Moulded		Red - Orange
P-80862	C10	.05	Tubular		Red - Orange
P-80865	C11	.0001	Moulded		Red - Orange
P-80863	C12	.004	Tubular		Tan - Orange
P-80867	C14	.0005	Moulded		Red - Orange - Blue
P-80863	C15	.004	Tubular		Tan - Orange
P-80869	C17	1.0			
P-80868	C18	.02	Tubular		Green - Orange
P-80848-A	C19	8.0	Electrolytic	420 V.	Orange
P-80848-A	C20	8.0	Electrolytic	420 V.	Orange
P-80848-A	C21	8.0	Electrolytic	420 V.	Orange
P-80870	C23	2.0			
P-80861-B	C2	1	Block	160 V.	White, Green Tr.
(Block)	C4	5	Block	300 V.	Blue
	C5	1	Block	160 V.	White, Green Tr.
	C6	1	Block	160 V.	Black, White Tr.
	C7	1	Block	600 V.	White, Red Tr.
	C8	5	Block	160 V.	Brown
	C13	1	Block	160 V.	White
	C16	5	Block	500 V.	Red
	C22	5	Block	160 V.	Yellow (2)
P-80866			Complete Gang Assembly with Shield (no dial assembly)		

GULBRANSEN CO.


MODEL 23
Voltage
Phono Data

SERIES 23 SUPERHETERODYNE

POWER TRANSFORMER

Fig. 4 shows the 110 volt power transformer connections. One side of the 110 volt A. C. line is connected to the terminal marked "Pri. 1" and the other side to the open terminal, on the opposite side of the winding, which is in turn connected to one terminal of the switch on the receiver. The switch completes the circuit to the "Pri. 2" terminal.


The 25 cycle transformer is especially designed to operate on 110 volt, 25 cycle current, but may also be operated on any 110 v. A. C. supply having a higher frequency, after the condensers C17 and C23 have been disconnected.

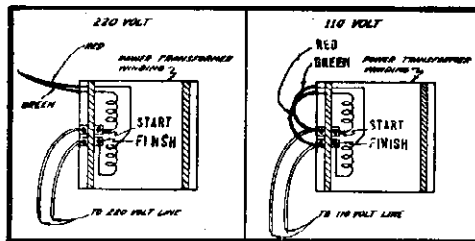

Receivers having a 220 volt, 40 to 60 cycle power transformer may also be operated on 110 volt, 40 to 60 cycle current when connections on the primary of the transformer have been changed.

The red and green wires shown in the 220 volt sketch, must be disconnected and then connected as shown in the 110 volt sketch. No other changes are necessary.

Tube	Circuit	Meter Scale	110 V.
'35 R.F.	Screen	0-100	82.
	Grid	0-250	166.
1st Det. '35	Screen	0-100	77.
	Grid	0-250	163.
Oscillator '27	Plate	0-100	85.
1st I.F. '35	Screen	0-100	82.
	Grid	0-250	166.
2nd I.F. '35	Screen	0-100	79.
	Grid	0-1000	277.
1st A.F. '27	Plate	0-100	104.
2nd A.F. '47	Grid	0-25	15.4
	Accelerating	0-1000	235.
	Grid	0-1000	220.
'80 Rect.	Current (Both Plates)	0-100	108. M.A.
(See below)	Plate to Plate voltage	0-1000	690.

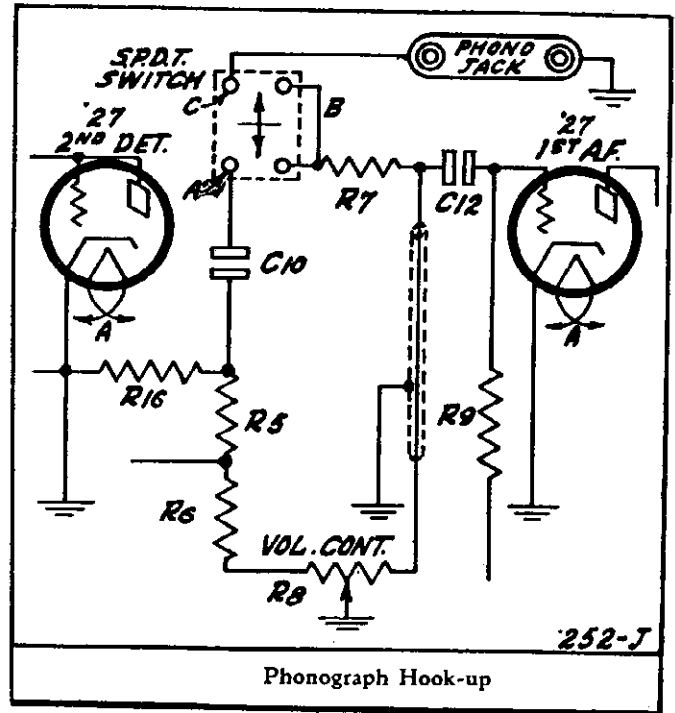

The '80 rectifier plate voltages shown are the totals of both plates, measured from each plate to center tap of high voltage secondary
All voltages taken with a 1,000 ohm per volt voltmeter on the scale in the column headed "Meter Scale." Turn the volume all the way on, connect the antenna and ground leads together and turn the gang condenser plates all the way out. CHECK THE LINE VOLTAGE.

The measurement of grid bias voltages (except on the 47 pentodes) is not recommended, as this causes an abnormal rise in plate current which is injurious to the tube. Further, the measurement of actual grid bias voltages is impossible due to the high resistance in the grid circuits. When the receiver does not function properly and the trouble is apparently due to improper grid bias on any tube or tubes, the cause of the trouble may be determined by applying the proper continuity tests.

CAUTION: IN ORDER THAT THE EFFICIENCY OF EACH TUBE MAY BE COMPARED WITH THAT OF OTHER TUBES OF THE SAME TYPE, THEY MUST NOT BE TESTED IN THE SOCKET IN WHICH THEY ARE USED. TEST ALL '35 TUBES IN THE SECOND I. F. SOCKET AND TEST THE '27 TUBES IN THE FIRST A. F. SOCKET. TAKE THE VOLTAGE READINGS AT THE SOCKET IN WHICH THE TUBE IS USED.

MODEL 23
Data

GULBRANSEN CO.

SERIES 23
SUPERHETERODYNE

REVISED MODEL

A green paint mark on the left rear corner of a chassis indicates the following changes:


(1) Combination tone control and "On-Off" switch replaced by two separate units. The tone control is mounted and connected as previously but "On-Off" switch is on side of cabinet.

(2) Intermediate transformers assembled together with their adjustable tuning condensers in a round shield. Condensers are adjusted by inserting screwdriver trough the holes provided underneath base, directly below transformer assembly. Early models are adjusted through hole in top of (rectangular) shield


(3) The oscillator coil, its shield, and the 600 K.C. tracking condenser are all mounted separately on the base. The tracking condenser adjustment screw will be found near the left rear corner of the oscillator coil shield. The .0005 mfd. condenser (C14) is not used and the 30,000 ohm resistor (R12) is replaced by a 40,000 ohm resistor mounted between a coil lug and the tracking condenser. The revised oscillator circuit is shown herewith:

The parts affected by the change, are listed below with corresponding parts numbers:

OLD NUMBER	NEW NUMBER
Tone Control & "On-Off" Switch-----	"On-Off" Switch-----P-1054
P-90977	Tone Control-----P-90986-A
1st L.F. Transformer Assembly-----	1st I.F. Assembly-----P-1424
P-1367	2nd I.F. Assembly-----P-1425
2nd I.F. Transformer Assembly-----	3rd I.F. Assembly-----P-1426
P-1364	Oscillator Coil-----P-1400
3rd I.F. Transformer Assembly-----	Coil Shield-----P-40412
P-1365	600 K.C. Tracking Conden.--P-1385-A
Oscillator Unit	40,000 Ohm Carbon Resistor-P-90945
P-1366	

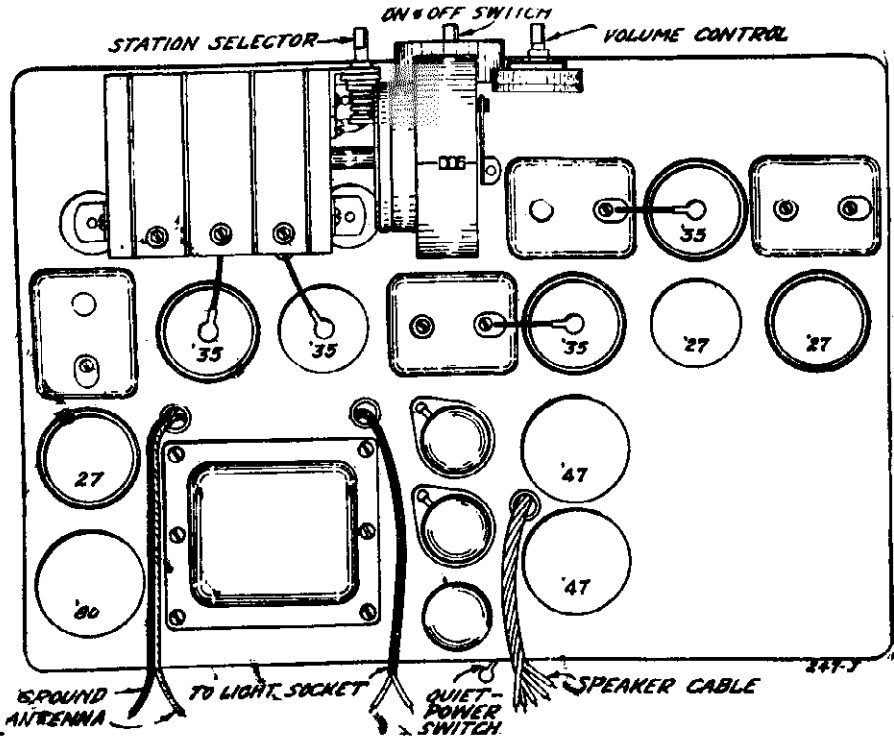

TOP VIEW OF EARLY MODEL RECEIVER

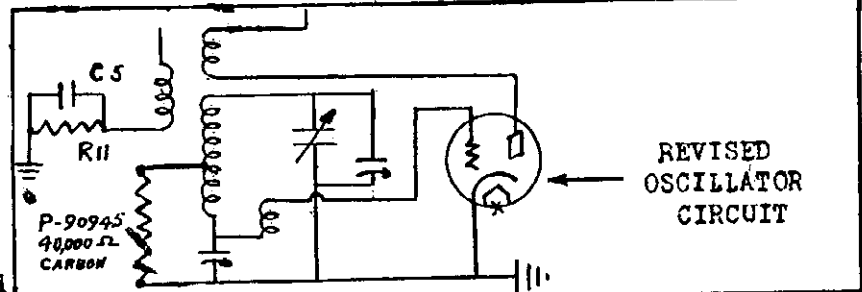

REVISED OSCILLATOR CIRCUIT

MODEL 13
 MODEL 23
 Alignment

GULBRANSEN CO. ALIGNMENT

A thorough check of the receiver should be made before any attempt is made to re-align any circuits. Examine the antenna and ground connections. Test all the tubes and check all voltages to determine if the failure of the receiver to operate properly is not due to some fault other than mis-alignment. A superheterodyne receiver must be accurately aligned to be selective and sensitive. This receiver has been accurately aligned at the factory and, due to the mechanical design of the gang and adjustable condensers, will not lose its alignment unless damaged by abuse or accident.

A modulated test oscillator and an output meter **MUST** be used when aligning this receiver to insure accurate alignment. It is important that the oscillator deliver a signal at exactly 175 K.C. in addition to frequencies in the broadcast band.

The adjustable condensers which tune the secondaries of the intermediate transformers are located under the hole in top of the shield where the grid lead to the tube is brought-out. The condensers which tune the primaries are located under the small hole opposite. The capacity of each condenser is varied by rotating the small adjustment screw under the hole.

Make each adjustment in the order given below or the receiver may be thrown further out of alignment and it will then be a difficult task to align it properly.

The receiver and test oscillator must be well grounded and the output kept within the range of the output meter at all times.

All shields must be in place when making the adjustments.

INTERMEDIATE CIRCUITS

Tune the test oscillator to exactly 175 K.C. and connect its output to the grid of the first detector tube after removing the clip on the lead from the gang condenser.

Adjust the primary and secondary of the first intermediate transformer for greatest volume.

Follow the same procedure on the second intermediate transformer and then turn the receiver off.

Disconnect one end of the speaker voice coil and connect the output meter across the secondary of the speaker coupling transformer. Short the oscillator tuning condenser (in the gang) by grounding the stator plates with a screw driver.

Turn the receiver on and adjust the output until the output meter shows a small or medium scale deflection.

Adjust the primary of the first intermediate transformer for the greatest deflection on the output meter.

Adjust the secondary in the same manner.

Follow the same procedure on the second intermediate transformer and then check the settings of all condensers to make certain the maximum output has been obtained.

When the above instructions have been followed, remove the test oscillator coupling and replace the grid lead on the first detector, and also remove the screw driver shorting the oscillator tuning condenser.

GANG CONDENSERS

Couple the test oscillator output to the antenna, (white wire), on the receiver.

Tune the oscillator to 1400 K.C. and carefully tune the receiver to the signal.

A trimmer condenser is mounted over each condenser in the gang and is adjusted by turning the screw located under the hole in top of the gang shield. The shield should not be removed. Adjust each trimmer condenser for maximum deflection on the output meter.

OSCILLATOR



Tune the test oscillator to 600 K.C. and tune the receiver to the signal. Then after turning the receiver off, disconnect the output meter and replace the voice coil lead which was disconnected.

Turn the receiver on and rotate the adjusting screw on the 600 K.C. tracking condenser under the hole in top of the oscillator transformer shield. Rock the gang condenser back and forth across the signal at the same time and listen closely until the maximum volume is obtained. The tracking condenser is then properly adjusted and remains fixed thereafter.

The receiver should be accurately aligned if the above instructions have been followed and no further adjustments need be made.

GULBRANSEN CO.

MODEL 362

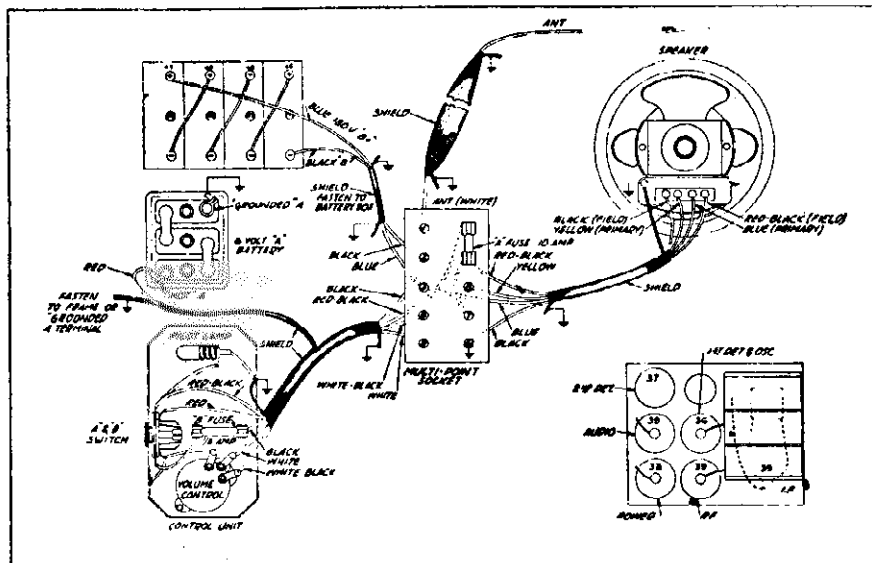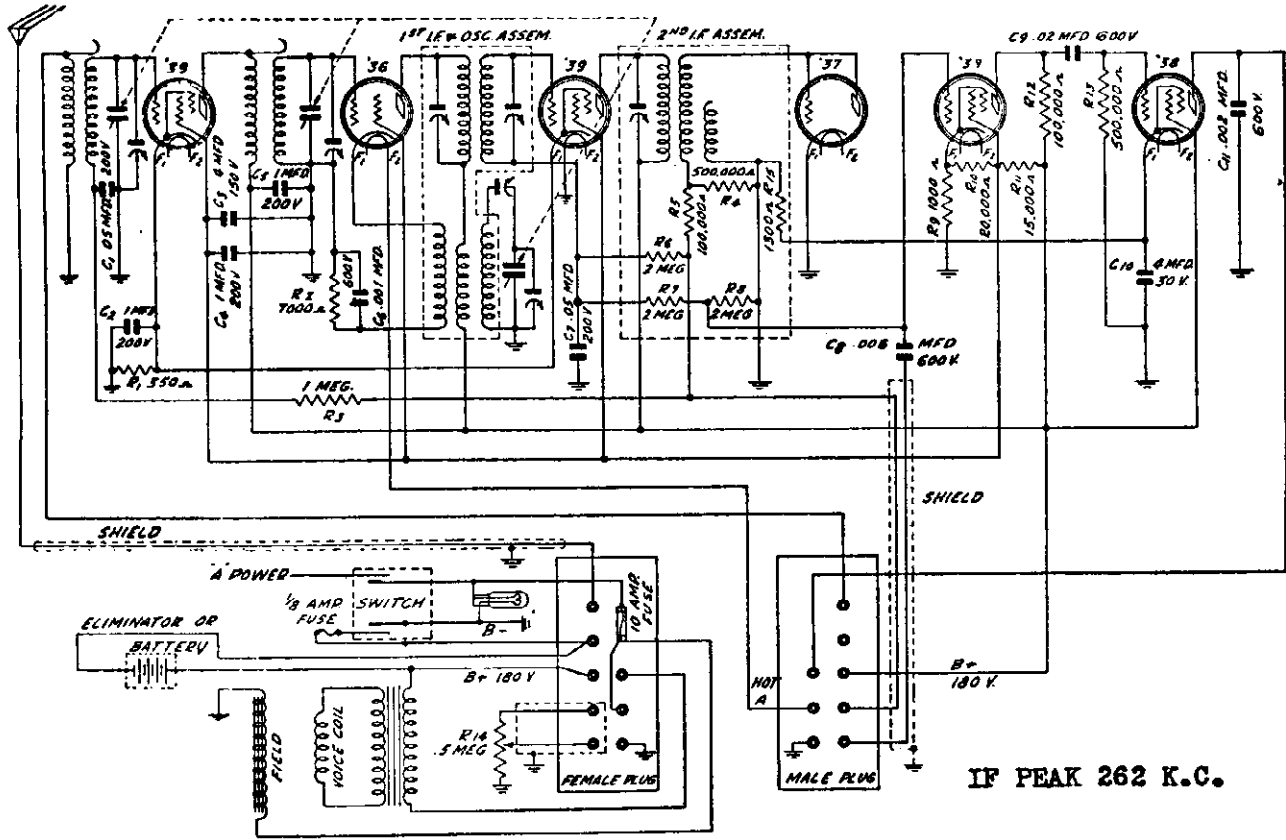


VOLTAGE DATA

Tube	Plate	Screen	Grid	Plate MA.
R-F.	177	80	3	3.6
1st Det.	173	76	7*	.9*
I-F.	177	80	3	3.6
2nd Det.	0	0	0	0
1st A-F.	54	77	6	1.2
Output	159	165	15.5	10.0

* Will vary with dial setting.

Phone 631 OAKHURST, IOWA
HAMMARLUND MFG. CO.

MODEL Comet Pro
February 1933

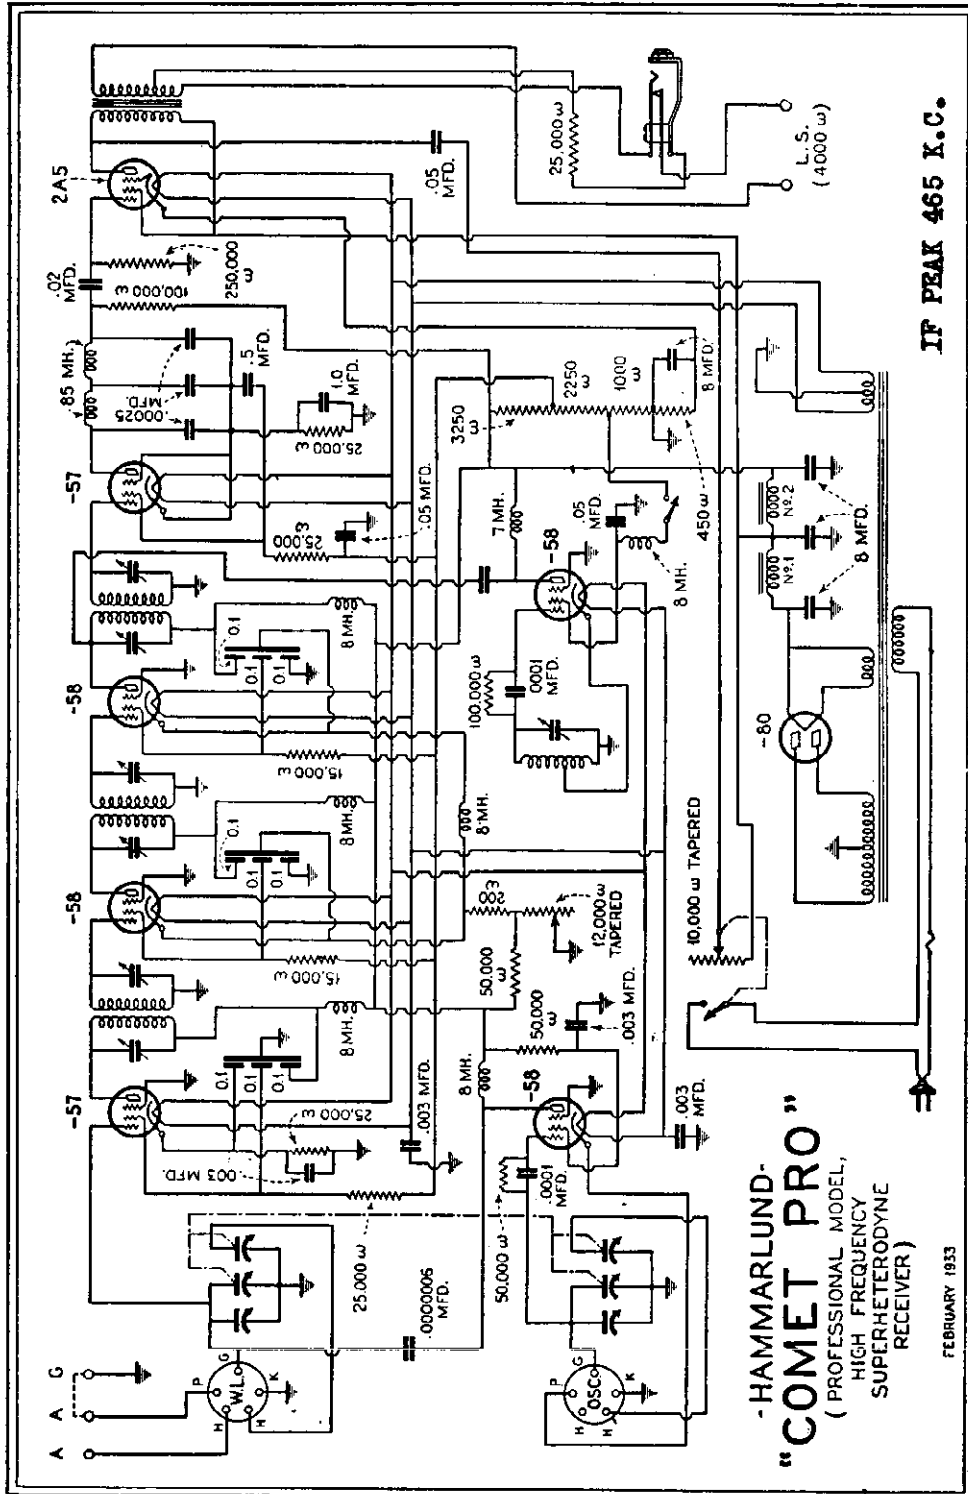


"COMET PRO"
(PROFESSIONAL MODEL,
HIGH FREQUENCY
SUPERHETERODYNE
RECEIVER)

IF PEAK 465 K.C.

FEBRUARY 1933


CHARLES HOODWIN CO. MODEL Aero Auto Radio
 MODEL Aero 1932 Converter

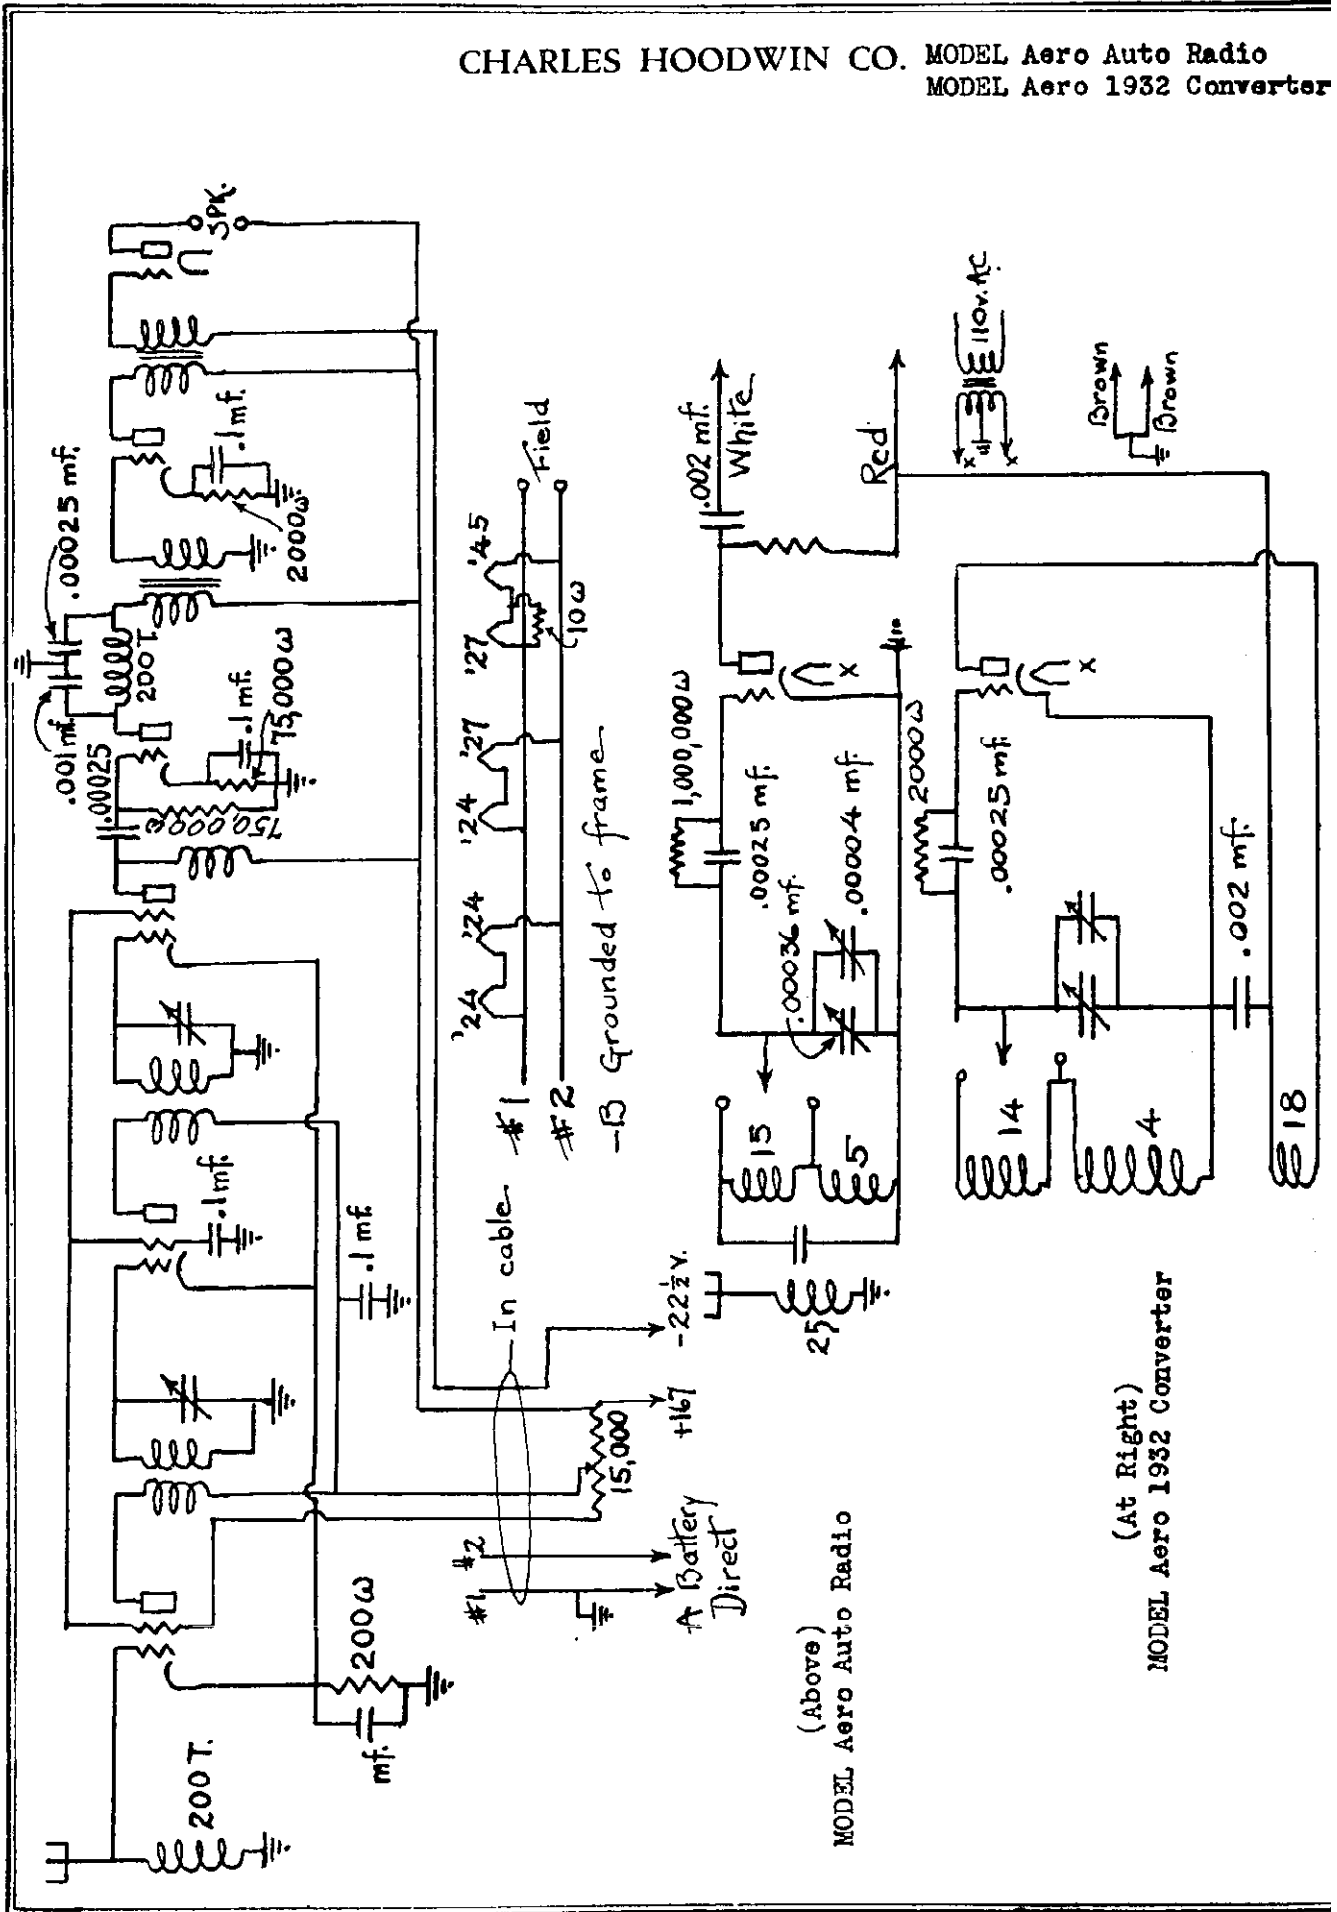

(Above)
 MODEL Aero Auto Radio

(At Right)
 MODEL Aero 1932 Converter

HERBERT H. HORN MODEL Tiffany Tone 101, 110

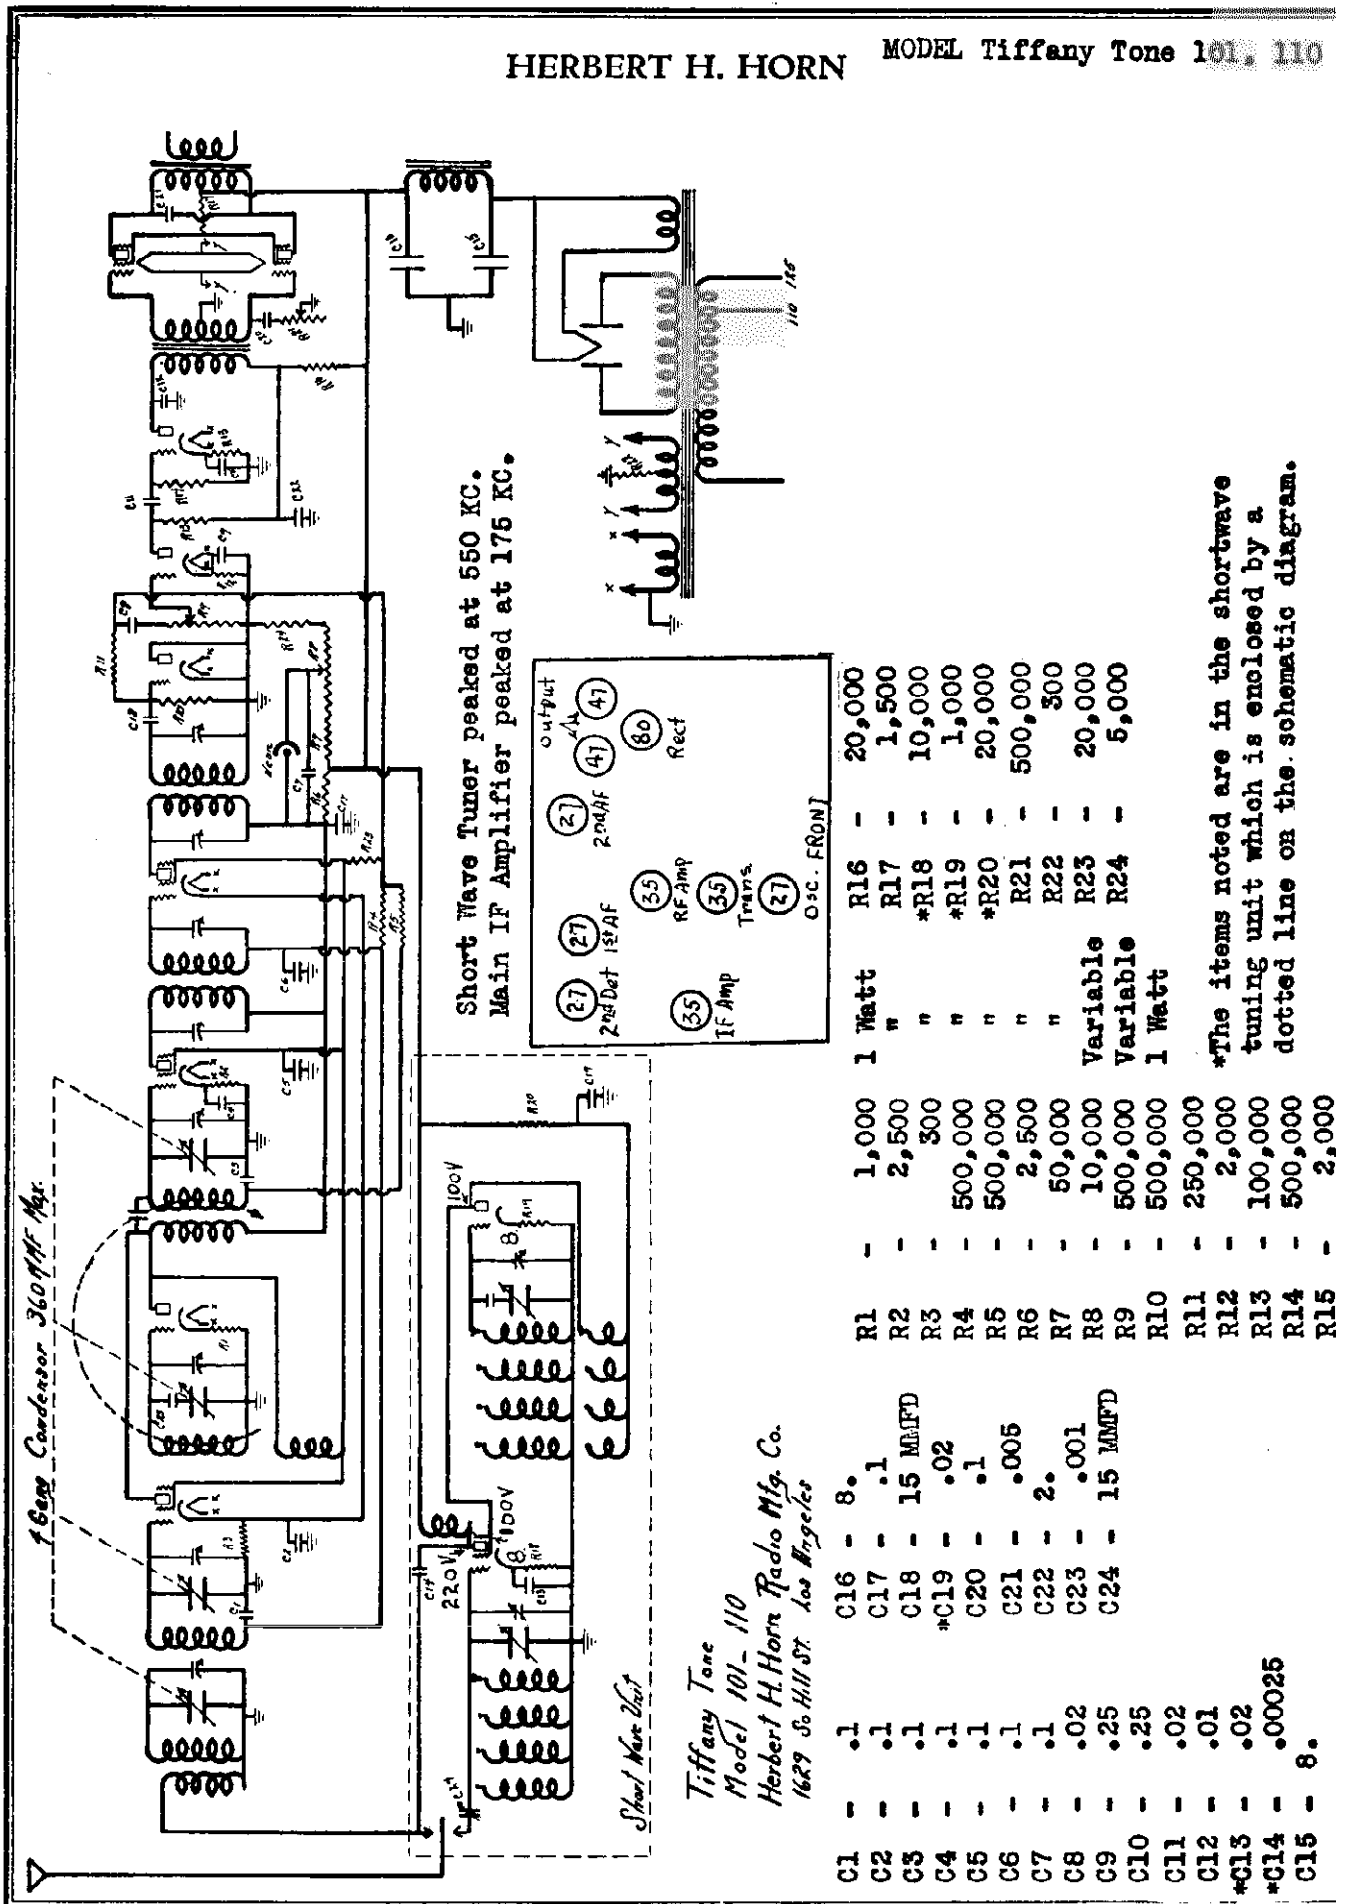

MODEL Tiffany Tone 101, 110
Alignment Data

HERBERT H. HORN

VOLTAGE TABLE
No Signal Input To Receiver

No.	Type	Function	Plate	Screen	Cathode	Heater
1	335	RF Amp	187	80	2.8*	2.1
2	335	Trans	187	80	2.8*	2.1
3	327	Osc.	80	-	4.2*	2.1
4	335	IF Amp	187	80	2.8*	2.1
5	327	Det.	-	-	-	2.1
6	327	1st AF	30*	-	4.9*	2.1
7	227	2nd AF	115	-	7.2*	2.1
8	347	Output	210	205	13.1*	2.3
9	347	Output	210	205	13.1*	2.3
10	280	Rect.				4.8

* Voltmeter resistance 50,000 ohms. All other voltages measured with 250,000 ohm voltmeter. Chassis is negative for all readings.

IF TRANSFORMER ADJUSTMENT

There are four i-f transformers. Both the grid and plate circuits of each must be tuned sharply to 175 kc. The condenser adjusting screws are accessible from the underside of the chassis; there being two slotted screws protruding through the insulated base of each transformer.

LINE UP OF GANG CONDENSERS

The four sections of the gang condenser function as follows: The first section, looking at the rear of the chassis tunes the selector stage. The second section tunes the grid circuit of the r-f amplifier. The third section tunes the grid circuit of the translator tube and the fourth section tunes the oscillator. The fourth section is that nearest the front of the chassis. The first three must track together at signal frequency, which is the desired signal frequency. The oscillator section on the other hand must track 175 kc higher than the signal frequency.

THE SHORT WAVE TUNER


The short wave tuner consists fundamentally of two tuned circuits and two tubes, one of which is a 224 operating at short wave signal frequency as a first detector and the other tube is a 227 oscillator tuned to 550 kc higher than the desired short wave signal frequency. The resultant beat of 550 kc is fed into the antenna post of the broadcast part of the complete receiver chassis, which operates as an 550 kc intermediate frequency amplifier during short wave reception. The dial of the broadcast receiver must be set to 550 kc during short wave reception.

To balance: Set band selector switch on position C - set dials on about 10. The front section of the two gang condenser tunes the detector stage to signal frequency; the back section tunes the oscillator coils to a frequency 550 kc greater than signal frequency. If the small variable condenser, which is paralleled with the detector condenser, will not resonate its circuit within its capacity range, it will be necessary to change the trimmer located on the oscillator section of the main tuning condenser. This may be done by tuning in a signal and rotating the variable trimmer to maximum resonance; if this point is reached with the balancing condenser plates at maximum capacity, it will be necessary to reduce the oscillator trimmer capacity, and if the resonance point is approached with the balancing condenser at minimum capacity, it will be necessary to add capacity to the oscillator trimmer. This should be regulated so the balancing condenser peaks with the plates about half way out, with the short wave tuning dial set at 50.

The approximate setting of the oscillator trimmer may be obtained by turning the adjusting screw down tight and then releasing it two full turns.

HOWARD RADIO CO.


MODEL F
Pertode
Schematic

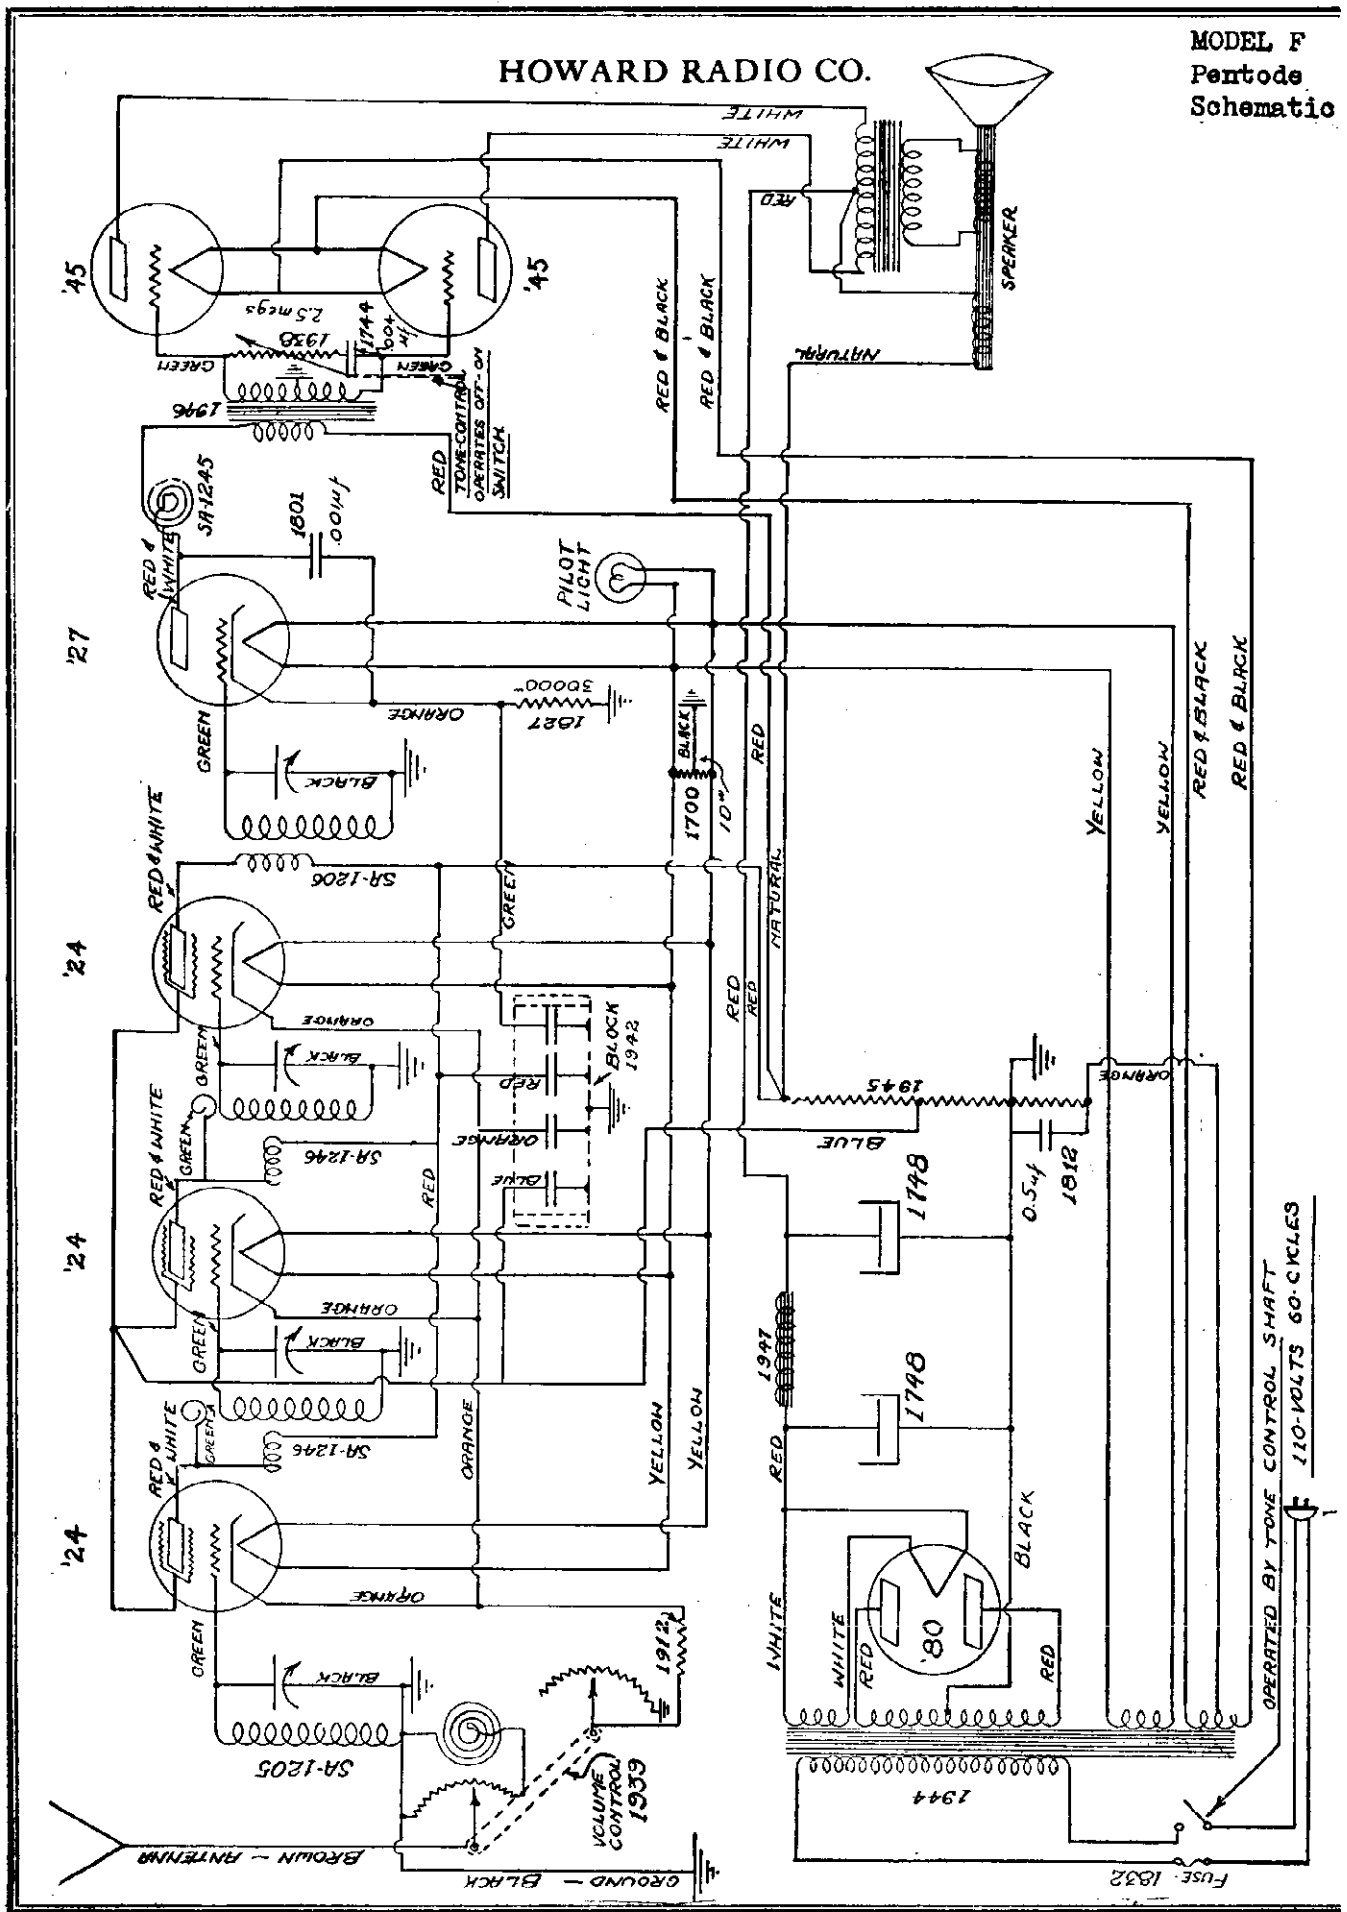

OPERATED BY TONE CONTROL SHAFT
110-VOLTS 60-CYCLES

HOWARD RADIO CO

MODEL 135 D.C.

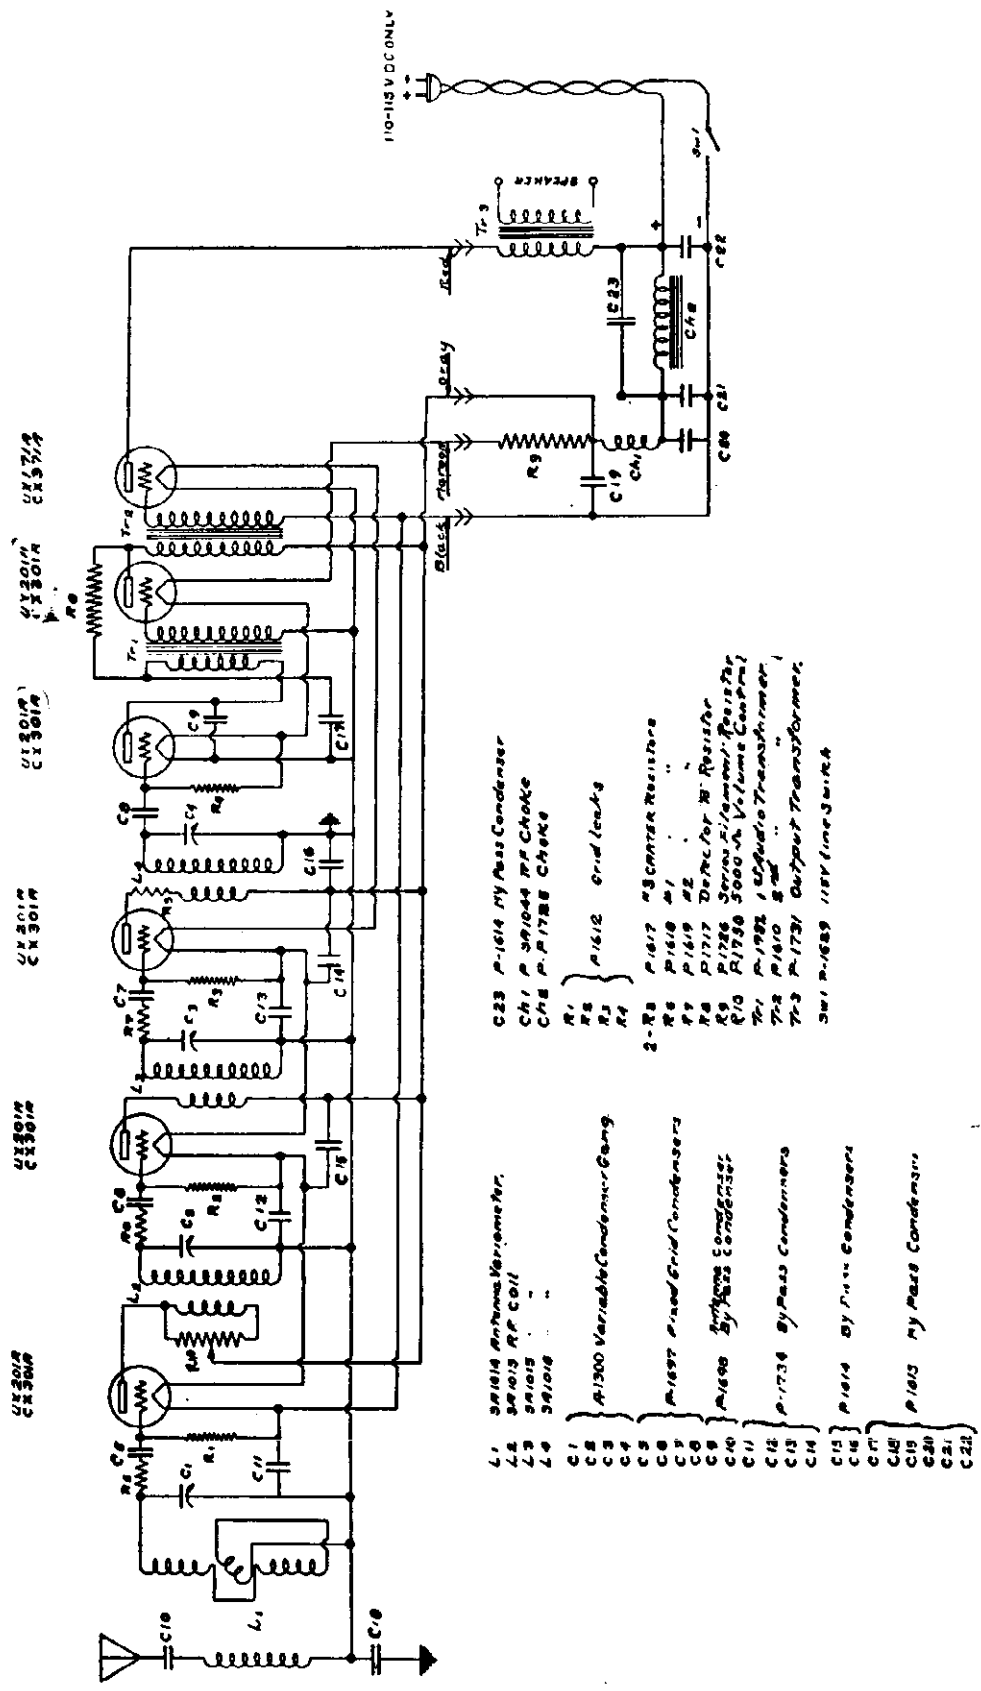

- L1 30114 Antenna Variable Meter
- L2 30115 RF Coil
- L3 30116 " "
- L4 30118 " "
- C1 A-1300 Variable Capacitor - Gang
- C2 " "
- C3 " "
- C4 " "
- C5 " "
- C6 P-1697 5000 Ohm Grid Condensers
- C7 " "
- C8 " "
- C9 " "
- C10 P-1698 5000 Ohm Grid Condenser
- C11 " "
- C12 P-1734 Bypass Condensers
- C13 " "
- C14 " "
- C15 P-1614 5000 Ohm Condensers
- C16 " "
- C17 " "
- C18 " "
- C19 P-1615 1000 Ohm Bypass Condensers
- C20 " "
- C21 " "
- C22 " "

- C23 P-1614 1000 Ohm Bypass Condenser
- Ch1 P-301044 RF Choke
- Ch2 P-1738 Choke
- R1 P-1612 Grid Leaks
- R2 " "
- R3 " "
- R4 " "
- 2-R5 P-1617 5000 Ohm Resistor
- R6 P-1618 5000 Ohm " "
- R7 P-1619 5000 Ohm " "
- R8 P-1717 Detector for W Resistor
- R9 P-1726 Series Resistor
- R10 P-1728 5000 Ohm Volume Control
- Tr-1 P-1922 1500 Ohm Transformer
- Tr-2 P-1610 5000 Ohm " "
- Tr-3 P-1731 Output Transformer
- Sw1 P-1629 115V Line Switch

HOWARD RADIO CO	
4915N CRAWFORD AVE CHICAGO ILL.	
SCHEMATIC DIAGRAM	
MODEL 135B-D.C. ELECTRIC	
DATE: 10-31-28	W1410A
DWN BY: JMK-190	
CHKD:	

Model 135 DC (1928)

DET	1AF	2AF
6X1	7B1A	7B1A
6X2	6Y	6Y
6X3	7B1A	7B1A
6X4		
6X5		

FRONT

MODEL 35,40

(H)

Alignment Data.

HOWARD RADIO CO.

MODEL "H"

ADJUSTMENTS The 175 kc. oscillator must be accurately tuned to 175 kc. and only 175 kc. If this precaution is not observed it will be impossible to align the oscillator to the rest of the set and the set will not operate correctly as the oscillator is designed for exact 175 kc. operation.

The second intermediate frequency amplifier transformer shield can is removed and one side of the small variator condenser is disconnected from the primary coil. This coil is connected so that it still is in the plate circuit of the tube but the tuning condenser is not connected in the circuit. Now remove the grid cap from the intermediate amplifier tube and connect a 3 megohm resistor from the control grid to ground. Now connect the output from the 175 kc. oscillator to the grid of the intermediate frequency amplifier tube and tune the secondary for maximum deflection of the output meter. (Low voltage alternating current meter, 0 to 3 volts, connected across the voice coil of speaker). Now remove the shield can and connect the small tuning condenser that was previously removed back across the primary coil. With the 175 kc. oscillator connected the same as before, tune the primary for a maximum deflection of the output meter. (Caution: Do not under any circumstances try to retune the secondary after having tuned the primary. **This is important.**) After having tuned this stage proceed to the next intermediate frequency:

(b) Replace the grid cap on the intermediate frequency amplifier and proceed to the first detector tube. Remove this tube cap and connect the 175 kc. oscillator as before, being sure to connect the 3 megohm resistor from control grid to ground. Now proceed to tune the intermediate frequency transformer by tuning the secondary first for maximum deflection of the output meter and then tuning the primary for maximum deflection. Tuning this transformer must be done very carefully as the selectivity of the whole receiver depends entirely on the tuning of this transformer.

(c) To line up the radio frequency amplifier and detector stages, remove the oscillator tube and the second detector tube. Unsolder the connection on the plate terminal of first detector tube socket and solder a wire from this terminal to the plate terminal of the second detector tube socket. Now set the Test Oscillator (R. F. Generator) which tunes over the broadcast frequency range to 1400 kcs. Connect the output of this oscillator to the aerial and ground wires of the receiver. Now make sure that when the tuning condensers are all in maximum capacity that the pointer on the escutcheon lines up with the line just beyond the 550 kc. dial mark and then turn the dial until the escutcheon pointer lines up with the 1400 kc. line on the dial. The tuning condenser trimmers should now be adjusted until a maximum deflection is shown by the output meter. Now set the oscillator to 1000 kcs. Turn the dial to 1000 kcs. and then secure maximum deflection on the output meter by moving the serrated plates of the variable condenser in or out as the case may be. Repeat the same procedure at 600 kcs. as was used at 1000 kcs. (Do not touch the trimmer condensers after having once set them at 1400 kcs.). Unsolder the wire connecting the first detector plate terminal to the second detector plate terminal. Resolder the wire that was originally unsoldered from the first detector plate terminal. Now replace the oscillator and second detector tubes.

(d) To line up the oscillator tune the set to 1400 kcs. and adjust the oscillator tuning condenser trimmer (the last hole of the three holes in a line on the top of the tuning condenser housing) as viewed from the front of the set, (see Fig. 1) until a maximum reading is secured on the output meter. Adjust the Test Oscillator to 600 kcs. and tune the receiver to 600 kcs. Now adjust the oscillator series condenser trimmer (the hex. nut in the hole to the left of the oscillator tuning condenser trimmer hole) until a maximum deflection is secured on the output meter. Now reset the Test Oscillator to 1400 kcs. and retune the set to 1400 kcs. and make adjustments if any are necessary on the oscillator tuning condenser trimmer. It is very seldom necessary to make any readjustments at 1400 kcs. after they have once been made.



Now tune the Test Oscillator to 1000 kcs. and tune the set to 1000 kcs. Try adjusting the antenna trimmer condenser to determine whether the oscillator aligns at this frequency. If the antenna trimmer must increase capacity to give maximum deflection of output meter the oscillator tuning condenser serrated plates should be moved out. If the antenna trimmer condenser is decreased in capacity the oscillator tuning condenser serrated plates should be bent in towards the stator plates.

The Test Oscillator must again be set to 1400 kcs. and the set retuned to 1400 kcs. to make sure that the antenna trimmer condenser has been correctly reset after the oscillator adjustment has been made at 1000 kcs.

In making tests after having made adjustments according to the foregoing paragraphs, it is necessary to replace the tube and coil can shields before making the tests.

HOWARD RADIO CO.

MODEL H
Chassis
Top-Bottom View

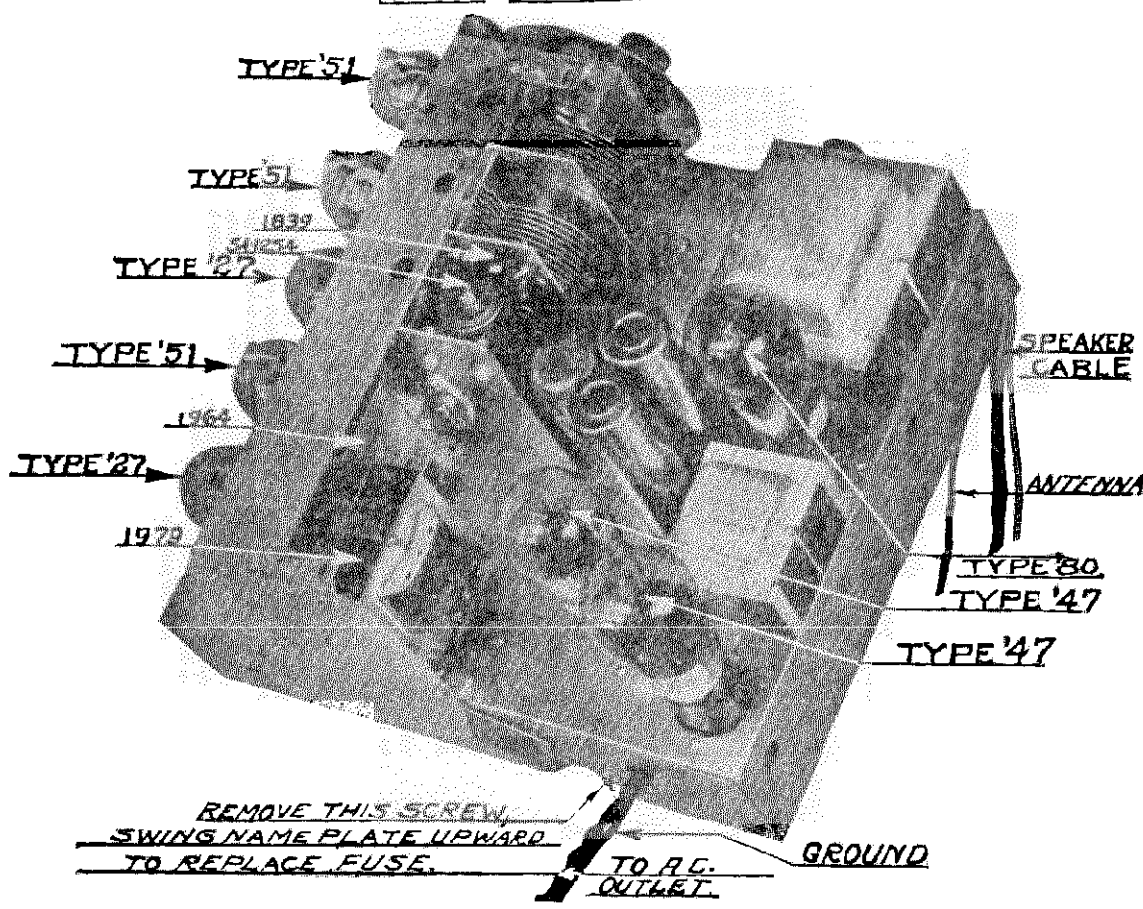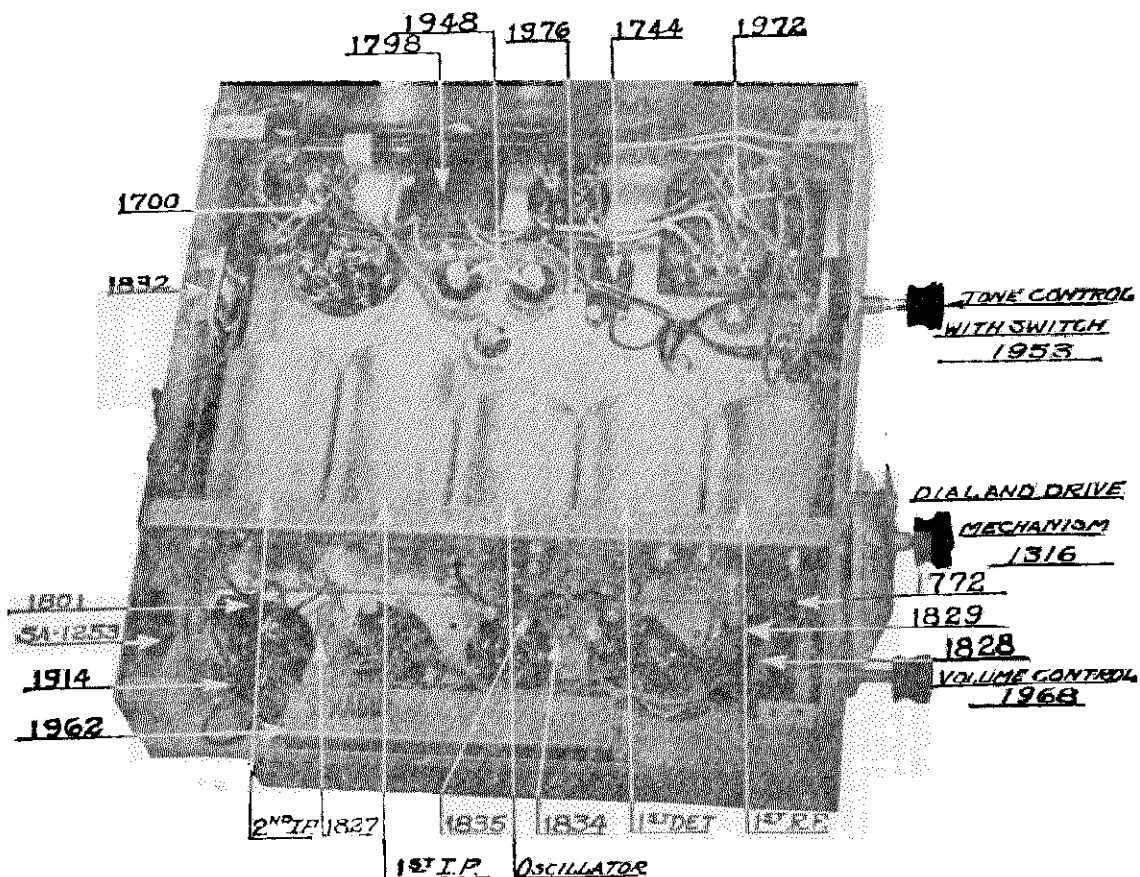

MODEL 45,60 (AVH)

Alignment Data

HOWARD RADIO CO.

This cycle goes on until a constant voltage is obtained across the second detector input or in other words until a condition of equilibrium is reached.

The action of the AVC is to maintain a constant voltage across the grid of the second detector regardless of the voltage of the incoming signal. Since this voltage remains constant this means that the audio output also remains constant.

In order to connect the grids of the various tubes to the AVC resistor, it is necessary to insert decoupling resistors P-1897 in each grid lead. These resistors are of such value so that in conjunction with the isolating condenser, they form a resistance capacity filter section so that any modulation from the AVC tube does not reach the grids of the other tubes.

Due to certain detector characteristics it is not advisable to connect the 1st detector tube as much as is necessary with the r.f. and i.f. tubes. The grid return of the 1st detector, therefore, goes to the center tap of the two resistors in the plate circuit of the AVC tube while the grid return of the r.f. and i.f. tubes go directly to the plate of the AVC tube.

4. Volume Level Control.

In the automatic volume control set the receiver is designed so that the maximum audio output is just below the point of overload of the audio power tube. Since this value of output is far more than necessary for normal room volume, it is necessary to introduce some type of volume level control in order that the customer may adjust the output to any desired value. In order to accomplish this a variable resistor is shunted across the secondary of the input transformer to the pentode tubes. By adjusting this control, the volume may be set at any desired level and once adjusted need not be adjusted until it is desired to receive an extremely distant station which has a field strength too weak to operate the automatic volume control.

5. Tone Control.

Since the volume level control on the Model AVH is connected where the tone control is normally connected, it was necessary to re-design the tone control for a new location. This tone control consists of two condensers P-1845 and a variable resistor P-1881. This combination is connected in series across the plates of the two pentodes. The action of this control is the same as that on the Model H in that as low resistance is included between the two condensers, they become more effective in by-passing the higher audio frequencies and at the same time they tune the primary of the output transformer to a lower audio frequency.

6. Visual Tuning Meter.

Since the Automatic Volume Control tends to hold the audio output of the set to a certain definite volume level, it will be at once apparent that the main tuning dial may be rotated quite a distance without any appreciable change in audio volume. This means that the point of resonance is hard to distinguish. In order to tune the receiver to absolute resonance, a visual tuning meter is used. This meter is connected in series with the plate supply voltage of the three controlled tubes. As the bias increases on these tubes as the receiver is tuned to resonance, the plate current decreases. This decrease in plate current is recorded by the meter. A station is in exact resonance when the tubes are drawing their minimum plate current for a given signal strength. At this condition the best tonal qualities are realized from the set. It is important that the service man and dealer both understand this tuning so that the customer may be instructed in the correct manner of tuning his radio set. This broadness of tuning is only apparent and does not effect the selectivity of the receiver. This action is explained fully in the instruction pamphlet with each receiver and should be thoroughly understood so that an explanation can be given the customer.

7. Power Pack.

The power pack is of the conventional type and is similar to the Model H with a few exceptions.

The power transformer has a separate winding for the heater of the AVC tube. This is necessary because if the heater were grounded as the other heaters, it would place 100 volts potential difference between cathode and heater and it is possible that rectification might take place between these two elements which would hinder the action of the AVC tube.

The HV secondary of this power transformer is also changed to give an increased high voltage. This increase is necessary because the AVC tube requires an additional 124 volts for operation.

Since an additional 124 volts is required above the usual 180 volts for plate operation this means that from +B to -B on the voltage divider resistor there is a total of 304 volts. As our power tubes require only 250 volts plate and 16.5 volts bias it is at once apparent that they may be connected between +B and -B with suitable resistors to drop the voltages to the correct operating voltages.

The speaker field is connected the same as in the Model "H" but since the total current of the set now flows through the speaker field the resistance of the field is only 350 ohms instead of 2400 ohms as in the standard Model H.

The filter condensers on the Model AVH are of the dry electrolytic type since these would assist a potential difference between the case and the chassis if the wet electrolytic were used which might shock the user if he happened to touch the case of the condenser and the chassis. These dry electrolytic condensers are housed in a container which is at ground or chassis potential so that this danger is eliminated.

Two pilot lights are used on the Model AVH, one for illuminating the dial and the other for illuminating the meter.

1. Specifications.

The Howard Model AVH receiver is a superheterodyne receiver similar to the Model H receiver with the addition of an Automatic Volume Control.

2. Schematic Circuit.

Draw # 1481 shows a schematic diagram of the Model AVH. Since the Model "H" and Model "AVH" are nearly identical, it will only be necessary to show where in the two differ.

In the radio chassis the following differences are noted:

The first radio frequency transformer SA-1267 is not grounded as in the Model "H". A non-inductive .1 mfd. condenser is connected between the end of this coil and ground. This condenser provides an insulation as far as direct current is concerned for the grid of the radio frequency amplifier tube. From a radio frequency standpoint, this condenser offers a low impedance path to ground for the radio frequency voltage. Since this condenser and the tuning condenser are in series across the tuning coil it is necessary that this condenser be large in order to have small effect on the tuning capacity.

The second radio frequency transformer SA-1268 is constructed in the same manner as the first radio frequency transformer as far as grounding is concerned and needs no further explanation. For actual physical construction refer to section 2 of Model "H" Service Manual.

The first intermediate frequency transformer SA-1278 also has an isolating condenser in the grid circuit. This condenser serves the same purpose as those in the radio frequency transformers.

The initial operating bias for the various tubes is secured by means of individual resistors in each cathode circuit. The plate current flowing through this resistor causes a voltage drop across it which places the cathode positive with respect to ground. Since the grid is effectively at ground potential this is the same as placing a negative voltage on the grid. It is necessary to bias these tubes individually so that there is no common impedance which might give rise to reaction between the tubes. Each resistor is by-passed to form a low impedance path for radio frequency around the resistor.

3. Automatic Volume Control.

The Automatic Volume Control is actuated by means of a type 277 tube and in order to explain its operation it is necessary to explain its action under condition of no signal being received and then its action when a signal is being received.

The tube is connected so that the grid is at absolute -B potential by means of a 2 megohm resistor (P-1889). The cathode of the tube is connected to a point on the voltage divider which is at +24 volts with respect to -B or the grid. There exists then between the cathode and the grid a potential difference of 24 volts with the grid negative by this amount. The plate of this tube is connected to ground by means of two 150,000 ohm resistors (P-1888). Since ground is connected to +124 volts with respect to -B there exists between the cathode and the plate a potential difference of 100 volts. In order to by-pass any radio frequency energy which may appear on the plate, a non-inductive condenser (P-1893) is connected from the plate of the Automatic Volume Control tube to the cathode.

With the condition of no signal there exists a bias of 24 volts and a plate voltage of 100 volts. Under these conditions there is no plate current flowing and the tube is said to be cut-off. Since no plate current is flowing there exists no voltage drop across the plate circuit resistor and, therefore, there is no bias voltage on the grids of the controlled tubes. The only bias on the r.f., 1st det. and i.f. is caused by the respective voltage drops across their cathode resistors. These resistors are designed to give the most sensitive operating point.

Now let us consider the case of a received signal. The signal passes through the receiver to the second detector grid. Here the AVC (automatic volume control) tube grid and the second detector grid are in parallel. The signal voltage is fed to the grid of the AVC tube by means of a small fixed condenser P-1892. This signal voltage swings back and forth with its center coinciding with the initial bias on the AVC tube. It will be seen that during the positive half at the cycle, the peak voltage of the signal swing subtracts from the original bias voltage. This means that the instantaneous bias on the tube is less than the original bias and the tube begins to draw current in the plate circuit. Since this current flows in the resistors in the plate circuit of the AVC tube, there exists a voltage drop across these resistors. Also the flow of the electrons is from plate to ground so that the plate becomes negative with respect to ground. Now since the original potential of the cathodes of the r.f., 1st det. and i.f. tube is positive with respect to ground, it follows that if the grids of the respective tubes are connected to resistor in the plate circuit of the AVC tube, that any potential existing across this resistor is added to the original bias and makes the grids more negative than the original bias by the amount of the voltage drop across the resistor in the AVC tube plate.

It is at once apparent that the greater the signal voltage appearing at the grid of the AVC tube, the more plate current will flow in plate circuit. An increase in plate current means an increase in bias on the r.f., 1st det. and i.f. tubes. An increased bias on these tubes means less amplification and therefore, less grid swing on the second detector and AVC tube.

HOWARD RADIO CO

4. Tune primary of intermediate transformer for maximum deflection of output meter. Retune secondary to make sure tuning of primary has not affected the resonant point of secondary.
5. Replace grid cap as originally. Remove grid cap of the 1st detector and connect the 3 megohm resistor from control grid to ground. Connect the output of 175 kc. oscillator to control grid of 1st detector.
6. Tune secondary of 1st intermediate frequency transformer to 175 as shown by maximum deflection of output meter.
7. Now tune primary of this transformer to 175 as indicated by maximum deflection of output meter. Retune secondary to see it has not been affected by primary tuning.
8. Retune second intermediate frequency transformer to make sure it is exactly tuned at 175 kc. as there may be some change in tuning when the 1st detector is connected in the circuit.

No. 1 Radio Frequency Amplifier Alignment.

1. After aligning IF transformers, replace 1st detector grid cap. Unsolder the wire connecting the plate of the 1st detector tube to the IF transformer. Remove oscillator tube and 2nd detector tubes. Connect the plate terminal of 1st detector tube to the plate terminal of the second detector socket.
2. Rotate the condenser in clockwise direction as far as they will go. Make sure that when the rotors of the condenser are all in that the starting mark on the dial aligns with the pointers on the eschachoon. This starting mark is the line just beyond the 550 kc. line on the dial. (See Fig. 1.)
3. Set test oscillator (RF Generator) which tunes over broadcast band to 1400 kc. Connect antenna and ground wires to oscillator. Tune set to 1400, as shown on dial. Adjust trimmer on first and third variable condensers for maximum deflection of output meter.
4. Now tune oscillator 1000 kc. and tune set to 1000 kc. as shown on the dial. Adjust for maximum deflection on output meter by moving serrated plates on rotor of tuning condensers in or out as the case may be. Do not adjust trimmer condensers at this frequency.
5. Repeat process in paragraph 4 at 600 kc.
6. Remove wire soldered from 1st detector plate terminal to second detector plate terminal and resolder wire from intermediate frequency transformer to plate terminal of 1st detector as originally connected.

Oscillator Alignment.

1. Set test oscillator to 1400 kc. Tune set to 1400 kc. and adjust oscillator or second (middle) tuning condenser trimmer for maximum output as shown on the output meter. (Oscillator trimmer condenser second hole of the three in line.)
 2. Set test oscillator to 600 kc. Tune set to 600 kc. Adjust oscillator padding condenser (single hole to left of three holes in line) for maximum deflection of output meter.
 3. Reset test oscillator again to 1400 kc. and retune set to 1400 kc. Readjust oscillator trimmer if necessary. This adjustment is very seldom necessary if the other adjustments are made correctly.
 4. Now tune test oscillator to 1000 kc. and tune set to 1000 kc. Try adjusting antenna trimmer condenser to determine whether the oscillator aligns at this frequency. If the antenna trimmer must increase in capacity to give maximum deflection of output meter the oscillator tuning condenser serrated plates should be moved out. If the antenna trimmer condenser is decreased in capacity the oscillator tuning condenser serrated plates should be bent in towards the stator plates. It must be remembered that a small capacity change in the oscillator circuit means a tremendous frequency change, and this adjustment must be made very carefully.
 5. Now adjust test oscillator to 1400 kc. and retune set at 1400 kc. to make sure that the antenna trimmer condenser has been reset to its original position after Test 4 has been made.
- In making the above tests it is necessary before making each test, to replace all shielding. The foregoing tests are of a delicate nature, and it is essential that each one be made carefully before going to the next test.

Schematic Circuit

The schematic circuit of this receiver is shown in Dwg. No. 1479. The antenna connects to the set by means of the brown flexible lead shown in Fig. 1. The ground also connects to the set by means of a black flexible lead also shown in Fig. 1. (In later models binding posts are provided for antenna and ground.)

Inside the set, the antenna lead goes to a high inductance primary. The other end of this inductance grounds to the metal chassis. From the antenna end of this inductance a single turn of wire is coupled capacitively to the secondary of the radio frequency transformer. This coil is made in this manner so that the amplification will be equal throughout the frequency band. The secondary is tuned by means of a section of a three gang condenser. One end of this secondary connects to the control grid of the radio frequency amplifier tube while the other end is grounded.

The plate circuit of the radio frequency amplifier tube connects to +B voltage through a high impedance choke coil. The plate circuit of the r.f. amplifier is coupled to the secondary circuit by means of a single turn of wire in close physical relation to the grid end of the secondary coil which connects to the grid of the first detector or mixer tube. This single turn gives the necessary capacity coupling to produce uniform amplification over the broadcast frequency spectrum. The secondary coil of this transformer is tuned by a second section of the three gang variable tuning condenser. As with the secondary of the radio frequency amplifier transformer, one end of this coil is connected to the control grid of the first detector tube. The other end of this secondary coil is grounded to the chassis.

In order to introduce the oscillator voltage into the grid circuit of the mixer or first detector tube a small coil is wound in inductive relation to the secondary coil at the grounded end of the secondary. This small coupling coil is insulated from the secondary by means of a pyralin strip.

This small coil is a part of the oscillator inductance. Tuning of the oscillator is accomplished by means of the third section of the three gang variable tuning condenser, which has in series with it a fixed padding capacitor. This padding condenser has across it a small trimmer condenser. This condenser tunes the oscillator to an exact frequency at the low frequency end of the spectrum. One end of the oscillator coil is grounded through the 1st detector coupling coil while the other end connects to the control grid of the oscillator tube by means of a resistor P-1835 (Dwg. 1479). This resistor is used to stabilize the oscillator voltage over the frequency range. The plate circuit of the oscillator contains the conventional tickler coil, and is connected to the screen grid voltage tap for its plate voltage. The oscillator is of the biased type having a bias resistor connected from the cathode to ground. This resistor is by-passed by a section of the by-pass condenser block.

Volume and Current Readings Howard Model "O"


Tube No.	Type	Position	A Volts	B Volts	Screen Volts	Plate Current M.A.	Screen Current
1	551	1st R.F.	2.20	180	92	— 3.5	3.4
2	227	Osc.	2.20	86	—	—10.0	2.8
3	551	1st Det.	2.25	175	90	— 6.0	2.5
4	551	I.F.	2.25	180	92	— 3.5	6.2
5	227	2nd Det.	2.40	160	—	—17.0	0.6
6	247	Audio	2.35	260	270	—21.0	25.0
7	280	Rectifier	4.60	350-350	—	—	4.2

Line voltage, 115 volts. Volume Control, Full On.

- (1) Alignment
- IMPORTANT:** The 175 kc. oscillator must be accurately tuned to 175 kc. If this precaution is not observed it will be impossible to align the oscillator to the rest of the set and the set will not operate correctly as the oscillator is designed for exact 175 kc. operation.
- This set is designed slightly different from the Model H superheterodyne in that the second intermediate frequency transformer is not overcoupled.
- The following alignment procedure should be followed:
- A Intermediate Transformer Alignment.
 1. Remove grid cap from intermediate frequency amplifier tube and connect the control grid of this tube to a 2 or 3 megohm resistor. Connect other end of this resistor to ground.
 2. Connect output of 175 kc. oscillator to control grid of this tube.
 3. Tune secondary of intermediate transformer for maximum deflection of output meter. (Low voltage alternating current meter, 0.3 volts connected across voice coil of speaker.)

MODEL 10
(T)
Schematic

HOWARD RADIO CO.

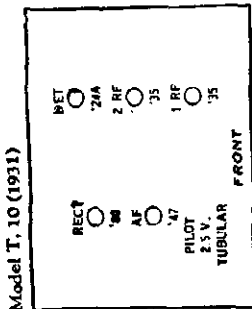


NOTE A:-
PHONO PICKUP JACKS
ON EXPORT MODELS
ONLY. DETECTOR COIL
GROUND OPENED AT X.

NOTE B:-
WITH A LATER SERIES OF
SETS, THE FOLLOWING REVISIONS
WILL BE NOTED:-
1876 700,000 OHM/1824 250,000 OHM
1874 900,000 OHM/1823 1 MEG.


NOTE C:-
OMITTED: 1872 CONDENSER
1873 RESISTOR

PART NO.	1480
DATE	JULY 20, '31
REVISED	
DESIGNED BY	HOWARD RADIO CO.
CHECKED BY	
APPROVED BY	
SCALE	
HOWARD RADIO CO. SOUTH HAVEN, MICHIGAN	
THIS SCHEMATIC DIAGRAM IS USED IN MODEL SGT	
DRAWN BY: T.M.G.	
CHECKED BY:	
APPROVED BY:	

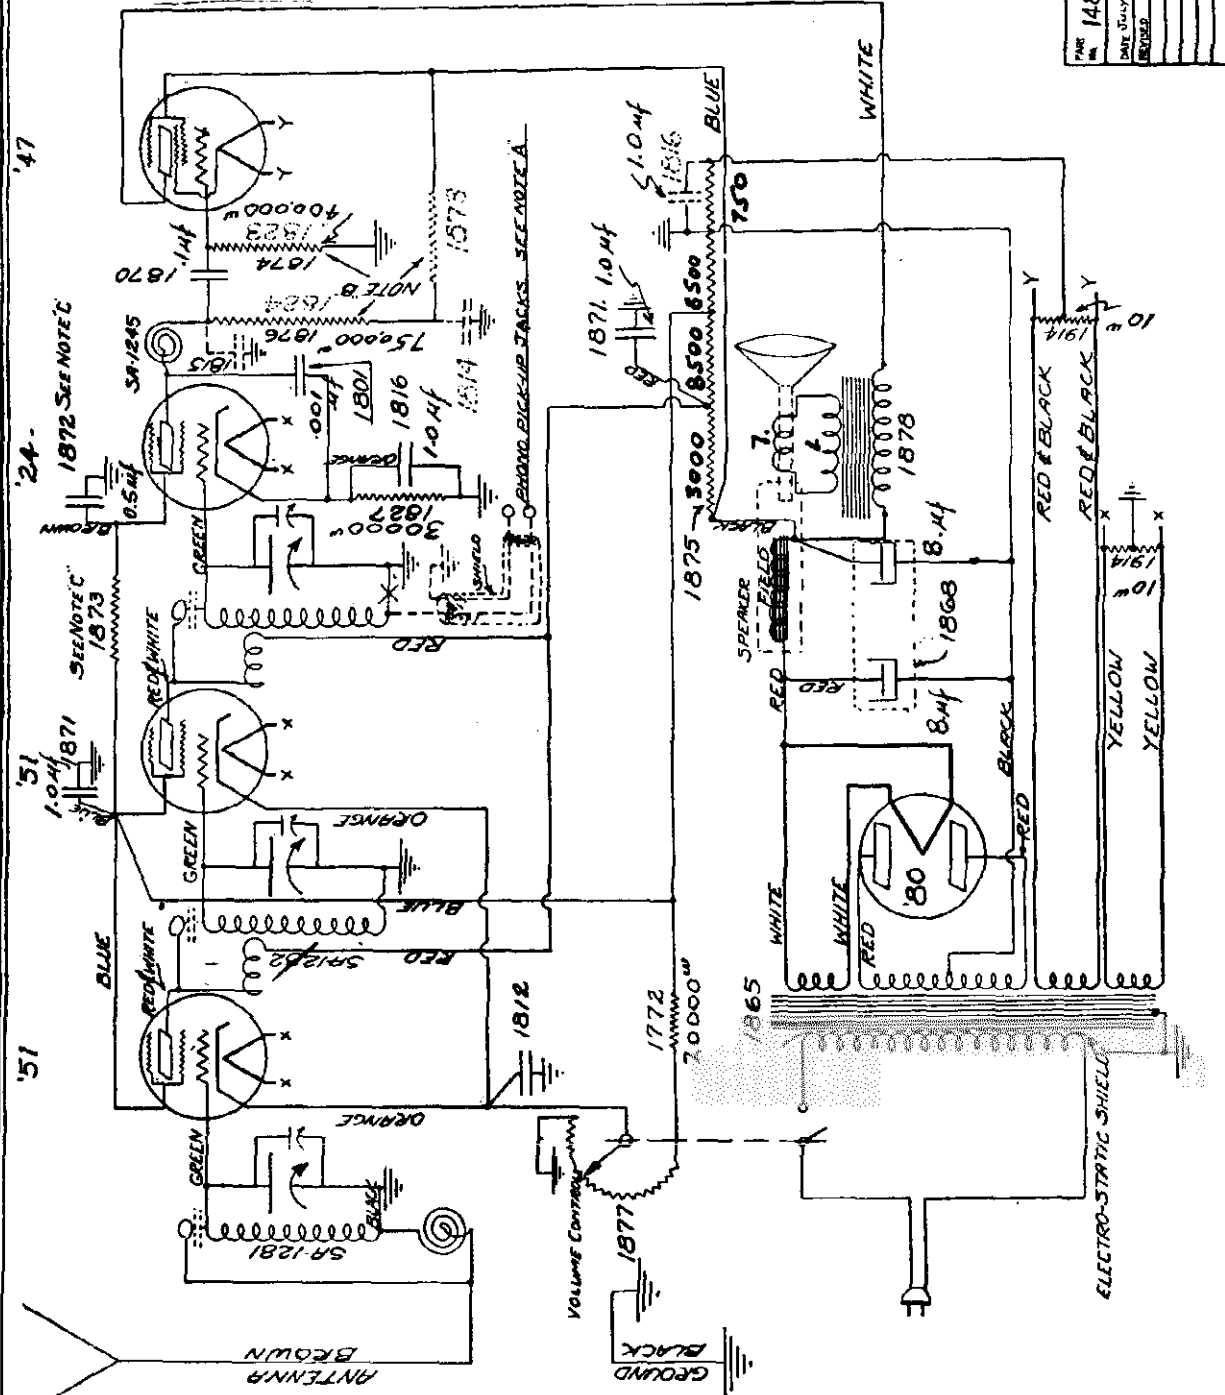

HOWARD RADIO CO.

MODEL 10
(T)
Alignment Data

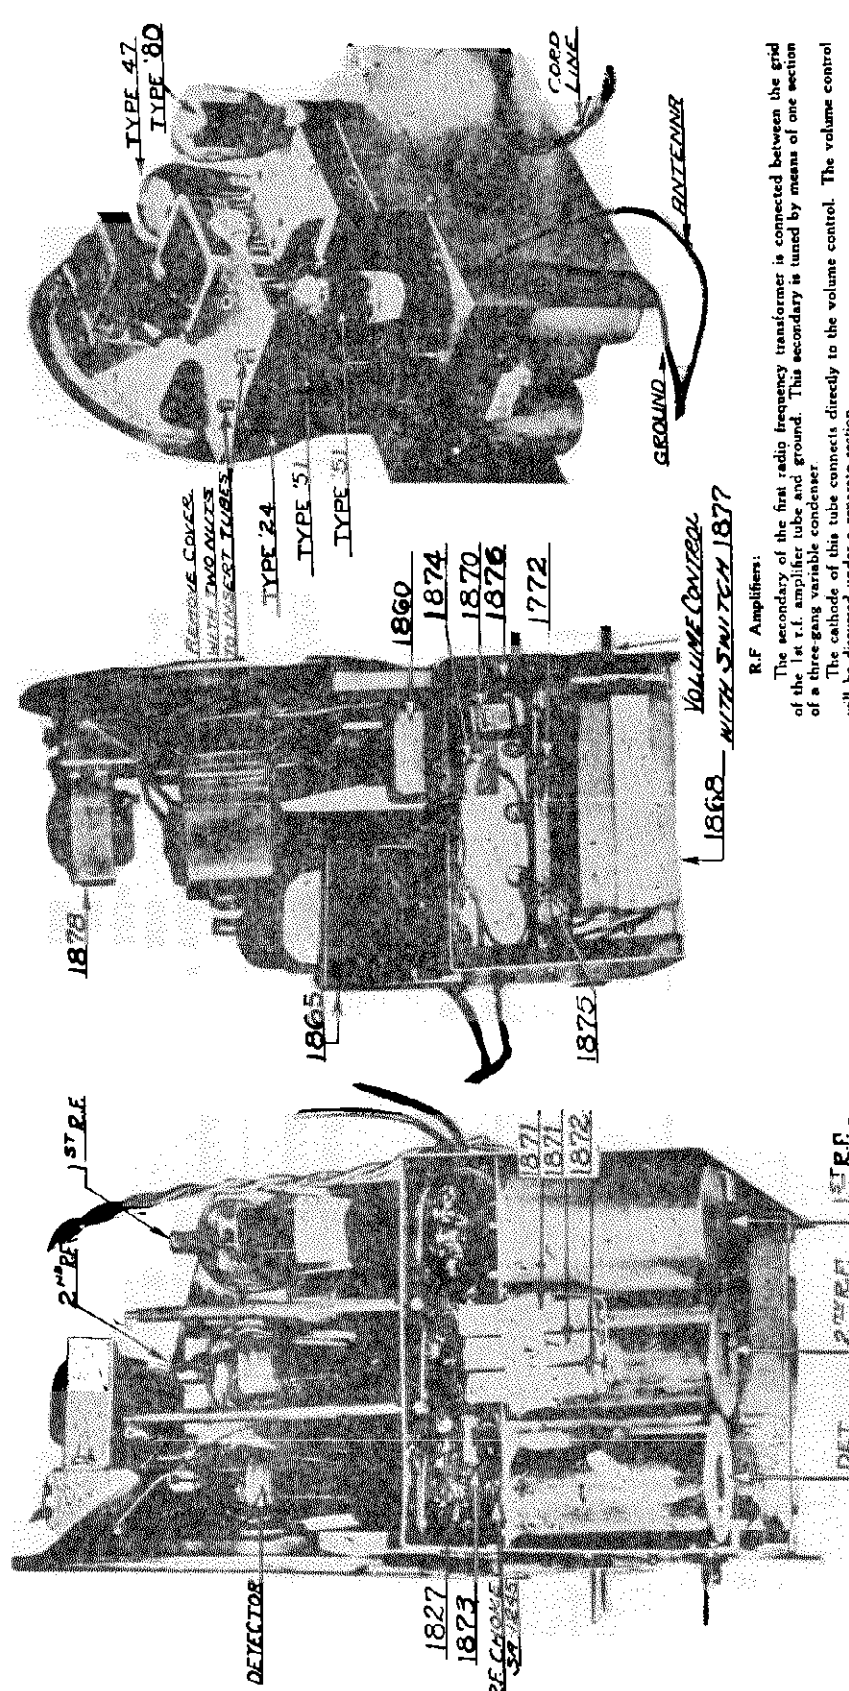

1323	Condenser, variable tuning condenser, 3 gang	1870	Condenser 1 mfd. Sprague Type G...
1325	Tuning mechanism (complete with scale) ...	1871	Condenser 1.0 mfd. Elkon 200 volt rating
1362	Line cord, 8 1/2 ft., with H. & H. Bakelite plug.	1872	Condenser .5 mfd. Elkon 200 volt rating...
1702	Socket type, No. 280.....	1873	Resistance 100,000 ohms, 1/2 watt.....
1703	Socket type, No. 224.....	1874	Resistance 400,000 ohms, 1/2 watt.....
1705	Socket type, No. 551.....	1875	Resistor "B" stick.....
1772	Resistor 20,000 ohms 1/2 watt.....	1876	Resistor 750,000 ohms, 1/2 watt.....
1801	Condenser .001 mfd. Fixed mica.....	1877	Volume Control (on-off switch included)...
1812	Condenser .5 mfd.....	1914	Resistor 10 ohms center tapped type 7E-10.
1827	Resistance 30,000 ohms 1/2 watt.....		
1847	Socket type, No. 247.....		
1816	Condenser 1.0 mfd.....		
1865	Power Transformer, No. H.R. 55.....		
1868	Condenser 16 mfd. (2.5 mfd. sections)....		

Sub-Assembly Parts List

SA-1245	R.F. Choke coil.....
SA-1281	Radio Frequency Transformer (Antenna)
SA-1282	Radio Frequency Transformer (Interstage)

R.F. Amplifiers:

The secondary of the first radio frequency transformer is connected between the grid of the 1st r.f. amplifier tube and ground. This secondary is tuned by means of one section of a three-gang variable condenser.

The cathode of this tube connects directly to the volume control. The volume control will be discussed under a separate section.

The screen grids of the radio frequency amplifier tubes connect together and then to a point on the voltage divider resistor which applies the correct operating potential on the screens. In order to prevent common coupling impedance these screens are by-passed to ground by means of a condenser. This eliminates a possibility of oscillation from this source.

Connected between the source of B voltage and the plate of the first radio frequency amplifier tube is a high inductance choke coil. This coil is located in the top of the second radio frequency transformer but in physical relation to the secondary of this transformer so that there is no electromagnetic coupling. Connected to the plate end of this choke is a wire which is in close physical relation to the grid end of the secondary of this transformer. As in the case of the 1st r.f. transformer, this wire gives a small capacity coupling. The combination of the choke and small capacity formed by the single turn of wire gives a frequency characteristic which is substantially flat over the frequency range.

The secondary of the second transformer is similar to the one used in the 1st r.f. transformer and is tuned by means of the second section of the variable tuning condenser. It is connected between grid and ground of the second radio frequency amplifier tube.

The cathode and screen of this tube are connected the same as the first radio frequency amplifier and need no further description.

The third radio frequency transformer is a duplicate of the second, radio frequency transformer and therefore, needs no description. On export models, the ground lead of this transformer is connected to a phonograph jack, and the other terminal of the phonograph jack is connected to ground. In the radio position these jacks are shorted by means of a switch. In the phono position, this switch is opened and the pick-up is plugged into the jack. It is necessary to tune the radio set to some point on the dial where there is no signals from a broadcast station coming in, otherwise the radio signals will feed through and interfere with the phono music.

REMOVE COILS WITH TWO WIRE TO INSERT TUBES.

TYPE '24
TYPE '51
TYPE '51

1860
1874
1870
1876
1772

VOLUME CONTROL 1877 WITH SWITCH 1877



TYPE 47
TYPE 80

GROUND ANTENNA

CORD LINE

HOWARD RADIO CO.

MODEL O
Chassis
Top-Bottom View

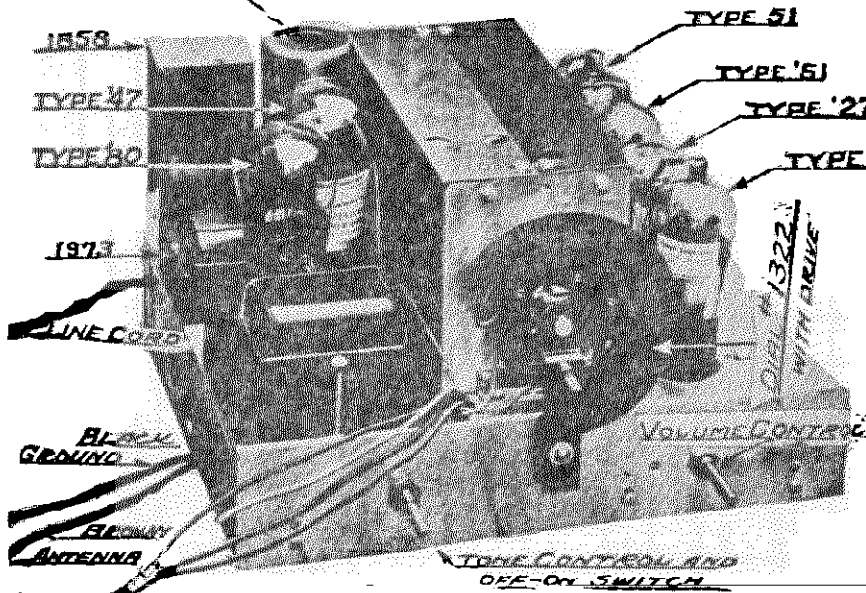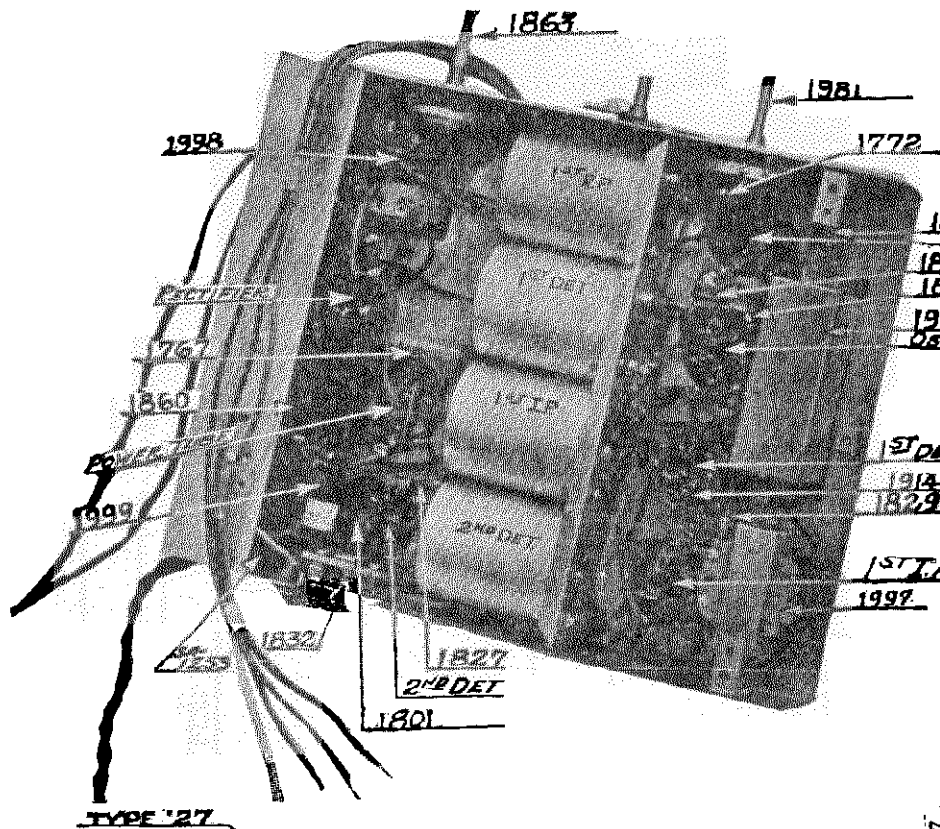


TO REPLACE FUSE, REMOVE SCREWS FROM NAME PLATE ON BACK OF CHASSIS.

Part No.	Description	Sub-Assemblies
1263	IF transformer coils 1 1/16" spacing	
1264	IF transformer coils 1" spacing	
1318	Variable tuning condenser	
1322	Dial drive mechanism and scale No. 2042	
562	AC line cord and plugs	
1702	Socket No. 280	
1704	Socket No. 227	
1705	Socket No. 551	
1767	Condenser .01 mfd.	
1772	Resistor, 20,000 ohms, 1/2 watt	
1801	Condenser, .001 mfd.	
1827	Resistor 30,000 ohms 1/2 watt	
1828	Resistor 200 ohms 1/2 watt	
1829	Resistor 1800 ohms 1/2 watt	
1832	Fuse 2 amp. A.C.	
1834	Resistor 2,000 ohms 1/2 watt	
1835	Resistor 3,000 ohms 1/3 watt	
1847	Socket No. 247	
1857	Oscillator padding condenser	
1858	Filter cond. 2 section 8 mfd. ea.	
1859	Filter cond. 1 section 4 mfd. ea.	
1860	By-pass condenser 1.0 mfd.	
1901	Pilot light 2.5 volt	
1914	Resistor 10 ohm center-tapped	
1932	Power transformer	
1863	Tone control and power switch	
1970	IF transformer tuning condenser (variators)	
1973	Choke coil, power pack	
1981	Volume control	
1983	Resistor 300 ohm, 5 watt	
1994	By-pass condenser block	
1997	Audio transformer	
1999	Resistor (voltage divider)	
1828	Antenna radio frequency transformer	SA-1247
1834	Oscillator tuning coil	SA-1249
1835	Radio frequency transformer	SA-1252
1934	Detector radio frequency choke coil	SA-1253

INSULINE CORP. OF AMERICA


MODEL Envoy
6 Tube AC
MODEL Envoy
Midget

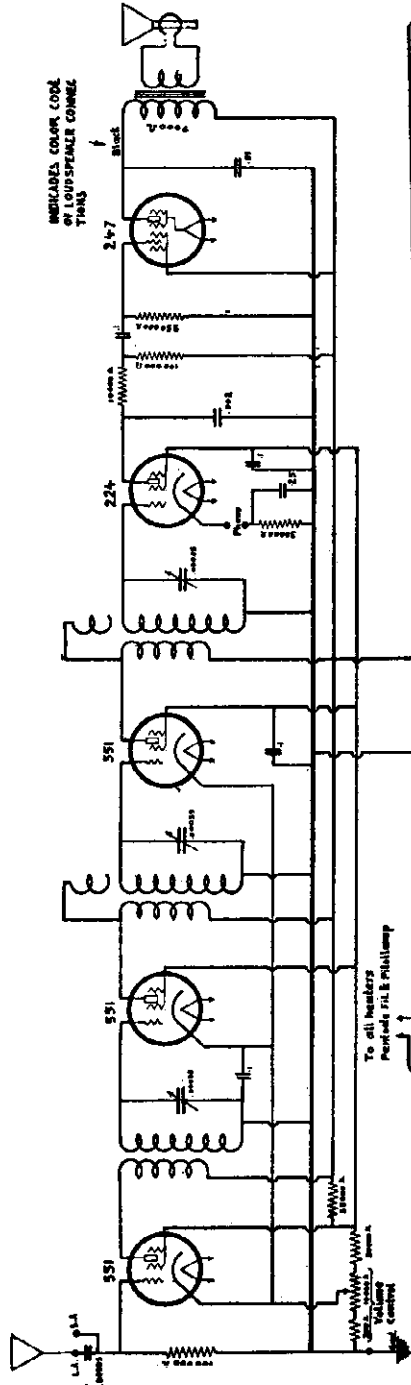

**6 TUBE A.C.
ENVOY RECEIVER**

TYPE 108-220V-55-4	DATE Dec. 31 st 1931
MODEL A.C.	APPROVED R.H.S.
DRAWN M.P.	WARRANTY 200-55013

LINE VOLTAGE MAY VARY FROM 105 TO 135 OR 210 TO 250 VOLTS.

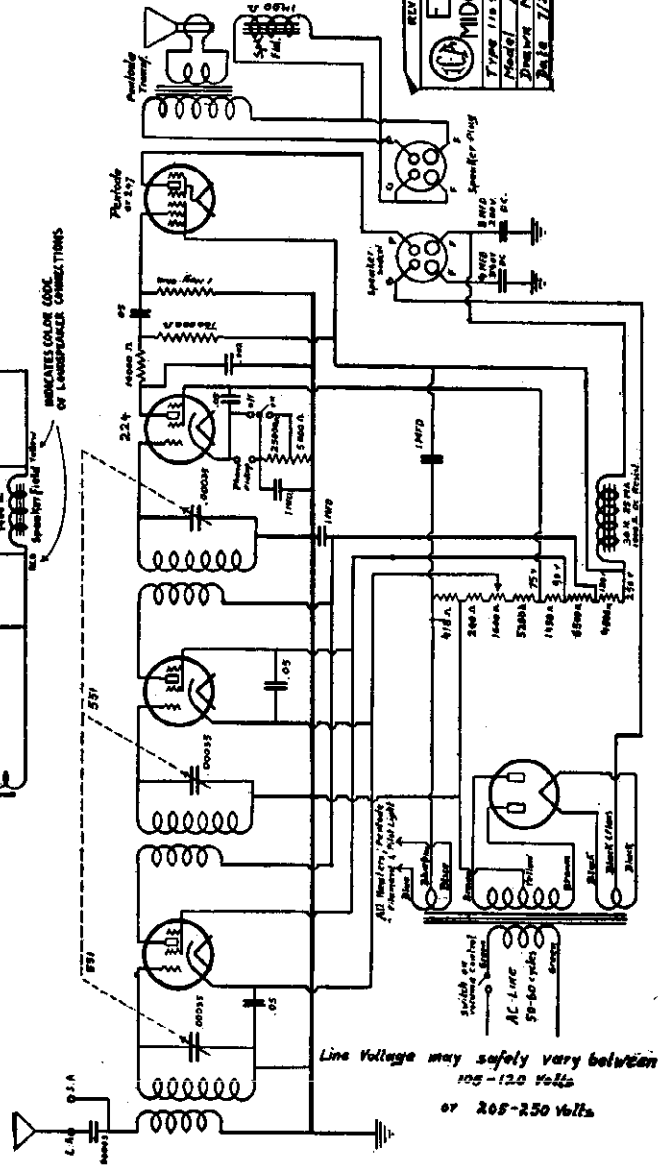

**REVISED CIRCUIT
ENVOY
MIDGET RECEIVER**

TYPE 110-220V-55-4	Scale
MODEL A.C.	Checked R.H.S.
DRAWN M.P.	Approved R.H.S.
DATE 7/25/34	



Line Voltage may safely vary between 105-120 volts or 205-250 volts.

"ENVOY" 6-TUBE AC RECEIVER

"ENVOY" AC MIDGET RECEIVER

MODEL Envoy
Midget DC
(Revised)
2 Types

INSULINE CORP. OF AMERICA

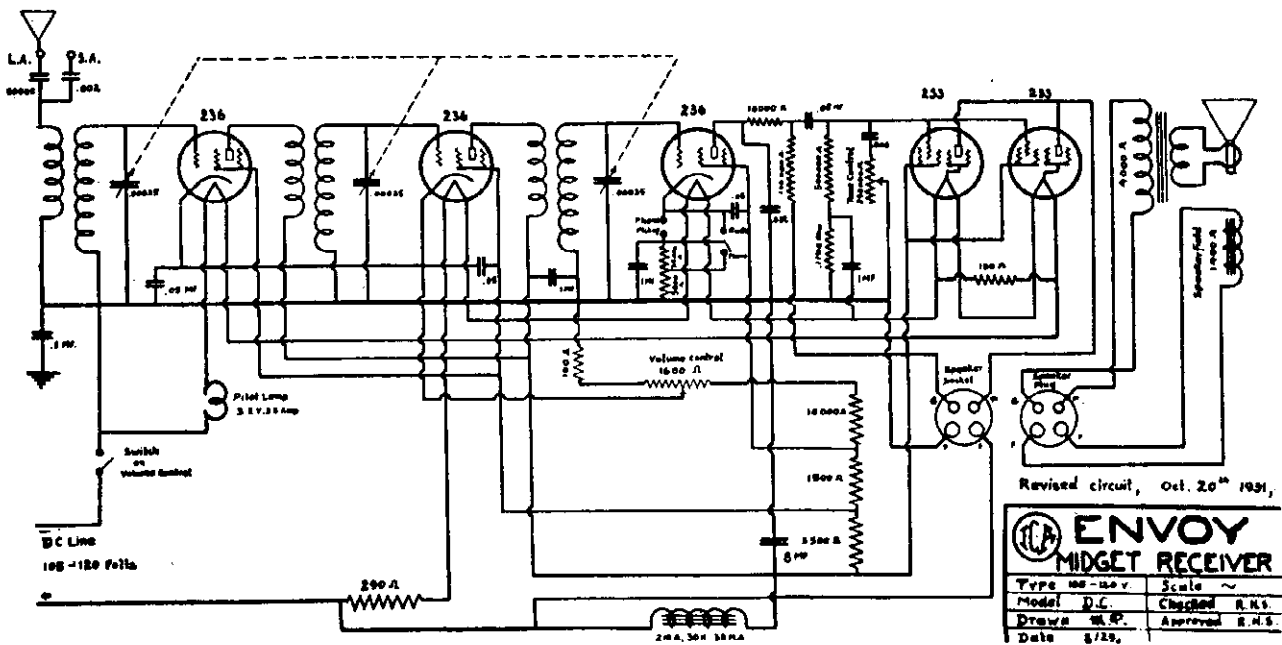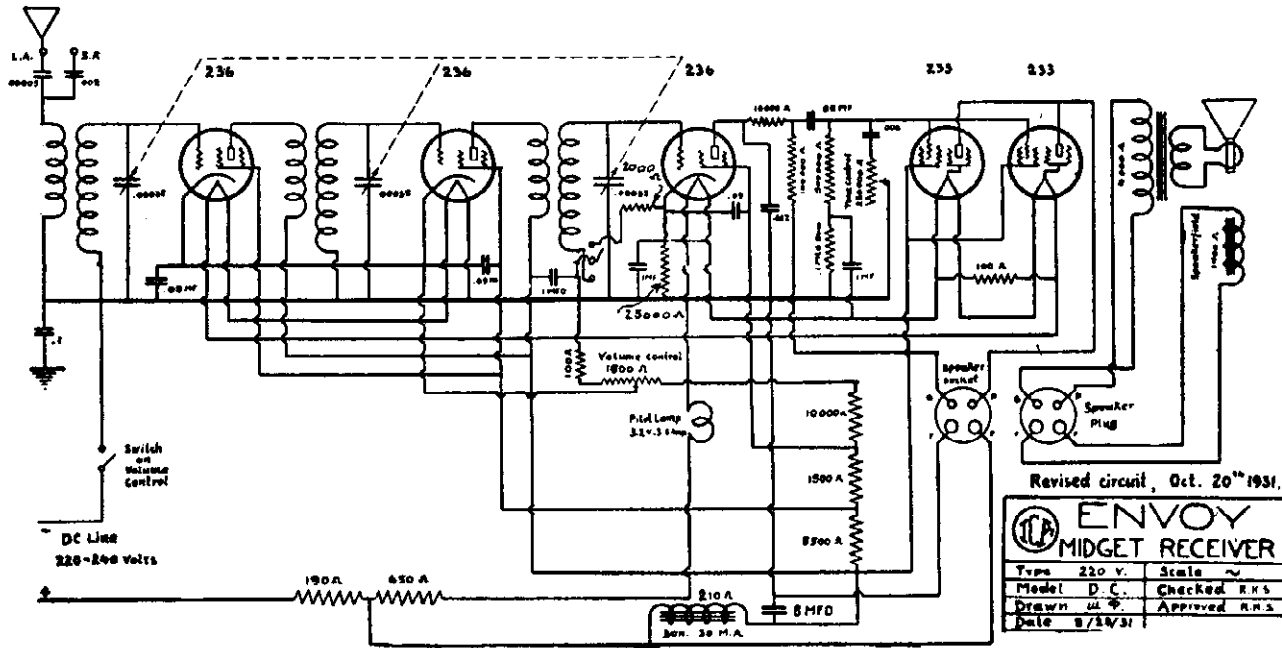

"ENVOY" DC MIDGET RECEIVER (220 V)


"ENVOY" DC MIDGET RECEIVER (105-120 V)

MODEL Envoy
Broadcast-Long Wave AC • INSULINE CORP. OF AMERICA

"ENVOY" AC COMBINATION B'CAST & L.W. RECEIVER

ENVOY
COMBINATION BROADCAST
AND LONG WAVE RECEIVER


Type	110 A 220	Scale	
Model	A.C	Checked	R.H.S.
Drawn	W.G.	Approved	R.H.S.
Date	8/31/31	Wavelength Range	400-550 m. 150-2250 m.

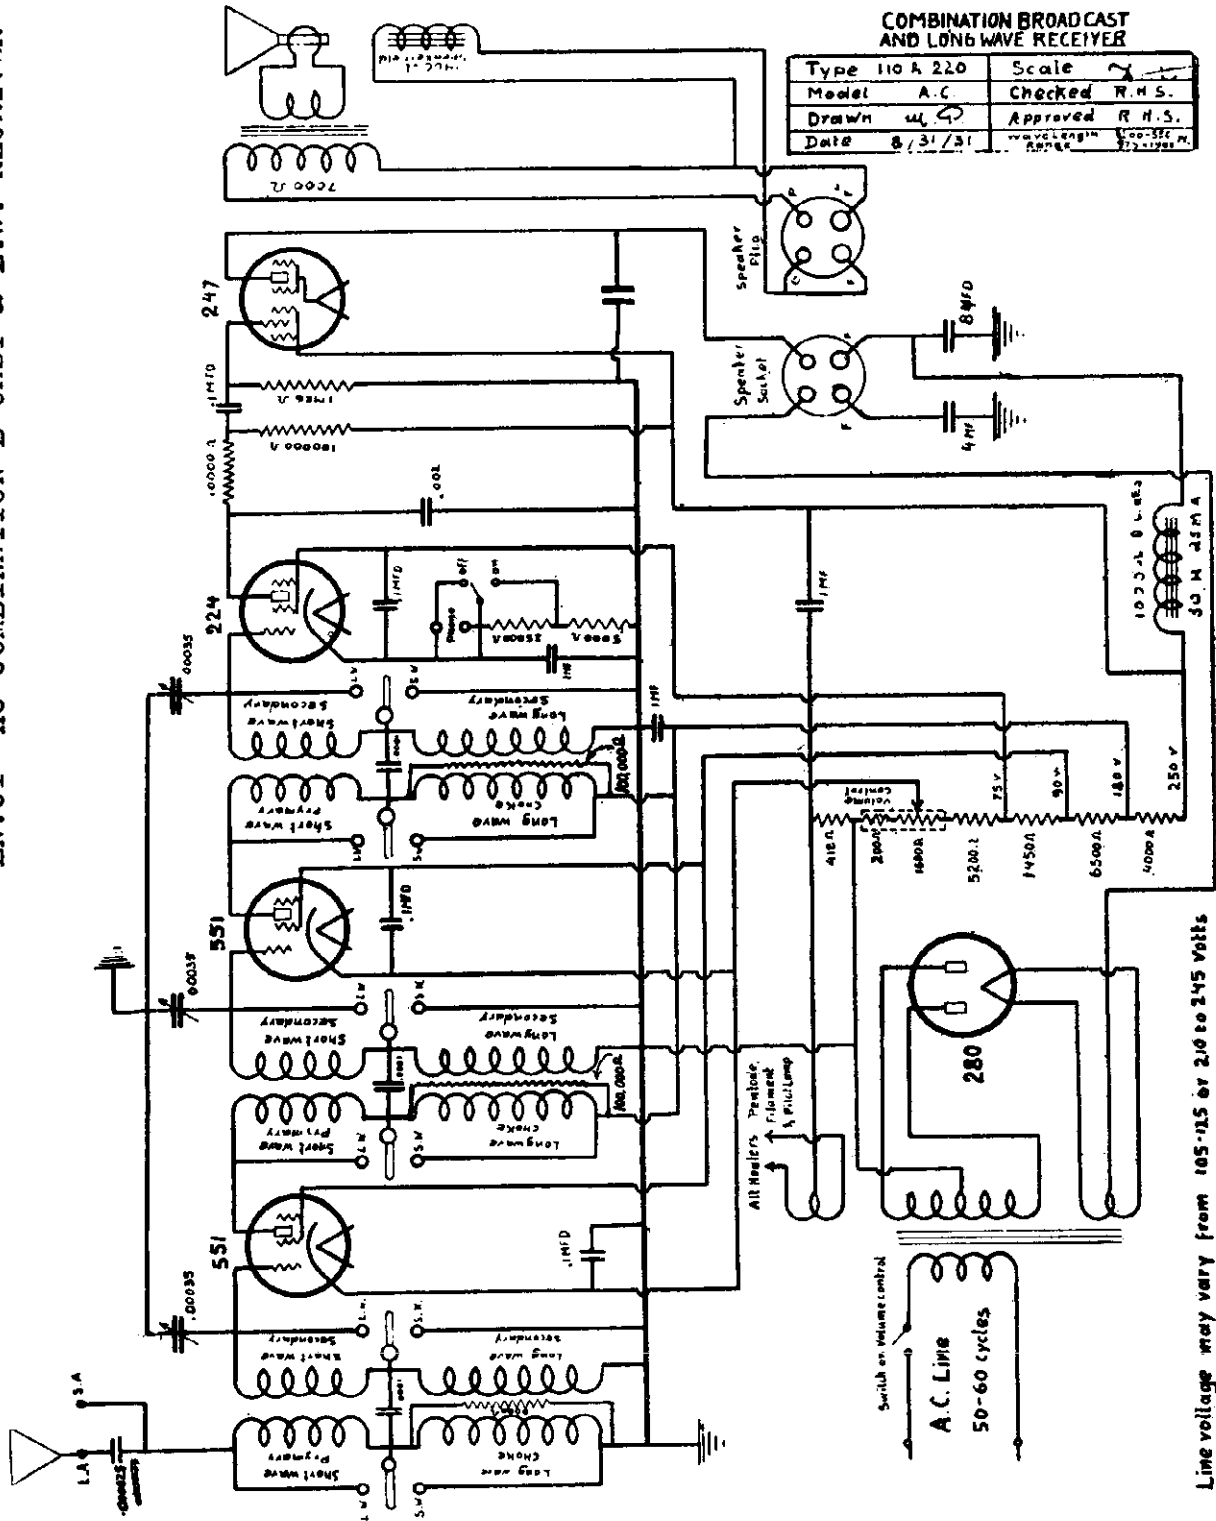


Line voltage may vary from 105-115 or 210 to 245 volts

INSULINE CORP. OF AMERICA

MODEL Insulette & Mascot
4 Tube Midget AC
Broadcast-Long Wave
4 Tube Midget AC

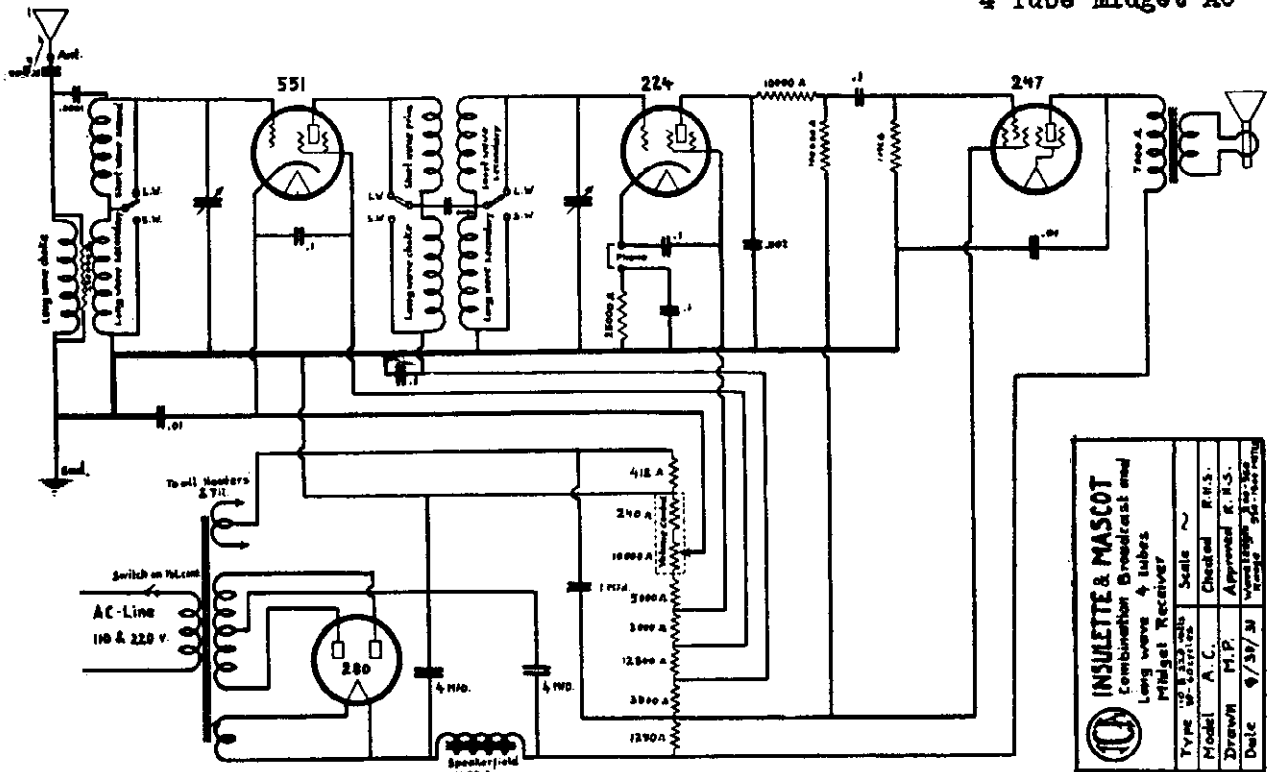

INSULETTE & MASCOT	
Combination Broadcast and Long wave 4 tubes Priblet Receiver	
Type W. 532, 200	Scale ~
Model A. C.	Checked R. H. S.
Drawn M. P.	Approved R. H. S.
Date 9/27/31	Wavelength see-550

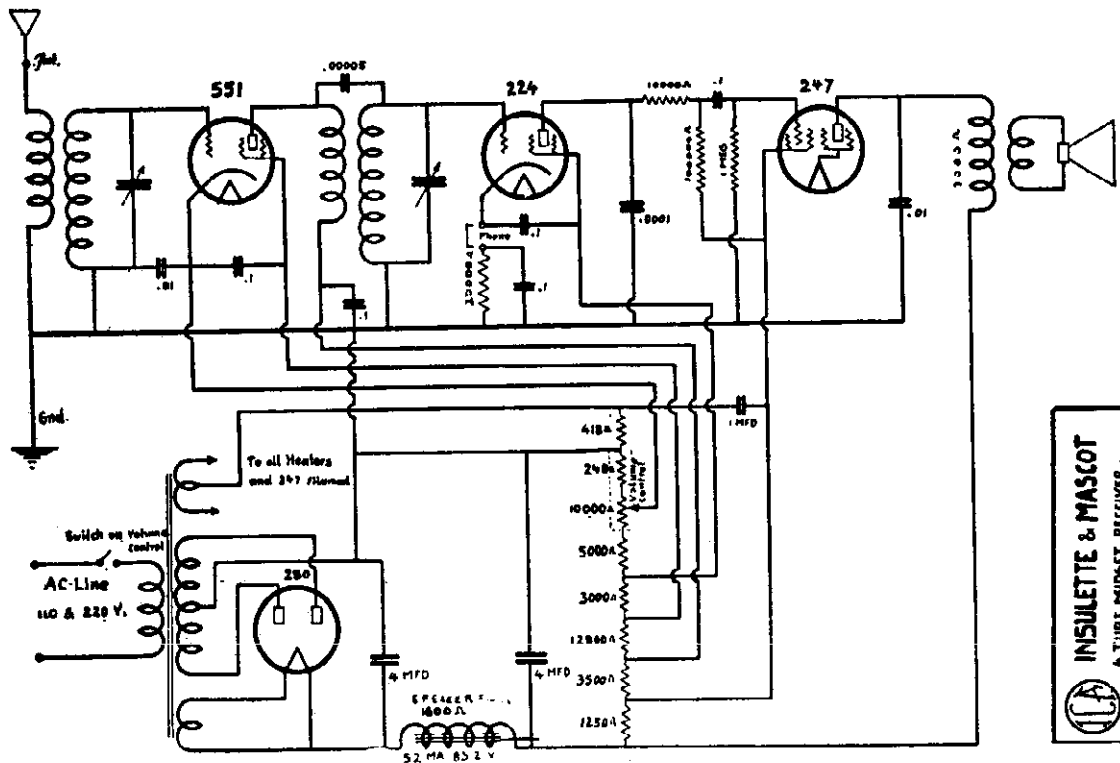


INSULETTE & MASCOT	
4 TUBE MIDGET RECEIVER	
Type W. 532, 200	Scale ~
Model A. C.	Checked R. H. S.
Drawn M. P.	Approved R. H. S.
Date 9/27/31	Wavelength see-550

"INSULETTE" & "MASCOT"
4 TUBE MIDGET RECEIVER

"INSULETTE" & "MASCOT"
4 TUBE COMBINATION B'CAST & L.W
MIDGET RECEIVER

MODEL Conqueror
Short Wave AC

INSULINE CORP. OF AMERICA

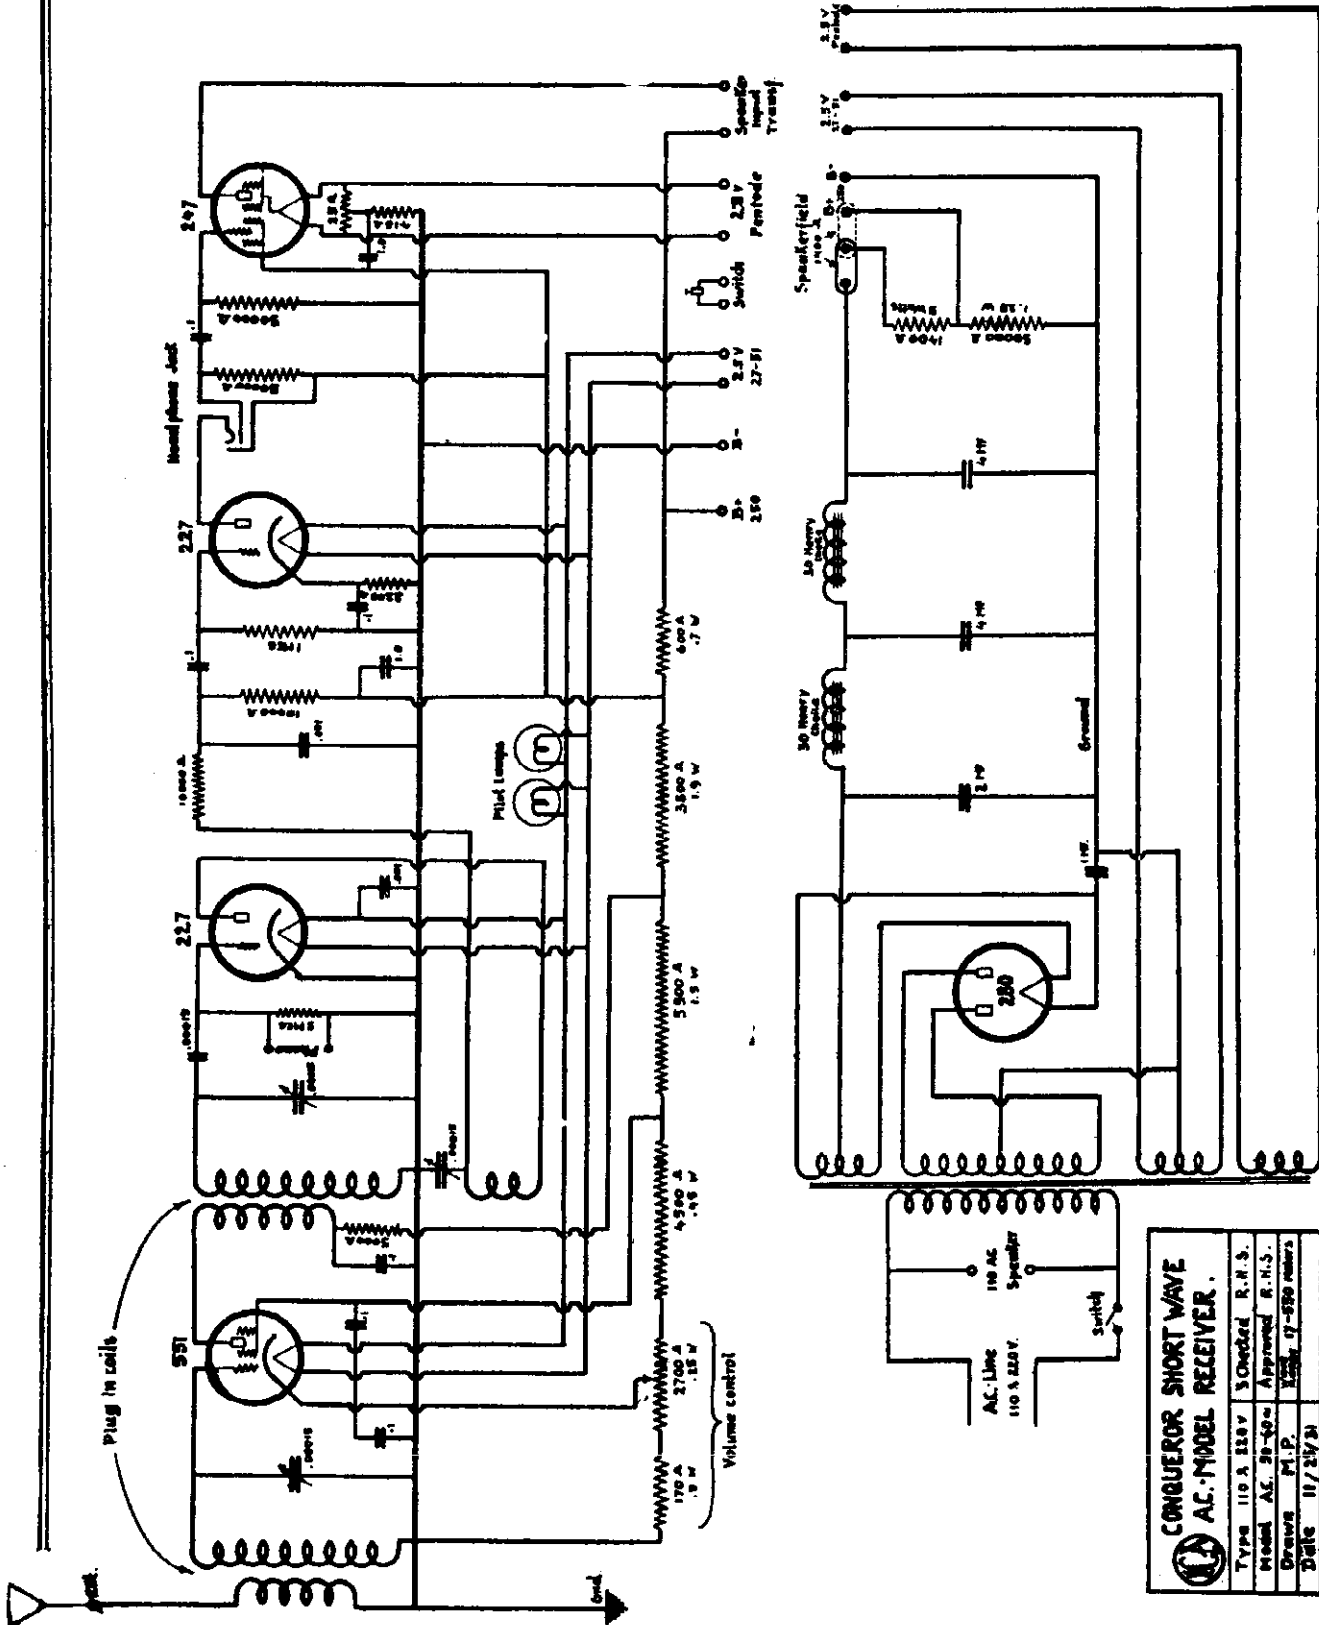

**CONQUEROR SHORT WAVE
AC MODEL RECEIVER**

TYPE	110 A 120V	3 Checked	R. H. S.
MODEL	AC 20-50	Approved	R. H. S.
DRAWN	F. I. P.	EXHIBIT	7-450 rears
DATE	11/21/33		


" CONQUEROR " SHORT WAVE A.C. MODEL RECEIVER

MODEL Super-Conqueror
Short & Long Wave AC **INSULINE CORP. OF AMERICA**

INSULINE CORP. OF AMERICA
 25-25 PARKWAY NEW YORK 17, N.Y.

MANUFACTURED BY
INSULINE CORP. OF AMERICA
 25-25 PARKWAY NEW YORK 17, N.Y.


DATE AUG. 23, 1931 **REVISION** 12 - 2025 WTR/MS
DRAWN M.P.B. **MODEL** A.C. 100-250 V.
DESIGNED R.H.S.
CHECKED R.H.S.
APPROVED A.G.H.
 TUBES: 6X4, 6AR5, 6AV6, 6BE6, 6BE7, 6BE8, 6BE9, 6BE10, 6BE11, 6BE12, 6BE13, 6BE14, 6BE15, 6BE16, 6BE17, 6BE18, 6BE19, 6BE20, 6BE21, 6BE22, 6BE23, 6BE24, 6BE25, 6BE26, 6BE27, 6BE28, 6BE29, 6BE30, 6BE31, 6BE32, 6BE33, 6BE34, 6BE35, 6BE36, 6BE37, 6BE38, 6BE39, 6BE40, 6BE41, 6BE42, 6BE43, 6BE44, 6BE45, 6BE46, 6BE47, 6BE48, 6BE49, 6BE50, 6BE51, 6BE52, 6BE53, 6BE54, 6BE55, 6BE56, 6BE57, 6BE58, 6BE59, 6BE60, 6BE61, 6BE62, 6BE63, 6BE64, 6BE65, 6BE66, 6BE67, 6BE68, 6BE69, 6BE70, 6BE71, 6BE72, 6BE73, 6BE74, 6BE75, 6BE76, 6BE77, 6BE78, 6BE79, 6BE80, 6BE81, 6BE82, 6BE83, 6BE84, 6BE85, 6BE86, 6BE87, 6BE88, 6BE89, 6BE90, 6BE91, 6BE92, 6BE93, 6BE94, 6BE95, 6BE96, 6BE97, 6BE98, 6BE99, 6BE100

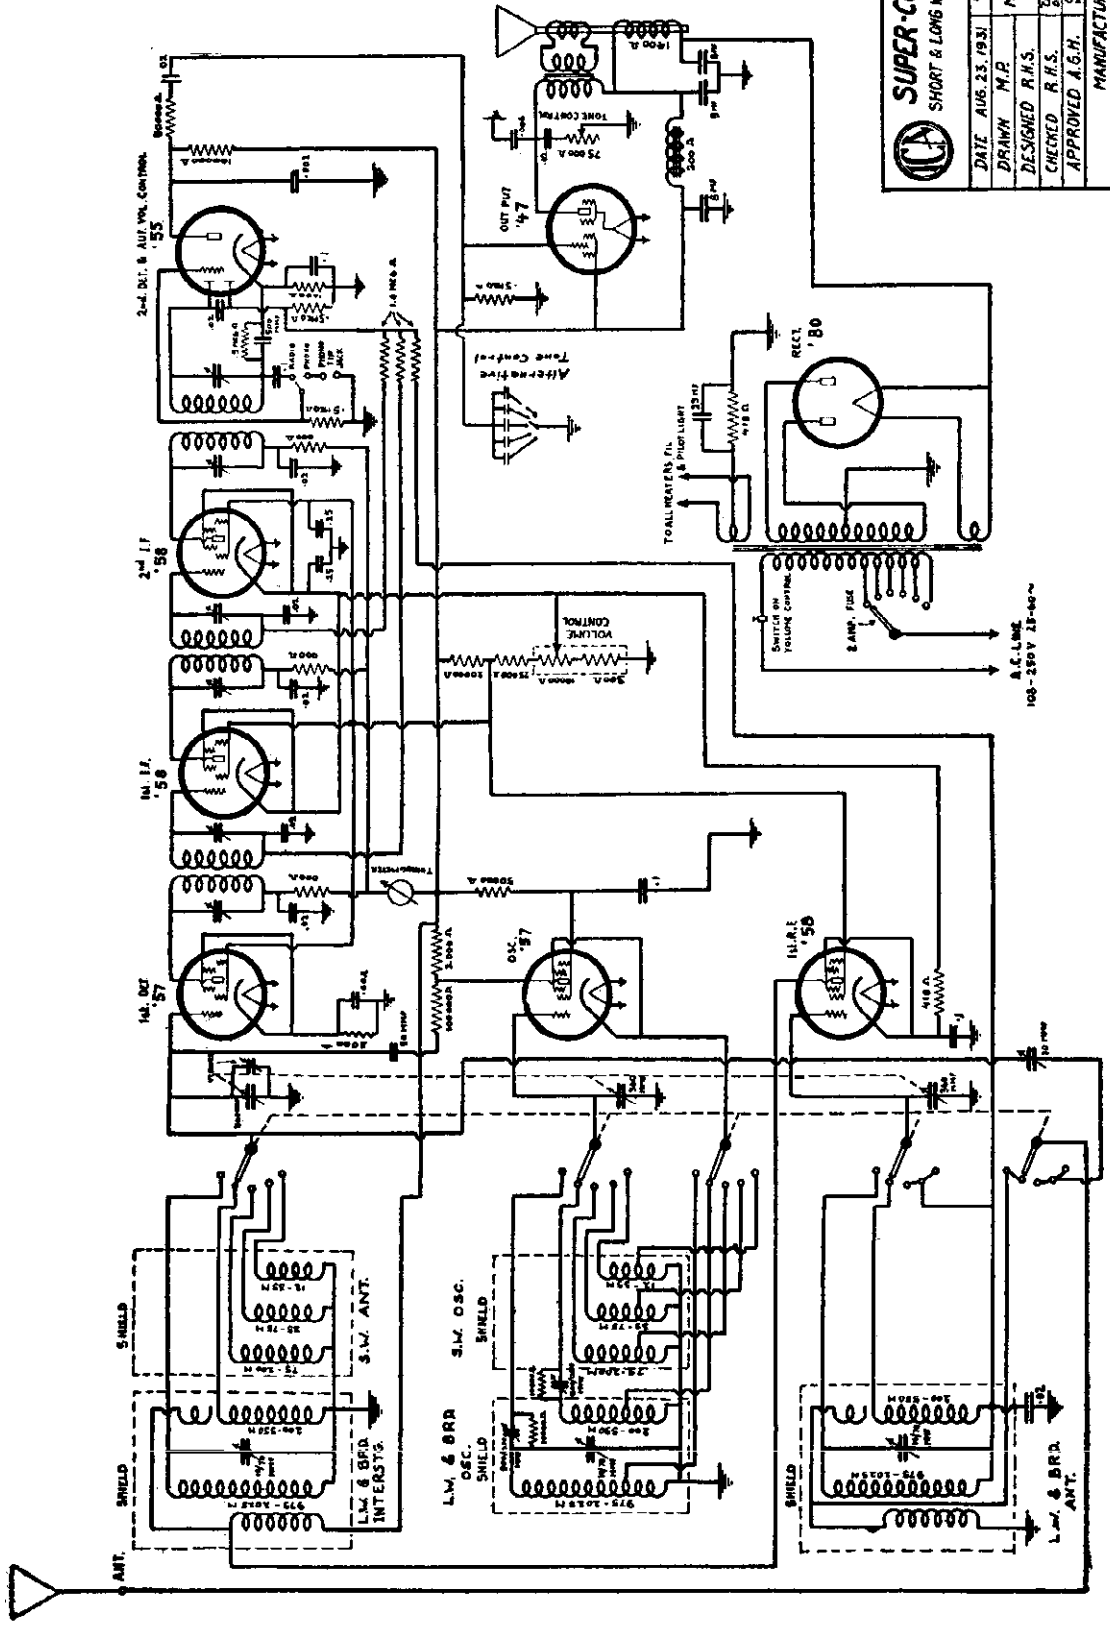


MODEL Universal Companion
AC-DC-Battery
Portable

INSULINE CORP. OF AMERICA

MODEL Universal Mascot
AC-DC

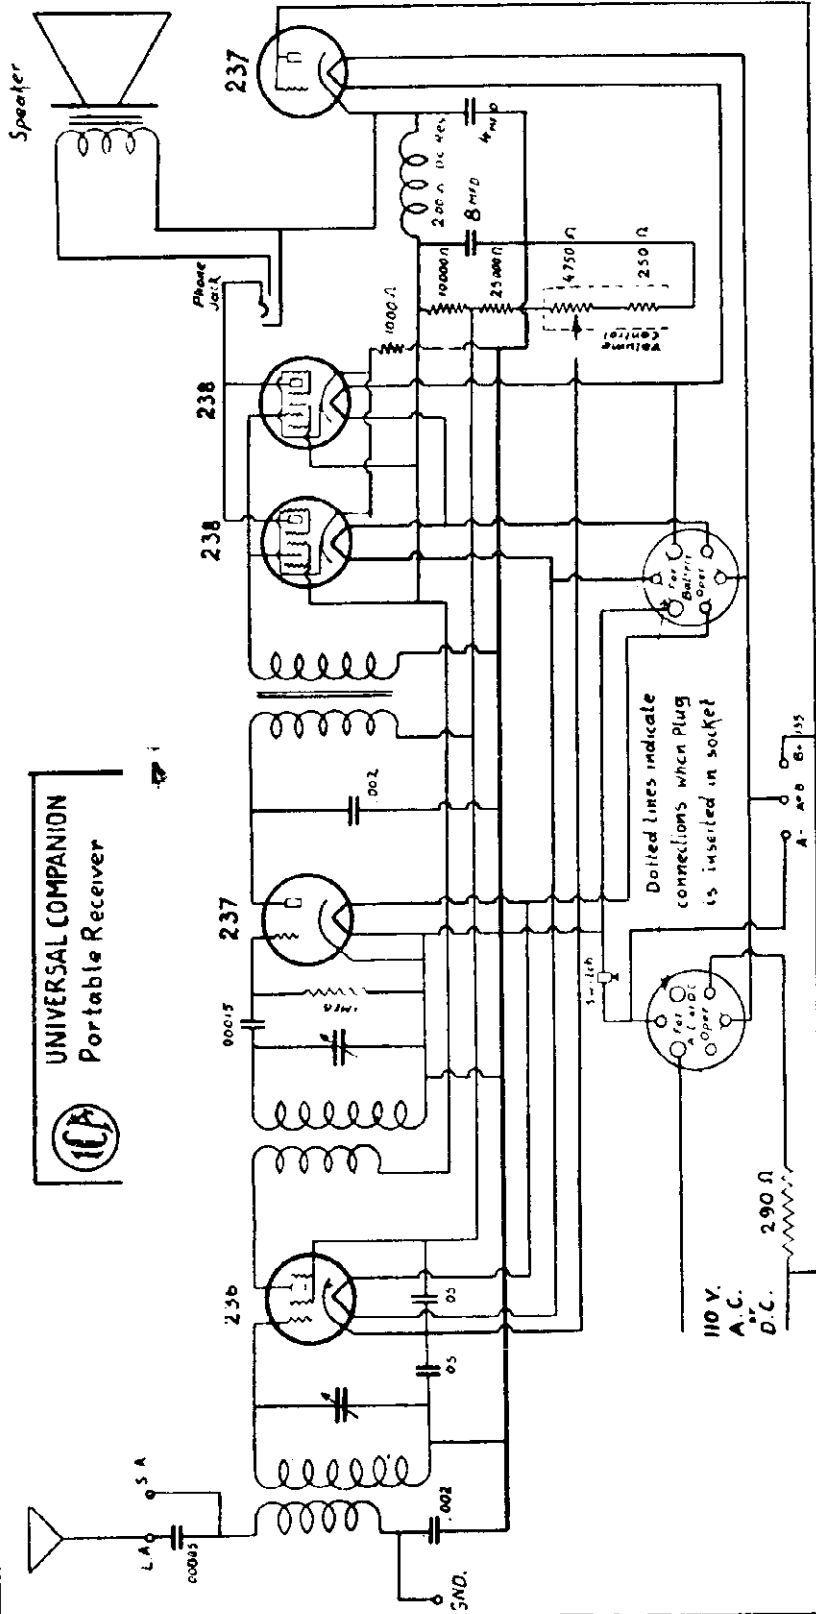


- #3 300-300,000 ohms
- #4 30,000 ohms
- #5 .25 mfd 200 V.
- #6 5.-5. mfd Electro.
- #7 100,000 ohms
- #8 50,000 ohms
- #9 75,000 ohms
- #10 500,000 ohms
- #11 .02 mfd 200 V
- #12 600 ohms
- #13 2000 ohms
- #14 170 ohms
- #15 .002 mfd
- #16 .1 mfd 200 V
- #17 .00035 mfd
- #19 8.-8.-4. mfd
- #20 330 ohm choke

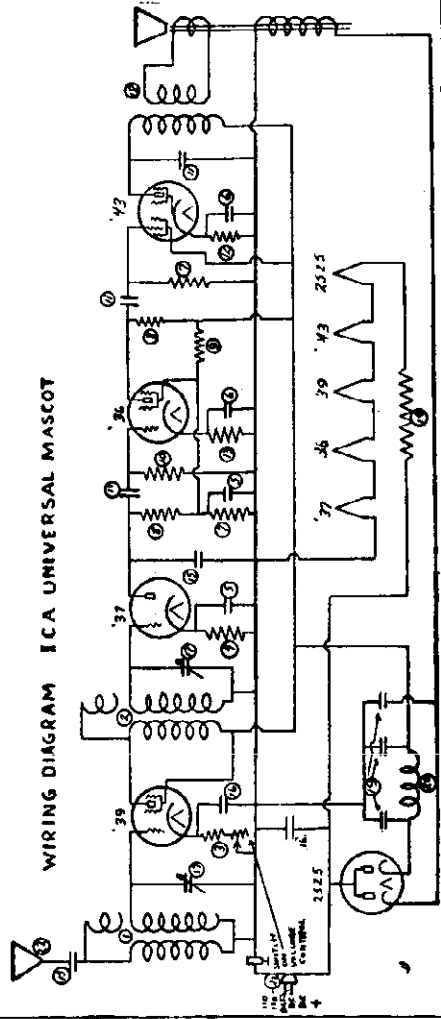

WIRING DIAGRAM ICA UNIVERSAL MASCOT

JACKSON-BELL CO., LTD.

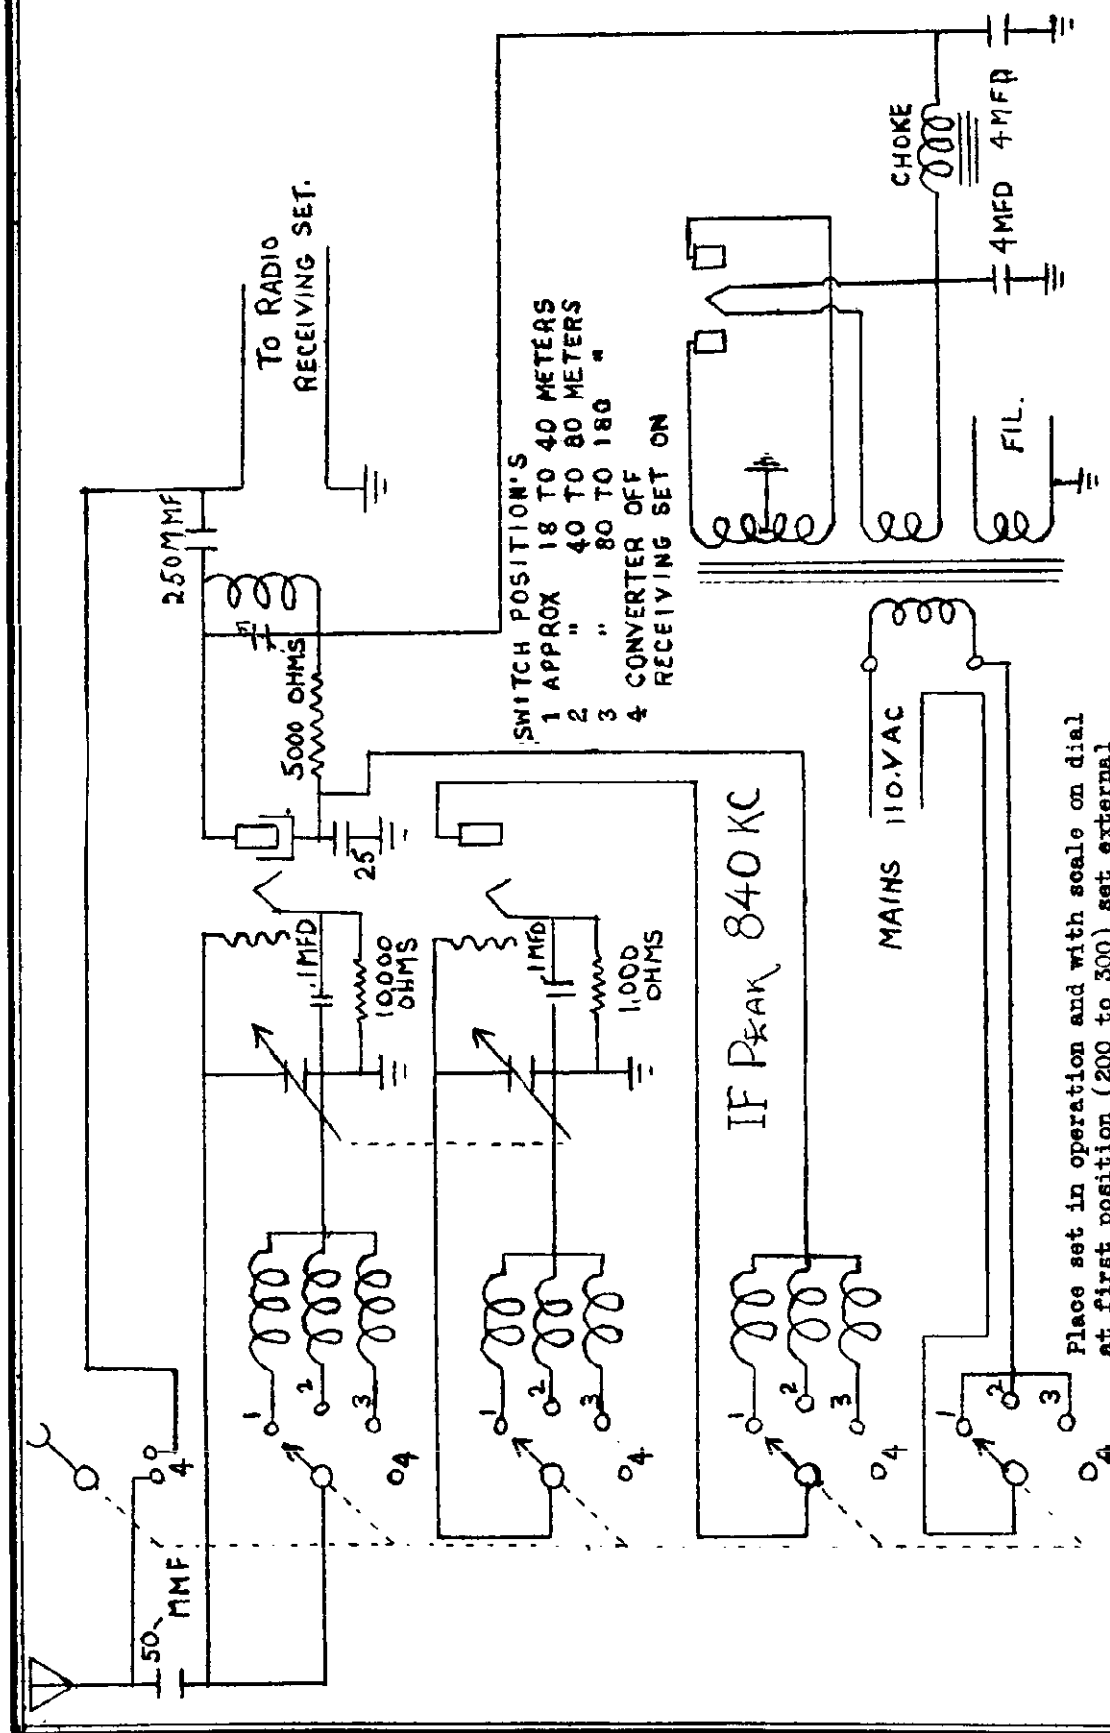



Place set in operation and with scale on dial at first position (200 to 300) set external oscillator at 1710 kc and adjust oscillator trimmer on variable condenser. The oscillator trimmer is the second section viewed from the front of the chassis. Next adjust front trimmer to resonance and maximum output.

To check the '27 oscillator tube, set the dial at approximately 35 meters. Now, reading, the screen grid voltage, touch the grid winding of the oscillator system with the finger. The screen voltage should mount 20 volts.


MODELS 38 & 40
 MODEL 22
 MODEL 36

COLIN B. KENNEDY CORP.

Tube Socket
 Diagram for
 Chassis
 Models
 Nos. 38 and 40

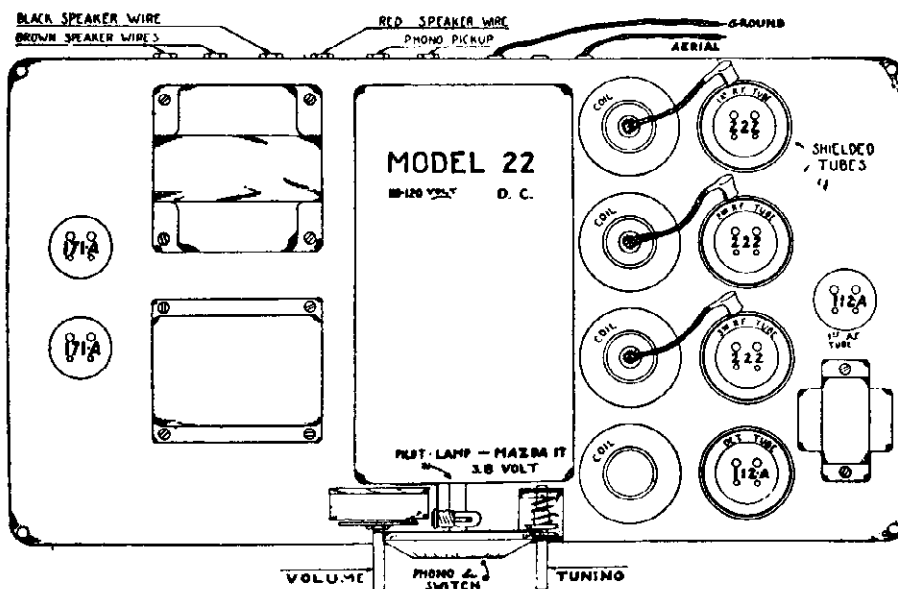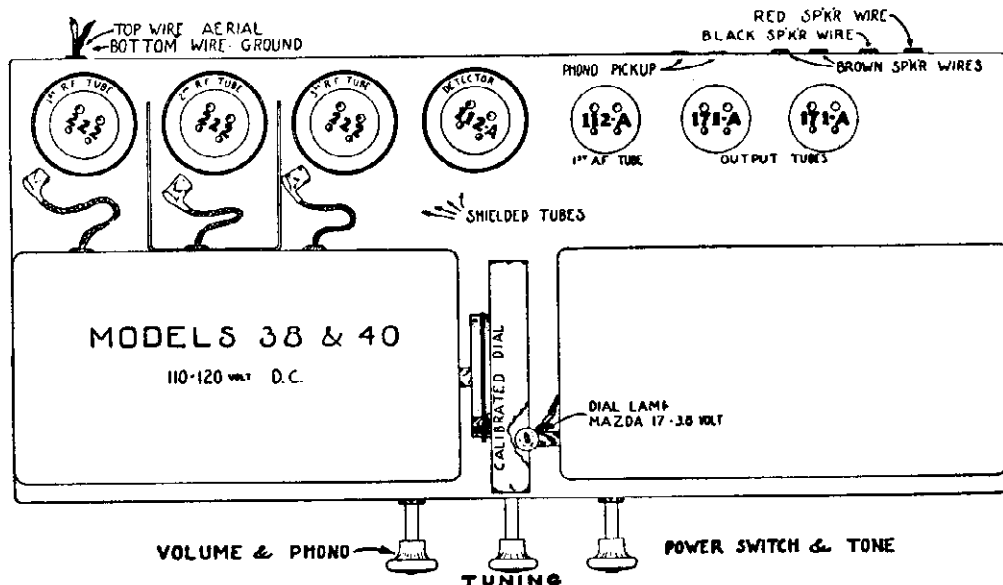


Tube Socket
 Diagram for
 Chassis
 Model No. 22

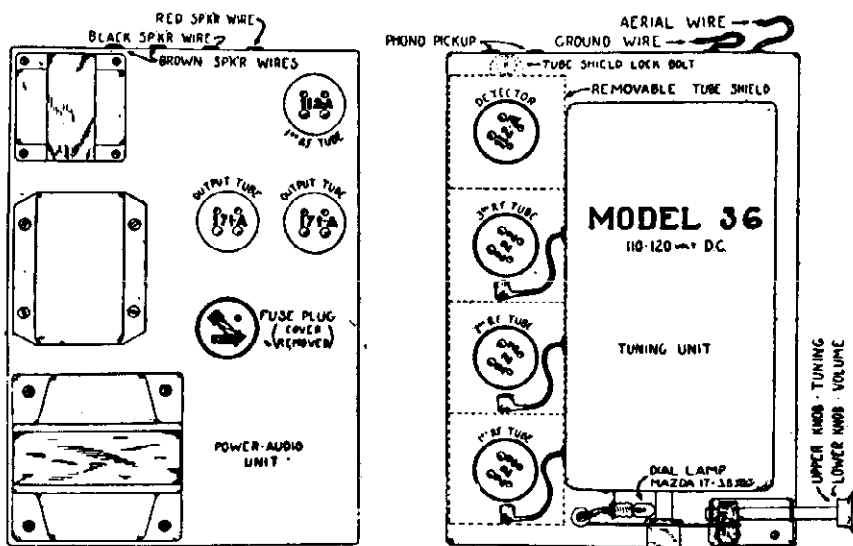

Tube Socket
 Diagram for
 Chassis
 Model No. 36

MODELS 22, 36, 38, 40
Direct Current S.G. Chassis
Schematic, Data

COLIN B. KENNEDY CORP.

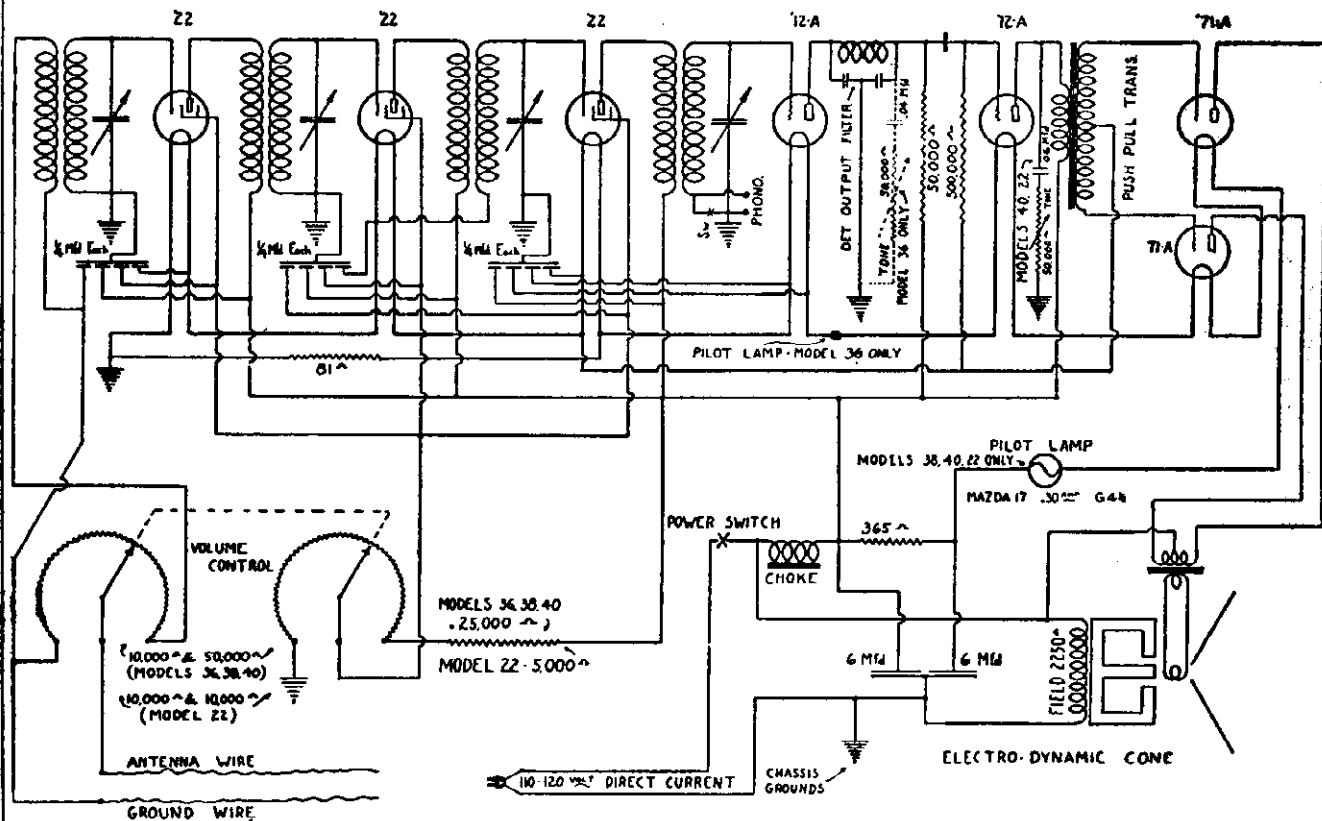

MODELS 22, 36, 38, 40, DIRECT CURRENT S.G. CHASSIS.

The majority of the parts are interchangeable with those in the corresponding A. C. model.

The standard filter choke is omitted, the power transformer being replaced by the heavy D. C. choke

It will be noted that the position of the pilot lamp differs, in the model 36, from its position in the models, 38, 40 and 22.

The position of the tone control also is different in the model 36 from the models 40 and 22.

All variations in parts are indicated on the accompanying circuit diagram.

The coils for the D. C. models differ slightly from those used in A. C. models, and are obtainable in matched sets of four.

The same dynamic speaker as used on the A. C. models is employed

The filaments of all tubes, a heavy 365 ohm vitreous resistor and the pilot lamp are all in series across the line, following the choke. An 81 ohm resistor "by passes" a portion of the current across the three audio frequency tubes as the type 222 tubes do not draw the full quarter ampere as do the 171-A and 112-A type tubes. As the pilot lamp is also in series with the tubes a bulb of the proper voltage and current draw must be used.

The mechanical layout of the D. C. models corresponds to the equivalent A. C. model in each case except for the few variations noted below.

D. C. Model	Corresponding A. C. Model
36	26
38	30
40	32
22	20B



PARTS LIST

116202	Heavy D. C. Filter Choke.....
116302	Filter Condenser (Paper, 6 mfd. and 6 mfd.)...
116158	365 ohm Vitreous Resistor.....
116405	81 ohm Wire Wound Resistor.....
116600	Set of 4 Matched D. C. Model Coils.....
116513	4-prong Single Socket marked 222.....
116515	4-prong Single Socket marked 112-A.....
116507	4-prong Single Socket marked 171-A.....
116154	Pilot Lamp 3.8 volt Mazda—17 0.30 amp. G-4 1/2
123406	Dual 10,000 ohm volume control (Model 22)....
117406	Dual 10,000 - 50,000 ohm volume control (Models 36, 38, 40).....

Parts identical with those used in the corresponding models are not listed here.

MODEL 24
Schematic, Data

COLIN B. KENNEDY CORP.

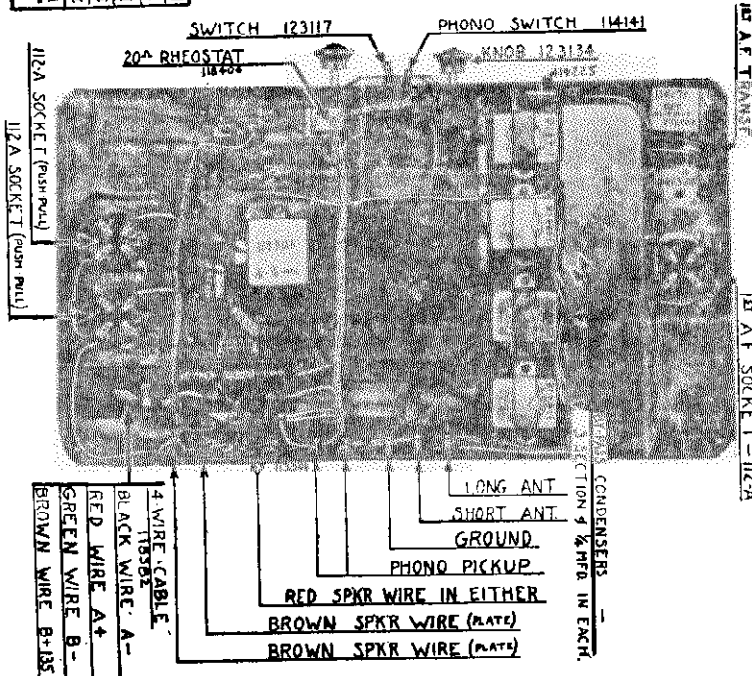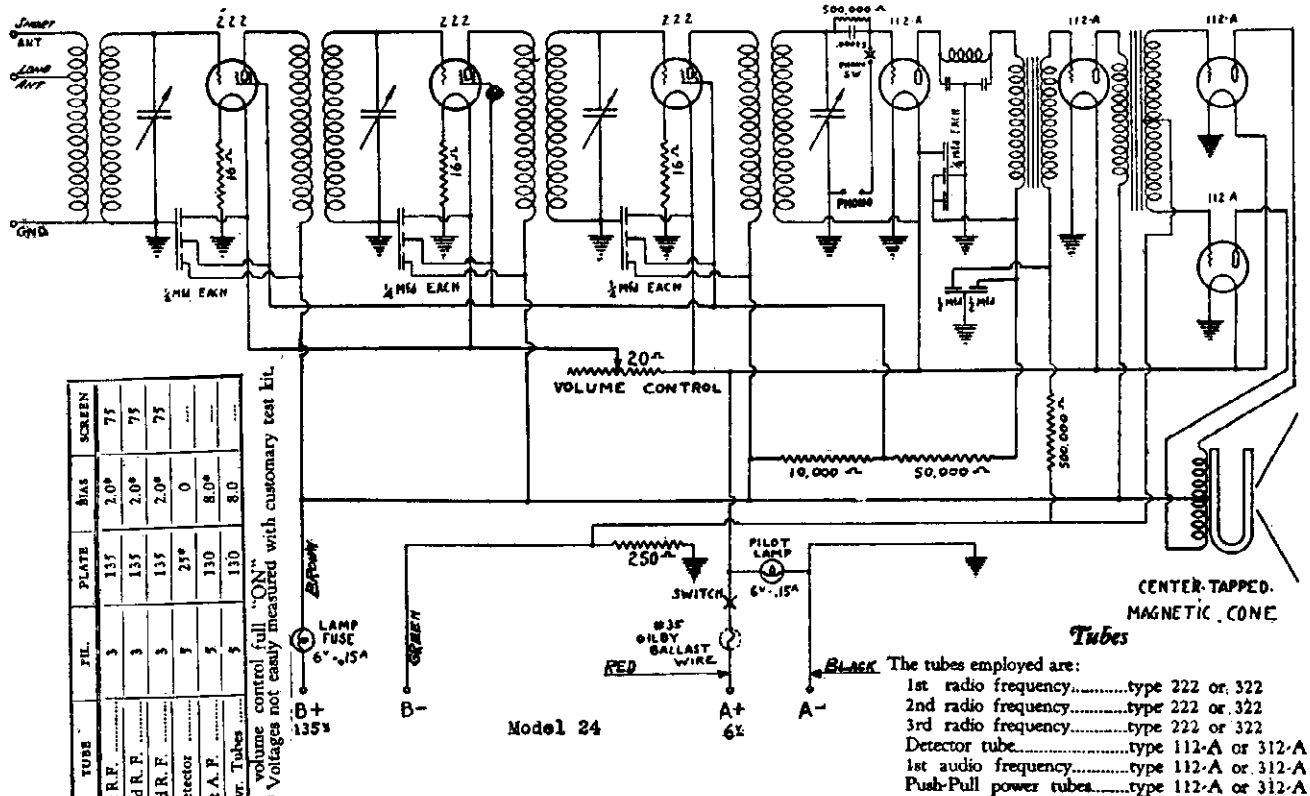

Tubes
The tubes employed are:
1st radio frequency.....type 222 or 322
2nd radio frequency.....type 222 or 322
3rd radio frequency.....type 222 or 322
Detector tube.....type 112-A or 312-A
1st audio frequency.....type 112-A or 312-A
Push-Pull power tubes.....type 112-A or 312-A

General Information:
THE KENNEDY Battery Operated Chassis Model 24 is constructed on a base similar to the Kennedy Models 20 and 22 (A.C. and D.C. line models). A great many of the component parts of the battery operated chassis are interchangeable with those of the corresponding A.C. and D.C. line models, 20 and 22.
If set oscillates over entire dial range, it is possible that the detector output filter is defective, and a new one may be tried.
The wires at the tops of the coil shield (no control grids) may have been pulled sufficiently to bond coil legs and perils more than 3/8 inches of wire (from shield to start of clip) to be exposed. Extra length here tends to cause an unstable receiver.
If receiver oscillates at just a small spot or two of dial range, it may frequently be corrected by pushing a piece of solid, bare copper wire between the rubber grommet and coil shield (barely through) of the second R. F. coil shield, and twisting a few turns around the wire leading to the control grid of the 2nd R. F. tube.

Resistors
The resistance values of the various colored resistors employed are:
10,000 ohms.....Grey
50,000 ohms.....Yellow
500,000 ohms.....Brown



Fuses and Ballasts
Under a cover-plate near the battery cable will be found a pilot lamp bulb and a piece of small wire held by two posts. This bulb is used as a fuse in the "B" battery circuit and is identical with the pilot lamp—both being Mazda No. 40 (6 volt, 0.15 amp). The fuse lamp does not light up when set is operating, and, it should do so it is an indication of trouble elsewhere in the receiver.
The small wire held by the two posts is a fuse and ballast in the storage battery circuit. In addition to its function as a fuse it serves to compensate for variations in the voltage of the storage battery. Extra pieces of this wire are provided with the set, and it is IMPORTANT that no other wire be used. This wire is No. 34 B. & S. gauge Glibby ballast wire. If other wire is used there is danger of injury to the tubes.

In the event it becomes necessary to change a coil it is extremely desirable to change all four coils for a new set of four matched and impregnated coils that are designed to work together.
Tests for resonance, or matching of the tuned circuits, are accomplished with an oscillator—connections to the resonant circuits being made from ground to grid terminals of the R. F. sockets for the R. F. coils and from A+ terminal of detector socket to end of grid lead or grid condenser furthest from detector socket grid terminal for the detector coil.

Batteries
The model 24 receiver requires one six volt storage "A" battery and one 135 volt "B" battery (or three 45 volt "B" batteries). No "C" batteries are required as all bias voltages are obtained automatically within the receiver.
The storage battery drain is exceptionally low for this type of receiver, being approximately 1.37 amperes.

COLIN B. KENNEDY CORP.

MODEL 50
Schematic
Chassis
Alignment Data

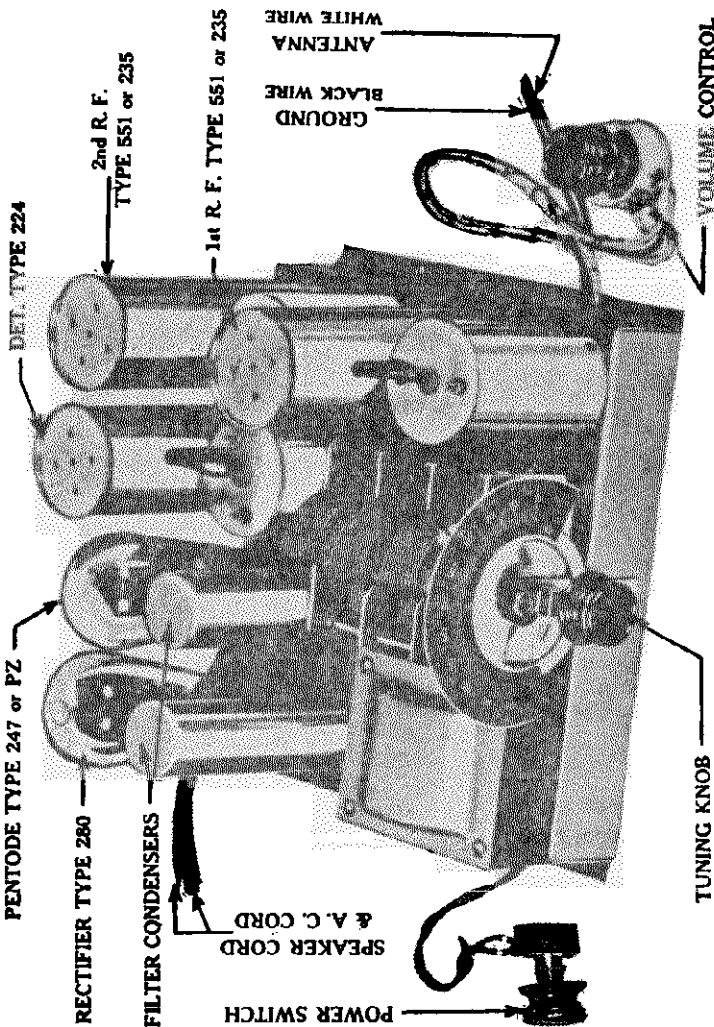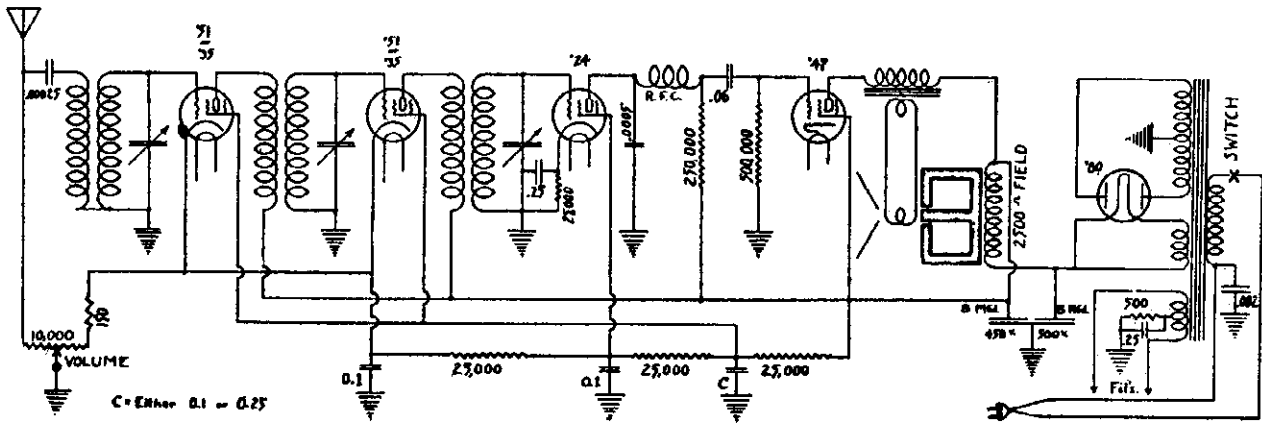

Coils
11759 Coils, set of 3 matched, shielded.....

Condensers
13417 Condenser, 1/4, 1/4 and 1/4 mfd., 300-volt..
15417 Condenser, 1/4 and 1/4 mfd., 200-volt..
13306 Condenser, 0.1 mfd. tubular 200-volt..
13226 Condenser, 0.06 mfd. tubular 200-volt..
11A473 Condenser, .0005 Mica ..
113306 Condenser, .002 Mica ..
113305 Condenser, .00025 Mica ..
15302 Condenser, 8.0 mfd. filter, 500-volt..
16302 Condenser, 8.0 mfd. filter, 450-volt..
13301 Condenser, three-gang, tuning ..

Resistors
114225 Resistor, 500,000-ohm graphite.....
114224 Resistor, 50,000-ohm graphite.....
117366 Resistor, 25,000-ohm graphite.....
114173 Resistor, 10,000-ohm graphite.....
114215 Resistor, 5,000-ohm graphite.....
12158 Resistor, 500-ohm vitreous.....
16406 Resistor, 10,000-ohm variable with 150-ohm fixed ..

Alignment

Alignment of the tuned circuits is made in the conventional manner. An oscillator covering the broadcast band and an output meter or indicator will be found helpful and will speed up the procedure.


The three circuits are first aligned at, or near, the 1,500 K. C. end of the dial. The first condenser section has a "trimmer" condenser which may be adjusted. The other two sections may be adjusted by bending the proper segments of the slotted rotor end plates. A check at four or five positions across the dial range is usually ample.

Tube	Type	Fil.	A.C. Plate	Screen	Bias
1st R.F.	551	2.3	250	175	2.5 to 39
2nd R.F.	551	2.3	250	175	2.5 to 39
Detector	224	2.3	155	4
Power Tube	247	2.3	235	235	16
Rectifier	280	4.8	340-340

Line voltage = 115 Volume full on

MODEL 52
Schematic
Alignment Data

COLIN B. KENNEDY CORP.

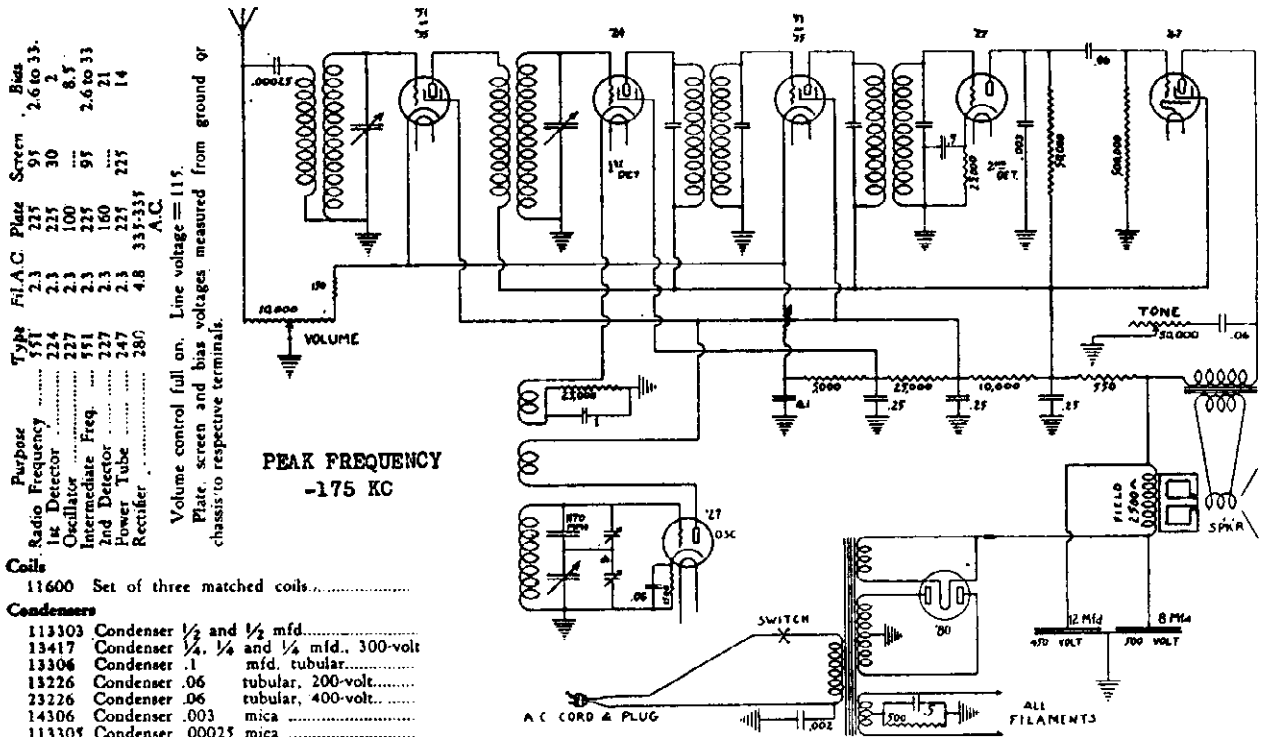


Purpose	Type	FIAC	Plate	Screen	Bias
Radio Frequency	5F1	2.3	225	95	2.6 to 3.3
1st Detector	224	2.3	225	30	2
Oscillator	227	2.3	100	...	8.5
Intermediate Freq.	5F1	2.3	225	95	2.6 to 3.3
2nd Detector	227	2.3	150	...	21
Power Tube	247	2.3	225	225	14
Rectifier	285	4.8	337-235

Volume control full on. Line voltage = 115.
 Plate, screen and bias voltages measured from ground or chassis to respective terminals.

PEAK FREQUENCY
-175 KC

- Coils**
 11600 Set of three matched coils.....
- Condensers**
 113303 Condenser 1/2 and 1/2 mfd.....
 13417 Condenser 1/4, 1/4 and 1/4 mfd., 300-volt.....
 13304 Condenser .1 mfd. tubular.....
 13226 Condenser .06 tubular, 200-volt.....
 23226 Condenser .06 tubular, 400-volt.....
 14306 Condenser .003 mica.....
 113305 Condenser .00025 mica.....
 16302 Condenser 8 mfd., 500-volt.....
 17302 Condenser 12 mfd., 430-volt.....
- Resistors**
 114225 Resistor 500,000-ohm graphite.....
 11F225 Resistor 250,000-ohm graphite.....
 114224 Resistor 50,000-ohm graphite.....
 117366 Resistor 25,000-ohm graphite.....
 114173 Resistor 10,000-ohm graphite.....
 114217 Resistor 5,000-ohm graphite.....
 114175 Resistor 1,500-ohm graphite.....
 12158 Resistor 500-ohm vitreous.....
 16406 Resistor 10,000-ohm variable and 150-ohm fixed, volume.....
 15369 Resistor 50,000-ohm variable with power switch.....

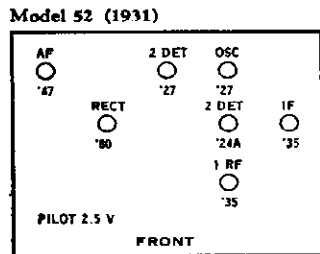

TECHNICAL DATA - MODELS 52 AND 56

ALIGNMENT:-Use an output meter and 175 KC oscillator for aligning the IF transformers. Remove grid clip of first detector tube and fasten a short length of wire to the grid terminal of the tube. Place the oscillator in the vicinity of this wire. Adjust trimmers in tops of IF transformer shields for maximum output meter reading. For adjusting the tuning condenser, an oscillator covering the broadcast band should be used. In this case place the oscillator near the antenna of the receiver. The receiver and oscillator are first tuned to 1500 KC and the condenser trimmers adjusted for maximum output. Do the same thing at 550 KC. It is desirable to move the dial back and forth in making the above adjustments, particularly so when altering any capacities connected with the oscillator circuit.

MICROPHONICS:-This is occasioned by mechanical vibration of the oscillator tuning condenser plates. A particularly microphonic tube may also cause it. See that the tuning condenser is floating on the rubber and that the cabinet is not binding on the dial drive shaft. Oscillation is not paramount in this receiver but an effect similar to this may be encountered at spots on the dial if the IF transformers are not set at their proper setting of 175 KC. Too much RF energy reaching the speaker leads produces a similar effect, overcome by twisting the ground and plate wires together in the speaker cable. This is done before the other two speaker leads are tied along with them.

MODEL 53-SW
 MODEL 54-SW
 Parts List
 Data

COLIN B. KENNEDY CORP.

THE KENNEDY Model 53 short wave unit operates on the superheterodyne principle, and is commonly called a converter or adapter.

When switched to long wave position the power is shut off from the short wave unit. When switched to the short wave position the power is turned on, and after the tubes warm up the unit is ready to operate.

In factory assembled combinations the short wave unit is already properly connected to the broadcast receiver. It is always advisable to check over this wiring, however, and see that all connections are properly and securely made.

The three wires from the rear-center of the unit are to be connected as follows:

BLACK The black wire is to be connected to the ground post of the long wave receiver. The actual ground wire is attached to the GND post of the short wave unit and left there permanently.

WHITE: The white wire is to be connected to the antenna post of the long wave receiver. The actual antenna, or aerial, is attached to the ANT post of the short wave unit and left there permanently.

RED: The red wire is to be attached to a source of "B" voltage—either at the long wave chassis or speaker. Any voltage of from 150 to 250 volts is suitable. It should be obtained from some point in the long wave receiver chassis, speaker or filter system, where it will receive fairly good filtering and be relatively free from A. C. hum.

IMPORTANT. As the output of the short wave unit is tuned to a definite frequency it is necessary to set the dial of the long wave receiver at this frequency, and leave it there while tuning for short wave stations. It is important that the long wave dial be set exactly at the output frequency of the short wave unit.

This point is approximately 1,000 kilocycles.

If for any reason the output frequency of the short wave unit has shifted it may be retuned as follows. Set long wave dial at 1,000 kilocycles or at mark. Tune in short wave signals. Tune output by means of adjustment screw, until signal is loudest. Use a bakelite screw driver. The output adjusting screw is at right hand end of short wave chassis, facing the rear.

In the event a strong local station at or near 1,000 kilocycles interferes with short wave reception, the long wave dial may be moved slightly to right or left of 1,000 kilocycle mark, and the output retuned, as above, to ob-

tain greatest short wave output at this newly selected frequency. Move long wave dial off 1,000 K. C. only a few kilocycles at a time, returning the short wave output each time, until the interference is eliminated.

Should the short wave output adjustment be far out of tune, a simple method of resetting is to feed the output of a laboratory or service man's oscillator (tuned to 1,000 K. C.) into the grid of the 224 tube of the short wave unit (while operating) and with long wave receiver also set at 1,000 K. C. (previously set by means of same oscillator, for accuracy). The short wave output adjustment screw may now be turned until maximum oscillator signal is heard, or an output meter, on long wave set, indicate maximum.

PARTS LIST
 MODELS 53 & 54-A





1-4-450	Coil, oscillator; with leads.....	\$.75
1-6-301	Condenser, oscillator tuning, 200 Mmf.....	3.25
1-3-226	Condenser, tubular, 0.06 mfd.....	.30
1-4-462	Condenser, output adjust, 10-70 Mmf.....	.50
1-1-A474	Condenser, mica, 100 Mmf.....	.30
1-1-3154	Dial lamp, 2½ volt.....	.30
1-2-7134	Knob, large, wood.....	.20
2-2-7134	Knob, small, wood.....	.18
1-1-F531	Post, ant.....	.10
1-1-F530	Post, gnd.....	.10
1-2-F529	Post, bakelite insulating strip.....	.05
1-1-F550	Post, insulating washer.....	.01
2-1-4173	Resistor, 1 watt, 10,000 ohm.....	.25
1-1-4173	Resistor, graphite, 10,000 ohm.....	.25
1-1-7366	Resistor, graphite, 25,000 ohm.....	.25
1-1-4224	Resistor, graphite, 50,000 ohm.....	.25
1-2-172	Resistor, 400 ohm.....	.25
1-7-103	Shield, output coil, with bolts.....	1.15
2-3-514	Socket, 224.....	.18
2-4-515	Socket, 227.....	.18
1-8-201	Transformer, 60 cycle.....	2.00
2-8-201	Transformer, 25 cycle.....	3.30

ADDITIONAL PARTS
 MODEL 53

1-2-253	Coil, output.....	1.00
1-6-122	Dial, complete, with scale.....	1.00
1-3-468	Switch, 3 point, tap.....	.50
1-3-471	Switch, A C, and LW-SW.....	.65





COLIN B. KENNEDY CORP.

MODEL 53-SW
 MODEL 54-SW
 Schematic, Chassis
 Calibration Scales

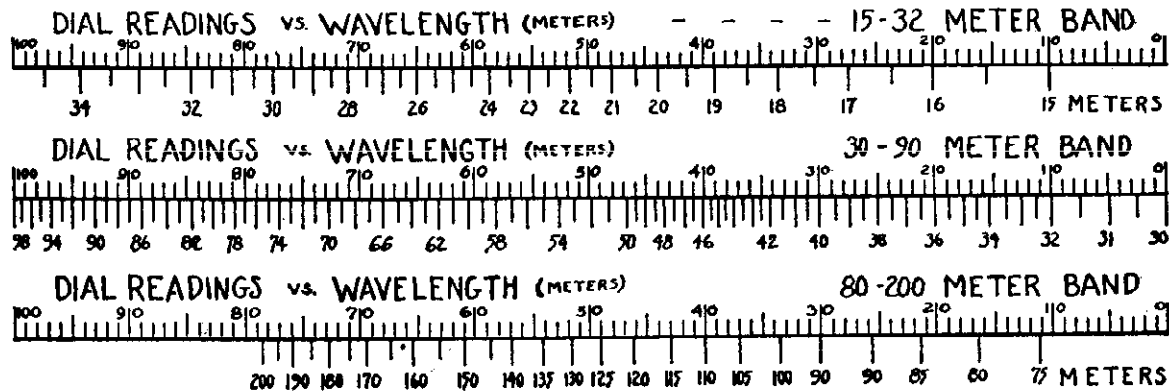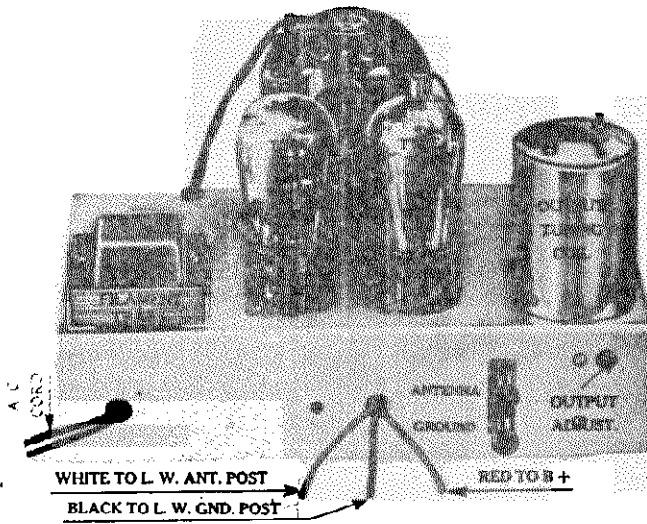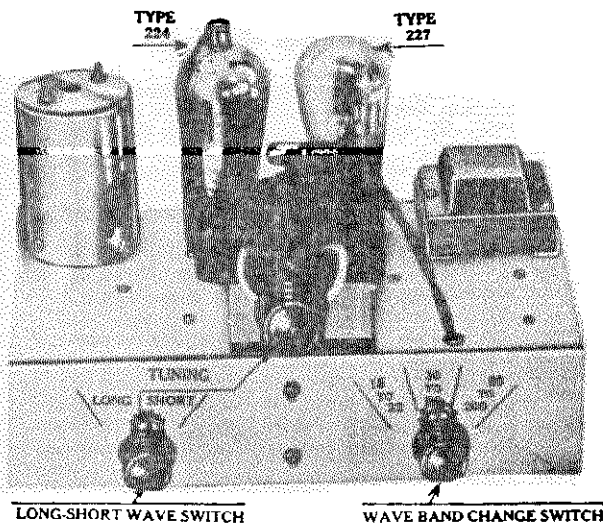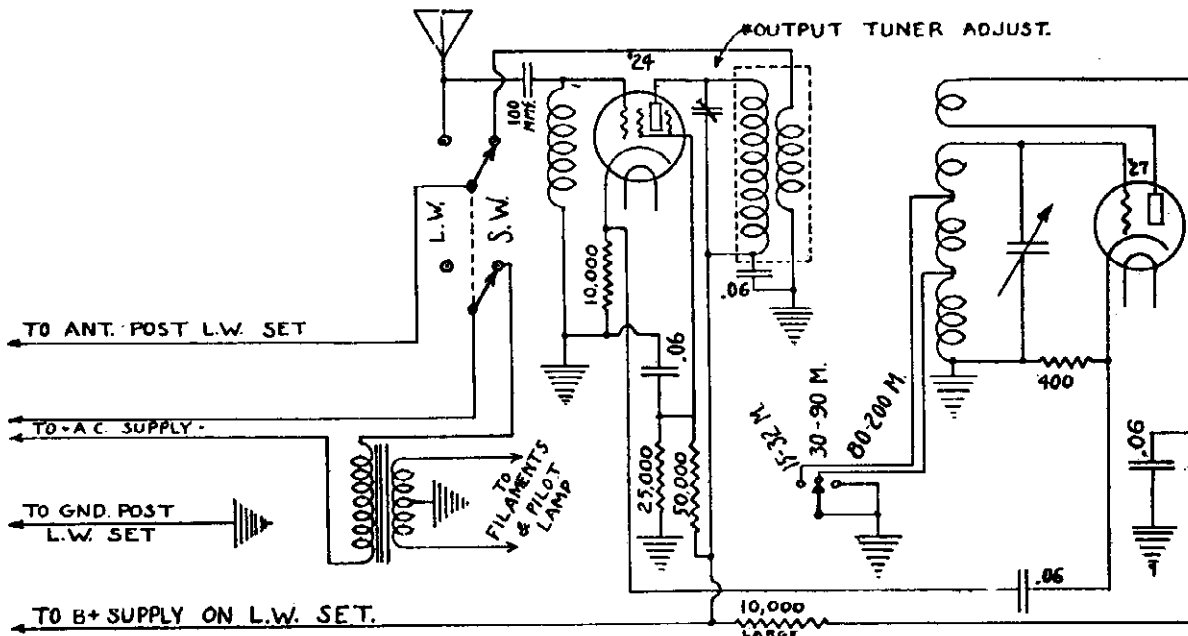

MODEL 54 "Globe Trotter"
Schematic, Chassis
Data

COLIN B. KENNEDY CORP.

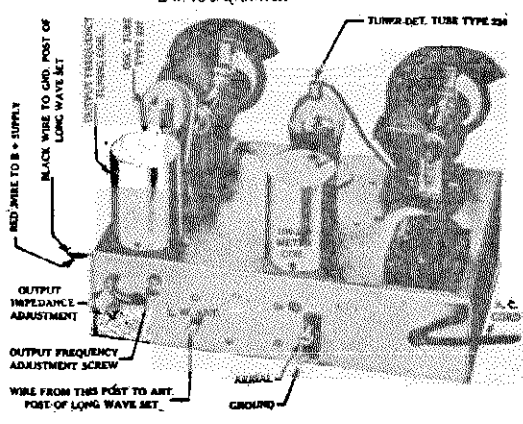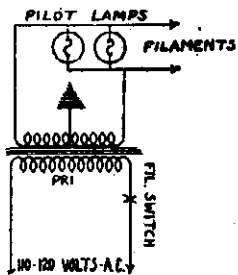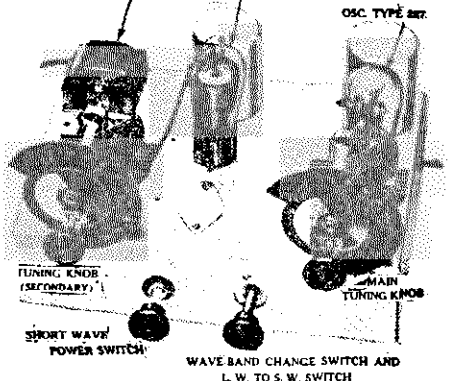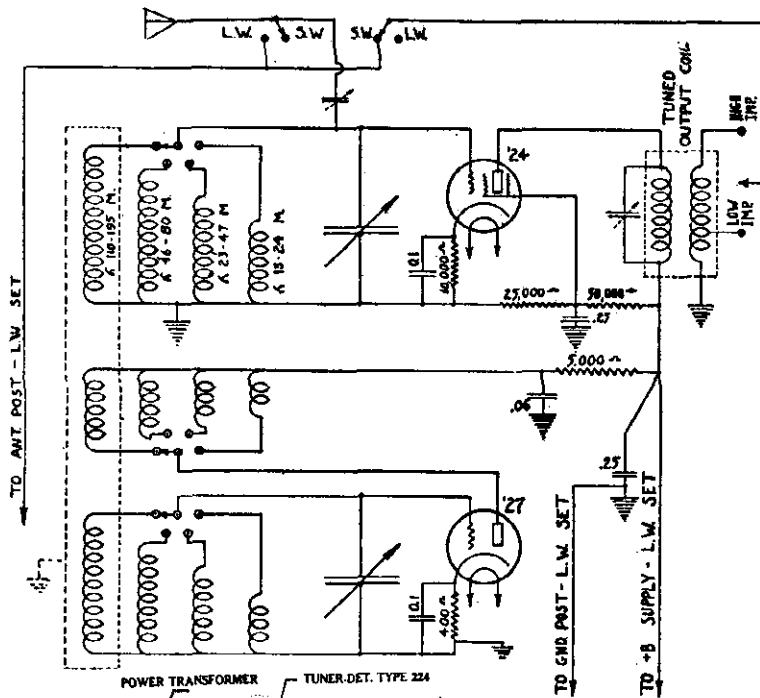

When testing the short wave unit at the factory, it is adjusted for use with an average antenna. Improved results may sometimes be obtained by re-adjusting to the antenna actually used. The procedure for this adjustment is as follows:

Almost exactly in the center of the back of the short wave unit is an adjustment screw which can be operated through a hole provided for it. This screw should be turned with a bakelite screw driver, which most service men carry. A metal screw driver will disturb the adjustment.

Set the switch on the position marked "15-25 meters"—tune in a station (music or code) at about 50 on the right-hand dial. Then adjust the screw described above, until the left-hand dial also reads approximately 50 when properly tuned in. This adjustment then holds for all wave bands.

The BLACK wire is connected to the "ground" binding post of the long wave set. The RED wire is connected to the negative side of the speaker field coil (dynamic speaker), to the speaker wire or connection carrying a filtered "B" voltage supply, or, inside the chassis, to the positive end of the voltage divider resistor.

If difficulty is had in getting the unit to operate when initially hooked up, and the "B" source is suspected, 90 to 135 volts of "B" batteries may temporarily be tried. The red wire goes to the "B" +, the black wire to the long wave receiver ground post as before, and the "B" - to the same ground post.

Any source of "B" voltage from 150 to 250-volts is suitable. It should be obtained from some point in the long wave receiver speaker or filter system, where it will receive fairly good filtering and be relatively free from hum. A lower voltage, well filtered, is more to be desired than a higher voltage with a large proportion of A.C. modulation.

Obtaining this plate supply is very simple on many receivers, such as the Kennedy models 210, 310, 220, 320, 1030, 632, 426, 526, 726, and 826. In these cases the B supply may be taken from the tip-jack terminating the black speaker wire. In Kennedy models 42, 50 and 52 it may be obtained at the speaker terminal panel from the side of the field winding which is common with the speaker transformer primary.


The output of the short wave unit is tuned. It is set, at the factory, to tune to approximately 1525 kilocycles. Naturally, the long wave receiver dial must be set at this point for short wave reception, and left there.

In the event the long wave receiver will not tune past 1500 kilocycles, or a strong local broadcast station interferes at that point, the output frequency tuning may be altered slightly to avoid the difficulty. An adjusting screw for this tuning may be reached through a hole in the rear of the chassis. It is located near the impedance adjusting wire and binding posts, and is to be adjusted with a bakelite screw driver, as a metal tool will upset the adjustment.

It will be noted, facing the rear of the chassis, that on the left hand side a wire has been brought out which may be connected to either one of two small binding posts near the end of the base. The purpose of this is to adjust the output impedance of the unit to that of the antenna input circuit of the receiver it is to be used with. The Kennedy models named above have high impedance antenna circuits and therefore require this wire to be on the upper binding post. In doubtful cases this wire may be tried first on one and then on the other, with unit operating, and permanently left where best results are obtained. These connections are indicated on the accompanying illustration.

COLIN B. KENNEDY CORP.

MODEL 54-A
Schematic, Chassis
Data

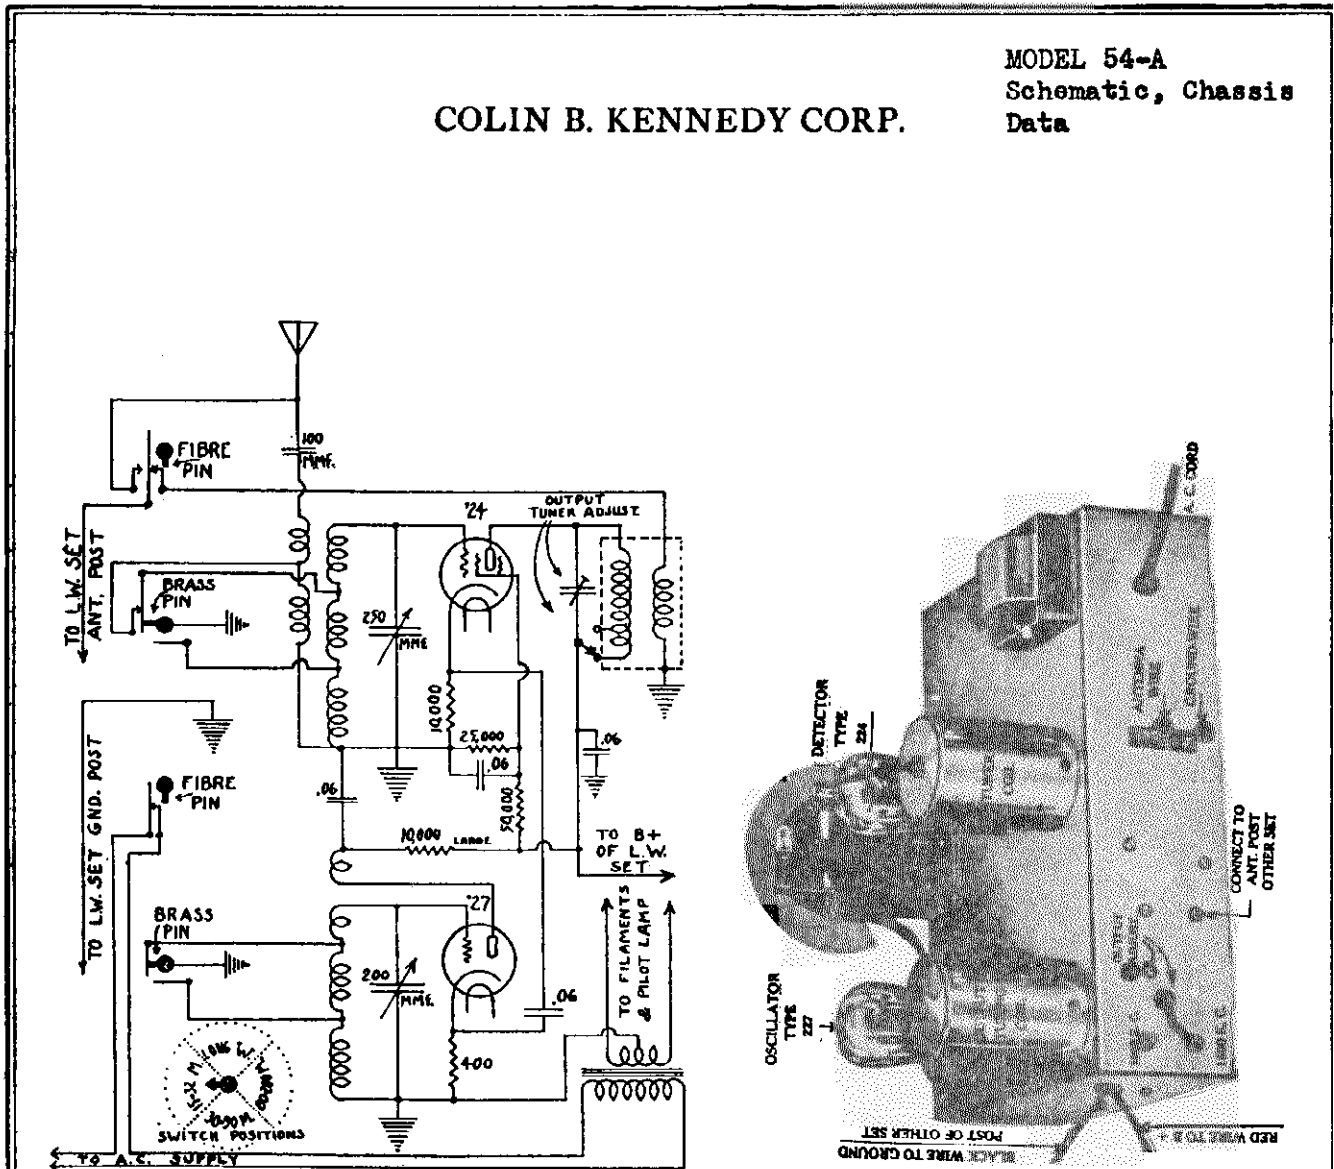

THE KENNEDY Model 54-A short wave unit operates on the superheterodyne principle, and is commonly called a converter or adapter.

A four-position rotary cam switch changes all connections to any one of three short wave band circuits or to long wave position. This switch makes the proper power and antenna connections, turning off the short wave unit and connecting the antenna directly to the broadcast receiver when in the long wave position. When switched to any one of the short wave bands, the tubes of the short wave unit are supplied with power, and antenna and output connections are made. The short wave unit is, naturally, not used for long wave broadcast reception.

In factory assembled combinations the short wave unit is already properly connected to the broadcast receiver. It is always advisable to check over this wiring, however, and see that all connections are properly and securely made.

The two wires from the left side (facing rear) are to be connected as follows:

BLACK: The black wire is to be connected to the ground post of the long wave receiver. The actual ground wire attached to the GND post of the short wave unit and left there permanently.


RED: The red wire is to be attached to a source of "B" voltage—either at the long wave chassis or speaker. Any voltage of from 150 to 250 volts is suitable. It should be obtained from some point in the long wave receiver chassis, speaker or filter system, where it will receive fairly good filtering and be relatively free from A. C. hum.

A wire, as short as practical, must be connected from the binding post at left-center (facing rear) of unit to the antenna post of the broadcast chassis. The actual antenna, or aerial, is attached to the ANT post of the short wave unit and left there permanently.

For Calibration Scale refer to Model 53-SW


MODEL 56
Schematic
Voltage

COLIN B. KENNEDY CORP.

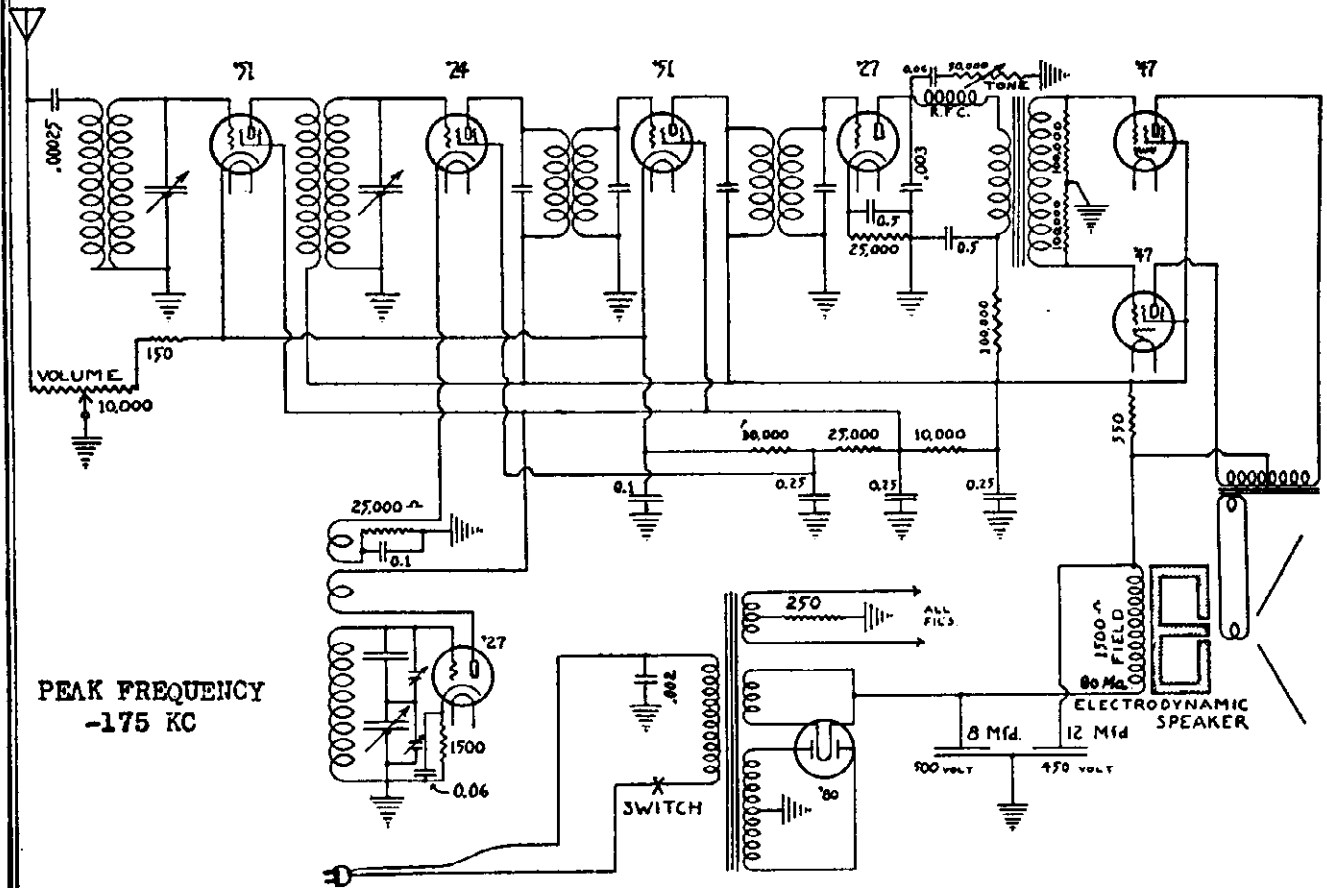

PEAK FREQUENCY
-175 KC

Model 56 (1931)

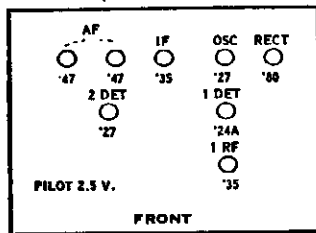

Purpose	Type	Fil	A C	Plate	Screen	Bias
Radio Frequency	551	2.35	208	98	3 to 30	
1st Detector	224	2.35	208	30	5	
Oscillator	227	2.35	90	10	3 to 30	
Intermediate Freq.	551	2.35	208	98	16	
2nd Detector	227	2.35	120	208	14	
Power Tubes	247	2.35	220	208		
Rectifier	280	4.90				

Volume control full on except for R. F. and I. F. bias extremes. Line voltage 115
Plate, screen and bias voltages measured from ground or chassis to respective terminals.

Resistors

- 117366 Resistor 25,000-ohm graphite
- 114173 Resistor 10,000-ohm graphite
- 114175 Resistor 1,500-ohm graphite
- 12158 Resistor 500-ohm vitreous
- 26406 Resistor 10,000-ohm variable and 150 ohm fixed, volume, with switch.
- 25369 Resistor 50,000-ohm variable

Coils

- 11610 Set of three matched coils



Condensers

- 113303 Condenser 1/2 and 1/2 mfd.
- 13417 Condenser 1/4, 1/4 and 1/4 mfd., 300-volt
- 13306 Condenser .1 mfd tubular
- 13226 Condenser .06 tubular 200-volt
- 14306 Condenser .003 mica
- 113305 Condenser .00025 mica
- 16302 Condenser 8 mfd. 500-volt
- 17302 Condenser 12 mfd 430-volt

For Technical Data refer to Model 52

MODEL 62
Chassis
Alignment Data

COLIN B. KENNEDY CORP.

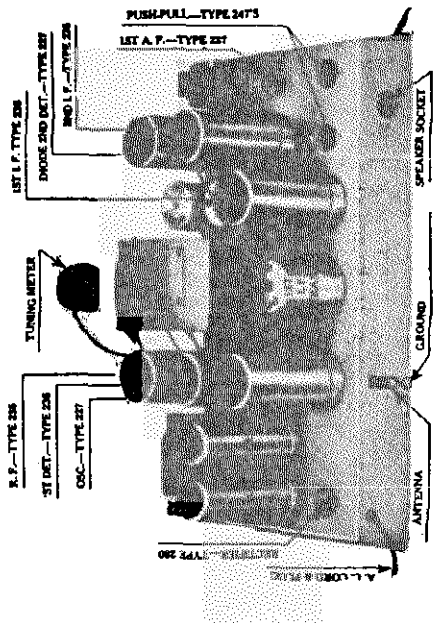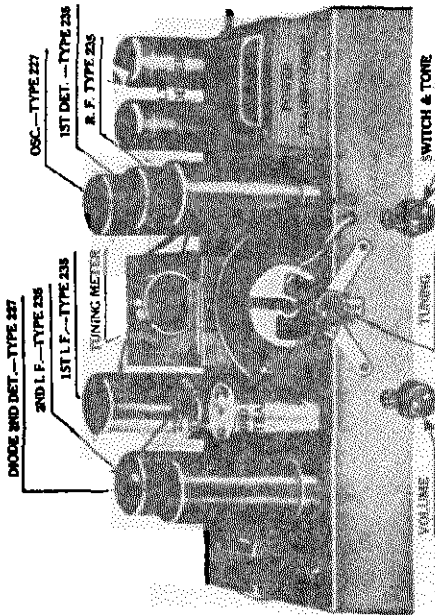

Alignment

Before aligning or testing alignment of tuned circuits, it is desirable to "short out" the automatic volume control action. This is done by grounding the grid return wire of the first three tubes at some point between the 10,000 ohm and 100,000 ohm grid return filter resistors. It will be noted that the low ends of the detector coil and 1st I. F. coil secondaries are connected to this wire. The antenna coil is also connected, but through a 10,000 ohm filtering resistor.

In aligning, it is first desirable to see that the intermediate frequency transformers are properly set. This is most readily accomplished by using an output meter and an accurate source of 175 kilocycle radio frequency, such as an oscillator. The accuracy of this oscillator may be checked by tuning a radio set to a station on 700 kilocycles and placing the oscillator near the antenna. A harmonic of the 175 kilocycle oscillator will "zero beat" with the station if the oscillator is correct. Other "harmonic" points may also be tried.

Remove the grid clip from the top of the first detector tube and fasten a short length of wire to the grid terminal of this tube. Lay this wire sufficiently near the 175 K. C. oscillator to note the energy from it in the output meter. With the oscillator set on exactly 175 K. C., adjust the trimmers in the tops of the I. F. transformer shields for maximum reading of the output meter. If the meter tends to read "off scale," move oscillator farther from set and wire, thereby reducing input energy. If these I. F. transformers are badly out of alignment, it may be necessary to place the "pick up" wire on the grid of the 1st I. F. tube and adjust the second transformer alone, at first, then moving wire to detector grid and proceed as above. It will be noted that the 2nd and 3rd I. F. transformers have but one adjustment, while the first has two.

The tuning condenser may be adjusted for alignment or "tracking" of the tuned circuits by a similar method

except that an oscillator covering the unusual band should be used. The output meter is used as before. The energy from the oscillator, in this case, is coupled weakly into the antenna circuit—a simple means being to place the oscillator near the antenna wire.

The receiver and oscillator are first tuned to approximately 1,500 kilocycles, and by watching the output indicator, the three condenser trimmers (reached through three holes in top-right of condenser shield, or, in some cases, through removable plate) are adjusted for maximum output. These three trimmers must then be left untouched for all further aligning.

The next step is to tune both receiver and oscillator to some point near 570 kilocycles. Here, the alignment is made by adjusting the "padding" condenser (through hole in rear of condenser shield) for maximum response. If necessary to adjust the two R. F. condenser sections, it may be accomplished by bending the condenser end plates. If found necessary to align at other than the ends of the "band," it may be done by bending the slotted end plate of the condenser rotors. Alignment of the two ends of the scale is usually quite sufficient.

IMPORTANT: It is desirable to move the dial back and forth across the signal while making the above alignments. This is particularly necessary when altering any capacities connected with the oscillator circuit. An insulated or bakelite screw driver (containing little, if any, metal) is advised for use in adjusting "trimmer" or "padding" condensers.

Circuit correction. The bias for the oscillator tube, on later models, will be found to be obtained from the 1st detector cathode resistor instead of the 1,500 ohm self bias resistor as indicated. In this case, the 1st detector bias resistor has been changed from 3,000 ohms, as shown, to 1,000 ohms. The self bias resistor of the 2nd I. F. tube will be found changed to 3,000 ohms.

The automatic volume control functions with the diode second detector. The rectified radio frequency flows from the grid and plate (which are joined) to cathode and ground. It returns through the manual volume control and the two 100,000 ohm resistors to the secondary of the last I. F. transformer, and back to the plate and grid, completing the rectifying circuit. No current flows in this circuit until a carrier wave is tuned in. With no current flowing, the bias for the R. F. and 1st I. F. tubes is obtained in the 300 ohm resistor in series with their two cathodes. The biases of the 1st detector and 2nd I. F. tubes are obtained by individual cathode resistors. When current flows in the diode circuit, points along the resistance path from volume control ground to secondary coil are successively more and more negative with respect to ground due to the drop in these resistors. They are naturally more negative when more current flows in this circuit. Advantage is taken of this to provide almost perfect automatic bias control for the first three tubes by returning the grid circuits of these tubes to a determined point on these resistors. Thus, the negative voltage developed by the diode circuit is added to the fixed bias already provided for these tubes. Stronger signals increase this added bias; weaker signals reduce the added bias; and the result in the over-all response is uniformity of volume level. As the volume control is rotated toward minimum or "OFF," more resistance is added to the automatic circuit, increasing its action, and at the same time operates in the audio system by tending to short out the signal to the first audio tube grid.

In all other respects, the circuit is entirely conventional, and may be tested in the regular ways with standard equipment.


Continuity of circuit and coils may be tested with a battery, meter and pair of test leads. If necessary to replace a coil, it is advisable to replace the entire set of three with a new correctly matched set.

COLIN B. KENNEDY CORP.

MODEL 64
Schematic

Kennedy 10 Tube Long and Short Wave Receiver

CHASSIS MODEL 64

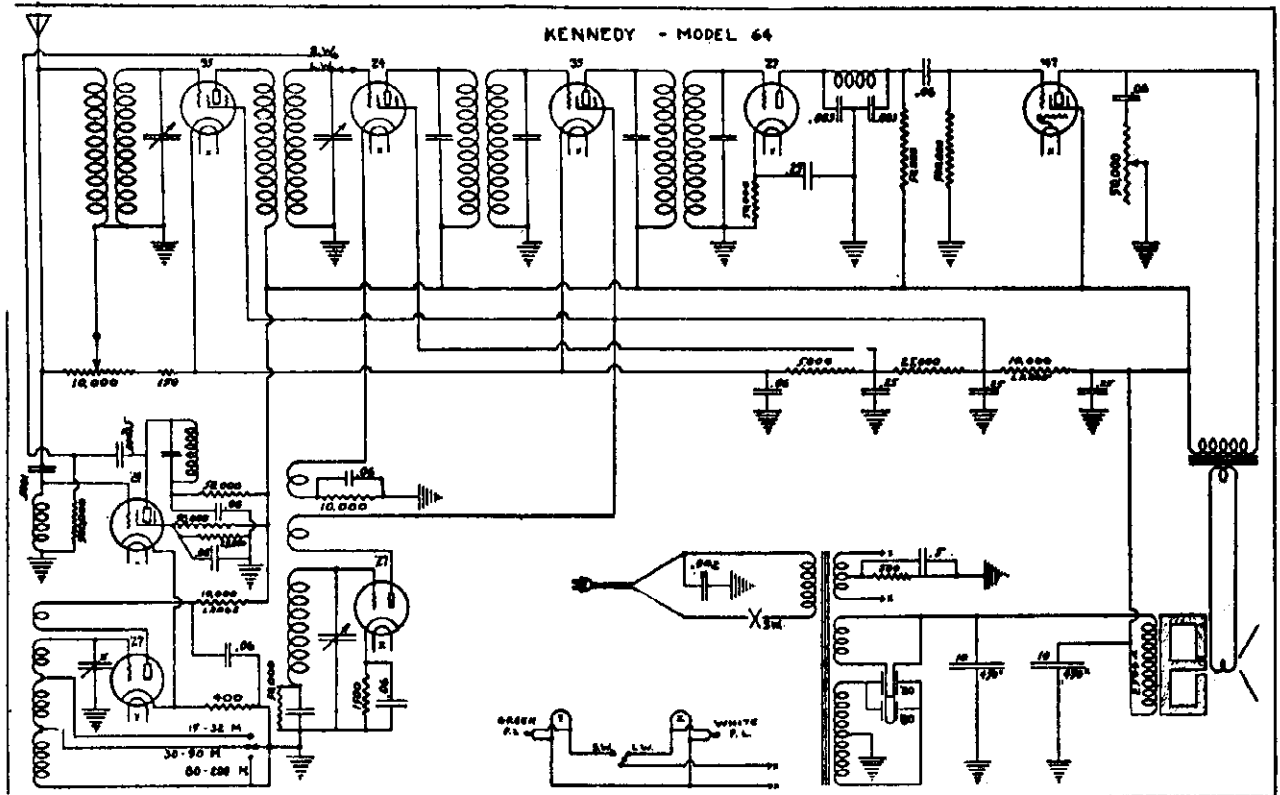

The tubes employed are as follows, and are operated at normal voltages and biases:

Short Wave mixer	224	Long Wave Oscillator ...	227
Short Wave Oscillator	227	Intermediate frequency ..	235
Radio frequency	235	2nd Detector	227
Long Wave mixer	224	Output	247
Rectifier	280's		

For short wave reception the long wave mixer becomes an I.F. amplifier, while the long wave oscillator filament goes out. For long wave reception, the short wave oscillator filament goes out. These circuits are indicated above. The intermediate frequency used throughout is 175 K.C.

In aligning, it is first desirable to see that the intermediate frequency transformers are properly set. This is most readily accomplished by using an output meter and an accurate source of 175 kilocycle radio frequency, such as an oscillator. The accuracy of this oscillator may be checked by tuning a radio set to a station on 700 kilocycles and placing the oscillator near the antenna. A harmonic of the 175 kilocycle oscillator will "zero beat" with the

MODEL 64
Alignment
Socket



COLIN B. KENNEDY CORP.

station if the oscillator is correct. Other "harmonic" points may also be tried. With the receiver switched to short wave position, remove the grid clip from the top of the S.W. mixer tube and fasten a short length of wire to the grid terminal of this tube. Lay this wire sufficiently near the 175 K.C. oscillator to note the energy from it in the output meter. With the oscillator set on exactly 175 K.C., adjust the trimmers in the tops of the I.F. transformer shields for maximum reading of the output meter. If the meter tends to read "off scale," move oscillator farther from set and wire, thereby reducing input energy. If these I.F. transformers are badly out of alignment, it may be necessary to place the "pick up" wire on the grid of the long wave mixer and adjust the last two transformers alone, at first, then moving wire back to S.W. mixer and proceed as before. It will be noted that the first I.F. transformer has but one adjustment.

The tuning condenser may be adjusted for alignment or "tracking" of the tuned circuits by a similar method except that an oscillator covering the broadcast band should be used. The output meter is used as before. The energy from the oscillator, in this case, is coupled weakly into the antenna circuit - a simple means being to place the oscillator near the antenna wire. The receiver and oscillator are first tuned to approximately 1,500 kilocycles, and by watching the output indicator, the three condenser trimmers, reached through the removable plate, are adjusted for maximum output. These three trimmers must then be left untouched for all further aligning. The next step is to tune both receiver and oscillator to some point near 550 kilocycles. Here, the alignment is made by adjusting the "padding" condenser for maximum response. It may be reached through hole in rear center of chassis base.

If necessary to adjust the two R.F. condenser sections, it may be accomplished by bending the condenser end plates. If found necessary to align at other than the ends of the "band", it may be done by bending the slotted end plate of the condenser rotors. Alignment of the two ends of the scale is usually quite sufficient.

IMPORTANT: It is desirable to move the dial back and forth across the signal while making the above alignments. This is particularly necessary when altering any capacities connected with the oscillator circuit.

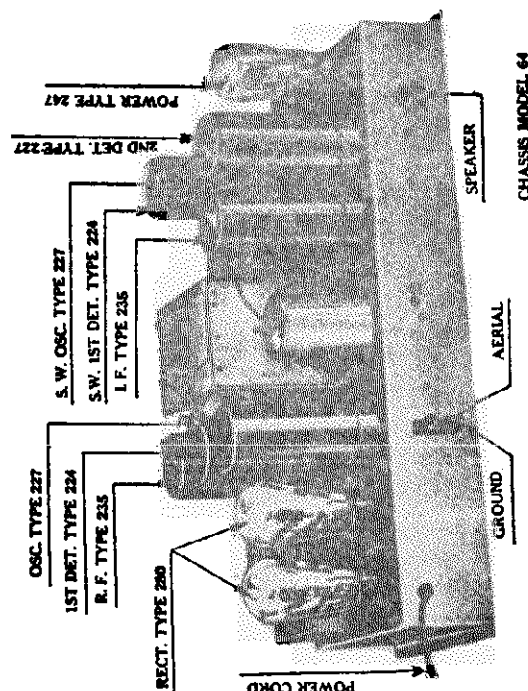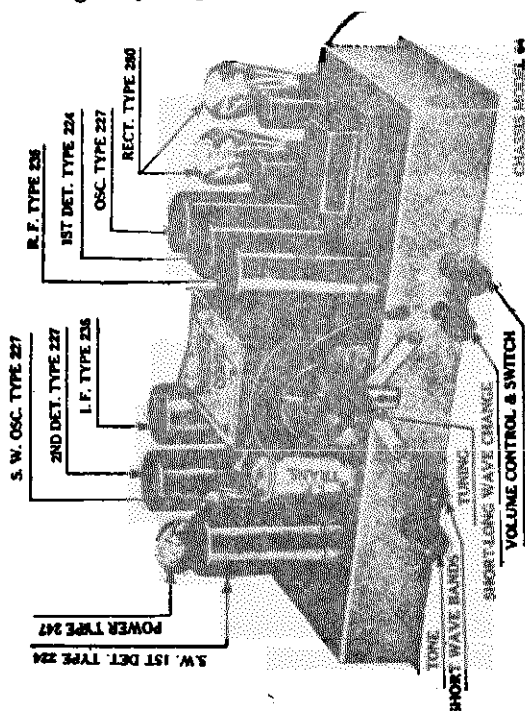

KOLSTER RADIO, INC.

MODEL K-45
Voltage, Alignment Data
Power Transformer Assembly

It is sometimes noticeable that the Condenser Gang does not respond rapidly enough when a selector button is pressed. This is caused by a slow motor and the brake adjustment should be loosened. The method of adjusting the friction brake is as follows: (1) Unloosen the machine screw holding the slotted brake shoe to the motor. (2) Adjust the friction of the brake shoe by varying the pressure applied to the fibre washer fastened to the motor armature. (3) The brake is adjusted properly when the maximum speed is obtained without the condenser gang carrying by the station corresponding to the selector button pressed. (4) When the proper adjustment has been made, securely tighten the brake locking screw. Ordinarily, no adjustment need be made of this device, as it is properly set in manufacture or if proper line voltage is used.

The motor clutch device is for the purpose of mechanically disengaging the drive motor armature from the tuning condenser simultaneously with the opening of the motor circuit. This electrically-operated device is necessary so as to eliminate the possibility of the inertia of the motor armature, when the motor circuit is open, from turning the tuning condenser past the pre-determined setting of the selector brush.

Make certain that the position of the line voltage switches in both the power pack and relay unit are set to correspond with the existing AC line voltage.

If it is desired, the remote cable may be disconnected from the receiver by removing the nuts holding the terminal card to the motor unit and relay box. This will in no way interfere with the operation of the set at the local position.

Four adjustable trimmer condensers are provided on top of the main gang condenser to compensate for small capacitive variations in the tuning circuits. This condition is made noticeable by the receiver becoming insensitive.

If it appears a certainty that the tuning circuits are not balanced, a simple method for readjusting is as follows:

- 1—Tune in a signal, preferably at the low end of the dial, and adjust the volume control for a moderate signal intensity.
- 2—Adjust with a short bakelite screwdriver the four compensating condensers successively, from the detector to the first RF stage, for the greatest signal intensity.
- 3—The various adjustments can now be checked at medium and high points on the dial, making slight variations if it is found necessary.


Bending the end plates of the variable tuning condensers in order to align the gang should only be resorted to if the trimmers are not sufficiently effective. This method will only be necessary in extreme cases where the condenser gang has been subjected to abuse or severe handling.

Should it ever be necessary to replace the cone assembly the proper procedure is as follows:

- 1—Place the speaker flat on the felt ring.
- 2—Unsolder the two leads coming from the back of the field coil housing.
- 3—Remove the four long bolts from the back of the field coil housing.
- 4—Lift the field coil and assembly straight upwards and away from the cone assembly to which remains the end plate.


To recenter a voice coil the above procedure is followed, and with the cone assembly remaining flat on the felt ring there will be found the heads of three small machine screws close to the opening in the end plate for the voice coil. Loosen these screws and shift the cone assembly until the voice coil is concentric with the hole in the end plate. Retighten the screws just loosened and reassemble the unit in the reverse manner in which it was disassembled.

Care must be taken against damaging the voice coil against the pole piece and also the four long assembly bolts must be drawn up as tightly as possible.

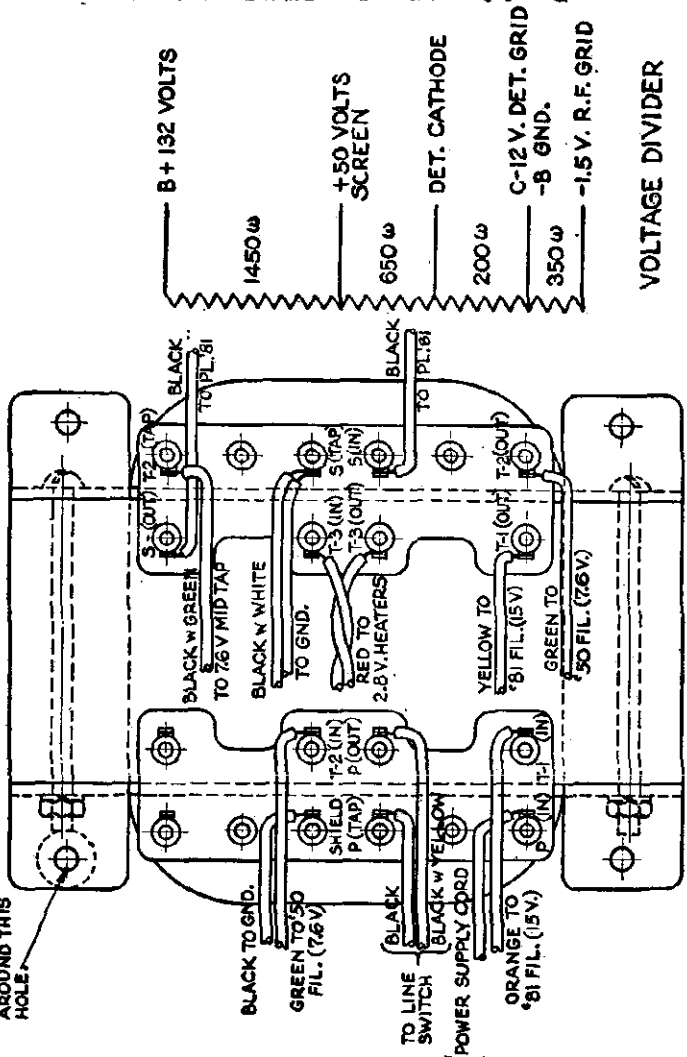

POWER TRANSFORMER ASSEMBLY
K-45 Average Set Analysis
LINE VOLTAGE 112—LINE SWITCH ON 110-120 VOLT TAP
VOLUME CONTROL POSITION ON FULL
Approximate reading only as various tubes create different readings

Table No. in Order	Type of Tube	Position of the 1st RF Det., etc.	Readings, Plug in Socket of Set			Normal Plate MA	
			Table Out	Table in Tester	Screen Volts		
1	24	1st RF	A	B	C	1.2	
2	24	2nd RF	2.4	132	2.2	128	1.5
3	24	3rd RF	2.4	132	2.2	128	1.5
4	27	Detector	2.4	130	2.2	125	9
5	27	1st AF	2.4	130	2.2	123	8
6	27	2nd AF	2.4	130	2.2	125	8
7	27	3rd AF	2.4	130	2.2	125	8
8	50	3rd AF	5	420	5	420	75
9	50	3rd AF	5	420	5	420	68
10	81	Rectifier	5		5		68
11	81	Rectifier	5		5		68

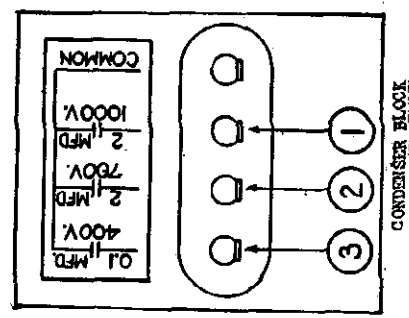

**MODELS K-60, K-62, K-70, K-72
K-80, K-82, K-90, K-92**
Condenser & Resistor Data

KOLSTER RADIO, INC.

MODELS K-60—K-62

- Condenser, Electrolytic, 475 volts, 8 mfd. (C6-C7)
- Condenser, Electrolytic, 430 volts, 8 mfd. (C8)
- Condenser, fixed, Mica, .000725 mfd. (Yellow) (C2)
- Condenser, fixed, Mica, .0002 mfd. (Gray) (BC-4)
- Condenser, fixed, Mica, .001 mfd. (Orange) (C1)
- Condenser, fixed, Mica, .0015 mfd. (Blue) (SC-1)
- Condenser, fixed, Mica, .003 mfd. (Pink) (SC-2)
- Condenser, fixed, paper, .025 mfd. (200 volts) (C4)
- Condenser, fixed, paper, .1 mfd. (200 volts) (BC-6)
- Condenser, fixed, paper, .1 mfd. (400 volts) (C-5)
- Condenser, variable, 3 gang, comp. (VC-1, VC-2, VC-3)
- Condenser block (4 sections) (BC-1, BC-2, BC-3, C3)
- Resistor, fixed, carbon, 200 ohms (Body red, tip black, dot brown) (R5)
- Resistor, fixed, carbon, 10000 ohms (Body brown, tip black, dot orange) (R2)
- Resistor, fixed, carbon, 25000 ohms (Body red, tip green, dot orange) (R6)
- Resistor, fixed, carbon, 100000 ohms (Body brown, tip black, dot yellow) (R3)
- Resistor, fixed, carbon, .25 megohms (Body red, tip green, dot yellow) (R4, R7, R8, R9, R10)
- Resistor, fixed, carbon, 1 megohm (Body brown, tip black, dot green) (R1)
- Resistor, vitreous, tapped (R11, R12, R13, R14)

MODELS K-70—K-72

- Condenser, Electrolytic, 475 volts, 8 mfd. (C6-C7)
- Condenser, Electrolytic, 430 volts, 8 mfd. (C8)
- Condenser, fixed, Mica, .000725 mfd. (Yellow) (C2)
- Condenser, fixed, Mica, .0002 mfd. (Gray) (BC-5)
- Condenser, fixed, Mica, .0005 mfd. (Red) (C4)
- Condenser, fixed, Mica, .001 mfd. (Orange) (C1)
- Condenser, fixed, Mica, .0015 mfd. (Blue) (SC-1)
- Condenser, fixed, Mica, .003 mfd. (Pink) (SC-2)
- Condenser, fixed, paper, .025 mfd. (200 volts) (C-10)
- Condenser, fixed, paper, 0.1 mfd. (200 volts) (C3, C-9, BC-1, BC-4, BC-7, BC-8)
- Condenser, fixed, paper, 0.1 mfd. (400 volts) (C5), BC-11
- Condenser, fixed, paper, 1.0 mfd. (K-72) (C11)
- Condenser, variable, 3 gang, comp. (VC-1, VC-2, VC-3)
- Condenser block (5 sections) (BC-2, BC-3, BC-6, BC-9, BC-10)
- Resistor, fixed, carbon, 200 ohms (Body red, tip black, dot brown) (R2)
- Resistor, fixed, carbon, 5000 ohms (Body green, tip black, dot red) (R9, R21)
- Resistor, fixed, carbon, 10000 ohms (Body brown, tip black, dot orange) (R3)
- Resistor, fixed, carbon, 20000 ohms (Body red, tip black, dot orange) (R11)
- Resistor, fixed, carbon, 25000 ohms (Body red, tip green, dot orange) (R8, R16)
- Resistor, fixed, carbon, 100000 ohms (Body brown, tip black, dot yellow) (R4)
- Resistor, fixed, carbon, .25 megohms (Body red, tip green, dot yellow) (R1, R5, R17, R18, R19, R20)
- Resistor, fixed, carbon, 2 megohms (Body red, tip black, dot green) (R6, R7)
- Resistor, vitreous, tapped (R12, R13, R14, R15)

MODELS K-80—K-82

- Condenser, Electrolytic, 475 V. (C6-C7)
- Condenser, Electrolytic, 430 V. (C8)
- Condenser, fixed, Mica, .000725 Mfd. (Yellow) (C2)
- Condenser, fixed, Mica, .0005 Mfd. (Red) (SC-1, C4)
- Condenser, fixed, Mica, .001 Mfd. (Orange) (C1, BC-6)
- Condenser, fixed, Mica, .002 Mfd. (Green) (SC-2, BC-9)
- Condenser, fixed, paper, .025 Mfd. (200 volts) (C9)
- Condenser, fixed, paper, .1 Mfd. (200 volts) (BC-1, BC-5, C3)
- Condenser, fixed, paper, .1 Mfd. (400 volts) (C5) (BC-10)
- Condenser, fixed, paper, 1 Mfd. (200 volts) (K-82) (C10)
- Condenser, variable, 3 gang comp. (VC-1, VC-2, VC3)
- Condenser block (5 sections) (BC-2, BC-3, BC-4, BC-7, BC-8)
- Resistor, fixed, carbon, 200 ohms (Body red, tip black, dot brown) (R2)
- Resistor, fixed, carbon, 5000 ohms (Body green, tip black, dot red) (R18) (K-82)
- Resistor, fixed, carbon, 10000 ohms (Body brown, tip black, dot orange) (R3, R17)
- Resistor, fixed, carbon, 20000 ohms (Body red, tip black, dot orange) (R9)
- Resistor, fixed, carbon, 25000 ohms (Body red, tip green, dot orange) (R13, R14)
- Resistor, fixed, carbon, 50000 ohms (Body green, tip black, dot orange) (R15, R16)
- Resistor, fixed, carbon, 100000 ohms (Body brown, tip black, dot yellow) (R4)
- Resistor, fixed, carbon, .25 megohms (Body red, tip green, dot yellow) (R1)
- Resistor, fixed, carbon, 2 megohms (Body red, tip black, dot green) (R11, R12)
- Resistor, vitreous, tapped (R5, R6, R7, R8)

MODELS K-90—K-92

- Condenser, Electrolytic, 475 V. (C6-C7)
- Condenser, Electrolytic, 430 V. (C8)
- Condenser, fixed, Mica, .000725 Mfd. (Yellow) (C2)
- Condenser, fixed, Mica, .0005 Mfd. (Red) (SC-1, C4)
- Condenser, fixed, Mica, .001 Mfd. (Orange) (BC-6, C1)
- Condenser, fixed, Mica, .002 Mfd. (Green) (SC-2, BC-9)
- Condenser, fixed, paper, .025 Mfd. (200 volts) (C9-C10)
- Condenser, fixed, paper, .1 Mfd. (200 volts) (BC-1, BC-5, C3)
- Condenser, fixed, paper, .1 Mfd. (400 volts) (C5)
- Condenser, fixed, paper, 1 Mfd. (200 volts) K-92 (C11)
- Condenser, variable, 4 gang, comp. (VC-1, VC-2, VC-3, VC-4)
- Condenser Block (5 sections) (BC-2, BC-3, BC-4, BC-7, BC-8)
- Resistor fixed, carbon, 200 ohms (Body red, tip black, dot brown) (R2)
- Resistor, fixed, carbon, 5000 ohms (Body green, tip black, dot red) (R19)
- Resistor, fixed, carbon, 8000 ohms (Body gray, tip black, dot red) (R11)
- Resistor, fixed, carbon, 10000 ohms (Body brown, tip black, dot orange) (R3-R20)
- Resistor, fixed, carbon, 12000 ohms (Body brown, tip red, dot orange) (R-10)
- Resistor, fixed, carbon, 25000 ohms (Body red, tip green, dot orange) (R13-R14)
- Resistor, fixed, carbon, 50000 ohms (Body green, tip black, dot orange) (R15-R16-R19)
- Resistor, fixed, carbon, 100000 ohms (Body brown, tip black, dot yellow) (R4)
- Resistor, fixed, carbon, .25 megohms (Body red, tip green, dot yellow) (R1-R5)
- Resistor, fixed, carbon, 1 megohm (Body brown, tip black, dot green) (R17-R18)
- Resistor, vitreous, tapped (R6-R7-R8-R9)

Model K 80-82 sets as originally manufactured employed 15,000 ohm volume control unit, (Stamped No. 62018). To improve volume control action, this unit has been replaced with 15,000 ohm potentiometer, (Stamped No. 62025).

In addition to replacing the volume control unit as just described, a 1,000 ohm fixed resistor, Part No. 6569-15, is installed in the Cathode circuit of the automatic volume control tube. This should be connected between the end of the volume control unit (R-10) and the 20,000 ohm resistor (R-9).

MODELS K-60, K-62, K-70, K-72 -
K-80, K-82, K-90, K-92

KOLSTER RADIO, INC.
Condenser Adjustments, Data

Models K-60—K-62—K-70—K-72—K-80—K-82—K-90—K-92

**R.F. TUNING AND OSCILLATOR TRIMMING CONDENSER
ADJUSTMENTS**

Located on the front of the gang condenser are three trimmer condensers (TC-1-2-3) which are provided for aligning the R.F. circuits. The 600 K.C. trimmer condenser (OC-1) for the OSCILLATOR will be found on the right hand top of the chassis base directly in front of the '80 socket and opposite the coil shield. Poor tone, lack of sensitivity and selectivity, or complete inoperation of the receiver may be caused by these condensers being out of adjustment.

(a) Place the oscillator in operation at exactly 1400 K.C. and couple it to the antenna. Connect the output device in accordance with the type used. Tune in the oscillator signal and adjust the coupling between the oscillator and the antenna lead of the set, or increase the volume control setting until a deflection is obtained in the output meter.

(b) With an insulated screw driver adjust each of the trimmer condensers mounted on the gang condenser frame until a maximum deflection is obtained in the output meter. If the pointer goes off scale reduce the coupling or the volume control.

(c) Set the oscillator now at 600 K.C. Tune in this signal with the receiver and adjust coupling or volume control for a deflection in the output meter. Now adjust the oscillator 600 K.C. trimmer condenser (OC-1) until a maximum deflection is obtained. In making this adjustment it is advisable to rock the tuning condenser back and forth a few degrees each side of the normal position.

(d) Change the setting of the oscillator back to 1400 K.C. and readjust the three trimmer condensers.

If attention is given to the adjustments the R.F. and oscillator circuits will be properly aligned and satisfactory results should be obtained. If not the next step is to adjust the I.F. circuits.

I.F. CIRCUIT ADJUSTMENTS

A single intermediate frequency stage with two transformers is used in band-pass arrangement. Each transformer has both the primary and secondary windings tuned accurately for 175 K.C.

To adjust these circuits proceed as follows:

(a) Set the previously mentioned oscillator at 175 K.C.
(b) Connect the output device.
(c) Remove the oscillator tube, which is the type '27 adjacent to the type '80, and make a good ground connection to the chassis.

(d) Connect the output of the oscillator to the Control Grid cap of the first detector, which is the type '24 tube.

(e) Adjust the oscillator output or the receiver's volume control until a deflection is obtained in the output device.

(f) Place the chassis on end and the adjusting screws for the I.F. transformer condensers (IC-1-2-3-4) will be found through holes in the under side of the base after the bottom shield has been removed.

(g) Adjust the secondary and primary of the second and first I.F. transformers in the order just mentioned until a maximum deflection is obtained in the output meter. Make these adjustments the second time to insure proper aligning. It is now advisable to recheck the R.F. and oscillator condensers again.

LINE VOLTAGE VARIATIONS Models K-60—K-62 and Models K-70, K-72

These models were tested on 115 volts, and are therefore suitable for operation on line voltages ranging from 110 to 120 volts. Should lower line voltages be encountered it will be necessary to remove the chassis from the cabinet and unsolder the BLUE lead, which comes from the under side of the power transformer and is connected to one side of the line switch mounted on the rear of the volume control. In its place solder the GREEN lead, taping the end of the Blue lead just removed so that it will not short against other leads in the chassis. In locations where the line voltages exceed 120 volts, a suitable resistor will be necessary to reduce the voltage applied to the correct value.

CAUTION

**NEVER TURN ON THE POWER TO THE SET WHEN THE
SPEAKER IS DISCONNECTED**

KOLSTER RADIO, INC.

MODEL K-60, K-62
Voltage, Test Data

From Chassis To	Correct	Incorrect	From Chassis To	Correct	Incorrect
All tubes removed from sockets and AC plug removed from power supply. Speaker connected. Volume control maximum unless otherwise stated.					
Aerial	1,000,000	1,555 ohms	'80 Anode to '80 Anode	186 ohms	
RF Control Grid			'80 Filament to Chassis	6,655 ohms	FC
RF Control Grid and first tuning condenser stator			'80 Filament to '80 Anode	8,889 ohms	FC
RF Cathode (V.C.Max)	200	6.4 ohms	Output Transformer Secondary Only	0.3 ohm	
RF Screen Grid	2,653	200 ohms	Voice Coil only	3 ohms	
RF Plate	6,679	2,653 ohms	Voice Coil and Secondary	0.275 ohm	
RF Plate to 80 Fil	26	6,679 ohms	Across AC Plug (110-120 V)	1.9 ohm	
			Across AC Plug (100-110 V)	1.7 ohm	
1 Detector Control Grid	26	26 ohms	TC- across first rf wdg AC plug to chassis	0 ohm	BC- between power transformer primary and chassis (.1 mfd)
1 Detector Cathode	10,000.9	10,000.9 ohms	BC- rf K-Y (.25 mfd)		
1 Detector Screen Grid	2,653	2,653 ohms	BC- rf SG-Y (.25 mfd)		
1 Detector Plate	6,703	6,703 ohms	BC- rf P wdg Y (.25 mfd)		
			Notes** Oscillator coil is isolated from oscillator control grid by means of blocking condenser. Oscillator coil only has a resistance of 2.6 ohms.		
1 Detector Control Grid	26	26 ohms	BC across 10,000 ohms		
1 Detector Cathode	10,000.9	10,000.9 ohms	C plug wdg 3.9 ohms		
1 Detector Screen Grid	2,653	2,653 ohms	See RF Screen		
1 Detector Plate	6,703	6,703 ohms	TC- IF Tr Primary		
			.25 meg resistor across primary		
IF Control Grid	50	50 ohms	TC- 1f Cg-Y		
IF Cathode	200	200 ohms	See RF Cathode		
IF Screen Grid	2,653	2,653 ohms	See RF Screen		
IF Plate	6,703	6,703 ohms	See RF Plate		
2 Detector Control Grid	50	50 ohms	TC- 2 D Cg-Y		
2 Detector Cathode	25,000	25,000 ohms	BC- 2 DK-Y (1. mfd)		
2 Detector Screen	262,653	262,653 ohms	BC- 2 D Sg-Y (.1 mfd)		
2 Detector Plate	266,889	266,889 ohms	BC 2 DP-2DK		
			BLC- 2 DP-'47 Cg		
Oscillator Control Grid	100,000	100,000 ohms	BC- rf Sg-Y		
Oscillator Cathode	0	0 ohm	Tone Control Condensers		
Oscillator Plate	2,656	2,656 ohms	BC- '47 grid fil res-Y		
'47 Control Grid	500,200	500,200 ohms	See 2 D Plate		
RF Plate to '47 Screen	26	26 ohms			
1 Detector Plate to '47 Screen	50	50 ohms			
IF Plate to '47 Screen	50	50 ohms			
'47 Screen Grid to '80 Fil	0	0 ohm			
'47 Plate to Chassis	860	860 ohms			
'47 Plate to '80 Filament	660	660 ohms			
'80 Anode to Chassis	1,733	1,733 ohms			

KOLSTER K 60-K 62 **

Tube	Heater Voltage	Control Grid Voltage	Screen Grid Voltage	Plate Voltage	Plate Current
RF					
1 Det	3.5	80.	250.	6.0 ma	
IF	6.	74.	225.	1.0	
2 Det	4.	80.	225.	7.0	
Osce.	6.	22.5*	125.*	.2	
Pwr	-	-	85.	6.0	
Rect.	.2*	245.	225.	24.	
				48. per anode	

* Indicates incorrect reading due to high resistance in circuit.
** Volume control at maximum and tone control in natural position.

KOLSTER RADIO, INC.

MODEL K-60, K-62
Voltage, Test Data

From Chassis To	Correct	Incorrect	From Chassis To	Correct	Incorrect
All tubes removed from sockets and AC plug removed from power supply. Speaker connected. Volume control maximum unless otherwise stated.					
From Chassis To	Correct	Incorrect	From Chassis To	Correct	Incorrect
Aerial	1.55 ohms		'80 Anode to '80 Anode	166 ohms	
RF Control Grid	1,000,000		'80 Filament to Chassis	6,653 ohms	FC
			'80 Filament to '80 Anode	8,389 ohms	FC
RF Control Grid and first tuning condenser stator	6.4 ohms		Output Transformer Secondary Only	0.3 ohm	
RF Cathode (V.C.Max)	200 ohms		Voice Coil only	3 ohms	
RF Screen Grid	2,653 ohms		Voice Coil and Secondary	0.275 ohm	
RF Plate	6,679 ohms		Across AC Plug (110-120 V)	1.9 ohm	
RF Plate to 80 Fil	28 ohms		Across AC Plug (100-110 V)	1.7 ohm	
			Across AC plug to chassis	0 ohm	BC- between power transformer primary and chassis (.1 mfd)
1 Detector Control Grid	28 ohms		Notes** Oscillator coil is isolated from oscillator control grid by means of blocking condenser. Oscillator coil only has a resistance of 2.5 ohms.		
1 Detector Cathode	10,008.9 ohms		KOLSTER K 60-K 62 **		
1 Detector Screen Grid	2,653 ohms		Tube	Heater Voltage	Control Grid Voltage
1 Detector Plate	6,703 ohms		RF		Screen Grid Voltage
			1 Det	80.	Plate Voltage
IF Control Grid	50 ohms		IF	74.	Plate Current
IF Cathode	200 ohms		2 Det	80.	
IF Screen Grid	2,653 ohms		3	22.*	
IF Plate	6,703 ohms		4	245.	
			5		
2 Detector Control Grid	50 ohms		6		
2 Detector Cathode	25,000 ohms		Rect.		48. per anode
2 Detector Screen	262,653 ohms		* Indicates incorrect reading due to high resistance in circuit.		
2 Detector Plate	256,838 ohms		** Volume control at maximum and tone control in natural position.		
Oscillator Control Grid	100,000 ohms		TC- 1f Cg-Y		
Oscillator Cathode	0 ohm		See RF Cathode		
Oscillator Plate	2,656 ohms		See RF Screen		
'47 Control Grid	500,200 ohms		See RF Plate		
			TC- 2 D Cg-Y		
RF Plate to '47 Screen	26 ohms		BC- 2 DK-Y (1. mfd)		
1 Detector Plate to '47 Screen	50 ohms		BC- 2 D Sg-Y (.1 mfd)		
IF Plate to '47 Screen	50 ohms		BC 2 DP-2DK		
'47 Screen Grid to '80 Fil	0 ohm		BLC- 2 DP-'47 Cg		
'47 Plate to Chassis	860 ohms				
'47 Plate to '80 Filament	650 ohms		BC- rf Sg-Y		
'80 Anode to Chassis	1,733 ohms		Tone Control Condensers		
			BC- '47 grid fil res-Y		
			See 2 D Plate		

KOLSTER RADIO, INC.

MODEL K-70, K-72
Test Data
Voltage

All tubes removed from sockets and AC plug disconnected from power supply
Speaker disconnected. Volume control maximum unless otherwise stated.

From Chassis To

AVC Plate

Correct

Incorrect

See RF Control Grid

See 1 Det Control Grid

From Chassis To	Correct	Incorrect
Aerial	1.55 ohms	
RF Control Grid	2,250,000 ohms	TC- rf Cg-Y
RF Control Grid to Stator of first tuning condenser	6.4 ohms	
RF Cathode	200 ohms	BC- rf K-Y (.25 mfd)
RF Screen	23,000 ohms	BC-Y (1 mfd)
RF Plate	6,026 ohms	BC Osc P-Y
RF Plate to '47 Screen	26 ohms	BC- rf P wdg-Y
1 Detector Control Grid	28 ohms	
1 Detector Cathode	10,003.9 ohms	BC across 10,000 ohms
1 Detector Screen Grid	23,000 ohms	Osc Cplg wdg-5.9 ohms
1 Detector Plate	6,050 ohms	See RF Screen
1 Detector Plate to '47 Screen	50 ohms	See RF Plate
IF Control Grid	2,000,060 ohms	TC- if Tr wdg
IF Control Grid to AVC Plate	50 ohms	250,000 ohm resistor across IF Tr primary
IF Cathode	200 ohms	TC- if Tr
IF Screen Grid	23,000 ohms	TC- if Cg
IF Plate	6,050 ohms	BC- if Cg TC-Y
IF Plate to '47 Screen	50 ohms	TC- if Tr see
2 Detector Control Grid	50 ohms	See RF Cathode
2 Detector Cathode	250,000 ohms	See RF Screen
2 Detector Screen	253,000 ohms	TC- IF Tr pri
2 Detector Plate	256,185 ohms	See RF Plate
2 Detector Plate to '47 Screen	250,000 ohms	TC- IF Tr
'47 Control Grid	502,200 ohms	TC- 2 D Cg-Y
'47 Filament	2,000 ohms	BC- 2 D K-Y
'47 Screen	6,000 ohms	BC- 2 D Sg-Y
'47 Screen to '80 Fil	0 ohms	BC- 2 D P- 2 D K
AVC Control Grid	2,032,000 ohms	BLC- 2 Dp-'47 Cg
AVC Control Grid to AVC Cathode	32,000 ohms	BLC-'47 Cg- 2 DP
AVC Cathode	27,000 ohms	BC-'47 Cg Filter res-Y
AVC Screen Grid		Tone Control condensers

From Chassis To	Correct	Incorrect
'80 Anode to '80 Anode	166 ohms	
'80 Anode to AVC Cathode*	15,483 ohms	
'80 Anode to 80 Filament *	53,483 ohms	
Across Filament contacts of speaker plug	830 ohms	
Across Grid- Plate contacts of speaker plug	650 ohms	
Across Voice Coil only	7.5 ohms	
Across Output Transformer secondary only	0.92 ohm	
Across AC Plug (110-120 V)	1.9 ohm	

Note- Field coil resistance 850 ohms
Output transformer primary 650 ohms

'47 Plate to '47 Screen 650 ohms
Speaker Connected

Model 72
Speaker Disconnected

** Everything as in model 70, except for the following-

'80 Anode to AVC Cathode 20,483 ohms
'80 Anode to '80 Filament 58,483 ohms

Volume control at maximum. Tone control at natural position.

Tube	Control Grid Voltage	Screen Grid Voltage	Cathode Voltage	Plate Voltage	Plate Current
RF	.5*	60.	80.	190.	.25 ma
1 Det	5.	50.	84.	180.	.6
IF	3.	75.	80.	195.	1.
AVC	.25	25.	50.	20.	-
2 Det	4.	24*	80.	100*	.25
Power	4.*	260.	80.	236.	36.
Osc.	2.5		80.	80.	5.
Rect.					48. per anode

* Indicates incorrect reading due to high resistance in circuit.

KOLSTER RADIO, INC.

MODEL K-80, K-82
Voltage
Test Data

From Chassis To	Correct	Incorrect	Correct	Incorrect
All tubes out of receivers and AC plug disconnected from power supply. Speaker disconnected. Volume control maximum unless otherwise stated.				
From Chassis To	Correct	Incorrect		
Aerial	1.55 ohms			
RF Control Grid	2,250,000	EC- rf grid filter resistor-Y EC- if Cg wdg-Y (.1 mfd)		TC across filter chk FC
RF Control Grid to first tuning condenser stator	6.4			
RF Cathode	200	BC- rf K-Y (.25 mfd)		
RF Screen	7,000	BC- rf Sg-Y (.25 mfd)		
RF Plate	13,026	BC- rf P wdg-Y (1. mfd)		
		BC- 2 D AF Tr-2 DK		
RF Plate to '47 Screen	26	FC- 2 RP P wdg-Y-(8mfd)		
1 Detector Control Grid	26			
1 Detector Cathode	10,003.9	BC- across 10,000 ohms Osc. plug wdg 3.9 ohm		
1 Detector Screen Grid	7,000	TC- if Tr		
1 Detector Plate	13,050	See RF Plate		
1 Detector Plate to '47 Screen	50			
IF Control Grid	2,000,050	EC- if wdg- if X		
IF Control Grid to AVC Plate	50	TC- IF Tr		
IF Cathode	200	See RF Cathode		
IF Screen Grid	7,000	See RF Screen		
IF Plate	13,050	See RF Plate		
IF Plate to '47 Screen	50			
2 Detector Control Grid	50	TC- 2 D CG-Y		
2 Detector Cathode	25,000	EC- 2 DK-Y (1. mfd)		
2 Detector Plate	42,545	BC- AF Tr- 2 DK (1 mfd)		
		EC- 2DP-2DK (.001 mfd)		
2 Detector Plate to '47 Screen	29,545	See RF Plate		
'47 Control Grid	59,250	Tone Control Condenser		
'47 Control Grid to Control Grid	112,500	Tone Control Condenser		
'47 Cg to Cg-Tone Switch closed	9,100	Tone Switch closed		
'47 Screen Grid	13,000			
'47 Screen to '50 Fil	0			
AVC Control Grid	2,030,000	CC- AVC Cg-if P		
AVC Cathode	5,000			
AVC Screen Grid	3,000			
AVC Plate	2,000,000			
AVC Filament	3,255			

KOLSTER K 80-K 82

Volume control at maximum; tone control at natural position.


Tube	Control Grid Voltage	Screen Grid Voltage	Cathode Voltage	Plate Voltage	Plate Current
RF	0.4 *	80.	49.	185.	2.5 ma.
1 Det	5.5	80.	58.	185.	.6
IF	0.2 *	90.	44.	195.	1.0
AVC	0.5	44.	-60.	15.	0.0
2 Det	15.	-	75.	150.	0.6
Pwr	12. *	245.	-	225.	30.
Pwr	12. *	245.	-	225.	30.
Osc.	0. *	-	52.	-	6.0
Rect.					49. per anode

* Indicates incorrect reading due to high resistance in circuit.


Notices.***
In later production of the K-80, a 1000 ohm fixed resistor was added to the cathode circuit of the AVC tube. This must be added to the various values obtained by working between the AVC tube cathode and other points in the receiver.

MODEL F-7
110 Volt D-C.

LANG RADIO CO.

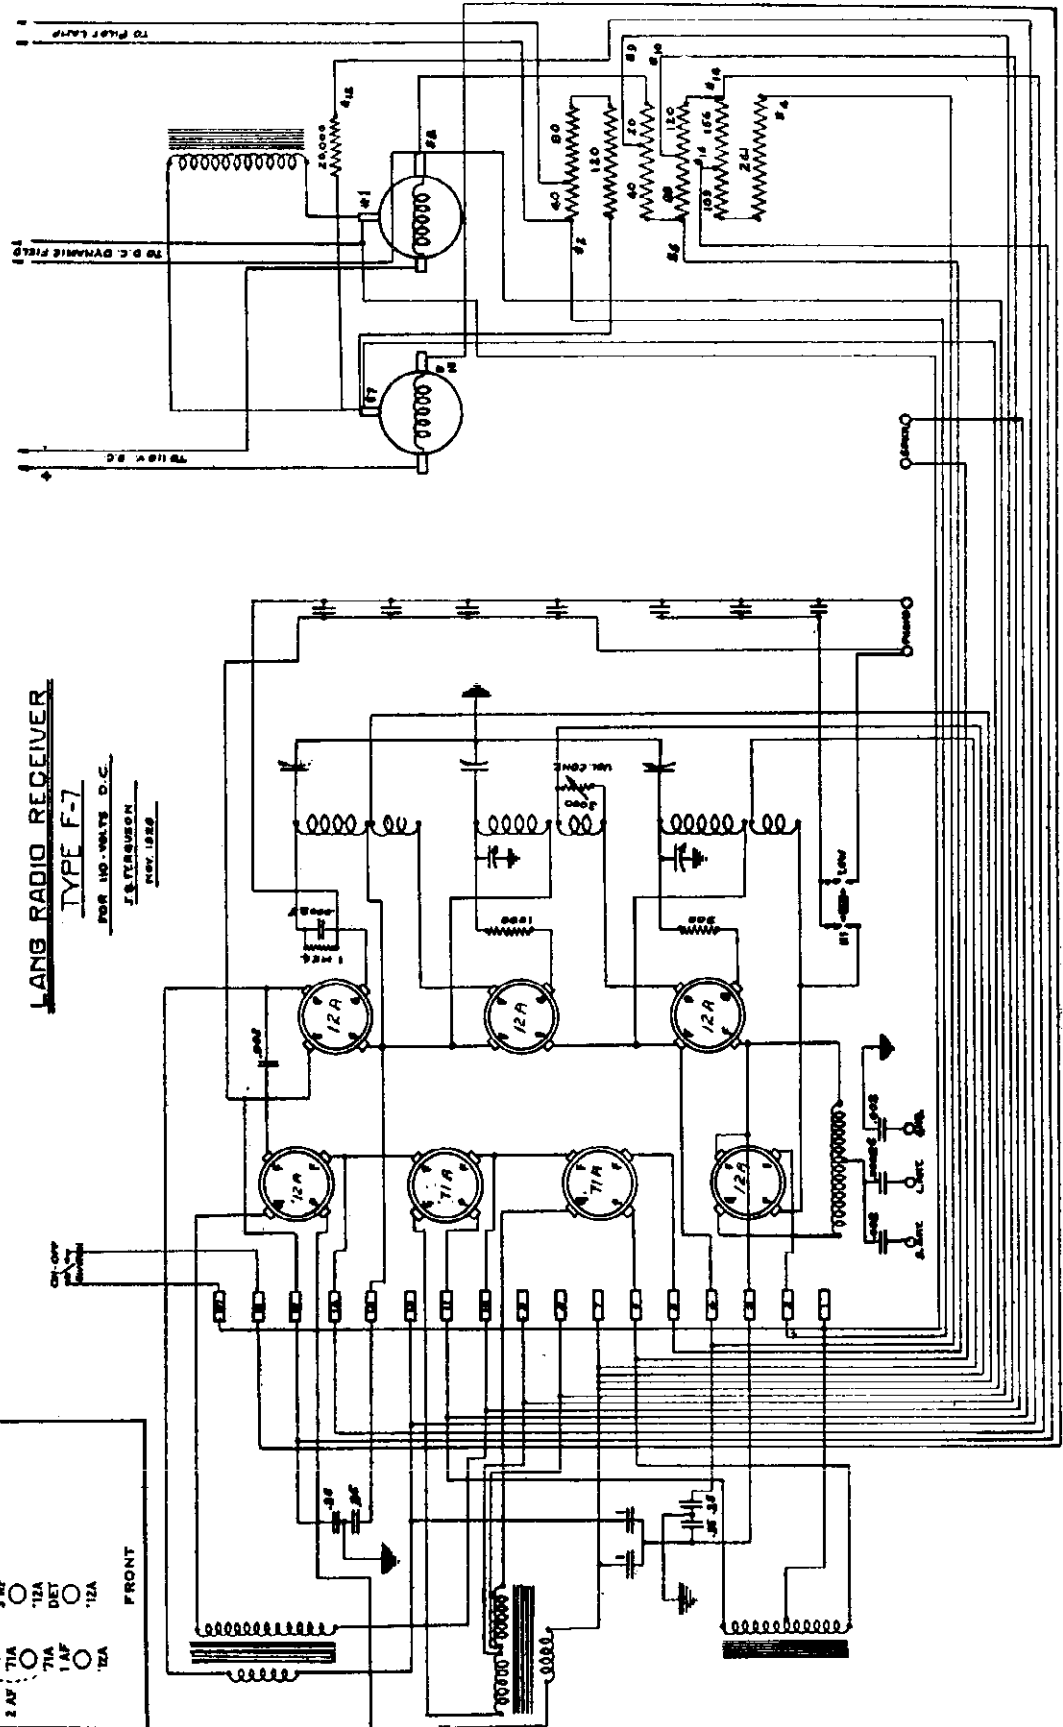


LANG RADIO RECEIVER
 TYPE F-7
 FOR 110 VOLTS D.C.
 EXTENSION
 NOV. 1928

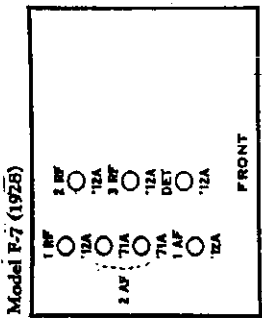


MODEL MA-7
MODEL MD-7



LANG RADIO CO

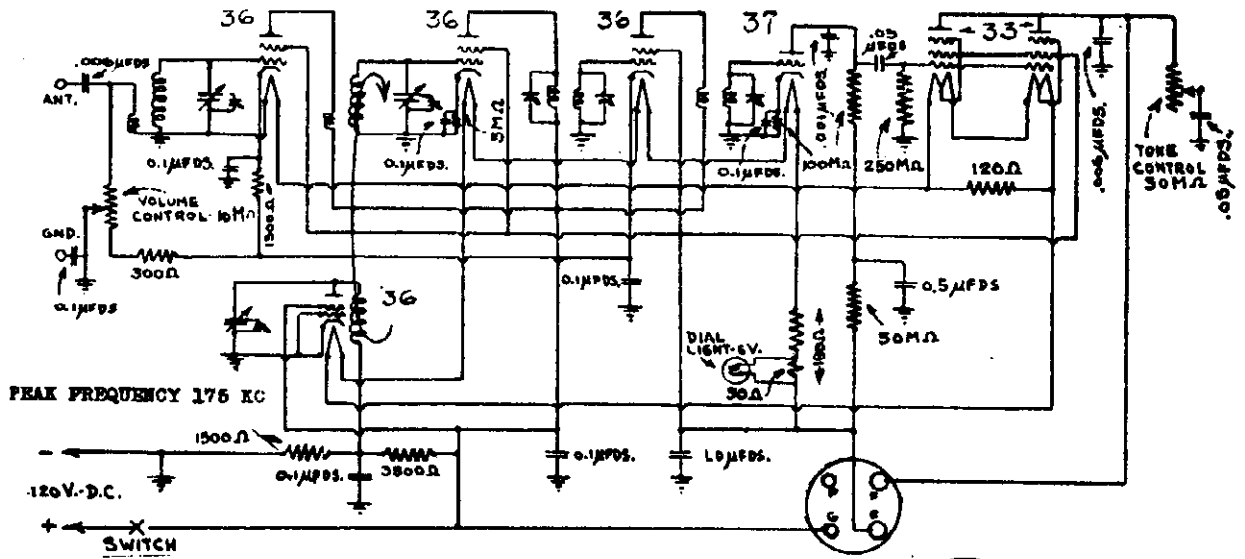


Model MD-7 (1931)

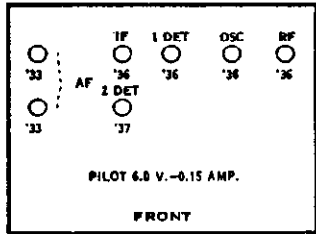


Model MD-7

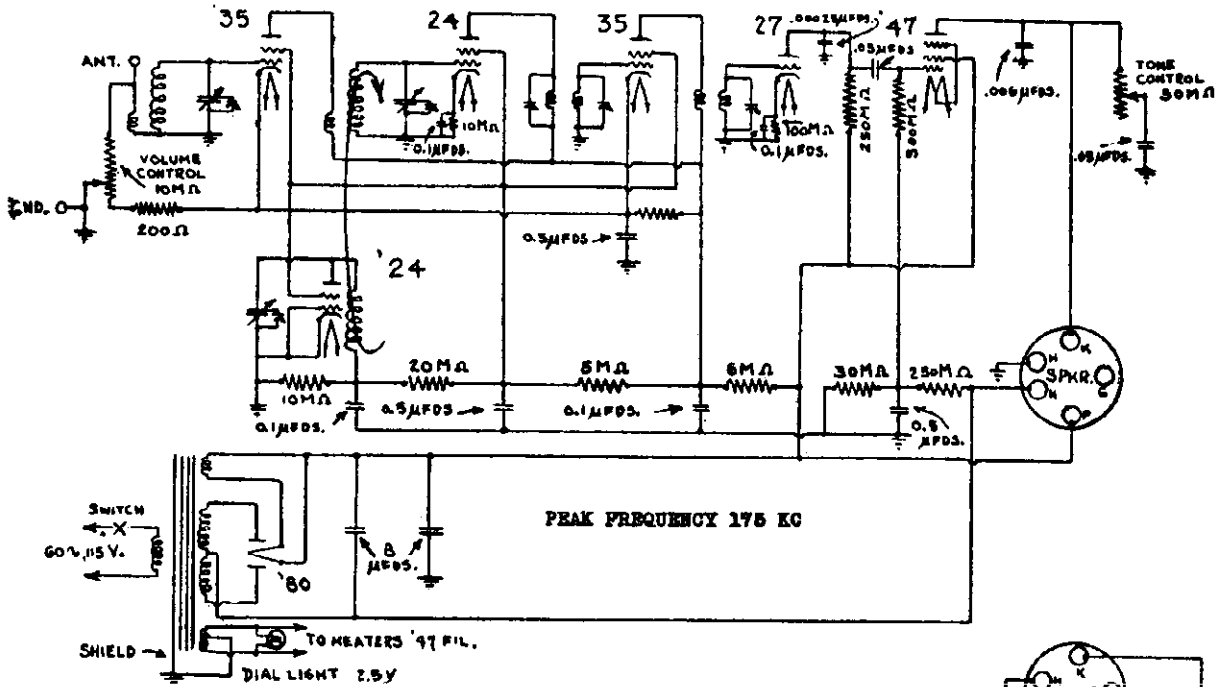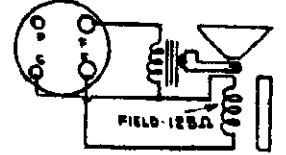

Model MA-7 (1931)


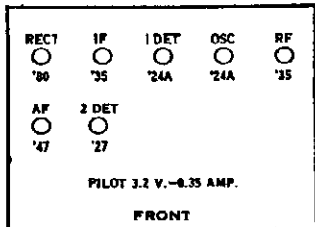


Model MA-7

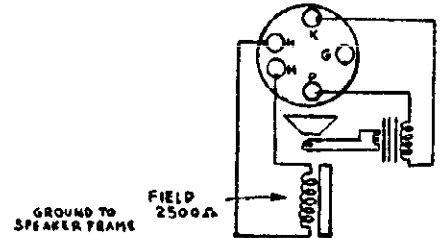


MODEL SA-7
MODEL SA-8

LANG RADIO CO.

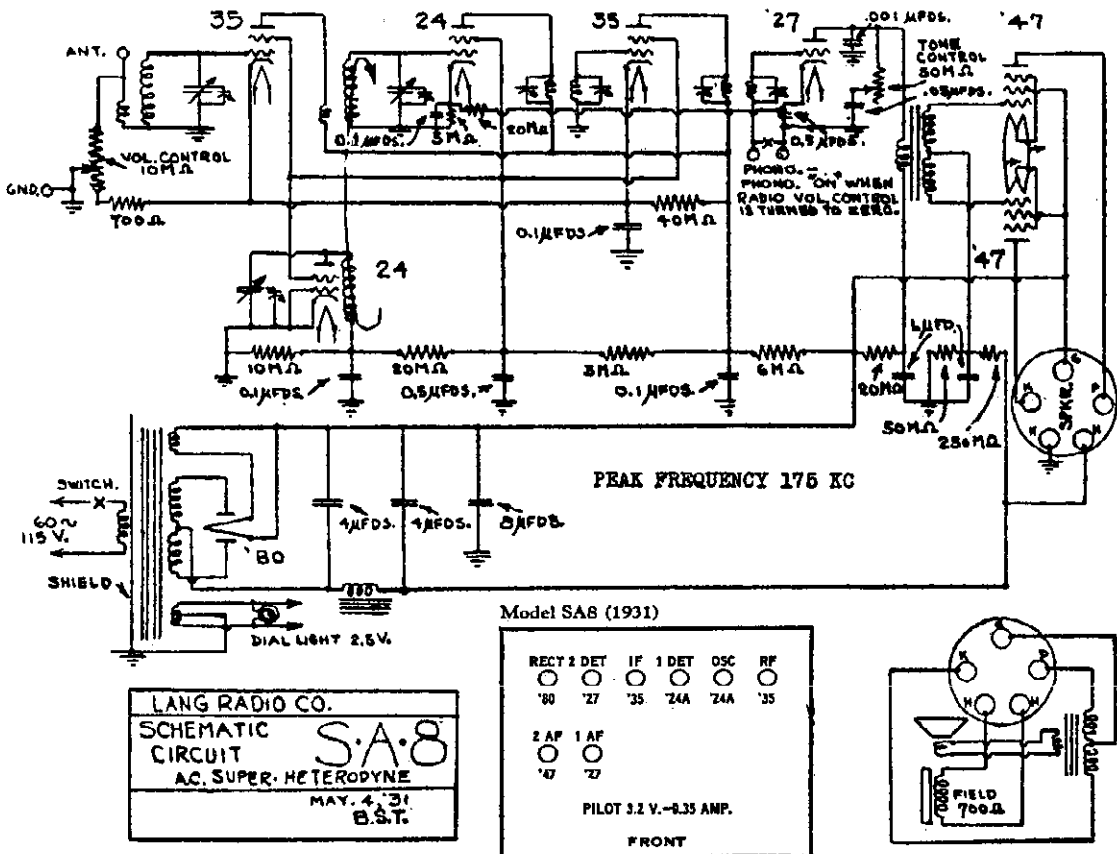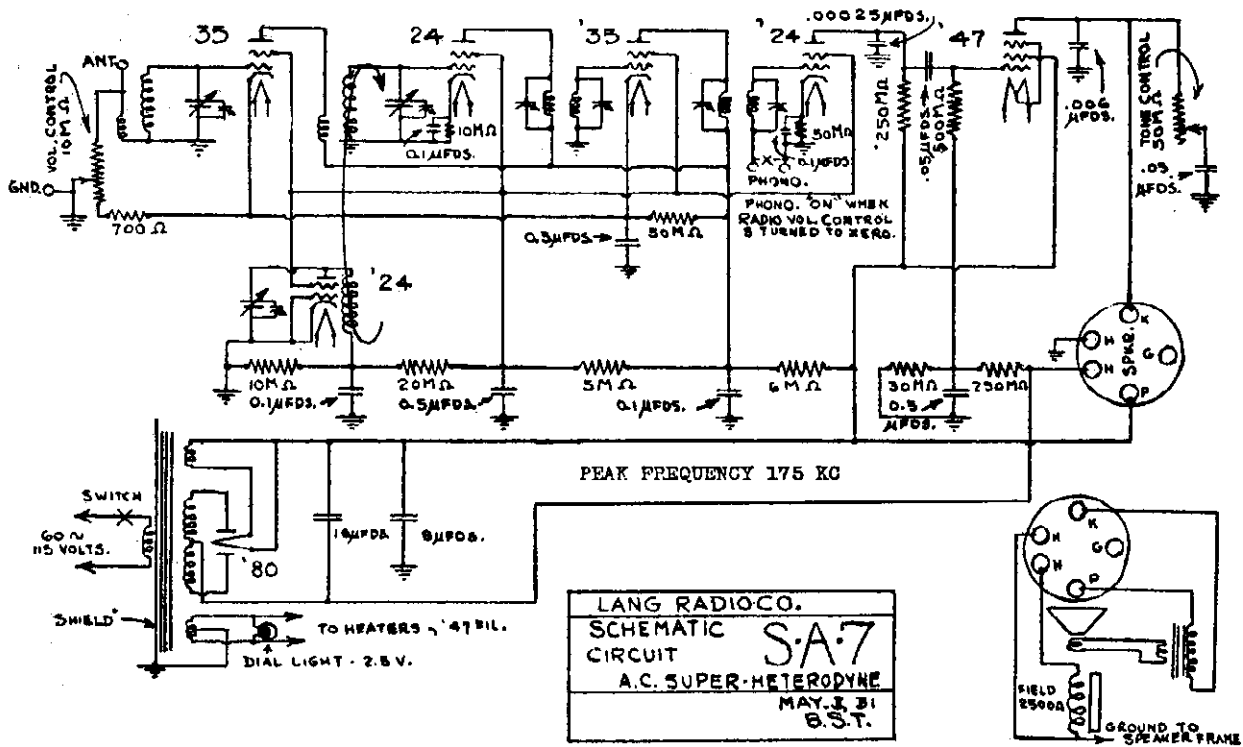

MONTGOMERY-WARD & CO.

MODEL 62-030
62-232
Troubadou

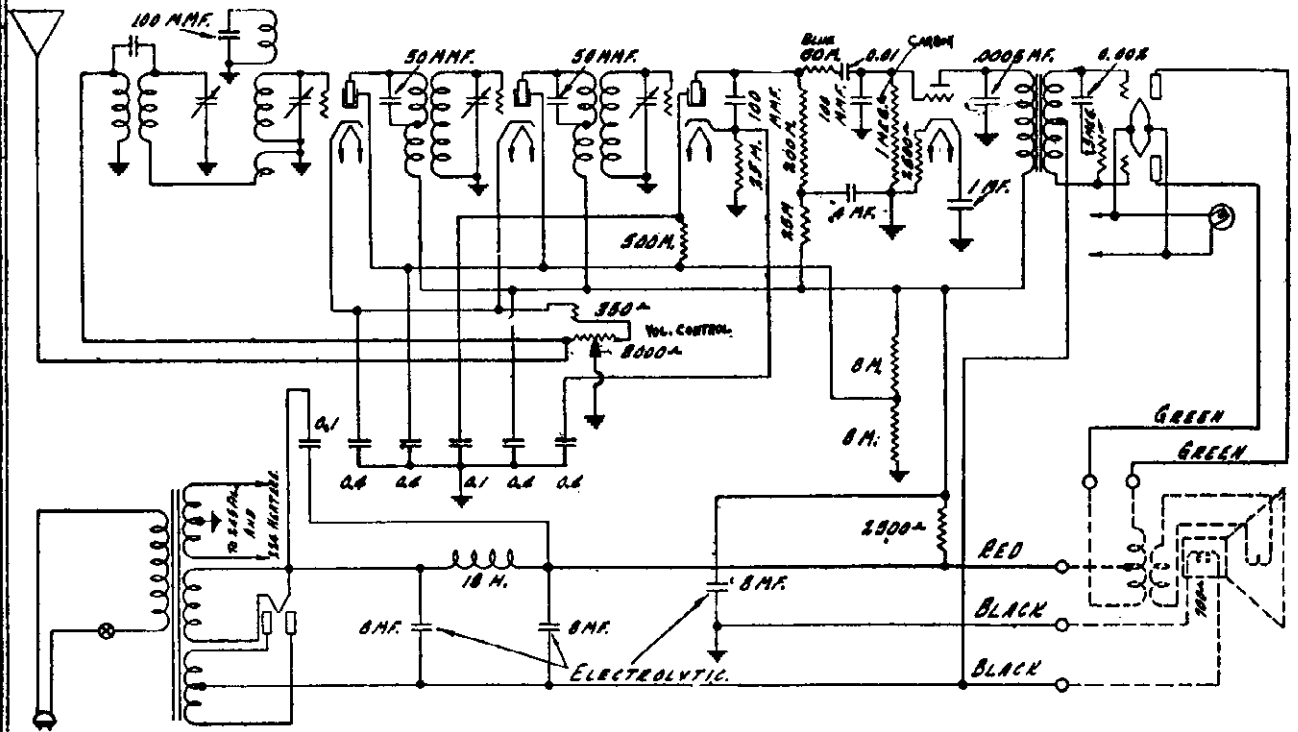

DOTTED LINES SHOWN ARE IN SPEAKER

The model 32 W chassis used in the Troubadour and Lafayette is similar in many respects to the Commander, Cavalier, Coronado and Cortez. The special differential features of this chassis are the band pass filter and the radio frequency transformers.

A band pass filter is used in the antenna input stage, and consists of two separate tuned circuits which are inductively coupled. The advantages of this filter are an increase in selectivity; elimination of cross talk and improved tone. Incorporated in the filter is a special coil and condenser, which is inductively coupled to the grid coil of the first tube, tending to give this stage a constant gain over the entire frequency band.

Another feature of this set is the tuned radio frequency coils which have two separate primary windings, so connected as to give equal gain throughout the broadcast band. A screen grid power detector is used, giving the advantages of sensitivity with very good overload characteristics. The over-all fidelity response characteristics are especially good, due to the resistance coupling used in the first stage of audio, and the 2A5 tubes in push pull in the last stage. Sensitivity in this chassis averages 4 Microvolts per meter.


R.F. Coils

The antenna input transformer is of the high impedance type, and is both inductively and capacitively coupled. The primary winding is on a small bobbin inside the coil form wound concentric with the secondary, allowing inductive coupling. The capacity coupling is obtained by an extra turn of wire connected to the primary and wound on the coil alongside one end of the secondary winding. This antenna coil is coupled to the grid coil of the first tube through three turns of wire wound on the low potential end of the grid coil. Inside of the grid coil is a small bobbin coil shunted by a 100 mufd. condenser, and being in inductive relation to the grid coil. This small coil with condenser in shunt is tuned to the lower frequency. The 100 mufd. condenser is a small condenser without any color marking to distinguish it from the 50 M.M.F. condensers with the yellow dot which are used in the other stages of the radio frequency. The primaries of the radio frequency coils proper, are made up of two parts: the inside primary is wound on a bobbin which is inside the coil form, and is shunted with a 50 M.M.F. condenser. The outside primary is wound on the coil form over the secondary winding and is separated by an insulated strip, the two primaries being connected in series. The energy transfer of the inside tuned primary decreases with increase in frequency—the energy trans-

fer of the outside primary increases with increase in frequency resulting in a net gain that is practically uniform over the broadcast band. Any trouble in the R.F. coils of this receiver will be noted by the lack of sensitivity at either the high or low wave part of the dial.

Twenty-Five Cycle Chassis

A twenty-five cycle power transformer and an additional .45 M.F.D. condenser are used in this chassis. In converting a sixty cycle chassis to twenty-five cycle, first remove the .1 M.F.D. condenser across the filter choke and connect it across the .1 M.F.D. screen condenser. This provides additional filtering. Connect the .45 M.F.D. condenser across the filter choke.

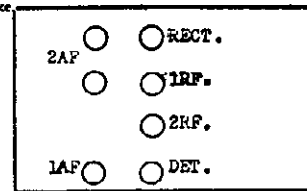

NO. 32 W CHASSIS—VOLTAGES AT SOCKETS—VOLUME CONTROL AT MAXIMUM—LINE VOLTAGE, 115—PLUG IN SOCKET OF RECEIVER—TUBE IN TEST SET

Type of Tube	Position of Tube	Function	V _{g1} Volts	V _{g2} Volts	V _b Volts	Control Grid "C" Volts	Screen Volts	Current MA	Plate Volts	Grid Test MA	V _{g1} Test MA
224	1	1st Radio	2.3	198	3	88	.9	3	3.5	6	
224	2	2nd Radio	2.3	198	3	88	.9	3	3.5	6	
224	3	Detector	2.3	150	6	40*	.1	6	25	6.4	
227	4	1st Audio	2.3	180	12.5			12.5	26	31	
245	5	2nd Audio	2.4	255	55				26	31	
245	6	2nd Audio	2.4	255	55				26	31	
280	7	Rectifier	5						36		

*Calculated value—cannot be read on ordinary Voltmeter.

MODEL 62-040
Commodore
62-181
Sovereign

MONTGOMERY-WARD & CO.

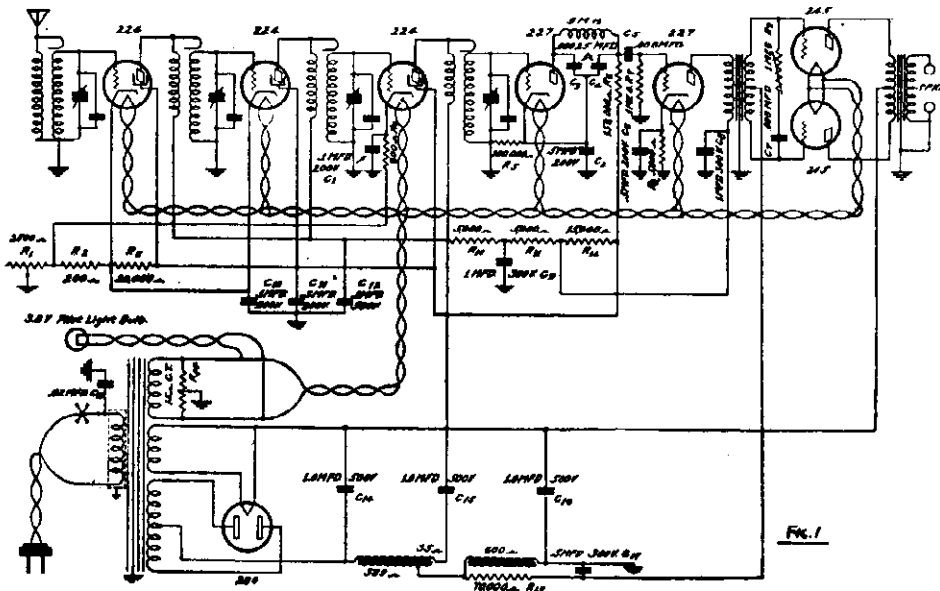


FIG. 1


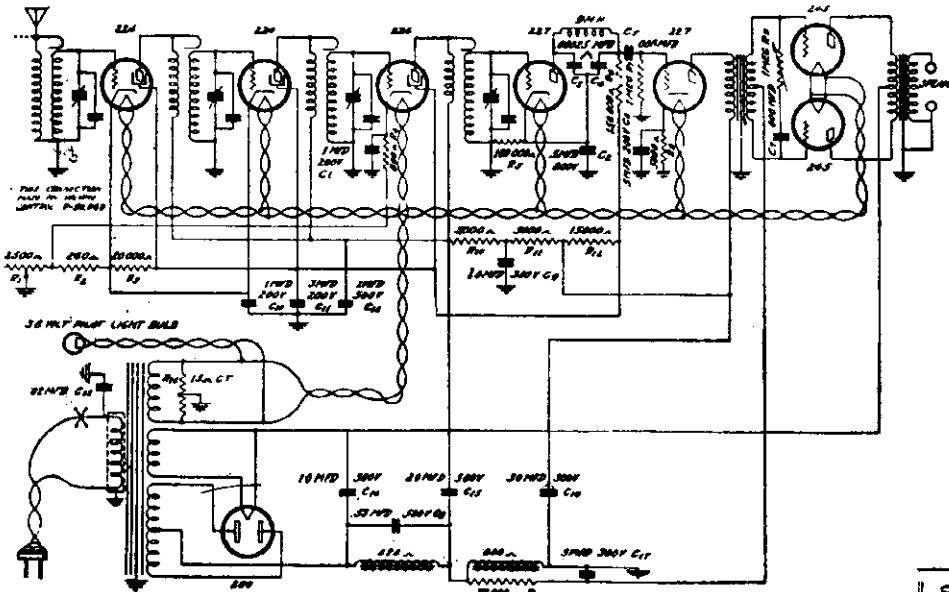


FIG. 3 25-Cycle Chassis

R.F. Coils

The R.F. Coils on this receiver are both inductively and capacitively coupled in such a way that the R.F. gain is constant throughout the entire broadcast band. Each coil is marked with a streak of paint inside the secondary coil near the lugs, according to the group into which it falls. Four coils of the same color are used in each chassis. When ordering a coil for replacement, therefore, be sure to mention the color of the paint on that coil so that it will be replaced with one of identically the same characteristics. If there is any doubt, return the coil. It is seldom that one of these radio frequency coils needs replacement, but should it be necessary to do so, first unsolder the wires on the coil lugs, then loosen the nuts holding the metal coil can. After the coil can is removed, loosen the two nuts holding the coil form and remove the coil.

Models 62-040, 62-181, 62-3335, 181, 187 (1938)

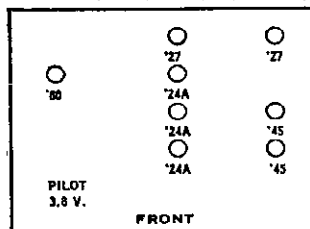

IMPORTANT
All chassis below serial number 139149 use volume control P-90966 shown in Figure 1. Chassis above 139149 use volume control P90969 shown in Figure 3. When replacing volume controls use P90969 and volume control connections shown in Fig. 3.

Tube Voltages

All D.C. voltages taken with a 1000 ohm per volt meter on the scale indicated in column headed "Meter Scale." Turn the volume control all the way on and connect the antenna and ground leads together.
The grid, plate, and screen grid voltages are measured to cathode of the heater tubes and to filament of three-element tubes.
The dynamic loud speaker has a field resistance of 600 ohms. The field is used as one of the filter chokes in the power pack.

Tube	Circuit	Meter Scale	90 V.	100 V.	110 V.	120 V.	130 V.
1st two 224 R.F. Amplifier Tubes	Grid	0-5	-2.5	2.9	-3.3	-3.7	-4.1
	Screen Grid	0-100	62	70	76	84	90
	Plate	0-750	220	240	270	295	310
2nd 224 R.F. Amplifier Tube	Grid	0-5	-1.9	2.3	-2.6	-3.0	-3.4
	Grid Plate	0-10	2.4	2.7	3.0	3.3	3.6
227 Detector Tube	Grid	0-100	21.0	24.0	25.0	29.0	32.0
	Grid Plate	0-10	3	4	5	5.5	6
227 Audio Amplifier Tube	Grid	0-250	90	145	158	170	183
	Grid Plate	0-10	30	34	39	43	47
245 Power Tubes	Grid	0-100	220	240	275	300	320
	Plate	0-750	300	330	360	400	415

MONTGOMERY-WARD & CO.

MODEL 62-11, 62-12, 62-14,
62-27, 62-19
Schematic (1st Type
Voltage

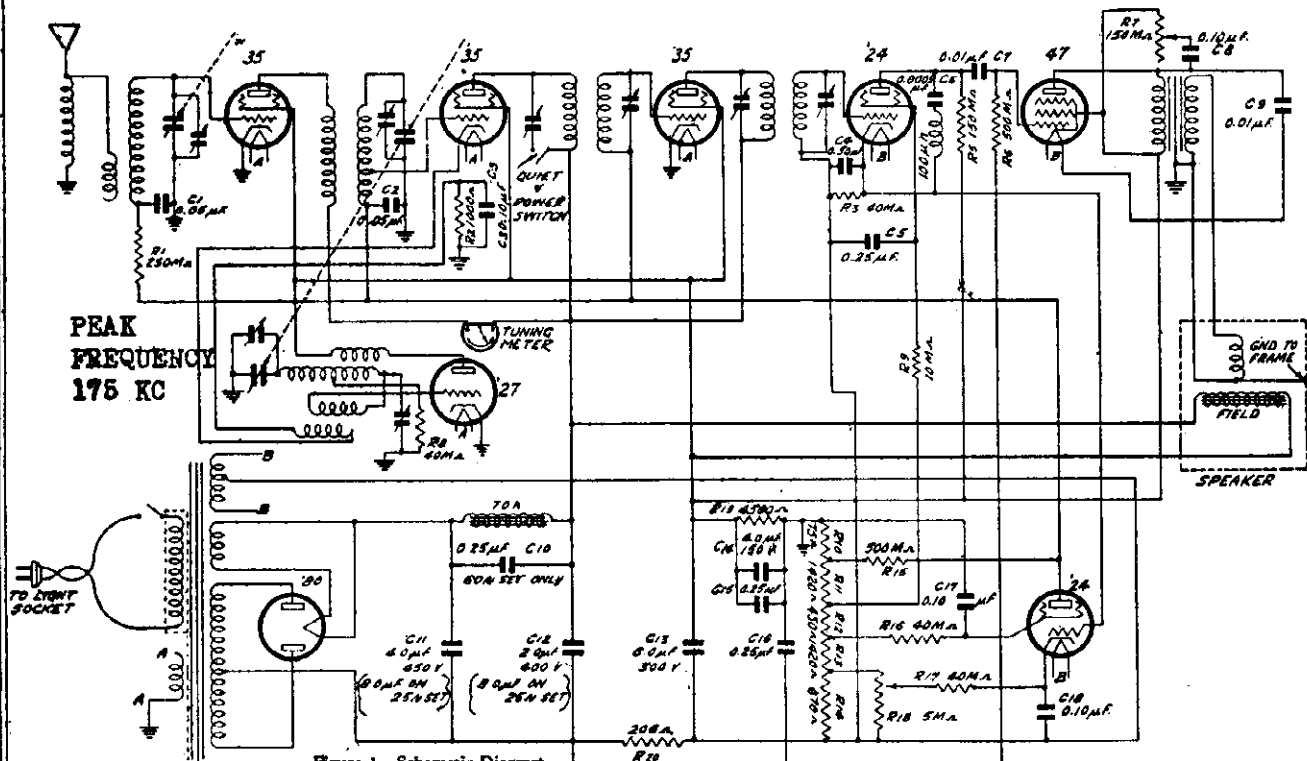


Figure 1—Schematic Diagram

TUBE	CIRCUIT	LINE VOLTAGE				
		90 V.	100 V.	110 V.	120 V.	130 V.
R.F. '35	Screen grid	70	78	85	92	100
	Plate	143	159	175	191	207
1st Det. '35	Screen grid	70	78	85	92	100
	Plate	143	159	175	191	207
I. F. '35	Screen grid	70	78	85	92	100
	Plate	143	149	175	191	207
Oscillator '27	Plate	70	78	85	92	100
2nd-Det. '24	Screen grid	66	73	80	87	94
	Plate	127	134	141	148	155
A. V. C. '24	—	14	15.5	17	18.5	20
	—Grid grid	24	26	28	30	32
Audio '47	Screen					
	Accel. Grid	199	221	244	267	289
	Plate	171	190	210	230	250
Rectifier '30	Current (both plates)	67 MA	75 MA	82 MA	89 MA	96 MA
	Plate to Plate Voltage	512	569	625	682	739

NOTE "GRENADE" No 62-12
Two entirely different chassis were supplied to the Retail Stores under the name "Grenadier." Each chassis, however, has a different Catalogue number and should be distinguished from this number. The Grenadier No. 62-12 is the same as our Nos. 1238 and 1838. Therefore, when servicing or ordering repair parts for the Grenadier No. 62-12, use the No. 1238 and 1838 service manual. Grenadier No. 62-14 (Catalogue No. 62-11) is the Wells-Gardner 8 tube chassis which will be described in this service manual.

The voltage readings on this chassis cannot be taken in the conventional way, namely between the tube elements and ground. You will note from diagram Figure No. 1, that the ground connection is taken off the shunt resistor near to the positive end, and the chassis is therefore, approximately 150 Volts positive, with respect to the tube elements. The correct voltage readings may be obtained by taking readings to the cathode of the heater type tubes, and filament of the 247.

TURN THE VOLUME CONTROL ALL THE WAY ON, CONNECT THE ANTENNA AND GROUND LEADS TOGETHER AND TURN THE GANG CONDENSER PLATES ALL THE WAY OUT. CHECK THE LINE VOLTAGE.

MONTGOMERY-WARD & CO.

MODEL 62-11, 62-12, 62-14
62-27
Socket-Data

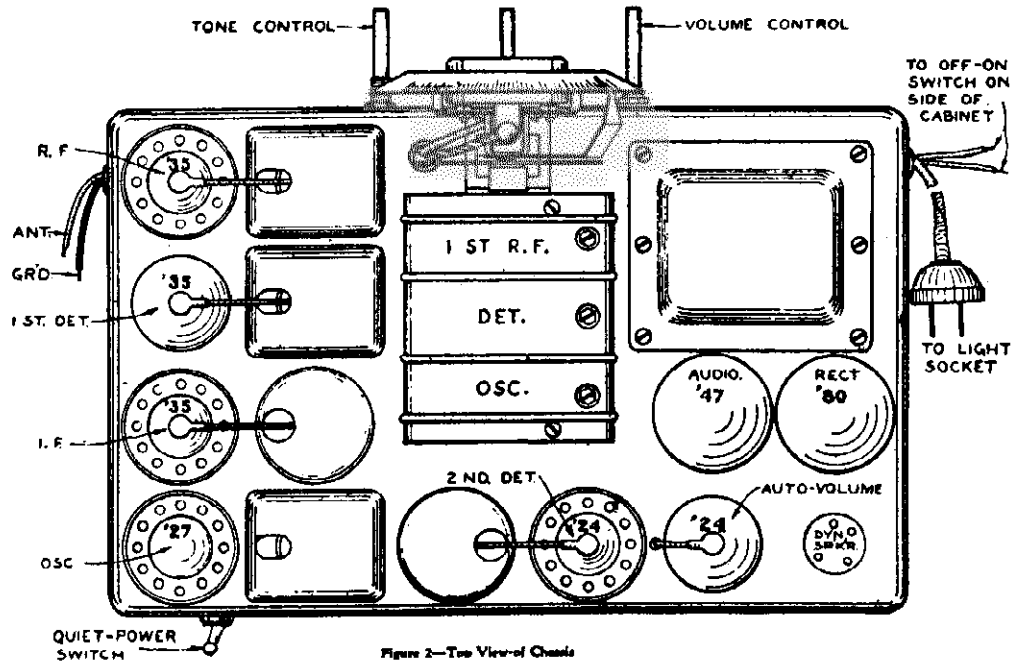


Figure 2—Top View of Chassis

Oscillator

A 227 tube used in this socket that does not oscillate will completely stop any signals from reaching the intermediate frequency amplifier and the chassis will not operate. There is also a slight variation in the characteristics of tubes, and for this reason it is advisable to try a number of tubes in the oscillator position and to use the one which gives the most satisfactory performance.

The oscillator has an adjustable tracking condenser which is adjusted at 600 kilocycles and remains fixed thereafter.

Automatic Volume Control Tube

The automatic volume control tube is equally as important as the oscillator tube. In this chassis a 224 is used. If the A.V.C. tube's characteristics are not exact, it will cause the chassis to lack sensitivity or spoil the tone quality. The tuning meter will not function properly with a poor A.V.C. tube. If the grid circuit of this tube is open the chassis will lose its sensitivity and in some cases will not pass signals. In each installation, therefore, it is advisable to try a number of 224's in the automatic volume control position and use the tube which gives the most satisfactory performance as to control of volume, operation of tuning meter, and tone quality.

Replacing Rubber Drive

You will note that the Vernier tuning drive on this chassis uses a rubber pinion. Under normal operating conditions this rubber will last for a number of years. Should it become worn it can be readily replaced by loosening the set screw of the brass bushing located next to the rubber pinion and pulling out the station selector shaft. Place a new bushing in position, slip the station selector shaft in place and tighten the set screw.

25 Cycle Chassis No. 62-14X

The 25 cycle receivers use power transformer No. P50540 instead of P50539. Two 8.0 mfd. electrolytic condensers No. P80880 are used instead of No. P80873 and No. P80874. The .25 mfd choke condenser C10 is not used in the 25 cycle chassis.

Resonance Meter

This meter is a small milliammeter in the plate return of the R. F. tube. When the receiver is turned on, and no signal is tuned in, the meter will indicate the total plate current drawn by the R. F. tube. When a signal is tuned in, the meter will indicate less current, and when tuned to resonance, the greatest swing (or least deflection), of the meter hand will be obtained.

The deflection of the meter hand will vary according to the setting of the manual volume control on this chassis.

Method of Aligning

These chassis will only lose their alignment when they have been subject to extremely rough handling or have been used under abnormal conditions, as for instance, a very hot or very humid location. Under any one of these conditions, the alignment may shift slightly and the chassis should be realigned according to the following procedure.


Tune in a local station of approximately 1300 Kilocycles, being very careful to tune this station in at the exact resonance point. This may be easily done by carefully adjusting for maximum deflection of the tuning meter. Then reduce the volume to the desired level. Turn to Figure 2 and note the position of the first radio frequency trimmer adjustment. Slowly turn the trimmer to the right or left until the signal is at maximum intensity. Proceed to adjust the detector trimmer in the same manner. In most instances these two adjustments will align the chassis perfectly. If the receiver still lacks sensitivity after the first RF and detector trimmers have been adjusted, then the oscillator trimmer may be checked by turning the adjusting screw not more than a quarter of a turn to the right or left of its present adjustment. When aligning any of these receivers be sure that the condenser shield is firmly in place and that you are using good tubes in the chassis. This is particularly true in case of the oscillator and automatic volume control tube.

The R. F., 1st detector, oscillator and 1st I. F. tubes have one side of their heater circuit grounded.

The voice coil and speaker frame are grounded to prevent any "feedback" of a 175 K. C. frequency which might enter the speaker.

MODEL 62-11, 62-14, 62-19,
62-27

Schematic (2nd Type) MONTGOMERY-WARD & CO.
Schematic-Data

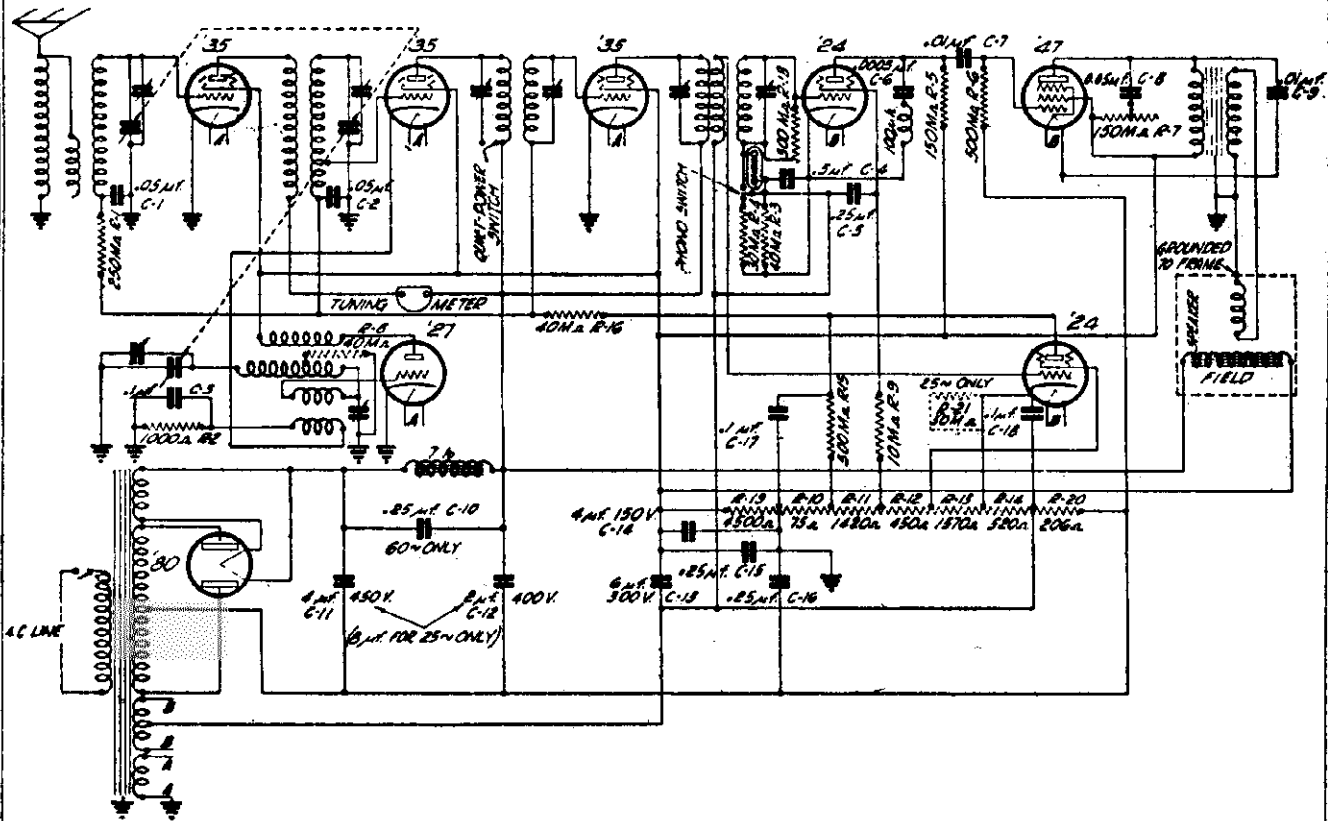

The automatic volume control system in this chassis has been changed and therefore some of the parts are not as listed and described in the service manual. The parts which differ are listed below and the revised automatic volume control circuit is shown in the schematic wiring diagram on the opposite side of this sheet. No other changes in the circuit or in the mechanical arrangement of the chassis have been made.

A chassis in which the automatic volume control system has been changed may be identified by a green paint mark on the left rear corner of the chassis near the speaker socket, or by two grid leaks brought out of the top of the 2nd I.F. transformer assembly. This chassis formerly had but one lead brought out of the top of the 2nd I.F. transformer assembly. The resonance meter furnishes a further means of identification as the deflection of the meter hand will not vary when the setting of the manual volume control is changed. This is due to the manual volume control having no effect on the action of the automatic volume control tube. The manual volume control is connected in parallel in the grid circuit of the 2nd detector tube and is used to vary the resistance in that circuit and, in so doing, control the input to that tube.

The following parts are for use only in a chassis having the revised automatic volume control system and are not interchangeable with those listed in the service manual repair parts list.


When ordering parts for replacement, be sure the correct part number is given.

Part No.	Name	Cost Price
P-90988-A	Candohm Resistor	\$0.38
P-90988	500,000-ohm Volume Control.....	.30
P-1446	2nd I.F. Transformer Assembly....	.70
P-70719	Shielded Volume Control Wire Assembly06
P-1445	R.F. Interstage Coil Assembly.....	.37

(The 40,000-ohm Resistor, R16, is a part of this assembly. The 500,000-ohm Resistor, R15, is a part of the R.F. Interstage Coil Assembly (Part No. 1397) listed in the service manual.)

MONTGOMERY-WARD & CO.


MODEL 62-070
Princess
62-060
Challenger Jr.
(1800)

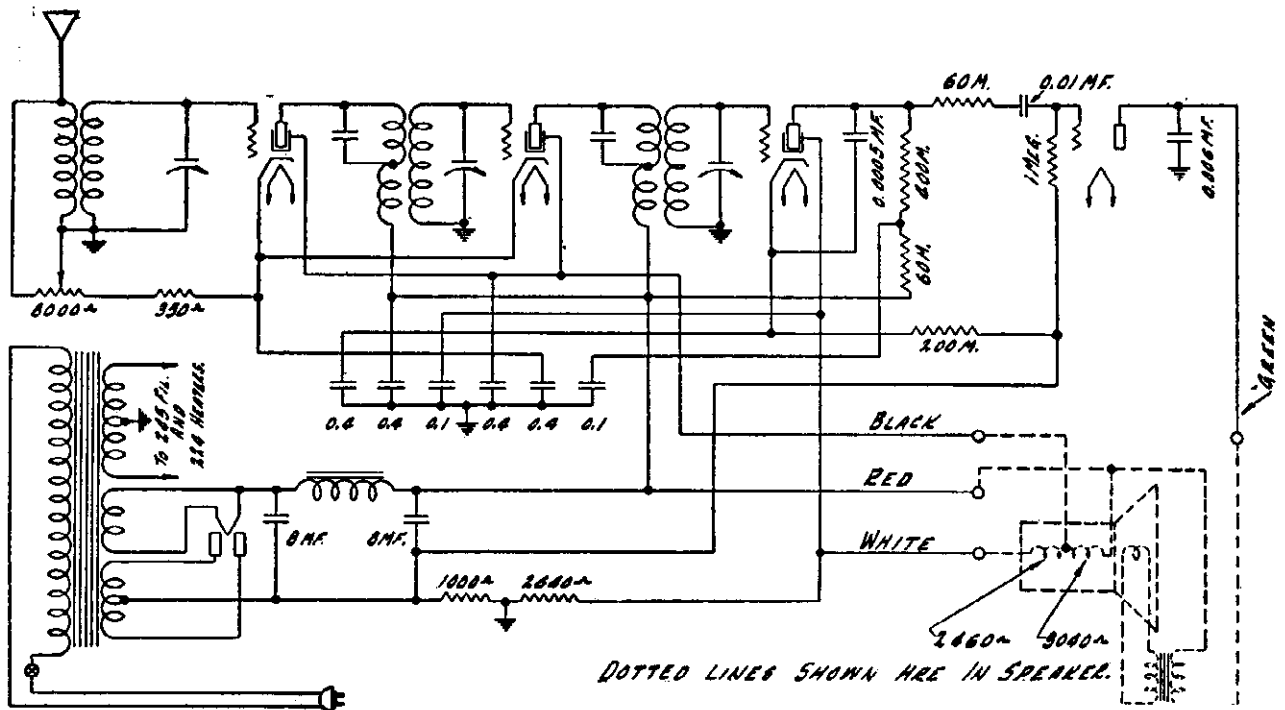

DOTTED LINES SHOWN HERE IN SPEAKER.

NO. 26 W CHASSIS—VOLTAGES AT SOCKETS—
VOLUME CONTROL AT MAXIMUM—LINE VOLT-
AGE, 115—PLUG IN SOCKET OF RECEIVER—
TUBE IN TEST SET

Type of Tube	Position Tube	Function	"A" Volts	"B" Volts	Control Grid "C" Volts	Screen Volts	Screen Current MA	Cathode Volts	Plate MA	Grid Test MA
224	1	1st Radio	2.2	245	2.5	80	.6	2.5	2.9	5.1
224	2	2nd Radio	2.2	245	2.5	80	.6	2.5	2.9	5.1
224	3	Detector	2.2	130	3.	40	.1	3.	.25	.4
245	4	Audio	2.35	245	50.			28.		31.
280	5	Rectifier	4.6					25.		

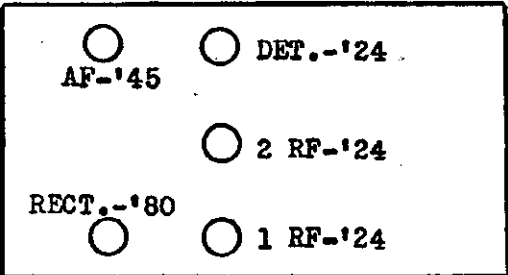

General Description

The Model 26W chassis used in both the Princess and Challenger, Jr., is similar in many respects to the 32W chassis used in the Troubadour. The operating voltages, however, will be found to be different, and also this chassis does not use the band pass filter input circuit, as used in the 32W. Only one 245 tube is used in this chassis, and only one stage of resistance coupled audio.

The speaker is of a new type using a center tap field. The entire field winding being used as a shunt resistor. The center tap supplies the screen grid voltage to the radio frequency tubes. Only two electrolytic filter condensers are used, and a number of the small bypass condensers are eliminated, as shown in the schematic diagram, Figure I.

The general service procedure as described for the Model 32 W chassis can be used in servicing the 26W chassis.

AIRLINE 5 TUBE S.G.

"Princess" No 62-070
and
"Challenger Jr." No 62-060
(Cat. No 1800)

60 v CHASSIS No 26-W
25 v " No 26-WX

NOTE: For 25 Cycle Sets use No. 2281 Power Transformer instead of No. 2251.

MODEL 921, 923, 924, 839
(Radiola 21, 22)
Conversion Data

MONTGOMERY-WARD & CO.

Method of Converting a 6 Volt Receiver for Using the 2 Volt Tubes

ALL of the original Radiola Models 21 (Table Model) and 22 (Console Model) were designed for 6 Volt storage battery operation. It is possible, however, to change the wiring of these sets slightly so that the new 2 Volt dry cell tubes may be used in conjunction with either the Aircell battery or our 2 Volt long life A battery.

Description of the original receiver for storage battery operation is given first. Following this, the method of changing over the set for 2 Volt tubes will be shown. The original color code is shown on the schematic diagram, Figure No. 1. For storage battery operation the cable should be connected to the batteries according to this code.

The following parts are necessary:

One No. 6000 long life A battery designed to last one year at three hours a day. One kit of tubes consisting of 2—No. 232 screen grids; 2—No. 230's; 1—No. 231. One new instruction book. One No. 5512-75 Milliampere pilot light. One pair of green and red resistors. One socket chart label to stick over old RCA labels. The last four items can be ordered on stock order by specifying "one conversion kit for Radiola Set." The A battery and tubes should be ordered on stock order in the usual way. When you receive all of the necessary parts to make the conversion, you will use them in the following manner:

Operation No. 1

First examine Figure No. 2. There are three resistors at the back of the chassis mounted directly underneath the sub-panel. The wires attached to these three resistors must not be removed but the three resistors should be shorted out by soldering short pieces of wire across as shown on the dotted lines in Figure No. 2. On the console models it is not necessary to remove the chassis to do this. Remove the chassis when changing the table model.

Operation No. 2

Insert new low drain pilot light and adjust the position by sliding the pilot light clamp up and down until the figures on the dial can be seen prominently.

NOTE: The insertion of this new pilot light is extremely important—the life of the A battery depends upon it.

Operation No. 3

Remove the Radiola instruction book, red service card and pilot light. Discard them.

Operation No. 4

Remove the battery tag from the cable and destroy it.

Operation No. 5

Connect one end of the green (2.2 Ohms) resistor to the end of the yellow positive A battery lead. This is important.

Operation No. 6

Insert new instruction books and paste new tube chart label over RCA tube position chart, and advertising sticker. This label is designed to cover the tube replacement label and the socket chart. Don't cover up the license notice.

The tube chart indicates the position of the new tubes. 232's—R.F. stages—230's—1st Audio and Detector—231—last audio.

The red resistor is given to the customer in an envelope. It contains a small red label tied at one end and instructing the customer how to use it, which is as follows:

Over a period of time the A battery voltage will drop. Its initial voltage is slightly over 3 Volts. The green re-

sistor drops this 3 Volts down to 2 Volts for the tubes. After the set has been used for a few months the battery voltage will drop to about 2½ Volts, so it is necessary to use a smaller resistor on the battery to give the tubes 2 Volts. When the set begins to lose volume and the tubes go dim, the green resistor should be replaced with the red resistor. After the receiver has been in use a few months more, the battery voltage will drop to about 2 Volts, then the resistor should be removed entirely and the battery used alone until dead.

Note: The new color code and method of connecting the battery cable is shown in Figure No. 3. Use this color code for connecting the batteries after the conversion is made.

Caution: Be sure all battery connections are correct.

Alignment:

In order to align the condensers, it is necessary both in the console and table model, to first remove the chassis from the cabinet. Connect up all batteries and tune in a station at about 1400 Kilocycles. The trimmer condensers will be found mounted on the frame of the variable condenser nearest the front panel. These should be adjusted in turn for maximum volume on a station that does not fade.


Long Distance Switch:

In many localities the local distance switch will not operate satisfactorily on the local side.

In the country it is seldom necessary to use the local switch on the local side, for it is only put on as a safeguard to enable proper control of volume when under the shadow of powerful broadcast stations.


IMPORTANT NOTICE

If the pilot light should burn out and you are unable to obtain another one immediately, remove the celluloid strip from the escutcheon plate by sliding it out of its slot from the rear. This will enable the user to see the figures on the dial until such time as you are able to put the correct pilot light in place. **Never use any pilot light but the No. 5512 we recommend.**

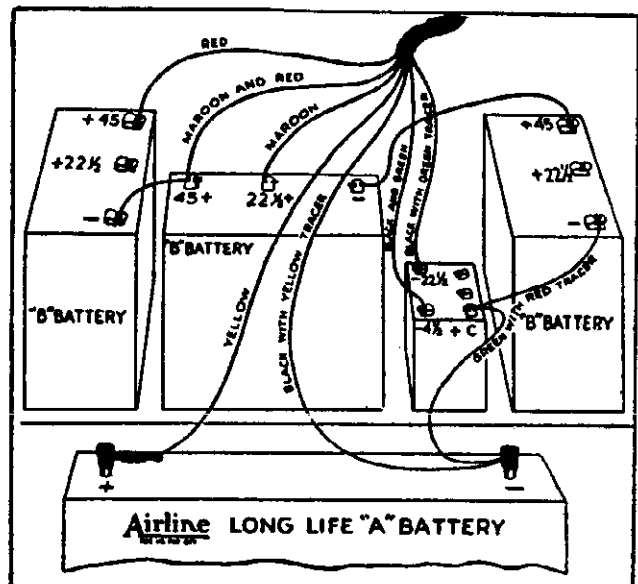

MONTGOMERY-WARD & CO.

MODEL 921, 923, 924, 839
(Radiola 21, 22)
Schematic-Data

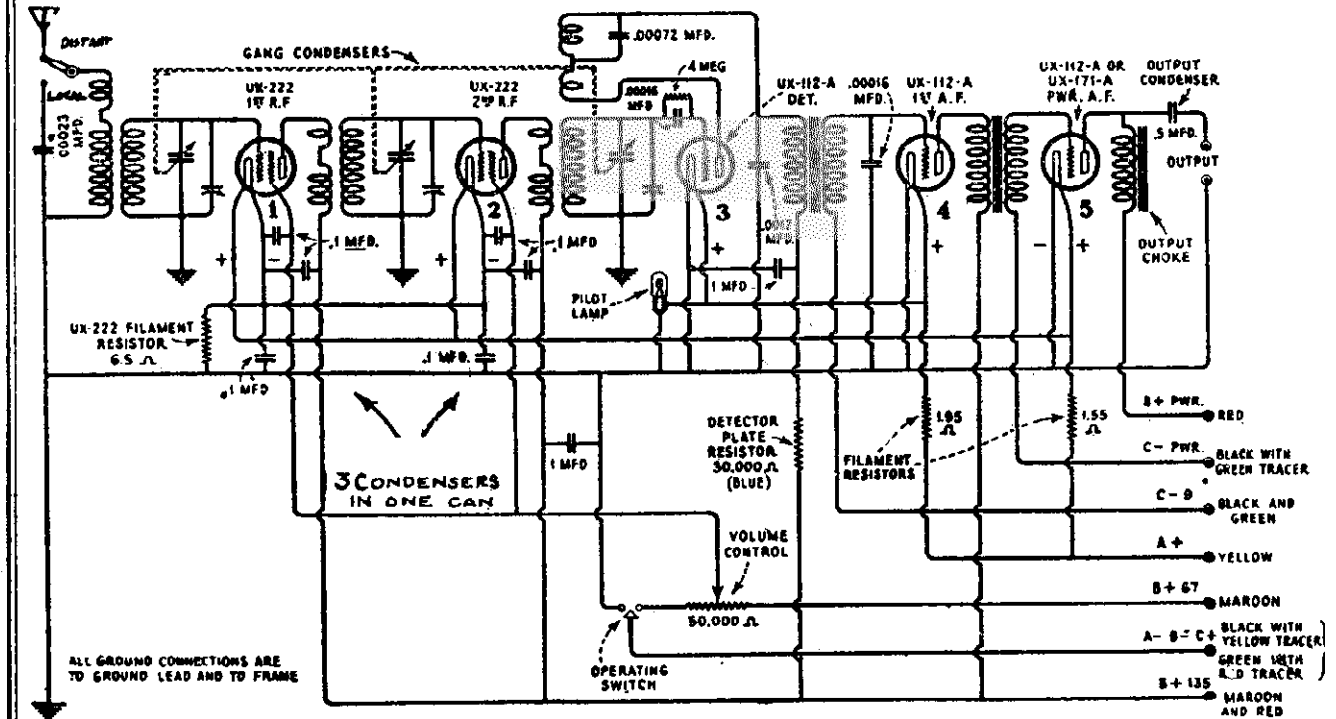

General Description



Radiolas 21 and 22 are the tuned RF type, using two stages of radio frequency and one tuned antenna stage. The antenna coil has a high impedance primary and for this reason will give most satisfactory performance on an outside aerial of from forty to seventy-five feet long, including Lead-in. A forty foot aerial should be used in congested localities where there is serious interference. In the event it is impossible to install an aerial and lead-in of from forty to seventy-five feet, a longer aerial may be used and a .0005 or .0001 MFD fixed condenser connected in series with the antenna connection to the set.

Volume Control

The volume control consists of a 50,000 Ohm Potentiometer connected in the B+67 Volt lead and controls the screen voltage to the two RF tubes. The on and off switch is of a special type which automatically breaks the A & B connections when snapped in the off position.

Six Volt Storage Battery Operation


Figure No. 1 gives the completed circuit for operation on 6 Volt A supply. Two type 222 tubes are used as radio frequency amplifiers. A 112A detector, a 112A tube in the first audio stage and a 112A or 171A tube in the second audio stage. The two 222's used in the RF stages receive their filament supply of 3.2 Volts through the 6 1/2 Ohm resistor connected in the A. negative lead. The detector and first audio are operated at 5 Volts through the 1.95 Ohm filament resistor in the positive A lead. The filament of the power stage is supplied through the 1.55 Ohm filament resistor. A 171A power tube may be used in the power stage with the proper B supply of 180 Volts and 40 1/2 Volts C. A 112A tube using 135 Volts of B and 9 Volts of C is recommended however, for most economical operation.

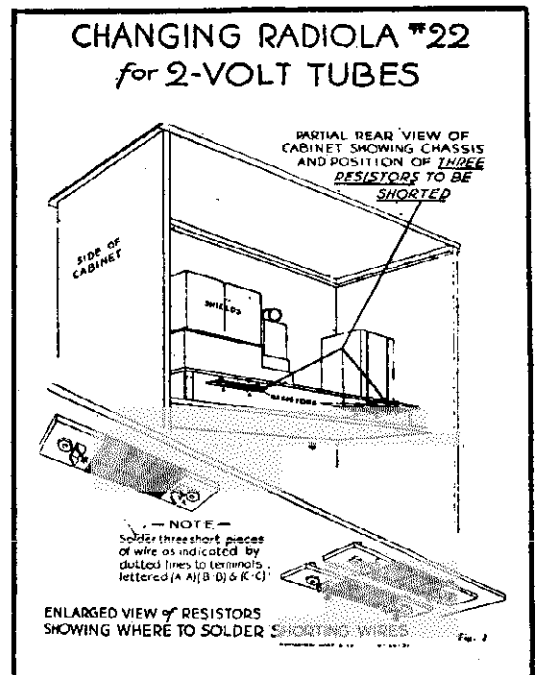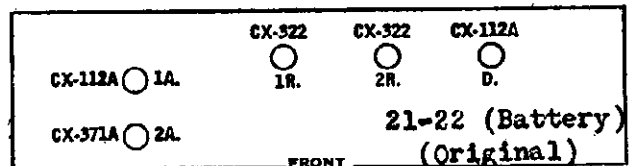

MODEL 1111 (62-1611
 Fantasy
 811 (62-1711)
 Solo
 Voltage-Data

MONTGOMERY-WARD & CO.

Models 811, 811X, 1111, 1111X (1931)

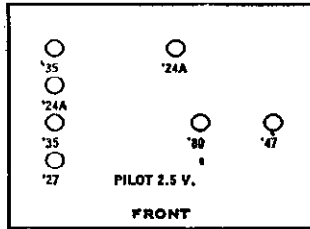

R.F. and Oscillator Transformers

The antenna and R.F. coupling transformers are properly shielded and the oscillator unit is assembled in a shield together with the 600 K.C. tracking condenser, the .00075 condenser (C16) and the resistor (R14) to ground. This method of assembly has eliminated radiation which is a common fault in superheterodyne receivers.

These three units are matched within one microhenry. Each coil has a paint mark inside the coil form near the terminal lugs and the color of this mark indicates the inductance of the coils. The antenna, R.F., and oscillator units in each receiver have the same color and it is necessary that the color be mentioned when ordering a transformer for replacement.

RESISTORS

Diagram Key	Part No.	Resistance in ohms	Type
R1	P-90976		Vol. Cont.
R1	P-90978		Vol. Cont. With Switch
R3	P-90905-B	15,000	Carbon
R4	P-90916-B	40,000	Carbon
R5	P-90927-A	25,000	Carbon
R6	P-90926-A	30,000	Carbon
R7	P-90956	30,000	Carbon
R8	P-90977	1 Meg.	Tone Cont.
R9	P-90938-A	500,000	Carbon
R10	P-90941-A	50,000	Carbon
R11	P-90959-A	20,000	Carbon
R12	P-90930-C	10,000	Carbon
R13	P-90906-B	2,000	Carbon
R14	P-90956-A	30,000	Carbon
R15	P-90975-A	270	Candohm
R16	P-90963-A	150,000	Carbon
R17	P-90979	7,000	Carbon

STANDARD COLOR CODE

Tube	Circuit	Meter Scale	110 V.
R.F. (Ant) '35	Grid	0—10	1.9
	Screen Grid	0—100	63.
	Plate	0—250	225.
1st Det. '24	Grid	0—25	14.5
	Screen Grid	0—100	65.
	Plate	0—250	220.
Int. '35	Grid	0—10	1.9
	Screen Grid	0—100	63.
	Plate	0—250	225.
2nd Det. '24	Grid	0—25	14.5
	Screen Grid	0—100	65.
	Plate	0—250	135.
Osc. '27	Grid Plate	0—100	80.
Aud. '47 (See Caution Above)	Grid	0—10	2.7
	Accelerating Grid	0—250	225.
	Plate	0—250	205.
'80 Rect.	Filament, to Ground	0—1000	233.

Tuning

The primary and secondary of both intermediate transformers are tuned with adjustable condensers which remain fixed after the transformers have been tuned to exactly 175 kilocycles.

The oscillator has an adjustable tracking condenser which is adjusted at 600 kilocycles and remains fixed thereafter.

Condensers and Resistors

Three blocks contain the majority of condensers. The choke in the plate circuit of the second detector tube is, also contained in one of these blocks. The common leads of condenser blocks No. 1 and No. 2 are grounded. C1, C4, and C6 in block No. 3 have a common lead which is grounded, and the choke, and C3 in this block have a common lead connected to the plate of the 2nd detector.



ANALYZER CHART

All voltages taken with a 1,000 ohm per volt voltmeter on the scale indicated in the column headed "Meter Scale." Turn the volume all the way on and connect the antenna and ground leads together. The grid, plate, and screen grid voltages are measured to cathode of the '24 and '35 tubes and to filament of the '47 tube.

The grid voltage on the '27 oscillator cannot be taken except with a very sensitive, low scale voltmeter. The voltage is approximately .05 volts when the A.C. line voltage is 110 volts.



MONTGOMERY-WARD & CO.

MODEL 1111 (62-1611)
Fantasy
811 (62-1711)
Solo
Schematic

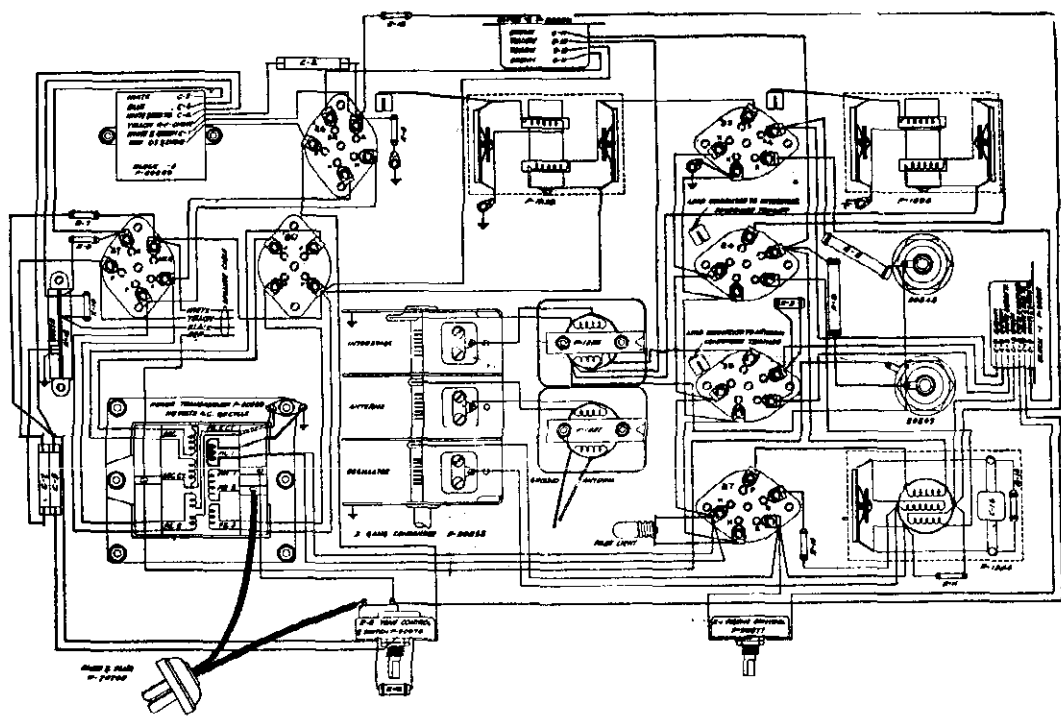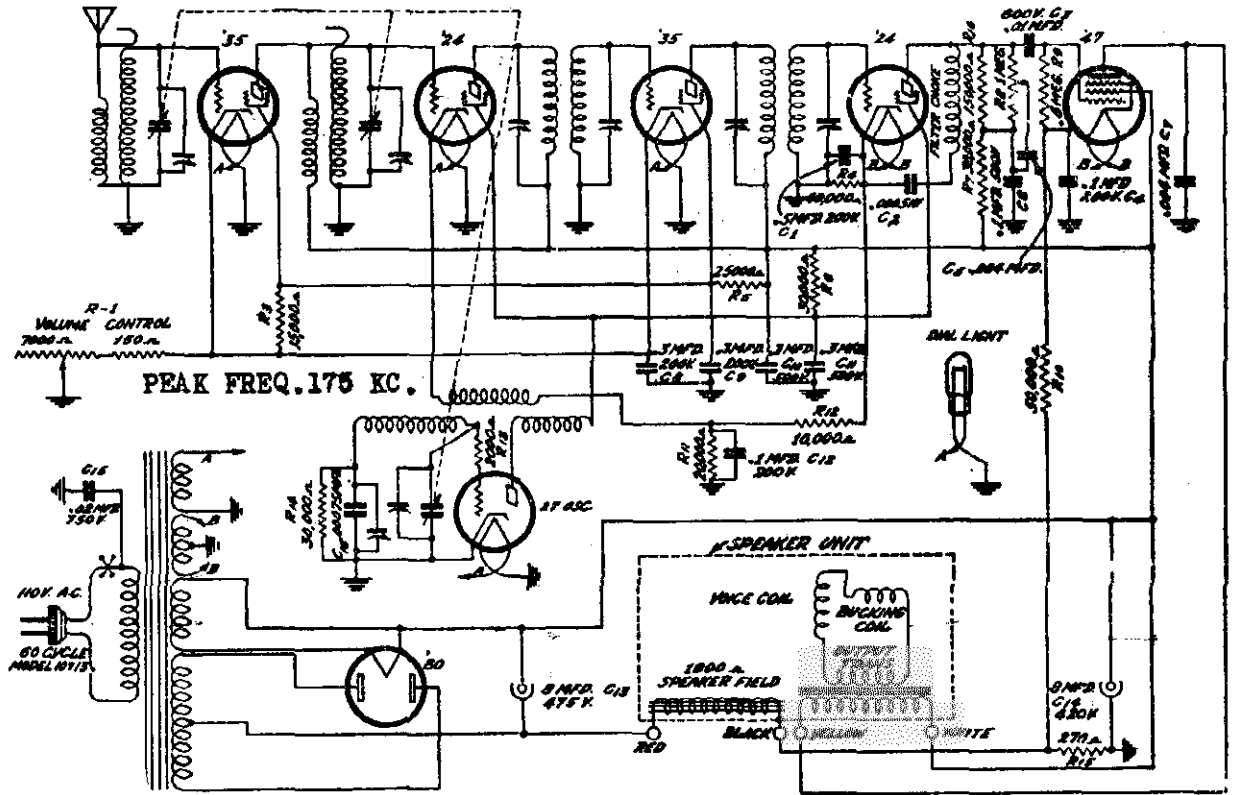

MONTGOMERY-WARD & CO.

MODEL 1258
(62-1838)

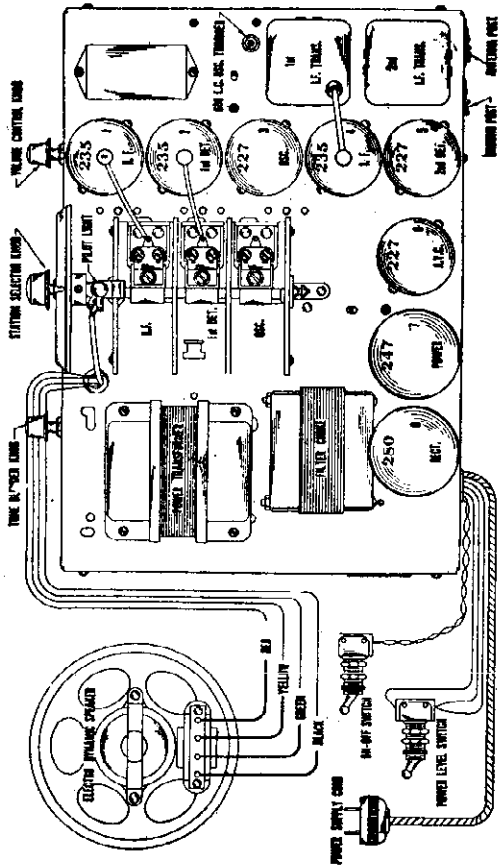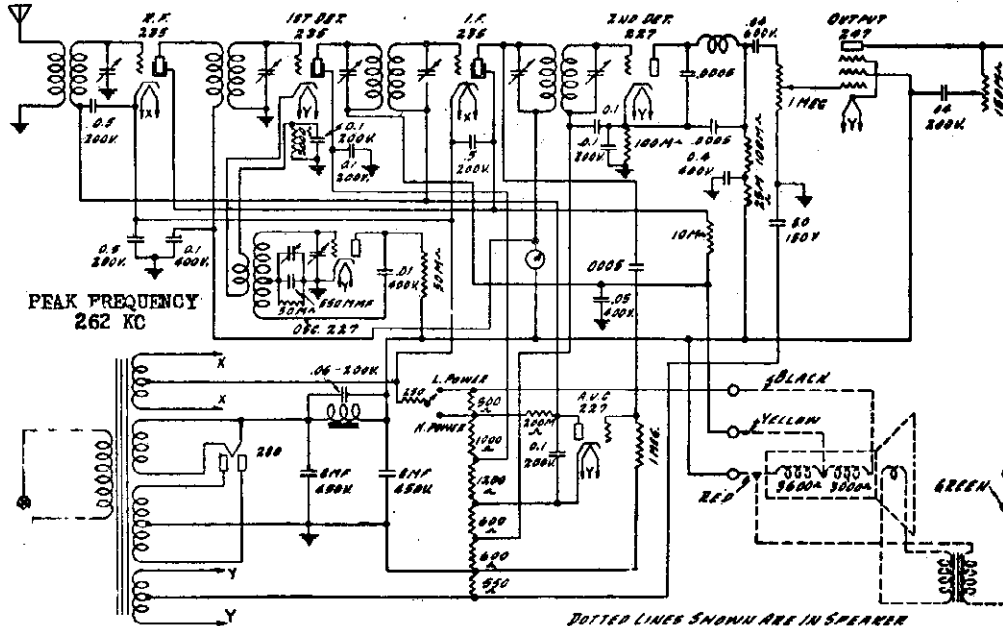

Top View of Chassis Showing Tube Location and Speaker Connections

In order to provide satisfactory tracking with the K. F. and 1st detector tuned circuits the oscillator is provided with a 600 K. C. and a 1400 K. C. trimmer condenser. The 1400 K. C. trimmer condenser is located on top of the tuning condenser and is connected across the tuning condenser. The 600 K. C. trimmer condenser is across the 550 Mmf. fixed condenser and the adjusting screw is in front of the first I. F. can on top of the chassis.

The I. F. transformers are small universal wound coils mounted on a piece of tubing. The I. F. tuning condensers are small mica condensers. The coil tubing standards and condensers are mounted on porcelain bases and are enclosed in metal cans located on top of the chassis. The adjusting screws of the four I. F. tuning condensers are reached from the bottom of the chassis.

Voltages

Check the voltages at the sockets to see if the power system is delivering the correct voltages. The antenna and ground should be disconnected. The shield should be on. The tester plug can be inserted in the sockets and the shield placed over it. When the plug is inserted in the oscillator socket, the cable must be doubled back over it in order to get the shield back on. When reading the voltages of the 1st detector bring the grid cap and wire through the trimmer condenser hole in the shield. The voltage chart shows the voltages and currents with all tubes in, speaker connected and set in operating condition. The voltages will vary with individual receivers and with variations in tubes. The voltages as shown are with a line voltage of 115.

Several of the voltages as indicated in the chart cannot be satisfactorily read at the socket but should be read across the resistors at which they are developed.

8 TUBE CHASSIS—VOLTAGES AT SOCKETS—VOLUME CONTROL AT MAXIMUM LINE VOLTAGE 115—POWER LEVEL SWITCH HIGH POWER

Type of	Function	A ⁽¹⁾ V	A ⁽²⁾ V	B ⁽³⁾ V	Grid V	Screen V	Plate V	Grid Test MA
235	R.F.	2.3	190	2.3(1)	2.3(1)	68	1.0	3.8
235	1st Det.	2.3	190	6.3	2.3(1)	70	.35	6.5
235	Osc.	2.3	80	15.5(2)	2.3(1)	68	.6	4.9
237	I.F.	2.3	190	2.3(1)	2.3(1)	68	.6	4.7
237	2nd Det.	2.3	150	2.3(1)	2.3(1)	68	.6	4.8
237	A.V.C.	2.3	65(3)	40(4)	2.3(1)	280	0	6.0
247	Power	2.35	260	20(4)	0	0	0	0
280	Rectifier	5	5	0	0	0	0	0


(1) Measured across 250 ohm series resistor.
(2) Measured across 15 to 30 ohm series resistor.
(3) Measured across 1000 and 1200 ohm sections of shunt resistor.
(4) Measured across two 600 ohm sections of shunt resistor.
(5) Measured across 350 ohm resistor.

25 Cycle Chassis No. 1238X

For 25 cycle sets remove the .06 Mfd. condenser across the filter choke and use No. U-3084 power transformer instead of U-2783.

MONTGOMERY-WARD & CO.

MODEL 1355 (62-1955)
Minstrel
Schematic
Voltage

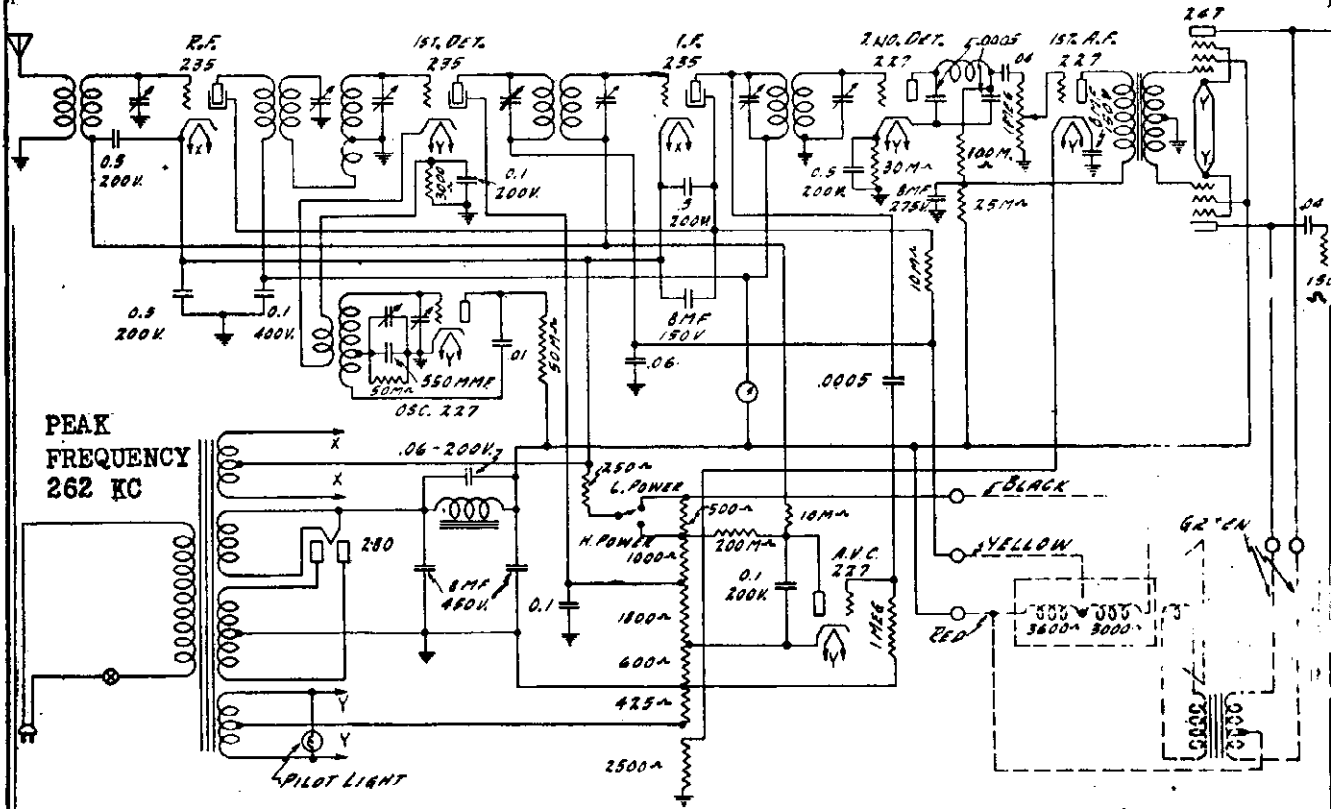

1955 AND 1355 CHASSIS—VOLTAGES AT SOCKETS
—LINE VOLTAGE 115 VOLUME CONTROL AT
MAXIMUM—POWER LEVEL SWITCH
HIGH POWER

Type of Tube	Position of Tube	Function	"A" Volts	"B" Volts	Control Grid "C" Volts	Screen Volts	Screen Current MA	Cathode Volts	Plate MA	Grid Test MA
235	1	R.F.	2.3	175	2.3 ⁽¹⁾	65	.7	0.	4.	6.
235	2	1st Det.	2.3	185	7.0	69	.4	14.	2.0	2.6
235	3	I.F.	2.3	175	2.3 ⁽¹⁾	65	.7	0.	4.0	6.0
227	4	2nd Det.	2.3	115	12.			7.5	.4	.5
227	5	1st Audic	2.3	145	11. ⁽¹⁾			10.	4.6	5.4
227	6	Osc.	2.3	83	15—35 ⁽²⁾			21.	4.2	4.4
227	7	A.V.C.	2.3	89 ⁽⁴⁾	20. ⁽⁵⁾			1.5	0.	0.
247	8	Power	2.35	255	18.5	265	4.5			
247	9	Power	2.35	255	18.5	265	4.5			
280	10	Rect.	4.9						21.	28.
									45.	

- (1) Measured across 250 ohm series resistor.
- (2) Measured across 2500 ohm series resistor.
- (3) Bias voltage varies from 15 to 35 between 1500 and 550 K.C. settings of tuning condenser.
- (4) Measured across 1000 and 1800 ohm section of shunt resistor.
- (5) Measured across 600 ohm section of shunt resistor.

Voltages

Check the voltages at the sockets to see if the power system is delivering the correct voltages. The antenna and ground should be disconnected. The tube shield should be on. The tester plug can be inserted in the sockets and the shield placed over it. When the plug is inserted in the 235 tube sockets care must be taken that the grid connection is not shorted to the tube shield. The chart shows the voltages and currents with all tubes in, speaker connected and set in operating condition.


In reading the I. F. voltages at the socket with a set analyzer some difficulty may be encountered if the control grid lead is in the same cable as the rest of the leads to the socket plug. If this is the case the grid plate capacity caused by the grid and plate leads being in the same cable results in a feed back which causes an I. F. oscillation. This manifests itself as a blocking or motorboating.

25 Cycle Chassis No. 1355X

For 25 cycle sets remove the .06 Mfd. condenser across the filter choke and use No. U-3169 power transformer instead of No. U-2912.

MODEL 1355 (62-1955)
 Minstrel
 Socket-Data

MONTGOMERY-WARD & CO.

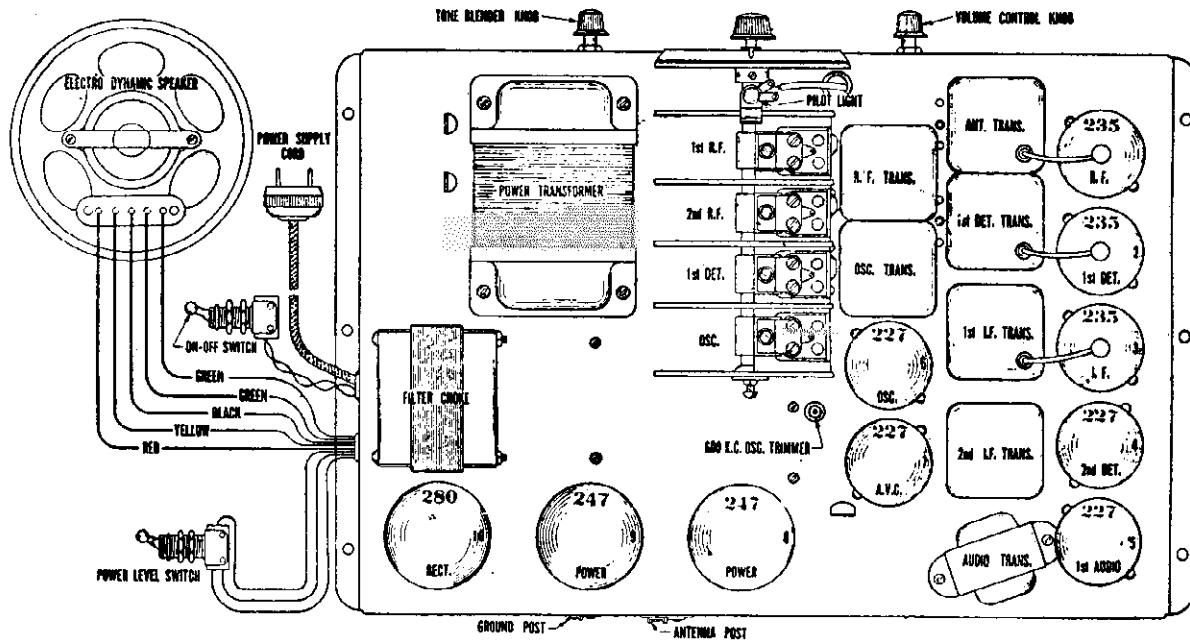

Automatic Volume Control

The automatic volume control as used in this receiver varies the signal strength by changing the bias voltage of the R. F. and I. F. 235 tubes. A 227 tube is used as the A. V. C. tube. Plate, cathode and grid circuits of this tube are connected to the voltage divider resistor as shown in Fig. 1 to secure the required plate and grid voltage. In the plate circuit of this tube is a 200,000 ohm resistor. The grid circuits of the R. F. and I. F. tubes are connected to the plate of the A. V. C. tube through a 10,000 ohm resistor. The cathodes of these two tubes are connected through the 250 ohm biasing resistor to the other end of this 200,000 ohm resistor in the plate circuit (power level switch on "H" power). The grid of the A. V. C. tube is connected to the plate of the I. F. 235 tube through a .0005 condenser. The A. V. C. tube has an initial bias of 20 volts and under conditions of no signal, no plate current flows in this tube. However, when an A. C. voltage of 15 or greater is applied to the grid circuit of the A. V. C. through the .0005 coupling condenser, plate current flows and a drop is established across the 200,000 ohm resistor. This lowers the voltage of the R. F. and I. F. grids, increasing the bias and decreasing the sensitivity in proportion to the strength of the signal being received. The higher the A. C. voltage applied to the A. V. C. grid the greater the drop across the 200,000 ohm resistor and the higher the bias voltage. For weak signals, therefore, the A. V. C. does not affect the bias and maximum sensitivity is obtained, while for strong signals the bias is increased and a corresponding reduction in sensitivity effected.

The I. F. transformers are small universal wound coils mounted on tubing. The I. F. tuning condensers are small mica condensers. The coil tubing and condensers are mounted on porcelain bases and are enclosed in metal cans located on top of the chassis. The adjusting screws of the four I. F. tuning condensers are reached from the bottom of the chassis.

Servicing


The usual checking of wiring and soldered connections and checking of resistors and condensers for opens, shorts, grounds and wrong value also apply, of course, to the Super-heterodyne. In working on the receiver care should be taken that the I. F. plate and grid leads are not bent too close to the chassis as the capacity to the ground will be excessively high. Note that the R. F. and I. F. control grids are not at ground potential and a slight shock can be obtained between the grid caps of these tubes and the chassis. Do not get the antenna lead near the 2nd detector as a harmonic of the signal in the 2nd detector plate circuit may feed into the antenna system and beat with the R. F. signal causing an audible whistle.

A good check to determine if the oscillator is working is to read the voltage across the 50,000 ohm resistor. This will vary between the limits as shown in the voltage chart for the oscillator bias, depending on the frequency to which the receiver is tuned.

In order to provide satisfactory tracking with the R. F. and first detector tuned circuits the oscillator is provided with a 600 K. C. and a 1400 K. C. trimmer condenser. The 1400 K. C. trimmer condenser is located on top of the tuning condenser and is connected across the oscillator tuning condenser. The 600 K. C. trimmer condenser is across the 550 Mmf. fixed condenser and the adjusting screw is in back of the tuning condenser on top of the chassis.

MODEL 1500
(27-W, 15000)
Collegian

MONTGOMERY-WARD & CO.

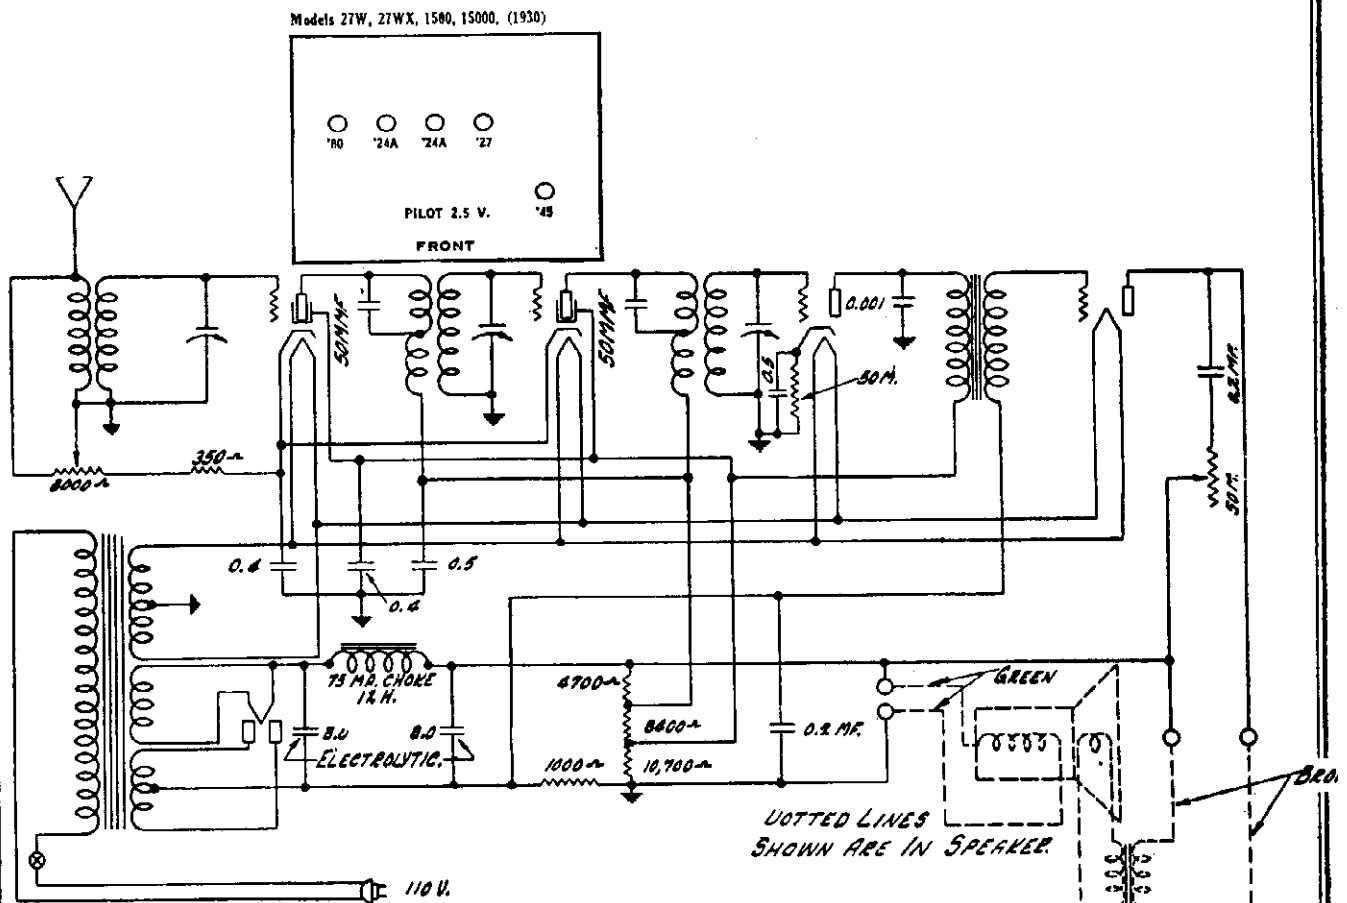

The 27W Chassis uses the following tubes:
2—224's as R.F. Amplifiers,
1—227 as Detector,
1—245 as Audio Amplifier,
1—280 as Rectifier.

The two stages of screen grid R.F. amplification in conjunction with the tuned antenna stage of this chassis give a sensitivity averaging 10 Microvolts per meter while the 227 power detector used with the single stage high gain audio provides good power output, with excellent tone quality.

Volume Control

The 8000 ohm volume control is connected across the antenna and ground of the input stage. The movable arm of the volume control is connected to ground in series with the cathodes of the two 224 R.F. amplifier tubes. This method of connection gives us a dual volume control action, which varies the signal input to the antenna stage as well as the grid bias on the first two R.F. tubes. The volume control may be easily tested by taking the voltage readings from the cathode of the 224's to the ground connection and at the same time, varying the volume control. This will give an indication if the volume control is controlling the grid bias properly.

The R.F. transformers in the R.F. stages are the same as those used in the 32W and 26W chassis. The cathode, screen grid, and plates of the R.F. tubes are bypassed by the 964A bypass condenser.

The Power Detector

The power detector receives its grid bias from the voltage drop across the 50M cathode resistor (Part No. 1892). The plate of the detector is bypassed to ground through the .001 M.F. R.F. plate bypass condenser.

The audio stage consists of a high ratio audio transformer of special design. The secondary of this transformer connects directly to the 245 power tube. The audio transformer may be tested with the continuity meter of your set checker. Disconnect the primary and secondary leads from the chassis before taking continuity measurements. Test the primary and secondary for opens or shorts, and also take continuity readings between the primary and secondary terminals, and ground. There should be no readings between these terminals and the core of the transformer or chassis ground.

The tone control is connected across the primary of the output push pull transformer, and consists of 50M variable resistance in series with a .2 M.F. fixed condenser. A short in this condenser will short circuit the primary of the speaker transformer and no signals will reach the loud speaker.

The power supply of the 27W chassis is similar to that used in some of our other chassis previously described.


Two electrolytic condensers are used in the filter circuit and care must be taken that these chassis are always kept in an upright position to prevent any small amount of electrolytic leakage in the filter condensers. It is a good idea to inspect the electrolytic condensers, upon delivery of any sets, and to wipe the top perfectly dry.

25 Cycle Chassis No. 27WX

This chassis uses a 25 cycle power transformer. Otherwise the constants of the circuit are the same.

MODEL 2655, AE-10
Voltage-Data
Two Types

MONTGOMERY-WARD & CO.

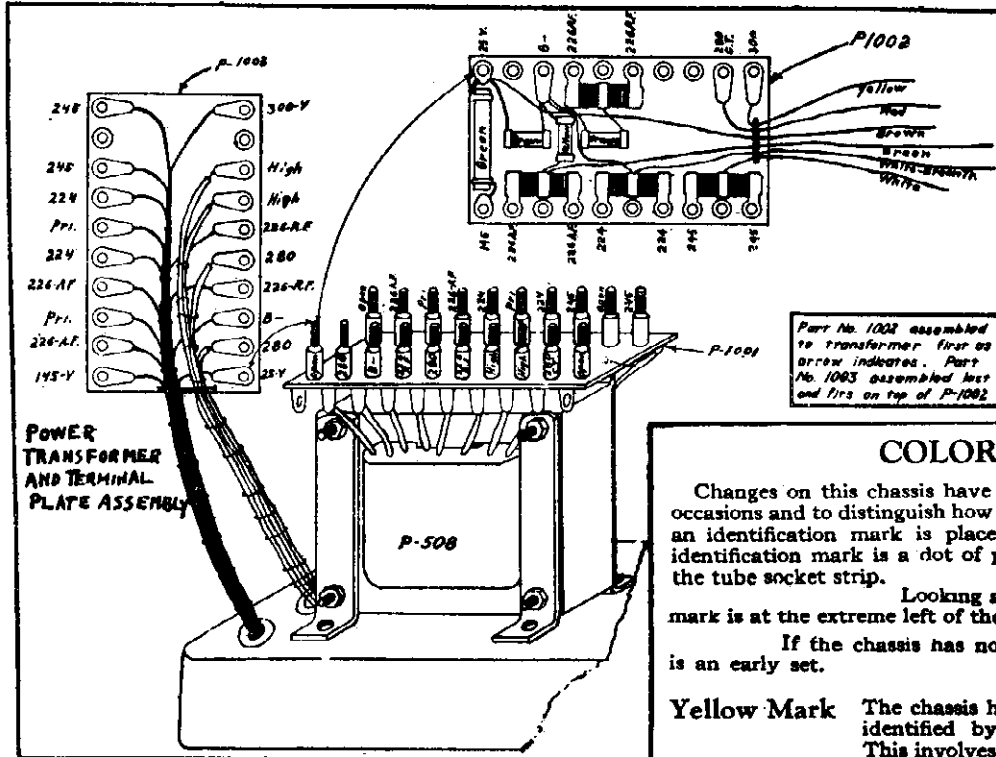

COLOR CODE

Changes on this chassis have been made on several different occasions and to distinguish how one chassis differs from another, an identification mark is placed on each one changed. This identification mark is a dot of paint found on the end rivet of the tube socket strip.

Looking at the chassis from the back the mark is at the extreme left of the 226 tube socket

If the chassis has no mark it is understood that it is an early set.

Yellow Mark The chassis having the first changes may be identified by the yellow indicating mark. This involves four changes.

1. A "dual volume control" in place of the single type. The new volume control is made in two sections, with five lugs. The section nearest the chassis, having two lugs, operates exactly the same as the single volume control. The section behind the first, having three lugs, is placed in the first audio circuit to reduce the audio amplification and operates in tandem with the antenna volume control.

2. An interchange of position of the two audio transformers. The re-arrangement of the audio transformers has not altered their connections in the circuit.

3. An addition of a "dual half microfarad condenser" and two carbon resistors in the "B" circuit of the detector and first audio tubes. The 40,000 ohm black resistor with one section of the dual condenser is placed in the detector circuit (224) and the 15,000 ohm blue resistor with the other section of the dual condenser is placed in the first audio circuit (226). You will note that the yellow and blue leads in the cable connecting to the terminal strip have been interchanged.

4. A change in the location of the grounding of No. 1 lug on the condenser block. This lug is now grounded to the condenser case with a short piece of bare wire.

Red Mark
(Serial Number 39,000-42,999)

All chassis having a red mark on the rivet of the tube socket strip have all of the changes mentioned above and in addition, have a one-tenth microfarad condenser connected from ground to one

side of the 110 volt line. A peculiarity that may be experienced by the addition of this condenser is a loud hum on every station tuned in only when the antenna wire coming from the set is connected to ground. This can be eliminated by reversing the plug in the socket. Also be sure your antenna is not grounded, either by some other set being connected to your aerial or through any other means.

Green Mark
(Serial Number 43,000 and up)

All Chassis with a green mark on the rivet of the tube socket strip contain the above changes and in addition have a change in the "combination phonograph switch" circuit. This changed circuit makes use

of only the audio system of the set for phonograph reproduction, whereas the original circuit included the detector tube. The Phonograph, Radio, On, and Off positions of the switch are the same as in the early sets. To obtain maximum volume and best tone quality a pick-up coupling transformer should be used to match the pick-up used.

OPERATING VOLTAGES


Type of Tube	Position of Tube	TUBE IN TEST SET							Grid Test Ma.
		"A" Volts	"B" Volts	Control Grid ("C") Volts	Screen Volts	Screen Current	Cathode Volts	Normal Ma.	
226	1st R.F.	1.35	116	8.5				4.7	8.7
226	2nd R.F.	1.35	116	8.5				4.7	8.7
226	3rd R.F.	1.35	116	8.5				4.7	8.7
226	4th R.F.	1.35	116	8.5				4.7	8.7
224	Det.	2.2	80	1.3	15				
226	1st A.F.	1.4	110	1.0				4.0	5.0
245	2nd A.F.	2.2	232	42				27	32
245	2nd A.F.	2.2	232	42				27	32
280	Rect.	4.6						84	

Line Voltage During Test—115 Volts

REVISION OF OPERATING VOLTAGES


Type of Tube	Position of Tube	TUBE IN TEST SET							Grid Test Ma.
		"A" Volts	"B" Volts	Control Grid ("C") Volts	Screen Volts	Screen Current	Cathode Volts	Normal Ma.	
224	Det.	2.2	75	1.3	15				
226	1st A.F.	1.4	77	1.0				4	5

200, 291, 292, 9950 (A.C.)

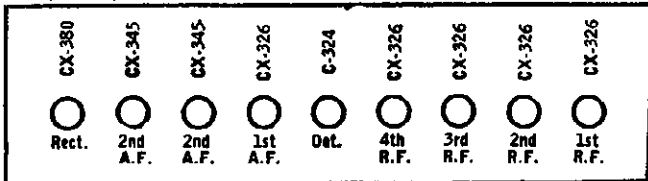


MONTGOMERY-WARD & CO.

MODEL 2655, AE-10 Schematic 1st & 2nd Types

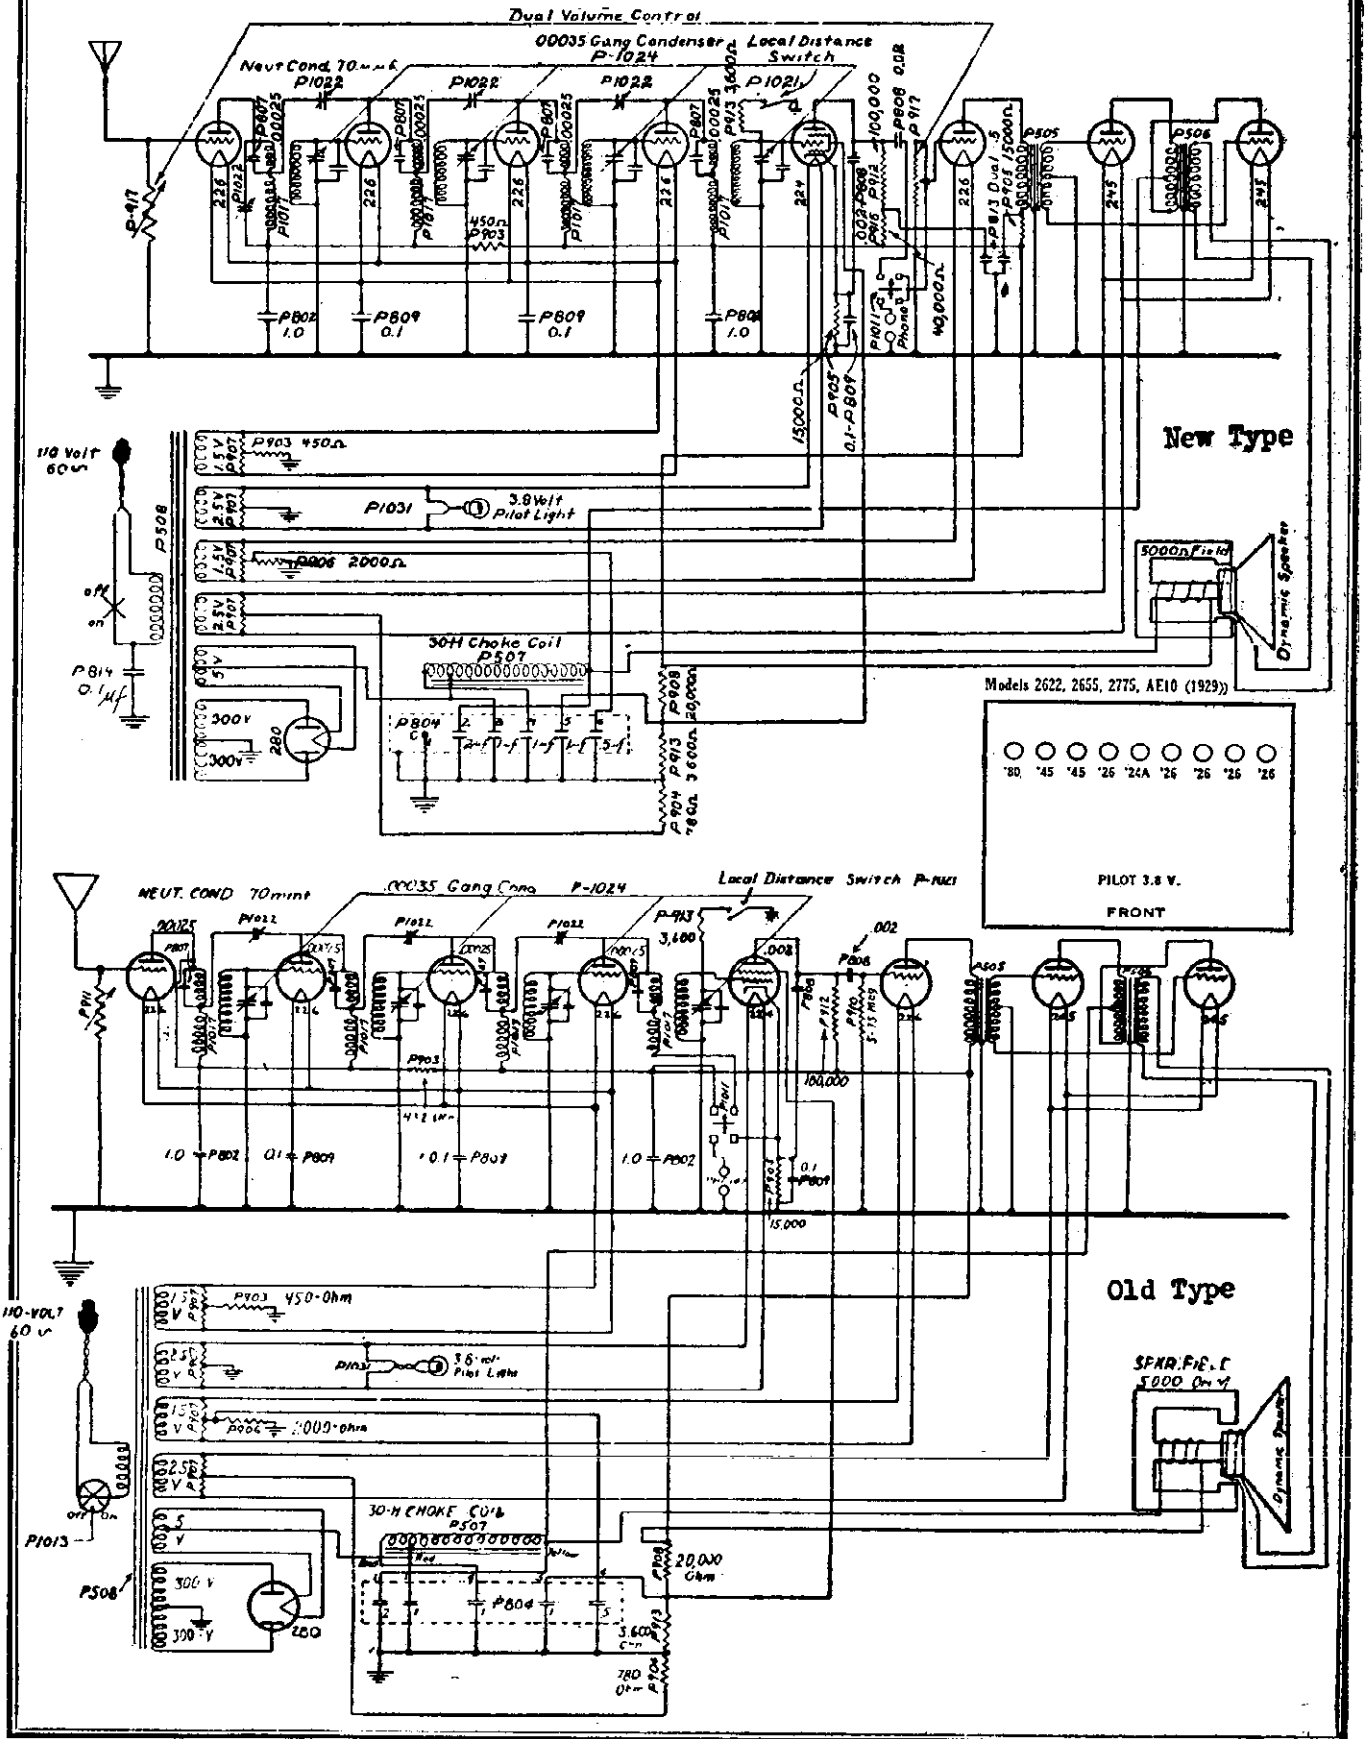


MONTGOMERY-WARD & CO.

MODEL 11,000
Challenger
Schematic
Two Types

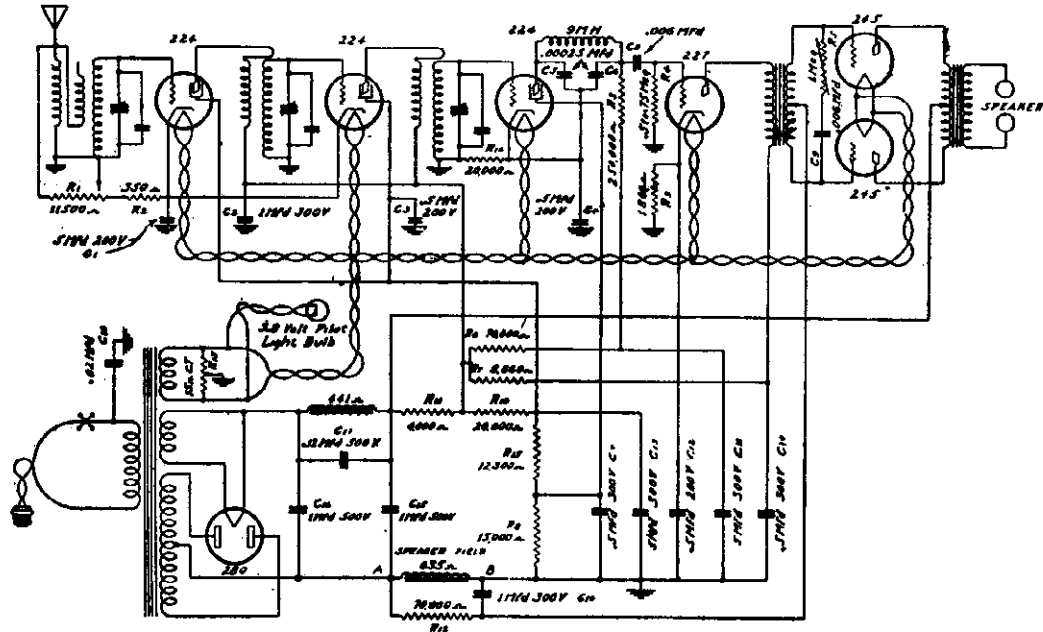

Schematic Diagram of Challengers with Serial Number Above A94313.

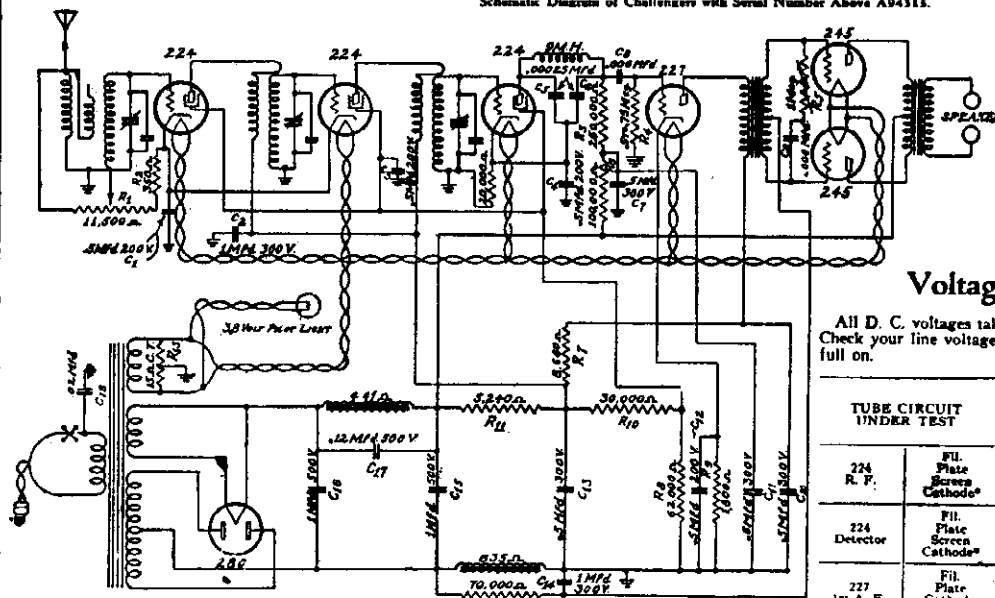

Schematic Diagram of Challengers with Serial Number Below A94313.

Voltage Characteristics


All D. C. voltages taken with a 1,000 ohm per volt voltmeter. Check your line voltage before taking readings. Volume control full on.

TUBE CIRCUIT UNDER TEST		LINE VOLTAGE				
		90 V.	100 V.	110 V.	120 V.	130 V.
224 R. F.	Fil.	1.75	1.95	2.17	2.3	2.57
	Plate	130	130	169	183	193
	Screen Cathode*	08	7.8	86	94	100
224 Detector	Fil.	1.77	1.97	2.19	2.33	2.6
	Plate	35	40.8	45.5	50.5	55
	Screen Cathode*	37.5	43	48	52	56.8
227 1st A. F.	Fil.	2.55	3.1	3.65	4.2	4.8
	Plate	1.79	1.99	2.22	2.34	2.62
	Cathode	95	108	118	127	138
245 2nd A. F.	Fil.	5.7	6.7	7.5	8.4	9.3
	Plate	1.8	2.0	2.23	2.35	2.62
	Grid	180	210	233	255	280
280 Rect.	Fil.	-35	-42.5	-49	-55	-62
	Plate	3.06	4.1	4.55	4.8	5.35
	Current	56 ma	64 ma	73 ma	82 ma	90 ma


* Control grid voltages on the 224 tubes are measured from cathode to ground.

R.F. Coils

The antenna coil in particular is a departure from the usual performance of antenna stages in other receivers. With the usual commercial type of antenna circuit, a short antenna will detune the antenna stage and reduce the sensitivity of the set accordingly. The antenna stage in this set is so constructed that it will not be affected by short or long antennas to any appreciable extent. The R.F. coils in each stage are marked with a color, according to the group in which they fall, and three coils of the same color are placed in the chassis. This color marking is a streak of paint inside the secondary coil inside the lugs. In ordering coils for replacement, be sure to mention the color of the paint on the coil so that the replacements will be of the same characteristics. If in doubt, return the coils.

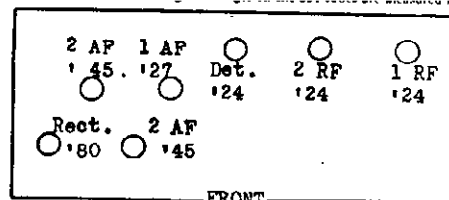

MONTGOMERY-WARD & CO.

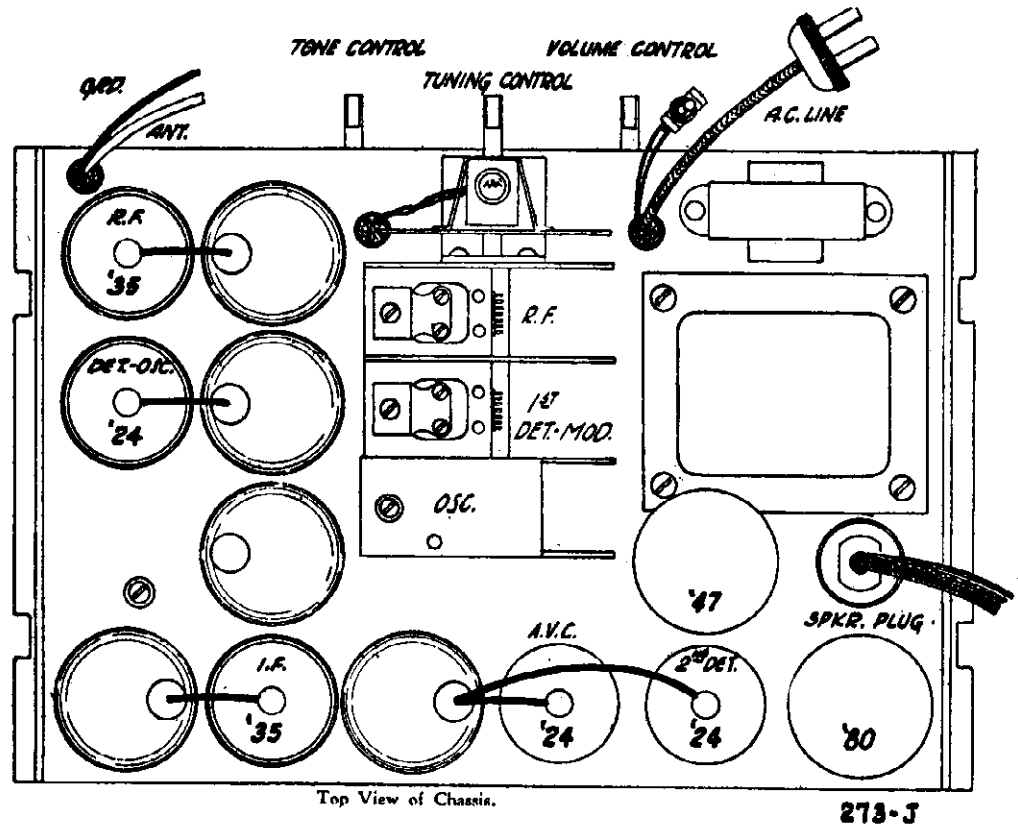MODEL 62-20, 62-26
(62-25)Chassis
Data

Top View of Chassis.

273-J

I. F. and Oscillator Units

The primary and secondary of both intermediate transformers are tuned with adjustable condensers which remain fixed after the transformers have been tuned to exactly 175 kilocycles.

The oscillator 600 K.C. tracking condenser is mounted directly in front of the oscillator coil shield on the right rear corner of the chassis base.

Holes in the chassis base allow the tuning condensers for the intermediate transformers to be adjusted with a screw-driver from the under side of the chassis.

Power-Supply,

The 25 and 60 cycle power transformers are designed for operation on any 95 to 130 volt A.C. supply without adjustment and without overloading.

The 25 cycle chassis has a special power transformer and has two 8 mfd. 450 volt dry electrolytic condensers, in parallel, instead of the one condenser, C14, shown in the schematic diagram. An 8 mfd. 450 volt wet electrolytic condenser is mounted on top of the chassis base and this condenser replaces the condenser, C17, shown in the diagram. The 25 cycle chassis differs in no other way from the 60 cycle chassis.

Replacing Rubber Drive

You will note that the Vernier tuning drive on this chassis uses a rubber pinion. Under normal operating conditions this rubber will last for a number of years. Should it become worn it can be readily replaced by loosening the set screw of the brass bushing located next to the rubber pinion and pulling out the station selector shaft. Place a new bushing in position, slip the station selector shaft in place and tighten the set screw.

Automatic Volume Control (A.V.C.)

The action of the automatic volume control tube controls the grid bias on the R.F. and I.F. tubes and consequently the amplification of those tubes. The primary of the 2nd I.F. transformer has a tertiary winding which is connected in series in the A.V.C. tube grid circuit.

A signal of sufficient strength reaching the second detector, applies a voltage on the grid of the A.V.C. tube and the voltage thus applied depends upon the signal strength.

The plate of the A.V.C. tube will draw current when the grid voltage of the tube rises in potential and the drop in plate current is applied to the grids of the R.F. and I.F. tubes through their grid returns to the A.V.C. tube plate. This results in a control of the amplification of these tubes and a practically constant receiver output.

The manual volume control adjusts the negative biasing on the control grid of the A.V.C. tube, regulating in this manner the level of the input to the second detector at which the A.V.C. action commences. Thus the manual volume control behaves virtually as an output level control.


If the A.V.C. tube is defective or removed from its socket, there will be no control of the volume. Similarly, if the A.V.C. tube grid circuit is open, the plate of the tube applies a high grid bias on the R.F. and I.F. tube grids and practically no amplification is obtained from these tubes and consequently no receiver output.

A signal which is too weak to affect the A.V.C. tube grid voltage will not, of course, produce any change in plate current and the maximum amplification of the R.F. and I.F. tubes will be obtained, depending upon their grid bias as set by the A.V.C. tube plate.

MODEL 62-20,62-26X
(62-25)

MONTGOMERY-WARD & CO.

Schematic
Voltage

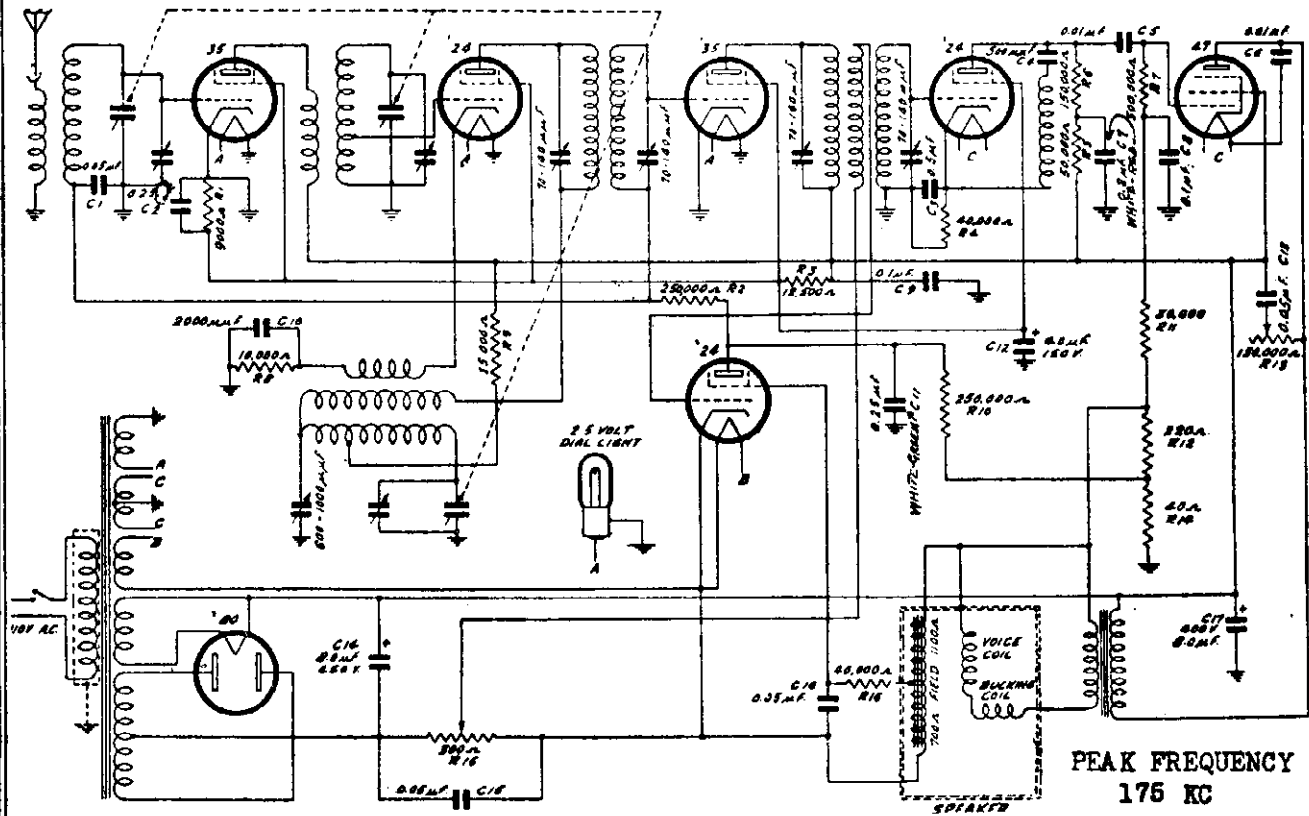

PEAK FREQUENCY
175 KC


TUBE	CIRCUIT	LINE VOLTAGE				
		90 V.	100 V.	110 V.	120 V.	130 V.
R. F. '35	Screen-Grid	70	78	85	92	100
	Plate	192	213	234	256	277
Det.-Modulator '24	Screen-Grid	70	78	85	92	100
	Plate	192	213	234	256	277
I. F. '35	Screen-Grid	70	78	85	92	100
	Plate	192	213	234	256	277
2nd Detector '24	Screen-Grid	70	78	85	92	100
	Plate	154	171	187	204	221
Audio '47	Accelerating Grid	199	221	244	267	289
	Plate	181	200	220	240	260
A. V. C. '24	Grid	12.3	13.7	15.1	16.5	17.8
	Screen-Grid	34.5	38.5	42	46	50
Rectifier '80	Plate to Plate	308	342	376	410	445
	Current (both plates)	52.3 MA	58.1 MA	64 MA	69.7 MA	75.5 MA

TURN THE VOLUME CONTROL ALL THE WAY ON, CONNECT THE ANTENNA AND GROUND LEADS TOGETHER AND TURN THE GANG CONDENSER PLATES ALL THE WAY OUT. CHECK THE LINE VOLTAGE.


The voltages shown are measured to the cathode of the heater type tubes and to filament of the '47 Pentode.

OZARKA, INC.


MODEL Viking 5-A
 MODEL S-5
 MODEL S-7

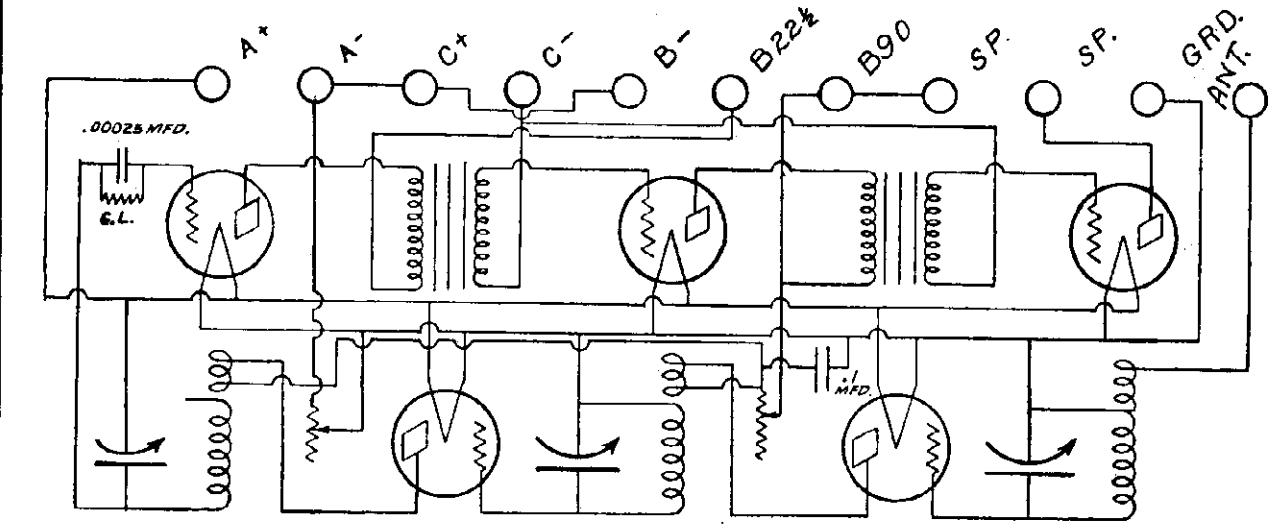

Model Viking 5-A

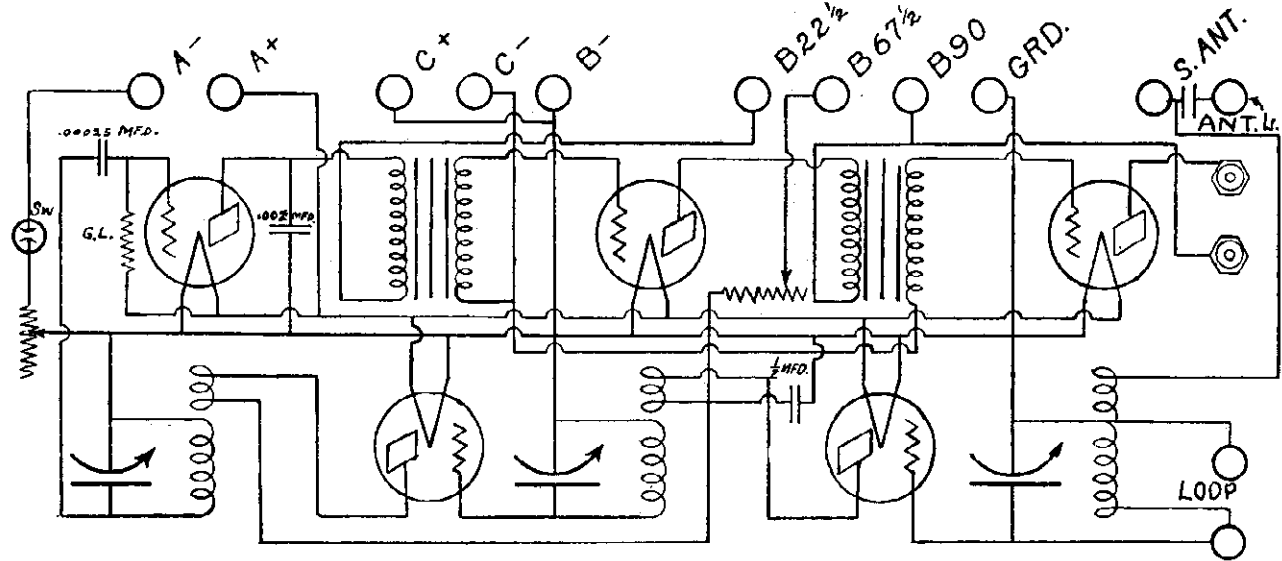



Model S-5

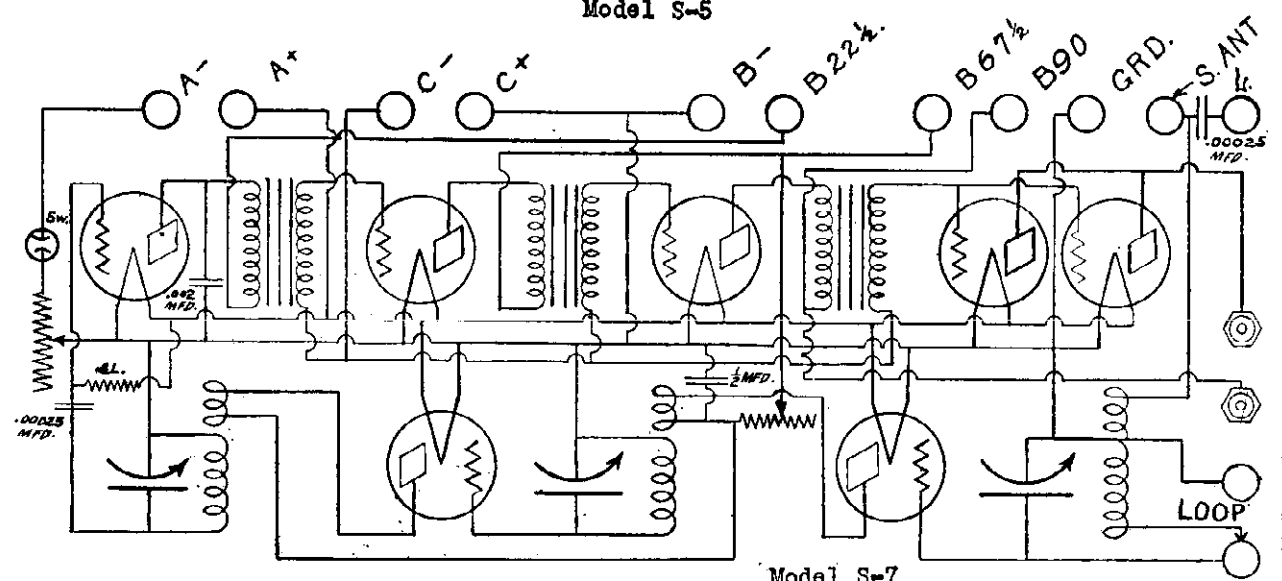

Model S-7

MODEL 78 Battery
MODEL 89 AC

OZARKA, INC.

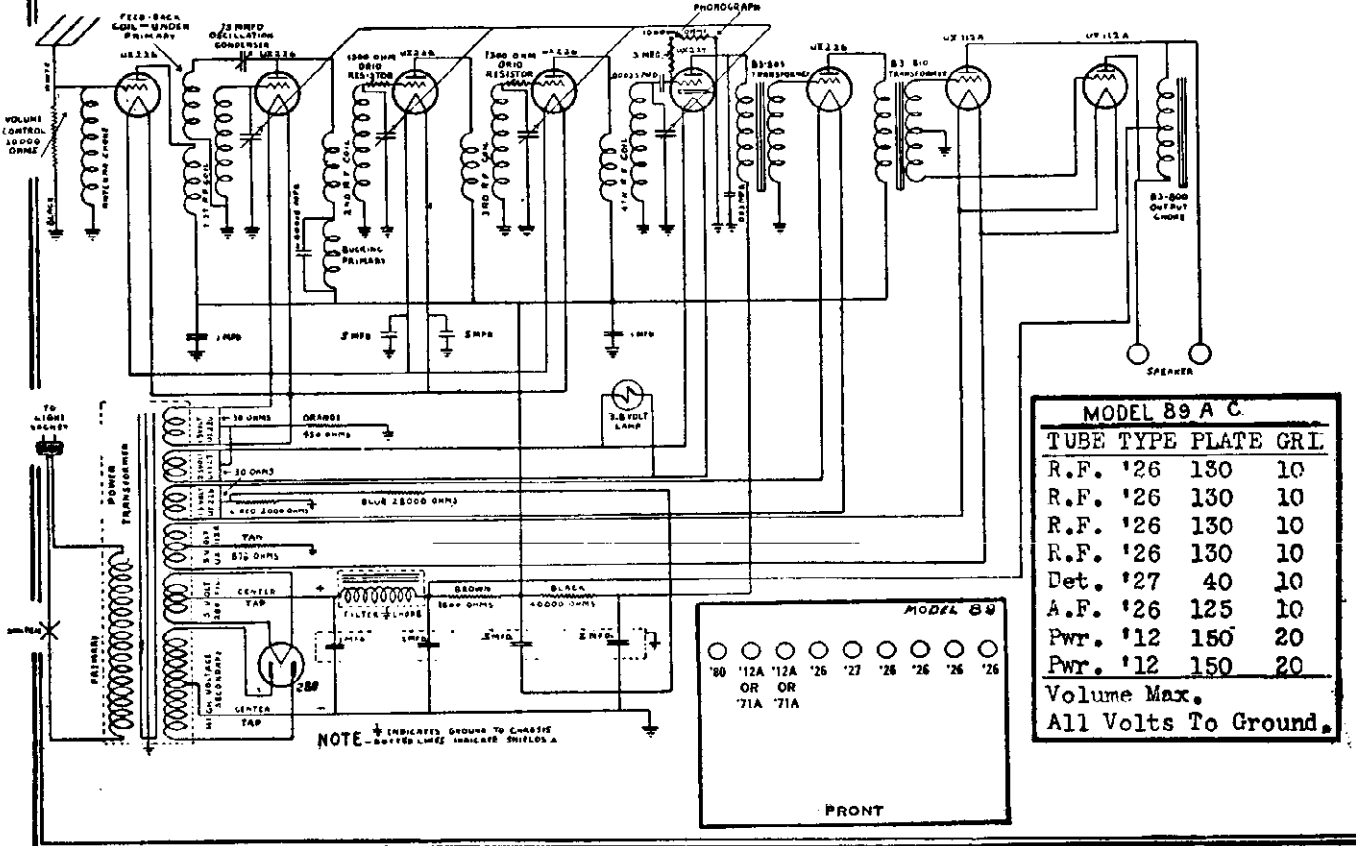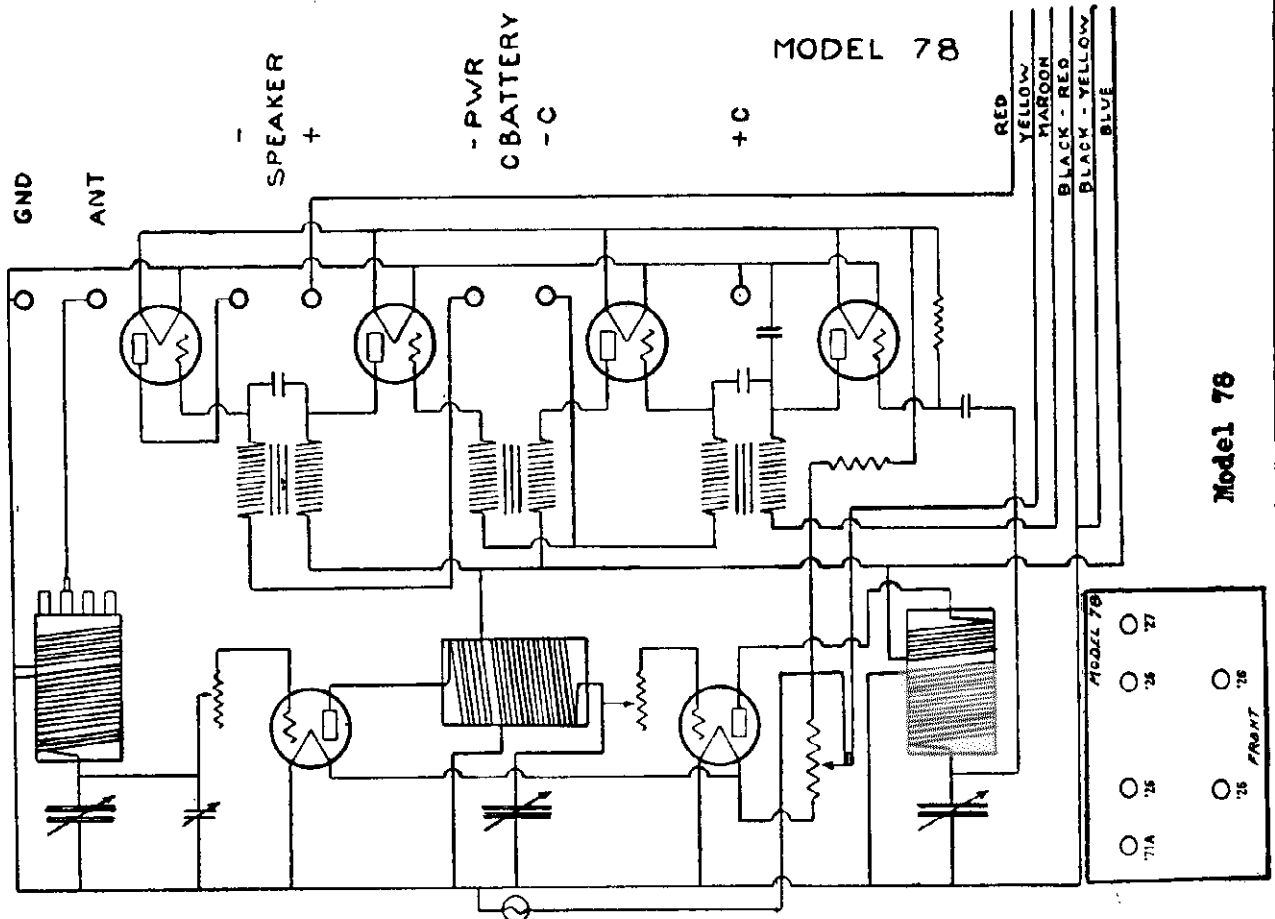


MODEL 89 A C			
TUBE TYPE	PLATE	GRI	
R.F. '26	130	10	
R.F. '26	130	10	
R.F. '26	130	10	
R.F. '26	130	10	
Det. '27	40	10	
A.F. '26	125	10	
Pwr. '12	150	20	
Pwr. '12	150	20	

Volume Max.
All Volts To Ground.

MODEL Viking 91 AC
Schematic, Chassis
Voltage



OZARKA, INC.

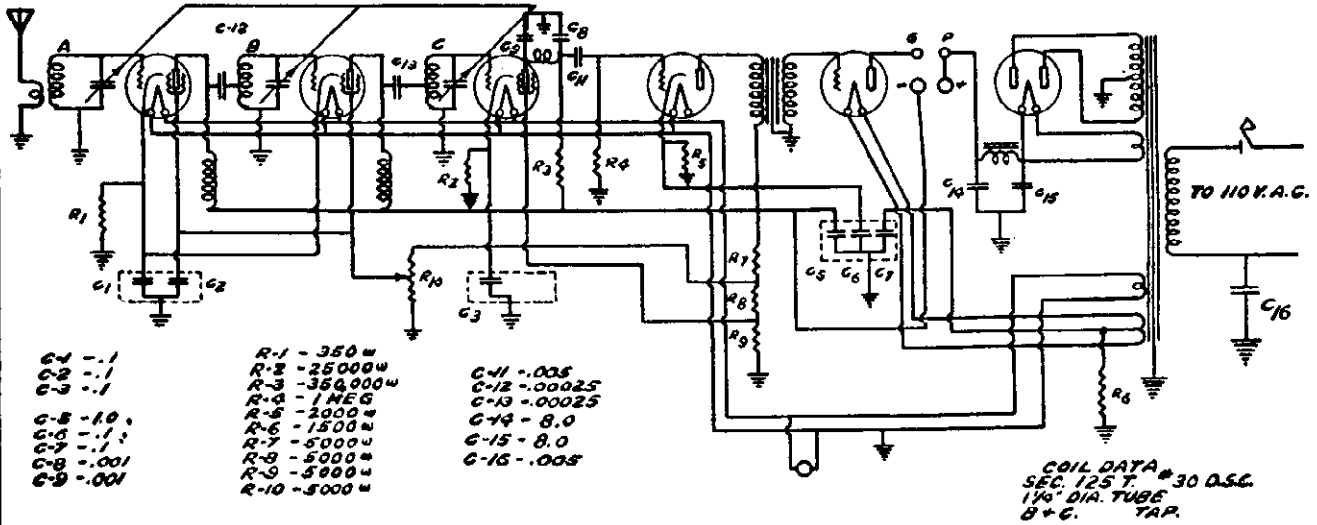

MODEL VIKING 91


	Tube	Type	Plate	Grid	Cath.
R.F.	24	150	65	2	
R.F.	24	150	65	2	
Det.	24	50	30	3	
A.F.	27	145		47 (Grid)	
Pwr.	145	295			
Rect.	180				
Volume Max.					
Voltages To Ground.					

Model 91 AC Viking

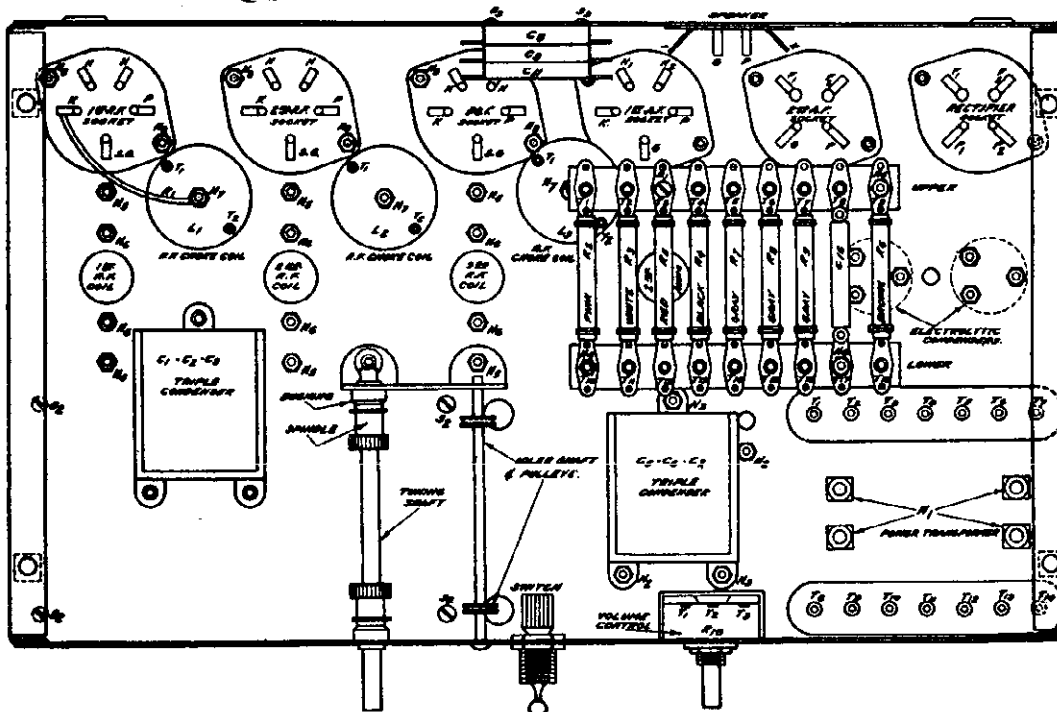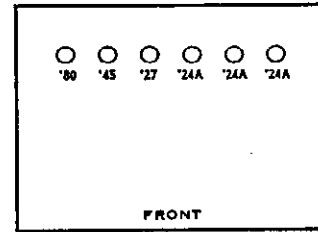

OZARKA, INC.

MODEL Viking 92 AC
Schematic, Chassis
Voltage

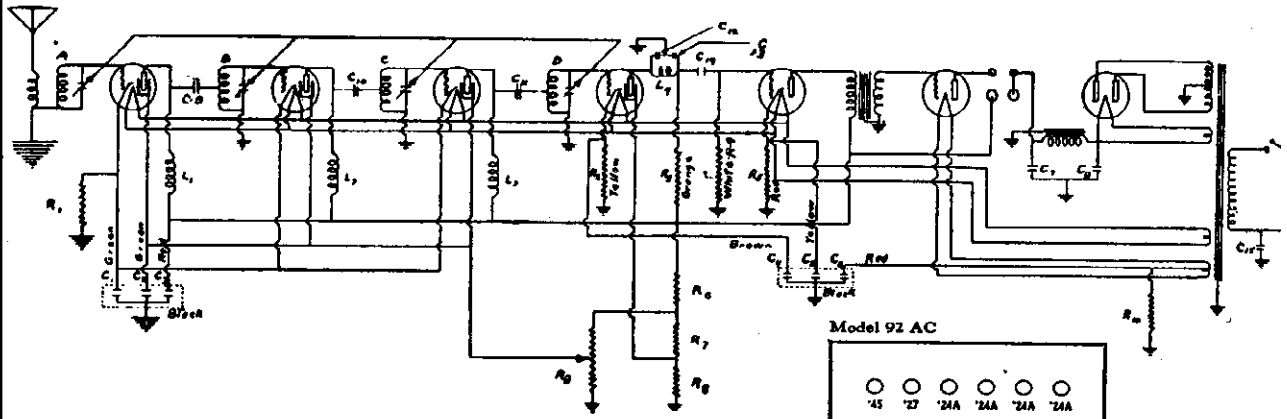


C1	.25	Mf. RF Bypass
C2	.25	" " "
C3	1.0	" " "
C4	.25	" AF "
C5	.1	" " "
C6	.5	" " "
C7	8.0	" " "
C8	8.0	" " "
C9	.0001	" " "
C10	.0001	" " "
C11	.0001	" " "
C12	.001	" " "
C13	.001	" " "
C14	.005	" " "
C15	.005	" " "

R1	225 Ohms
R2	40,000 "
R3	350,000 "
R4	1,000,000 "
R5	2,000 "
R6	5,000 "
R7	5,000 "
R8	5,000 "
R9	10,000 "
R10	1,600 "

Tube Type	Plate	S. Grid	Cath.
R.F. '24	150	70	2
R.F. '24	150	70	2
R.F. '24	150	70	2.5
Det. '24	50	35	8
A.F. '27	140	--	50(Grid)
Pwr. '45	270	--	
Rect. '80			


Volume MAX. Voltages to ground.

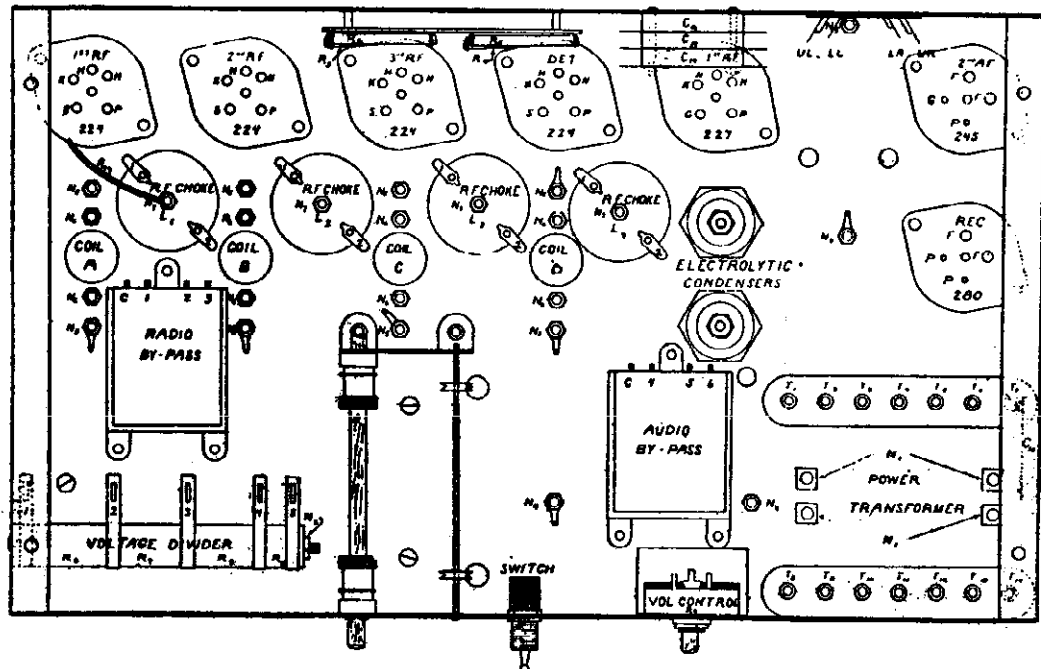

OZARKA, INC.


MODEL 93 Battery
Superheterodyne

MODEL 93 SUPERHETERODYNE (Battery)

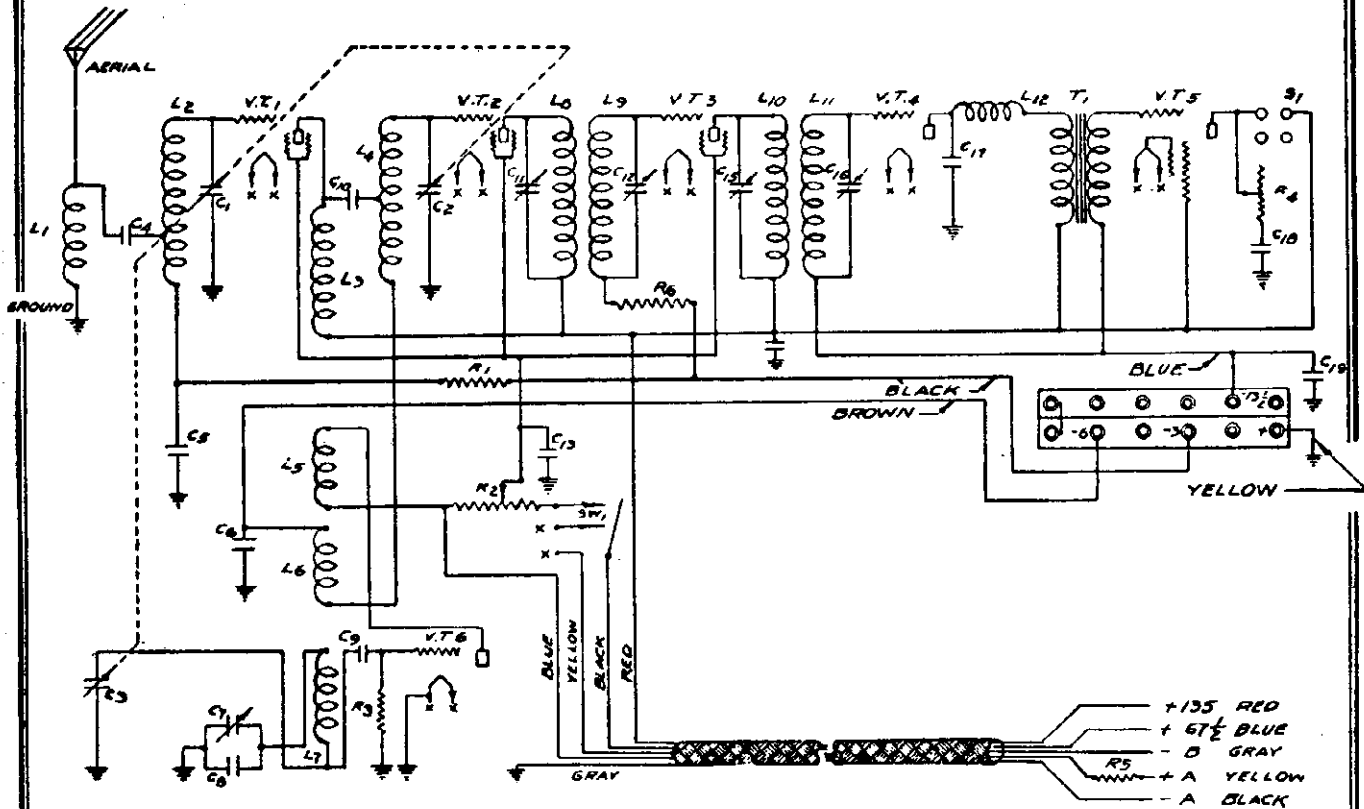

IF PEAK 175 KC.

Model 93 Battery

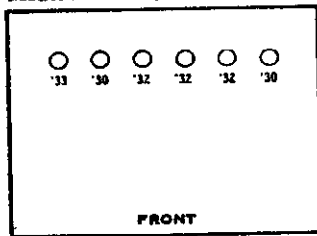


MODEL 93-A				
Tube	Type	Plate	S.Grid	Cath.
Osc.	'27	80	--	--
R.F.	'35	155	80	1.5
Det.	'35	155	40	2.
I.F.	'35	155	80	1.5
Det.	'27	125	--	13.
Pwr.	'47	182	200	
Rect.	'80			
Volume Max.		Volts To Ground.		
Diagram on page 458-B-7				

MODEL 93-A


OZARKA, INC.

MODEL 93-A SUPERHETERODYNE

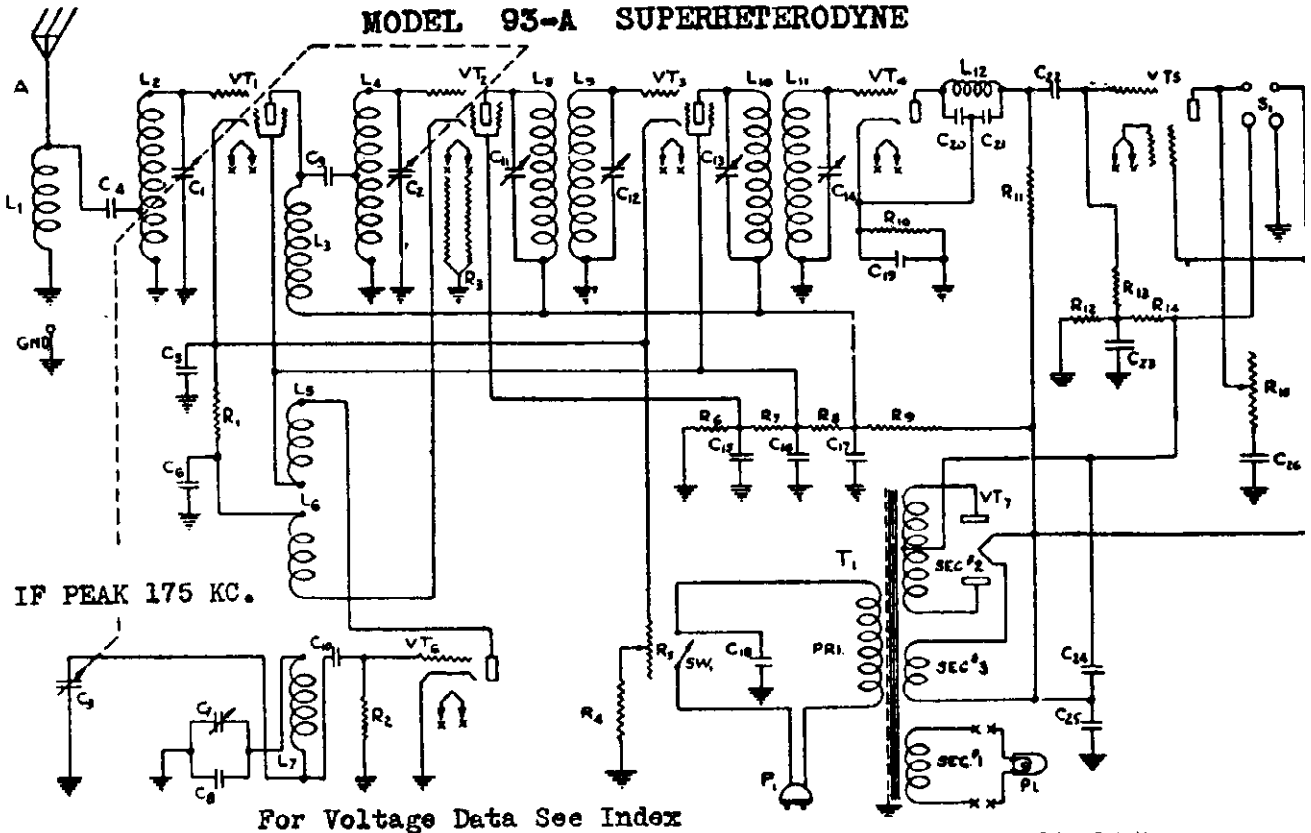

IF PEAK 175 KC.

For Voltage Data See Index

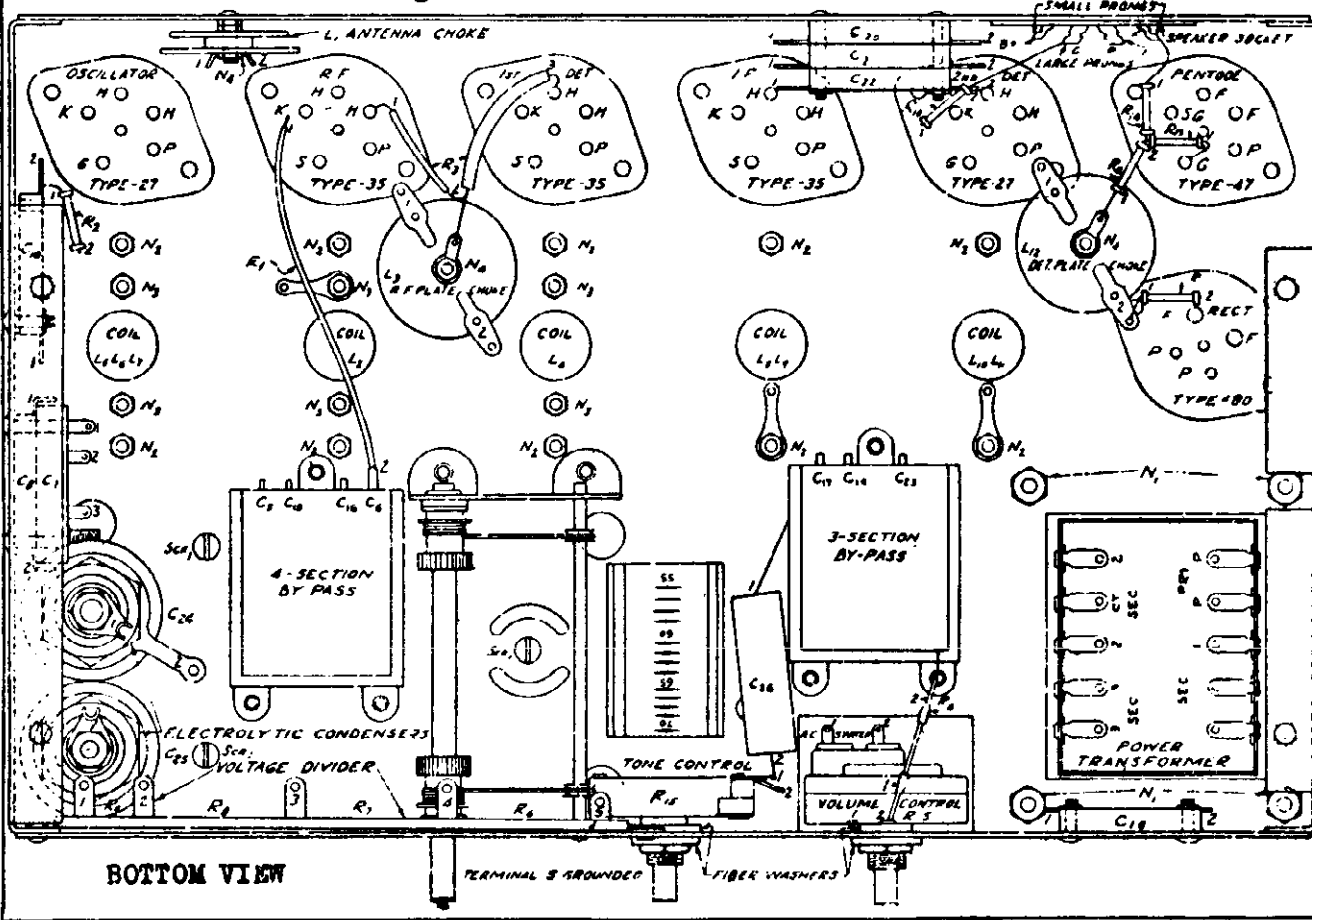


BOTTOM VIEW

TERMINAL 3 GROUNDED

FIBER WASHERS


OZARKA, INC.

MODEL Viking 93-B

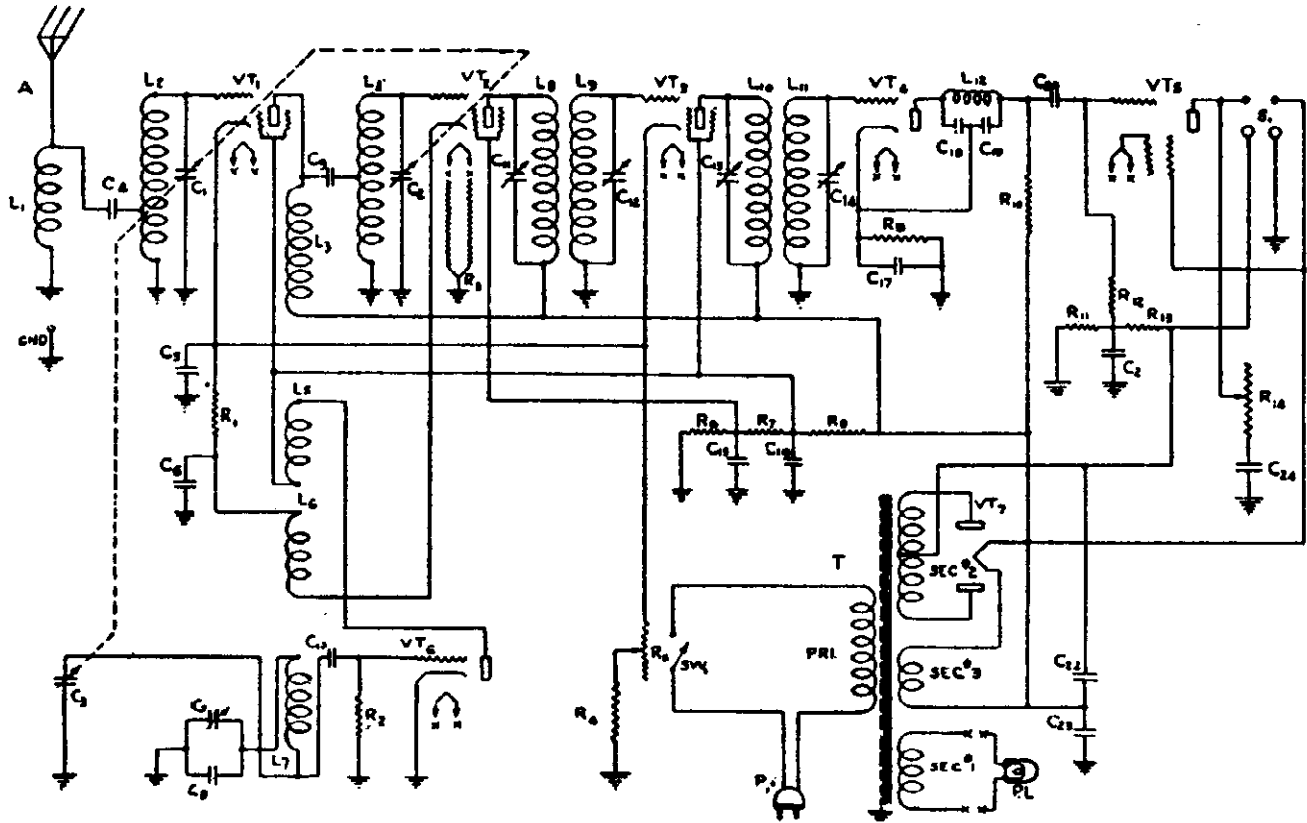

IF PEAK 175 KC.


Models 93A, 93B

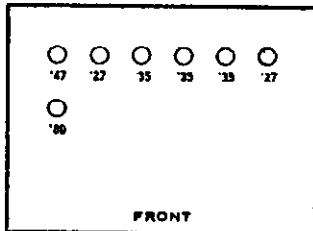

MODEL 93-B				
Tube	Type	Plate	S. Grid	Cath.
Osc.	'27	80	---	---
R.F.	'35	190	85	1.5
Det.	'35	190	45	2.
I.F.	'35	190	85	1.5
Det.	'27	125	---	12.
Pwr.	'47	175	190	
Rect.	'80			
Vol. Max.				Volts To Ground.


MODEL 94-AVC

OZARKA, INC.

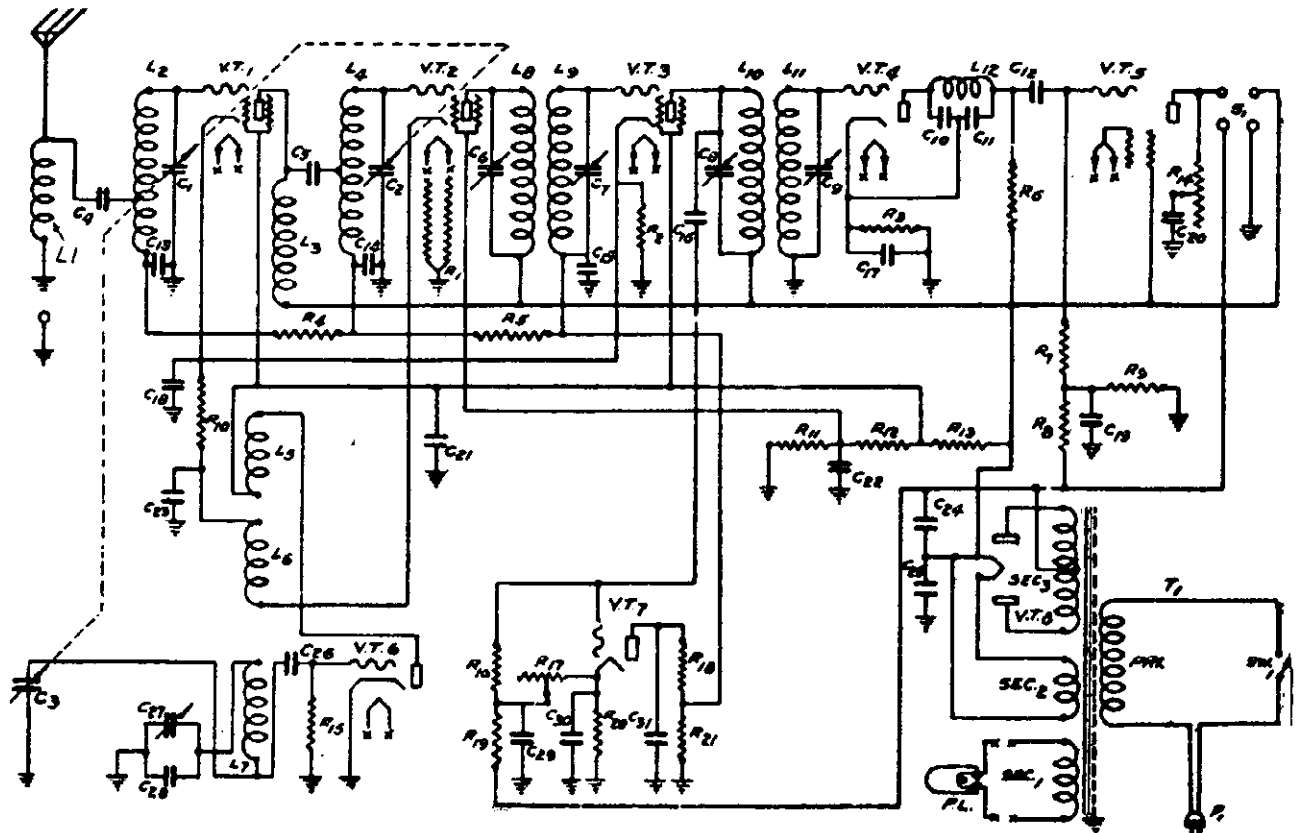

IF PEAK 175 KC.

Model 94A, 94B (A.V.C.)

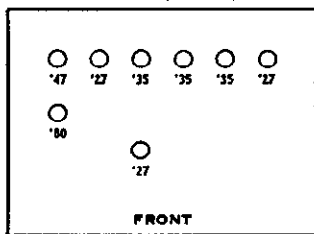

MODEL 94				
Tube	Type	Plate	S. Grid	Cath.
Osc.	'27	80	--	
R.F.	'35	190	85	1.5
Det.	'35	190	45	2.
I.F.	'35	190	85	1.5
Det.	'27	125	--	12.
Pwr.	'47	175	190	--
A.V.C.	'27			10.
Rect.	'80			
Volume	Max.			Volts To Ground.

PHILCO RADIO & TELEVISION CORP.

MODEL 4
Alignment
Chassis

The adjustment of the compensating condensers in the Model 4 is done with the aid of a modulated oscillator, accurately calibrated at 3600KC. A high grade crystal controlled oscillator, of this type, Philco Model No. 091, can be obtained on order from the Philco National Service Station. The various harmonics and image frequencies of this signal are used to adjust the compensating condensers at the different short wave dial settings. If the oscillator is off frequency, the harmonics and image frequencies will be off correspondingly.

Remove the converter from its cabinet. Connect the Model 4 to the broadcast receiver in the usual manner, with the ground wire connected and the aerial disconnected. A Model 112 is preferable as this offers greatest sensitivity. It is important that the broadcast receiver be accurately calibrated at 1000KC and that the dial be set exactly at this point.

1. **Adjusting at 3.6 megacycles on lower scale**—Place the oscillator in operation and couple it with a wire to the antenna connection of the converter. Be sure that the oscillator is grounded. Set the dial at 3.6 megacycles on the lower scale and set the frequency control switch of the converter in its proper position. Carefully adjust the "3.6M" compensator shown in the illustration above, by means of a fibre wrench, Philco part 3164, until maximum signal is heard in the loudspeaker. It may be necessary to reduce the oscillator output by removing the oscillator from the coupling wire in order to obtain a faint input signal, the maximum strength of which can be readily determined by ear.

2. **Adjusting at 1.6 megacycles**—Set the dial at 1.6 megacycles and adjust the "1.5" compensating condenser in the same manner as described above.

3. **Adjusting at 7.2 megacycles**—Set the dial at 7.2 megacycles and set the frequency control switch in its proper position for the middle dial scale. Connect the oscillator output direct to the antenna terminal of the converter. Adjust the "8.5M" compensating condenser for maximum output in the loudspeaker as described above.


4. **Adjusting at 3.6 on middle scale**—Turn the dial to 3.6 on the middle scale and adjust the "3.6M" compensator as described above.

5. **Adjusting at 18. megacycles**—Set the dial at 18 and the frequency control switch in its corresponding position. Adjust the "19" compensator as described above. More than one signal will be heard as the adjustment is being made. Be sure to adjust for the one which is heard second as the compensating condenser capacity is reduced from its maximum (adjusting nut all the way in). When this adjustment has been made correctly, the oscillator signal can be heard at 18, 16, 14.4 and 12.4 megacycles. This adjustment is the most critical of any, and will require more care in getting the correct point.

6. **Adjusting at 8.8 megacycles**—Turn the dial to 8.8. Adjust the "8.5H" compensator in the manner described above.

RE-SETTING 1000KC WAVETRAP

A wavetrapp tuned to 1500 kilocycles is connected in the antenna circuit of the converter for the purpose of suppressing any possible interference from nearby stations which might be broadcasting at or near 1000 kilocycles. If it is impossible to find a point between 950 and 1050 KC at which interference is not heard, the wavetrapp should be re-adjusted by means of the fibre wrench until the interfering station is tuned out.

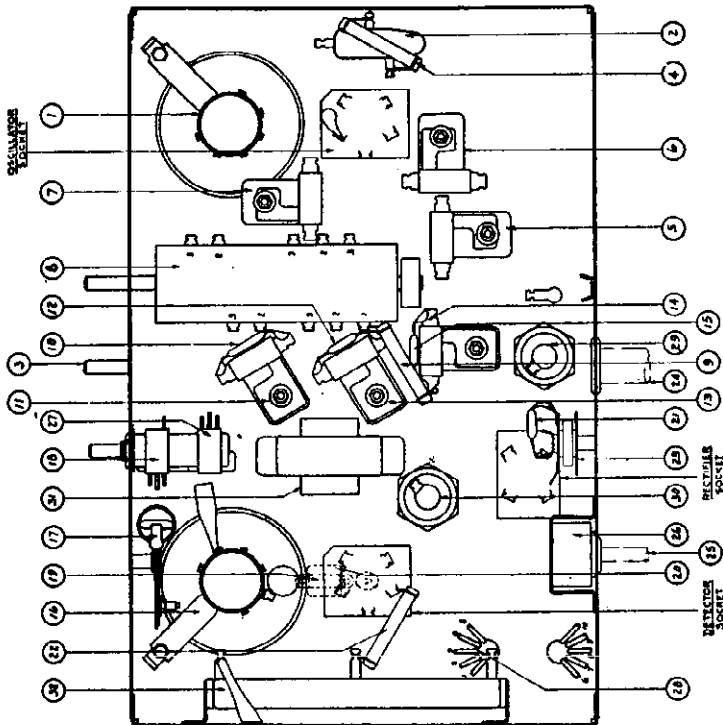


No. in List	Description	Part No.
1	Oscillator Coil	05723*
2	By-pass condenser (50 mfd.)	3015-M
3	Gang condenser	02882
4	Resistor (18,000 ohms)	2766
5	Compensating condenser (18 MC end of scale)	04000-E
6	Compensating condenser (8.5 MC end of center scale)	04000-E
7	Compensating condenser (3.6 MC end of bottom scale)	04000-E
8	Frequency control switch	03721
9	Resistor (240,000 ohms)	3768
10	Condenser (1250 mfd.)	6886
11	Compensating condenser (8.5 MC end of top scale)	04000-F
12	Condenser (500 mfd.)	6878
13	Compensating condenser (3.6 MC end of center scale)	04000-F
14	Compensating condenser (1.5 MC end of bottom scale)	04000-F
15	Condenser (500 mfd.)	3021
16	Detector transformer	03721
17	Frequency filter	06602
18	Antenna switch (assembled with 27)	6796
19	Resistor (2 Megohms) assembled with (20)	03879
20	Condenser (110 mfd.) assembled with (19)	03879
21	Condenser (250 mfd.)	3082
22	Resistor (80,000 ohms)	3707
23	I. F. choke	03103
24	Shielded cable	L-1278
25	Power cord and plug	L-243-A
26	Outlet receptacle	8439
27	"On-Off" switch (assembled with 18)	6796
28	Power transformer—50-40 cycles	6785
29	Power transformer—25-40 cycles	6786
30	Electrolytic condenser (6 mfd.)	4916
31	Electrolytic condenser (6 mfd.)	4916
32	Filter choke (25-40 cycles)	4051
33	Filter choke (25-40 cycles)	6900
34	Resistor (two 25,000 ohms, 25-40 cycles)	3526
35	Base*	3021
36	Chassis*	40000

PHILCO recommends that under no circumstances should any attempt be made to adjust the compensating condensers in the field, unless proper equipment is available, and that where such is not the case the unit should be turned over to a Philco Distributors Service Department. The adjustment is extremely critical and requires more time and patience than the ordinary broadcast receiver. All of the compensating condensers are accessible only from the bottom of the chassis. The short wave converter is accurately adjusted at the factory prior to shipment.

*Includes matched oscillator coil and detector transformer.

MODEL 4
Schematic
Voltage
Data

PHILCO RADIO & TELEVISION CORP.

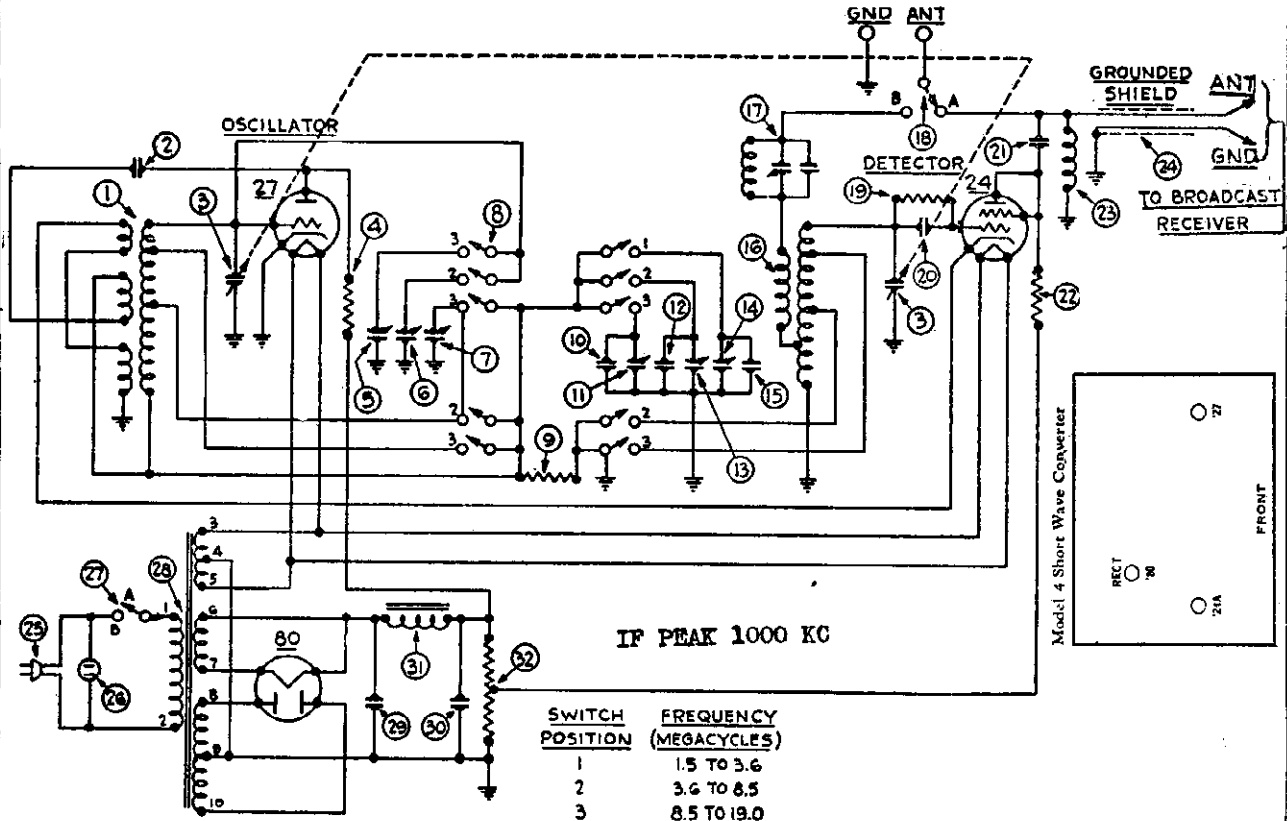

SWITCH POSITION	FREQUENCY (MEGACYCLES)
1	1.5 TO 3.6
2	3.6 TO 8.5
3	8.5 TO 19.0

Table 1—Tube Socket Readings—Line Voltage—115 volts

Tube		Filament Volts	Plate Volts	Screen Grid Volts	Control Grid Volts	Cathode Volts
Type	Circuit					
27	Oscillator	2.4	110	..	.1	0
24	Detector	2.4	25	25	.3	0
80	Rectifier	5.0	170/170

NOTE: The above voltage readings were taken from the socket terminals on the underside of the chassis, using a Weston multi-range voltmeter, 1000 ohms per volt. The radio set tester cannot be used either for voltage or plate current readings because of the effect of the long leads through the set tester cord.

Table 2—Power Transformer Voltages

Terminals	A. C. Volts		Color
1-2	105-125	Primary- Filament of 24 and 27 Filament of 80 Plates of 80 Center Tap of 3-5 Center Tap of 8-10	White
3-5	2.5		Black
6-7	5.0		Light Blue
8-10	340		Yellow
4	...		Black with Yellow Tracer
9	...	Yellow with Green Tracer	

Table 3—Condenser Data

Nos. on Figs. 1 and 2	Capacity Mfd.	Container
20	.00011	Blue and Golden Yellow
21	.0008	Green and Orange
22	.00125	Blue and Orange
3	.05	Black Bakelite Container
23	6.	Electrolytic

Table 4—Resistor Data

Nos. on Figs. 1 and 2	Power (Watts)	Resistance (Ohms)	COLOR		
			Body	Tip	Dot
24		4750 4750)	Long Tubular		
1	1.	13000	Brown	Orange	Orange
1	1.	99000	White	White	Orange
	.5	240,000	Red	Yellow	Yellow
	.5	2 Megohms	Red	Black	Green

PHILCO RADIO & TELEVISION CORP.

MODEL 20, 20-A
Voltage
Values

Models 20 and 20-A Receivers

Model 20 Receivers are for Operation on 105-125 volt, 50-60 cycle AC Lines.
Model 20-A Receivers are for Operation on 105-125 volt, 25-60 cycle AC Lines.

Bulletin 28 covers the first few weeks' production of Models 20 and 20-A. These Receivers can be identified as having one or two compensating condensers. The later models have three compensating condensers fastened to the tuning condenser housing and are covered by Bulletin 36.

Table 1—Tube Socket Readings Taken with AC Set Tester, AC Line, 115 Volts

Tube		Filament Voltage	Plate Voltage	Grid Voltage	Screen Grid Voltage	Cathode Voltage	Plate Milliamperes
Type	Circuit						
24	1st R. F.	2.3	250	3.0	90.0	12	4.5
24	2d R. F.	2.3	250	3.0	90.0	11	4.5
24	Detector	2.3	35	1.0	2.0	8
27	1st Audio	2.3	120	1.0	8	3.0
71-A	{2d Audio}	5.0	215	50.0	18.0
71-A	{Push-Pull}	5.0	215	50.0	18.0
80	Rectifier	5.0	36/Plate

All readings taken with antenna disconnected and ground on. Volume Control on full.

Table 2—Power Transformer Voltages

Terminals	A. C. Volts	
1—2	2.5	Heaters of 24 and 27 Tubes
3—4	105 to 125	Primary
7—8	5.0	Filament of 71-A Tubes
5	Center Tap of 7—8
10—11	5.0	Filament of 80 Tube
9—12	650	Plates of 80 Tube
6	Center Tap of 9—12 and 1—2


Table 4—Condenser Data
(Other Than Filter Condenser)

No. on Figs. 3 and 4	Capacity MFD
⑩	.00025
⑪	.01
⑤ ⑥ ⑫	.05
⑧	.05 with 250-ohm resistor winding
⑭	.25 (two sections)
⑬	.5


Table 3—Resistor Data

No. on Figs. 3 and 4	Terminal	Resistance	Color
⑮	{1—2}	{1,400}	Long Tubular
	{2—3}	{187}	
	{3—4}	{75}	
	{5—6}	{2,470}	
	{6—7}	{975}	
		50,000	
⑯		100,000	Orange
⑰		250,000	Silver Gray
⑱—⑳		500,000	White
			Battleship Gray


Model 20—Filter Condenser—Part No. 4235

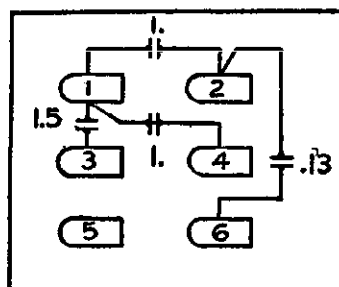

Model 20-A—Filter Condenser—Part No. 4269

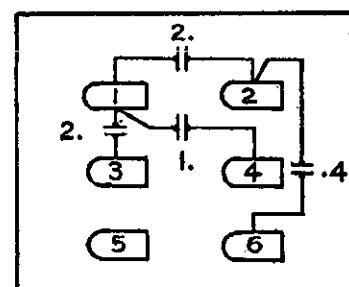


Models Philco's 20, 20A, 220, 220A

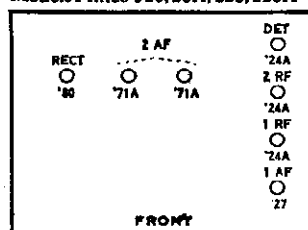

MODEL 20, 20-A
Chassis
Schematic



PHILCO RADIO & TELEVISION CORP.

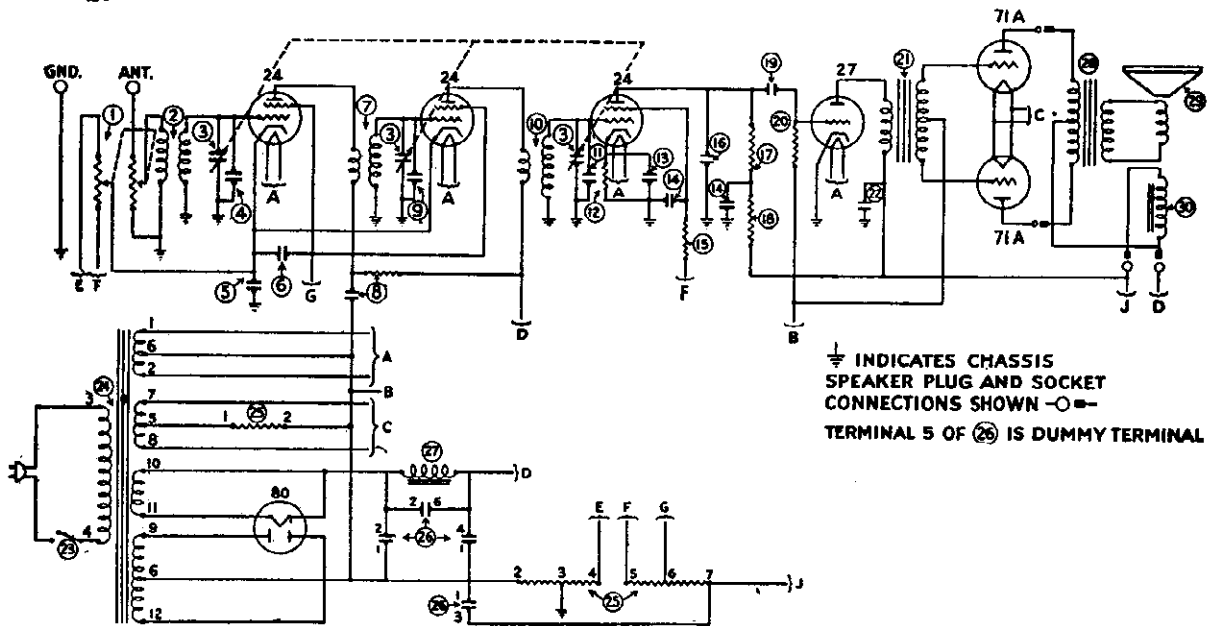

⊥ INDICATES CHASSIS
 SPEAKER PLUG AND SOCKET
 CONNECTIONS SHOWN —○—
 TERMINAL 5 OF ⑳ IS DUMMY TERMINAL

DIFFERENT CIRCUIT ARRANGEMENT FOR MODEL 20-A

Model 20-A for use on 25-60 cycle lines is wired differently than the Model 20. The plate supply lead for the two 24 R. F. Tubes is taken from the low side of the Speaker field Coil. The lead "D" to the 24 tubes should be changed to "J" for the Model 20-A only. This will change the plate voltage from 250 volts to 115-125 volts. The plate current readings will also be lower than those given in the table.

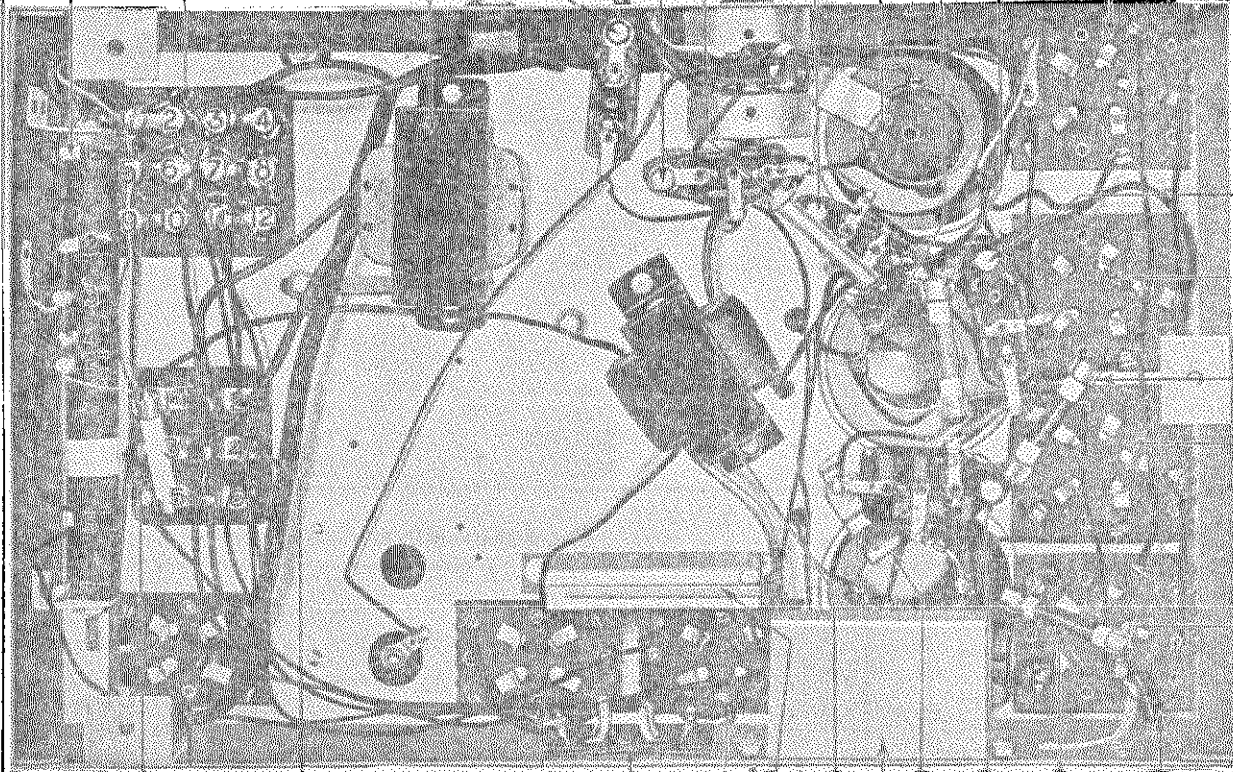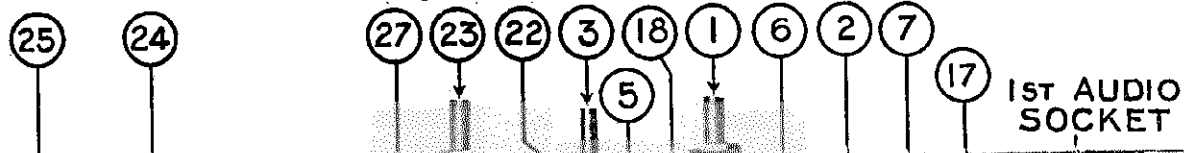

PHILCO RADIO & TELEVISION CORP.

MODEL 30
Voltage
Values

Table 1—Tube Socket Readings Taken with Average Set Checker

Tube	Circuit	Filament Volts	Plate Volts	Grid Volts	Plate Current Milliamperes	Screen Grid Volts
32	1st R. F.	2.0	150		.0015	60
32	2nd R. F.	2.0	150		.0015	58
32	3rd R. F.	2.0	150		.0015	58
30	Detector Rectifier	2.0
30	Detector Amplifier	2.0	15
30	1st Audio	2.0	90	Note 1	.002	..
31	{2d Audio }	2.0*	150	24	.008	..
31	{Push-Pull }	2.0*	150	24	.008	..

*These readings reversed with respect to other Filament Voltage readings.

NOTE 1. With volume control in "Off" position, approximately 4 volts; with volume control full on, less than 1 volt.

Always use high-resistance voltmeter, preferably 1000 ohms per volt, when checking voltages in the Receiver. For reading plate and screen voltages, use a 250- or 300-volt scale. Voltage readings taken with meters having less than 250,000 ohms resistance will be lower than voltages given in the table.

When testing a Model 30 Receiver, all tubes must be in their proper sockets. The speaker must be connected and the tube shield must be fastened in place. The readings in Table 1 were taken using "A," "B" and "C" batteries.

Table 2—Resistor Data

No. on Figs. 1 and 2	Color	Resistance Ohms
①	Golden Yellow	5,000
④	Auto Buff	25,000
⑥	Jade Green	70,000
⑫ ⑭	Silver Gray	100,000
⑮	White	250,000
⑱ ⑲ ⑳	Battleship Gray	500,000
㉓	Tubular (two section)	{ 250 800

Table 3—Condenser Data

No. on Figs. 1 and 2	Capacity—MPD.
⑫	.00005
⑭ ⑮	.000250
⑳	.01
㉑	.05
㉒ ㉓ ㉔ ㉕	.05 with 250-ohm resistor winding
㉖	.25 single section
㉗	.25 two sections

Either the ear method or an output meter can be used while adjusting.

With the Receiver set up for operation, adjust the oscillator signal to a frequency between 1200 and 1300 kilocycles. This corresponds to 120 and 130 on the Receiver tuning scale.

Use a weak signal and tune the Receiver sharply to the oscillator note. The volume control should be turned on "full."

Adjust the compensating condensers, starting with the fourth condenser ㉒ in (Fig. 2.) If using the ear method, adjust the condenser to the loudest signal. If using an output meter, adjust for the maximum reading.

Next adjust the third, then the second, and finally the first. It will not be necessary to reduce the oscillator signal as the successive condensers are adjusted. Reduce the volume of the Receiver with the volume control.

In each step, always adjust for the maximum signal or reading.

PHILCO RADIO & TELEVISION CORP.

Numbering of Philco Coils

For the purpose of identification, Philco coils are being code numbered. These numbers are stamped upon the mounting bracket before the part leaves the National Service Station. The following is a list of these coils (Dated Jan. 1932)

KEY NO. IN SERVICE BULLETIN DIAGRAM

CODE NO. PART NO. USED IN MODELS

1	3075A	511, 86, 87	⓪⓪⓪
2	3075B	511, 86, 87	⓪⓪⓪
3	3506B	65	⓪⓪
4	3506A	65	⓪⓪
5	3744A	95, 96	⓪⓪
6	3744B	95, 96	⓪⓪
7	3744C	95, 96	⓪⓪
8	03845	99 (Pentode Output)	⓪
9	3884A	75, 77, 40, 41	⓪⓪⓪⓪
10	3884B	75, 77, 40, 41	⓪⓪⓪⓪
11	3884C	75, 77, 40, 41	⓪⓪⓪⓪
12	3884N	20, 21	⓪⓪⓪⓪
13	3884P	20, 21	⓪⓪
14	3884S	111, 112	⓪⓪
15	3884T	111, 112	⓪⓪
16	3884U	111, 112	⓪⓪
17	3884V	111, 112	⓪⓪
18	3884X	46, 46E	⓪⓪
19	3884Y	46, 46E	⓪⓪
20	4182A	30	⓪
21	4182B	30	⓪
22	03014	90 (all Models)	⓪⓪⓪
23	03015	90 (all Models)	⓪⓪⓪
24	03016	90 (all Models)	⓪⓪⓪
25	03052	70, 35	⓪⓪
26	03053	70, 35	⓪⓪
27	03084	70, 35	⓪⓪
28	03283	50	⓪
29	03284	50	⓪
30	03320	35	⓪
31	03321	35	⓪
32	03360	90 (Pentode Output)	⓪
33	03013	90 (45's Output)	⓪
34	03009	90 (all Models), 35	⓪
35	03038	111, 112	⓪⓪⓪
36	03039	111, 112	⓪⓪⓪
37	03040	111, 112	⓪⓪⓪
38	03091	70	⓪
39	03092	70, 35	⓪
40	03143	90 (45's Output)	⓪
41	03784	4, 470, 490	⓪⓪
42			⓪
43	03890	51	⓪
44	03891	51	⓪
45	03892	51	⓪
46	03897	51	⓪
47	03898	51	⓪

Standard Compensating Condensers

The various compensating condensers used in the models 35, 70, 270, 370, 390, 112, and 212 have been changed so as to include a bakelite mounting board on which the code letter of the condenser appears. In the case of the I. F. compensating condensers, which have been used in conjunction with a parallel fixed condenser, the new compensating condensers have been increased in capacity so that the fixed condensers are no longer required. For replacement purposes, if desired, the new compensating condensers can be substituted on earlier sets for the earlier combination of a fixed and an adjustable condenser.

The low frequency compensating condensers have been changed with respect to the bakelite mounting, but their capacity remains unchanged, thereby requiring the parallel fixed condenser as in the past.

All of these new condensers can be identified by the letter which is stamped on the bakelite mounting board. For example part 04000-E has the letter E stamped over the surface of the mounting board; part 04000-F has the letter F stamped on the board.

The following table lists the part numbers of the various new condensers, their identification code letter, capacity range, where used, the superseded part number, and the part number of the parallel fixed condenser when one is still used.

(#98 - Dated Sept. 1931)

Part Number	Identification Letter	Capacity Range Mmf.	Used on Models	Supersedes	Used with Fixed Condenser
04000-B	B	40-250	90 (Early and Late)	03050	4520 (700 mmf.)
04000-D	D	6-50	112, 212	3772-A	—
04000-E	E	5-30	112, 212	3968-A	—
04000-F	F	40-250	112, 212	3772-B	4520 (700 mmf.)
			370 70, 270	03120	5120 (410 mmf.)
			35	03249	5120 (410 mmf.)
04000-H	H	40-180	70*, 270*, 370* 90* early	03051	—
04000-J	J	40-180	70*, 270*, 370*, 212* 112*, 90* early	3772-C	—
04000-K	K	30-140	70*, 370*	03061	—
04000-L	L	30-140	270*	03262	—
04000-M	M	15-130	112*	3772-D	—
			35*	03411	—

*FIXED PARALLEL CONDENSER NOT REQUIRED

Coil Numbering
Standard Compensating Condensers

PHILCO RADIO & TELEVISION CORP.


MODEL 35
Test Data

All tubes out of sockets and batteries disconnected. Volume control maximum unless otherwise stated.

From Chassis To	Correct		Incorrect
Aerial	9.3	ohms	
RF Control Grid	251,000	ohms	BC- rf Cg wdg-Y (.09 mfd) TC- rf Cg-Y
RF Control Grid to IF Control Grid	72.5	ohms	TC- IF Tr
RF Screen Grid to 67 $\frac{1}{2}$ post	150	ohms	
RF Screen Grid to Chassis	0	ohm	BC- rf Sg-Y BC- if Sg-Y (2 mfd)
RF Plate to 135 Post	16.4	ohms	
RF Plate to Chassis	0	ohm	BLC- Osc P circuit BC- IF P wdg-Y (09 mfd) BC- D P-Y Tone Control Condenser BLC- D P - 1 AF Cg
1 Detector Control Grid	3,006.6	ohms	TC- 1 D Cg-Y BC- Osc Cplg wdg-Y BC- rf Cg wdg-Y
1 Detector Screen to 67 $\frac{1}{2}$ post	150	ohms	
1 Detector Screen Grid to Chassis	0	ohm	See RF Screen
1 Detector Plate to 135 Post	68	ohms	TC- IF Tr
1 Detector Plate to Chassis	0	ohms	See RF Plate
IF Control Grid	251,065	ohms	TC- IF Tr See RF Control Grid
IF Screen Grid to 67 $\frac{1}{2}$ post	150	ohms	
IF Screen Grid to Chassis	0	ohm	See RF Screen
IF Plate to 135 Post	74	ohms	TC- IF Tr
IF Plate to Chassis	0	ohm	See RF Plate
2 Detector Control Grid	25,000-100,000	ohms	Exact resistance of Cg voltage volume control not known BC- 2 D Cg wdg-Y
2 Detector Control Grid to -22 $\frac{1}{2}$ post	40,000-47,000	ohms	approximate
2 Detector Plate to 135 post	240,013	ohms	2 Detector plate chk is 13.4 ohms
2 Detector Plate to Chassis	0	ohm	See Rf Plate
1 AF Control Grid	493,000	ohms	
1 AF Plate to 67 $\frac{1}{2}$ Post	1,200	ohms	
'47 Control Grid to -22 $\frac{1}{2}$ Post	6,000	ohms	
'47 Screen Grid to 135 Post	0	ohm	
'47 Plate to 135 Post	450	ohms	
Output Transformer Secondary only	.62	ohm	
Oscillator Control Grid to Chassis	54,007	ohms	BC- Osc wdg-Y TC-Osc Cg-Y
Osc Cg to Osc Plate	0	ohm	BLC- Osc P
Oscillator Plate to 135	51,000	ohms	See RF Plate

MODEL 41 DC, 42 DC
Chassis
Changes

PHILCO RADIO & TELEVISION CORP.

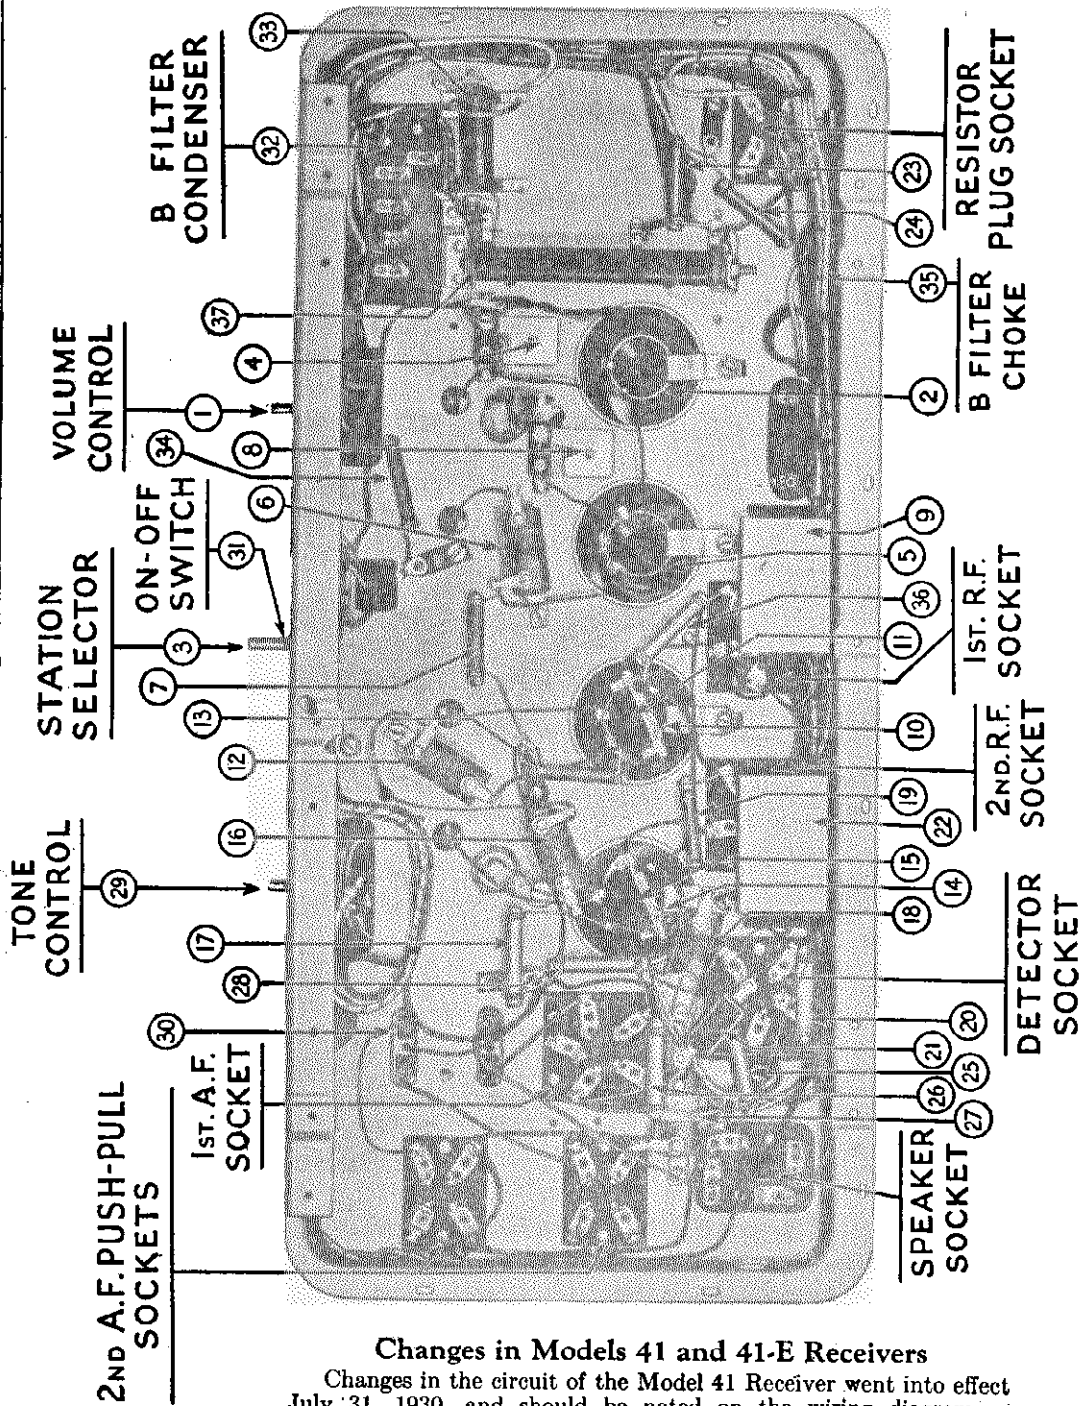

Changes in Models 41 and 41-E Receivers

Changes in the circuit of the Model 41 Receiver went into effect July 31, 1930, and should be noted on the wiring diagram

The R. F. by-pass condenser, Part No. 3615-G, or 3584-D, used to by-pass the plate supply of the R. F. tubes should be changed to Part No. 3615-B. In Service Bulletin 16 this condenser is shown as (18) and is connected between the lead "P" and condenser (9).

The new condenser No. 3615-B has the same capacity as the condenser formerly used, but in addition has a 250-ohm resistor section. One end of the condenser will be grounded through the hold-down screw of the condenser. The other terminal of the condenser is the terminal at the other end of the condenser. This terminal is also common to the resistor winding and should be connected to the point "P" shown on the schematic.

The middle terminal on the condenser is the other terminal of the resistor section, and should be connected to the R. F. coils (11) and (15).
With these changes made in the schematic, the plate supply for the first two "24" tubes will come from "P" through the resistor and then through the two R. F. transformers. The end of the resistor nearest "P" is by-passed through the condenser to ground.

PHILCO RADIO & TELEVISION CORP.

MODEL 50, 50-A
Adjustment
Parts List

ADJUSTMENT OF MODELS 50 AND 50-A

Adjustment of the compensating condensers in the model 50 should be done with the aid of a good oscillator for the R.F. signal. The oscillator lead should be connected to the "ANT" terminal of the receiver. A good ground connection must be made from the receiver to the grounded side of the oscillator and to a water or radiator pipe.

Either the ear method or an output meter, connected across the speaker voice coil terminals can be used while adjusting.

When the Receiver is set up for operation, adjust the oscillator signal to a frequency which is approximately 1400 kilocycles.

With the volume control advanced to maximum, and using a weak oscillator signal, tune the receiver sharply to the oscillator note.

Adjust the third R. F. compensating condenser by means of the Philco fibre wrench, part 3164, for maximum output signal. If an output meter is being used, adjust for maximum reading.

Next adjust the second R. F. compensating condenser and finally the first. In each case, always adjust for maximum signal or reading.

REPLACEMENT PARTS MODELS 50 AND 50-A

No. on Figs. 3 and 4	Description	Part No.	No. on Figs. 3 and 4	Description	Part No.
①	Volume Control	5232	Ⓢ	Resistor—15,000 Ohms	5278
②	First R. F. Transformer	03283	Ⓣ	Bypass Condenser—.05 Mfd.	3615-L
③	Gang Condenser	03293	Ⓤ	Bypass Condenser—(.05 Mfd.) (combined with Ⓣ)	
④	Compensating Condenser (Part of Gang Condenser Assembly)		Ⓡ	Resistor—25,000 Ohms	3656
⑤	Second R. F. Transformer	03284	Ⓢ	Resistor—99,000 Ohms	4411
⑥	Compensating Condenser (Part of Gang Condenser Assembly)		Ⓣ	Resistor—32,000 Ohms	5279
⑦	Third R. F. Transformer	03284	Ⓤ	Resistor—99,000 Ohms	4411
⑧	Compensating Condenser (Part of Gang Condenser Assembly)		Ⓡ	On-Off Switch	5382
⑨	Condenser—250 Mmf.	3082	Ⓢ	Power Transformer—50-60 cycles	5266
⑩	Condenser—250 Mmf.	3082	Ⓣ	Power Transformer—25-40 cycles	5267
⑪	Resistor—10,000 Ohms	4412		Power Transformer—50-60 cycles 210-240 volts	5268
⑫	Condenser—.01 Mfd.	3903-L	Ⓣ	Electrolytic Condenser—6 Mfd.— 50-60 cycles	4916
⑬	Resistor—240,000 Ohms	4410		Electrolytic Condenser—10 Mfd. 25-40 cycles	5142
⑭	Resistor—490,000 Ohms	4517	Ⓢ	Electrolytic Condenser—6 Mfd.— 25-40 cycles and 50-60 cycles	4916
⑮	Bypass Condenser (.15 Mfd., .25 Mfd., 2-.5 Mfd., 1 Mfd.) 50-60 cycles	03459		Tube Shield	03390
	(.15 Mfd., 25 Mfd., 2-.5 Mfd., .05 Mfd.) 25-40 Cycles	03455		Knob (Large)	03064
⑯	Bypass Condenser—.01 Mfd.	3903-N		Knob (Small)	03427
⑰	Output Transformer	2660		Spring (For Dial Knobs) Small	4147
⑱	Voice Coil and Cone Assembly	02970		Spring (For Dial Knobs) Large	5262
⑲	Speaker Field (Assembled with Pot and Frame)	02942		Grid Clip	4897
Ⓢ	Resistor—490,000 Ohms.	4517		Five Prong Socket Assembly	4956
Ⓣ	Resistor—160,000 Ohms.	5331		Four Prong Socket Assembly	5026
Ⓤ	Resistor—150 Ohms and Con- denser—.05 Mfd.	3615-X		Dial Complete	03322
				Bezel	5383

MODEL 50,50-A
Resistance
Test Data

PHILCO RADIO & TELEVISION CORP.

All tubes cut of sockets and AC plug disconnected from power supply
Field Coil disconnected

From Chassis To	Correct	Incorrect
Aerial (V.C. Max)	24 ohms	Aerial V.C. 1800 ohms
1 RF Control Grid	6.5 ohms	TC- rf Cg-Y
1 RF Cathode (V.C.Max)	150 ohms	BC- rf K-Y (.05 mfd)
1 RF Screen Grid	20,150 ohms	V.C. in circuit 5000 ohms See RF Cathode BC- 2 rf Sg-Y FC- 80 F-Y (6 mfd EL)
1 RF Screen Grid to '80 Fil	25,000 ohms	
1 RF Plate	45,215 ohms	BC- rf P-Y See RF Screen
1 RF Plate to '80 Fil	65 ohms	
2 RF Control Grid	6.5 ohms	TC- 2 rf Cg-Y
2 RF Cathode(V.C.Max)	150 ohms	See 1 RF Cathode
2 RF Screen Grid	20,150 ohms	See 1 RF Screen
2 RF Screen Grid to '80 Fil	25,000 ohms	
2 RF Plate	45,215 ohms	See 1 RF Plate
2 RF Plate to 80 Fil	65 ohms	
Detector Control Grid	6.5 ohms	TC- D Cg-Y
Detector Cathode	32,000 ohms	BC- D K-Y
Detector Screen Grid	119,150 ohms	BC- D Sg-Y See RF Screen
Detector Screen Grid to 80 Fil	124,000 ohms	
Detector Plate	394,150 ohms	BC- 99,000 ohms-Y BLC- D P -47 Cg BC- D P-Y FC- 80 Fil-80 P wdg See RF Screen
Detector Plate to '80 Fil	349,000 ohms	
'47 Control Grid	650,000 ohms	BC- 47 Cg leak-Y
'47 Screen Grid to '80 Fil	0 ohm	
'47 Screen Grid to Chassis	45,150 ohms	See RF Screen
'47 Plate	45,516 ohms	See RF Screen
'47 Plate to '80 Fil	366 ohms	
'80 Fil to 80 Plate	695,460 ohms	FC- 80 F-(10 mfd EL)
'80 Plate to Chassis	650,310 ohms	
'80 Plate to 80 Plate	621 ohms	
Across AC plug	7.55 ohms	

A resistor of 10,000 ohms is used in place of an r-f choke in the detector plate circuit. Two bypass condensers, with mid-junction grounded are connected across the resistor.


A fixed condenser is connected between the plate of the pentode tube and ground.

PHILCO RADIO & TELEVISION CORP.

MODEL 51, 51-A
Schematic

ARRANGEMENT OF WIRES


The placing of certain wires in the receiver will effect the operation to a marked extent. The red wire from the primary of the first I. F. transformer (2), Figs. 1 and 2, to the .05 mfd. condenser (9), Figs. 1 and 2, must come straight down to the corner of the I. F. tube socket, then straight up to the condenser lug.
The wire from the plate of the detector-oscillator tube to the coupling compensating condenser (1), Figs. 1 and 2, must be away from the chassis at the side.

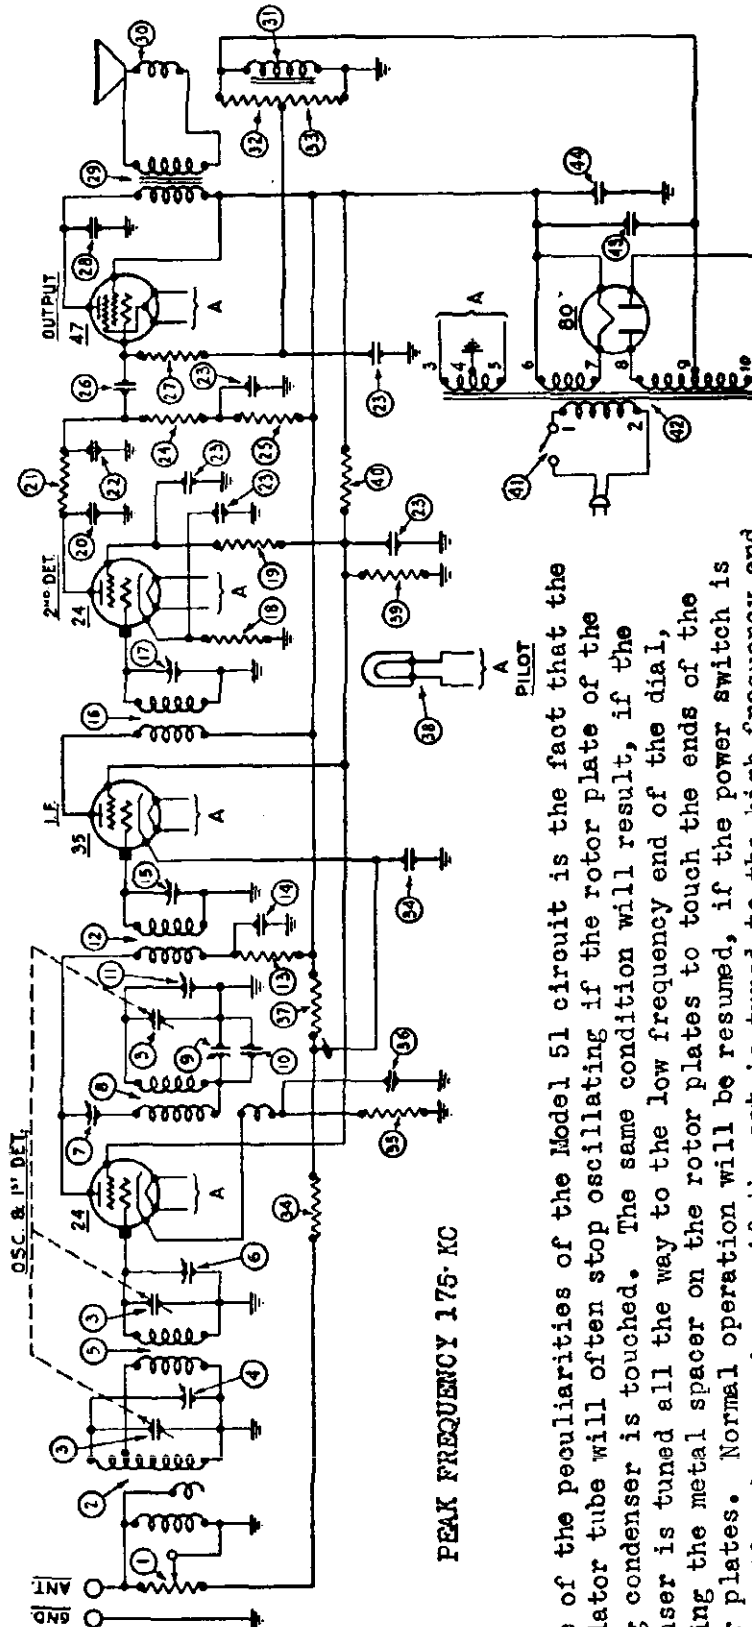

PEAK FREQUENCY 175 KC

One of the peculiarities of the Model 51 circuit is the fact that the oscillator tube will often stop oscillating if the rotor plate of the tuning condenser is touched. The same condition will result, if the condenser is tuned all the way to the low frequency end of the dial, allowing the metal spacer on the rotor plates to touch the ends of the stator plates. Normal operation will be resumed, if the power switch is snapped off and on again, or if the set is tuned to the high frequency end of the dial. An insulated wire is placed around the metal spacer on one set of rotor plates to prevent them from touching the stator. Later model 51s have a small fibre insulator of special design to replace the wire.

The coupling condenser and the two i-f trimmer condensers are located at the rear of the chassis, near the combination 1st detector-oscillator tube. Reading from left to right, facing the rear of the chassis, the condensers are "coupling", "2nd i-f" and "1st i-f".

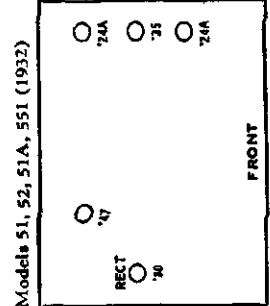

Models 51, 52, 51A, 551 (1932)

MODEL 51, 51-A
Voltage
Electrical
Data

PHILCO RADIO & TELEVISION CORP.

Model 51 Receivers are for operation on 100-130 volt, 50-60 cycle AC line
Model 51-A Receivers are for operation on 100-130 volt, 25-40 cycle AC line

Table 1—Tube Socket Readings Taken with AC Set Tester AC Line—115 volts

Tube		Filament Volts	Plate Volts	Screen Grid Volts	Control Grid Volts	Cathode Volts	Plate Milli- amperes
Type	Circuit						
24	Osc. & 1st Det.	2.2	220*	85*	9.0*	9.0*	6.2 0 28.** 30/ Plate
35	I.F.	2.2	210	85	3.0	3.0	
24	2nd Det.	2.2	75	54	5.2	5.2	
47	Output	2.2	210**	240**	0.2**		
80	Rect.	5.0	240/Plate				

Note—Volume Control on full, Station Selector turned to Low Frequency End.
*These readings must be taken from the underside of the chassis, using a suitable high resistance D.C. voltmeter equipped with test prods and leads.
**These readings must likewise be taken from the underside of the chassis unless the set tester is especially equipped for testing pentode tubes.

Table 2—Power Transformer Voltages

Terminals	A.C. Volts	Connection	Color
1-2	105 to 125	Primary	Black (Small Gauge)
3-5	2.5	Filament of 24, 35 and 47	Black
6-7	5.	Filament of 80	Light Blue
8-10	700.	Plates of 80	Yellow
4	..	Center Tap of 3-5	Black, Yellow Tracer
9	Center Tap of 8-10	Yellow, Green Tracer

Table 3—Condenser Data

Nos. on Figs. 1 and 2	Capacity Mfd.	Container
(20) (22)	00025	Yellow
(10) (36)	00011	Blue and Golden Yellow
(26) (28)	.01	Black Bakelite Container
(14)	.05	Black Bakelite Container
(28)	.1, .15, .25, 2-.5 (50-60 cy.)	Metal Container
(48)	.2, .15, .25, 2-.5 (25-40 cy.)	Metal Container
(4)	6 (50-60 cycles)	Electrolytic
	10 (25-40 cycles)	Electrolytic
	6	Electrolytic

Table 4—Resistor Data

Nos. on Figs. 1 and 2	Power (Watts)	Resistance (Ohms)	Color		
			Body	Tip	Dot
(24)		250 and .05 Mfd.		Black Bakelite Container	
(15)	.5	1,000	Brown	Black	Red
(25)	.5	8,000	Grey	Black	Red
(21)	.5	10,000	Brown	Black	Orange
(16)	1.	25,000	Red	Green	Orange
(18)	.5	32,000	Orange	Red	Orange
(22)	1.	32,000	Orange	Red	Orange
(17)	2.	51,000	Green	Brown	Orange
(19)	.5	99,000	White	White	Orange
(23)	.5	160,000	Brown	Blue	Yellow
(24) (27) (32)	.5	490,000	Yellow	White	Yellow

PHILCO RADIO & TELEVISION CORP.

MODEL 51, 51-A
Adjustment
Chassis

The adjustment of the Model 51 Receiver requires the use of a 175 K.C. oscillator and a broadcast oscillator such as the Jewell 560.

Set up the receiver for operation with the ground wire attached, but the aerial disconnected. Connect the ground wire of the oscillator to the receiver ground terminal. Connect the output meter (low terminals) across the speaker voice coil terminals.

Intermediate Frequency or I.F. Adjustment—Place the oscillator in operation at 175 K.C. Remove the tube shield and attach the oscillator output lead to the control grid terminal on top of the detector oscillator tube (see illustration above).

With the receiver volume control on full, adjust the oscillator output until the output meter reads about 1/2 scale deflection.

Using a Philco-fibre wrench, part 3164, adjust the 2nd I.F. compensating condenser for maximum reading in the output meter. The illustration above shows the positions of the various compensating condensers. Next adjust the first I.F. compensating condenser, and finally adjust the coupling condenser. Remove the oscillator connection from the grid terminal of the detector oscillator tube, and replace the clip on the tube.


Detector Condenser—Connect the oscillator to the "Ant." terminal of the receiver chassis. Place the oscillator in operation at 175 K.C. Turn the station selector of the receiver to exactly 1400 K.C. Adjust the detector compensating condenser for maximum reading in the output meter.

If the receiver is so far out of adjustment that the signal is not audible, it may be necessary to set the oscillator for 1400 K.C. on the broadcast frequency setting. After making this adjustment, again set the oscillator at 175 K.C. The adjustment of the detector condenser will determine the position on the Philco scale where the eighth harmonic of 175 K.C. (1400 K.C.) will be tuned in. It must be tuned in at exactly 140 on the Philco scale.

Antenna Condensers—With the oscillator still set at 175 K.C. and the tuning dial at 1400 K.C., adjust the second antenna compensating condenser for maximum reading in the output meter, and then adjust the first antenna condenser.

Low Frequency Condenser—Set the broadcast oscillator to exactly 600 K.C. and turn the receiver dial to exactly 60 on the scale. Adjust the low frequency condenser for maximum reading in the output meter.

After making this adjustment, it will be desirable to check the detector compensating condenser adjustment again. Set the oscillator at 175 K.C. and receiver at 140 on the scale. Adjust again for maximum reading in the output meter.

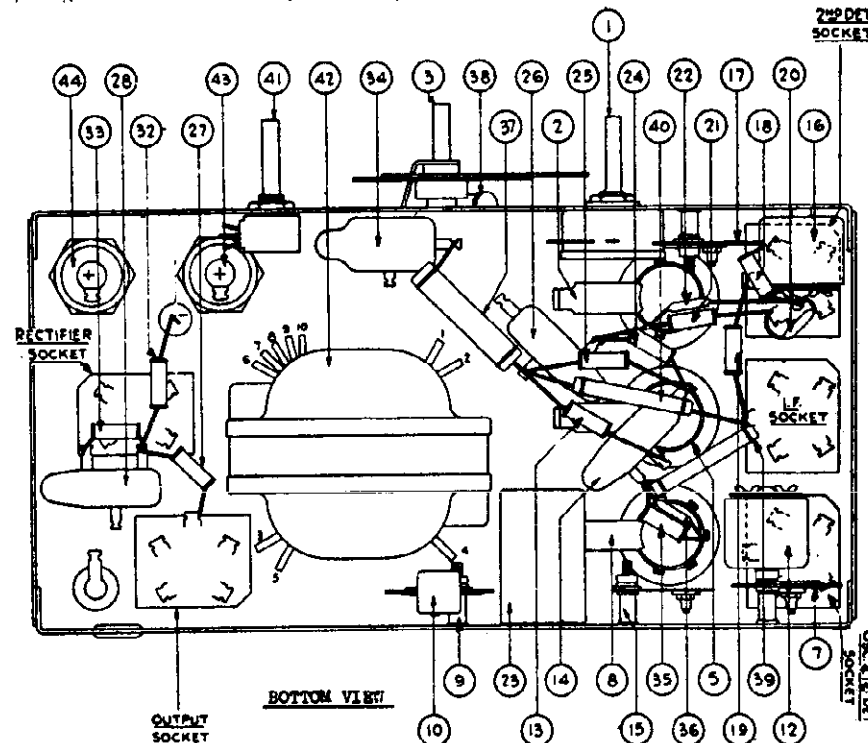


New Replacement Parts		Models 51 and 551	
Part No.	Name	List Price	Part No.
3615-AC	Condenser (.05 Mfd.)	\$.20	03881
3903-K	Condenser (.01 Mfd.)	.16	03882
3903-S	Condenser (.01 Mfd. Double)	.20	03886
5837	Resistor (1,000 Ohms)	.20	03887
5538	Resistor (8,000 Ohms)	.20	03915
5838	Volume Control	.75	03945
3838	Condenser (250 Mmf.)	.16	04011
8883	Condenser (710 Mmf.)	.18	04031
			14607
			44513
			03881
	Resistor (51,000 Ohms)	.35	03882
	Base	.20	03886
	Clock Glass	.30	03887
	Clock Unit (60 Cycles)	5.50	03915
	Voice Coil and Cone Assembly (Type P) Small	.60	03945
	Voice Coil and Cone Assembly (Type S) Large	.75	04011
	Field Coil and Pot Assembly	1.75	04031
	Gang Condenser	4.75	14607
	Pilot Light Bracket Complete	.08	44513
	Antenna Coil	.75	
			03881
			03882
			03886
			03887
			03915
			03945
			04011
			04031
			14607
			44513
			03881
			03882
			03886
			03887
			03915
			03945
			04011
			04031
			14607
			44513
			03881
			03882
			03886
			03887
			03915
			03945
			04011
			04031
			14607
			44513

Standard Bypass
Condenser Data

PHILCO RADIO & TELEVISION CORP.

Standard By-Pass Condenser Data

The tables below list the various Philco standard by-pass condensers in black bakelite containers. The drawing shows all possible lug connections and the tables list the lug numbers.

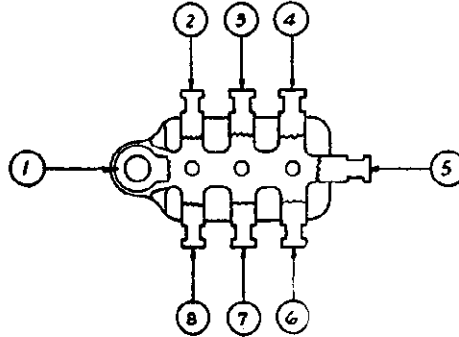

Condenser 3615 .05 Mfd.

Part No.	Cond. Cap. Mfd.	Lugs Used	Wire Resis. Ohms	Resis. Wiring Lugs	Cond. Wiring Lugs
3615-B	.05	1-3-5	250	3-5	1-5
3615-C	.05	1-5-7	250	5-7	1-5
3615-D	.05	1-3-5	1-5
3615-E	.05	2-5
3615-F	.05	2-3-5	3-5
3615-G	.05	5-8
3615-H	.05	3-5-8	5-8
3615-J	.05	1-5-7	1-5
3615-K	.05	3-5-8	250	3-5	5-8
3615-L	.05	1-5
3615-M	.05	2-5-7	2-5
3615-N	.05	1-4-7	1-4
3615-P	.05	1-4-7	250	4-7	1-4
3615-R	.05	1-5-7	250	5-7	1-5
3615-S	.05	1-4
3615-T	.05	1-5-7	150	1-7	1-5
3615-U	.05	1-5-7	1-7
3615-W	.05	1-2-5	1-5
3615-X	.05	1-2-5-7	150	1-7	1-5
3615-Y	.05	1-2-5-7	150	1-5	1-7

Condenser 3793 .015 Mfd.

Part No.	Cond. Cap. Mfd.	Lugs Used	Wire Resis. Ohms	Resis. Wiring Lugs	Cond. Wiring Lugs
3793-B	.015	5-7
3793-C	.015	2-4
3793-D	.015	2-6
3793-E	Twin .015	1-5-7	1-5 & 1-7
3793-F	.015	5-7-8	7-8
3793-G	.015	2-3-6	2-6
3793-H	Twin .015	1-3-5	1-3 & 1-5

Condenser 3903 .01 Mfd.

Part No.	Cond. Cap. Mfd.	Lugs Used	Wire Resis. Ohms	Resis. Wiring Lugs	Cond. Wiring Lugs
3903-F	.01	3-5
3903-G	.01	2-4-7	2-4
3903-H	.01	5-8
3903-J	.01	2-5-7	2-5
3903-K	.01	1-2-4-7	1-7
3903-L	.01	3-5-8	3-5
3903-M	.01	4-7-8	4-8
3903-N	.01	3-5-8	5-8
3903-P	.01	2-5-7	2-7

Condenser 4989 .09 Mfd.

Part No.	Cond. Cap. Mfd.	Lugs Used	Wire Resis. Ohms	Resis. Wiring Lugs	Cond. Wiring Lugs
4989-B	Twin .09	1-3-5	1-3 & 1-5
4989-C	Twin .09	1-5-7	1-5 & 1-7
4989-D	.09	1-5
4989-E	.09	1-5-7	250	7-5	1-5
4989-F	.09	1-5-7	1-5
4989-G	Twin .09	1-4-7	1-4 & 1-7
4989-H	Twin .09	1-5	1-5 & 1-5

PHILCO RADIO & TELEVISION CORP.

MODEL 70, 70-A
Below B-22,000
Parts List


REPLACEMENT PARTS—MODELS 70 AND 70-A
(Service Bulletin No. 57)

No. on Figs. 3 and 4	Description	Part No.	No. on Figs. 3 and 4	Description	Part No.
①	Volume Control	5039	④	Condenser (Electrolytic) (50-60 cycles)	4916
②	First R. F. Transformer	03082		Condenser (Electrolytic) (25-40 cycles)	5142
③	Tuning Condenser (25-40 cycles)	03077		Filter Choke	4951
	Tuning Condenser (50-60 cycles)	03076	⑤	Condenser (Electrolytic) (50-60 cycles)	4916
④	Compensating Condenser (Part of Gang Assembly)		⑥	Condenser (Electrolytic) (25-40 cycles)	5142
⑤	Bypass Condenser—.09 M. F. Double	4989-C	⑦	Pilot Lamp	3463
⑥	First Detector Transformer	03083	⑧	Power Transformer—50-60 cycles	5117
⑦	Compensating Condenser (Part of Gang Assembly)		⑨	Power Transformer—25-40 cycles	5118
⑧	Oscillator Coil	03084	⑩	Switch	4095
⑨	Fixed Condenser—.00041 M. F.	5120	⑪	Bypass Condenser—.015 M. F. (Double)	3793-H
⑩	Compensating Condenser	03120	⑫	Tone Control	03140
⑪	Resistor—50,000 Ohms	4237		Mica (Compensating Condenser)	3473
⑫	Bypass Condenser—.09 M. F. Double	4989-C	⑬	Insulating Washer (Compensating Condenser)	3500
⑬	Compensating Condenser (Part of Gang Assembly)			Rubber Washer (Chassis Mtg.)	5189
⑭	Resistor—5,000 Ohms	3526		Grommet (R. F. Transformer Shield)	3747
⑮	Condenser—.00011 M. F.	4519		Rubber Washer (Tuning Condenser Mtg.)	3914
⑯	Resistor—13,000 Ohms	3766		Rubber Washer (Tuning Condenser Mtg.)	3915
⑰	Condenser—.00011 M. F. }			Rubber Washer (Tuning Condenser Mtg.)	3916
⑱	Compensating Condenser }	3772-C		Spring Switch Knobs	4147
⑲	First I. F. Transformer	03091		Grid Clip	4897
⑳	Compensating Condenser }			Five Prong Socket	4956
㉑	Fixed Condenser—.00011 }	03051		Speaker Socket	4957
㉒	Second I. F. Transformer	03092		Knobs (Dial)	03063
㉓	Bypass Condenser—.05 M. F.	3615-L		Tube Socket (Rectifier Tube)	5026
㉔	Compensating Condenser }			Steel Washer (Chassis Mtg.)	5058
㉕	Condenser—.00005 }	03061		Knob (Switch, Tone, Volume) (Baby Grand)	4290-A
㉖	Bypass Condenser—.5	3583		Volume Control Insulator	4092
㉗	Resistor—50,000 Ohms	4237		Volume Control Insulator	4286
㉘	Condenser—.0005	3910		Knob—Tone, Volume (Highboy)	03064
㉙	Condenser—.00025	3082		Nut—Volume, Tone, Switch	W-434
㉚	Detector R. F. Choke	03086		Complete Drive Bracket	03011
㉛	Resistor—250 Ohms and Condenser—.09 M. F.	4989-E		Dial Disc Assembly	03031
㉜	Resistor—250,000 Ohms	4410		Fahnestock Clip	L-1126
㉝	Resistor—100,000 Ohms	4411		Knob Spring - Tone, Volume, Dial for Lowboy and Highboy	5262
㉞	Condenser—.01 M. F.	3903-J		Knob Spring - Tone, Volume for Baby Grand	5173
㉟	Resistor—250,000 Ohms	4410		Knob Spring - Dial - Baby Grand	5262
㊱	Condenser—.25 M. F.	4264			
㊲	Output Transformer	2673			
㊳	Voice Coil and Cone	02996			
㊴	Speaker Field assembled with Pot and Frame	02966			
㊵	B. C. Resistor	5125			

Several changes in wiring and part numbers have been made in model 70. The filter choke, part 4951 has been changed to part 4819, the same choke as used in the model 21. On the 50-60 cycle models, a .09 mfd. condenser, part 4989-J, is connected across the filter choke, part 4819. On the 25 cycle models, this condenser should be .18 mfd., part 4989-H, ungrounded. The two 240,000 ohm resistors, part 4410, Nos. 32 and 35 Service Bulletin No. 57 and Nos. 25 and 29, Service Bulletin No. 85, should be of the Continental Carbon type. This is the resistor without the metal ends.

MODEL 70, 70-A
Above B-22,000
Chassis

PHILCO RADIO & TELEVISION CORP.

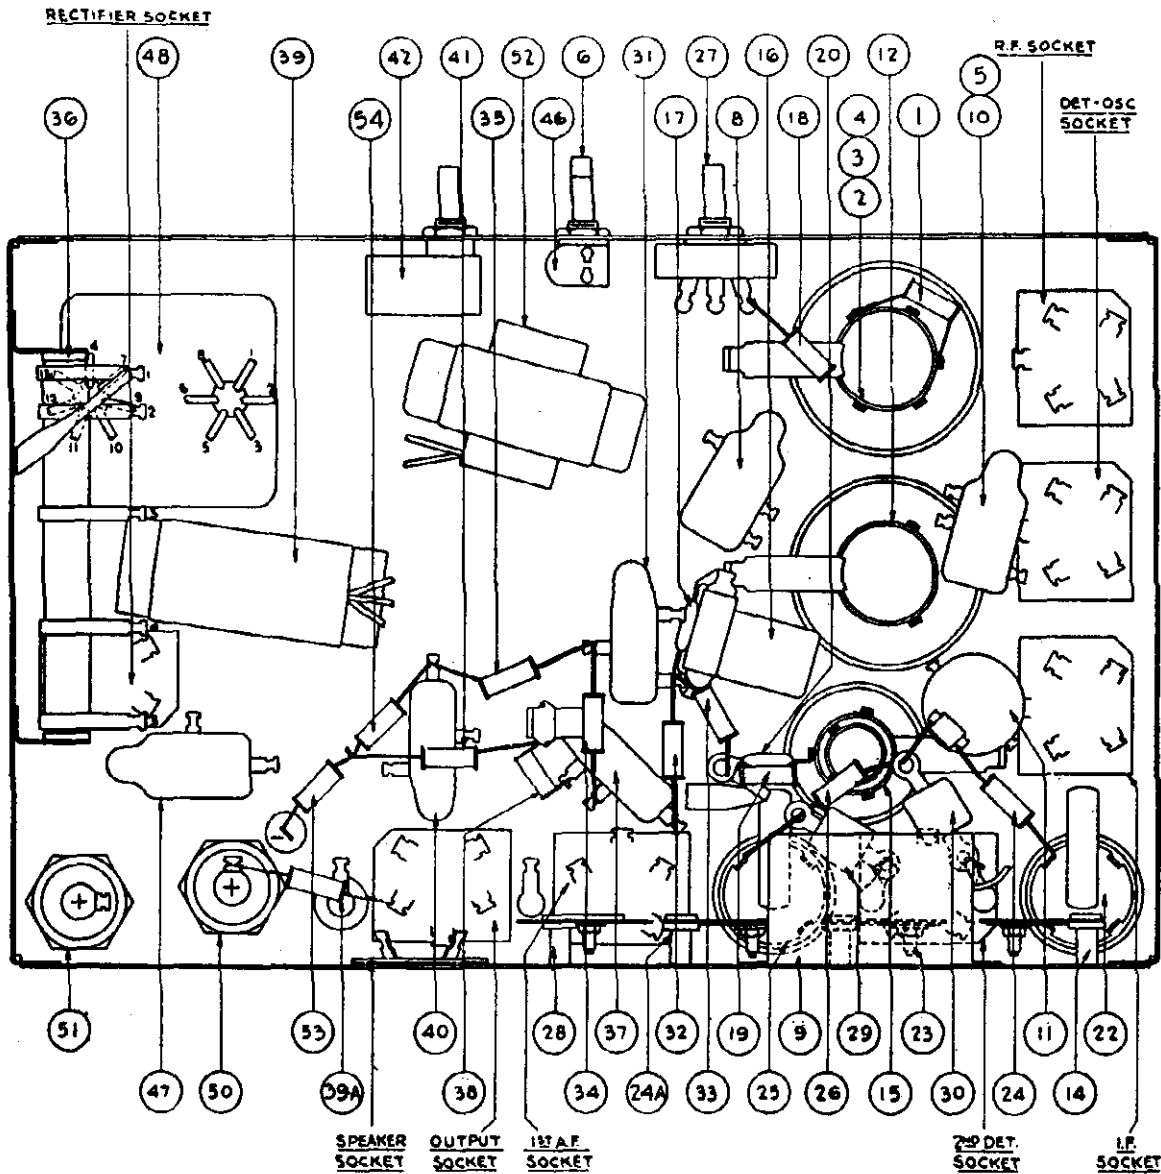

MODELS 70 AND 70-A

Above Serial B-22000

Part Numbers on Service Reports

It is highly important that the complete part number including the letter, of defective parts be specified on all of your service reports. Many parts have a letter after the part number as listed in the service bulletins. Other parts—namely, power transformers, audio transformers, filter chokes, field coils, electrolytic condensers, and volume controls are listed in the service bulletins without a letter, but actually have this letter stamped on the part itself after the part number.

Adjusting Superheterodynes

PHILCO RADIO & TELEVISION CORP.

Adjusting Philco Superheterodynes

The compensating condensers in every Philco Receiver are carefully adjusted before the set leaves the factory. Under ordinary circumstances they should never have to be re-adjusted in the field. Extremely rough handling during shipment, or a slight change in some of the electrical characteristics of the radio circuit may in some cases make re-adjustment necessary.

The indications that the set may require re-adjustment are poor sensitivity, poor selectivity and dial readings in kilocycles off more than 20 K. C. In some cases, an unstable condition of the set with a tendency to squeal or howl on certain sections of the dial may also be an indication of improper adjustment.

Under no circumstances should a re-adjustment be attempted unless the necessary equipment is available and unless the proper instruction has been received. Your distributor will gladly assist you in both of these matters.

The general method of adjusting the compensating condensers in all Philco superheterodyne receivers is the same. Once this procedure is understood for one model, it can be applied with but little change to the various other Philco models. By means of the instructions below and by reference to the different illustrations, the complete adjustments can be made on all Philco superheterodynes.

EQUIPMENT.

The following equipment is needed:

1. Intermediate frequency oscillator accurately calibrated at 175 K. C. and 260 K. C. The Philco Oscillator Model 095 is recommended.
2. Output meter. The oscillator mentioned above is equipped with an output meter.
3. Philco fibre wrench, part 3164.

INTERMEDIATE FREQUENCY OR I. F. ADJUSTMENTS.

The adjustment of the I. F. compensating condensers should be done in the following manner:

1. Make the necessary connections between the oscillator and the receiver as shown in the illustration, Fig. 1. The connections consist of (a) the ground wire to the GND terminal of the radio set and to the G terminal of the oscillator; (b) the A terminal of the oscillator to the grid of the first detector tube (tube shield in place and first detector grid clip removed); (c) output meter terminals to the primary of the output transformer (this connection is obtained at the speaker plug and socket through the Philco plug-in adapter, part 6095); (d) power cord of receiver to the electric power outlet after all other connections have been completed.
2. Turn on the radio set and the oscillator. For Philco models of the 70 and 35 series, the oscillator switch should be placed in the 260 K. C. position. For models of the 111, 112, 90 and 51 series, the switch should be placed in the NORMAL-MAXIMUM switch position. Turn the radio volume control to Maximum.
3. Adjust the oscillator control (attenuator) until a reading is obtained on the output meter of approximately $\frac{1}{2}$ the scale deflection. By means of the Philco fibre wrench, part 3164, adjust the various intermediate frequency condensers, one at a time, to obtain maximum reading in the output meter. Locations of all compensating condensers are shown in the illustrations on pages 3 and 4. It is desirable to start with the last I. F. compensating condenser in the circuit (2nd I. F. secondary in the case of the 112) and progress in the adjustments toward the first. It may be necessary while the adjustments are being made, to lower the setting of the oscillator control from time to time so as to keep the output meter reading within the scale range.
4. After these adjustments have been completed, remove the oscillator connection from the grid terminal of the first detector tube and restore the grid clip connection to this terminal.

COUPLING CONDENSER.

Adjust the coupling condenser in the Model 51 at 175 K. C. in the same manner as the I. F. condenser.

HIGH FREQUENCY ADJUSTMENTS. Improper adjustment of the high frequency compensating condenser is characterized by weak reception and poor selectivity at the high frequency end of the dial and by dial readings being off by more than 20 K. C. at this end of the dial. Proceed in the following manner:

1. Connect from the A terminal of the oscillator to the ANT terminal of the broadcast receiver. All other connections remain the same as for adjustment of the I. F. compensating condensers. See Fig. 2 for complete connections.
2. Set the switch on the oscillator to 175 K. C. Set the dial of the receiver to exactly 140 (1400 K. C.). The eighth harmonic of 175 K. C. will be received at this point. Turn on the volume control to maximum. Turn on the oscillator and adjust the control until a $\frac{1}{2}$ scale reading is obtained on the output meter. If the receiver is badly out of adjustment, it may not be possible to obtain such a reading, in which case the meter reading must be disregarded temporarily and the adjustments made by ear.
3. Carefully adjust the high frequency compensating condenser for maximum reading in the output meter or for maximum volume if the output is not great enough to be read on the meter.

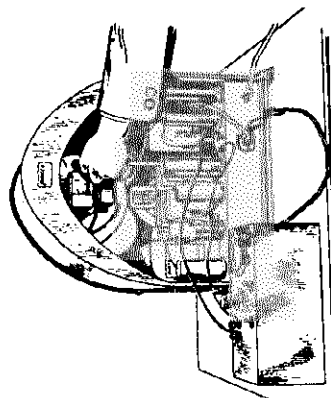


Fig. 2

4. When making this adjustment, it may be found that a given position of the adjusting nut can be obtained at which maximum reading is noted, but that the meter reading decreases when the fibre wrench is lifted from the nut. Allow for this condition by turning slightly beyond the point of maximum reading, then when the wrench is removed the reading will go up instead of down.
5. After making the adjustment, turn the station selector slightly to note if any increase in volume is obtained as the set is being re-tuned. If such an increase is obtained, then the antenna, detector and r. f. condensers should be re-adjusted as described below. After this adjustment, the high frequency condenser can again be re-adjusted at 1400 K. C.
6. In some cases, when first starting to make the 1400 K. C. adjustment, it may be found that the signal from the oscillator cannot be heard at 140 because the set is so far out of adjustment. In this case, tune the set to the signal, and then adjust the Antenna Detector and R. F. condenser first. Re-adjust the high frequency condenser at 140 on the dial.

ANTENNA, DETECTOR, AND R. F. ADJUSTMENTS.

The adjustment of the antenna, detector, and R. F. compensating condensers is done at 140 on the dial in the same manner and with the same connections as for the high frequency adjustments.

LOW FREQUENCY ADJUSTMENT.

The characteristics of improper adjustment of the low frequency condensers are weak reception, poor selectivity and dial calibrations off more than 20 K. C. at the low end of the dial. The low frequency adjustment is made with the same connections as for the high frequency and Antenna condenser adjustments. Proceed in the following manner:

1. With the receiver and the oscillator in operation, the latter at 175 K. C., set the Philco dial at exactly 70 on the scale.
2. With the volume control at maximum, adjust the oscillator output until the output meter reads approximately $\frac{1}{2}$ scale deflection. Adjust the low frequency compensating condenser for maximum reading in the output meter.
3. If the signal comes in stronger at a position off 70 on the Philco scale, adjust for maximum output on the meter at this "Off K. C." position of the dial. Now re-tune the set slightly to obtain any further possible increase, adjusting the compensating condenser and re-tuning the dial each time so as to bring the point of maximum output as near 70 as possible.
4. Re-set the dial to exactly 140, and re-adjust the high frequency condenser. It is possible that the adjustment of the low frequency condenser has affected the high setting of the dial slightly.

MODEL 65

PHILCO RADIO & TELEVISION CORP.

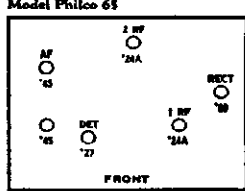
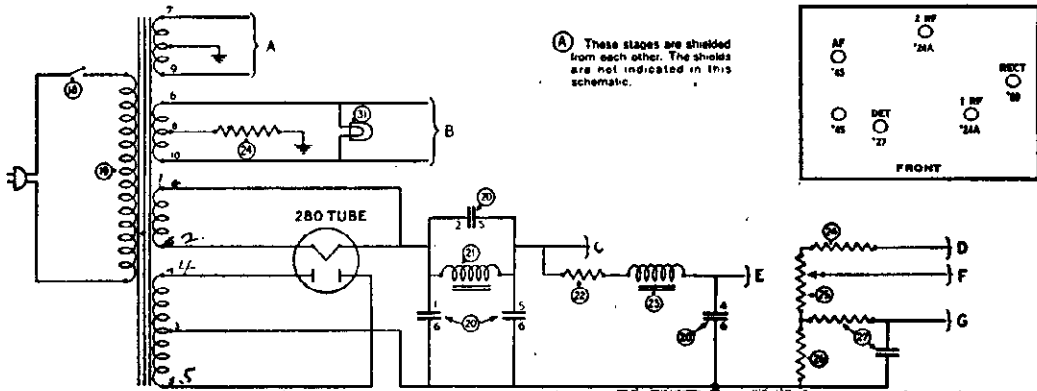
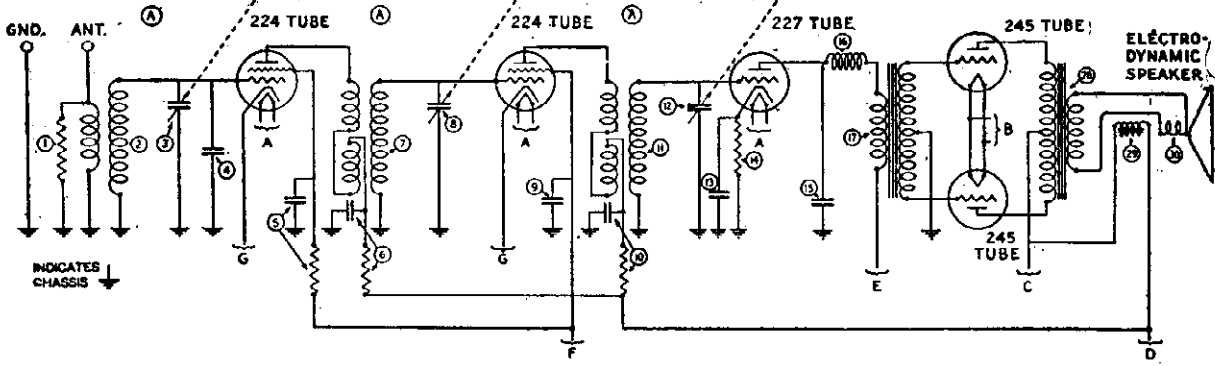


Table 6
Tube Socket Readings

TYPE TUBE	"A" VOLTS	"B" VOLTS	"B" VOLTS (SCREEN GRID)	"C" VOLTS (CONTROL GRID)	MA PLATE	CATHODE
224	2.5	150	*.2 to .75	1.5	1.5	+1.5
227	2.5	250	...	28	1.8 to 3.5	+28
245	2.5	250	...	50	32	...
280	5.0	350-V. A.C.	55	...

*The voltage varies from 75 volts with the volume control turned for full volume to .2 volts with the control turned for minimum volume.
 †When there is no signal being reproduced the detector plate current will be about .8 MA. Strong signals will cause a rise in current to 3.5 MA.

Table 9
Power Transformer Voltage (AC)

TERMINALS	A.C. VOLTS	SECONDARY
1-2	700	A.C. Supply to Plates of Rectifier Tube
3		Center Tap of Rectifier Plate Secondary
4-5	5.0	Rectifier Filament
6-10	2.5	Filament 245 Tubes
8		Center Tap of 245 Tube Secondary
7-9	2.5	Heater 224 and 227 Tubes

Green lead - Center Tap for Secondary 7-9
 Current Consumption - 125 V. A.C. 95 Watts

Table 10
D. C. Voltage Across Filter Condenser Block

TERMINALS	D.C. VOLTS	CAPACITY	CIRCUIT
1-6	325	2.0 Mfd.	First Filter Section, Ground to 280 Filament
2-5	20	.15 Mfd.	Parallel with First Choke Coil
3	Blank Terminal for Detector Plate Resistor
4-6	280	1.0 Mfd.	Last Filter Section, Gnd. to Det. Plate Lead
5-6	305	2.0 Mfd.	2d Filter Section, Gnd. to End of First Choke

Table 11
Voltage Across Resistors

RESISTOR NUMBER	RESISTOR TERMINAL	VOLTAGE DROP	CIRCUIT
②	1-2	45-50	Grid Bias for the 245 Tubes
③	3-4	75-80	Reduces B Voltage for the Screen Grid
④	1-2	4-10	Detector Plate Voltage
Field Coil of Speaker	1-2	28	Detector Grid Bias
		135-140	Supplies Field Energy of Dynamic Speaker

PHILCO RADIO & TELEVISION CORP.

MODEL 87
Voltage Data
Condenser Data
Neutralization

Neutralizing: Use a neutralizing tube as described above and a good oscillator, such as is shown on Page 17, to neutralize the Philco Receiver.

When adjusting the Neutralizing Condensers connect the test lead from the oscillator to the ANT terminal. Have a good ground connection. Turn on the oscillator. With the Receiver turned on, tune it carefully until the oscillator signal is brought in at maximum strength. Have the oscillator coupler plug in for loud volume.

Remove the third (next to the detector) R. F. Tube, and after insulating one of the filament prongs put it back into the socket. When the neutralizing tube is inserted, the volume should be quite low. To properly neutralize this stage, turn the third neutralizing condenser with a fiber wrench, first one way then the other, until the minimum signal is obtained. This adjustment for minimum signal

is very critical, and must be done with extreme care. Remove the neutralizing tube and after taking the insulating material from the filament prong put the tube back into the socket. Repeat the above procedure for the second and then the first R. F. stage. It is important that the neutralizing be done with the volume control on full.

Table 3

Tube Socket Voltages

A.C. LINE VOLTS	1st, 2d, 3d R. F. 1st A. F.		DETECTOR		2d A. F.		RECTIFIER
	F. V.	P. V.	F. V.	P. V.	F. V.	P. V.	
125	1.5	90	2.5	30	2.5	245	F. V. 5.0 G. V. 45

Table 4

D. C. Voltage Across Filter Condenser Block

TERMINALS	D.C. VOLTS	CAPACITY	CIRCUIT
1-10	310	2.00 Mfd.	First Plate Filter Condenser
1-2	20	0.15 Mfd.	Across First Filter Choke
3-10	250	2.00 Mfd.	Second A. F. to Ground
4-10	155	1.00 Mfd.	Speaker Field to Ground
6-10	30	2.00 Mfd.	Detector Plate to Ground
5-10	96	1.00 Mfd.	R. F. and 1st A. F. Plates to Ground
7-10	45	0.10 Mfd.	B- of Second A. F. to Ground
8-9	110 A.C.	0.015 Mfd.	LOC Terminal Condenser

Table 5

Voltage Across "B-C" Resistor

TERMINALS	VOLTAGE DROP	TERMINAL	CIRCUIT
1-2	90	1	B+ for 226 Tubes
2-3	6	2	C+ and B- of 226 and 227 Tubes
3-4	45	3	Grounded C- of 226 and 245 Tubes
		4	C+ and B- of 245 Tubes

Table 6

Power Transformer Voltages

Current Consumption - 125-volt Line - A. C. Watts - 95

TERMINALS	A.C. VOLTS	SECONDARY
7-10	1.5	A.C. Filament of 226 Tube
8-11	2.5	A.C. Filament of 227 Tube
6-12	2.5	A.C. Filament of 245 Tubes
9	5.0	Center Tap of 245 Filament Secondary
4-5	700	A.C. Filament of Rectifier Tube
1-2		A.C. Supply to Plate of Rectifier Tube
3		Center Tap of Rectifier Plate Secondary

Philco Model 87 Receiver

POWER TRANSFORMER (30)

TERMINAL No.	COLOR OF CABLE WIRE	CONNECTION
1		Plate Rectifier (280) Tube
2		Plate Rectifier (280) Tube
3		Center Tap Grounded
4		Filament 280 Tube
5		Filament 280 Tube
6	Green with Yellow Tracer	Filament 245 Tube and Pilot
7	Black with White Tracer	Filament 226 Tube
8	Yellow	Heater 227 Tube
9	Green with Black Tracer	Terminal 7 of No. ⑩, Terminal 4 of No. ⑤
10	White with Black Tracer	Filament 226 Tube
11	Yellow with Green Tracer	Heater 227 Tube
12	Green	Filament 245 Tubes and Pilot
	Green Rubber-Covered Wire	A.C. Supply
	Black Rubber-Covered Wire	A.C. Supply
	Yellow Rubber-Covered Wire	Terminal 3 of No. ⑤


FILTER CONDENSER BLOCK (31)

1	White	Terminal of No. ⑥
2-3	Black with Yellow Tracer (Two Wires)	Terminal of No. ②
4	Blue	Right Lower Lug Electro-Dynamic Speaker Plug Jack
		Terminal of No. ②
5	Yellow with Green Tracer (Two Wires)	Left Lower Lug Electro-Dynamic Speaker Plug Jack
6	Yellow	Terminal of No. ④
7	Green with Black Tracer	Terminal of No. ④
8	Blue with White Tracer	Terminal 9 of No. ②
9	Black	Terminal of No. ②
10		Local on Binding Post Strip Grounded

PHILCO RADIO & TELEVISION CORP.


MODEL 87
Schematic
Socket

Philco Model 87

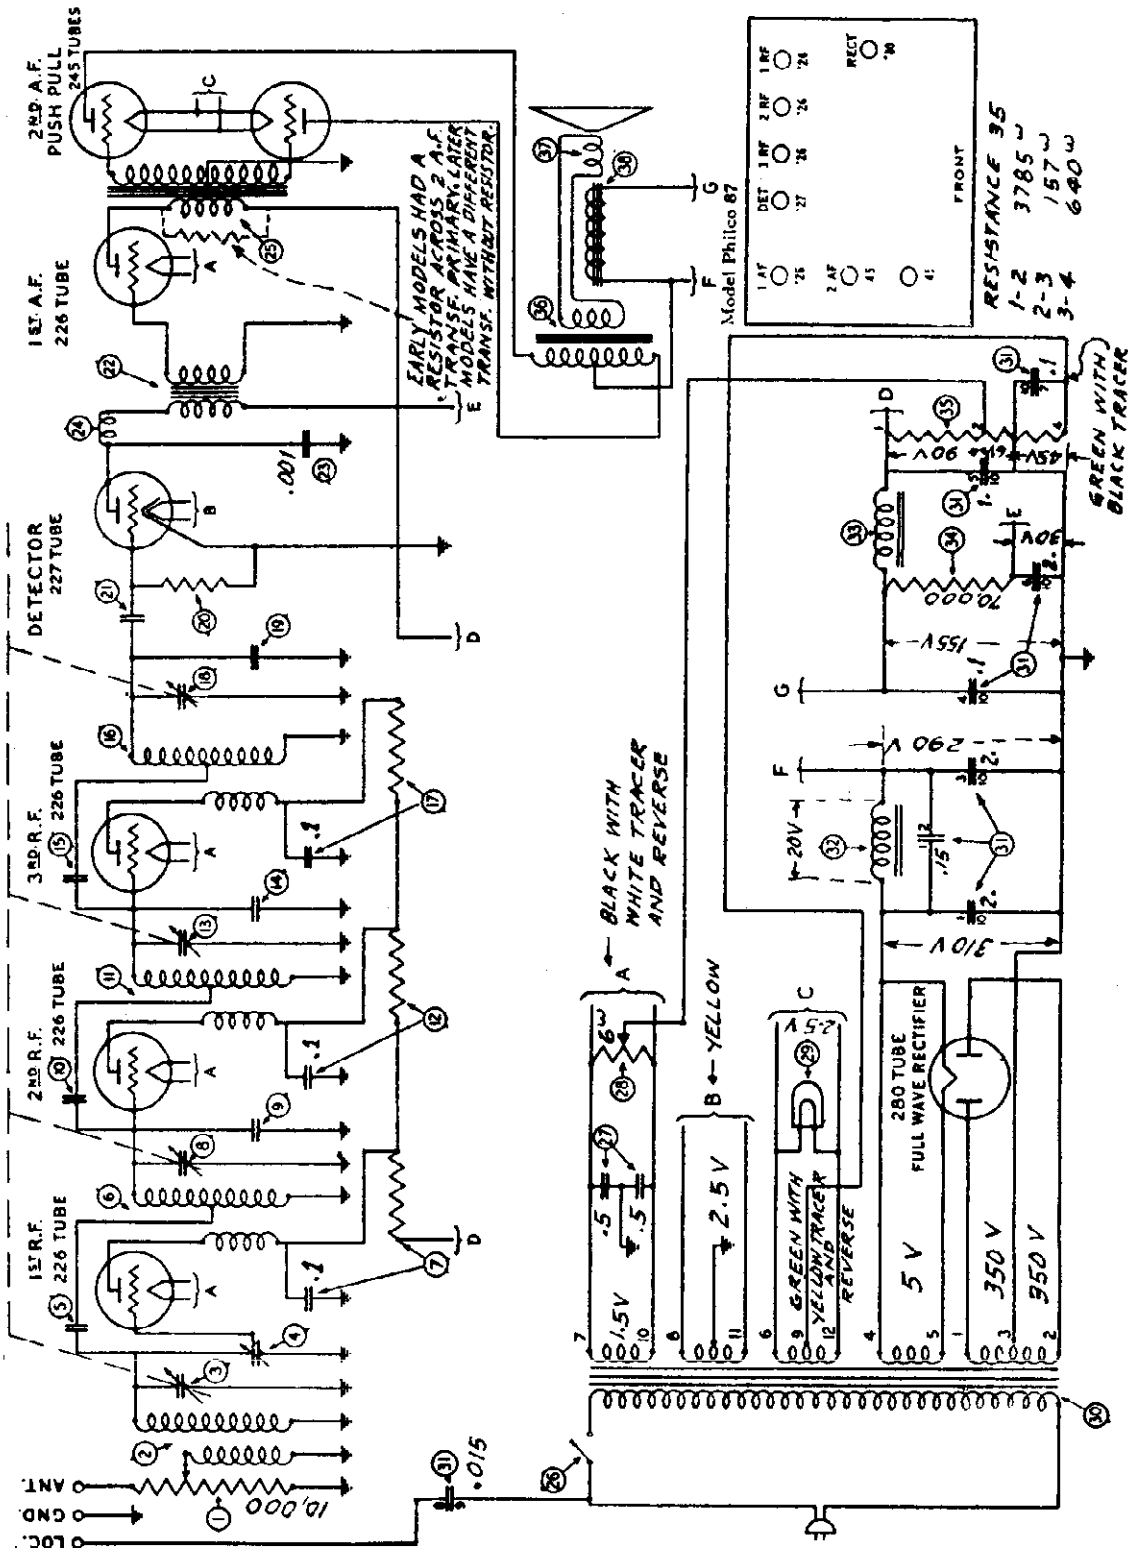

MODEL 90, 90-A
(With 2-145s)
Chassis-Data

PHILCO RADIO & TELEVISION CORP.

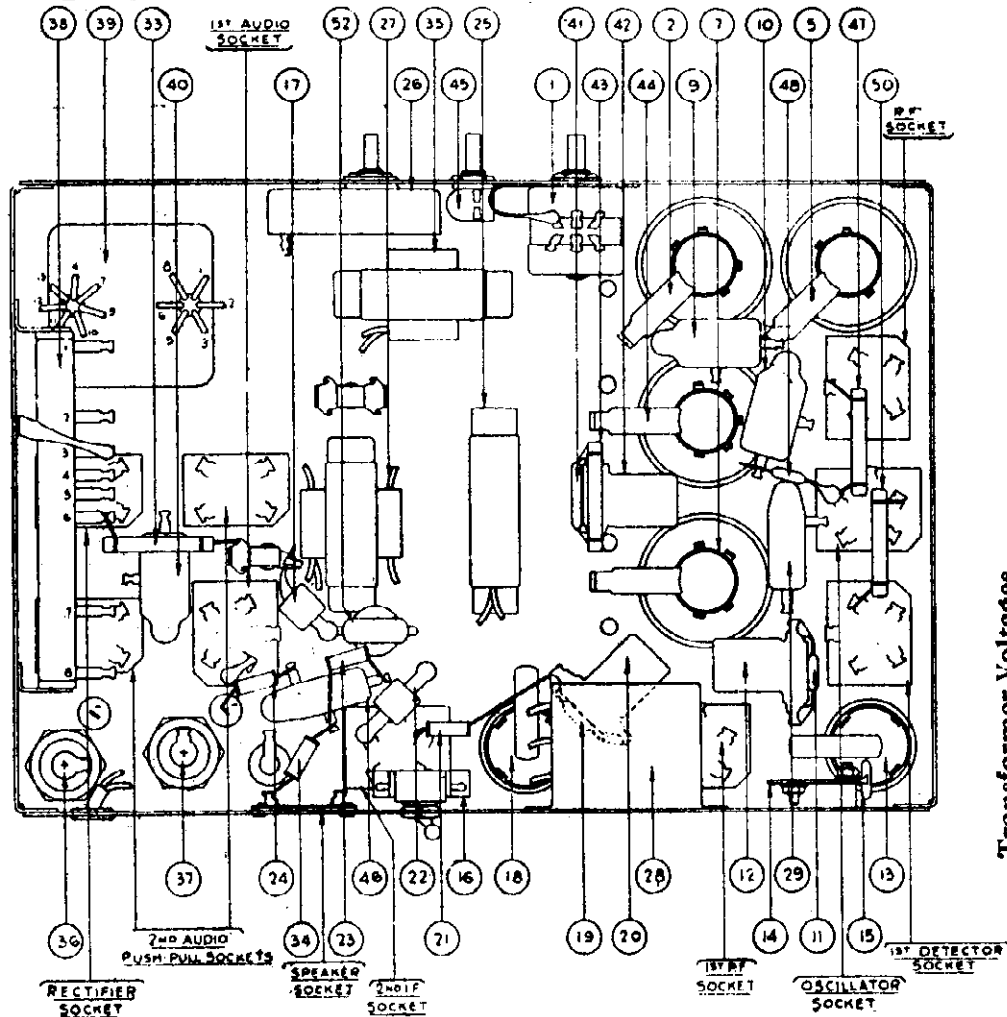

Transformer Voltages

Color	A. C. Volts	Terminals
Black (Small Gauge)	105 to 125	1-2
Black (Heavy Gauge)	2.5	3-5
Black with Yellow	2.5	4
Dark Green	2.5	6-8
Black with Green	2.5	7
Light Blue	5.0	9-10
Yellow	650	11-13
Yellow with Green	...	12

No. on Figs.	Capacity	Color
(11) (16) (18) (20) (24)	.09 Double	Black Bakelite Container
(17) (25) (26)	.09 Double	Black Bakelite Container
(22) (23) (24)	.00011	Blue, Golden Yellow
(25) (26) (27)	.000035	Yellow and Green
(28) (29) (30)	.5	Metal Container
(31) (32) (33) (34) (35) (36) (37) (38) (39) (40) (41) (42) (43) (44) (45) (46) (47) (48) (49) (50) (51) (52)	{.25 Double (Black wires to Ground) .5 (White wire to Ground)}	Metal Container
(25) (26) (27)	.05	Black Bakelite Container
(28) (29) (30)	6.	Electrolytic Type
(31) (32) (33) (34) (35) (36) (37) (38) (39) (40) (41) (42) (43) (44) (45) (46) (47) (48) (49) (50) (51) (52)	10.	Electrolytic Type
(25) (26) (27)	.015 Double	Black Bakelite Container
(28) (29) (30)	.0007	White, Golden Yellow
(31) (32) (33) (34) (35) (36) (37) (38) (39) (40) (41) (42) (43) (44) (45) (46) (47) (48) (49) (50) (51) (52)	.001	Green and White

Resistor Data

No. on Fig.	Terminal	Power (Watts)	Resistance	Color Body—Tip—Dot
(20)	1-2	...	800	(Long Tubular)
	2-3	...	263	
	3-4	...	75	
	5-6	...	370	
	6-7	...	1,800	
	7-8	...	1,430	
	1.	...	13,000	
	.5	...	50,000	
(21) (22) (23) (24)	1.	...	50,000	Brown—Orange—Orange
	.5	...	250,000	Green—Brown—Orange
	1.	...	250,000	Green—Brown—Orange
	.5	...	1,000,000	Red—Yellow—Yellow
(25) (26)	250,000	Red—Yellow—Yellow
	1,000,000	Brown—Black—Green

PHILCO RADIO & TELEVISION CORP.

MODEL 90, 90-A
(With 2-45s)
Schematic
Voltage


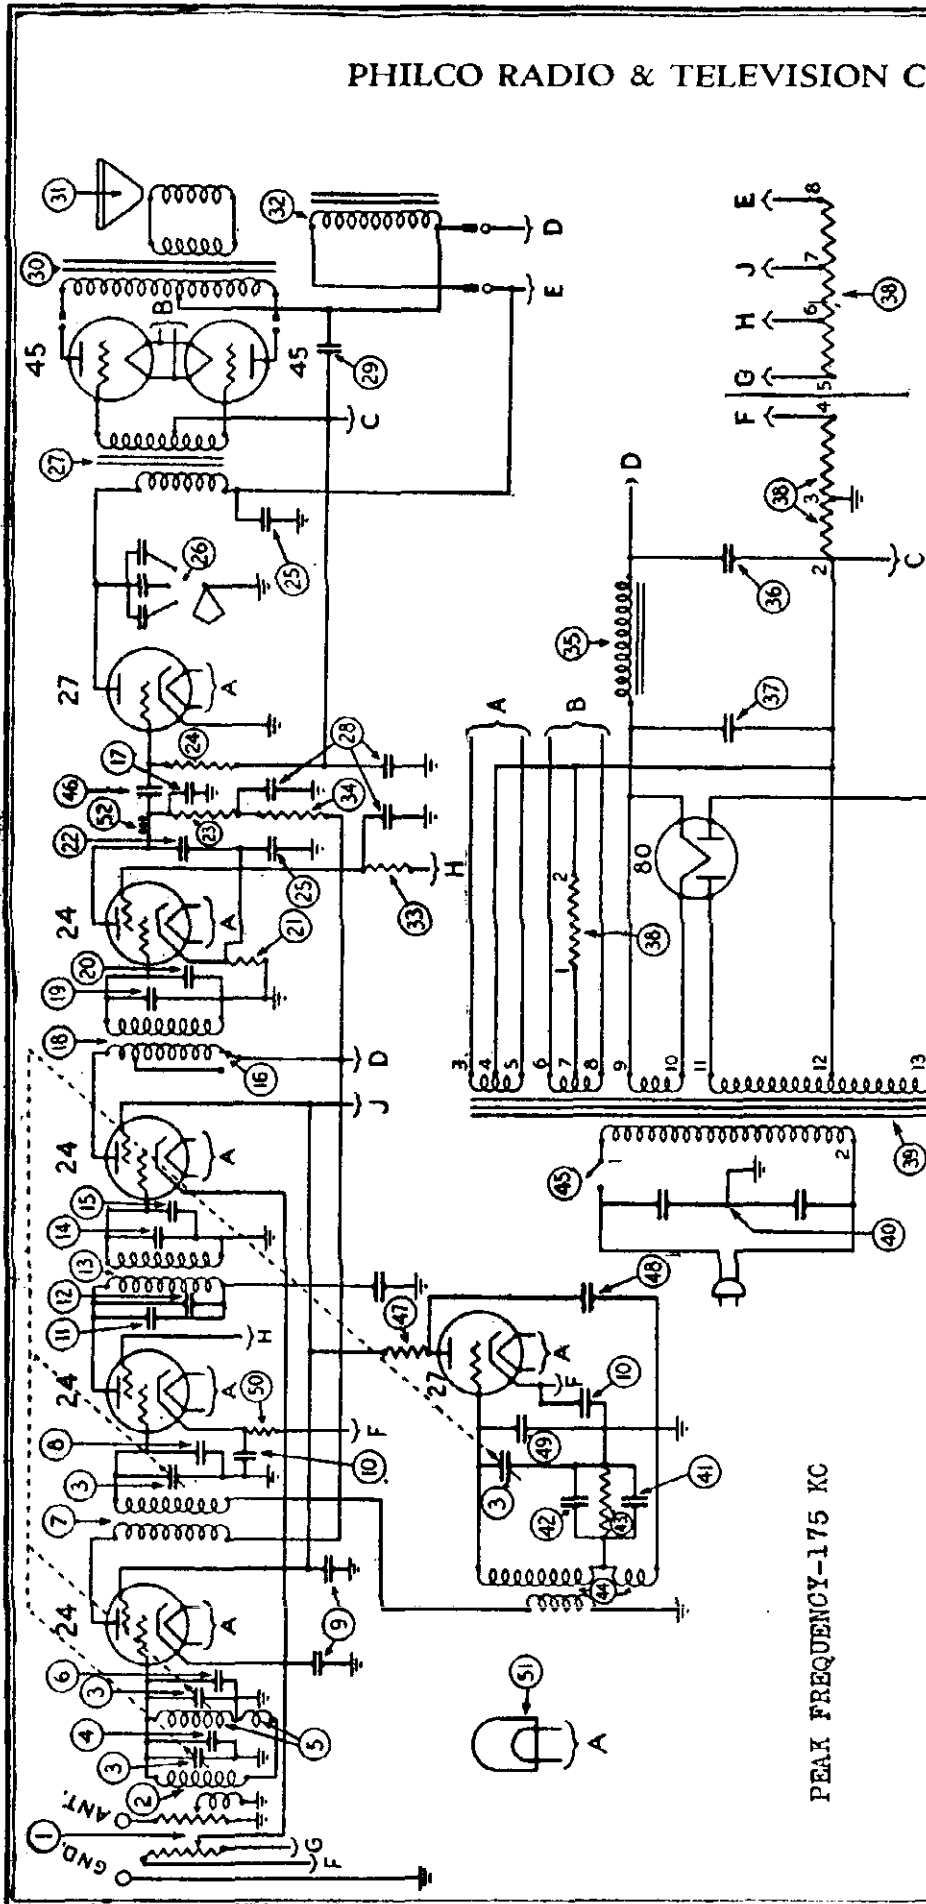


Table 1—Tube Socket Readings Taken with AC Set Tester, AC Line, 115 Volts

Tube Type	Circuit	Filament Voltage	Plate Voltage	Grid Voltage	Screen Grid Voltage	Cathode Voltage	Plate Milliamperes
24	1st R. F.	2.1	250	3.3	83	15	3
27	Osc.	2.1	60	1	23	15	2
24	1st Det.	2.1	250	5.5	80	15	.5
24	1st I. F.	2.1	250	3.8	42	15	4.5
24	2nd Det.	2.1	48	3.7	...	10	3
27	1st Audio	2.1	140	.25	30
45	Audio	2.2	243	46	30
45	Audio	2.2	243	46	30
80	Rect.	4.5

All readings taken with antenna disconnected and ground on. Volume Control on full.

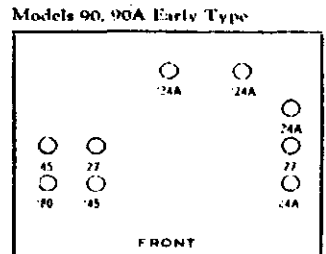

PHILCO RADIO & TELEVISION CORP.

MODEL 90,90-A
(With 2-45s)
Parts List

RANGE SWITCH

The Range Switch, No. ⑩ in Fig. 1, is placed in the NORMAL position when the Receiver is shipped. This gives great distance range and is the setting which will be found most satisfactory in practically all locations. In places far from broadcasting stations, however, the Range Switch may be changed to the MAXIMUM position. This will make the Receiver super-sensitive and will give extreme distance range. Do not use the Range Switch in the MAXIMUM position if there are one or more powerful broadcasting stations near you. In any location there will be less noise between stations with the Range Switch in the NORMAL position.

REPLACEMENT PARTS—MODELS 90 AND 90-A

No. on Figs. 3 and 4	Description	Part No.	No. on Figs. 3 and 4	Description	Part No.
①	Volume Control	5039	⑤	Power Transformer (50 to 60 cycles)	4938
②	1st R. F. Transformer	03013		Power Transformer (25 to 40 cycles)	4939
③	Gang Condenser—50 to 60 cycles	03001	⑥	Condenser .015 M. F. (Double)	3793-E
	Gang Condenser—25 to 40 cycles	03078	⑦	Condenser .007 M. F. } Assembled	03050
④	Compensating Condenser (Part of Tuning Condenser Assembly)		⑧	Compensating Condenser	
⑤	2nd R. F. Transformer	03014	⑨	Resistor—50,000 Ohms	4237
⑥	Compensating Condenser (Part of Tuning Condenser Assembly)		⑩	Oscillator Coil	03016
⑦	1st Det. Transformer	03015	⑪	On-Off Switch	4095
⑧	Compensating Condenser (Part of Tuning Condenser Assembly)		⑫	Condenser .001 M. F.	5215
⑨	Condenser .09 M. F. (Double)	4989-C	⑬	Resistor—13,000 Ohms	3766
⑩	Condenser .09 M. F. (Double)	4989-B	⑭	Condenser .00011 M. F.	4519
⑪	Fixed Condenser .00011	Assembled 3772-C	⑮	Compensating Condenser (Part of Tuning Condenser Assembly)	
⑫	Compensating Condenser		⑯	Resistor—5,000 Ohms	3528
⑬	1st I. F. Transformer	03009	⑰	Pilot Bulb	3463
⑭	Compensating Condenser	Assembled 03051	⑱	H. F. Choke	03036
⑮	Fixed Condenser .00011		⑲	Line Cord and Plug	L-943
⑯	Normal Maximum Switch	3116	⑳	Tube Shield	03002
⑰	Condenser (.000035 mfd)	4990	㉑	Knob (large) Dial Control	03063
⑱	2nd I. F. Transformer	03143	㉒	Spring (Dial Knobs)	4147
⑲	Compensating Condenser	Assembled 03051	㉓	Knobs (small) Tone and Volume Control	4959-A
㉑	Fixed Condenser .00011		㉔	Knob (switch)	4290-A
㉒	Resistor—50,000 Ohms	4518	㉕	Grid Clip	4897
㉓	Condenser .00035	4990	㉖	Speaker Plug and Cable	L-1124-A
㉔	Resistor—250,000 Ohms	4410	㉗	Grommet for R. F. Transformer Shield	3747
㉕	Resistor—1,000,000 Ohms	4409	㉘	Rectifier Tube Socket	5026
㉖	Condenser .5 M. F. (Double)	03024	㉙	Four Prong Socket Assembly	4955
㉗	Tone Control	4037-A	㉚	Five Prong Socket Assembly	4956
㉘	1st Audio Transformer	4952	㉛	Speaker Socket	4957
㉙	Condensers 2— .25 M. F. and 1—.5 M. F.	03029	㉜	Volume Control Insulator	4092
㉚	Condenser .05 M. F.	3615-C	㉝	Volume Control Insulator	4286
㉛	Output Transformer:		㉞	Fahnstock Clip	L-1126
	H ₂ (For Large Cone Assembly)	2848	㉟	Mica for Gang Condenser Compensating Condenser	3473
	K ₂ (For Small Cone Assembly)	2768	㊱	Insulating Washer for Compensating Condenser	3500
㉜	Voice Coil Assembly and Cone:		㊲	Tuning Condenser Mounting Washer	3914
	H ₁ (Large Cone)	02997	㊳	Tuning Condenser Mounting Washer	3915
	K ₂ (Small Cone)	02996	㊴	Tuning Condenser Mounting Sleeve	3916
㉝	Speaker Field—Assembled with Pot and Frame (H ₂)	02986	㊵	Spring for Tuning Condenser	4255
	Speaker Field—Assembled with Pot and Frame (K ₂)	02985	㊶	Bezel	5009
㉞	Resistor—250,000 Ohms	3768	㊷	Complete Drive Bracket	03011
㉟	Resistor—250,000 Ohms	4410	㊸	Disc Dial Assembly	03031
㊱	Filter Choke	4951	㊹	Knob Spring—Volume, Tone, Dial	5262
㊲	Condenser 6 M. F. Electrolytic Type (50-60 cycles)	4916	㊺	Steel Washer (Chassis Mtg.)	5058
	Condenser 10 M. F. Electrolytic Type (25-40 cycles)	5142	㊻	Nut—Volume, Tone Control Switch	W-434
㊳	Condenser 6 M. F. Electrolytic Type (25-40) and (50-60) cycles	4916			
㊴	B. C. Resistor	4953			

Several changes in wiring and part numbers have been made in the Model 90. The filter choke part 4951 has been changed to part 4819, the same choke as used in Model 21. On the 50-60 cycle models, a .09 mfd condenser, part 4989-J, is connected across the filter chokes, part 4819. On the 25 cycle models, this condenser should be .18 mfd, part 4989-H ungrounded. The two 240,000 resistors part 4410, numbers (32) and (35) should be of the Continental Carbon type. This is the resistor without metal ends.


In the Model 90, a metal shield, part 03646, is placed in a bracket between the '47 and '80 tubes.

If electrolysis occurs on the insulation of the wire between the filter choke and one of the electrolytic condensers, unsolder the wire and cover with spaghetti.

Condenser Bank
Connections
Condenser
Color Code


PHILCO RADIO & TELEVISION CORP.

Internal Connections of Condenser Banks

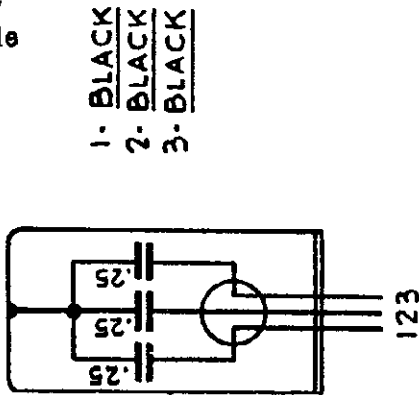


- 1- BLACK
- 2- BLACK
- 3- BLACK

Part 03325
Models 90 - 90-A
Above Serial No. 237,001

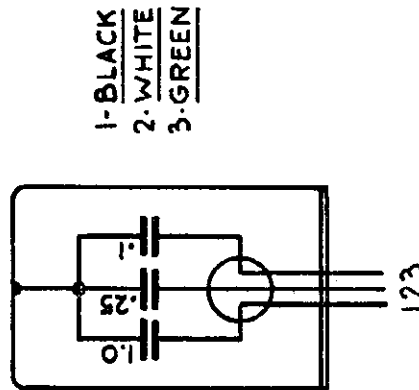


- 1- BLACK
- 2- WHITE
- 3- GREEN

Part 03327
Model 90
Above Serial No. 237,001

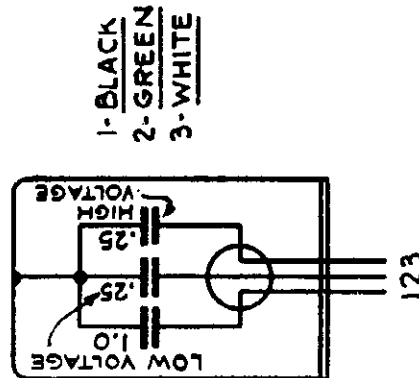


- 1- BLACK
- 2- GREEN
- 3- WHITE

Part 03624
Model 90-A
Above Serial No. 112,977

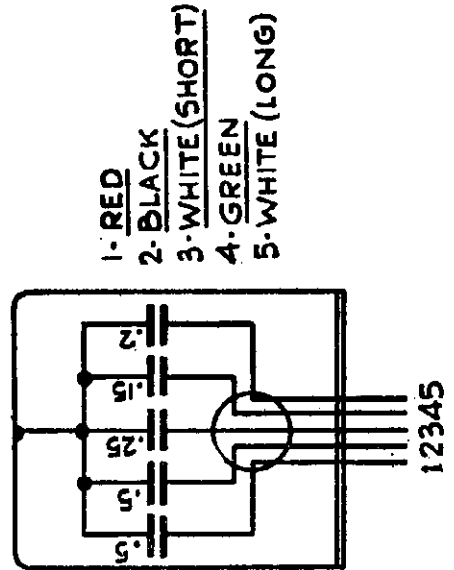

- 1- RED
- 2- BLACK
- 3- WHITE (SHORT)
- 4- GREEN
- 5- WHITE (LONG)

Part 03455
Model 50-A

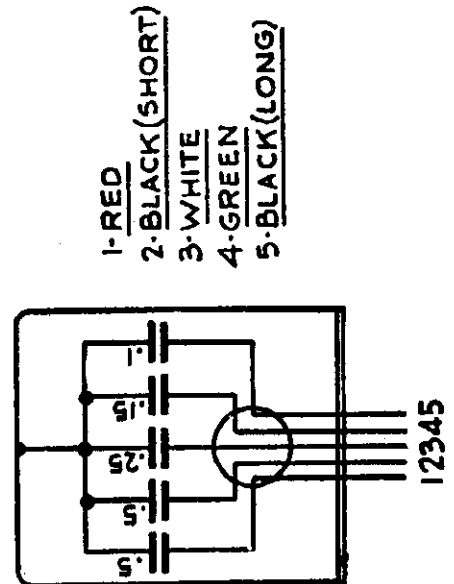

- 1- RED
- 2- BLACK (SHORT)
- 3- WHITE
- 4- GREEN
- 5- BLACK (LONG)

Part 03459
Model 50

CONDENSER DATA

COLOR CODING USED ON ALL PHILCO RECEIVERS


PART NO.	CAPACITY MF.	COLOR	PART NO.	CAPACITY MF.	COLOR
3082	.00025	Yellow	4519	.00011	Blue and Golden Yellow
3774	.00005	White	4520	.0007	White and Golden Yellow
3910	.0005	Green	4587*	.00005	Light Blue and White
4059	.002	Light Blue	5120	.00041	Yellow & Orange

*Note: Part No. 4587 is held to closer tolerance limits than Part No. 3774. Do not substitute either of these condensers, use the part numbers given.

MODEL 90, 90-A
(With 1-'47)
Schematic
Voltage

PHILCO RADIO & TELEVISION CORP.

(Above Serial No. 237,001)

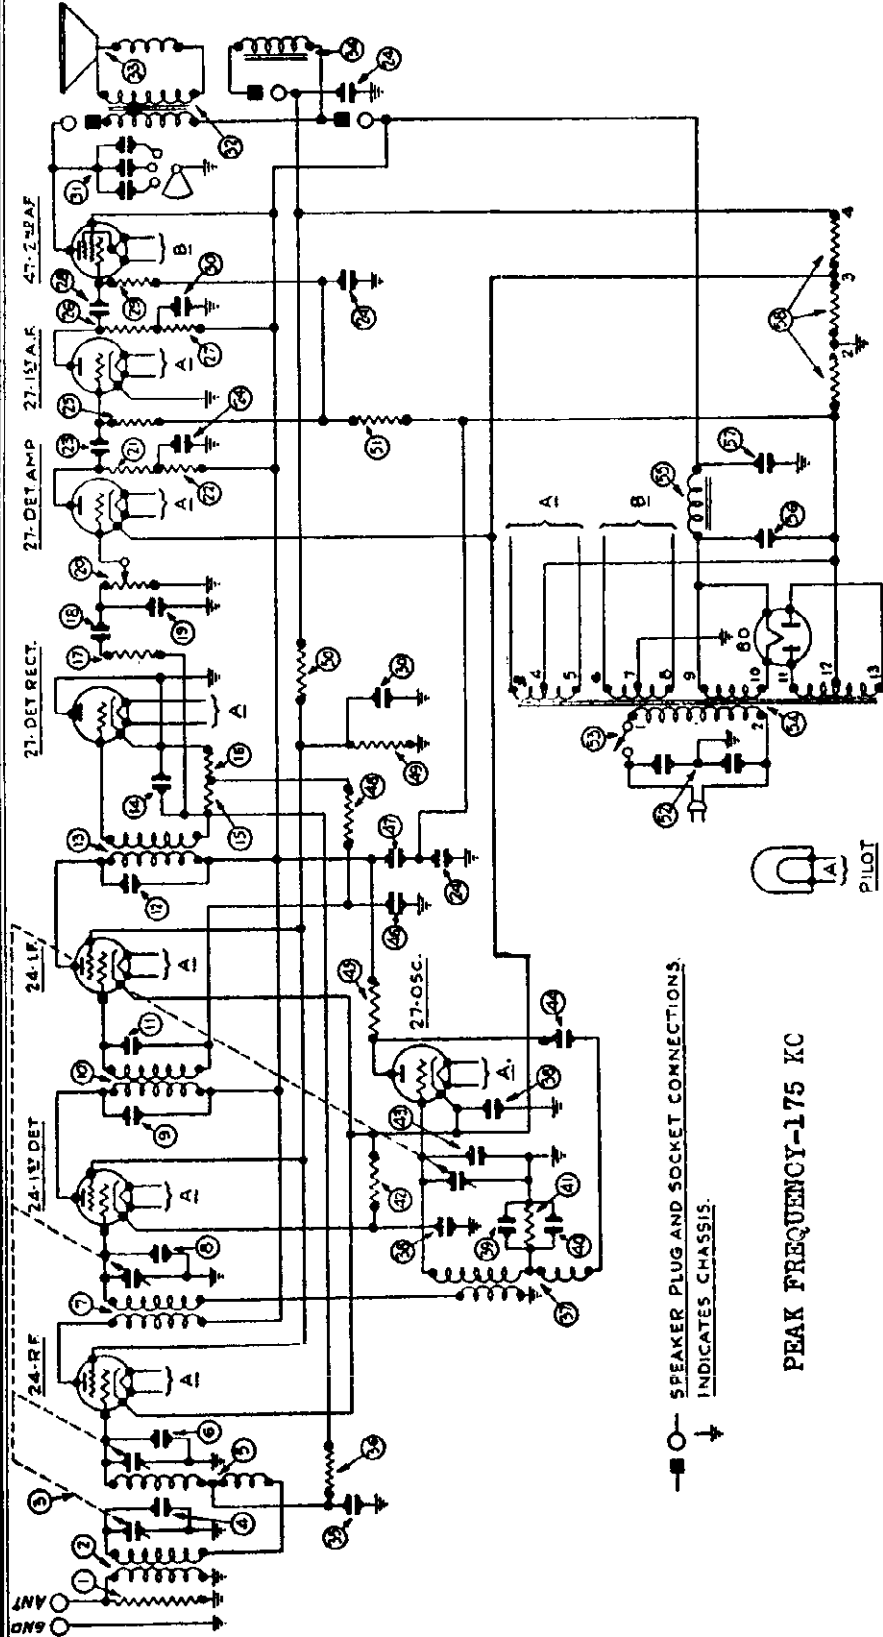


—○— SPEAKER PLUG AND SOCKET CONNECTIONS.
↑ INDICATES CHASSIS.

PEAK FREQUENCY-175 KC

Table 1—Tube Socket Readings Taken with AC Set Tester, AC Line, 115 Volts

Tube Type	Circuit	Filament Volts	Plate Volts	Screen Grid Volts	Control Grid Volts	Cathode Volts	Plate Milliamperes
24	R. F.	2.0	255	60	.25	20	2.4
27	Osc.	2.0	656	20	3.6
24	1st Det.	2.0	250	64	6.0	24	.25
24	I. F.	2.0	270	76	.25	18	.4
27	Det. Rect.	2.0	140	...	0	17	0
27	1st A. F.	2.0	454	18	2.0
47	Output	2.0	220*	210*	1.0*	20	1.8
80	Rectifier	4.5				..	32*

*All readings taken with antenna disconnected and ground on. Volume Control on full.
*These readings must be taken from the underside of the chassis using test prods and leads unless the set checker is specially equipped for testing pentode tubes.

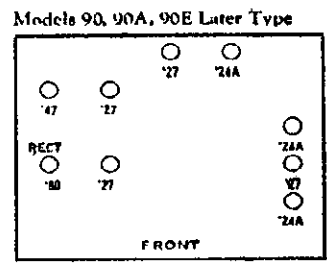

PHILCO RADIO & TELEVISION CORP.

MODEL 90,90-A
(With 1-'47)
Chassis-Data

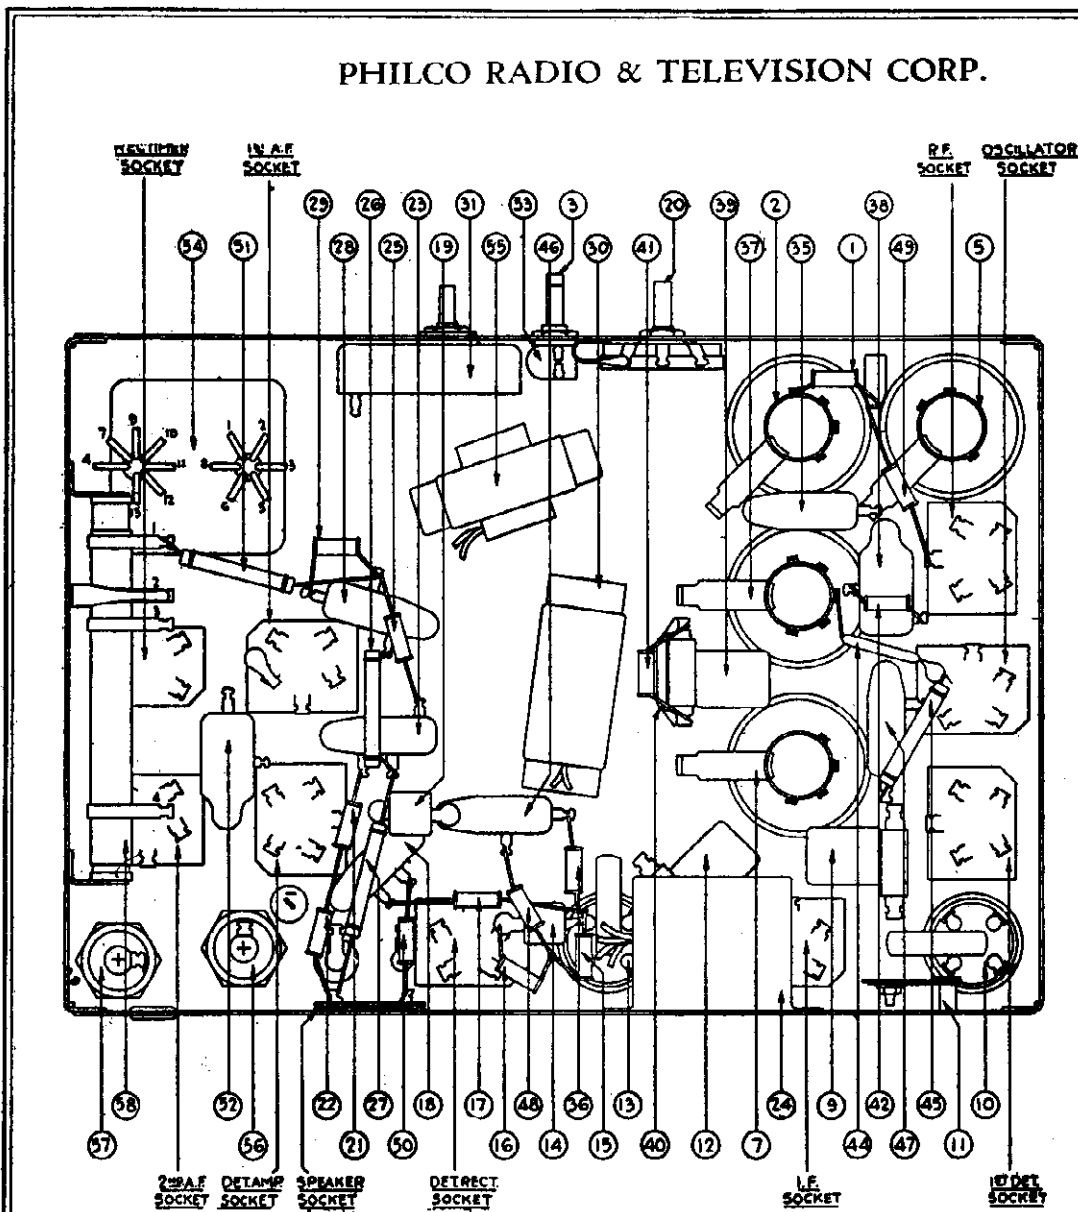


Table 2—Power Transformer Voltages

Terminals	A.C. Volts		Color
1-2	105 to 125	Primary	White
3-5	2.5	Heaters of 24 and 27 Tubes	Black
4	2.5	Center Tap of 3-5	Black with Yellow
6-8	2.5	Filament of 47 Tube	Dark Green
7	2.5	Center Tap of 6-8	Black with Green
9-10	5.0	Filament of 80 Tube	Light Blue
11-13	650.	Plates of 80 Tube	Yellow
12	...	Center Tap of 11-13	Yellow with Green

Table 3—Resistor Data

No. on Figs. 1 and 2	Terminal	Power (Watts)	Resistance (Ohms)	Color		
				Body	Tip	Dot
	{ 1-2 }	1.	180	(Long Tubular)		
			60			
	3-4	3,500				
		5,000				
	1.	10,000				
		25,000				
	.5	25,000				
		51,000				
	.5	51,000				
		70,000				
.5	99,000					
	240,000					
1.	240,000					
	490,000					

Table 4—Condenser Data

No. on Figs. 1 and 2	Capacity	Color
	.00011	Blue, Golden Yellow
	.00025	Yellow
	.01	Black Bakelite Container
	.015	Black Bakelite Container
	.05	Black Bakelite Container
	.09	Black Bakelite Container
	1-13, 25-1,	Metal Container
	25-1,	Electrolytic Type
	(50-60 Cycles) 6,	Electrolytic Type
	(25-40 Cycles) 10,	Electrolytic Type

MODEL 90,90-A
(With 1-47)
Test Data

PHILCO RADIO & TELEVISION CORP.

From Chassis To

Correct

Incorrect

All tubes out of sockets and AC plug disconnected from power supply.
Speaker field and output transformer disconnected.

Aerial
 RF Control Grid to First Selector Condenser Stator
 RF Control Grid to Chassis
 RF Cathode
 RF Screen Grid
 RF Plate to 80 Fil
 RF Plate to '47 Screen
 1 Detector Control Grid
 1 Detector Cathode
 1 Detector Screen Grid
 1 Detector Plate to '80 Fil
 1 Detector Plate to '47 Screen
 IF Control Grid
 IF Cathode
 IF Screen Grid
 IF Plate to '47 Screen
 AVCX Control Grid
 AVCX Cathode
 AVCX Plate
 AVCX Cathode to Plate
 Det-Amp Control Grid (V.C.Min)
 Det-Amp Control Grid (V.C.Max)
 Det-Amp Cathode
 Det-Amp Plate to '47 Screen
 1 AF Control Grid
 1 AF Cathode
 1 AF Plate to '47 Screen
 '47 Control Grid
 '47 Screen Grid to '80 Fil
 '47 Plate to Chassis
 Output Transformer Primary only
 Output Transformer Secondary only

Correct
 10.7 ohms
 13.4 ohms
 592,000 ohms
 60 ohms
 20,280 ohms
 168.7 ohms
 18.7 ohms
 7.9 ohms
 5,060 ohms
 20,280 ohms
 218 ohms
 68 ohms
 541,068 ohms
 60 ohms
 20,280 ohms
 70 ohms
 110,080 ohms
 0 ohms
 0 ohms
 0 ohms
 0 ohms
 0 ohms
 480,180 ohms
 0 ohms
 50,000 ohms
 480,000 ohms
 0 ohms
 0 ohms
 462 ohms
 0,106 ohms

Incorrect
 3,200 ohms
 51,006.5ohms
 6.5ohms
 60 ohms
 51,000 ohms
 199 ohms
 280 ohms
 0 ohms
 FC
 Note**
 Fixed condenser between Det-Amp Plate and 1 AF-Cg
 Fixed condenser between 1 AF Plate and '47 Cg
 Resistor of 99,000 between AVCX Cg wdg and coupling condenser to Det-Amp volume control
 Across AC Plug
 AC plug to chassis
 3.26 ohms BC across primary
 0 ohm BC- across primary


From Chassis To
 Speaker field only
 Oscillator Control Grid
 Oscillator Winding only
 Oscillator Cathode
 Oscillator Plate to '47 Screen
 '80 Anode to '80 Anode
 '80 Anode to Chassis
 '80 Anode to '80 Fil

Correct

Incorrect

Fixed resistor across antenna coil
 BC- rf Cg wdg-Y
 BC- AVCX wdg-Y
 BC- if Cg wdg-Y
 TC- rf Cg-Y
 BC- Osc K-Y
 BC- Field coil pocket-Y
 TC- 1 D Cg-Y
 BC- 1 D K-Y
 BC- Osc K-Y
 See RF Screen
 TC- IF Tr
 BC- IF Cg wdg-Y
 TC- IF Tr
 See 1 Detector Cathode
 See RF Screen
 TC- IF Tr
 BC- AVCX Cg wdg-Y
 high resistance - exact value unknown
 BC- Osc K-Y
 BC-70,000-Y
 BLC-Det Amp-P- 1 AF Cg
 See Det-Amp Plate
 BC-240,000 ohms-Y
 BC-25,000 ohms-Y
 BC-'47 Cg resistor-Y
 Tone control cond

Includes section used in plate circuit BC-Osp K-Y
 51,006.5ohms
 6.5ohms
 60 ohms
 51,000 ohms
 199 ohms
 280 ohms
 0 ohms
 FC
 Note**
 Fixed condenser between Det-Amp Plate and 1 AF-Cg
 Fixed condenser between 1 AF Plate and '47 Cg
 Resistor of 99,000 between AVCX Cg wdg and coupling condenser to Det-Amp volume control
 Across AC Plug
 AC plug to chassis
 3.26 ohms BC across primary
 0 ohm BC- across primary

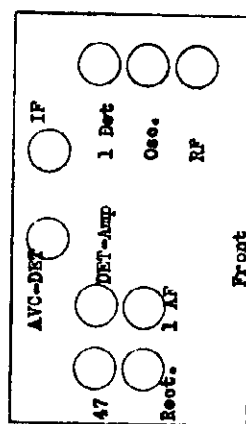

-Tube Socket Readings Taken with AC Set Tester, AC Line, 115 Volts

Type	Current	Plate Voltage	Screen Grid Voltage	Control Grid Voltage	Control Cathode Voltage	Plate Microamperes
24	R. F.	2.0	245	68	25	2.4
27	Osc.	2.0	45	4	20	3.6
24	1st Det.	2.0	250	64	6.8	2.4
24	2nd Det.	2.0	270	18	26	2.5
24	1st A. P.	2.0	140	4	4	4
27	Det. Amp.	2.0	140	4	4	3.0
47	Output	2.0	45	4	4	1.8
47	Rectifier	4.5	210*	240*	1.0*	32.

All readings taken with antenna disconnected and ground on. Volume Control on full.
 *These readings must be taken from the underside of the chassis using test leads and leads unless the set is specially equipped for testing peroxide tubes.

PHILCO RADIO & TELEVISION CORP.

MODEL 90, 90-A
(With 1-'47)
Parts List


ADJUSTMENT OF MODELS 90 and 90-A

These Receivers are accurately adjusted at the Factory prior to their shipment. Under no circumstances are the adjusting condensers to be changed in the field. This alignment requires special oscillator equipment, which all Philco Distributors have. If for any reason the Receiver needs adjustment it must be returned to the Distributor's Service Department.

REPLACEMENT PARTS—MODELS 90 and 90-A RECEIVERS

(Above Serial No. 237,001)

No. on Figs. 3 and 4	Description	Part No.	No. on Figs. 3 and 4	Description	Part No.
①	Resistor (10,000 ohms)	4412	⑩	By-Pass Condenser (.09 mfd.) double	4989-G
②	First R. F. Transformer	03360	⑪	Compensating Condenser	Assembled 03050
③	Gang Condenser (50-60 cycles)	03001	⑫	Condenser (.0007 mfd.)	
	Gang Condenser (25-40 cycles)	03078	⑬	Resistor (51,000 ohms)	4518
④	Compensating Condenser (part of gang condenser assembly)		⑭	Resistor (5,000 ohms)	5310
⑤	Second R. F. Transformer	03014	⑮	Compensating Condenser (part of tuning condenser assembly)	
⑥	Compensating Condenser (part of gang condenser assembly)		⑯	Condenser (110 mmf.)	4519
⑦	First Detector Transformer	03015	⑰	Resistor (51,000 ohms)	4237
⑧	Compensating Condenser (part of gang condenser assembly)	<i>Changed to 040006</i>	⑱	By-Pass Condenser (.05 mfd.)	3615-U
⑨	Compensating Condenser (First I. F. Primary)	03315	⑲	By-Pass Condenser (.05 mfd.)	3615-E
⑩	First I. F. Transformer	03009	⑳	Resistor (490,000 ohms)	4517
⑪	Compensating Condenser (First I. F. Secondary)	03315	㉑	Resistor (70,000 ohms)	5385
⑫	Compensating Condenser (Second I. F. Primary)	03317	㉒	Resistor (25,000 ohms)	4516
⑬	Second I. F. Transformer	03345	㉓	Resistor (240,000 ohms)	3768
⑭	Condenser (110 mmf.)	4519	㉔	Condenser (.015 mfd.) double	3793-E
⑮	Resistor (51,000 ohms)	4518	㉕	On-Off Switch	4095
⑯	Resistor (51,000 ohms)	4518	㉖	Power Transformer (50-60 cycles)	5362
⑰	Resistor (99,000 ohms)	4411		Power Transformer (25-40 cycles)	5363
⑱	By-Pass Condenser (.01 mfd.)	3903-M		Power Transformer (50-60 cycles, 220 volts)	5364
⑲	Condenser (.00025 mfd.)	3082	㉗	Choke	4951
⑳	Volume Control	5366	㉘	Condenser (6 mfd.) Electrolytic type (50-60 cycles)	4916
㉑	Resistor (51,000 ohms)	4518		Condenser (10 mfd.) Electrolytic type (25-40 cycles)	5142
㉒	Resistor (70,000 ohms)	5385	㉙	Condenser (6 mfd.) Electrolytic type (50-60 cycles)	4916
㉓	By-Pass Condenser (.01 mfd.)	3903-M		Condenser (10 mfd.) Electrolytic type (25-40 cycles)	5142
㉔	Condenser (1-1 mfd., 1-13 mfd., 2-25 mfd.)	03325	㉚	B. C. Resistor	5365
㉕	Resistor (240,000 ohms)	4410		Line Cord and Plug	L-943
㉖	Resistor (25,000 ohms)	3656		Tube Shield (Large)	03373
㉗	Resistor (25,000 ohms)	3656		Tube Shield (27 type)	5387
㉘	By-Pass Condenser (.01 mfd.)	3903-P		Pilot Bulb	3463
㉙	Resistor (240,000 ohms)	4410		Pilot Bracket Complete	03081-A
㉚	Condenser (.25 mfd., 1 mfd.)	03327		Knob (Large)	4958-A
㉛	Tone Control	4037-A		Knob (Small)	4959-A
㉜	Output Transformer	2673		Knob (Switch)	4290-A
㉝	Voice Coil Assembly and Cone: H ₂ (Large Cone)	02997		Spring (For small knobs)	4147
	K ₂ (Small Cone)	02996		Spring (For large knobs)	5262
㉞	Speaker Field (Assembled with pot and frame)			Grid Clip	4897
㉟	By-Pass Condenser (.05 mfd.)	3615-W		Five Prong Socket Assembly	4956
㊱	Resistor (490,000 ohms)	4517		Four Prong Socket Assembly	4955
㊲	Oscillator Coil	03016		Volume Control Insulator	4092
				Dial	5021
				Light Shield Screen	4937
				Bezel	5009

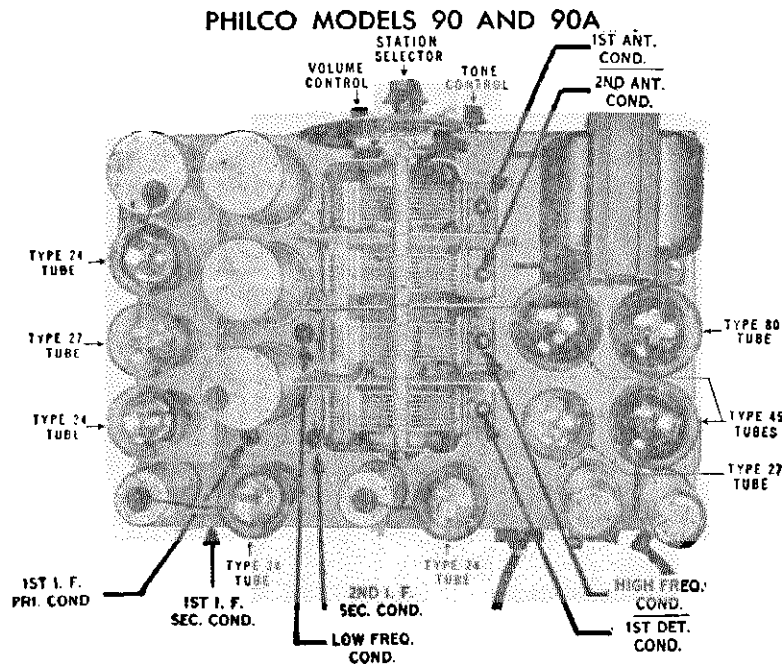MODEL 90,90-A
Alignment
PHILCO RADIO & TELEVISION CORP.


Adjusting the Model 90 Using a Jewell 560 Oscillator

Set up the Receiver for operation using standard tubes. Set the Normal-Maximum switch in the Normal position.

Intermediate Frequency Adjustment—Remove the tube shield. Remove the control grid clip of the first detector tube (Type 24 tube nearest back of the Receiver Chassis under the tube shield). Connect the "A" terminal of the oscillator to the control grid of the first detector tube. The "G" terminal must be connected to the Receiver Chassis. Turn the filament control of the oscillator on about $\frac{1}{2}$ the total movement. The middle switch must be turned to the intermediate position. The tuning control of the oscillator must be set for exactly 175 K.C., as indicated in the calibration data sent with the instrument.

Turn the volume control of the Receiver on full. Set the attenuator control so that an audible signal is received in the speaker. Connect the \pm and the low terminals of the output meter to the voice coil terminals of the speaker. Adjust the attenuator control for not more than $\frac{1}{2}$ full scale reading of the meter.

Using a Philco part No. 3164 fibre wrench, adjust the second I. F. secondary condenser for maximum reading in the output meter. Adjust the first I. F. secondary and then the first I. F. primary condensers for maximum reading in the output meter. Reduce the oscillator signal to prevent any damage to

the meter mechanism. Replace the grid clip on the first detector tube and replace the tube shield.

High Frequency Compensator—Connect the "A" and "G" terminals of the oscillator to the ANT and GND terminals of the Receiver. Do not change the oscillator setting. Tune the Receiver to exactly 140 and adjust the high frequency compensator for maximum reading in the output meter.

Antenna and Detector Condensers—With the Receiver and oscillator in the same setting, set the detector and antenna condensers for maximum reading in the output meter. If the Receiver is so far out of adjustment that the signal is extremely weak when adjusting the high frequency condenser it is advisable to temporarily check the adjustment of the detector and antenna condensers. Final adjustment of these condensers must be made as described.

Low Frequency Condenser—With the oscillator turned to broadcast frequency set the Philco scale at 60 and adjust the low frequency compensating condenser for maximum signal in the output meter. If the signal comes in off the 60 position on the Philco scale, set the Receiver slightly off the signal towards 60 and adjust the signal for maximum strength in this position. By repeating this, you will be able to bring the signal up to the 60 setting on the Philco scale.

PHILCO RADIO & TELEVISION CORP.

MODEL 96,96-A
Chassis

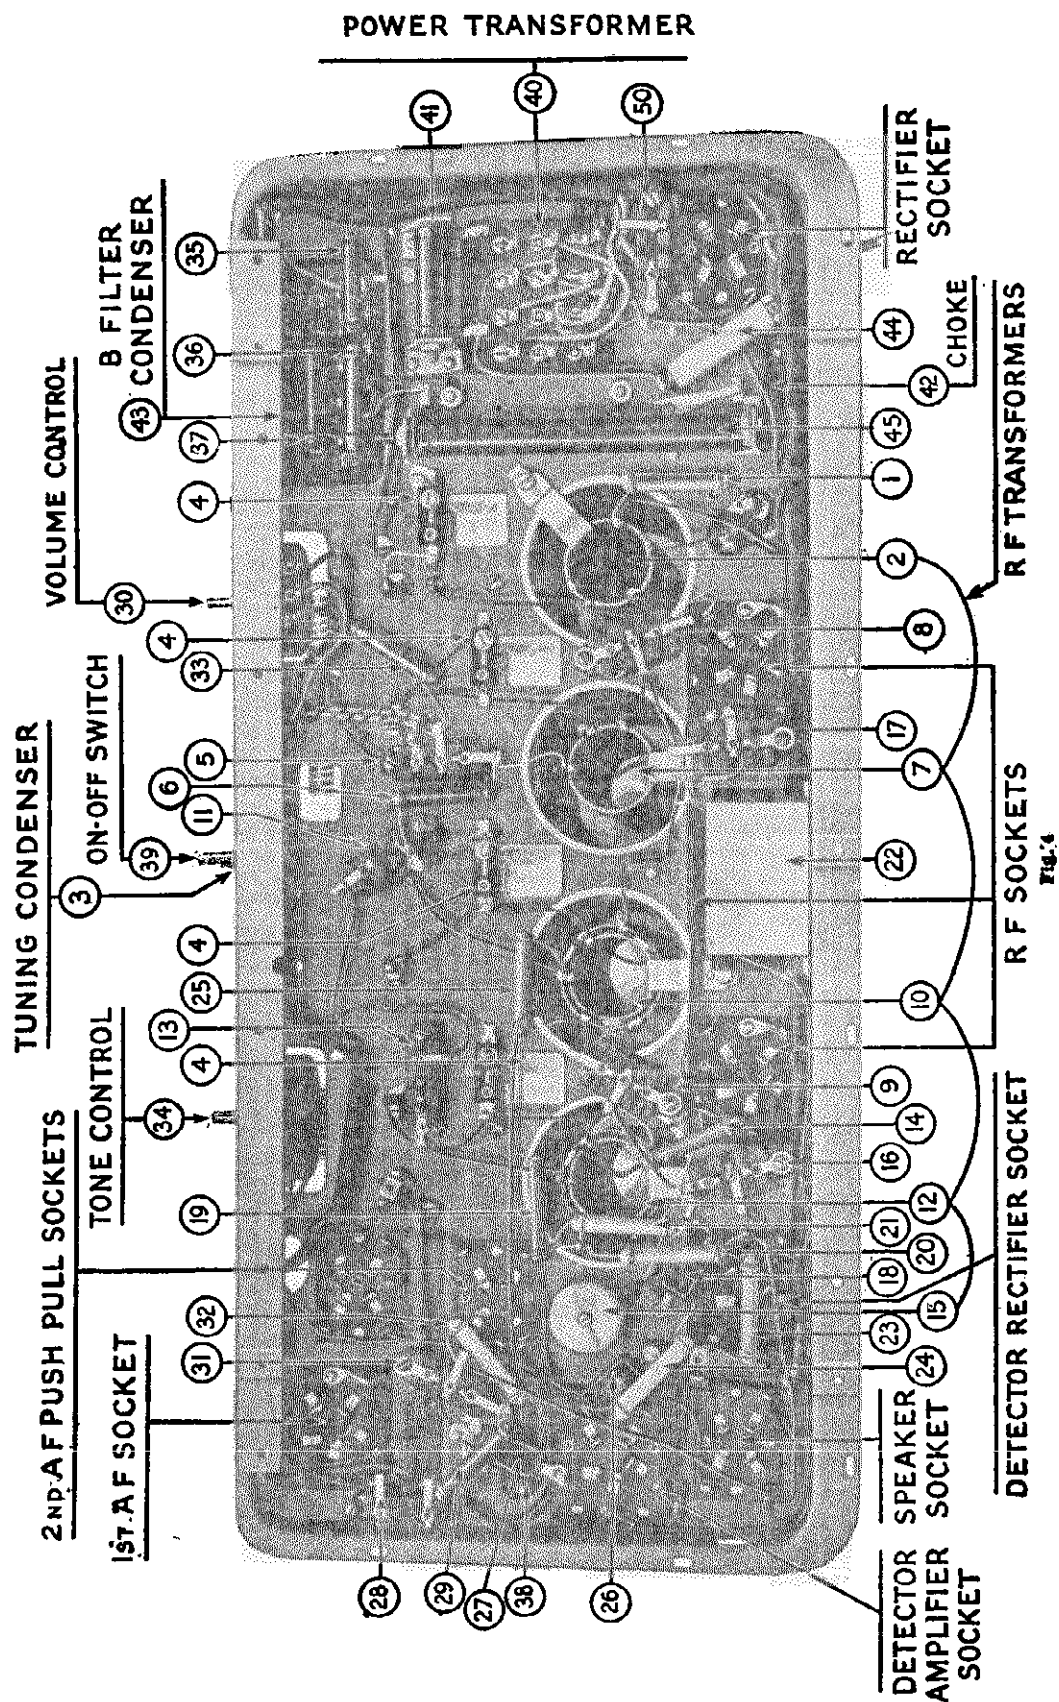


Fig. 4

MODEL 111,111-A
Voltage
Electrical Values

PHILCO RADIO & TELEVISION CORP

Table 1—Tube Socket Readings Taken with AC Set Tester AC Line—115 volts

Tube		Filament Volts	Plate Volts	Screen Grid Volts*	Control Grid Volts	Cathode Volts	Plate Milli-Amperes	Screen-Grid Milli-Amperes †
Type	Circuit							
24	1st R. F.	2.1	190	60	.2	5	1.7	1.75
27	Osc.	2.1	45	..	.7	7	1.6
24	1st Det.	2.1	180	62	4.6	8	.5†	.15
24	1st I. F.	2.1	185	65	...	5	1.5	1.7
24	2nd I. F.	2.1	190	82	2.2	5	3	1.85
27	Det. Rect.	2.24	.5
27	Det. Amp.	2.2	35	..	.4	5	.20†
27	1st A. F.	2.1	95	..	1.2	5	4.
45	2nd A. F.	2.2	255	..	50	...	32.5
45	2nd A. F.	2.2	255	..	50	...	32.5
80	Rect.	4.9	50/Plate

*Read with C 100 Scale.
 †Read with 20 Mil. Scale.
 ‡Read with 2 Mil. Scale.

Note—Volume Control Off; Station Selector turned to Low Frequency End; Range Switch set in "Normal" Position.

Table 2—Power Transformer Voltages


Terminals	A.C. Volts	
1—2		Primary
3		Center Tap 80 Tube
4		Center Tap 45 Tubes
5—6	2.67	Heaters for 24 and 27 Tubes
7—8	2.68	Filaments for 45 Tubes
9—12	750.	Plates 80 Tube
10—11	5.0	Filament 80 Tube
Rubber Covered Lead		Center Tap for 24 and 27 Tubes

Condenser Data
 (Other than Filter Condenser)


Resistor Data

No. on Diagram	Capacity	No. on Diagram	Resistance	Color
6	.05	1	10,000	Black
10 11	.05 and 250 Ohm Resistor	8 39 41 66 68	100,000	Silver Gray—Yellow Tip
17	.25 (two sections)	16	50,000	Orange
19 23 27 33 38	.00011	18	13,000	Belgium Blue
21	.0007	20	1,000	Brown Body—Black Tip—Red Dot
28	.05	34	500,000	Battleship Gray
29	.05 and 250 Ohm Resistor	44	500,000	Battleship Gray
35	.00005	46	250,000	White
40	.5	48—64	70,000	Jade Green
42	.00025	51—52	25,000	Auto Brown—Yellow Tip
43	.015	57	10,000	Long Tubular
45	.05	58	70	Flat Wire Wound (two sections)
61	.015 (two sections)	59	800	Short Tubular
67	.05			

Model 211 Condenser Block Part No. 3754

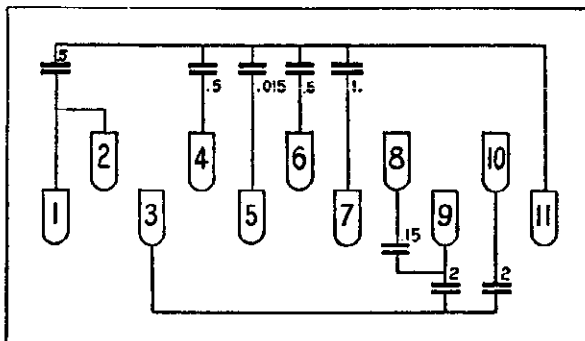


Model 211-A Condenser Block Part No. 3755

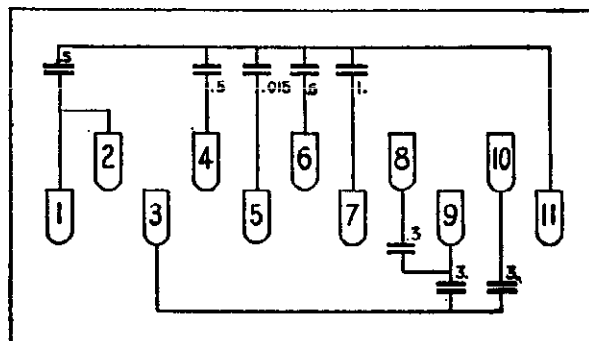


PHILCO RADIO & TELEVISION CORP.

MODEL 111, 111-A
Schematic
Socket

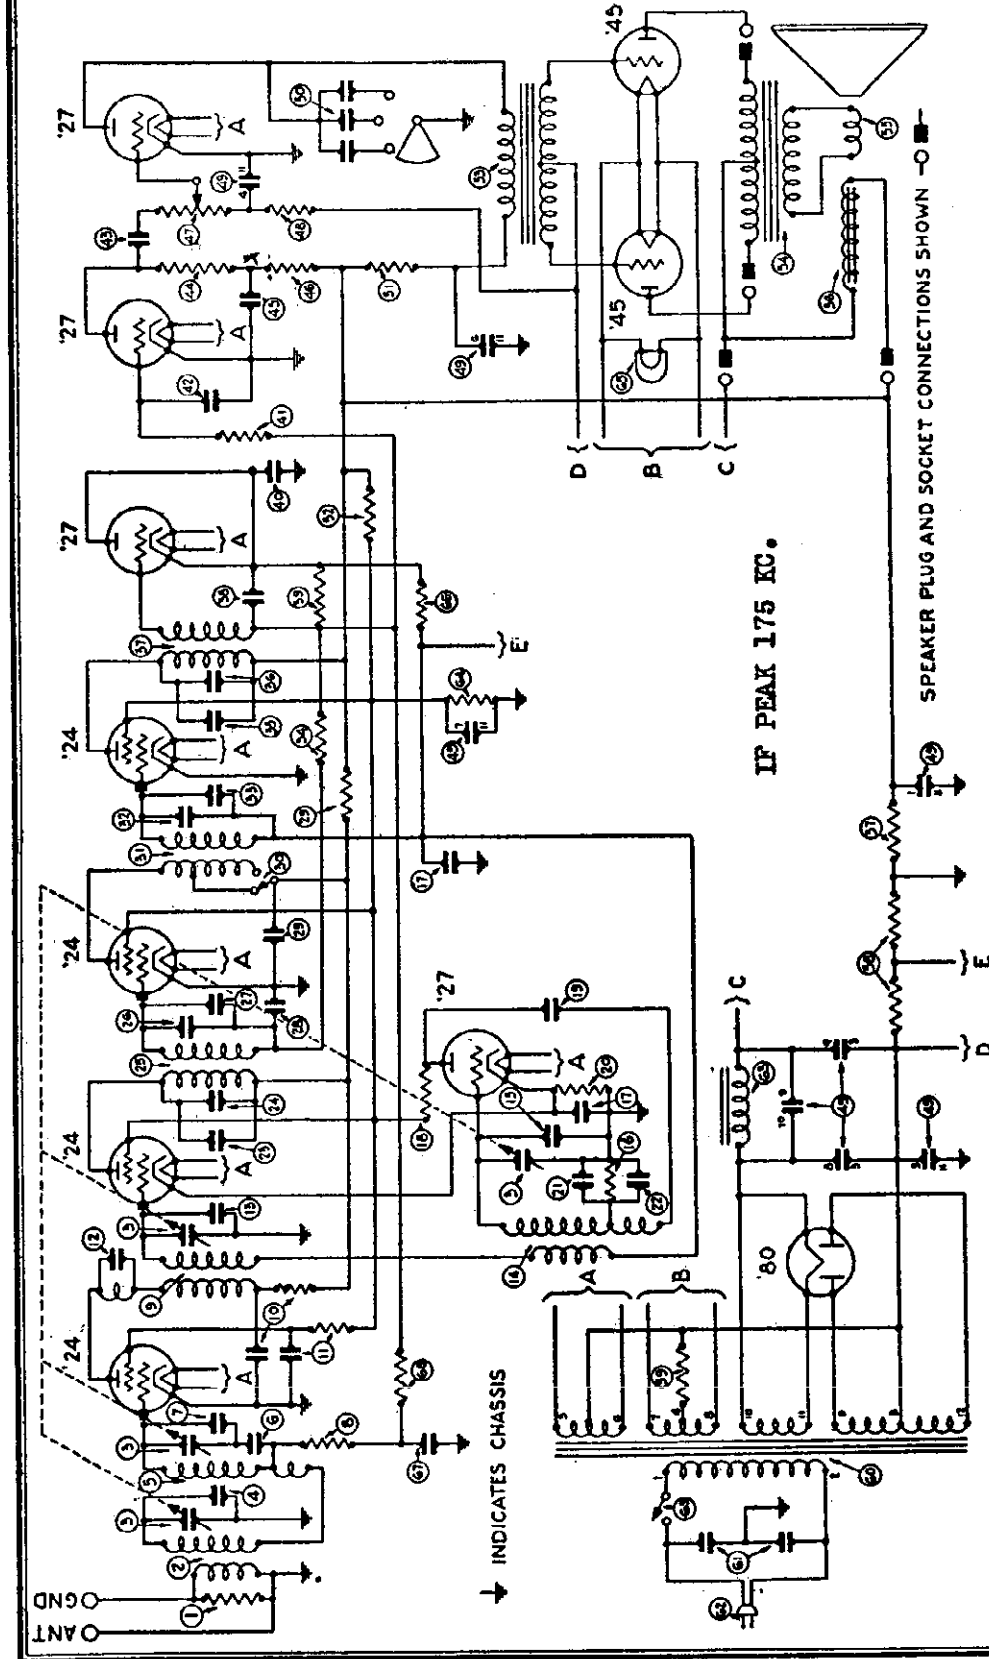

NOTE: The connection shown between Condenser No. ③ and Condenser No. ④ should also be connected to ground.
Models 111, 111A,
Fig. 3

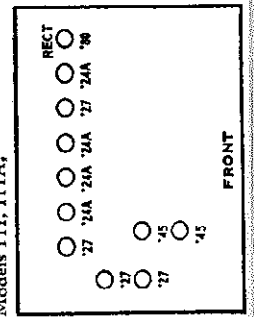


See Parts List for changes upon Models 111 and 111-A

D-C Resistance Data.	
1st I-F Transformer Primary	68 ohms
2nd I-F Transformer Primary	6.2 ohms
3rd I-F Transformer Primary	95 ohms
Secondary (25)	68 ohms
Secondary (31)	70 ohms
Secondary (37)	65 ohms

PHILCO RADIO & TELEVISION CORP.

MODEL 111, 111-A
Chassis

PHILCO MODELS 111 & 111-A SUPERHETERODYNE

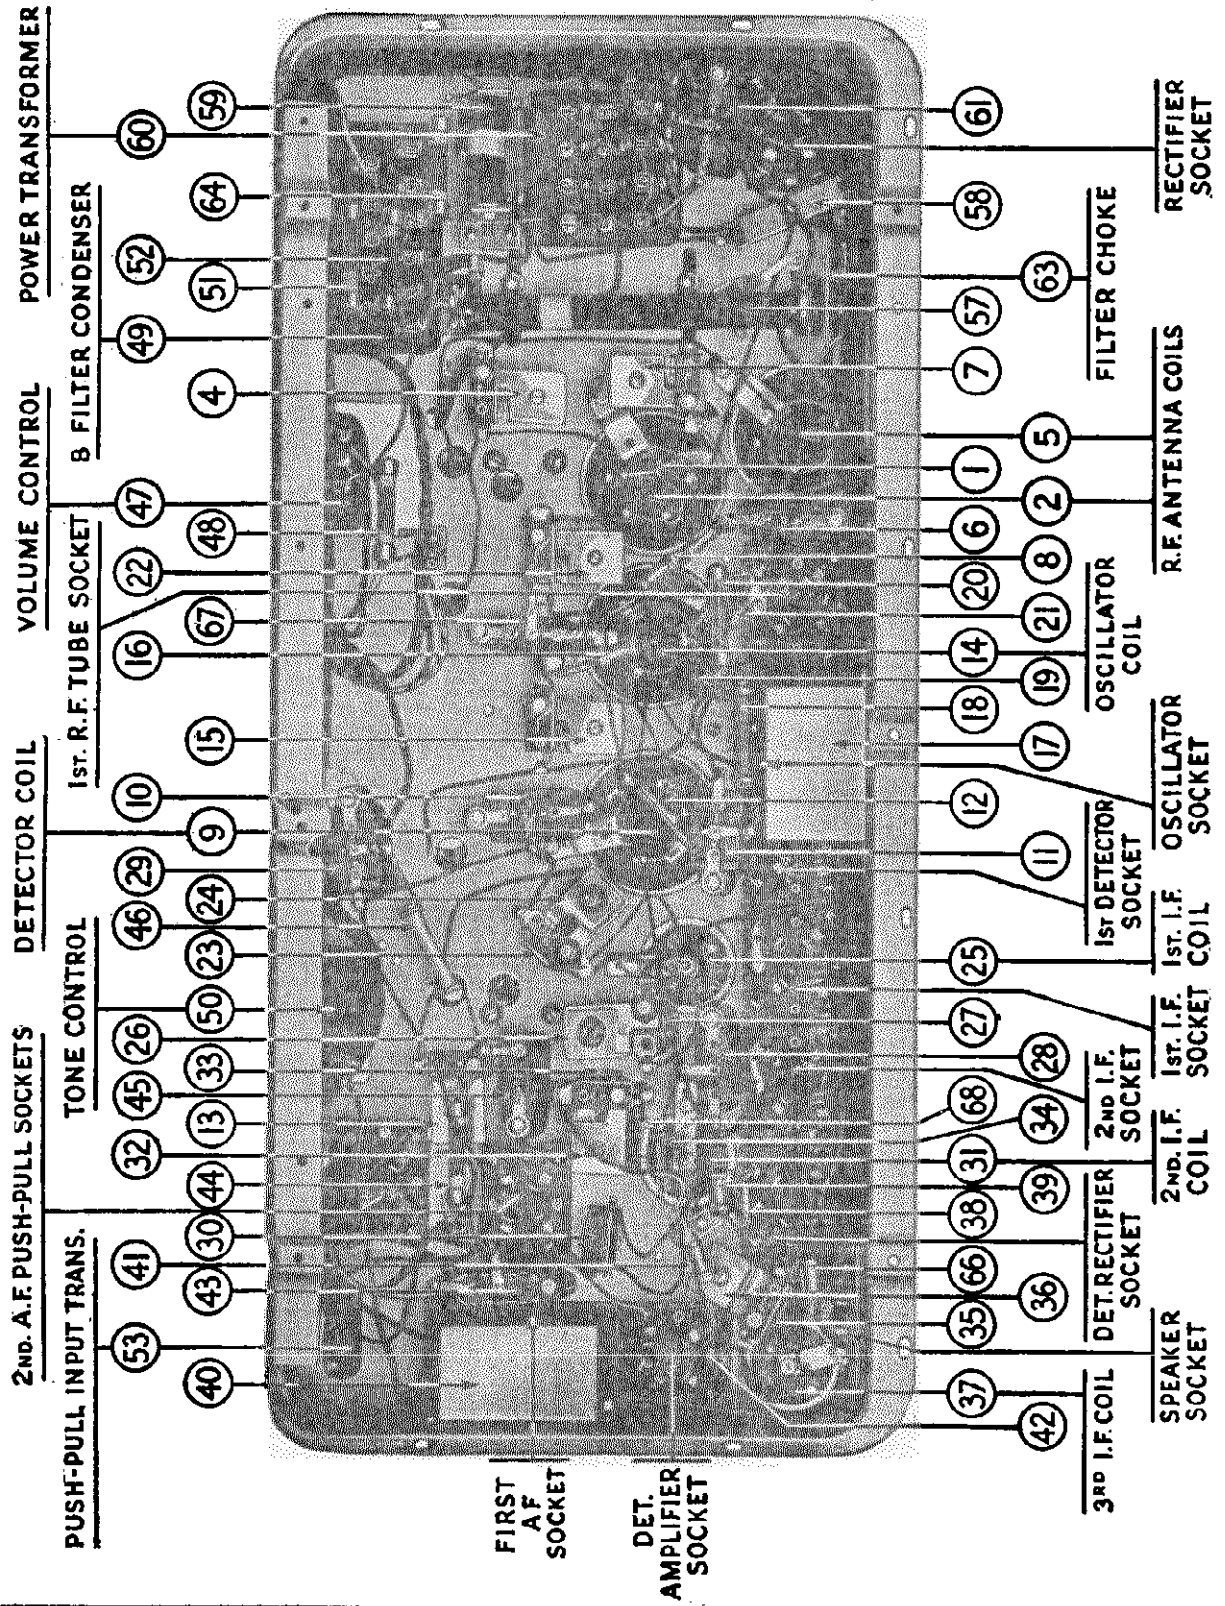

2ND. A.F. PUSH-PULL SOCKETS
PUSH-PULL INPUT TRANS.
TONE CONTROL
DETECTOR COIL
I.S.T. R.F. TUBE SOCKET
VOLUME CONTROL
B FILTER CONDENSER
POWER TRANSFORMER

53 41 40 43 30 44 13 33 50 23 24 46 29 10 16 22 47 49 52 60 59

42 37 35 66 38 31 68 27 25 11 12 18 14 20 6 1 7 57 58 61

FIRST AF SOCKET
DET. AMPLIFIER SOCKET
3RD I.F. COIL
DET. RECTIFIER SOCKET
2ND I.F. SOCKET
1ST I.F. SOCKET
OSCILLATOR COIL
R.F. ANTENNA COILS
FILTER CHOKE
RECTIFIER SOCKET

40 43 30 44 13 33 50 23 24 46 29 10 16 22 47 49 52 60 59

42 37 35 66 38 31 68 27 25 11 12 18 14 20 6 1 7 57 58 61

40 43 30 44 13 33 50 23 24 46 29 10 16 22 47 49 52 60 59

42 37 35 66 38 31 68 27 25 11 12 18 14 20 6 1 7 57 58 61

40 43 30 44 13 33 50 23 24 46 29 10 16 22 47 49 52 60 59

42 37 35 66 38 31 68 27 25 11 12 18 14 20 6 1 7 57 58 61

40 43 30 44 13 33 50 23 24 46 29 10 16 22 47 49 52 60 59

42 37 35 66 38 31 68 27 25 11 12 18 14 20 6 1 7 57 58 61

40 43 30 44 13 33 50 23 24 46 29 10 16 22 47 49 52 60 59

42 37 35 66 38 31 68 27 25 11 12 18 14 20 6 1 7 57 58 61

40 43 30 44 13 33 50 23 24 46 29 10 16 22 47 49 52 60 59

42 37 35 66 38 31 68 27 25 11 12 18 14 20 6 1 7 57 58 61

40 43 30 44 13 33 50 23 24 46 29 10 16 22 47 49 52 60 59

42 37 35 66 38 31 68 27 25 11 12 18 14 20 6 1 7 57 58 61

40 43 30 44 13 33 50 23 24 46 29 10 16 22 47 49 52 60 59

42 37 35 66 38 31 68 27 25 11 12 18 14 20 6 1 7 57 58 61

40 43 30 44 13 33 50 23 24 46 29 10 16 22 47 49 52 60 59

42 37 35 66 38 31 68 27 25 11 12 18 14 20 6 1 7 57 58 61

40 43 30 44 13 33 50 23 24 46 29 10 16 22 47 49 52 60 59

42 37 35 66 38 31 68 27 25 11 12 18 14 20 6 1 7 57 58 61

40 43 30 44 13 33 50 23 24 46 29 10 16 22 47 49 52 60 59

42 37 35 66 38 31 68 27 25 11 12 18 14 20 6 1 7 57 58 61

40 43 30 44 13 33 50 23 24 46 29 10 16 22 47 49 52 60 59

42 37 35 66 38 31 68 27 25 11 12 18 14 20 6 1 7 57 58 61

40 43 30 44 13 33 50 23 24 46 29 10 16 22 47 49 52 60 59

42 37 35 66 38 31 68 27 25 11 12 18 14 20 6 1 7 57 58 61

PHILCO RADIO & TELEVISION CORP.

MODEL 112,112-A
Below # 174,001
Parts List

MODELS 112 AND 112-A

This parts list for models 112,112-A is applicable to the phonograph combination models 212,212-A. However, the following changes and additions must be recorded.

Resistor (70) in models 112,112-A is changed to resistor (76) in models 212,212-A. In addition the following are also added to the list in connection with models 212,212-A

Ⓒ	Motor (50 cycles).....	5333	Ⓓ	Radio-Phono Switch.....	4514
	Motor (60 cycles).....	4784	Ⓔ	Cord Connector Plug.....	4091
	Motor (25 cycles).....	4785	Ⓕ	Cord Connector Socket...	4124
Ⓙ	Phonograph On-Off Switch	4748		Turn Table.....	4735
Ⓚ	Pick-up Head.....	4853			

RANGE SWITCH


The Range Switch, No. Ⓢ in Fig. 3, is placed in the NORMAL position when the Receiver is shipped. This gives great distance range and is the setting which will be found most satisfactory in practically all locations. In places far from broadcasting stations, however, the Range Switch may be changed to the MAXIMUM position. This will make the Receiver super-sensitive and will give extreme distance range. Do not use the Range Switch in the MAXIMUM position if there are one or more powerful broadcasting stations near you. In any location there will be less noise between stations with the Range Switch in the NORMAL position.

REPLACEMENT PARTS

No. on Figs. 3 and 4	Description	Part No.	No. on Figs. 3 and 4	Description	Part No.
①	Resistor—10,000 Ohms	4412	Ⓒ	Condenser—.5	3583
②	1st R. F. Coil	3884-J	Ⓓ	Resistor—100,000 Ohms	4411
③	Tuning Condenser	4000-D	Ⓔ	Condenser—.00025	3082
④	Compensating Condenser	3772-A	Ⓕ	Condenser—.015	3793-B
⑤	2nd R. F. Coil	3884-T	Ⓖ	Resistor—500,000 Ohms	3769
⑥	Condenser—.05	3615-L	Ⓗ	Condenser—.05	3615-S
⑦	Compensating Condenser	3968-A	Ⓙ	Resistor—250,000 Ohms	3768
⑧	Resistor—100,000 Ohms	4411	Ⓚ	Volume Control	4093
⑨	1st Detector Coil	3884-V	Ⓛ	Resistor—70,000 Ohms	3542
⑩	Condenser—.05 and 250 Ohms	3615-C	Ⓜ	B Filter Condenser Block—60 cycles	3754
⑪	Condenser—.05 and 250 Ohms	3615-C	Ⓨ	B Filter Condenser Block—25 cycles	3755
⑫	Coupling Condenser	3892-A	Ⓩ	Tone Control	4037-A
⑬	Compensating Condenser	3968-A	Ⓛ	Resistor—25,000 Ohms	3656
⑭	Oscillator Coil	3884-U	Ⓜ	Resistor—25,000 Ohms	3656
⑮	Compensating Condenser	3968-A	Ⓨ	Push-pull Input Transformer	3537
⑯	Resistor—50,000 Ohms	4518	Ⓩ	Push-pull Output Transformer	2848
⑰	Condenser—.25 double	3557	Ⓚ	Voice Coil and Cone Assembly	2794-B
⑱	Resistor—13,000 Ohms	3766	Ⓛ	Field Coil	2850
⑲	Condenser—.00011	4519	Ⓜ	B Resistor—10,000 Ohms	4532
⑳	Resistor—1,000 Ohms	4590	Ⓨ	C Resistor	3764
㉑	Condenser—.0007	4520	Ⓩ	C Resistor—800 Ohms	3763
㉒	Compensating Condenser	3772-B	Ⓛ	Power Transformer—60 cycles	4446
㉓	Condenser—.00011	4519	Ⓜ	Power Transformer—25 cycles	4447
㉔	Compensating Condenser	3772-C	Ⓨ	Condenser—.015 double	3793-E
㉕	1st I. F. Coil	4501-B	Ⓩ	A C Cord and Plug	L-943-A
㉖	Compensating Condenser	3772-C	Ⓛ	Filter Choke	3422
㉗	Condenser—.0001	4519	Ⓜ	Resistor—70,000 Ohms	3542
㉘	Condenser—.05	3615-J	Ⓨ	Pilot Lamp	3463
㉙	Condenser—.05 and 250 Ohms	3615-B	Ⓩ	Resistor—100,000 Ohms	4411
㉚	Range Switch	3116	Ⓛ	Condenser—.05	3615-D
㉛	2nd I. F. Coil	4501-C	Ⓜ	Resistor—100,000 Ohms	4411
㉜	Compensating Condenser	3772-C	Ⓨ	On-Off Switch	4095
㉝	Condenser—.00011	4519	Ⓩ	Resistor 50,000 Ohms	4518
㉞	Resistor—500,000 Ohms	4517	Ⓛ	Insulator for Part Nos. 3557-3583	4105
㉟	Condenser—.00005	4587	Ⓜ	Pilot Bracket Assembly	4027-A
Ⓛ	Compensating Condenser	3772-D	Ⓨ	Bolt for Pilot Bracket Assembly	W-439
Ⓜ	3rd I. F. Coil	4501-D	Ⓩ	Tone Control Nut	W-434
Ⓨ	Condenser—.00011	4519	Ⓛ	By-pass Condenser Mounting Bolt	W-443
Ⓩ	Resistor—50,000 Ohms	4518	Ⓜ	Bottom Shield Bolt	W-453
			Ⓨ	Chassis Mounting Bolt	W-468

MODEL 112,112-A,
 Below # 174,001
 MODEL 112,112-A
 Above # 174,001
 Chassis

PHILCO RADIO & TELEVISION CORP.

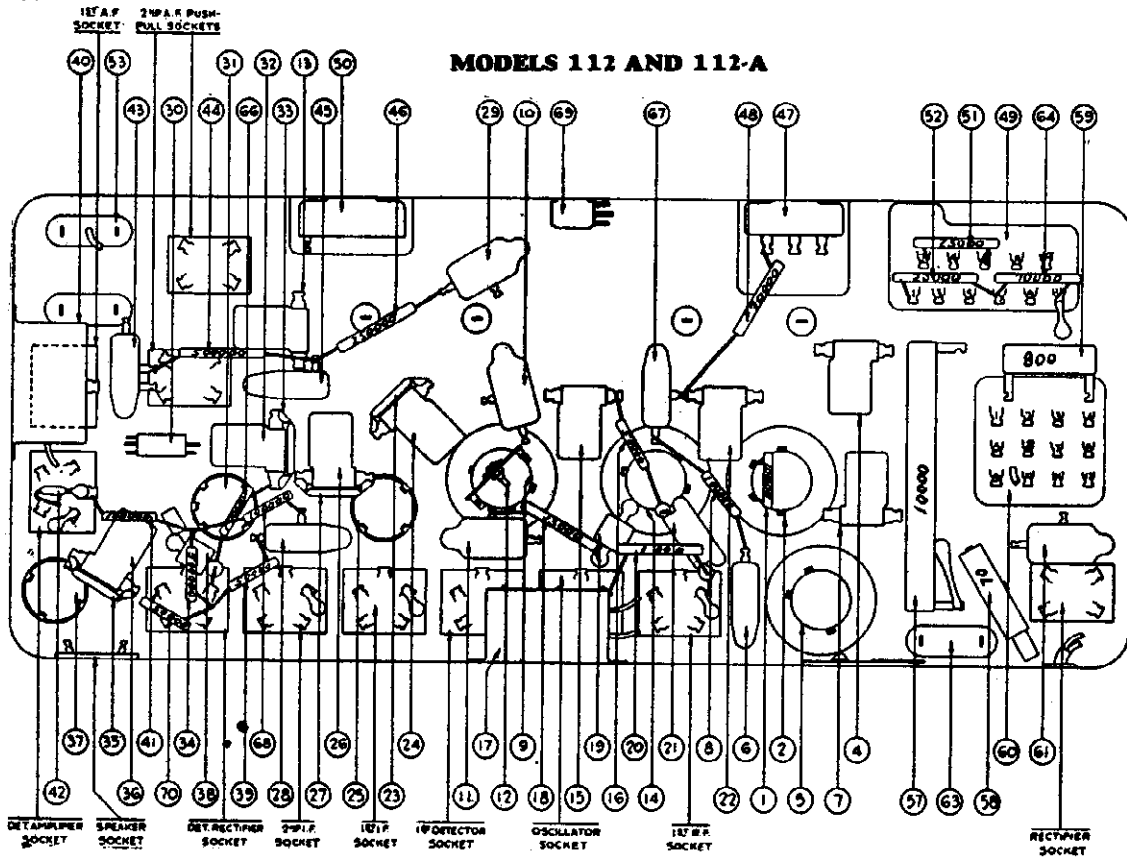

MODELS 112 AND 112-A
 (Above Serial No. 174,001)

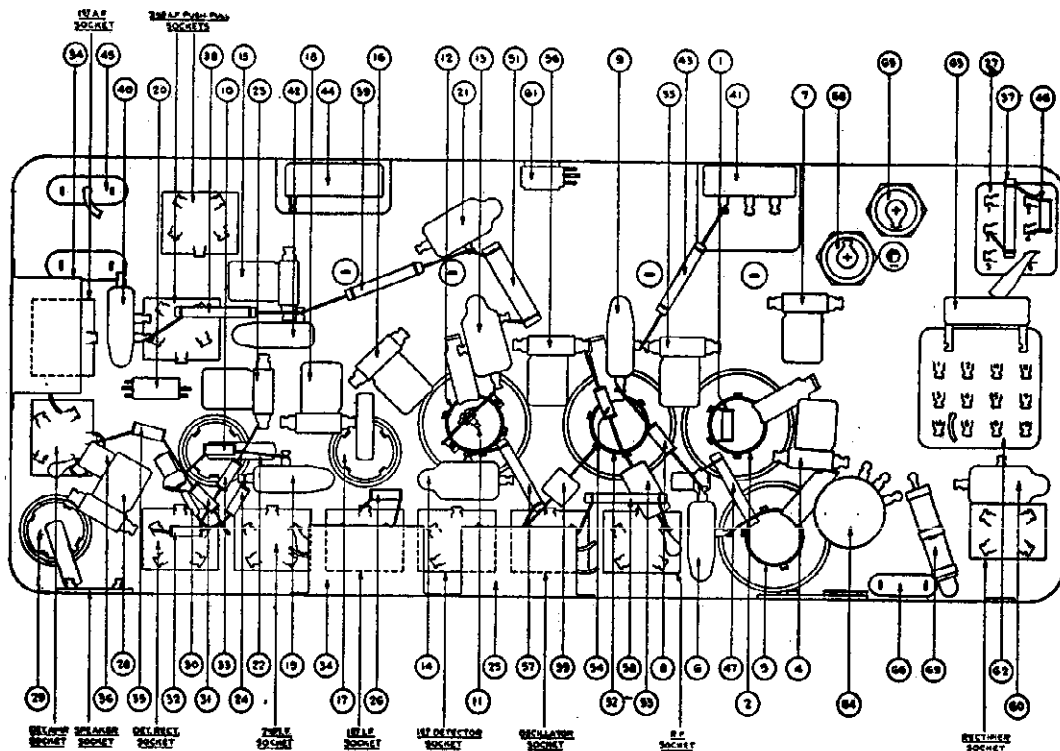


Fig. 4

PHILCO RADIO & TELEVISION CORP.

MODEL 112, 112-A
Alignment Notes

PHILCO MODEL 112 SUPERHETERODYNE

Using a Philco fibre wrench, part No. 3184, adjust the third I. F. condenser until the maximum reading is obtained in the output meter. Next, adjust the second I. F. condenser and then the secondary and primary condensers of the first I. F. stage for maximum reading on the meter. During these adjustments it may be necessary to reduce the signal strength by turning down the volume control of the receiver so that the needle will not be deflected beyond the end of the scale.

HIGH FREQUENCY CONDENSER - Remove the "A" terminal lead from the control grid of the first detector tube and replace the grid clip. Replace the tube shield. Connect the "A" terminal of the oscillator to the antenna post of the Receiver and the "G" terminal of the oscillator to the ground terminal of the chassis. Do not change the oscillator setting. Turn up the attenuator of the oscillator until it is all the way on. Set the Philco scale to approximately 140 (1400 K. C.); set the NORMAL - MAXIMUM switch in the Maximum Position provided the Receiver is not too far out of adjustment the eighth harmonic of the 175 note will be heard at or near the 140 position of the scale. Set the station selector knob at exactly 148 and tune the high frequency condenser until the oscillator note is peaked at exactly 140 on the Receiver scale. Next adjust the detector condenser for maximum reading on the output meter.


If the Receiver is so far out of adjustment that the eighth harmonic of 175 K. C. is not audible, it will be necessary to set the oscillator for broadcast frequencies. Set the tuning control of the oscillator at approximately 1400 K. C. (as indicated in the data furnished with the instrument), then adjust the high frequency condenser for maximum signal in the output meter. Set the first and second antenna condensers for maximum signal in the output meter reducing the attenuator setting as the signal increases to prevent damage to the meter mechanism. Turn the center control of the oscillator to intermediate frequency and reset the tuning control of the oscillator to the 175 K. C. position and proceed as outlined above. Final adjustment must be made when the oscillator is set at exactly 175 K. C. in the intermediate position.

ANTENNA CONDENSERS - With the oscillator set at the original 175 K. C. position adjust the first and then the second antenna condenser for maximum reading in the output meter.

LOW FREQUENCY CONDENSER - Set the oscillator on broadcast position and tune to exactly 600 K. C. The oscillator signal should be received at 600 on the Receiver scale. Adjust the low frequency condenser until the maximum reading is obtained in the output meter with the Receiver set at 60.

Where it is necessary to replace the tuning scale on the Model 112 Superheterodyne, put a mark opposite 55 on the tuning condenser drum. Remove the old scale and place the new one in position so that 55 is exactly opposite the above mark.

ADJUSTING THE MODEL 112 SUPERHETERODYNE PLUS USING A JEWELL 560 OSCILLATOR

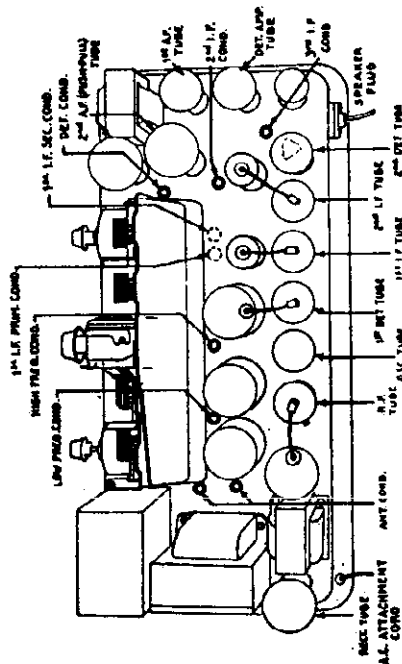

Set up the Receiver for operation using standard tubes, which you know are in good condition. Set the Normal - Maximum switch in the Normal position for the intermediate frequency adjustment. Connect the Jewell pattern 560 oscillator to the Receiver.

INTERMEDIATE FREQUENCY OR I. F. STAGES - Remove the tube shield, replace the control grid clip of the detector tube with the lead from the "A" terminal of the oscillator. The "G" terminal of the oscillator must be connected to the Receiver Chassis. Replace the tube shield on the chassis.

Turn on the filament control of the oscillator about one-half the total movement. The "A" Battery of the oscillator must be replaced when it is necessary to turn this control all the way on in order to obtain a signal. Turn the center switch to the intermediate position. The tuning control of the oscillator must be set so that the oscillator signal is exactly 175 K. C. This setting can be determined from calibration data furnished with the instrument.

Turn the volume control of the receiver on full. Set the attenuator control so that an audible signal is received in the speaker. Connect the 1/2 and low terminals of the output meter to the voice coils of the speaker. Adjust the attenuator control so that not more than one-half full scale reading is obtained on the meter.

MODEL 112,112-A
Above # 174,001
Electrical Values
Voltage

PHILCO RADIO & TELEVISION CORP.

Models 112 and 112-A Receivers

(Above Serial No. 174,001)

Model 112 Receivers are for operation on 115 volt, 50-60 cycle AC lines
Model 112-A Receivers are for operation on 115 volt, 25-60 cycle AC lines

Table 1—Tube Socket Readings taken with A.C. Set Tester A.C. Line—115 volts

Type	Tube Circuit	Filament Volts	Plate Volts	Screen Grid Volts	Control Grid Volts	Cathode Volts	Plate Milli-amperes	Screen-Grid Milli-amperes
24	1st R. F.	2.25	180	75	.2	5.0	4.0	1.
27	1st Det.	2.25	556	7.5	1.8	...
27	1st I. F.	2.25	180	75	2.5	8.0	4.0	1.
24	2nd I. F.	2.25	180	75	2	5.0	4.0	1.
27	Det. Rect.	2.25	160	75	6*	4.0	4.0	1.
27	Det. Amp.	2.25	20
27	1st A. F.	2.30	150	4.0	3.0	...
47	2nd A. F.	2.30	245	255	16.5	4.0	31**	9.
47	2nd A. F.	2.30	245	255	16.5	...	31**	9.
80	80	5.0	54/54	...

*60 Volt scale

**Special adapter must be used for this test.

Note—Volume control off; station selector turned to low frequency end; range switch set in "Normal" position.

Table 2—Power Transformer Voltages

Terminals	A.C. Volts	Notes
1-2	115.	Primary
3-4	2.67	Heater for 24 and 27 Tubes
6		Not used
5-7	2.68	Filaments for 47 Tubes
10-12	750.	Plates 80 Tube
11		Center Tap 80 Tube
8-9	5.0	Filament 80 Tube
Rubber Covered Lead		Center Tap for 24 and 27 Tubes


Table 3—Condenser Data

No. on Figs.	CAPACITY	COLOR
(6) (9) (10) (12)	.05	Bakelite Container
(13) (14) (21)	.01 and 250 Ohms	Bakelite Container
(22)	.25	Metal Container
(30) (36)	.00011	Blue, Golden Yellow
(38)	.00025	Yellow
(40)	.015	Bakelite Container
(53)	.0047	White, Golden Yellow
(59)	.015 Double	Bakelite Container
(6) (9)	6 Mfd.	Electrolytic


Table 4—Resistor Data

No. on Figs.	Resistance (Ohms)	Power (Watts)	COLOR		
			Body	Tip	Dot
(20)	2 Sections 70 ohms ea.		Flat	Wire Wound	
(23)	205			Tubular	
(25)	1,000	1	Brown	Black	Red
(1)	10,000	1/2	Brown	Black	Orange
(7) (27)	13,000	1	Brown	Orange	Orange
(31)	15,000	2	Red	Orange	Black
(27)	25,000	1	Red	Green	Orange
(48)	25,000	1/2	Red	Green	Orange
(21) (24) (26)	51,000	1/2	Green	Brown	Orange
(22)	70,000	1/2	Violet	Black	Orange
(43)	70,000	1	Violet	Black	Orange
(8) (10) (23) (25)	99,000	1/2	White	White	Orange
(28)	99,000	1	White	White	Orange
(24)	490,000	1/2	Yellow	White	Yellow
(39)	490,000	1	Yellow	White	Yellow

Model 112 Condenser Block Part No. 3754

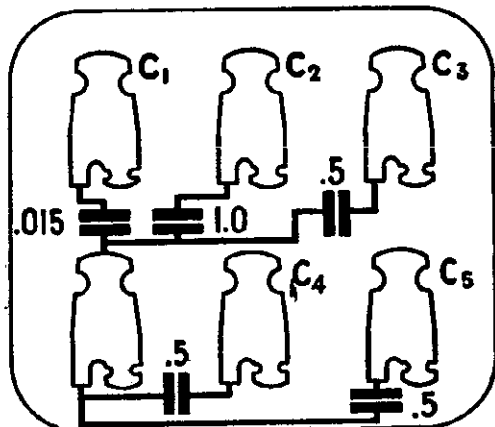


Model 112-A Condenser Block Part No. 3755

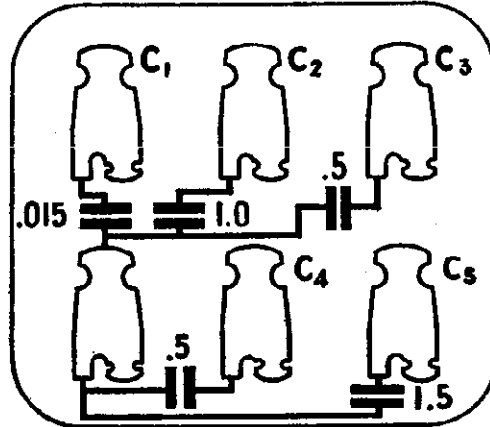

MODEL 112, 112-A
Above #174,001
Parts List
Schematic

PHILCO RADIO & TELEVISION CORP.

MODELS 112 AND 112-A
(Above Serial No. 174,001)

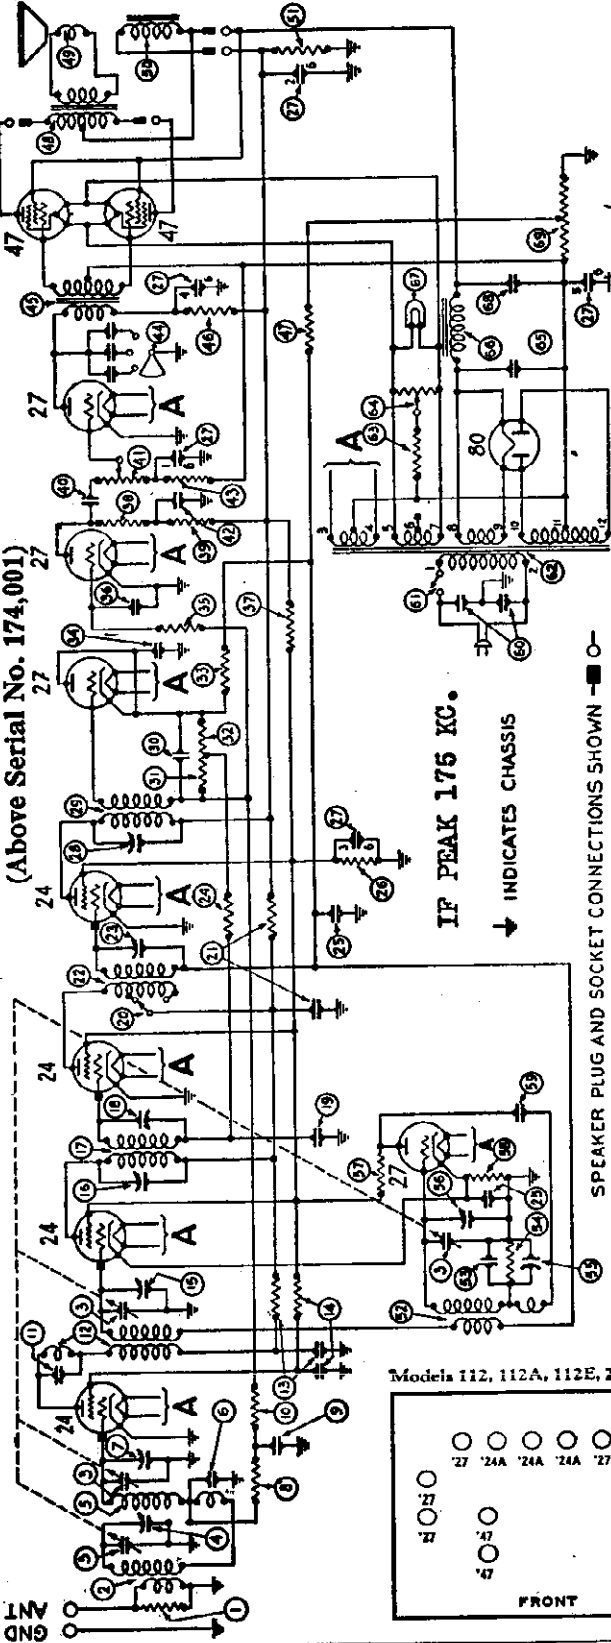

REPLACEMENT PARTS—MODELS 112, 112-A AND 112-E
(Above Serial No. 174,001)

- | | | | | | | |
|----|--|---------|---------------------------------------|----|--|---------|
| 1 | Resistor (10,000 ohms) | 4517 | Resistor (490,000 ohms) | 67 | Resistor (13,000 ohms) | 3766 |
| 2 | First R. F. Coil | 3557 | By-pass Condenser (1/4 mfd.) | 68 | Push-pull Output Transformer | 2635 |
| 3 | Tuning Condenser | 5385 | Resistor (70,000 ohms) | 69 | Voice Coil and Cone Assembly | 02997 |
| 4 | Compensating Condenser | 03489 | Filter Condenser Block (50-60 cycles) | 70 | Speaker Field (assembled with pot and frame) | 02892 |
| 5 | Second R. F. Coil | 03589 | Compensating Condenser | 71 | Resistor (15,000 ohms) | 5718 |
| 6 | By-pass Condenser (.05 mfd.) | 04000-L | Third I. F. Transformer | 72 | Oscillator Coil | 3884-U |
| 7 | Compensating Condenser | 03040 | Condenser (110 mmf.) | 73 | Condenser (700 mmf.) | 4520 |
| 8 | Resistor (99,000 ohms) | 4519 | Resistor (51,000 ohms) | 74 | Resistor (50,000 ohms) | 4518 |
| 9 | By-pass Condenser (.05 mfd.) | 4518 | Resistor (51,000 ohms) | 75 | Compensating Condenser | 04000-F |
| 10 | Resistor (99,000 ohms) | 4518 | Resistor (99,000 ohms) | 76 | Compensating Condenser | 04000-F |
| 11 | First Detector Coil | 4411 | By-pass Condenser (.5 mfd.) 2 used | 77 | Resistor (13,000 ohms) | 3766 |
| 12 | By-pass Condenser & Resistor (.05 mfd. and 250 ohms) | 3583 | Resistor (99,000 ohms) | 78 | Resistor (1,000 ohms) | 4590 |
| 13 | By-pass Condenser & Resistor (.05 mfd. and 250 ohms) | 3615-Z | Resistor (99,000 ohms) | 79 | Condenser (110 mmf.) | 4519 |
| 14 | Compensating Condenser | 3615-B | Resistor (25,000 ohms) | 80 | By-pass Condenser (.015 mfd. double) | 4095 |
| 15 | Compensating Condenser | 04000-E | Resistor (99,000 ohms) | 81 | Power Transformer (115 volts 50-60 cycles) | 5594 |
| 16 | Compensating Condenser | 04000-J | Resistor (490,000 ohms) | 82 | Power Transformer (115 volts 25-40 cycles) | 5595 |
| 17 | First I. F. Transformer | 03038 | Condenser (.015 mfd.) | 83 | Power Transformer (230 volts 50-60 cycles) | 5596 |
| 18 | Compensating Condenser | 04000-J | Volume Control | 84 | Resistor (2 ohms) | 03513 |
| 19 | By-pass Condenser (.05 mfd.) | 3615-J | By-pass Condenser (.05 mfd.) | 85 | 1-1/2" Control Pot. (w/ometer) | 5650 |
| 20 | Range Switch | 3116 | Resistor (3,000 ohms) | 86 | Electrolytic Condenser (100 u.f.d.) | 4916 |
| 21 | By-pass Condenser & Resistor (.05 mfd. and 250 ohms) | 3615-B | Tone Control | 87 | Filter Choke | 5643 |
| 22 | Second I. F. Transformer | 03039 | Push-pull Input Transformer | 88 | Pilot Light | 3463 |
| 23 | Compensating Condenser | 04000-J | Resistor (25,000 ohms) | 89 | Electrolytic Condenser (6 mfd.) | 4916 |
| 24 | Resistor (10,000 ohms) | 4516 | Resistor (25,000 ohms) | 90 | Resistor (2 sections 70 ohms each) | 3764 |

PHILCO RADIO & TELEVISION CORP.

MODEL 470, 470-A
Voltage
Electrical Values

Models 470 and 470-A Receivers

Table 1—Tube Socket Data taken with AC Set Tester—AC Line 115 Volts

Tube		Filament Volts	Plate Volts	Screen Grid Volts	Control Grid Volts	Cathode Volts	Plate Milli- amperes
Type	Circuit						
SHORT WAVE UNIT*							
27	Osc.	2.2	110	...	3.3	0	...
24	Det.	2.2	24	24	5.	0	...
BROADCAST UNIT							
24	R. F.	2.4	255	50	3.5	25	7.5
24	1st. Det.	2.4	260	60	9	38	...
27	Osc.	2.4	60	...	3.5	25	2.
24	I. F.	2.4	265	50	3	22	3.5
24	2nd Det.	2.4	116	40	7	25	...
47	Output	2.5**	205**	220**	.7**	..	28**
80	Rectifier	4.5	260/Plate				

*The voltage readings of the short wave unit were taken from the under side of the chassis, using a Weston multi-range voltmeter, 1000 Ohms per volt. The radio set tester cannot be used, either for voltage or plate current readings because of the effect of the long leads through the set tester cord.

**These readings must likewise be taken from the socket terminals on the under side of the chassis unless the set tester is especially equipped with an adapter for testing pentode tubes.

All the above readings were taken with volume control at maximum.

Table 2—Power Transformer Voltage

Terminals	A. C. Volts	Circuit	Color
SHORT WAVE UNIT			
4-5	105 to 125	Primary	Black
1-3	2.5	Secondary	Yellow
2	...	Center Tap 1-3	Green
BROADCAST UNIT			
1-2	105 to 125	Primary	White (Small Gauge)
3-5	2.5	Filament of 47	Dark Green
6-8	2.5	Filament of 24	Black (Heavy Gauge)
9-10	5.	Filament of 80	Light Blue
11-13	700	Plate of 80	Yellow
4	...	Center Tap of 3-5	Black, Green Tracer
7	...	Center Tap of 6-8	Black, Yellow Tracer
12	...	Center Tap of 11-13	Yellow, Green Tracer

Table 3—Resistor Data

No. on Figs. 1, 2 and 3	Terminal	Power (Watts)	Resistance (Ohms)	Color		
				Body	Tip	Dot
44	250	Black Bakelite
45	{ 1-2 2-3 4-5 5-6 }	{ 1060 2300 70 240 }	Long Tubular
46	...	1	5,000	Green	Black	Red
475	5,000	Green	Black	Red
48	...	1	13,000	Brown	Orange	Orange
49	...	1	32,000	Orange	Red	Orange
50	...	1	45,000	Yellow	Green	Orange
51	(50-60 cycles)	.5	51,000	Green	Brown	Orange
52	...	1	99,000	White	White	Orange
535	99,000	White	White	Orange
54	...	1	240,000	Red	Yellow	Yellow
555	240,000	Red	Yellow	Yellow
565	2,000,000	Red	Black	Green

PHILCO RADIO & TELEVISION CORP.

MODEL 470, 470-A
Parts List

Table 4—Condenser Data

No. on Fig. 1, 2 and 3	Capacity (Mfd.)	Container	No. on Fig. 1, 2 and 3	Capacity (Mfd.)	Container
⑭ ⑮ ⑯	.00011	Blue and Golden Yellow	⑳ ㉑	.09 (Double)	Black Bakelite
⑰ ⑱ ㉒	.00025	Yellow	㉓	.09 (50-60 cycles)	Black Bakelite
㉓ ㉔ ㉕	.00041	Yellow and Orange	㉖	.18 (25-40 cycles)	Black Bakelite
㉖ ㉗ ㉘	.0005	Green	㉙	.25	Metal
㉘ ㉙ ㉚	.0008	Green and Orange	㉛	.5	Metal
㉚ ㉛ ㉜	.00125	Blue and Orange	㉜	6 (50-60 cycles)	Electrolytic
㉜ ㉝ ㉞	.01	Black Bakelite	㉝	10 (25-40 cycles)	Electrolytic
㉞ ㉟ ㊱	.015 (Double)	Black Bakelite	㉞	6 (50-60 cycles)	Electrolytic
㊱ ㊲ ㊳	.05	Black Bakelite	㊲	10 (25-40 cycles)	Electrolytic

No. on Figs. 1 and 2	Description	Part No.	No. on Figs. 1 and 2	Description	Part No.
①	Oscillator Coil*	03734	㉔	Resistor (45,000 ohms) 50-60 cycles	5256
②	By-pass Condenser (.05 mfd.)	3615-M	㉕	Resistor (99,000 ohms) 25-40 cycles	4411
③	Gang Condenser Assembly	03692	㉖	Condenser (.5 mfd.)	3583
④	Resistor (13,000 ohms)	3766	㉗	Resistor (51,000 ohms)	4518
⑤	Compensating Condenser (19 MC End of Top Scale)	04000-E	㉘	Condenser (500 mmf.)	3910
⑥	Compensating Condenser (8.5 MC End of Center Scale)	04000-E	㉙	R. F. Choke	03086
⑦	Compensating Condenser (3.6 MC End of Bottom Scale)	04000-E	㉚	Condenser (250 mmf.)	3082
⑧	Frequency Control Switch	03751	㉛	Resistor (240,000 ohms)	4410
⑨	Resistor (240,000 ohms)	3768	㉜	Condenser (.25 mfd.)	4284
⑩	Condenser (1,250 mmf.)**	5886	㉝	Pilot Light (Broadcast Unit)	3463
⑪	Compensating Condenser (8.5 MC End of Top Scale**)	04000-F	㉞	Condenser (.09 mfd. double)	4989-C
⑫	Condenser (800 mmf.)	5878	㉟	Resistor (51,000 ohms)	4518
⑬	Compensating Condenser (3.6 MC End of Center Scale)	04000-F	㊱	Resistor (5,000 ohms)	5310
⑭	Condenser (250 mmf.)	3082	㊲	Compensating Condenser—High Frequency—Part of Gang Condenser Assembly	
⑮	Compensating Condenser (1.5 MC End of Bottom Scale)	04000-F	㊳	Condenser (.09 mfd. double)	4989-C
⑯	Detector Transformer*	03734	㊴	Condenser (110 mmf.)	4519
⑰	Frequency Filter	03662	㊵	B. C. Resistor	03079
⑱	Antenna Switch Assembled with ㉑	5796	㊶	Resistor (13,000 ohms)	3766
⑲	Resistor (2 megohms) Assembled with ㉑	03879	㊷	Condenser (.05 mfd.)	3615-L
㉑	Condenser (110 mmf.) Assembled with ㉑	03879	㊸	Voice Coil and Cone Assembly	02996
㉒	Condenser (250 mmf.)	3082	㊹	Field Coil Assembled with Pot.	02966
㉓	Resistor (99,000 ohms)	3767	㊺	Output Transformer	2673
㉔	R. F. Choke	03893	㊻	Tone Control	03140
㉕	Shielded Cable	L-1278	㊼	Resistor (240,000 ohms)	4410
㉖	Resistor (32,000 ohms)	3525	㊽	Condenser (.01 mfd.)	3903-L
㉗	Resistor (32,000 ohms)	3525	㊾	Condenser (.015 mfd. double)	3793-K
㉘	Electrolytic Condenser (6 mfd.)	4916	㊿	"On-off" Switch	4095
㉙	Pilot Light (Short Wave Unit)	3463	㉑	Power Transformer (50-60 cycles)	5117
㉚	Resistor (5,000 ohms)	3526	㉒	Power Transformer (25-40 cycles)	5118
㉛	Plug	03913	㉓	Power Transformer (50-60, 230 volts)	5119
㉜	Filament Transformer	(50-60 cycles)	㉔	Electrolytic Condenser (6 mfd.) 50-60 cycles	4916
㉜		(25-40 cycles)	㉕	Electrolytic Condenser (10 mfd.) 25-40 cycles	5142
㉜		(50-60 cycles, 230 volts)	㉖	Choke	4819
㉝	On-off Switch (Assembled with ㉑)	5796	㉗	Condenser (.09 mfd.) 50-60 cycles	4989-J
㉞	Volume Control	5039	㉘	Condenser (.18 mfd.) 25-40 cycles	4989-K
㉟	First R. F. Transformer	03082	㉙	Electrolytic Condenser (6 mfd.) 50-60 cycles	4916
㊱	Tuning Condenser (50-60 cycles)	03076	㉚	Electrolytic Condenser (10 mfd.) 25-40 cycles	5142
㊲	Tuning Condenser (25-40 cycles)	03077	㉛	Line Cord and Plug	L-943
㊳	Compensating Condenser—Antenna—Part of Gang Condenser Assembly		㉜	Tube Shield	03987
㊴	First Detector Transformer	03083	㉝	Bezel (Broadcast)	5008
㊵	Compensating Condenser—Detector—Part of Gang Condenser Assembly		㉞	Bezel (Short Wave)	5178
㊶	Compensating Condenser—First I. F. Primary	04000-J	㉟	Knob (Large)	03063
㊷	First I. F. Transformer	03091	㊱	Knob (Small)	03064
㊸	Compensating Condenser—First I. F. Secondary	04000-H	㊲	Knob (On-Off Switch—Broadcast)	03437
㊹	Second I. F. Transformer	03092	㊳	Knob (Control Switch—Short Wave)	5811
㊺	Compensating Condenser—Second I. F.	04000-K	㊴	Spring (For Small Knobs)	4147
㊻	Resistor (250 ohms Combined with .09 mfd. Condenser)	4989-E	㊵	Spring (For Large Knobs)	5262
			㊶	Grid Clip	4897
			㊷	Five Prong Socket Assembly	4956
			㊸	Four Prong Socket Assembly	4955
			㊹	Dial Complete (Broadcast)	03031
			㊺	Dial Complete (Short Wave)	03890

*Includes matched oscillator coil and detector transformer.
**These parts replaced on later production by .0018 mfd. condenser, part 6018.

MODEL 490
Chassis
Transformer Data

PHILCO RADIO & TELEVISION CORP.

MODEL 490

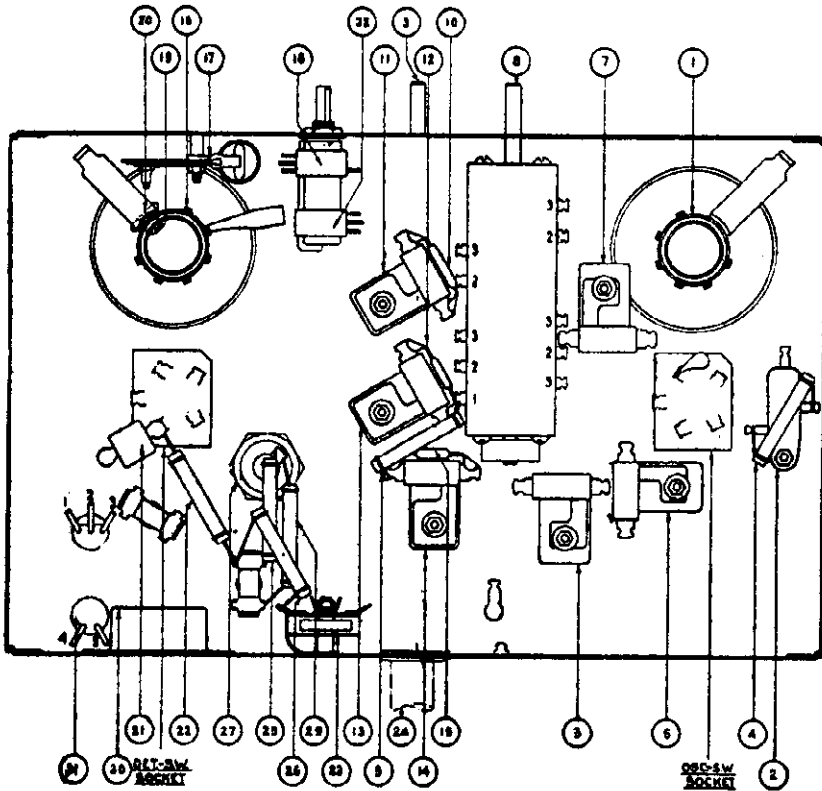


Fig. 2—Short Wave Chassis.

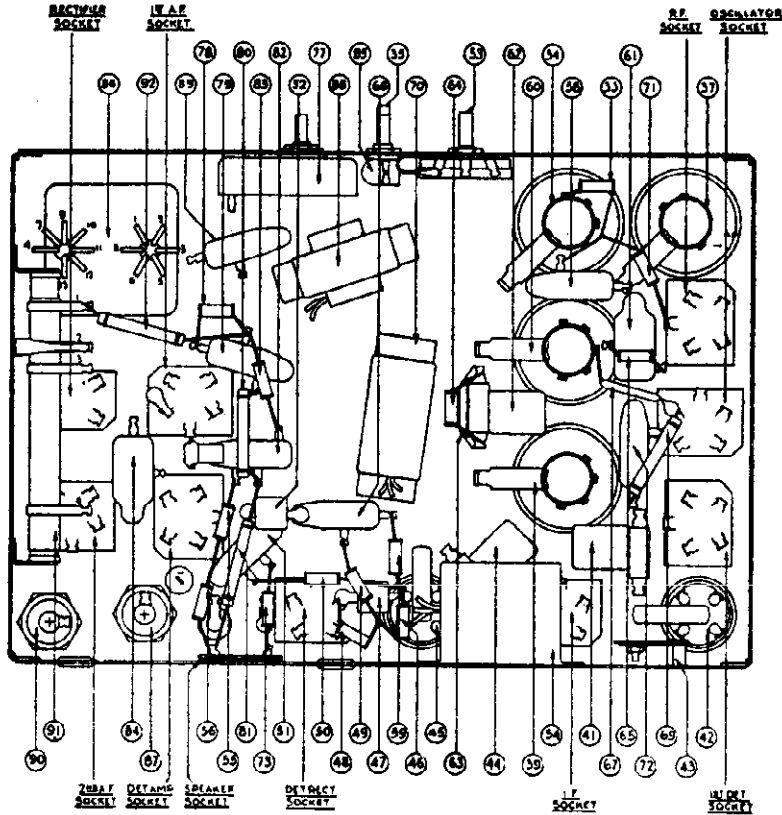


Fig. 3—Broadcast Chassis.

Table 2—Power Transformer Voltages

Terminals	A.C. Volts	Circuit	Color
SHORT WAVE UNIT			
4-5	105 to 125	Primary	Black
1-3	2.5	Secondary	Yellow
2		Center Tap 1-3	Green
BROADCAST UNIT			
1-2	105 to 125	Primary	White
3-5	2.5	Heaters of 24 and 27 Tubes	Black
4	2.5	Center Tap of 3-5	Black with Yellow
6-8	2.5	Filament of 47 Tube	Dark Green
7	2.5	Center Tap of 6-8	Black with Green
9-10	5.0	Filament of 80 Tube	Light Blue
11-13	650.	Plates of 80 Tube	Yellow
12	Center Tap of 11-13	Yellow with Green

PHILCO RADIO & TELEVISION CORP.

MODEL 490
Electrical Values

No. on Figs. 1 and 2	Description	Part No.	No. on Figs. 1 and 2	Description	Part No.
1	Oscillator Coil*	03734	1	Condenser (110 mmf.)	4519
2	By-pass Condenser (.05 mfd.)	3615-M	2	Resistor (51,000 ohms)	4518
3	Gang Condenser Assembly	03692	3	Resistor (490,000 ohms)	4517
4	Resistor (13,000 ohms)	3766	4	Resistor (99,000 ohms)	4411
5	Compensating Condenser (19 MC end of Top Scale)	04000-E	5	Condenser (.01 mfd.)	3903-R
6	Compensating Condenser (8.5 MC End of Center Scale)	04000-E	6	Volume Control	5366
7	Compensating Condenser (3.6 MC End of Bottom Scale)	04000-E	7	By-pass Condenser (3--25 mfd.)	03325
8	Frequency Control Switch	03751	8	Resistor (51,000 ohms)	4518
9	Resistor (240,000 ohms)	3768	9	Resistor (70,000 ohms)	5385
10	Condenser (1,250 mmf.)**	5886	10	Pilot Light (Broadcast Unit)	3463
11	Compensating Condenser (8.5 MC End of Top Scale)*	04000-F	11	Condenser (.05 mfd.)	3615-W
12	Condenser (800 mmf.)	5878	12	Resistor (490,000 ohms)	4517
13	Compensating Condenser (3.6 MC End of Center Scale)	04000-F	13	Oscillator Coil	03916
14	Compensating Condenser (1.5 MC End of Bottom Scale)	04000-F	14	Condenser (.09 mfd.)	4980-G
15	Detector Transformer*	03734	15	Compensating Condenser—Low Frequency	04000-B
16	Frequency Filter	03662	16	Condenser (700 mmf.)	4520
17	Antenna Switch Assembled with 16	5796	17	Resistor (51,000 ohms)	4518
18	Resistor (2 megohms) Assembled with 16	03879	18	Compensating Condenser—High Frequency	4510
19	Condenser (110 mmf.) Assembled with 16	03879	19	Compensating Condenser—Part of Gang Condenser Assembly	4510
20	Condenser (250 mmf.)	3082	20	Condenser (110 mmf.)	4519
21	Resistor (99,000 ohms)	3767	21	Condenser (.05 mfd.)	4237
22	R. F. Choke	03893	22	Resistor (25,000 ohms)	03327
23	Shielded Cable	L-1278	23	Resistor (70,000 ohms)	03624
24	Resistor (32,000 ohms)	3525	24	Condenser (.05 mfd.)	5385
25	Resistor (32,000 ohms)	3525	25	Resistor (25,000 ohms)	3615-E
26	Electrolytic Condenser (6 mfd.)	4916	26	Voice Coil and Cone Assembly	4516
27	Pilot Light (Short Wave Unit)	3463	27	Speaker Field (Assembly with Pot)	02596
28	Resistor (5,000 ohms)	3526	28	Output Transformer	2673
29	Plug	03913	29	Tone Control	03137
30	Filament Transformer (50-60 cycles) (25-40 cycles) (volts)	5906	30	Resistor (240,000 ohms) 50-60 cycles	4410
31	On-off Switch (Assembled with 30)	5923	31	Resistor (99,000 ohms) 25-40 cycles	4411
32	First R. F. Transformer	03360	32	Condenser (.01 mfd.)	3903-P
33	Gang Condenser Assembly (50-60 cycles)	03001	33	Resistor (25,000 ohms)	3656
34	Compensating Condenser—First R. F.—Part of Gang Condenser Assembly	03078	34	Resistor (25,000 ohms) 50-60 cycles	3656
35	Compensating Condenser—Second R. F.—Part of Gang Condenser Assembly	03014	35	Resistor (50,000 ohms) 25-40 cycles	4237
36	First Detector Transformer	03015	36	Condenser (.01 mfd.)	3903-M
37	Compensating Condenser—First Detector—Part of Gang Condenser Assembly	04000-J	37	Resistor (240,000 ohms)	4410
38	Compensating Condenser—First I. F.—Primary	03009	38	Condenser (.015 mfd. Double)	3793-E
39	Compensating Condenser—First I. F.—Secondary	04000-J	39	On-off Switch	4095
40	Compensating Condenser—Second I. F.—Primary	04000-L	40	Power Transformer (50-60 cycles)	5362
41	Compensating Condenser—Second I. F.—Secondary	03345	41	Power Transformer (25-40 cycles)	5363
42	Resistor (51,000 ohms)	4518	42	Power Transformer (50-60 cycles, 230 volts)	5364

*Includes matched oscillator coil and detector transformer.
**These parts replaced on later production by .0018 mfd. condenser, part 6018.

No. on Figs. 1, 2 and 3	Capacity Mfd.	Container
1	.00011	Blue and Golden Yellow
2	.00025	Yellow
3	.0007	White and Golden Yellow
4	.0008	Green and Orange
5	.00125	Blue and Orange
6	.01	Black Bakelite
7	.015 Double	Black Bakelite
8	.05	Black Bakelite
9	.09 (50-60 cycles)	Black Bakelite
10	.18 (25-40 cycles)	Black Bakelite
11	3-.25 each	Metal
12	1, .25, .1 (50-60 cycles)	Metal
13	1, .25, .25 (25-40 cycles)	Metal
14	6 (50-60 cycles)	Electrolytic
15	6 (50-60 cycles)	Electrolytic
16	10 (25-40 cycles)	Electrolytic
17	14 (25-40 cycles)	Electrolytic

No. on Figs. 1, 2 and 3	Terminal	Power (Watts)	Resistance (Ohms)	Body	Tip	Dot
1	1	1	180		Long Tubular	
2	2	1	60			
3	3	1	3500			
4	4	1	5,000	Green	Black	Red
5	5	1	5,000	Green	Black	Red
6	6	1	10,000	Brown	Black	Orange
7	7	1	13,000	Brown	Orange	Orange
8	8	1	25,000	Red	Green	Orange
9	9	1	25,000	Red	Green	Orange
10	10	1	32,000	Orange	Red	Orange
11	11	1	51,000	Green	Brown	Orange
12	12	1	51,000	Green	Brown	Orange
13	13	1	70,000	Violet	Black	Orange
14	14	1	99,000	White	White	Orange
15	15	1	99,000	White	White	Orange
16	16	1	240,000	Red	Yellow	Yellow
17	17	1	240,000	Red	Yellow	Yellow
18	18	1	490,000	Yellow	White	Yellow
19	19	1	490,000	Yellow	White	Yellow
20	20	1	2,000,000	Red	Black	Green

Condenser Data


Resistor Data

PHILCO RADIO & TELEVISION CORP.


SPECIAL NOTICE*****

Cut up this page and paste the respective chassis layouts upon the pages in the Perpetual Trouble Shooter's Manual which carry the models shown upon this page.


COMPENSATING CONDENSERS

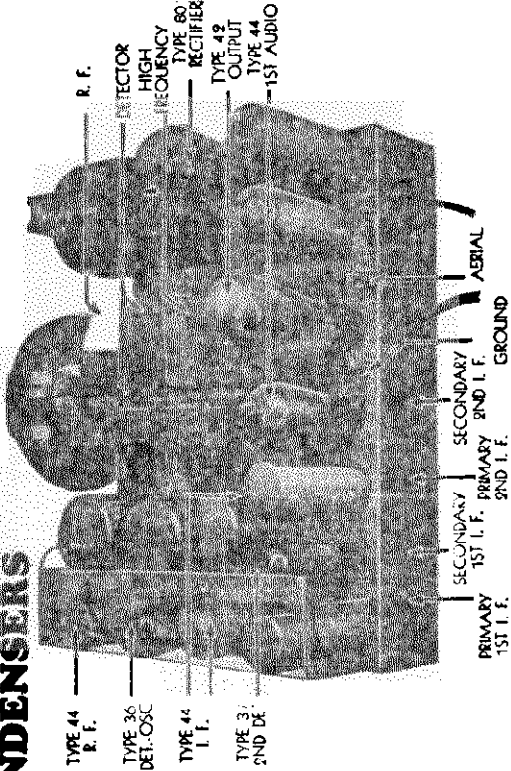


MODEL 70
with Automatic Volume Control---Same Compensating Condenser Locations.
Adjust I. F. at 260 K.C.

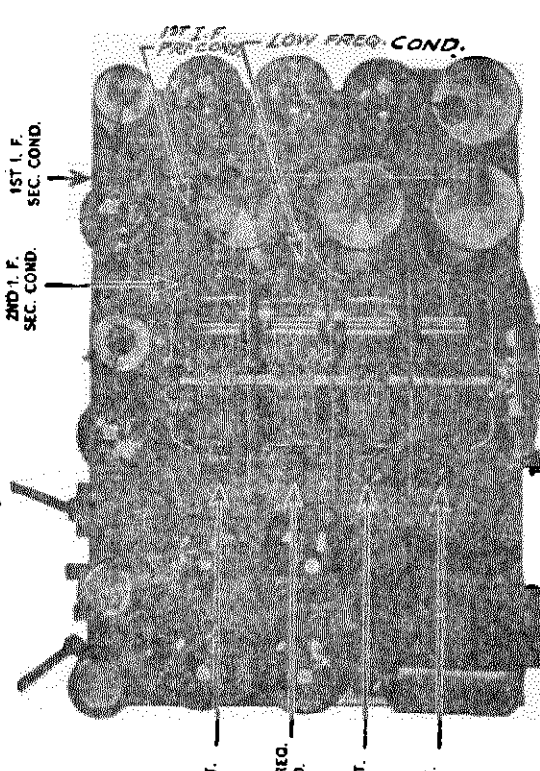

MODEL 71
with Automatic Volume Control---Same Compensating Condenser Locations.
Adjust I. F. at 175 K.C.

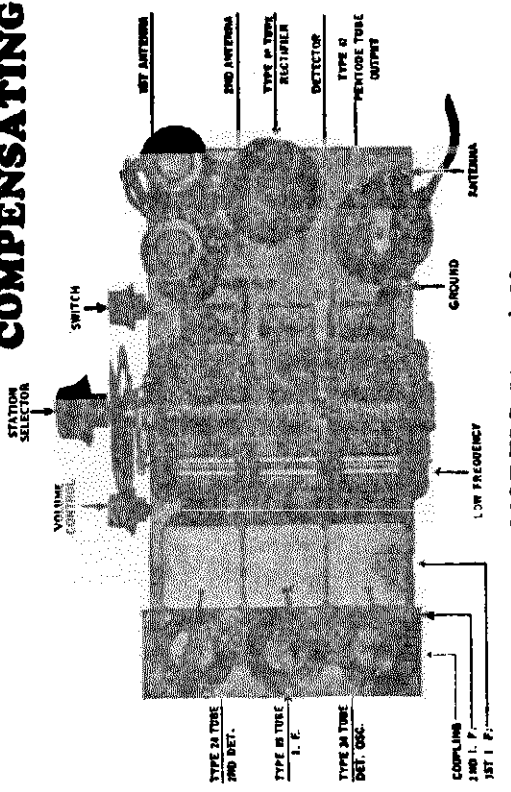

MODELS 51 and 52
Adjust I. F. at 175 K.C.

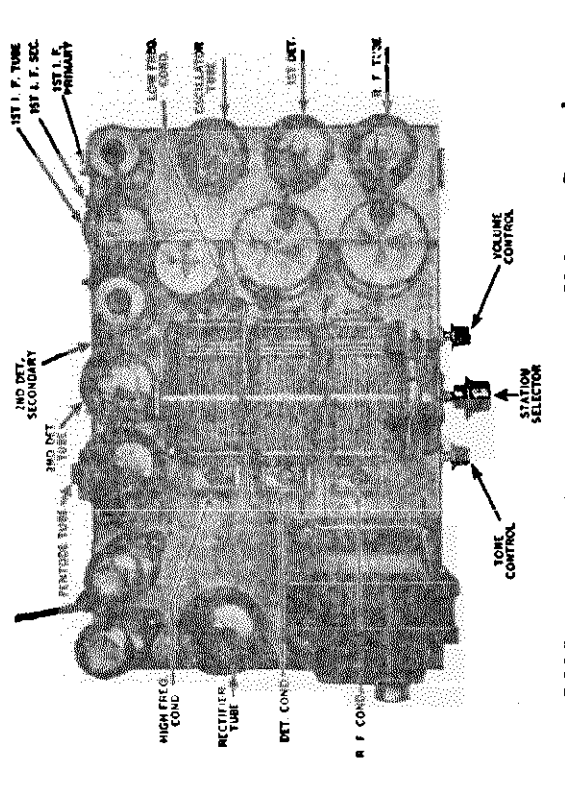

MODEL 70 without Automatic Volume Control.
Adjust I. F. at 260 K.C.

MODEL 90 with Push-Pull 45's Output
MODEL 90 with Single Pentode Output---Same Compensating Condensers per Locations.

PHILCO RADIO & TELEVISION CORP.

SPECIAL NOTICE*****

Cut up this page and paste the respective chassis layouts upon the pages in the Perpetual Trouble Shooter's Manual which carry the models shown upon this page.


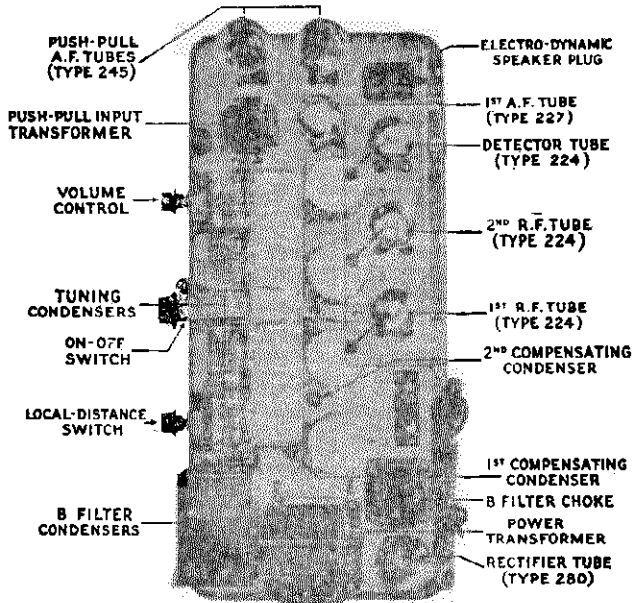




Fig. 1

The Model 76 is for use on 100 to 135 volts, 50 or 60 cycle alternating current.

Model 76

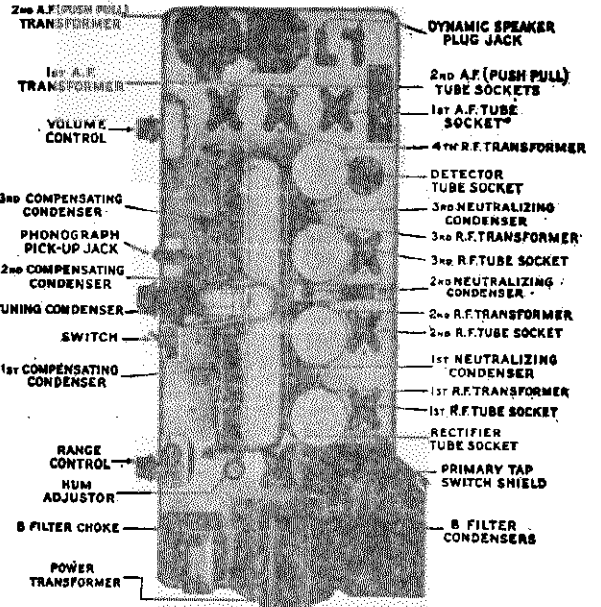



Models 86 and 82

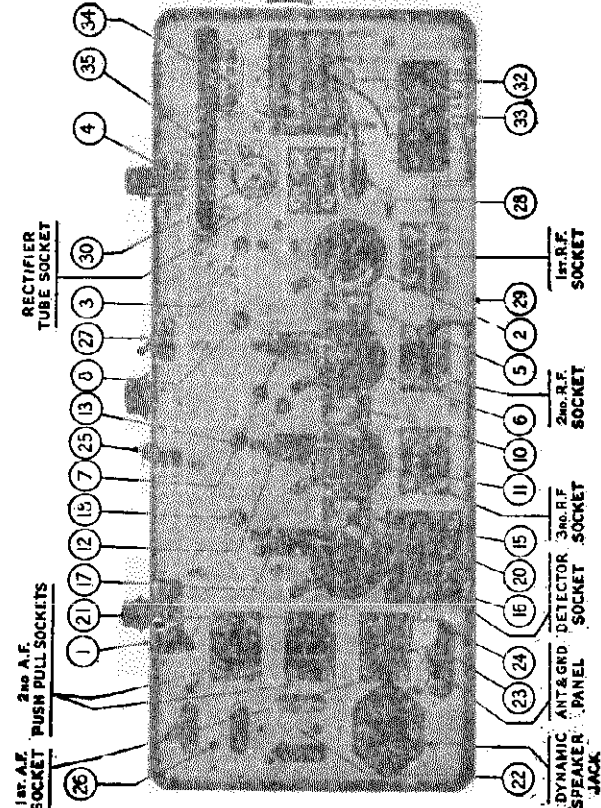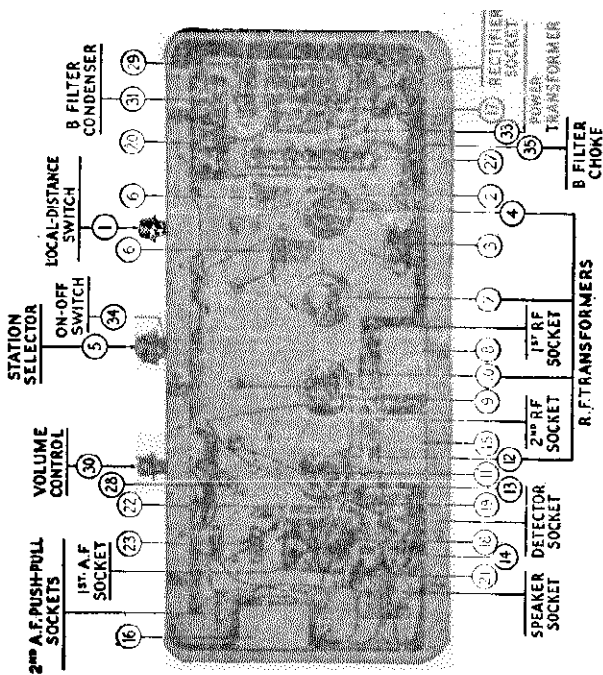

PHILCO RADIO & TELEVISION CORP.



SPECIAL NOTICE *****

Cut up this page and paste the respective chassis layouts upon the pages in the Perpetual Trouble Shooter's Manual, which carry the models shown upon this page.

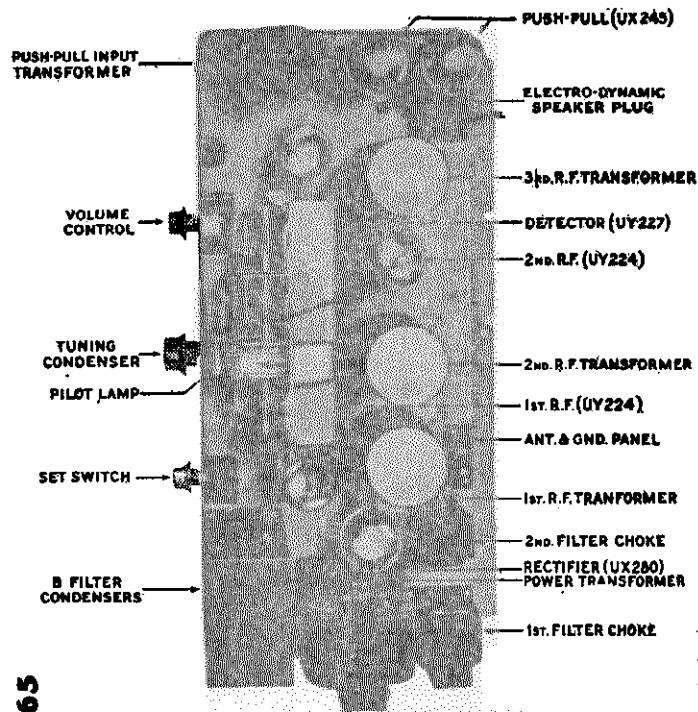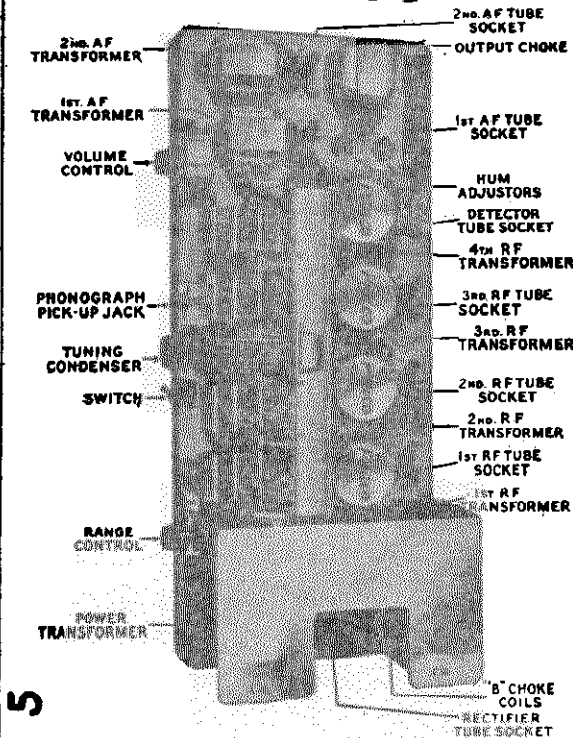

SERIES 5


Model 65

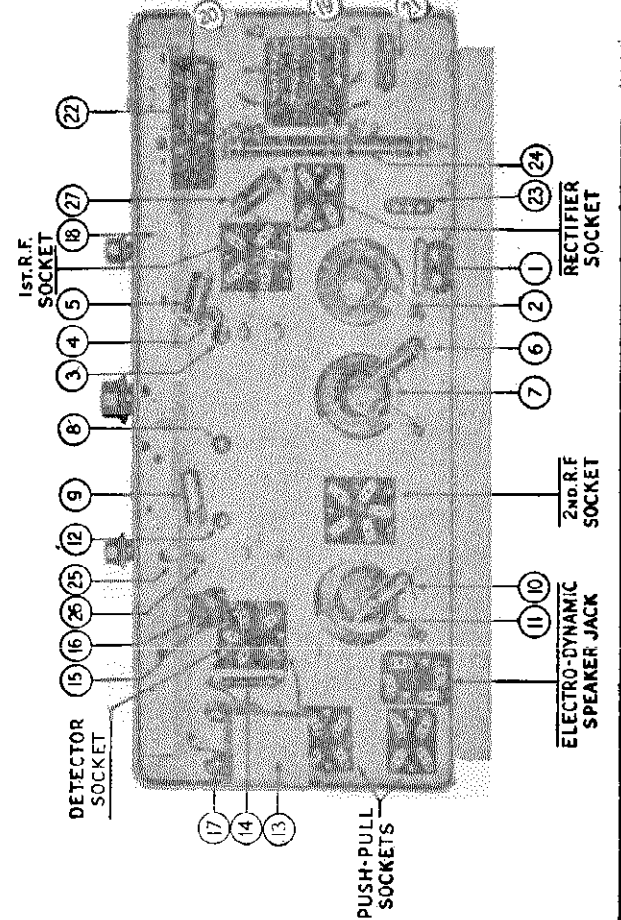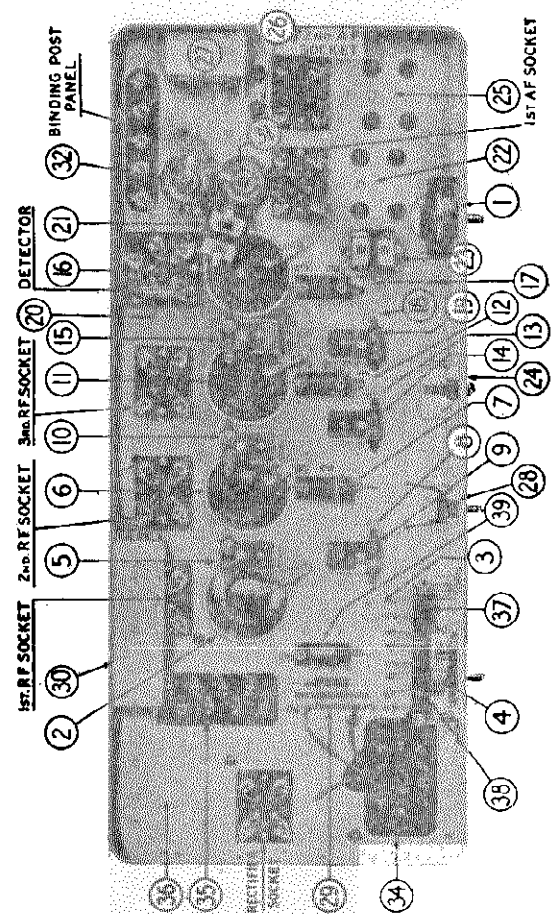


PHILCO RADIO & TELEVISION CORP.

SPECIAL NOTICE*****


Cut up this page and paste the respective chassis layouts upon the pages in the Perpetual Trouble Shooter's Manual which carry the model shown upon this page.

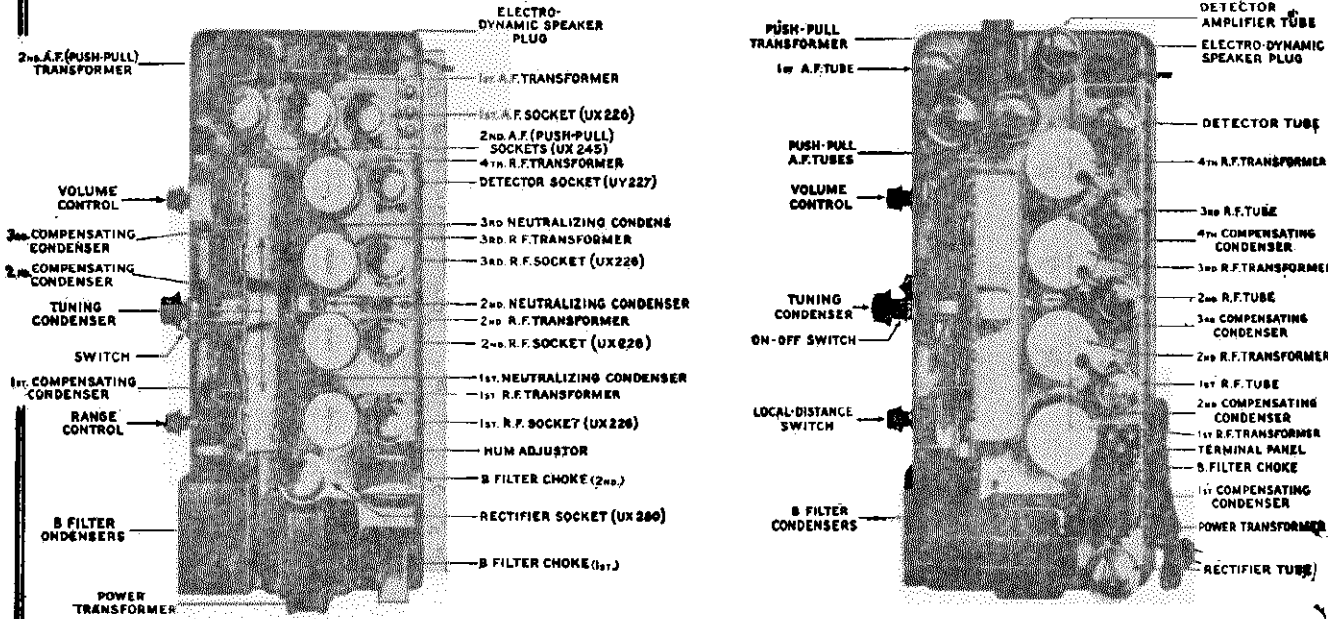

Model 87

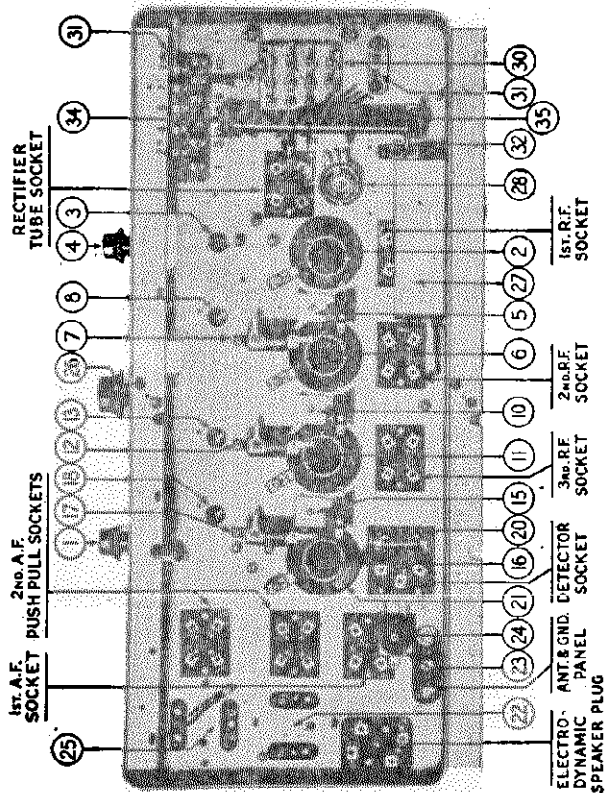


Model 95

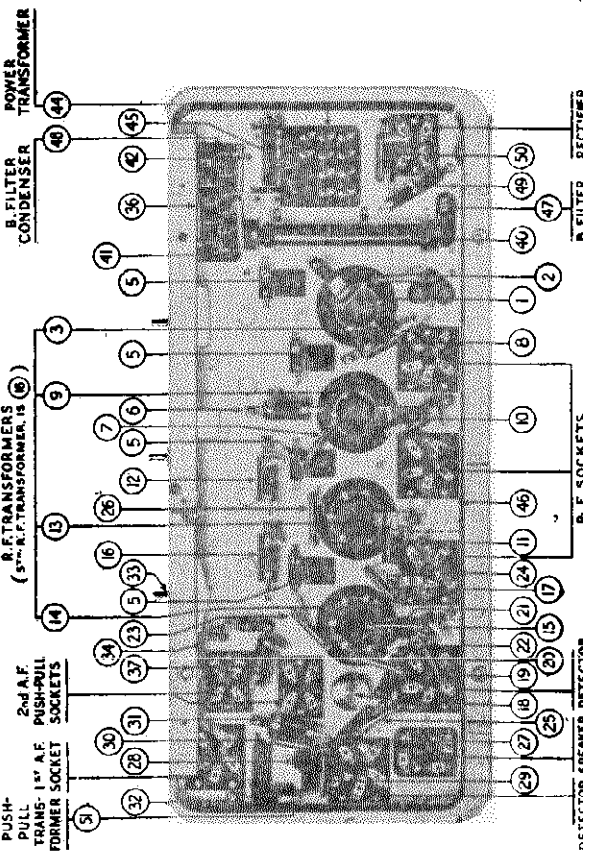


PILOT RADIO & TUBE CORP.

MODEL Dual Wave Midge
200-2000 meter:
MODEL S-141
MODEL K-139

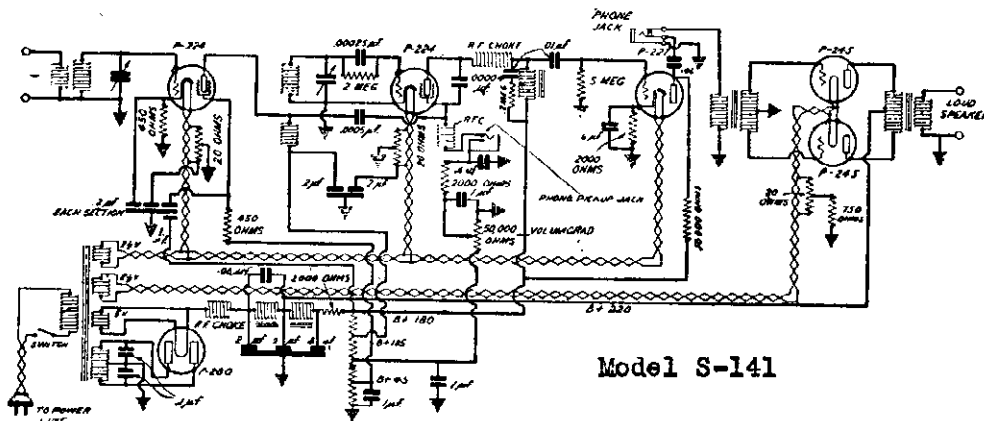


Model S-141

This schematic diagram of the Universal is a functional hook-up, and does not show the actual connections to the cam switches.

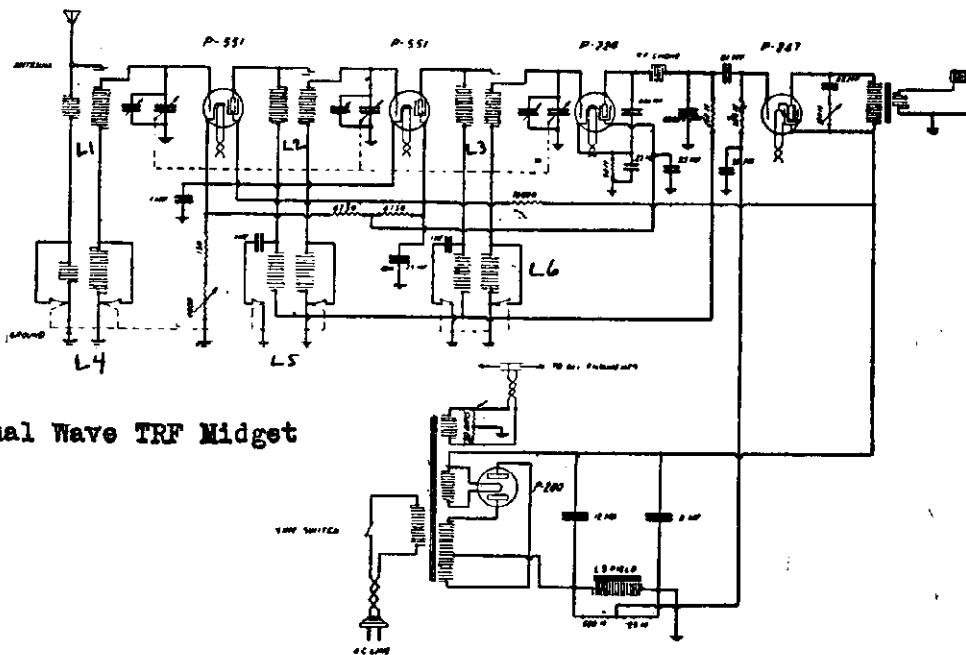


Model Dual Wave TRF Midget

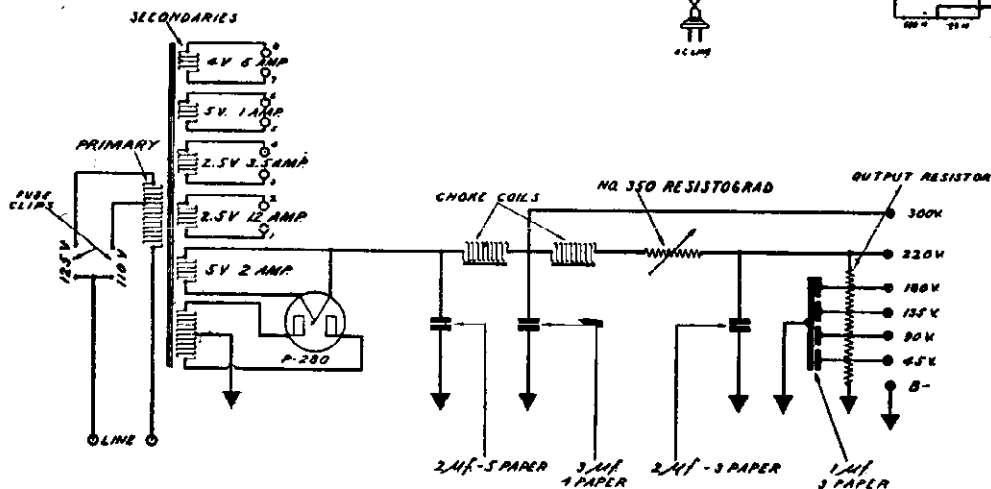

Model K-139 Pack


PILOT RADIO & TUBE CORP.

MODEL C-153, C-11
 (With 2-'45s)
 10 Tube Super

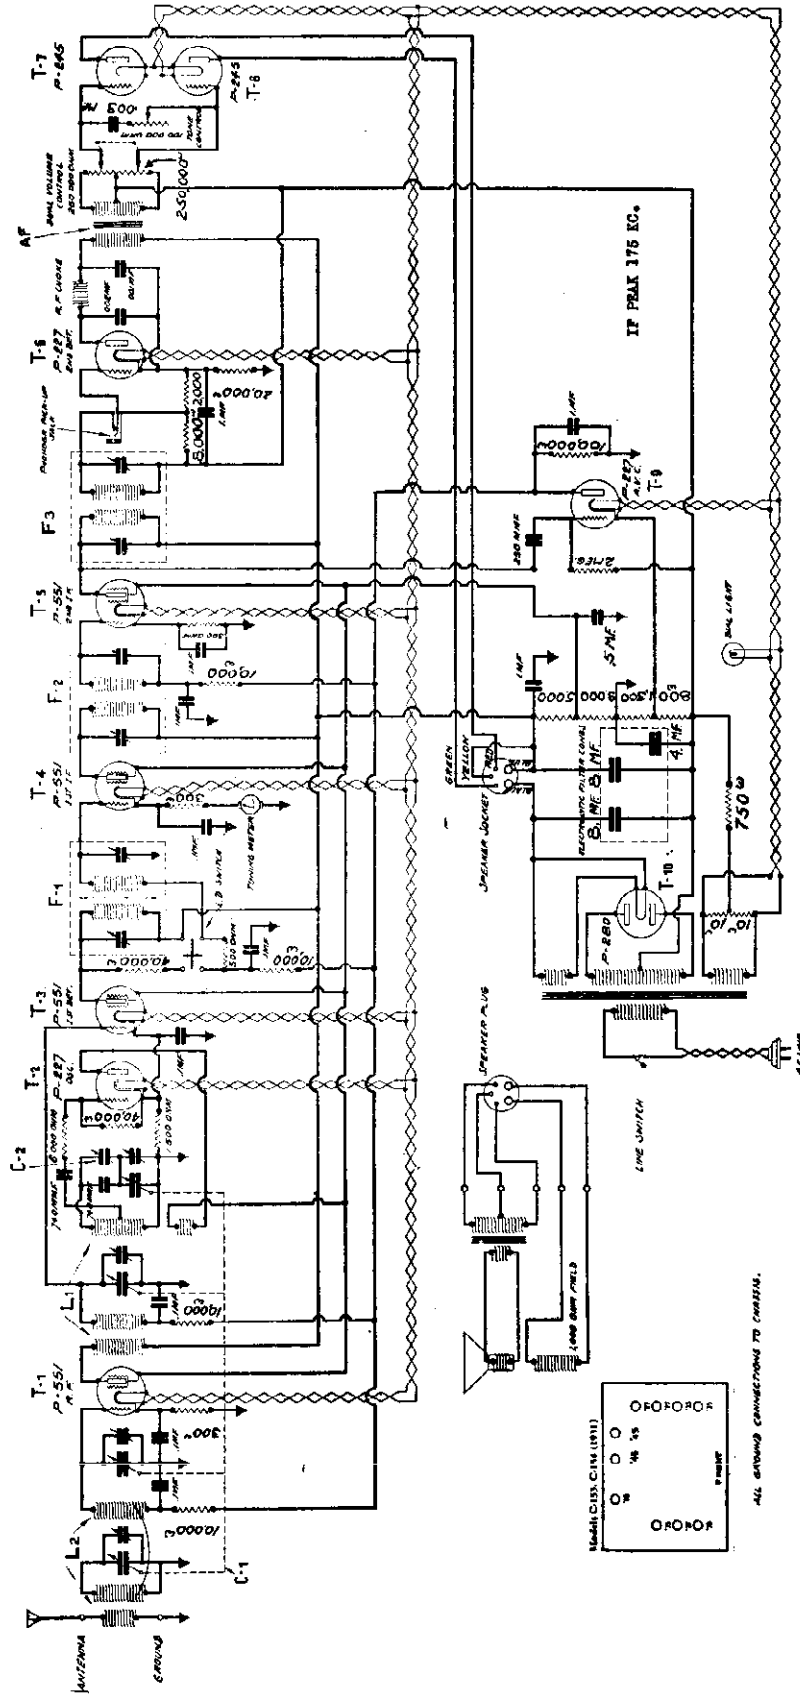

MODEL DC Midget
S-156, S-158

PILOT RADIO & TUBE CORP.

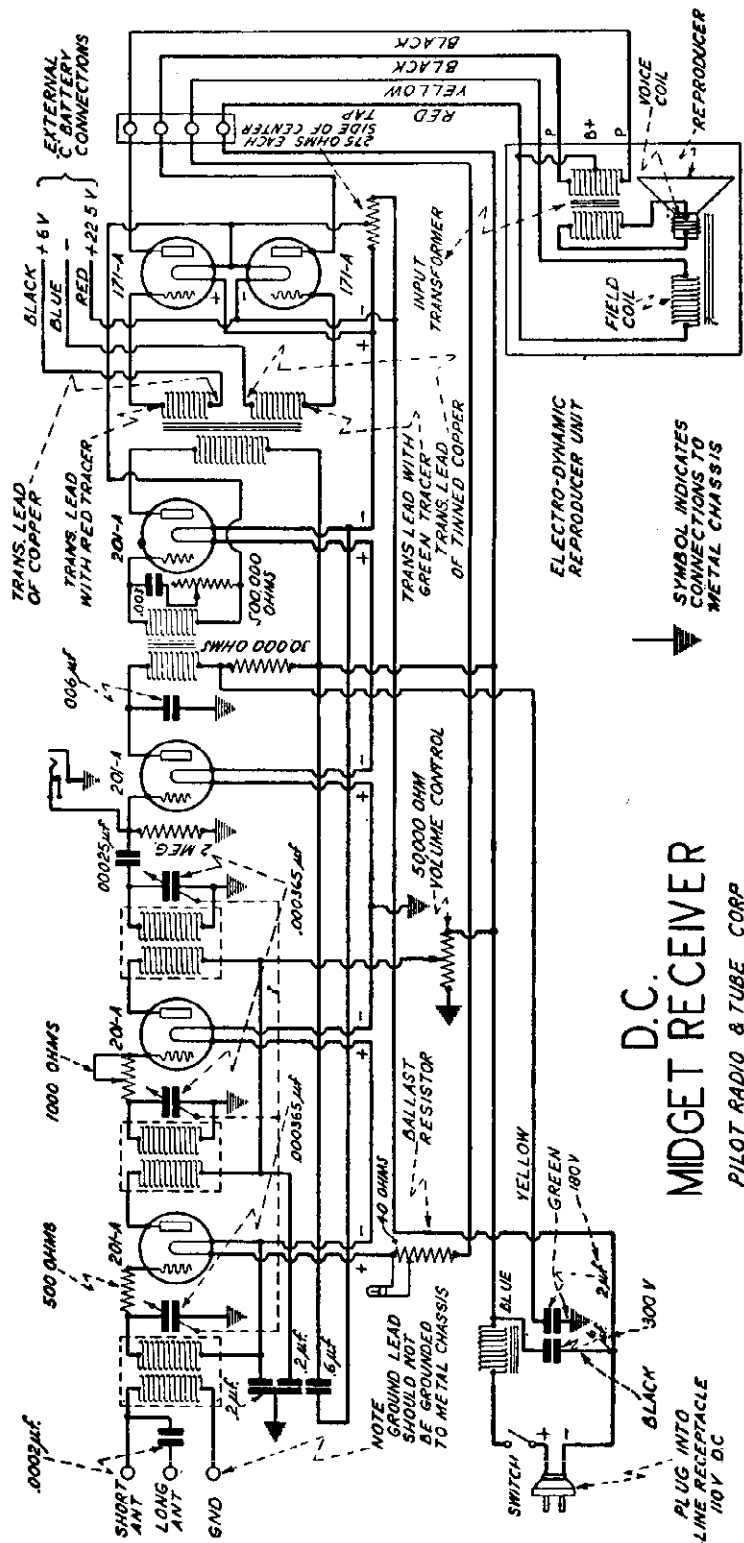

D.C.
MIDGET RECEIVER
PILOT RADIO & TUBE CORP

Every direct current receiver shipped from the factory is supplied with a heavy lead cap which should be placed over the detector tube to prevent microphonic howling. Some tubes are more susceptible to howling than others, so it is a good idea to switch the 201-A's around until the quietest one is found.

OSCILLATION CONTROL
Oscillation adjustment is provided by means of the variable grid suppressor mounted in back of the main tuning condenser. The set will tend to oscillate more easily as the adjustment screw is turned in. It should be adjusted for best results with the tuning dial set at about 1000 kilocycles. In some cases greater sensitivity can be obtained by the use of 112-A tubes instead of 201-A tubes in the R.F. and detector circuits. If these are used, the grid suppressor must again be adjusted.

The dial light is a six volt flashlight bulb. It is connected across part of the ballast resistor, which is the long unit mounted on the under side of the chassis in front of the tone control. The phonograph pick-up is connected directly across the grid leak of the detector tube.

Model Midget DC

2 AF	1 AF	DET	1 AF
71A	71A	71A	71A
71A	71A	71A	71A

FRONT

SPECIAL NOTE
A slight change was made in the D.C. set. The ground binding post has been replaced by a red flexible wire 3 1/2 feet long, to which the ground wire should be spliced. This arrangement will prevent accidental contact of the ground wire with the chassis, which always results in one or more blown out tubes. The receiver otherwise is exactly the same as before.

R. C. A. VICTOR CO., INC.

MODEL R-4, R-6 AC
Chassis
Voltage

Service work in conjunction with this receiver will be very similar to that of other table type receivers. However, there are several new features of this model which require some consideration.

The second I.F. transformer in this receiver is of the untuned variety, making the set slightly less sensitive and selective than the R-7. This decreased selectivity permits the omission of the 600 K.C. adjustable capacitor used on the R-7, R-10 and other Super-Heterodyne receivers. When alignment adjustments are necessary, it is therefore only necessary to tune one I.F. transformer and the three tuning capacitors. The I.F. transformer is adjusted at 175 K.C. and the tuning capacitors at 1400 K.C. In the case of the latter, the dial should be set at 1400 as well as the oscillator and the three screw adjusted for maximum output. This will permit the dial to read very accurately.


RADIOTRON SOCKET VOLTAGES

120 Volt A. C. Line



VOLUME CONTROL AT MINIMUM

VOLUME CONTROL AT MAXIMUM


Resistor No.	Cathode to Heater Volts, D. C.	Cathode or Filament to Control Grid Volts, D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Cathode or Filament to Plate Volts, D. C.	Plate Current M. A.	Screen Current M. A.	Heater or Filament Volts, A. C.	Radiotron No.	Cathode to Heater Volts, D. C.	Cathode or Filament to Control Grid Volts, D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Cathode or Filament to Plate Volts, D. C.	Plate Current M. A.	Screen Current M. A.	Heater or Filament Volts, A. C.
1. R. F.	50	50	60	235	0	0	2.66	1. R. F.	3.0	3.0	65	260	3.0	0.5	2.66
2. Osc.	50	0	—	55	4.5	—	2.66	2. Osc.	3.0	0	—	60	5.0	—	2.66
3. 1st Det.	10	9	100	260	1.0	0.25	2.66	3. 1st Det.	6.0	5.5	60	260	0.75	0.25	2.66
4. I. F.	50	50	60	235	0	0	2.66	4. I. F.	3.0	3.0	65	260	3.0	0.5	2.66
5. 2d Det.	25	10	—	250	1.0	—	2.66	5. 2d Det.	25	10.0	—	250	1.0	—	2.66
6. Pwr.	—	10	290	280	35	—	2.66	6. Pwr.	—	10.0	290	280	35	—	2.66

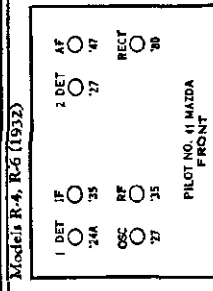



INTERNAL CONNECTIONS OF CAPACITOR PACK

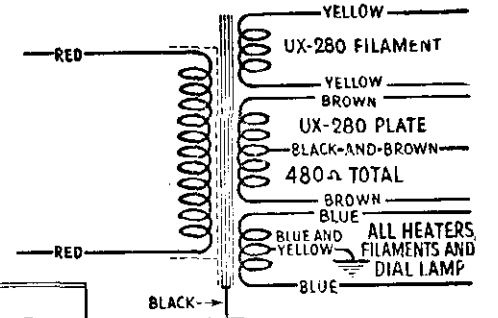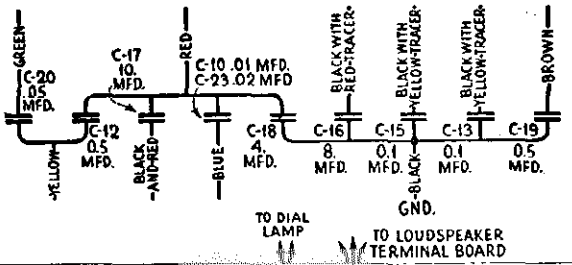

INTERNAL CONNECTIONS OF POWER TRANSFORMER

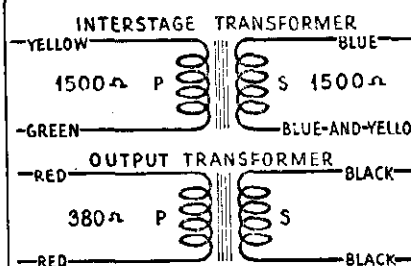

INTERNAL CONNECTIONS OF AUDIO PACK

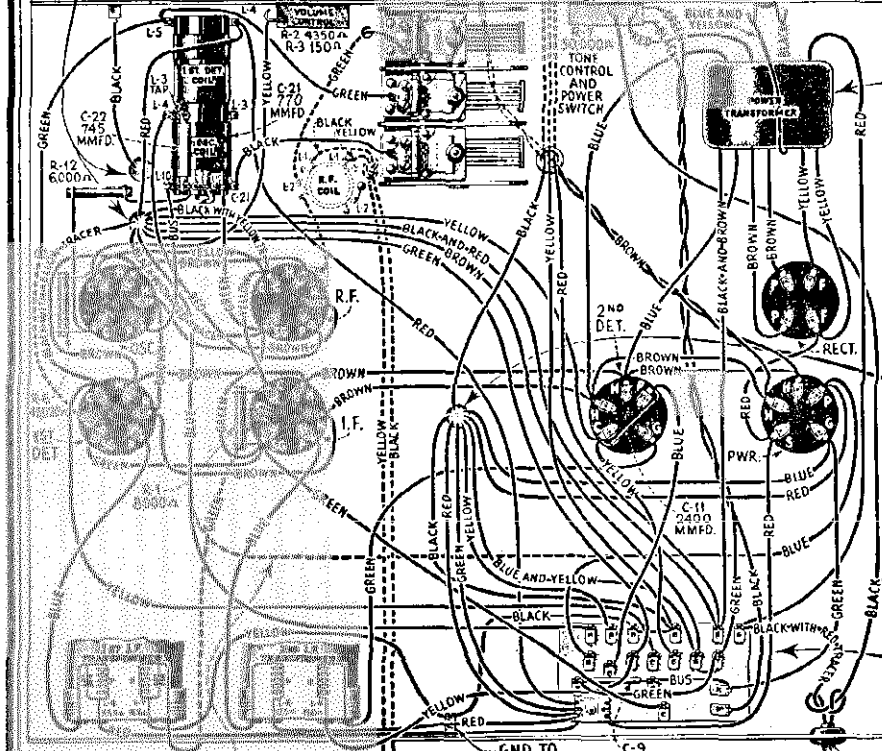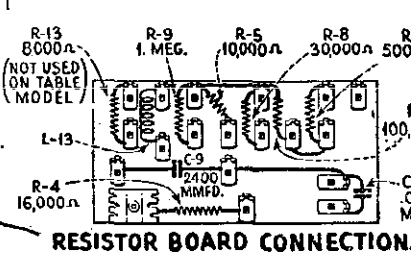


DOTTED CONNECTION USED ON TABLE MODEL ONLY.

TO GND. TO ANT. GND. TO FRAME C-9 2400 MMFD



MODEL R-4, R-6
Schematic
Parts List

R. C. A. VICTOR CO., INC.

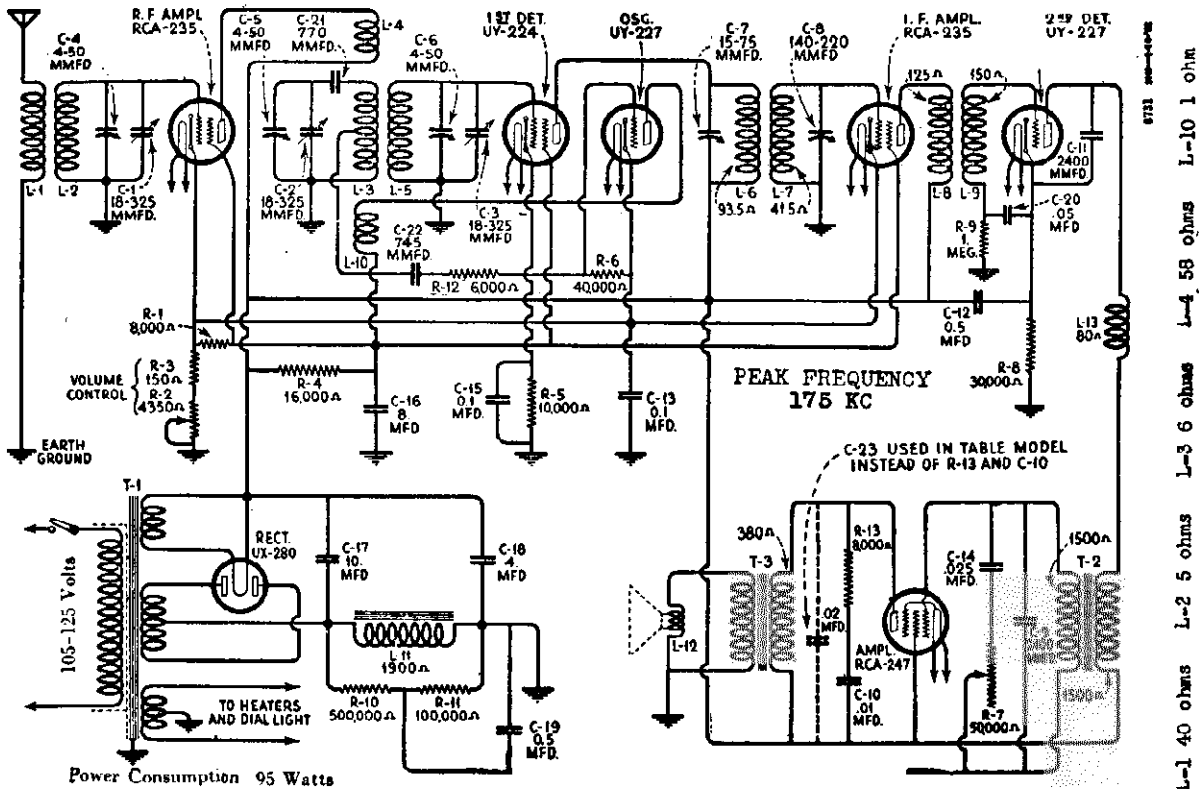

REPLACEMENT PARTS

Stock No.	DESCRIPTION	List Price	Stock No.	DESCRIPTION	List Price	Stock No.	DESCRIPTION	List Price
2145	PARTS COMMON TO R-4 AND R-6		8839	RECEIVER PARTS SPECIAL FOR R-4		8839	RECEIVER PARTS SPECIAL FOR R-4	
2146	Resistor—5000 ohms—Carbon type—1 watt—Package of 5	\$3.00	8840	Capacitor—Comprising one 0.05 mfd., two 0.5 mfd., one 100 mfd., one 10.0 mfd., one 0.01 mfd., one 0.1 mfd., and two 0.1 mfd. capacitors in metal container	\$4.95	8840	Capacitor—Comprising one 0.05 mfd., two 0.5 mfd., one 100 mfd., one 10.0 mfd., one 0.01 mfd., one 0.1 mfd., and two 0.1 mfd. capacitors in metal container	\$4.95
2147	Socket—Dial lamp socket	.50	8841	Transformer—Audio transformer assembly—Comprising interstage and output transformer	4.50	8841	Transformer—Audio transformer assembly—Comprising interstage and output transformer	4.50
2149	Cap—Grid condenser cap—Package of 5	1.50	6183	RECEIVER PARTS SPECIAL FOR R-6		6183	RECEIVER PARTS SPECIAL FOR R-6	
2815	Knob—Tuning control—Volume control or tone control knob—Package of 5	1.50	7143	Resistor—2,000 ohms—Carbon type—½ watt—Package of 5	2.00	7143	Resistor—2,000 ohms—Carbon type—½ watt—Package of 5	2.00
2881	Bracket—Dial lamp bracket—Package of 5	.50	8846	Transformer—Audio transformer assembly—Comprising interstage and output transformer	3.85	8846	Transformer—Audio transformer assembly—Comprising interstage and output transformer	3.85
2883	Socket—Fire contact Radiocore socket—Complete with isolation—5 used	.50	8975	Capacitor—Comprising one 0.05 mfd., two 0.5 mfd., one 100 mfd., one 10.0 mfd., one 0.01 mfd., one 0.1 mfd., and two 0.1 mfd. capacitors in metal container	8.95	8975	Capacitor—Comprising one 0.05 mfd., two 0.5 mfd., one 100 mfd., one 10.0 mfd., one 0.01 mfd., one 0.1 mfd., and two 0.1 mfd. capacitors in metal container	8.95
2963	Resistor—8000 ohms—Carbon type—1 watt—Package of 5	1.50	8985	R-4 LOUDSPEAKER PARTS		8985	R-4 LOUDSPEAKER PARTS	
2968	Socket—Four contact Radiocore socket—Complete with monitor—1 used	.50	8182	Rivet—Cone retaining ring mounting rivet—Pack size of 100	.50	8182	Rivet—Cone retaining ring mounting rivet—Pack size of 100	.50
2991	Transformer—1st intermediate transformer	3.00	7462	Screw assembly—Speaker mounting screw assembly—Comprising 4 screws, 4 washers, 4 spacers and 4 nuts—Package of 1 set	.50	7462	Screw assembly—Speaker mounting screw assembly—Comprising 4 screws, 4 washers, 4 spacers and 4 nuts—Package of 1 set	.50
2994	Coil—R.F. choke coil	.60	8702	Ring—Cone retaining ring	7.50	8702	Ring—Cone retaining ring	7.50
2995	Volume control—Volume control complete with mounting nut—Package of 5	6.00	8845	Coil assembly—Speaker field coil assembly—Comprising field coil, cone bracket and magnet	.40	8845	Coil assembly—Speaker field coil assembly—Comprising field coil, cone bracket and magnet	.40
2997	Coil—R.F. coil	1.00	8184	Board—Terminal board complete with 3 terminals and mounting rivet—Package of 5	4.50	8184	Board—Terminal board complete with 3 terminals and mounting rivet—Package of 5	4.50
3000	Shaft—Tuning condenser drive shaft complete	.50	8287	Screw assembly—Speaker mounting screw assembly—Comprising 4 screws, 4 washers, 4 spacers and 4 nuts—Package of 1 set	.50	8287	Screw assembly—Speaker mounting screw assembly—Comprising 4 screws, 4 washers, 4 spacers and 4 nuts—Package of 1 set	.50
3003	Capacitor—Resistor chassis (space) rubber coupling—Package of 4	.40	8186	Board—Terminal board complete with 3 terminals and mounting rivet—Package of 5	4.50	8186	Board—Terminal board complete with 3 terminals and mounting rivet—Package of 5	4.50
3048	Resistor—100,000 ohms—Carbon type—½ watt—Package of 5	.50	7145	Coil—Speaker field coil assembly—Comprising coil, cone housing and magnet	5.00	7145	Coil—Speaker field coil assembly—Comprising coil, cone housing and magnet	5.00
3056	Shield—Radiocore shield—1 used—Package of 2	2.50	8559	Ring—Cone retaining ring	.40	8559	Ring—Cone retaining ring	.40
3060	Resistor—20,000 ohms—Carbon type—1 watt—Package of 5	.40	8601	Cone—Speaker paper cone—Package of 5	11.00	8601	Cone—Speaker paper cone—Package of 5	11.00
3076	Resistor—1 megohm—Carbon type—½ watt—Package of 5	2.50	X-33	R-4 CABINET PARTS		X-33	R-4 CABINET PARTS	
3077	Resistor—10,000 ohms—Carbon type—½ watt—Package of 5	2.50	6113	Back board and grille cloth	.45	6113	Back board and grille cloth	.45
3078	Resistor—10,000 ohms—Carbon type—½ watt—Package of 5	2.50	7137	Foot—Felt foot—Package of 15	.50	7137	Foot—Felt foot—Package of 15	.50
3081	Resistor—16,000 ohms—Carbon type—½ watt	.60	9403	Resistor—Tuning dial potentiometer—Complete with mounting screws	.90	9403	Resistor—Tuning dial potentiometer—Complete with mounting screws	.90
3083	Board—Resistor board complete—Low resistors, resistors and coil	1.00	X-34	Cabinet—Cabinet complete low equipment	13.00	X-34	Cabinet—Cabinet complete low equipment	13.00
3235	Tone control—Tone control complete with mounting nut	1.00	X-35	Foot—Front post—R.R.	2.15	X-35	Foot—Front post—R.R.	2.15
3253	Resistor—100,000 ohms—Carbon type—½ watt—Package of 5	2.50	X-41	Post—Back post—R.R.	.50	X-41	Post—Back post—R.R.	.50
6179	Terminal—Single ground terminal—Complete with mounting rivet—Package of 5	.75	X-36	Foot—Front post—L.H.	2.15	X-36	Foot—Front post—L.H.	2.15
6180	Capacitor—0.025 mfd.—Package of 2	.50	X-37	Foot—Back post—L.H.	2.15	X-37	Foot—Back post—L.H.	2.15
6181	Capacitor—770 mfd.—Package of 5	1.30	X-38	Control panel	4.40	X-38	Control panel	4.40
6183	Rubber strip—Rubber damping strip bonded inside of chassis shield—Package of 4	1.00	X-39	Mounting—Control panel top mounting	1.60	X-39	Mounting—Control panel top mounting	1.60
7064	Card—Power cord	.50	X-40	Top	6.45	X-40	Top	6.45
7241	Capacitor—8 gang tuning capacitor	6.00	X-41	Speaker	5.55	X-41	Speaker	5.55
7299	Capacitor—715 mfd.	.70	X-42	Foot	1.10	X-42	Foot	1.10
7436	Coil—1st detector and oscillator coil	3.20	X-43	Back board with grille cloth	.90	X-43	Back board with grille cloth	.90
8337	Support—Receiver chassis metal mounting support—Package of 4	.70	7437	Resistor—Tuning dial potentiometer—Complete with mounting screws	9.55	7437	Resistor—Tuning dial potentiometer—Complete with mounting screws	9.55
8841	Transformer—84 intermediate transformer	2.50	9404	Cabinet—Cabinet complete low equipment	6.45	9404	Cabinet—Cabinet complete low equipment	6.45
8843	Transformer—Power transformer—105-125 volts, 50-60 cycles	6.25						
8844	Transformer—Power transformer—105-125 volts, 25-60 cycles	9.55						
8846	Transformer—Power transformer—250 volts, 60 cycles	6.45						

6179 800-1000 L-1 40 ohms L-2 2 ohms L-3 6 ohms L-4 58 ohms L-5 10 1 ohm L-6 93.5 ohms L-7 41.5 ohms L-8 30000 ohms L-9 125 ohms L-10 1 ohm L-11 2400 MFD L-12 380 ohms L-13 60 ohms

MODEL R-4, R-6 AC
Resistance Test Data



R. C. A. VICTOR CO., INC.

All tubes removed from sockets. AC plug removed from power supply line.
Field coil disconnected. Volume Control maximum unless otherwise stated

From Chassis To	Correct		Incorrect
Aerial to Ground	40	ohms	
Chassis to			
RF Control Grid	1	ohm	TC- rf Cg-Y
RF Cathode (V.C.Min)	4,500	ohms	FC- rf K-Y (8 mfd)
RF Cathode (V.C.Max)	150	ohms	FC- rf K-Y (8 mfd)
RF Screen Grid	8,150	ohms	FC- rf Sg-Y (8 mfd)
RF Plate	24,208	ohms	FC-'80 F-Y (4 mfd) See RF Screen
RF Plate to '80 Fil	58	ohms	
1 Detector Control Grid	4.5 or 5	ohms	TC - 1 D Cg-Y
1 Detector Cathode	10,000	ohms	BC- 1 DK-Y (.1 mfd)
1 Detector Screen	8,150	ohms	See RF Screen
1 Detector Plate	24,243.5	ohms	FC-'80 F-Y (4.mfd) See RF Plate
1 Detector Plate to '80 Fil	93.5	ohms	TC- IF Tr
Oscillator Control Grid	40,150	ohms	Osc Grid Condenser
Oscillator Cathode	150	ohms	BC- Osc K-Y (.1 mfd)
Oscillator Plate	24,151	ohms	See RF Plate
Oscillator Plate - RF Sg	1	ohm	
IF Control Grid	41.5	ohms	TC-IF Cg-Y
IF Cathode	150	ohms	See RF Cathode
IF Plate	24,275	ohms	See RF Plate
IF Plate to '80 Fil	125	ohms	TC- IF Tr
2 Detector Control Grid	1,000,150	ohms	BC- 2 DK-Y (.5 mfd)
2 Detector Cathode	30,000	ohms	BC- 2 DK-'80F (.5 mfd) BC- 2 DK- 2 DP (.0024 mfd)
2 Detector plate	25,730	ohms	BC- 2 DP- 2 DK (.0024 mfd) FC- 80F-Y (4.mfd) FC- rf Sg-Y (8 mfd)
2 Detector Plate to '80 Fil	1,580	ohms	
'47 Control Grid	101,500	ohms	BC- AF Tr-Y (.5 mfd) Tone Control Condenser
'47 Screen Grid	24,150	ohms	See RF Plate
'47 Screen to '80 Fil	0	ohms	
'47 Plate	4,530	ohms	BC Across AF Tr in R 4, Harmonic condenser
'47 Plate to 80 Fil	380	ohms	
'80 Anode	600,240	ohms	
'80 Anode to 80 Anode	480	ohms	
'80 Fil to '80 Anode	624,390	ohms	FC- 80 Fil (10 mfd)
Across field coil only	1,900	ohms	
Across oscillator winding only	6	ohms	

R. C. A. VICTOR CO., INC.

MODEL R-5-X AC
Schematic
Chassis
Voltage

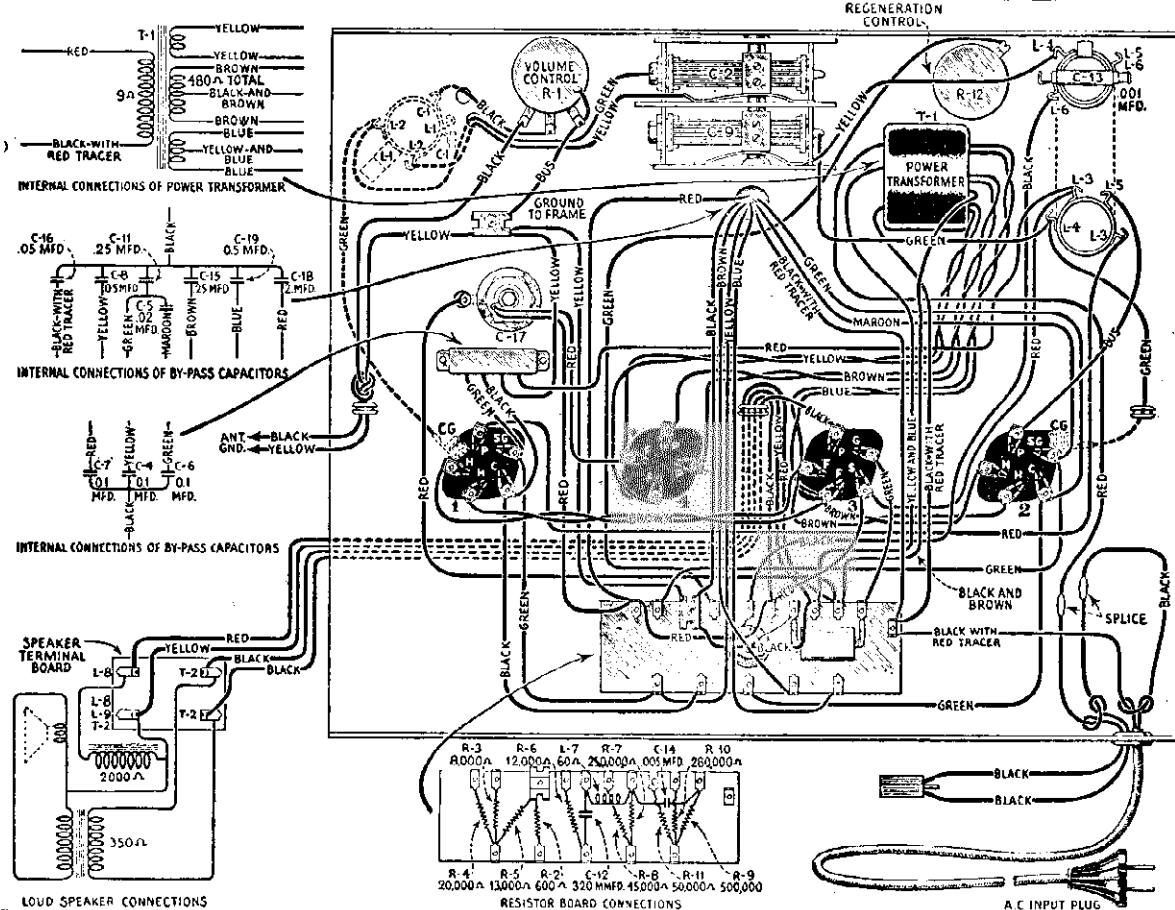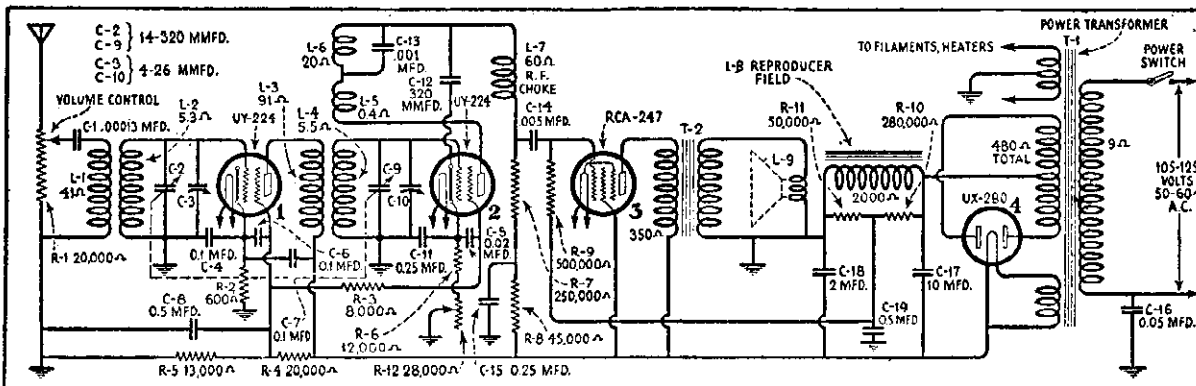

These are readings obtained with the usual Set Analyzers and are not true readings of the voltages at which the Radiotrons operate.

Radiotron No.	Heater to Cathode Volts	Cathode or Filament to Control Grid Volts	Cathode or Filament to Screen Grid Volts	Cathode or Filament to Plate Volts	Plate Current M. A.	Heater Volts
1	3.0	3.0	85	225	4.0	2.2
2	7.0	7.0	65	100	0.25	2.2
3	—	2.0	225	215	30.0	2.2


R. C. A. VICTOR CO., INC.

MODEL R-5
Resistance Data
MODEL R-5-X
Resistance Data

Model R-5-X

All tubes removed and AC plug disconnected - Speaker field red and yellow leads opened


From Chassis To	Correct	Incorrect
Aerial (V.C.Max)	20,000 ohms	Antenna BLC
RF Control Grid	5.3 ohms	TC-Y
RF Cathode	600 ohms	BC-Y
RF Screen Grid	13,000 ohms	BC-Y
RF Plate	33,091 ohms	BC- rf Sg - rf K BC- D Sg - D K BC- rf P - rf K FC - Y (2 mfd)
Detector Control Grid	91 ohms	TC-Y
Detector Cathode (Reg. Max)	5.5 ohms	BC-Y
Detector Cathode (Reg. Min)	12,000 ohms	
Detector Plate	40,000 ohms	
	328,080 ohms	BC-Y (.25mfd-45000 ohm) FC-Y (2. mfd) BLC- 47 CG BC-DK 1.00032 mfd See Detector Plate
Detector Plate - '80 Fil	295,080 ohms	
'47 Control Grid	560,000 ohms	BC-Y (.5 mfd)
'47 Screen Grid	33,000 ohms	FC-Y (2. mfd)
'47 Plate	33,350 ohms	See '47 Sg
'47 Plate- '80 Fil	360 ohms	
'80 Plate	330,240 ohms	FC- (10 mfd)
'80 Plate to Plate	480 ohms	
AC Plug	0 ohms	BC-Y (.05 mfd)
Across AC Plug	9 ohms	
Across Speaker field	2,000 ohms	
Across Input RF Transformer Primary	41 ohms	

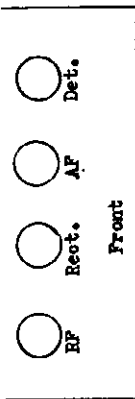

Model R-5

All tubes removed from receiver and AC plug disconnected from power supply line - Red and Yellow speaker field leads disconnected

From Chassis To	Correct	Incorrect
Aerial (V.C.Max)	20,000 ohms	Antenna BLC
RF Control Grid	5.3 ohms	TC-Y
RF Cathode	600 ohms	BC-Y
RF Screen Grid	13,000 ohms	BC-Y
RF Plate	33,091 ohms	BC- rf Sg - r f K BC- D Sg - D K
Detector Control Grid	91 ohms	TC-Y
Detector Cathode	5.5 ohms	BC-Y
Detector Screen Grid	12,000 ohms	
Detector Plate	21,000 ohms	
	328,080 ohms	BC-Y (.25 mfd .45000ohm) FC-Y (2. mfd) BLC- 47 CG BC- DK (.00032 mfd) See Detector Plate
Detector Plate - '80 Fil	295,080 ohms	
'47 Control Grid	560,000 ohms	BC-Y (.5 mfd)
'47 Screen Grid	33,000 ohms	FC-Y (2. mfd)
'47 Plate	33,350 ohms	See '47 Sg
'47 Plate to '80 Fil.	360 ohms	
'80 Plate	330,240 ohms	FC- (10 mfd)
'80 Plate to Plate	480 ohms	
AC Plug	0 ohms	BC-Y (.05 mfd)
Across AC Plug	9 ohms	
Across Speaker Field	2,000 ohms	
Input RF Transf Prim	41 ohms	

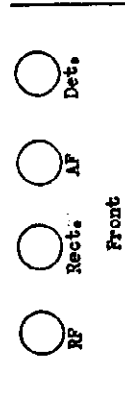

These are readings obtained with the usual Set Analyzers and are not true readings of the voltages at which the Radiotrons operate.

Radiotron No.	Heater to Cathode Volts -	Cathode or Filament to Control Grid Volts	Cathode or Filament to Screen Grid Volts	Cathode or Filament to Plate Volts	Plate Current M. A	Heater Volts
1	3.0	3.0	85	225	4.0	2.2
2	7.0	7.0	65	100	0.25	2.2
3	—	2.0	225	215	30.0	2.2

These are readings obtained with the usual Set Analyzers and are not true readings of the voltages at which the Radiotrons operate.


Radiotron No.	Heater to Cathode Volts	Cathode or Filament to Control Grid Volts	Cathode or Filament to Screen Grid Volts	Cathode or Filament to Plate Volts	Plate Current M. A.	Heater Volts
1	3.0	3.0	85	225	4.0	2.2
2	7.0	7.0	65	100	0.25	2.2
3	—	2.0	225	215	30.0	2.2

MODEL R-5-X
Parts List
Notes

R. C. A. VICTOR CO., INC.

Model R-5-X

Models R-5, R-5X (1931)

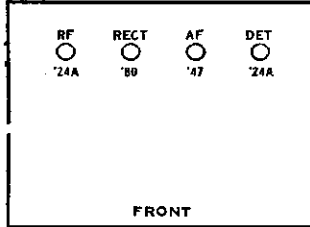

The antenna and ground are connected to each side of a 20,000 Ohm potentiometer. The moving contact of the potentiometer is connected to the primary of the first R.F. transformer through a .00013 MFD. condenser, the other side of the transformer being connected to ground. The action of the potentiometer, reducing the voltage applied to the grid of the first R.F. tube, constitutes that of a volume control. The secondary of the R.F. transformer is connected to the grid circuit of the R.F. Radiotron UY-224, which is tuned by one unit of the gang condenser. The plate circuit of this tube works into the primary coil of the 2nd R.F. transformer.

The detector is of the regenerative, grid bias type and its output is coupled by means of resistance coupling to the output Radiotron RCA-247. The regenerative feature of the detector is un-

usual in that it uses two regeneration coils. One of these resonates at a low frequency and improves the sensitivity at that end, while the other has but few turns and brings up the sensitivity at the high frequency end.

The output stage uses the RCA-247 Output Pentode which gives a high undistorted output—2.5 watts—together with a high gain in the stage.

The grid bias for this tube is obtained by using a portion of the drop across the reproducer field. Due to the fact that the plate current of the RCA-247 represents the greatest portion of the total plate current, using the drop across the field acts as a semi-self biasing arrangement.

Plate and grid supply to all tubes is supplied through the use of Radiotron UX-280. The filter is of the "brute force" type. The reproducer unit field coil functions as the reactor. One electrolytic 10 MFD. capacitor and one paper 2 MFD. capacitor act as filter capacitors.

LINE-UP CAPACITOR ADJUSTMENTS

Two adjustable capacitors are provided for aligning the two tuned circuits at the high frequency end of the scale. The following procedure may be used for making any readjustments that may be necessary.

A. Procure an Oscillator giving a modulated signal at exactly 1400 K.C. Also procure a special socket wrench such as RCA Victor Stock No. 3007.

B. An output indicator is necessary. This may be a current squared thermogalvanometer connected to the secondary of the output transformer in place of the cone coil or other types of output indicators.

C. Turn the station selector until the knob reads exactly 0. Then remove the chassis from the cabinet being careful not to disturb the setting of the dial. The gang condenser rotor plates should be fully meshed with the stator plates. If not, then the dial drum must be adjusted until such a condition exists. Replace the chassis in the cabinet.

D. Place the oscillator in operation at exactly 1400 K.C. and couple its output to the antenna lead. Set the dial scale at 85 and place the Radiolite in operation. Place a soft pad on the bench and turn the instrument on its side. Now with the special wrench, adjust each line-up capacitor until maximum output is obtained in the output meter. Be careful to adjust the volume control or oscillator output so that an excessive reading is not obtained. Go over each adjustment a second time to compensate for any interlocking of adjustments.

REPLACEMENT PARTS

Part No.	DESCRIPTION	List Price	Part No.	DESCRIPTION	List Price
2549	Resistor—250,000 Ohms—Carbon type—Package of 5.	\$3.00	3066	Resistor—12,000 Ohms—Carbon type—Package of 5.	\$2.50
2747	Cap—Control grid contactor cap—Package of 5.	.50	3067	Variable Resistor—Regeneration Control Variable Resistor complete with mounting washer and nut.	1.50
2954	Capacitor—By-pass capacitor pack containing three 0.1 Mfd. capacitors.	.75	5817	Resistor—20,000 Ohms—Carbon type.	.90
2955	Transformer—First R.F. transformer complete with mounting washer and nut.	1.50	7054	Cord—Power cord complete with male connector plug.	1.00
2956	Transformer—Second R.F. transformer complete with mounting washer and nut.	2.00	7229	Socket—Five prong Radiotron socket complete with insulating shield—3 used—Package of 2.	.50
2957	Capacitor 10 Mfd. electrolytic type Complete with terminal, insulating washer, mounting nut and lock washer.	3.00	7230	Socket—Four prong Radiotron socket complete with insulating shield—1 used—Package of 2.	.50
3069	Switch—Operating switch complete.	.60	7231	Capacitor—Filter and by-pass capacitor pack—Comprising one 0.05 mfd., two 0.5 mfd., two 0.25 mfd. and one 2.0 mfd. condensers.	2.50
2959	Volume control—20,000 Ohm Volume control complete with mounting washers and nut.	1.50	7232	Capacitor—2 gang variable tuning capacitor.	5.00
2960	Dial—Dial scale complete with set screws—Package of 2.	.50	7234	Transformer—Output transformer—With fibre terminal board.	1.50
2961	Coil—Detector plate R.F. choke coil.	.50	7236	Cone—Reproducer cone complete with voice coil and paper ring.	1.50
2962	Capacitor—0.005 Mfd. audio coupling capacitor.	.75	8669	Transformer—Power transformer—105-125 volt, 50-60 cycle—Complete with mounting washers and nuts.	6.00
2963	Resistor—8000 Ohms—Carbon type—Package of 5.	2.50	8670	Transformer—Power transformer—105-125 volt, 25-40 cycle—Complete with mounting washers and nuts.	9.00
2964	Resistor—13000 Ohms—Carbon type—Package of 5.	2.50	8671	Transformer—Power transformer—220 volts, 50-60 cycles—Complete with mounting washers and nuts.	8.00
2965	Resistor—600 Ohms—Carbon type—Package of 5.	2.50	10134	Resistor—Mi I-tapped filament resistor—Use I on early models only.	.50
2967	Resistor—45,000 Ohms—Carbon type—Package of 5.	2.50	SPECIAL PARTS SUPPLIED ON ORDER ONLY (Not to be stocked)		
2969	Resistor—50,000 Ohms—Carbon type—Package of 5.	2.50	2979	Board—Baffle board complete with grille cloth.	.75
2970	Resistor—500,000 Ohms—Carbon type—Package of 5.	2.50	2980	Escutcheon—Station selector escutcheon complete with mounting screws.	.75
2971	Resistor—280,000 Ohms—Carbon type—Package of 5.	2.50	3058	Board—Resistor mounting board—Less all resistors, capacitors and coils.	1.00
2972	Shield—Radiotron shield complete with mounting screw, washer and nut.	.50	7235	Coil—Field coil complete with bracket and cone ring.	2.00
2975	Rivet—Eyelet rivet for mounting cone—Package of 100.	.50	9321	Cabinet—Cabinet complete—Less all equipment.	7.25
2976	Knob—Volume control or Regeneration control knob—Package of 5.	1.50	9321	Chassis—Receiver chassis complete—Less reproducer unit, knobs and Radiotrons.	27.50
2977	Knob—Station selector knob—Package of 5.	2.50	9339	Reproducer unit—Reproducer unit complete.	4.75
2978	Screw assembly—Loudspeaker mounting screw assembly comprising four screws, four washers, four lock washers, eight nuts and four eyelets.	.60			
2981	Capacitor—320 Mmfd. detector plate R.F. by-pass capacitor.	.50			
3006	Capacitor—001 Mfd. Used across low frequency tickler coil.	.50			
3007	Wrench—Special wrench for R.F. line-up condenser adjustments.	1.00			

MODEL R-7, R-9 AC
Superette
Resistance Data

R. C. A. VICTOR CO., INC.


All tubes removed from receiver and AC plug disconnected from power supply socket. Speaker field disconnected. Volume control adjusted to maximum, unless otherwise stated

Output Tube Control Grid
Output Tube Grid to Grid
Output Tube Plate (2 tubes)
Output Tube Plate to Plate
'80 Filament to Anode
'80 Anode to Anode
'80 Anode to Chassis
Across Speaker field

102,650 ohms
5,700 ohms
22,630 ohms
360 ohms
22,450 ohms
222,576 ohms
250 ohms
200,125 ohms
1,530 ohms

Tone Control condenser
Tone Control condenser
Tone Control resistance

See R-F Plate
See R-F Plate
FC-'80F -80 P (10 mfd)

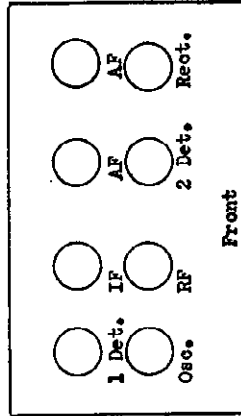

From Chassis To

Correct

Incorrect

Aerial to Ground 40 ohms

Chassis (Y) to

RF Control Grid 5 ohms TC-Y

RF Cathode (V.E.Mln) 3,950 ohms BC-Y

RF Cathode (V.S.Max) 150 ohms See Min. Adj.

RF Screen Grid 8,150 ohms BC-rf SG-Y

RF Plate 22,508 ohms FC-Y (4.mfd)

1 Detector Control Grid 6 ohms BC-'80 F-Y (.5 mfd)

1 Detector Cathode 10,000 ohms TC-Y

1 Detector Screen Grid 8,150 ohms BC-1 D K-Y

1 Detector Plate 22,543.5 ohms See R-F SG

1 Detector Plate-'80 F 93.5 ohms See R-F Plate

Oscillator Control Grid 40,150 ohms TC-1 IF Tr

Oscillator Cathode 150 ohms Osc. Grid Comb.

Oscillator Plate 8,151 ohms See R-F Cathode

Osc. Plate-1 Det Screen 1 ohm See R-F Screen

IF Control Grid 41.5 ohms TC-Y

IF Cathode 150 ohms See R-F Cathode

IF Screen Grid 8,150 ohms See R-F Screen Grid

IF Plate 22,491 ohms See R-F Plate

IF Plate-'80 Fil 41.5 ohms BC-if P = 2 DX
TC-2 IF Tr
TC-2 IF Tr

Tube	Heater	Cathode-Grid	Cathode-Screen	Cathode-Plate	Plate Current	File
RF	2.5	2.6	65	226	4.0 ma	2.4
Osc.	2.5	0.	60	55	5.0	2.4
1Det	5.0	5.0	60	215	0.5	2.4
IF	2.5	2.6	65	225	4.0	2.4
2Det	60.	*10.		200	0.5	2.4
AF		*20.		215	20.	2.4
AF		*20.		215	20.	2.4

* Not true reading because of resistance in circuit.

Magnetic Pickup Terminal Board 1-2 Closed

2 Detector Control Grid 1,000,093.5 ohms BC-#2Ter.-2DK

2 Detector Control Grid-Ter 2 93.5 ohms TC-#1 Terminal


2 Detector Cathode 50,000 ohms BC-2 D K-if P

2 Detector Plate 23,250 ohms BC-2 DP-2 D K

2 Detector Plate-'80 F 800 ohms FC-'80 F-Y (.5 mfd)
See R-F Plate

MODEL R-7, R-9 D.C.
Supernote
Schematic
Voltage

R. C. A. VICTOR CO., INC.

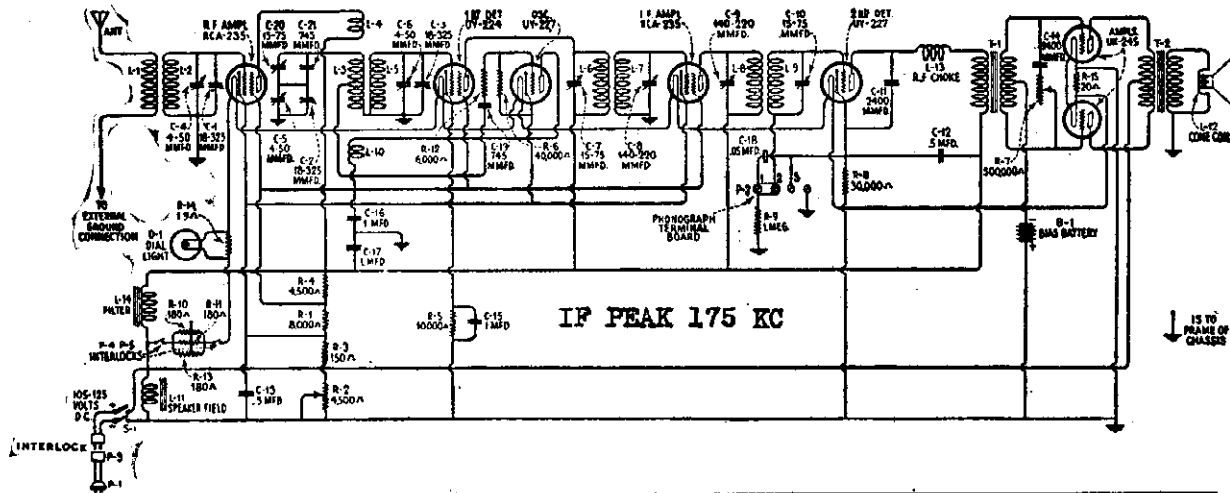

RADIOTRON SOCKET VOLTAGES—115 or 230 Volt Line
(Separate Resistance Unit Used with 230 Volt Line)

Tube No.	Cathode to Heater Volts, D.C.	Cathode or Filament to Control Grid Volts, D.C.	Cathode to Screen Grid Volts, D.C.	Cathode or Filament to Plate Volts, D.C.	Plate Current M. A.	Screen Grid Current M. A.	Heater or Filament Volts, A.C.
VOLUME CONTROL AT MINIMUM							
1	40	30	40	75	0	0	2.3
2	20	0	—	40	2.0	—	2.3
3	6.0	3.5	65	100	.25	—	2.3
4	17.0	26	40	75	.0	0	2.3
5	2.0	*2.0	—	90	.23	—	2.3
6	—	25.0	—	100	4.0	—	2.3
7	—	*25.0	—	100	4.0	—	2.3
VOLUME CONTROL AT MAXIMUM							
1	10.0	2.0	50	100	3.5	**0.5	2.3
2	6.0	.0	—	50	3.0	—	2.3
3	8.0	5.0	50	100	0.5	—	2.3
4	10.0	2.0	50	100	2.5	**1.0	2.3
5	2.0	*2.0	—	90	.25	0	2.3
6	—	*25.0	—	100	4.0	—	2.3
7	—	*25.0	—	100	4.0	—	2.3

* Not true reading due to Resistance in circuit

** This may be plus or minus depending on age of tubes

The RCA Victor Supernote, R-7 D.C. and the Console, R-9 D.C. are similar to the A.C. Models with the exception that the necessary changes for D.C. operation have been made. The Service Notes on the A.C. Models, therefore, apply to the D.C. Models with the exception of voltage readings and circuit diagrams.


Provision for operation at 220 volts is made by the use of a separate resistance unit which drops the voltage to 110. This unit should be located in a place that is well ventilated and it should not come in contact with any wood or cloth material other than that upon which it is resting.

An interlock is provided on the cabinet back so that access to the parts cannot be made without opening the power supply. However, when service work is being performed, it may be necessary to run jumpers from the back to the connection block so that operation of the receiver may be secured. *Never make these interlocks inoperative except under these conditions. They are designed for protection of the customer.*

SPECIAL PARTS FOR R-9 D.C.


3070	Bolts—Speaker mounting bolts, nuts and washers— Package of 2.....	.50
7223	Foot.....	.50
8664	Control panel.....	7.50
8665	Board—Baffle board complete with grille cloth.....	1.00
9329	Stretcher.....	4.50
9331	Top.....	3.25
9332	Post—Front post R. H.....	2.50
9333	Post—Back post R. H.....	2.50
9334	Post—Front post L. H.....	2.50
9335	Post—Back post L. H.....	2.50
9350	Cabinet—R-9 D.C. cabinet complete—Lum all equipment.....	55.00
9357	Door—Rear cabinet door.....	5.00

Models R-7, R-9 DC (1931)

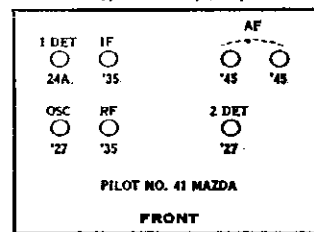

R. C. A. VICTOR CO., INC.

MODEL R-7, R-9 DC
Superette
Chassis

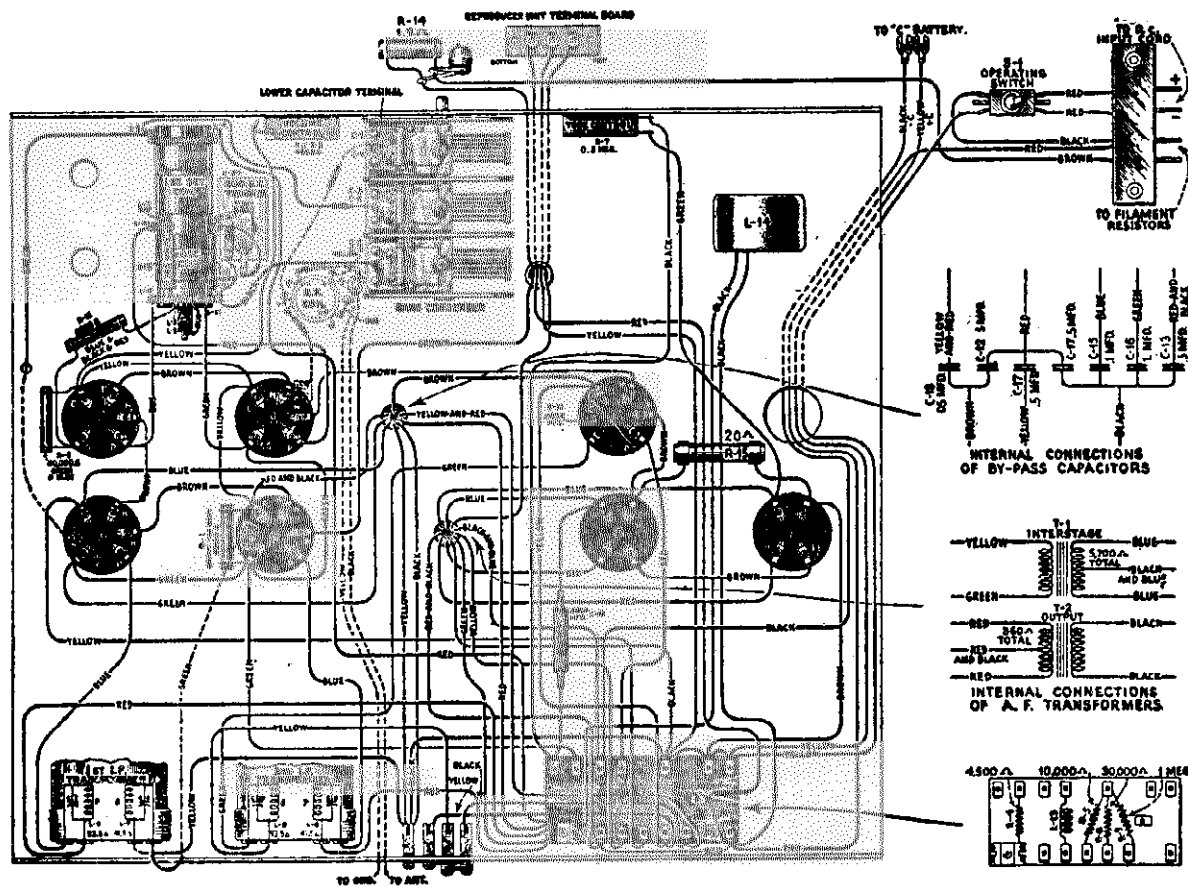

Part No.	DESCRIPTION	List Price
PARTS COMMON TO R-7 D.C. AND R-9 D.C.		
2240	Resistor—30,000 Ohms—Carbon type.....	\$0.70
2546	Resistor—1 Megohm—Carbon type—Package of 5.....	3.00
2731	Resistor—10,000 Ohms—Carbon type—Package of 5.....	2.00
2746	Socket—Dial lamp socket.....	.50
2749	Capacitor—2,400 Mmfd.—Used as 2nd Detector R.F. by-pass capacitor.....	1.50
2875	Knob—Station Selector, Tone Control or Volume Control Knob—Package of 5.....	1.50
2881	Bracket—Dial lamp bracket—Package of 5.....	.50
2882	Socket—Five prong Radiotron Socket complete with insulating shield—Five used.....	.50
2946	Escutcheon—Station Selector Escutcheon.....	.60
2968	Socket—Four prong Radiotron Socket complete with insulating shield—Two used.....	.50
2973	Board—Magnetic Pickup terminal board complete with terminals and screws—Package of 2.....	.50
2990	Resistor—4,500 ohms—Carbon type—Package of 5.....	2.50
2991	Transformer—1st I. F. Transformer complete with shield and mounting screws.....	3.00
2992	Transformer—2nd I. F. Transformer complete with shield and mounting screws.....	3.00
2993	Board—Resistor mounting board complete with terminals and mounting brackets—less resistors.....	1.00
2994	Coil—2nd Detector R.F. Choke Coil complete with rivet.....	.60
2995	Volume Control—complete less knob—Package of 5.....	6.00
2996	Tone Control—Complete less knob—Package of 5.....	6.00
2997	Coil—R.F. coil complete with mounting washer and nut.....	1.90
2998	Coil—1st Detector and Oscillator Coil assembly complete with mounting washers and nuts.....	2.40


Part No.	DESCRIPTION	List Price
2999	Shaft—Dial Scale drive shaft complete with mounting screws and lock washers.....	.50
3000	Scale—Dial drum and scale complete with set screws.....	.60
3001	Resistor—1.9 Ohms—Porcelain resistor used in parallel with dial lamp.....	.60
3002	Resistor—20 Ohms—Porcelain resistor used across UX-245 filaments.....	.60
3003	Cushion—Sponge Rubber Cushions—Package of 4.....	.50
3004	Resistor—Porcelain type—180 Ohms—used as heater supply resistor—Three used.....	1.80
3005	Screw Assembly—Loudspeaker Screws, Nuts, Eyelets and Washers—Package of 1 set of four each (for R-7).....	\$ 5.50
3045	Resistor—40,000 ohms—Carbon type—Package of 5.....	2.50
3071	Plug—Male and Female power plug—used as interlock—Set of 2 Complete plugs.....	1.60
3072	Resistor Unit—Resistor Unit complete for use on 220 volt D.C. lines.....	19.00
3073	Switch—Operating switch.....	.80
7054	Cord—Power Cord and Plug.....	1.00
7062	Condenser—Adjustable Oscillator trimming condenser.....	1.00
7238	Capacitor Pack—R.F. by-pass capacitor pack in metal container.....	3.50
7239	Transformer—A.F. transformer assembly in metal container.....	6.00
7240	Reactor—Filter reactor.....	5.50
7241	Condenser—3-gang tuning condenser complete with mounting washers and screws.....	8.00
8559	Ring—Cone retaining ring.....	.80
8601	Cone—Cone complete—Package of 5.....	15.00
8639	Coil—Loudspeaker field coil complete with cone support.....	5.00
9323	Loudspeaker—Loudspeaker unit complete.....	8.70
9338	Receiver Assembly—Receiver Assembly complete—less loudspeaker and Radiotrons.....	40.00

MODEL R-7, R-9 DC Superette Resistance Data

R. C. A. VICTOR CO., INC.

60 ohms
13.50 ohms
58+ ohms*
Resistance of filter chokes not known

Across Filament Interlocks
Across Speaker field
RF Plate to + DC Switch

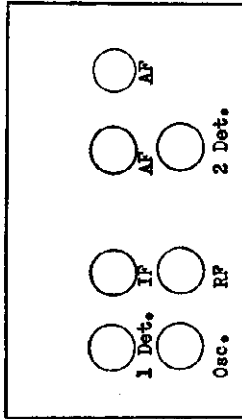

All tubes removed and speaker field disconnected - Interlocks closed - DC plug removed from line socket - Dial light out of socket - Volume control max unless otherwise stated - C Battery removed

From Chassis To Correct Incorrect

Aerial to Ground 40 ohms

Chassis to

RF Control Grid 5 ohms
RF Cathode (V.C. Max) 150 ohms
RF Cathode (V.C. Min) 4,650 ohms
RF Screen Grid 8,150 ohms
RF Plate 12,708 ohms

RF Plate to 1 Detector Plate 151.5 ohms

1 Det Control Grid 6 ohms
1 Detector Cathode 10,000 ohms
1 Detector Screen Grid 8,150 ohms
1 Detector Plate 12,743.5 ohms

Oscillator Control Grid 40,150 ohms
Oscillator Cathode 150 ohms
Oscillator Plate 8,151 ohms
Oscillator Plate to RF Screens 1 ohm

IF Control Grid 41.5 ohms
IF Cathode 150 ohms
IF Screen Grid 8,150 ohms
IF Screen to 1 Det Screen 0 ohms
IF Plate 12,691.5 ohms
IF Plate to RF Plate 99.5 ohms

Pickup Terminal Broad Terminals 1 and 2 joined

2 Detector Control Grid 1,000,093.5 ohms
2 Detector Control Grid to Test#2 93.5 ohms
2 Detector Cathode 50,000 ohms
2 Detector Plate 13,300 ohms

Output Control Grid to Black Bias Lead 3,850 ohms
Output Grid to Grid 5,700 ohms
Output Grid to chassis (bias leads shorted) 3,850 ohms
Output Plate to +D.C. Switch 180 ohms
Output Plate to Plate 360 ohms

1 Output filament terminal and chassis 20 ohms
Across dial light socket 1.9 ohms

TC-Y
BC-Y (.5 mfd)
BC-Y (.5 mfd)
BC-Y (1. mfd)
BC-Y (1. mfd)
BC-2D P-2DK (.0024 mfd)
BC-2D P-2DK (.5 mfd)

TC-Y
BC- LDK-Y
See R-F Sg
TC- 1 IP Tr
See R-F Plate

Osc Grid Condenser
See R.F. Cathode
See R.F. Screen

TC- IP Tr-Y
See RF Cathode
See RF Screen
See RF Plate

BC-Test#1-2DK
TC-IP Tr-
BC-2DP-2DK (.0024 mfd)
BC-2DP-2DK (.5 mfd)
See RF Plate

Tone Control Condenser

RADIOTRON SOCKET VOLTAGES—115 or 230 Volt Line
(Separate Resistance Unit Used with 500 Volt Line)

Tube No.	Cathode to Filament or Grid Volts, D.C.	Cathode to Control Grid Volts, D.C.	Cathode to Filament to Plate Volts, D.C.	Plate Current (M.A.)	Screen Grid Current (M.A.)	Heater or Filament Volts, A.C.
1	40	40	75	0	0	2.1
2	20	40	40	2.0	—	2.1
3	6.0	65	100	.25	—	2.1
4	17.0	40	75	0	0	2.1
5	2.0	—	90	.23	—	2.1
6	—	—	100	4.0	—	2.1
7	—	—	100	4.0	—	2.1
1	10.0	50	100	3.5	100.3	2.1
2	6.0	—	50	3.0	—	2.1
3	8.0	50	100	0.5	—	2.1
4	19.0	—	100	2.8	—	2.1
5	7.0	—	90	.25	—	2.1
6	—	—	100	4.0	—	2.1
7	—	—	100	4.0	—	2.1

VOLUME CONTROL AT MINIMUM

VOLUME CONTROL AT MAXIMUM

*Not true reading due to resistance in circuit

*This may be plus or minus depending on age of tubes

R. C. A. VICTOR CO., INC.

MODEL R-7A AC
Superecc
Schematic

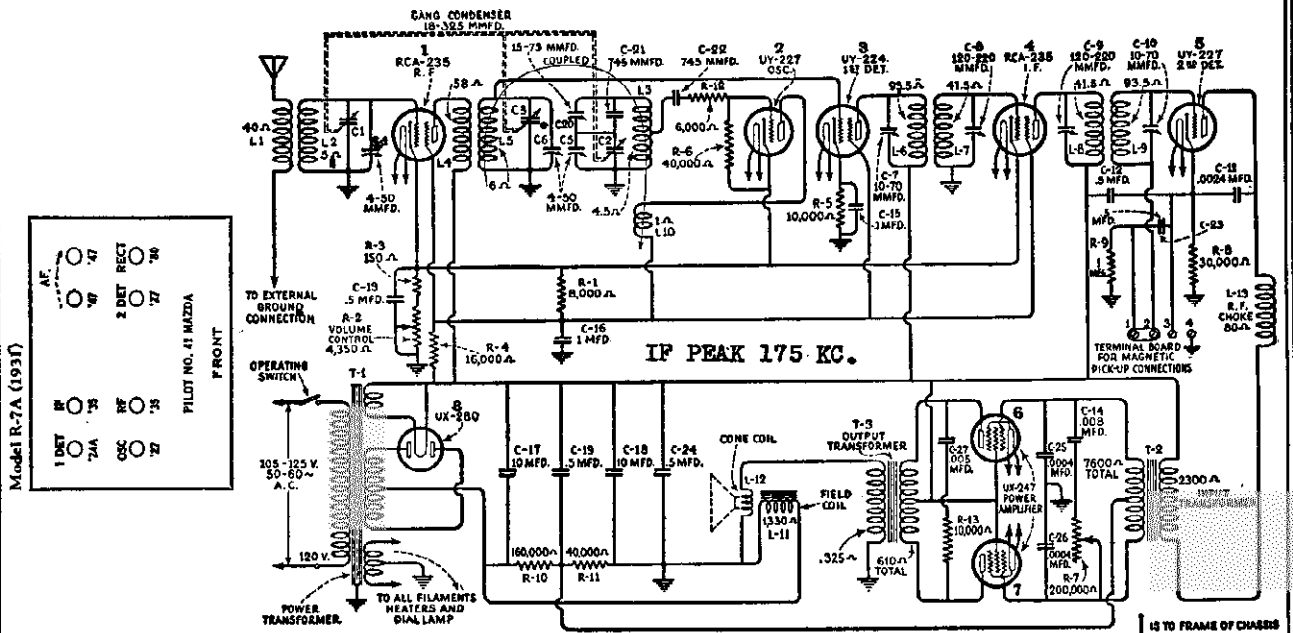


Figure 1—Schematic Diagram

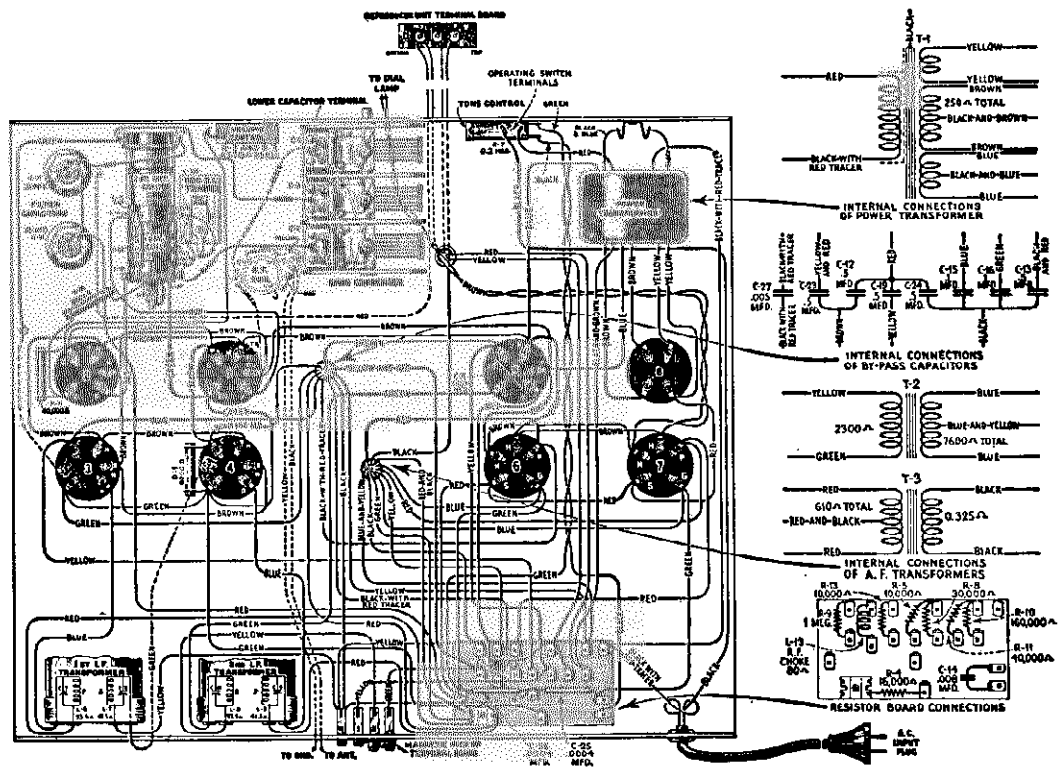


Figure 2—Wiring Diagram

RADIOTRON SOCKET VOLTAGES—110 VOLT A. C. LINE

Radiotron No.	Cathode to Heater Volts D. C.	Cathode or Filament to Control Grid Volts D. C.	Cathode to Screen Grid Volts D. C.	Cathode or Filament to Plate Volts D. C.	Plate Current M. A.	Heater or Filament Volts A. C.	Radiotron No.	Cathode to Heater Volts D. C.	Cathode or Filament to Control Grid Volts D. C.	Cathode to Screen Grid Volts D. C.	Cathode or Filament to Plate Volts D. C.	Plate Current M. A.	Heater or Filament Volts A. C.
VOLUME CONTROL AT MINIMUM							VOLUME CONTROL AT MAXIMUM						
1	38	35	50	200	.0	2.2	1	2.0	2.5	60	235	5.5	2.2
2	38	0	—	50	3.5	2.2	2	2.0	.0	—	50	4.5	2.2
3	7	6	80	235	0.5	2.2	3	4.0	4.0	55	230	0.5	2.2
4	38	35	50	200	.0	2.2	4	2.0	2.5	58	235	3.5	2.2
5	—	8	—	210	0.7	2.2	5	22	8	—	210	0.7	2.2
6	—	12	225	220	30	2.2	6	—	12	225	220	30	2.2
7	—	12	225	220	30	2.2	7	—	12	225	220	30	2.2

MODEL R-7A AC
Superette
Resistance Data

R. C. A. VICTOR CO., INC.


From Chassis To
Aerial to Ground
Chassis to
RF Control Grid
RF Cathode (V.C.Min)
RF Cathode (V.C.Max)
RF Screen Grid
RF Plate
RF Plate to '80 Fil
1 Detector Control Grid
1 Detector Cathode
1 Detector Screen Grid
1 Detector Plate
1 Detector Plate to '80 Fil
Oscillator Control Grid
Oscillator Cathode
Oscillator Plate
Osc. Plate to '80 Fil
IF Control Grid
IF Cathode
IF Screen Grid
IF Plate
IF Plate to '80 Fil
2 Detector Control Grid
2 Det Control Grid- Ter #2
2 Detector Cathode
2 Detector Plate
2 Detector Plate to '80 Fil
'47 Control Grid
'47 Screen Grid
'47 G2 to '47 G5
'47 Screen to '80 Fil
'47 Plate

Correct
40 ohms
5 ohms
4,500 ohms
150 ohms
8,150 ohms
24,208 ohms
58 ohms
6 ohms
10,000 ohms
8,150 ohms
24,301.5 ohms
98.5 ohms
40,150 ohms
150 ohms
24,151 ohms
1 ohm
41.5 ohms
150 ohms
24,150 ohms
24,191.5 ohms
41.5 ohms
1,000,093.5 ohms
98.5 ohms
50,000 ohms
28,550 ohms
2,380 ohms
43,800 ohms
24,150 ohms
7,600 ohms
0 ohm
24,455 ohms

Incorrect
TC-Y
BC- rf K-Y (.5 mfd)
BC- rf K-Y (.5 mfd)
BC- rf Sg-Y (1. mfd)
BC- rf K-Y (.5 mfd)
BC- rf Sg-Y (1. mfd)
BC- '80 Fil-Y (5 mfd)
FC- '80 Fil-Y (10 mfd)
See RF Plate
TC-Y
BC- 1 D K-Y (1. mfd)
See RF Screen
See RF Plate
TC- IF Tr
Oscillator Grid condenser
See RF Cathode
See RF Plate
TC- 1F Cg-Y
See RF Cathode
See RF Screen
BC- to 2 DK
BC- 2 DP-K
See RF Plate
BC- 2 DK
TC-
BC- 2 DK- 2 DP
See RF Plate
BC- 2 DP- 2 DK
BC- '47 Cg-Y (.004 mfd)
Tone Control Condenser
See RF Plate
See RF Plate
See RF Plate

'47 Plate to '80 Fil 305 ohms
'47 Plate to '47 Plate 610 ohms
'80 Anode 200,125 ohms
'80 Anode to '80 Anode 250 ohms
Across Speaker field only 1,380 ohms
Across output transformer secondary only .825 ohm
Across Oscillator coil 4.5 ohms

Harmonic condenser
305 ohms
610 ohms
200,125 ohms
250 ohms
1,380 ohms
.825 ohm
4.5 ohms

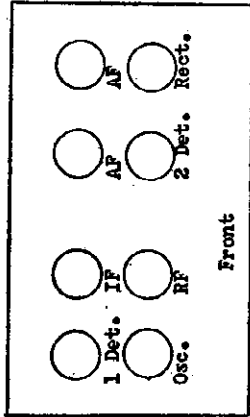

RADIATION SOCKET VOLTAGES—110 VOLT A. C. LINE


Radiation No.	Cathode to Heater D.C.		Cathode to Screen Grid D.C.		Cathode to Plate D.C.		Plate to Heater D.C.	Plate Current M.A.	Filament A.C.
	Min.	Max.	Min.	Max.	Min.	Max.			
1	31	50	100	0	1.2	0	1	1.5	2.2
2	31	50	100	0	1.2	0	1	1.5	2.2
3	31	50	100	0	1.2	0	1	1.5	2.2
4	31	50	100	0	1.2	0	1	1.5	2.2
5	31	50	100	0	1.2	0	1	1.5	2.2
6	31	50	100	0	1.2	0	1	1.5	2.2
7	31	50	100	0	1.2	0	1	1.5	2.2
8	31	50	100	0	1.2	0	1	1.5	2.2
9	31	50	100	0	1.2	0	1	1.5	2.2
10	31	50	100	0	1.2	0	1	1.5	2.2
11	31	50	100	0	1.2	0	1	1.5	2.2
12	31	50	100	0	1.2	0	1	1.5	2.2
13	31	50	100	0	1.2	0	1	1.5	2.2
14	31	50	100	0	1.2	0	1	1.5	2.2
15	31	50	100	0	1.2	0	1	1.5	2.2
16	31	50	100	0	1.2	0	1	1.5	2.2
17	31	50	100	0	1.2	0	1	1.5	2.2
18	31	50	100	0	1.2	0	1	1.5	2.2
19	31	50	100	0	1.2	0	1	1.5	2.2
20	31	50	100	0	1.2	0	1	1.5	2.2
21	31	50	100	0	1.2	0	1	1.5	2.2
22	31	50	100	0	1.2	0	1	1.5	2.2
23	31	50	100	0	1.2	0	1	1.5	2.2
24	31	50	100	0	1.2	0	1	1.5	2.2
25	31	50	100	0	1.2	0	1	1.5	2.2
26	31	50	100	0	1.2	0	1	1.5	2.2
27	31	50	100	0	1.2	0	1	1.5	2.2
28	31	50	100	0	1.2	0	1	1.5	2.2
29	31	50	100	0	1.2	0	1	1.5	2.2
30	31	50	100	0	1.2	0	1	1.5	2.2

MODEL R-8, R-12 AC Resistance Data

R. C. A. VICTOR CO., INC.

All tubes removed from sockets and AC plug removed from power supply
Field coil disconnected

From Chassis To	Correct	Incorrect
Aerial to Ground	40 ohms	
Chassis to		
RF Control Grid	1,000,006 ohms	TC- rf Cg-Y EC- rf wdg-Y (.06 mfd) EC- lf Tr-Y (.1 mfd) EC-AVC F-AVC K EC- rf K-Y (.5 mfd) FC- rf SG-Y (4. mfd) FC-80F-80A (10 mfd) EC-47 SG-Y (4. mfd) EC-2D Tr-2DK (.5 mfd)
RF Cathode	150 ohms	
RF Screen	8,160 ohms	
RF Plate	24,208 ohms	
1 Detector Control Grid	5 ohms	TC-1D Cg-Y EC-1DK-Y (.1 mfd)
1 Detector Cathode	10,000 ohms	See RF Screen
1 Detector Screen Grid	8,160 ohms	See RF Plate
1 Detector Plate	24,501.5 ohms	TC-1P Tr Primary
1 Det Plate to '80 Fil	93.5 ohms	
Oscillator Control Grid	40,150 ohms	Oscillator Grid Condenser
Osc Control Grid to Osc Cathode	40,000 ohms	
Oscillator Cathode	150 ohms	See RF Cathode
Oscillator Plate	24,151 ohms	See RF Plate
Osc Plate to RF Screen	1 ohm	
IF Control Grid	500,041.5 ohms*	*Includes IF Transformer secondary
IF Cathode	150 ohms	EC- IF Tr-Y (.1 mfd)
IF Screen Grid	8,160 ohms	See RF Cathode
IF Plate to '80 Fil	41.5 ohms	See RF Screen
AVC Control Grid	3,240,000 ohms	TC-IF Tr. Primary See RF Control Grid See RF Plate BLG- lf P-AVC Cg(9 mmfd)
AVC Control Grid-'50 Anode	3,000,175 ohms	EC-AVC Cg res-AVC H-X
AVC Cathode	250,000 ohms	EC-AVC K-AVC H (.1 mfd)
AVC Plate	1,000,000 ohms	See RF Control Grid EC AVC P-AVC K(.0024 mfd)
2 Detector Control Grid	1,000,033.5 ohms**	*Includes IF Tr Sec
2 Det Cg to Volume Control	843-93.5-10,033.5 ohms	Depends upon setting of volume control
2 Detector Cathode	50,000 ohms	EC-2 DK (.06 mfd)

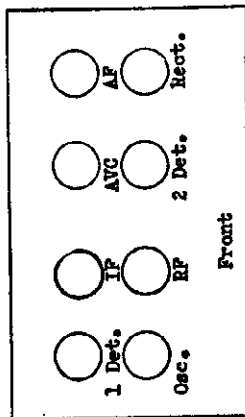

DO NOT LEAK VOLUME CONTROL TUBES MUST BE AT LEAST 100°C

Resistance No.	Capacitance at 1000 Hz. D.C.	Capacitance at 1000 Hz. A.C.	Capacitance at 1000 Hz. R.F.	Capacitance at 1000 Hz. P.F.	Capacitance at 1000 Hz. T.F.	Capacitance at 1000 Hz. U.F.
1. R. 1	4.0	0	0	0	0	0
2. Det.	0	0	0	0	0	0
3. 1st Det.	7.0	0	0	0	0	0
4. 1st P.	1.8	1.9	0	0	0	0
5. 2nd Det.	20.0	10.0	0	0	0	0
6. A. V. C.	0	0	0	0	0	0
7. Power	0	10.0	0	0	0	0


2 Detector Plate to '80 Fil 1,730 ohms
2 Det Plate 241,650 ohms
'47 Control Grid 91,650 ohms
'47 Screen Grid to '80 Fil 0 ohm
'47 Plate to '80 Fil 360 ohms
'80 Filament 264,150 ohms
'80 Plate to '80 Plate 360 ohms
Output Transformer Secondary only .34 ohm
Oscillator Coil 6. ohms
Oscillator Grid resistor 6,000 ohms
Field Coil only 1,330 ohms

See RF Plate EC- 2 DP-2 DK
FC-47 Sg-Y (4 mfd)
See RF Plate
Tone Control Condenser
See RF Control Grid
Harmonic condenser
FC-80F-80P (10 mfd)
See RF Control Grid
See RF Plate

1 Det. Meot.
Osc. 2 Det.
IF AVC AF
RF

MODEL R-10 AC
Schematic
Voltage - Chassis


R. C. A. VICTOR CO., INC.

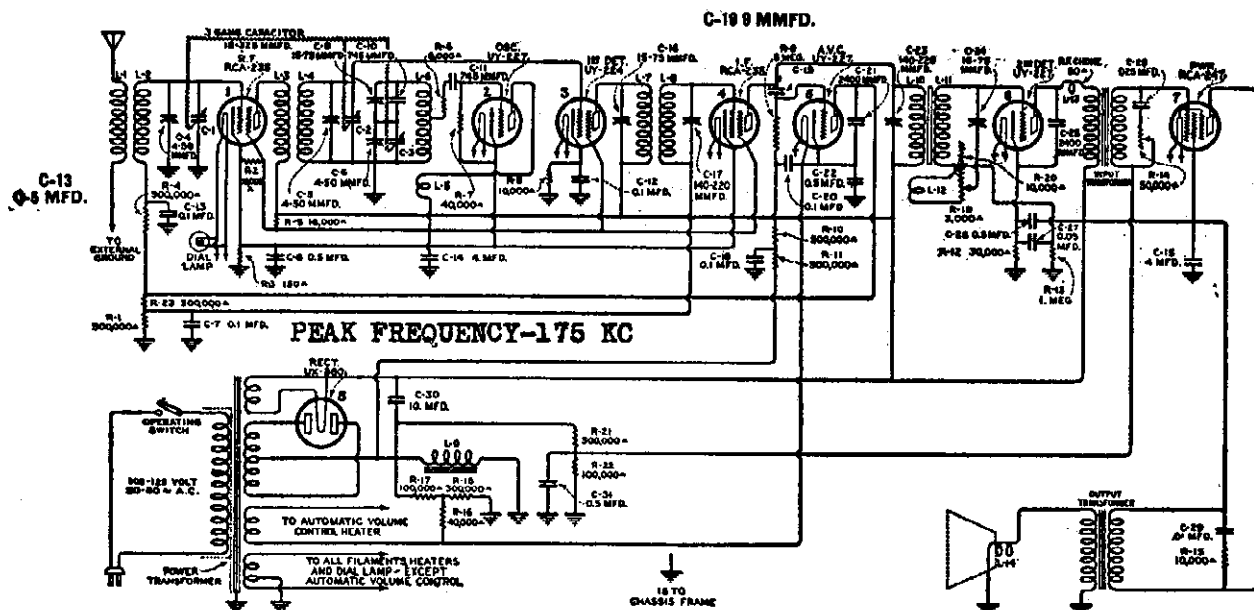

110 VOLT A. C. LINE
(Volume Control Setting Does Not Affect Voltages)

Radiotron No.	Cathode to Heater Volts, D. C.	Cathode or Filament to Control Grid Volts, D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Cathode or Filament to Plate Volts, D. C.	Plate Current M. A.	Screen Current M. A.	Heater or Filament Volts, A. C.
1	2	*0.1	75	210	5.0	0.5	2.2
2	8	0	—	60	5.0	—	2.2
3	7	7.0	70	205	0.5	0.1	2.2
4	2	*0.1	75	210	5.0	0.5	2.2
5	0	0	—	30	0	—	2.2
6	20	*8.0	—	185	0.5	—	2.2
7	—	10	210	210	25	—	2.2

*Not true reading due to resistance in circuit.

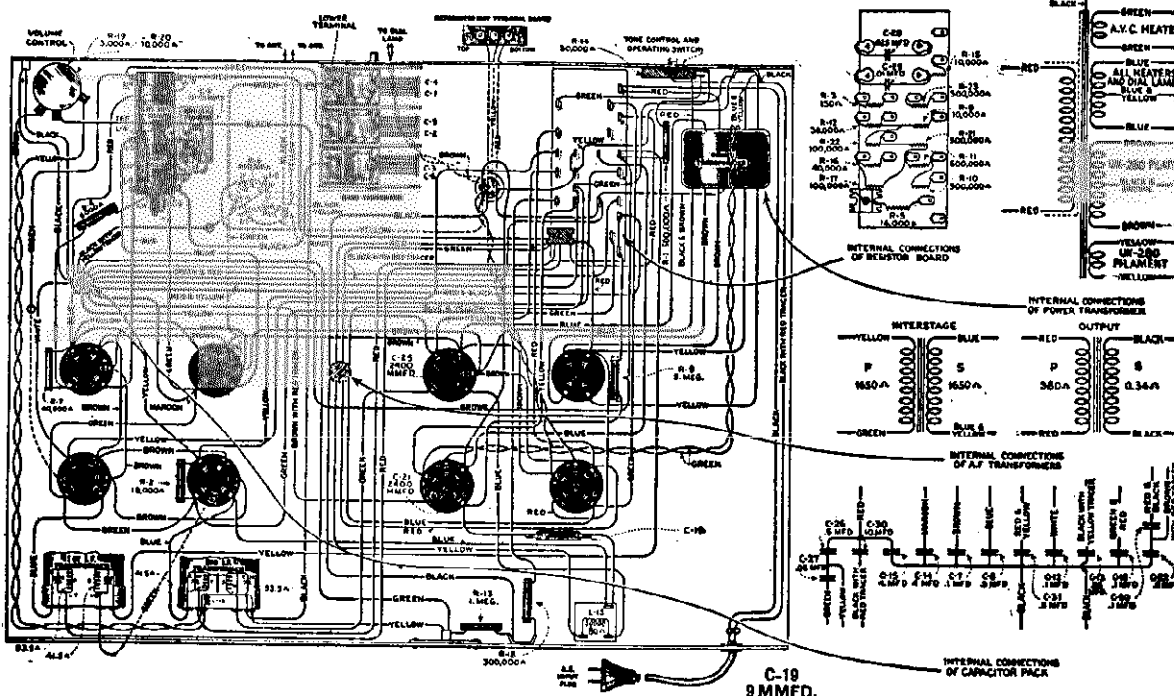

R. C. A. VICTOR CO., INC.

MODEL R-10 AC
Resistance Data

All tubes out of sockets and AC plug removed from power supply lines
Speaker field disconnected

From Chassis To

Correct

Incorrect

From Chassis To

Correct

Incorrect

From Chassis To

Correct

Incorrect

From Chassis To

Correct

Incorrect

From Chassis To

Correct

Incorrect

From Chassis To


Correct

Incorrect

From Chassis To

Correct

Incorrect

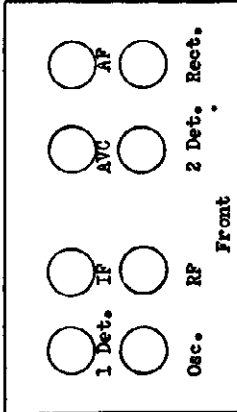

110 VOLT A. C. LINE
(Voltage Control Fetting Does Not Affect Voltages)

Radatron No.	Cathode or Filament to Heater Volts, D. C.	Cathode or Filament to Plate, D. C.	Cathode or Filament to Screen, D. C.	Cathode or Filament to Heater, D. C.	Plate Current, M. A.	Screen Current, M. A.	Heater or Filament Volts, A. C.
1	2	75	210	50	5.0	0.5	2.2
2	8	0	60	50	5.0	—	2.2
3	7	70	205	0.5	0.1	0.1	2.2
4	2	75	210	5.0	5.0	0.5	2.2
5	0	0	30	0	0	—	2.2
6	20	10	185	0.5	—	—	2.2
7	—	—	210	25	—	—	2.2

*Not true reading due to resistance in circuit.

From Chassis To

Correct

Incorrect

From Chassis To

Correct

Incorrect

From Chassis To

Correct

Incorrect

From Chassis To

Correct

Incorrect

From Chassis To

Correct

Incorrect

From Chassis To

Correct

Incorrect



From Chassis To

Correct

Incorrect

MODEL R-11 AC
Schematic
Early
Voltage

R. C. A. VICTOR CO., INC.

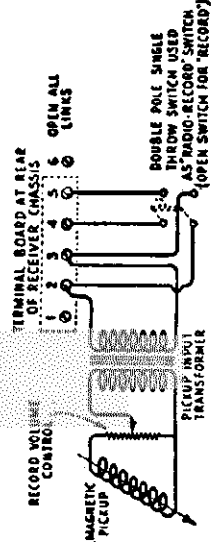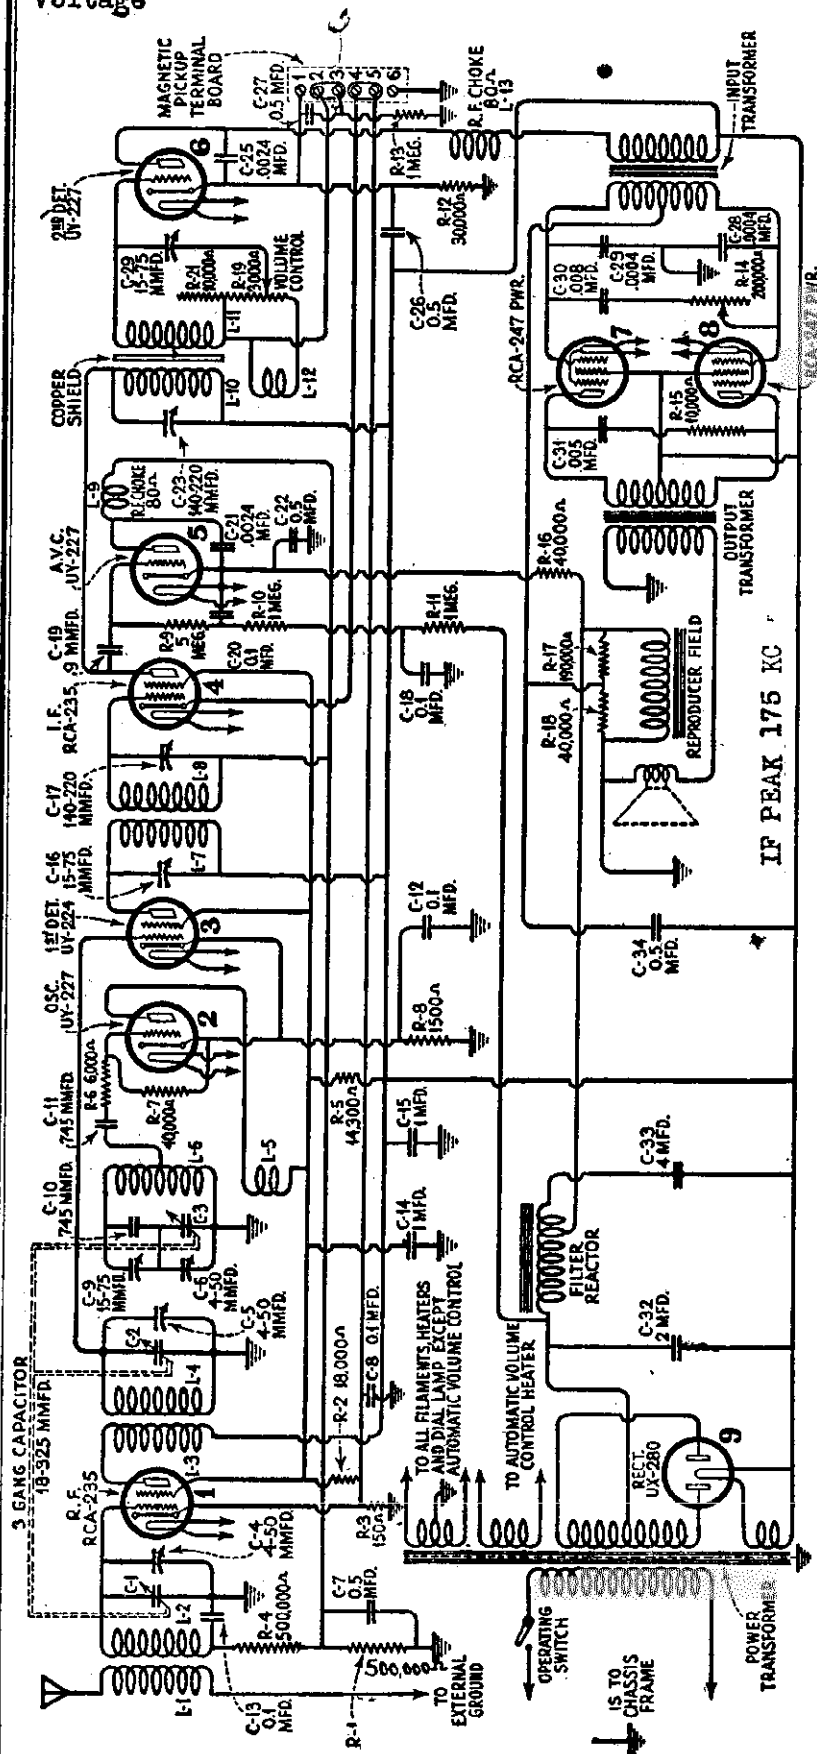

Models R-11, Magnetic Pickup Connections

OSC	77	1 DET	74A	AF	70
IF	35	RF	75	2 DET	77
A.V.C.	77			RECT	70

PILOT NO. 41 MAZDA
FRONT


110 VOLT A. C. LINE (Volume Control Setting Does Not Affect Voltages)

Radiostron No.	Cathode to Heater Volts D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Cathode or Filament to Plate Volts, D. C.	Screen Current M. A.	Heater or Filament Volts, A. C.
1	2	75	205	0.5	2.2
2	8	—	60	—	2.2
3	7	70	200	0.1	2.2
4	2	75	205	0.5	2.2
5	0	—	25	—	2.2
6	20	—	180	—	2.2
7	—	210	205	—	2.2
8	—	210	205	—	2.2

* Not true reading due to resistance in circuit.

R. C. A. VICTOR CO., INC.


MODEL R-11 AC
Chassis
Early

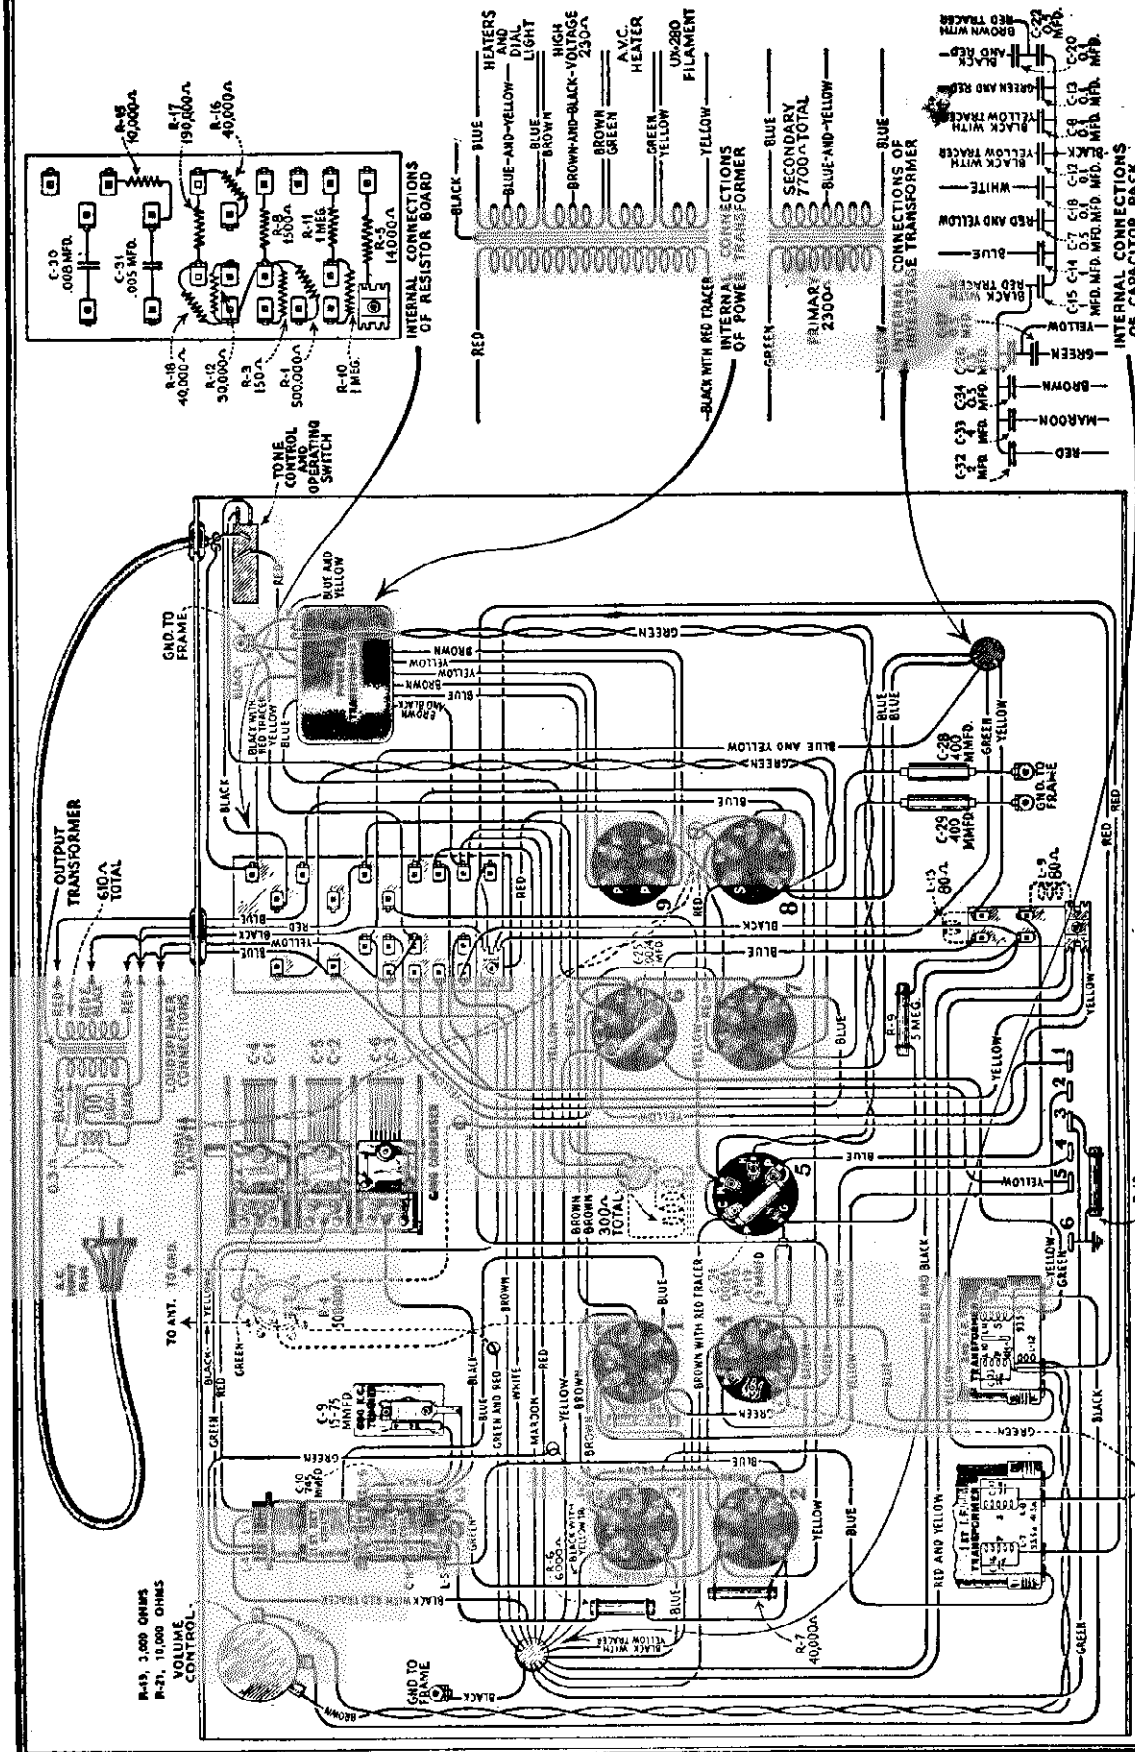

R. F. OSCILLATOR AND I. F. ADJUSTMENTS
 A reference to the RCA Victor Radiola Superette Service Notes will give the details for making correct R. F., I. F. and Oscillator adjustments. However, due to the use of an automatic volume control tube, its action will defeat the use of an output meter. To overcome this, a "dummy" Radiotron UY-227 (one that has one heater prong removed but is otherwise O.K.) should be substituted for the tube in the automatic volume control socket. Do not make any adjustments with this tube removed from the socket. While apparently everything functions in the normal manner, the lack of tube capacity in the circuits will cause an incorrect alignment to be made.


MODEL R-11 AC
Chassis
Late

R. C. A. VICTOR CO., INC.

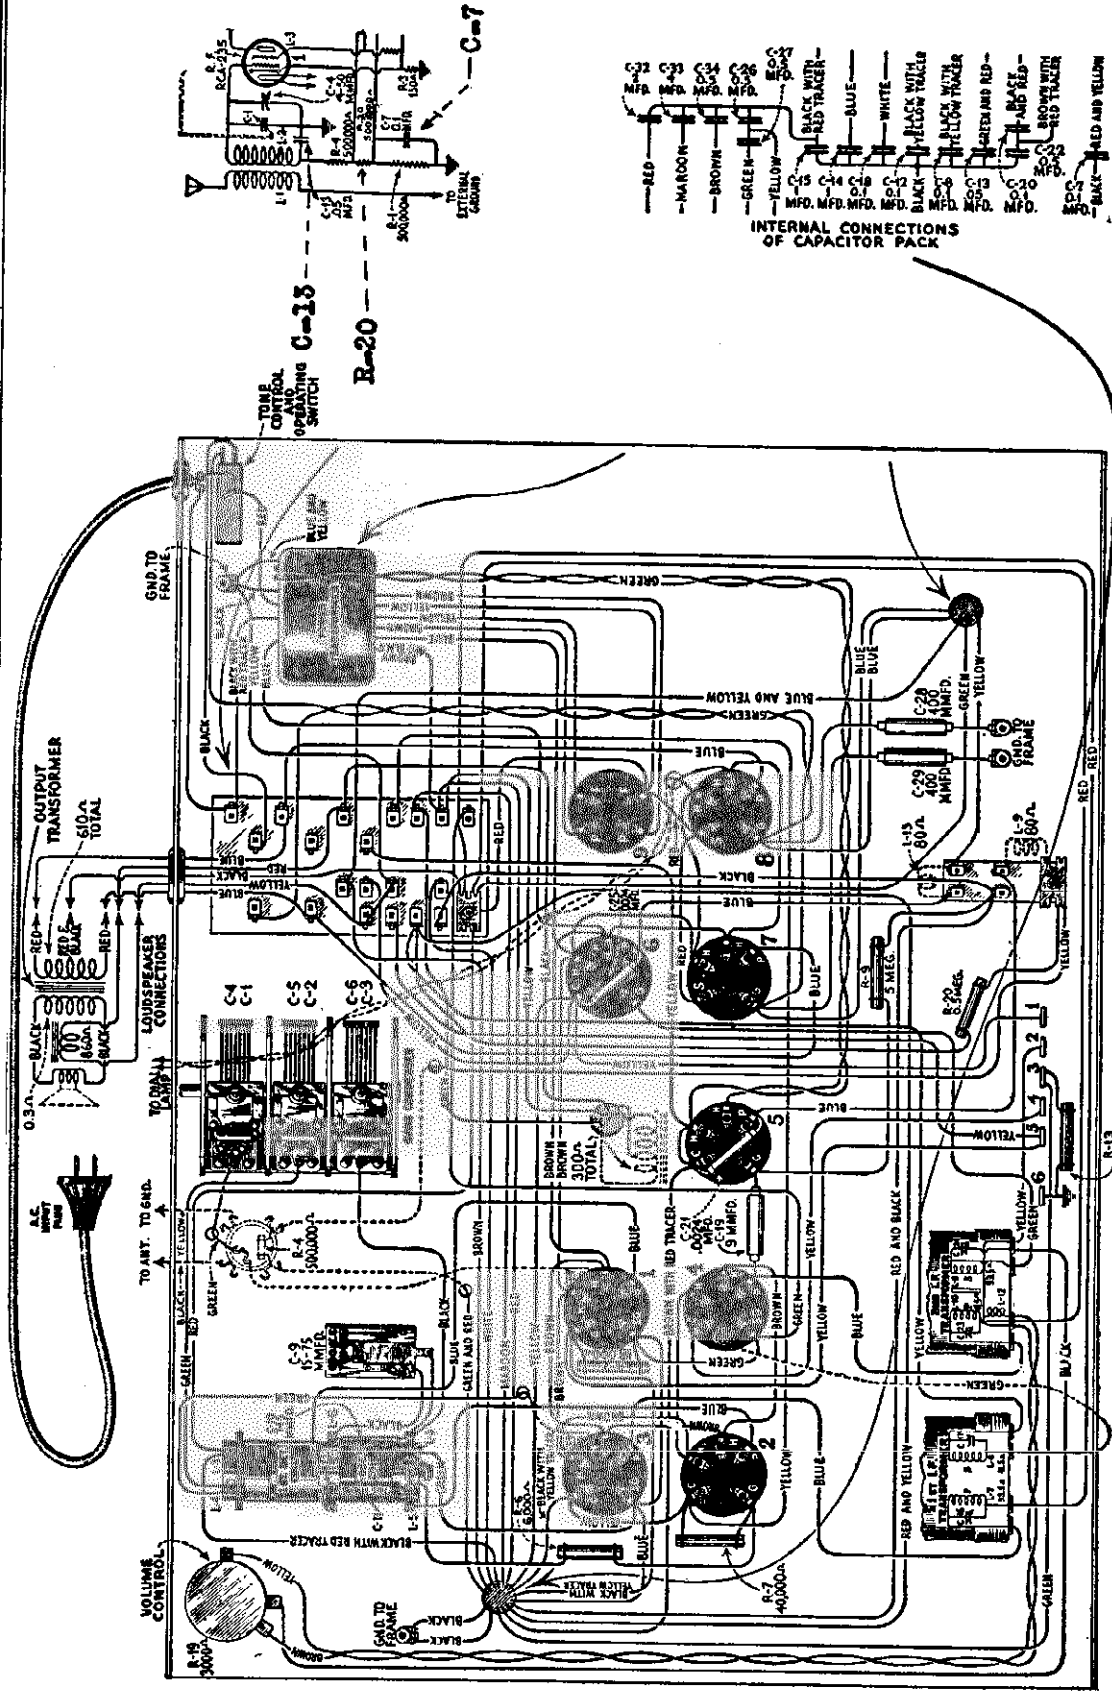

Wiring diagram of late production R-11

Late production of the RCA Victor Radiola R-11 has a slight change in the wiring, two changes in capacitor values and the addition of a 0.5 megohm resistor (R-20). Capacitor C-7 has been changed from 0.5 mfd. to 0.1 mfd. and C-13 from 0.1 mfd. to 0.05 mfd. Resistor R-20 has been added.

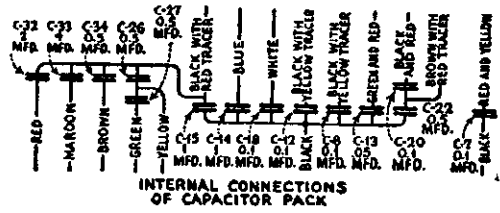

R. C. A. VICTOR CO., INC.

MODEL R-11 AC
Parts List
Notes

RCA Victor Console, R-11

REPLACEMENT PARTS

Stock No.	DESCRIPTION	List Price	Stock No.	DESCRIPTION	List Price
2563	Resistor—0.000 ohms—Carbon type—Package of 5	\$3.00	3097	Scale—Dial drum scale with set screws—Pkg. of 2	\$0.50
2730	Resistor—18,000 ohms—Carbon type—Package of 5	2.00	3098	Capacitor—0.008 mfd.	.50
2734	Capacitor—745 mmfd.—Package of 5	2.20	3099	Capacitor—0.005 mfd.	.75
2746	Socket—Dial lamp socket	.50	7054	Cord—Power cord	1.00
2747	Contact cap—Package of 5	.50	7062	Capacitor—Adjustable oscillator trimmer capacitor	1.00
2749	Capacitor—2400 mmfd.	1.50	7211	Capacitor—3 gang tuning capacitor with mounting screws and washers	8.00
2875	Knobs—Package of 5	1.50	7266	Transformer—1st intermediate transformer	3.00
2882	Socket—UY Radiotron socket—Complete with insulating shield—8 used	.50	7267	Transformer—2d intermediate transformer	3.00
2968	Socket—UX Radiotron socket—Complete with insulating shield—1 used	.50	7268	Coil—Detector or A.V.C. R.F. choke coil—Complete with mounting rivet	.60
2999	Shaft—Dial drum drive shaft	.50	7269	Capacitor pack—In metal container—60 cycle	7.25
3029	Indicator—Tuning dial indicator—Complete with bracket	.50	7270	Reactor—Filter reactor	4.00
3046	Resistor—190,000 ohms—Carbon type—Package of 5	2.50	7271	Transformer—Interstage transformer	4.25
3047	Resistor—1500 ohms—Carbon type—Package of 5	2.50	7272	Transformer—Power transformer—105-125 volt, 50-60 cycles	12.00
3048	Resistor—500,000 ohms—Carbon type—Package of 5	2.50	7273	Capacitor pack—By-pass capacitor pack—25-40 cy.	10.00
3049	Resistor—150 ohms—Carbon type—Package of 5	2.50	7274	Transformer—Power transformer—105-125 volt, 25-40 cycles	15.00
3050	Resistor—11,000 ohms—Carbon type—Package of 1	.60	7275	Transformer—Power transformer—220 volt, 50-60 cycles	10.00
3051	Resistor—5 megohm—Carbon type—Package of 5	2.00			
3053	Capacitor—9 mmfd.—Package of 2	.50		LOUDSPEAKER ASSEMBLY	
3054	Escutcheon—Station selector escutcheon—With 4 mounting screws	.60	7257	Coil—Cone support with retaining ring, magnet and field coil	6.00
3055	Cushion—Chassis support cushion—Package of 4	.50	7258	Transformer—Output transformer	1.70
3056	Shield—Radiotron shield—6 used—Package of 2	.50	8559	Ring—Cone retaining ring	.80
3076	Resistor—1 megohm—Carbon type—Package of 5	2.50	8601	Cone—Cone with voice coil—Package of 5	15.00
3077	Resistor—30,000 ohms—Carbon type—Package of 5	2.50			
3078	Resistor—10,000 ohms—Carbon type—Package of 5	2.50		CABINET ASSEMBLY	
3079	Resistor—40,000 ohms—Carbon type—Package of 5	2.50	8691	Panel—Control panel	8.50
3085	Capacitor—400 mmfd.	.60	8692	Grille cloth and baffle board	.90
3089	Terminal board—Magnetic pickup terminal board	.50	8693	Leg—Front—Right or left	1.25
3090	Board—A. V. C. and 2nd detector R. F. choke mounting board—Less choke coils	1.00	8694	Leg—Back—Right hand	1.00
3091	Board—Resistor board—Less resistor and capacitors	1.50	8695	Leg—Back—Left hand	1.00
3092	Volume control—Complete with mounting nut	1.90	8696	Stretcher	2.50
3093	Tone control—Complete with mounting nut	1.90	8697	Foot	.75
3094	Shield—Radiotron shield—1 used—Package of 2	.50	8698	Top	5.50
3095	Coil—R.F. coil—Complete with mounting bracket	1.90	8699	Ornament—Control panel ornament	2.25
3096	Coil—1st detector and oscillator coil—Complete with mounting bracket	3.55	9358	Cabinet—Complete less all equipment	62.50

In previous automatic volume control receivers, the volume control was placed in the grid circuit of the automatic volume control tube, its action being to vary the control grid voltage of this tube. When operating sets of this character, the receiver jumped to full sensitivity when not tuned to a signal and if in a noisy location, this noise was very objectionable.

In this instrument, however, the volume control is not in the automatic volume control tube circuit, but in the grid circuit of the second detector. By means of it the signal voltage applied to the second detector is controlled and under no conditions can noise or other signals exceed the level for which it has been set. Electrically, the primary and secondary of the second I. F. transformer are shielded from each other so that there is no transference of energy except by means of a small pickup coil. The volume control is a potentiometer shunted across this coil which determines the amount of pickup that will be used. As a further means of controlling a strong signal, a second section is provided which places up to 10,000 ohms (R-21) in series with the tuned circuit of second detector grid. This effectively reduces even the most powerful signals received.

A 0.005 mfd. condenser connected in series with a 10,000 ohm resistor is

placed across the primary of the output transformer. This functions to reduce the third harmonic distortion, an inherent characteristic of the Pentode output tube. The direct plate and grid voltages are supplied from high voltage alternating current which is rectified by means of Radiotron UX-280. The filter is of the tapped reactor type which gives an output of well filtered D. C. The bias voltage for the Radiotrons RCA-247 is obtained by using a portion of the drop across the reproducer field. One 190,000 ohm and one 30,000 ohm resistors act as the voltage dividing resistors.

A tone control, consisting of a 0.008 mfd. condenser in series with a 200,000 ohm variable resistor connected across the two grids of Radiotrons RCA-247 is incorporated in this stage. The tone control functions to reduce the high frequency output as the resistance is reduced. At the extreme low position, the condenser and secondary of the A. F. transformer resonate at a low frequency and thereby further accentuate the bass response. The two 0.0004 mfd. condensers, connected in series with their mid-point grounded are connected across the secondary of the input transformer. The purpose of these condensers is to prevent audio oscillations and provide a high frequency audio cut-off.

The next circuit to examine is the first detector. The circuit is tuned by means of one of the gang condensers to the frequency of the incoming signal. Radiotron UY-224 is used in this stage. In the grid circuit there is present the incoming signal and the oscillator signal, the latter being at a 175 K. C. difference from the former. The first detector is biased so as to operate as a plate rectification detector and its purpose is to extract the difference or beat frequency, produced by combining the signal and oscillator frequencies. The beat frequency—175 K. C.—appears in the plate circuit of the first detector which is accurately tuned to 175 K. C.

The next stage is that of the I. F. amplifier. A single stage is used, requiring two I. F. transformers, consisting of four tuned circuits. The plate circuit of the first detector, the grid and plate circuit of the I. F. amplifier and the grid circuit of the second detector are all tuned to 175 K. C. Radiotron RCA-235 is used in this stage and its control grid voltage is also varied by means of the automatic volume control tube.

SERVICE DATA


Information pertaining to general service data for this type receiver may be obtained from the Service Notes already issued on the RCA Victor Radiola Superette.

MODEL R-11 AC
Resistance Data

R. C. A. VICTOR CO., INC.

From Chassis To	Correct	Incorrect
2 Det Control Grid(Pickup Board Terf2)	93.5 ohms	
2 Det Control Grid to V.C. Arm	3,093.5-10,093.5 ohms	
2 Det Cathode	30,000 ohms	
Pickup Board Terminal 2	1,000,000 ohms	
2 Detector Plate	54,830 ohms	
2 Detector Plate-'80 Fil	2,380 ohms	
'47 Control Grid	45,850 ohms	
'47 Control Grid to Control Grid	7,700 ohms	
'47 Screen	\$2,450 ohms	
'47 Plate	0 ohms	
'47 Plate to Plate	32,755 ohms	
80 Anode to Anode	610 ohms	
80 Anode to chassis	230,400 ohms	
80 Fil to chassis	230 ohms	
80 Fil to chassis	\$2,450 ohms	
Across Speaker field	860 ohms	

From Chassis To	Correct	Incorrect
RF Control Grid(early model)	1,000,005 ohms	
RF Control Grid(late model)	1,500,005 ohms	
RF Cathode	150 ohms	
RF Screen Grid	18,150 ohms	
RF Plate	32,508 ohms	
RF Plate to '80 Fil	58 ohms	
1 Detector Control Grid	5 ohms	
1 Detector Cathode	1,500 ohms	
1 Detector Screen	18,150 ohms	
1 Detector Plate	32,541.5 ohms	
1 Detector Plate to '80 Fil	93.5 ohms	
Oscillator Control Grid	41,500 ohms	
Oscillator Cathode	1,500 ohms	
Oscillator Plate	18,151 ohms	
Osc Plate and Det Screen	1 ohm	
IF Control Grid (all models)	500,041.5 ohms	
IF Control Grid- AVC Plate (early)	121.5 ohms	
IF Screen Grid	18,150 ohms	
IF Plate	32,491.5 ohms	
IF Plate -'80 Fil	41.5 ohms	
AVC Control Grid (early)	7,230,285 ohms	

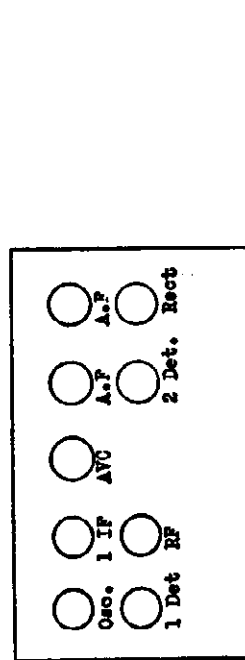

Line Voltage 110. Volume Control does not change voltages.

Tube	Cathode- Heater	Control Grid- Cathode	Screen Grid- Cathode	Plate- Cathode	Plate Current	Filament Voltage
RF	2.	0.1*	75.	205.	5.0 ma	2.2
Osc.	8.	0.	-	60.	5.0	2.2
1 Det.	7.	7.0	70.	200.	0.5	2.2
IF	2.	0.1*	75.	205.	5.0	2.2
AVC	0.	0.	-	25.	-	2.2
2 Det.	20.	8.0*	-	180.	0.6	2.2
Power	-	10.	210.	205.	25.	2.2
Power	-	10.	210.	205.	25.	2.2

All tubes removed from sockets and AC plug removed from power supply.
Field coil disconnected

TC-Y
BC-AVC ohk-Y (.1 mfd)
BLC- in tuned circuit (.06 mfd)
BLC- in tuned circuit (.1 mfd)
BC- 1 IF Tr. Sec -Y
BC- rf K-Y (.1 mfd)
BC- rf Sg- Y (.1 mfd)
BC-47 Sg- Y (.5 mfd)
BC-'80 F- Spkr div. tap
BC- rf P-Y (.1 mfd)
See RF Screen Grid

TC-Y
BC-Y (.1 mfd)
See R-F Screen
See R-F Plate
TC- 1 IF Tr.
BLC-Osc.Grid Cir. (.0074)
BC-Osc K-Y (.1 mfd)
BC-Osc K-Y (.1 mfd)
See R-F Screen


BC-Y (.5 mfd)
TC-1 IF Tr Sec
See RF Screen
See 1 Detector Plate
TC- 2 IF Tr.Pri.
BLC- if P- AVC G(.9mfd)
BC-5 meg - AVC H (.1mfd)
BC-1 meg- Y (.1 mfd)
TC-'80 Anode -80 F(2mfd)
FC filter chk-80 F(4 mfd)
BC-AVC K-Y (.5 mfd)
BC-Spkr divides tap -Y
BC-AVC K-AVC P(.0024 mfd)
See early model
BC-AVC K-AVC P
BC-AVC K-Y
BC-AVC P-AVC K
See RF Control Grid

AVC Control Grid (late)
AVC Cathode
AVC Plate

* Not true reading due to resistance in the circuit.

R. C. A. VICTOR CO., INC.

MODEL RE-18
Schematic

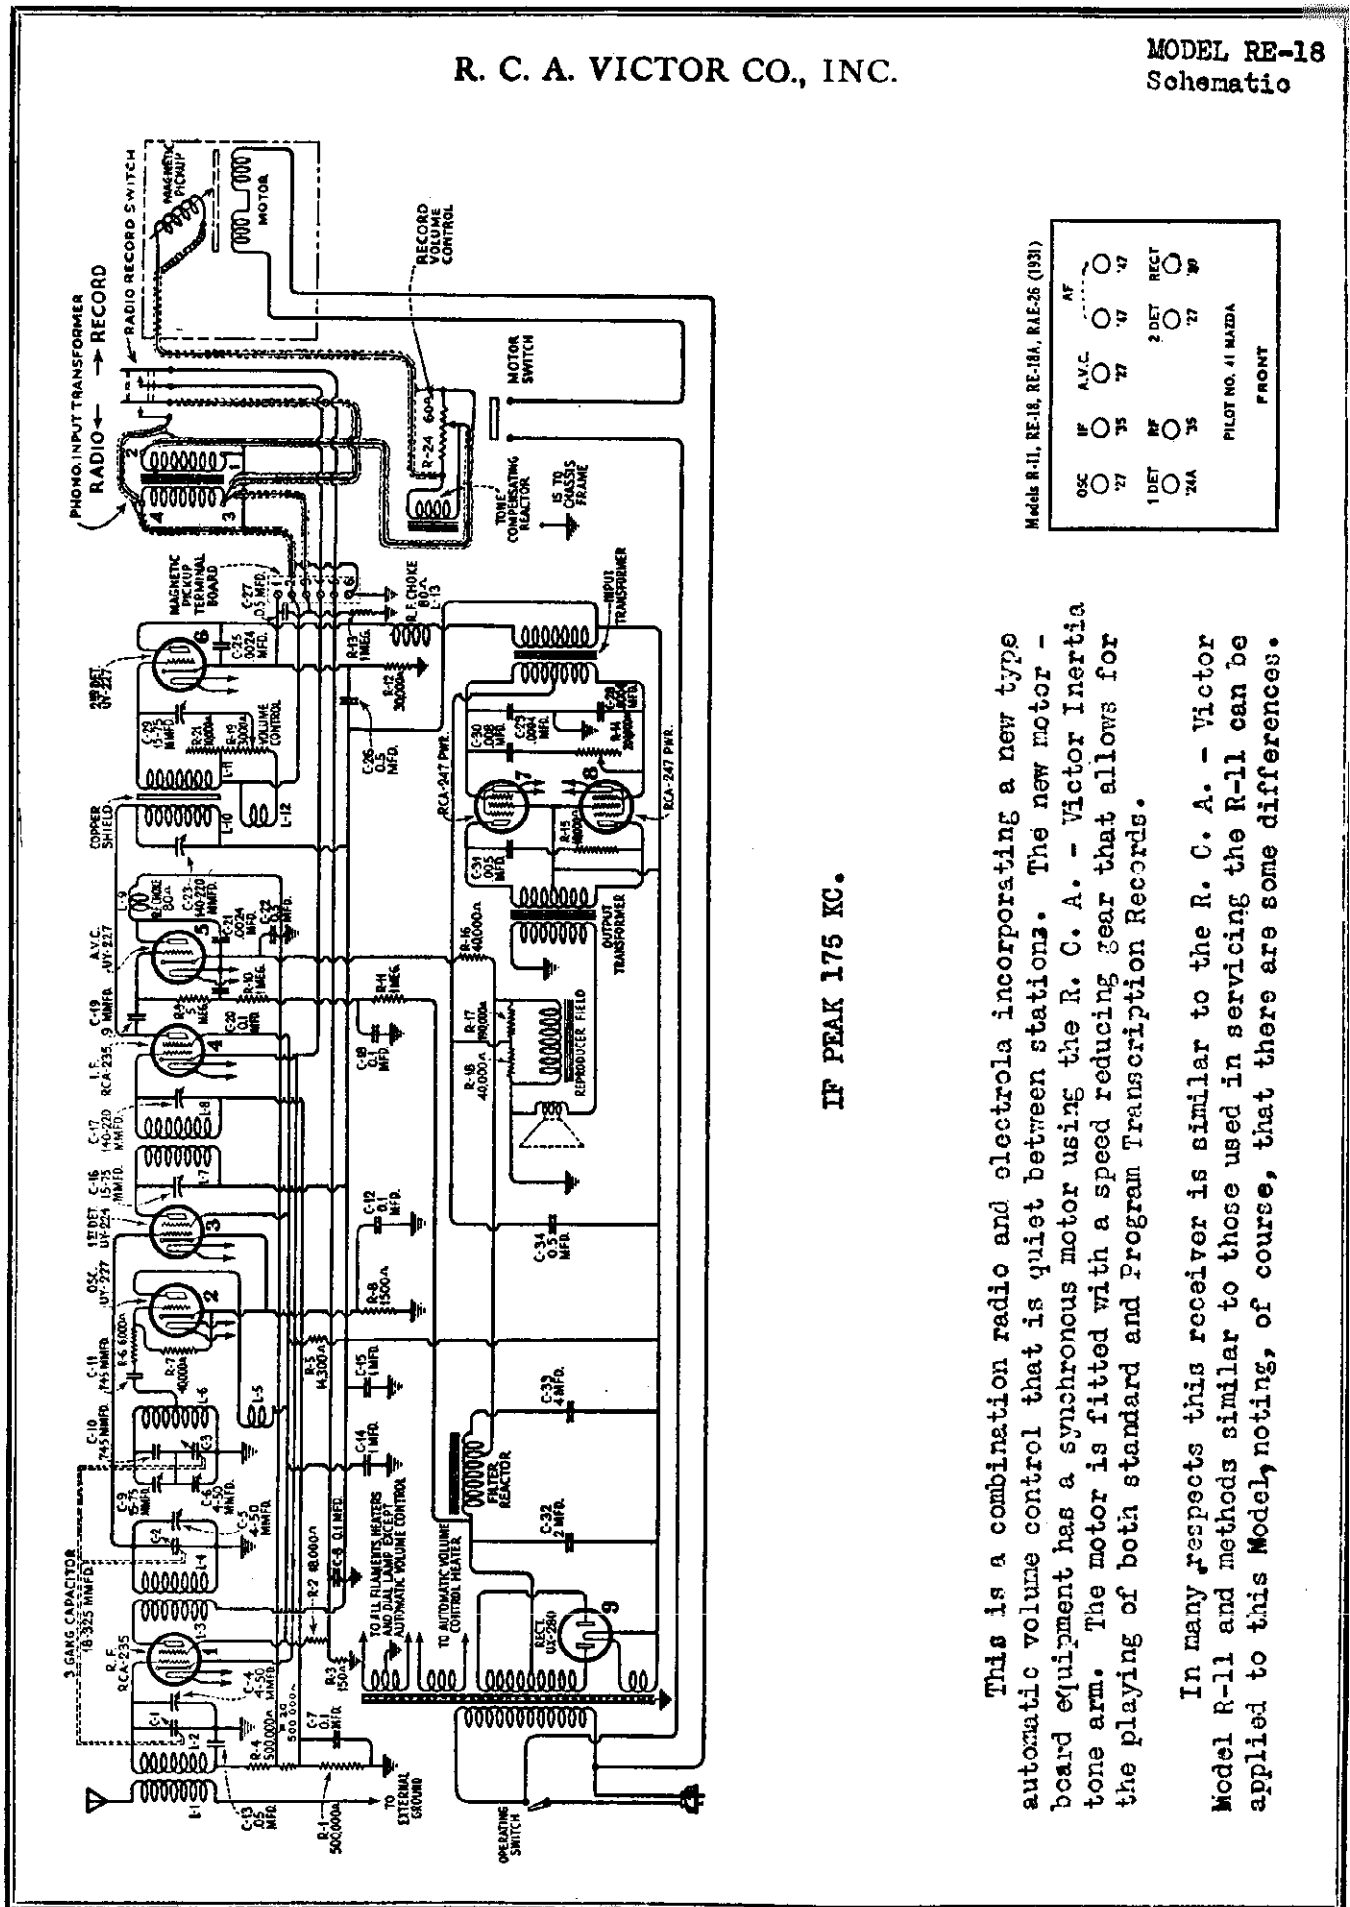

IF PEAK 175 KC.

This is a combination radio and electrola incorporating a new type automatic volume control that is quiet between stations. The new type board equipment has a synchronous motor using the R. C. A. - Victor Inertia tone arm. The motor is fitted with a speed reducing gear that allows for the playing of both standard and Program Transcription Records.

In many respects this receiver is similar to the R. C. A. - Victor Model R-11 and methods similar to those used in servicing the R-11 can be applied to this Model, noting, of course, that there are some differences.


Models R-11, RE-18, RE-18A, RAE-26 (1931)

OSC	27	1 DET	24A
IF	35	RF	35
A.V.C.	77	2 DET	27
AF	17	RECT	30

PILOT NO. 41 MAZDA
FRONT

MODEL RE-13
Assembly Wiring

R. C. A. VICTOR CO., INC.

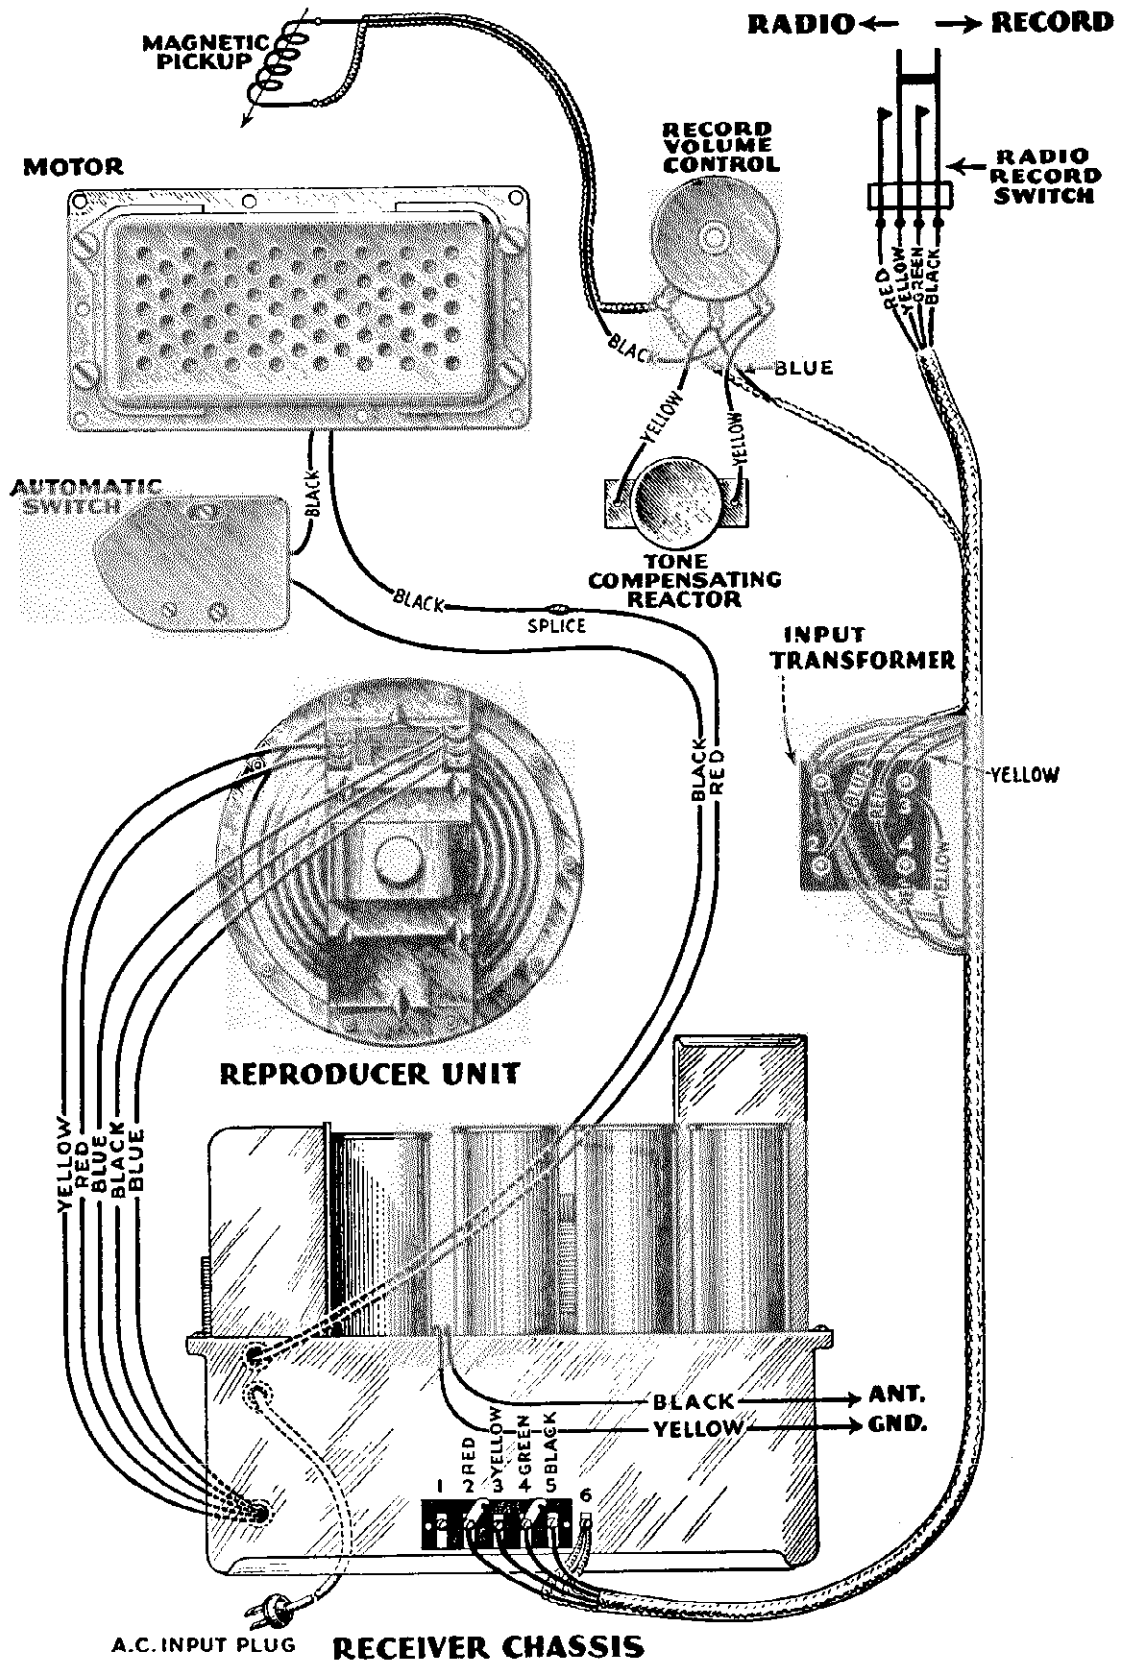


R. C. A. VICTOR CO., INC.

MODEL RE-18
Resistance Data

See RF control Grid
2 Det Control Grid(Pickup Board Term#2) 93.5 ohms
2 Det Control Grid to V.C. Arm 3,093.5-10,093.5 ohms TC-2D Cg- VC Arm

2 Det Cathode 30,000 ohms
Pickup Board Terminal 2 1,000,000 ohms
2 Detector Plate 34,830 ohms
2 Detector Plate-'80 Fil 2,380 ohms
'47 Control Grid 43,860 ohms
'47 Control Grid to Control Grid 7,700 ohms
'47 Screen 32,450 ohms
'47 Screen - '30 Fil 0 ohms
'47 Plate 32,756 ohms
80 Anode to chassis 610 ohms
80 Anode to Anode 230,400 ohms
80 Fil to chassis 230 ohms
32,450 ohms
Across Speaker field 860 ohms

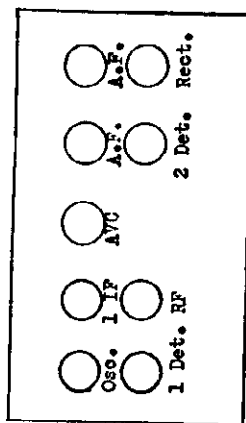

All Tubes removed from sockets and AC plug disconnected from power supply line. All phonograph equipment disconnected from pickup terminal board and terminals 2 and 3 inter-connected. Also terminals 4 and 5 inter-connected. Field Coil disconnected

From Chassis to Correct Incorrect

Aerial to Ground post 40 ohms

Chassis to

RF Control Grid(early model) 1,000,005 ohms BLC- in tuned circuit (.1 mfd)
RF Control Grid(late model) 1,500,005 ohms BLC- in tuned circuit (.06 mfd)

RF Cathode 150 ohms
RF Screen Grid 18,150 ohms

RF Plate 32,508 ohms

RF Plate to '80 Fil 58 ohms

1 Detector Control Grid 5 ohms
1 Detector Cathode 1,500 ohms
1 Detector Screen 18,150 ohms
1 Detector Plate 32,541.5 ohms
1 Detector Plate to '80 Fil 93.5 ohms
Oscillator Control Grid 41,500 ohms

Oscillator Cathode 1,500 ohms

Oscillator Plate 18,151 ohms

Osc Plate and Det Screen 1 ohms

IF Control Grid (all models) 500,041.5 ohms

IF Control Grid- AVC Plate (early) 121.5 ohms

IF Screen Grid 18,150 ohms

IF Plate 32,491.5 ohms

IF Plate - '80 Fil 41.5 ohms

AVC Control Grid (early) 7,230,285 ohms

AVC Control Grid (late)

AVC Cathode 4,230,285 ohms

270,000 ohms

Incorrect

40 ohms

Chassis to

TC-Y
BC-Y (.1 mfd)
BC- rf K-Y (.1 mfd)
BC- rf Sg-Y (.1 mfd)
BC- 47 Sg-Y (.5 mfd)
BC-'80 F- Spkr div. tap
BC- rf P-Y (1. mfd)
See RF Screen Grid

TC-Y
BC-Y (.1 mfd)
See R-F Screen
See R-F Plate
TC- 1 IF Tr.
BLC-Osc.Grid Cir.(0074)
BC-Osc K-Y (.1 mfd)
BC-Osc K-Y (.1 mfd)
See R-F Screen

BC-Y (.5 mfd)
TC-1 IF Tr Sec
See RF Screen
See 1 Detector Plate
TC-2 IF Tr.Pri
BLC- 1F P- AVC Cg(9 mmfd)
BC-5 meg - AVC H (.1 mfd)
BC-1 meg- Y (.1 mfd)
FC-'80 Anode -80 F(2 mfd)
FC Filter chk-80 F(4 mfd)
BC-AVC K-Y (.5 mfd)
BC-Spkr divides tap- Y
BC-AVC K-AVC P(.0024 mfd)
See early model
BC-AVC K-AVC P
BC-AVC K-Y

58 ohms

5 ohms
1,500 ohms
18,150 ohms
32,541.5 ohms
93.5 ohms
41,500 ohms

1,500 ohms

18,151 ohms

1 ohms

500,041.5 ohms

121.5 ohms

18,150 ohms

32,491.5 ohms

41.5 ohms

7,230,285 ohms

4,230,285 ohms

270,000 ohms

Peak Frequency = 175 KC

110 VOLT A. C. LINE (Values Control Setting Does Not Affect Voltages)

Radiores No.	Cathode or Filament to Control Grid Volts, D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Cathode or Filament to Plate Volts, D. C.	Plate Current M. A.	Screen Current M. A.	Heater or Filament Value, A. C.
1	2	0	205	5.0	0.5	2.2
2	8	0	60	5.0	—	2.2
3	1	7.8	200	0.5	0.1	2.2
4	2	7.5	205	5.0	0.5	2.2
5	0	0	25	0	—	2.2
6	20	0	180	0.5	—	2.2
7	—	10	210	25	—	2.2
8	—	10	210	25	—	2.2

* Not used reading due to resistance in circuit.

MODEL RE-13-A
Parts List

R. C. A. VICTOR CO., INC.

RCA Victor Radiola Electrola RE-18A is a nine-tube combination super-heterodyne radio receiver and electric phonograph. Except for the cabinet and tuning dial, the RE-18A is similar to the RE-18. A reference to the RE-18 service notes should be made for information relative the circuits and similar data. The replacement parts are listed below.

ELECTRICAL SPECIFICATIONS

Voltage Rating.....105-125 Volts
 Frequency Rating....25, 30, 50 and 60 Cycles
 Power Consumption.....25, 30 and 50 Cycles
 170 Watts, 60 Cycles 160 Watts
 Type of Circuit.....Super-Heterodyne using
 Super-Control Radiotrons and Push-pull Pen-
 tode output stage.
 Type and Number of Radiotrons...2 RCA-235,
 3 UY-227, 1 UY-224, 1 UX-280, 2 RCA-247—
 Total, 9
 Number of Radio Frequency Stages.....1
 Type of First Detector..Tuned Input Grid Bias
 Number of Intermediate Stages.....1
 Type of Second Detector.....Power Grid Bias
 Type of Automatic Volume Control...UY-227
 Controlled by signal voltage in turn controlling
 bias on R. F. and I. F. tubes

Type of Manual Volume Control.....Potenti-
 ometer used to regulate input to second de-
 tector
 Type of Tone Control...Variable resistance in
 series with capacitor connected across grids of
 output stage. Capacitor tunes transformer at
 "low" position
 Number of Audio Stages (Radio).....1
 Number of Audio Stages (Phonograph).....2
 Type of Magnetic Pick-up.....Low Impedance
 Type of Tone Arm.....Inertia
 Diameter of Turntable.....12 inches
 Type of Rectifier.....Full Wave
 Type of Loudspeaker.....8" Electro-Dynamic
 Undistorted Output.....4.0 Watts

REPLACEMENT PARTS

Stock No.	DESCRIPTION	List Price	Stock No.	DESCRIPTION	List Price
RECEIVER ASSEMBLY					
2563	Resistor—6,000 ohms—Carbon type—1 watt—Pack- age of 5.....	\$3.00	3056	Shield—Radiotron shield—6 used—Package of 2....	\$0.50
2730	Resistor—18,000 ohms—Carbon type—1 watt— Package of 5.....	2.00	3076	Resistor—1 megohm—Carbon type—½ watt— Package of 5.....	2.50
2734	Capacitor—745 mmfd.—Package of 5.....	2.20	3077	Resistor—30,000 ohms—Carbon type—½ watt— Package of 5.....	2.50
2746	Socket—Dial lamp socket.....	.50	3078	Resistor—10,000 ohms—Carbon type—½ watt— Package of 5.....	2.50
2747	Cap—Grid contactor cap—Package of 5.....	.50	3079	Resistor—40,000 ohms—Carbon type—½ watt— Package of 5.....	2.50
2749	Capacitor—2400 mmfd.....	1.50	3085	Capacitor—400 mmfd.....	.60
2875	Knob—Tuning control, volume control or tone con- trol knob—Package of 5.....	1.50	3089	Board—Terminal board complete with 5 terminals..	.50
2882	Socket—Five contact Radiotron socket complete with insulator—8 used.....	.50	3091	Board—Resistor board complete less resistors and capacitors.....	1.00
2963	Resistor—8,000 ohms—Carbon type—1 watt— Package of 5.....	2.50	3092	Volume control—Volume control complete with mounting nut.....	1.50
2968	Socket—Four contact Radiotron socket complete with insulator—1 used.....	.50	3093	Tone control—Tone control complete with mounting nut.....	1.90
3024	Capacitor—9 mmfd.—Package of 2.....	.50	3095	Coil—R. F. coil.....	1.90
3046	Resistor—190,000 ohms—Carbon type—½ watt— Package of 5.....	2.50	3096	Coil—1st detector and oscillator coil complete with mounting bracket.....	3.55
3047	Resistor—1,500 ohms—Carbon type—½ watt— Package of 5.....	2.50	3098	Capacitor—0.008 mfd.....	.50
3048	Resistor—500,000 ohms—Carbon type—½ watt— Package of 5.....	2.50	3099	Capacitor—0.005 mfd.....	.75
3049	Resistor—150 ohms—Carbon type—½ watt—Pack- age of 5.....	2.50	6179	Terminal—Single ground terminal with screw com- plete with mounting rivet—Package of 5.....	.50
3050	Resistor—14,000 ohms—Carbon type—3 watt.....	.60	6188	Resistor—2 megohm—Carbon type—½ watt— Package of 5.....	2.00
3055	Cushion—Receiver chassis sponge rubber cushion— Package of 4.....	.50	6189	Bracket—Dial lamp bracket and indicator—Package of 2.....	.65
			6190	Shaft—Tuning dial shaft complete with 3 washers— —Package of 5.....	.85

R. C. A. VICTOR CO., INC.


MODEL RE-18-
Parts List

REPLACEMENT PARTS—Continued

Stock No.	DESCRIPTION	List Price	Stock No.	DESCRIPTION	List Price
RECEIVER ASSEMBLY—Continued					
6191	Cord—Condenser drum drive cord—Package of 5...	\$0.55	6119	Stud—Motor hanging stud—Package of 6.....	\$0.50
6192	Spring—Condenser drum drive cord tension spring— Package of 10.....	.50	6120	Screw—For holding turntable spindle bearing and grease cap—Package of 10.....	.50
7054	Cord—Power cord.....	1.00	6121	Bearing—Turntable spindle bearing and grease cap..	1.10
7062	Capacitor—Adjustable capacitor—15-70 mmfd.....	1.00	6215	Escutcheon—Shift lever speed escutcheon plate with mounting screws—Package of 2.....	.70
7266	Transformer—1st intermediate transformer.....	3.00	6216	Rod—Automatic brake trip rod with nut—Package of 5.....	.50
7267	Transformer—2nd intermediate transformer.....	3.00	6221	Cover—Pickup cover.....	.75
7268	Coil—Detector choke coil complete with mounting rivet.....	.60	6222	Pickup—Pickup unit complete.....	12.50
7269	Capacitor—Comprising one 2.0 mfd., one 4.0 mfd., four 0.5 mfd., two 1.0 mfd., five 0.1 mfd. and one 0.05 mfd. capacitor in metal container.....	7.25	6224	Receptacle—Tungstone needle box holder.....	.75
7270	Reactor—Filter reactor.....	4.00	6232	Box—Needle box with lid—Package of 2.....	.90
7271	Transformer—Interstage transformer.....	4.25	6237	Holder—Twin needle holder with mounting screws..	.75
7272	Transformer—Power transformer—105-125 volts, 50-60 cycles.....	12.00	6238	Transformer—Input transformer.....	3.10
7273	Capacitor—Comprising one 4.0 mfd., one 6.0 mfd., four 0.5 mfd., two 1.0 mfd., five 0.1 mfd., and one 0.05 mfd. capacitors in metal container.....	10.00	7084	Cover—Turntable cover.....	.50
7274	Transformer—Power transformer—105-125 volts— 25-40 cycles.....	15.00	7151	Back—Pickup housing back.....	.50
7275	Transformer—Power transformer—220 volts—50-60 cycles.....	10.00	7305	Gear—Gear reducing unit complete.....	4.50
7438	Capacitor—Variable tuning capacitor.....	5.20	7332	Cable—Main cable from receiver to input transform- er, volume control and radio record switch.....	2.30
7439	Drum—Tuning condenser drive drum with set screw —Complete with 3 dial scale mounting nuts.....	.50	7387	Reactor—Tone compensating reactor with bracket..	.85
7440	Scale—Dial and dial scale.....	.75	7388	Spindle—Turntable spindle with fibre gear—110 volts or 220 volts—60 cycles.....	6.00
8871	Support—Receiver chassis metal mounting support —Package of 4.....	.75	7389	Rotor and shaft—110 volts or 220 volts—60 cycles..	9.00
LOUDSPEAKER ASSEMBLY					
3237	Speaker mounting screw assembly—Comprising 4 screws, 8 washers, 8 nuts and 4 eyelets—Package of 1 set.....	.50	7390	Motor mounting washer and springs—Comprising 3 "C" washers, 9 cup washers and 6 springs—Pack- age of 1 set.....	.75
7257	Coil assembly—Comprising field coil, cone bracket and magnet.....	6.00	7391	Volume control—Record volume control complete with mounting nut and washer.....	1.35
8559	Ring—Cone retaining ring.....	.80	7393	Block—Pickup connector block and wire.....	.90
8601	Cone—Speaker paper cone—Package of 5.....	15.00	7400	Spindle—Turntable spindle with fibre gear—25 cycles.	8.00
MOTOR BOARD ASSEMBLY					
X-13	Board—Motor board less equipment.....	5.85	7401	Rotor and shaft—25 cycles.....	10.00
2614	Switch—Automatic brake switch.....	1.40	7402	Spindle—Turntable spindle with fibre gear—30 cycles.	8.00
2620	Cushion—Pickup rubber cushions—Comprising 1 damper and two pivot cushions—Package of 5 sets.	1.25	7403	Rotor and shaft—30 cycles.....	10.00
2767	Spring—Pickup magnet retaining spring—Package of 10.....	.50	7443	Rotor and shaft—110 volts or 220 volts—50 cycles..	9.00
2768	Armature—Pickup armature.....	.50	7444	Spindle—Turntable spindle with fibre gear—110 volts or 220 volts—50 cycles.....	6.00
2770	Plate—Pickup damper plate—Package of 5.....	.50	8795	Motor—Motor complete—110 volts—60 cycles.....	19.85
2771	Screw—Pickup damper plate mounting screw— Package of 10.....	.50	8800	Motor—Motor complete—110 volts—25 cycles.....	24.65
2875	Knob—Volume control and record-radio switch knob —Package of 5.....	1.50	8801	Motor—Motor complete—110 volts—30 cycles.....	24.65
2908	Spring—Pawl carrier spring—Package of 10.....	.50	8856	Motor—Motor complete—110 volts—50 cycles.....	19.85
3052	Screw assembly—Pickup pole shoe mounting screw assembly—Comprising screw, nut and washer— Package of 10 sets.....	.50	8872	Lever—Shift lever complete with mounting screws..	1.60
3157	Gear—Driving gear—Located on turntable spindle above top plate.....	1.00	8873	Brake—Automatic brake complete with mounting screws and washers.....	3.50
3159	Friction brake—Gear reducing friction brake spring with pad—Complete with mounting rivet—Pack- age of 4.....	2.00	8876	Support—Lid support.....	2.00
3161	Spring—Shift lever spring—Package of 5.....	1.20	8877	Turntable—Turntable with cover.....	4.60
3167	Magnet—Pickup magnet.....	2.60	8880	Arm—Pickup arm complete less pickup unit.....	6.00
3169	Pole shoe—Pickup pole shoe—R. H.....	1.45	8887	Motor—Motor complete—220 volts—60 cycles.....	19.85
3170	Pole shoe—Pickup pole shoe—L. H.....	1.45	8888	Motor—Motor complete—220 volts—50 cycles.....	19.85
3205	Screw—Pickup needle holding screw—Package of 10.	.80	10174	Springs—Automatic brake springs—Set of 4 springs —Package of 2 sets.....	.50
3207	Screw—Pickup cover mounting screw—Package of 10.	.50	10184	Plate—Automatic brake trip plate complete with screws—Package of 5.....	.60
3208	Screw assembly—Pickup mounting screw assembly —Comprising screw, nut and washer—Package of 10.....	.60	CABINET ASSEMBLY		
3211	Washer—Turntable spindle leather washer—Pack- age of 10.....	.50	X-14	Board—Baffle board and grille cloth.....	1.30
3224	Switch—Record-Radio switch complete with mount- ing nut and washer.....	1.35	X-16	Stretcher.....	4.70
3278	Bearing—Rotor shaft fibre thrust bearing and cock button—Package of 10.....	.50	X-17	Foot.....	1.00
3279	Screw and nut—Rotor shaft thrust bearing adjusting screw and nut—Package of 10.....	.50	X-18	Leg.....	3.55
3280	Washer—Metal washer located on turntable spindle underneath gear reducing unit—Package of 20.....	.50	X-19	Lid.....	12.00
3281	Pawl—Gear reducing pawl with mounting stud.....	.50	X-21	Overlay—Front top rail end overlay—R. H. or L. H.	1.25
			X-22	Overlay—Front top rail center overlay.....	2.65
			X-23	Mouldings—Control panel mouldings—Package of 1 set.....	1.60
			X-35	Escutcheon—Tuning dial escutcheon.....	1.15
			X-36	Panel—Control panel.....	6.90
			X-37	Doors—R. H. and L. H. doors complete less door pulls and hinges—Package of 1 set.....	8.00
			X-38	Mouldings—Door mouldings for R. H. and L. H. doors—Package of 1 set.....	3.00
			2776	Catch—Door catch and strike with nail—Package of 2 sets.....	.50
			3156	Label—Metal trade mark label—Package of 5.....	2.50
			6210	Hinge assembly—Door hinge assembly—Comprising 4 hinges and 16 mounting screws—Package of 1 set	.90
			6211	Pull—Door pull with mounting screw—Package of 4.	1.20
			6219	Hinge—Cabinet lid hinge complete with mounting screws—Package of 2.....	.50
			6236	Support—Metal screen support.....	.50
			9110	Cabinet—Cabinet complete less equipment.....	83.00
			10901	Spring—Lid support spring—Package of 2.....	.50


R. C. A. VICTOR CO., INC.

MODEL RE-20 Electrola Schematic

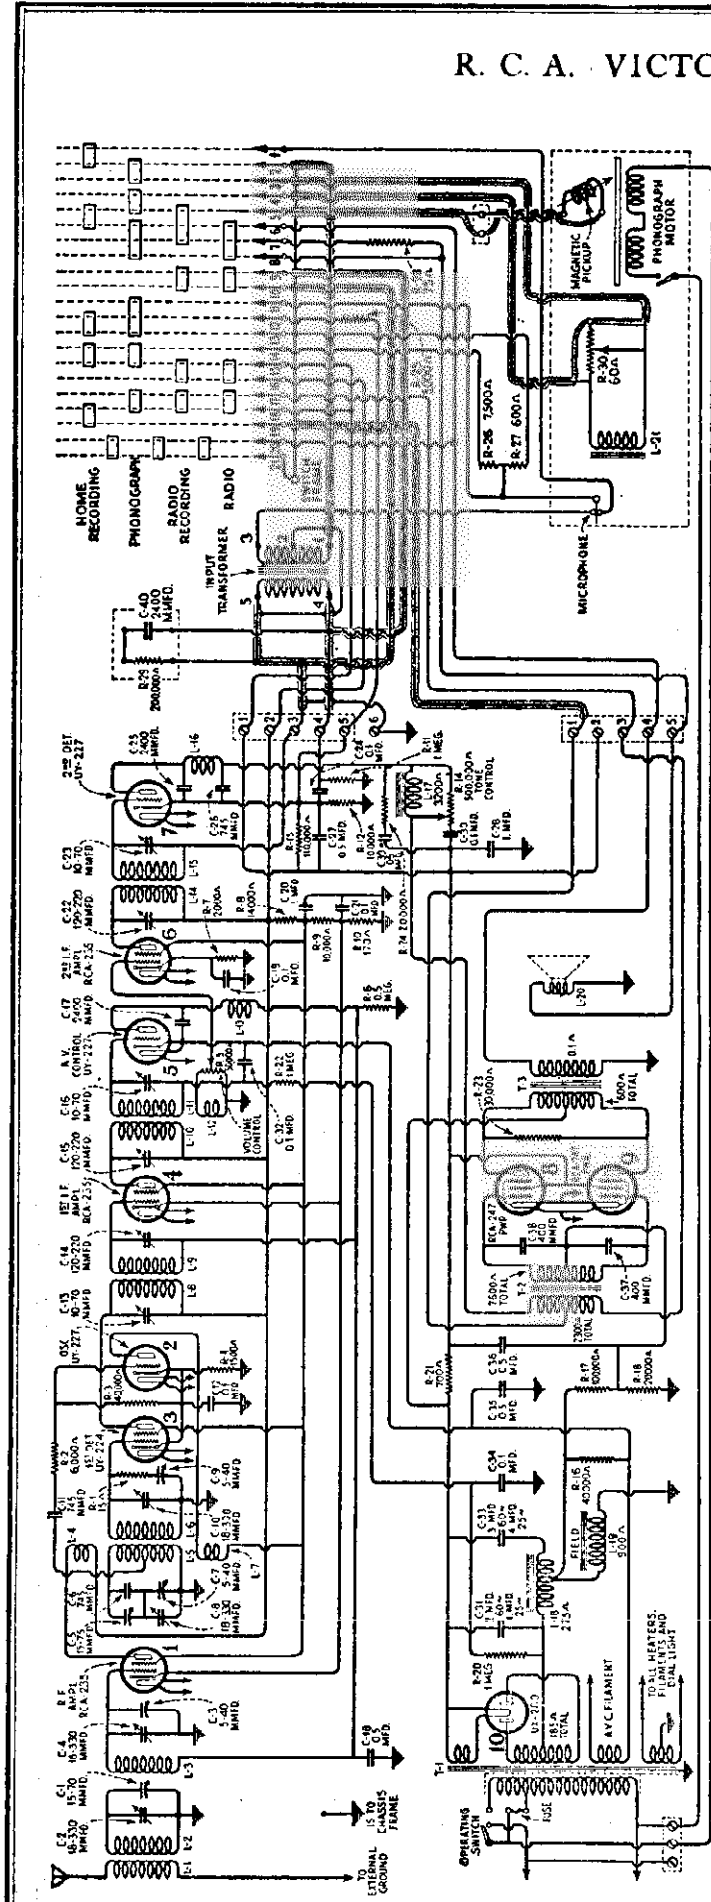

IF PEAK 175 KC.

Model RE-20, (1932)

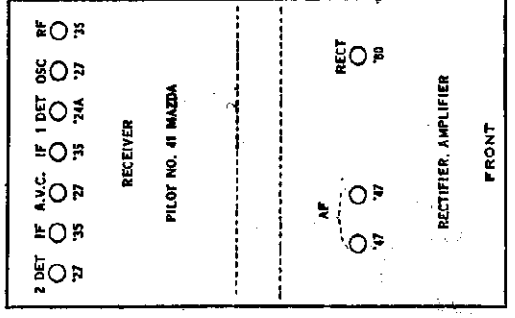

Schematic Circuit


RCA Victor RE-20 is a ten tube De Luxe Super-Heterodyne combination radio receiver and electric phonograph. Except for the differences in cabinet and omission of the automatic record changing mechanism, the RE-20 is similar to the RAE-59.

Service work in conjunction with this model is similar to that of the R-50, R-55 and RAE-59. Reference to these Service Notes should therefore be made when such information is necessary. The replacement parts and the diagrams are given on the following pages.

Voltage Rating.....	105-125 Volts
Frequency Rating.....	25, 30, 50 and 60 Cycles
Power Consumption (Radio only).....	145 Watts
Power Consumption (Phonograph).....	160 Watts (Approximately)
Type of Circuit.....	A. V. C. Super-Heterodyne with Push-pull Pentode Output Stage
Type and Number of Radiotrons.....	3 RCA-235, 1 UY-224, 3 UY-227, 2 RCA-247, 1 UX-280—Total 10
Wattage Dissipation in Loudspeaker Field.....	10 Watts
Undistorted Output.....	4.0 Watts

MODEL RE-20 Electrola
Assembly Wiring

R. C. A. VICTOR CO., INC.

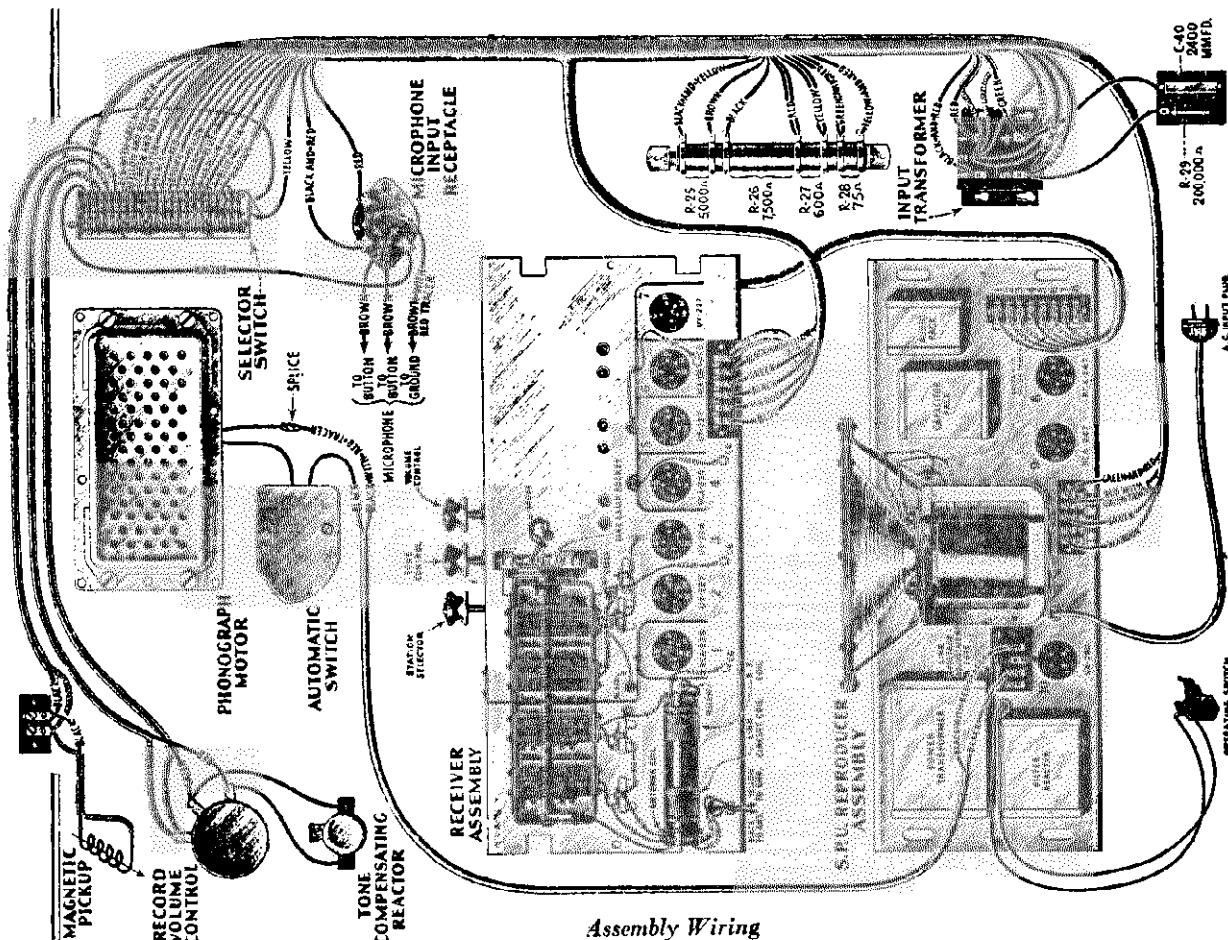

- Type of Magnetic Pickup..... Low Impedance
- Type of Tone Arm..... Inertia
- Diameter of Turntable..... 12 inches
- Type of Phonograph Motor..... Induction, running at synchronous speed
- Turntable Speed..... 78 and 33 1/2 R. P. M.

LOUDSPEAKER ASSEMBLY

7292	Screw assembly—Speaker mounting screw assembly—Comprising two screws, two nuts, two washers and one plate—Package of 1 set.....	.95
8558	Cone—Speaker paper cone.....	4.00
8559	Ring—Cone retaining ring.....	.30
8713	Coil—Speaker field coil.....	5.00

MOTOR BOARD AND MISCELLANEOUS ASSEMBLIES


2749	Capacitor—2400 mmfd.....	1.50
7327	Mechanism—Microphone mechanism complete with cord.....	14.95
7375	Resistor—13175 ohms tapped porcelain resistor.....	2.10
7387	Reactor—Tone compensating reactor complete with mounting bracket.....	.85
7388	Spindle—Turntable spindle with fibre gear—110 volts or 220 volts—60 cycles.....	6.00
7389	Rotor and shaft—110 volts or 220 volts—60 cycles.....	9.00
6226	Transformer—Phono input transformer.....	3.75
6228	Resistor—200,000 ohms—Carbon type—1/2 watt—Package of 5.....	2.50

6227	Resistor board assembly—Comprising one 200,000 ohms—Carbon type—1/2 watt resistor and one 2400 mmfd. tooth pick capacitor on board.....	1.35
6229	Cable—30" shielded red cable from selector switch to volume control—Package of 2.....	.70
6230	Cable—30" shielded green cable from selector switch to volume control—Package of 2.....	.70
6231	Cable—18" shielded black cable from selector switch to pickup terminal board—Package of 2.....	.60
7400	Spindle—Turntable spindle with fibre gear—25 cycles.....	8.00
7401	Rotor and shaft—25 cycles.....	10.00
7443	Rotor and shaft—110 volts or 220 volts—50 cycles.....	9.00
7444	Spindle—Turntable spindle with fibre gear—110 volts or 220 volts—50 cycles.....	6.00
8795	Motor—Motor complete—110 volts—60 cycles.....	19.85
8800	Motor—Motor complete—110 volts—25 cycles.....	24.65
8856	Motor—Motor complete—110 volts—50 cycles.....	19.85
8887	Motor—Motor complete—220 volts—60 cycles.....	19.85
8888	Motor—Motor complete—220 volts—50 cycles.....	19.85

R. C. A. VICTOR CO., INC.

MODEL RE-20 Electrola
SPU Chassis

S. P. U. REPRODUCER ASSEMBLY		S. P. U. REPRODUCER ASSEMBLY	
2240	Resistor—30,000 ohms—Carbon type—1 watt.....	3145	Resistor—700 ohms—Carbon type—3 watt.....
2546	Fuse—Glass type—1.5 amperes—Package of 5.....	6114	Resistor—20,000 ohms—Carbon type—1 watt— Package of 5.....
3045	Resistor—40,000 ohms—Carbon type—1 watt— Package of 5.....	7290	Resistor—Filter reactor.....
3058	Resistor—100,000 ohms—Carbon type—1 watt— Package of 5.....	8710	Transformer—Power transformer—105-125 volts, 50-60 cycles.....
3085	Capacitor—400 mmfd.....	8711	Transformer—Audio transformer.....
3099	Capacitor—0.005 mfd.....	8712	Capacitor pack—Comprising one 2.0 mfd., one 3.0 mfd., one 0.1 mfd., and two 0.5 mfd. capacitors in metal container—50-60 cycles.....
		8749	Transformer—Power transformer—195-125 volts, 25-40 cycles.....
		8750	Transformer—Power transformer—220 volts, 50-60 cycles.....
		8751	Capacitor pack—Comprising two 4.0 mfd., two 0.5 mfd., and one 0.1 mfd. capacitors in metal con- tainer.....
		10907	Fuse—Glass type—3 amperes—Package of 5.....

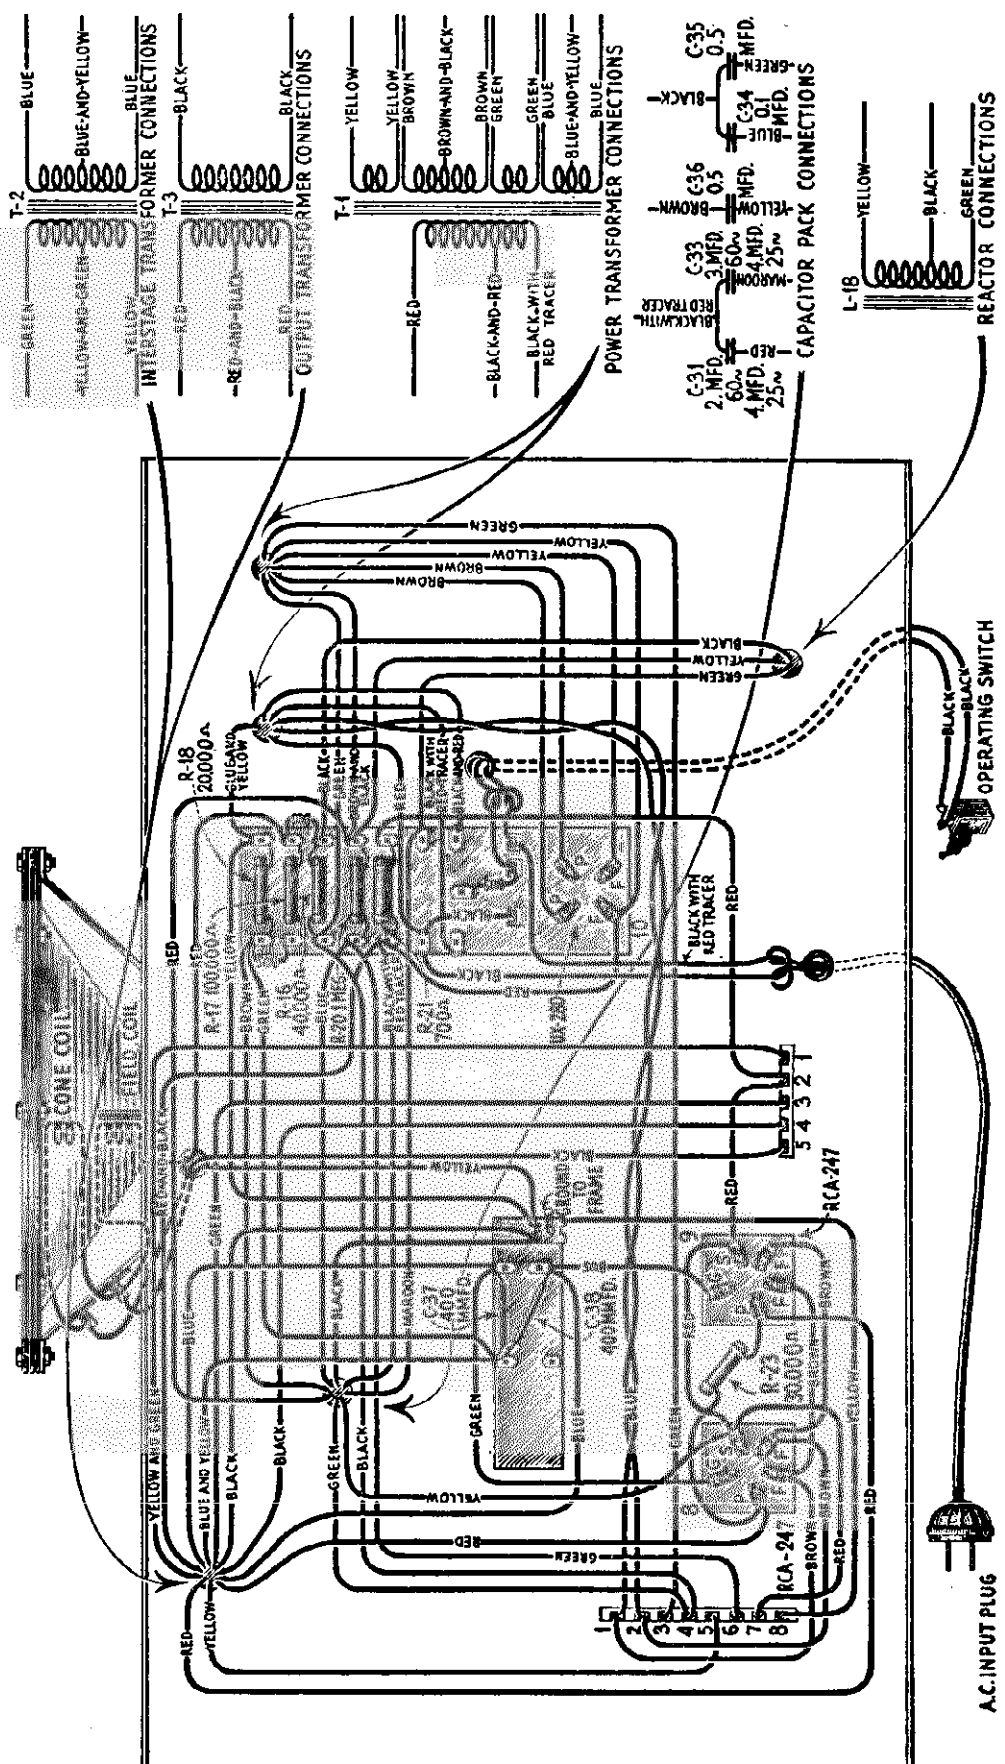

S. P. U. Reproducer Wiring Diagram

MODEL R-21
Schematic
Changes

R. C. A. - VICTOR CO., INC.


Voltage Rating.....105-125 Volts
Frequency Rating.....50-60 Cycles and
25-40 Cycles
Power Consumption.....25-40 Cycles 140 Watts,
50-60 Cycles 135 Watts

7271	Transformer—Intermediate transformer—105-125 volts, 50-60 cycles.....	4.25
7272	Transformer—Power transformer—105-125 volts, 50-60 cycles.....	12.00
7273	Capacitor—Comprising one 4.0 mfd., one 6.0 mfd., four 0.5 mfd., two 1.0 mfd., five 0.1 mfd., and one 0.05 mfd., 125 volts, 25-40 cycle container—105-125 volts, 50-60 cycles.....	10.00
7274	Transformer—Power transformer—105-125 volts, 25-40 cycles.....	15.00
7275	Transformer—Power transformer—230 volts, 60 cycles.....	10.00
7438	Capacitor—Variable tuning capacitor.....	5.20

REPLACEMENT PARTS (Continued)

6192	Spring—Tuning condenser drive condensation spring—Package of 10.....	.50
7054	Cord—Power cord.....	1.00
7062	Capacitor—Adjustable capacitor—15-70 mfd.....	1.00
7266	Transformer—2nd intermediate transformer.....	3.00
7267	Transformer—1st intermediate transformer.....	3.00
7268	Coil—Choke coil.....	.60
7269	Capacitor—Comprising one 2.0 mfd., one 4.0 mfd., four 0.5 mfd., two 1.0 mfd., five 0.1 mfd., and one 0.05 mfd., capacitors in metal container.....	7.25
7270	Reactor—Filter reactor.....	4.00


3099	Capacitor—0.005 mfd.....	.75
3187	Knob—Tuning control, volume control and tone control knob—Package of 5.....	3.25
6179	Terminal—Single ground terminal with set screw—Complete with mounting rivet—Package of 5.....	.50
6186	Resistor—500,000 Ohms—Carbon type—1/2 Watt—Package of 5.....	2.00
6188	Resistor—2 Megohms—Carbon type—1/2 Watt—Package of 5.....	2.00
6189	Bracket—Dial lamp bracket and indicator—Package of 2.....	.65
6190	Shaft—Tuning condenser drive shaft of complete with 3 washers—Package of 5.....	.85
6191	Cord—Tuning condenser drive cord—Package of 5.....	.55

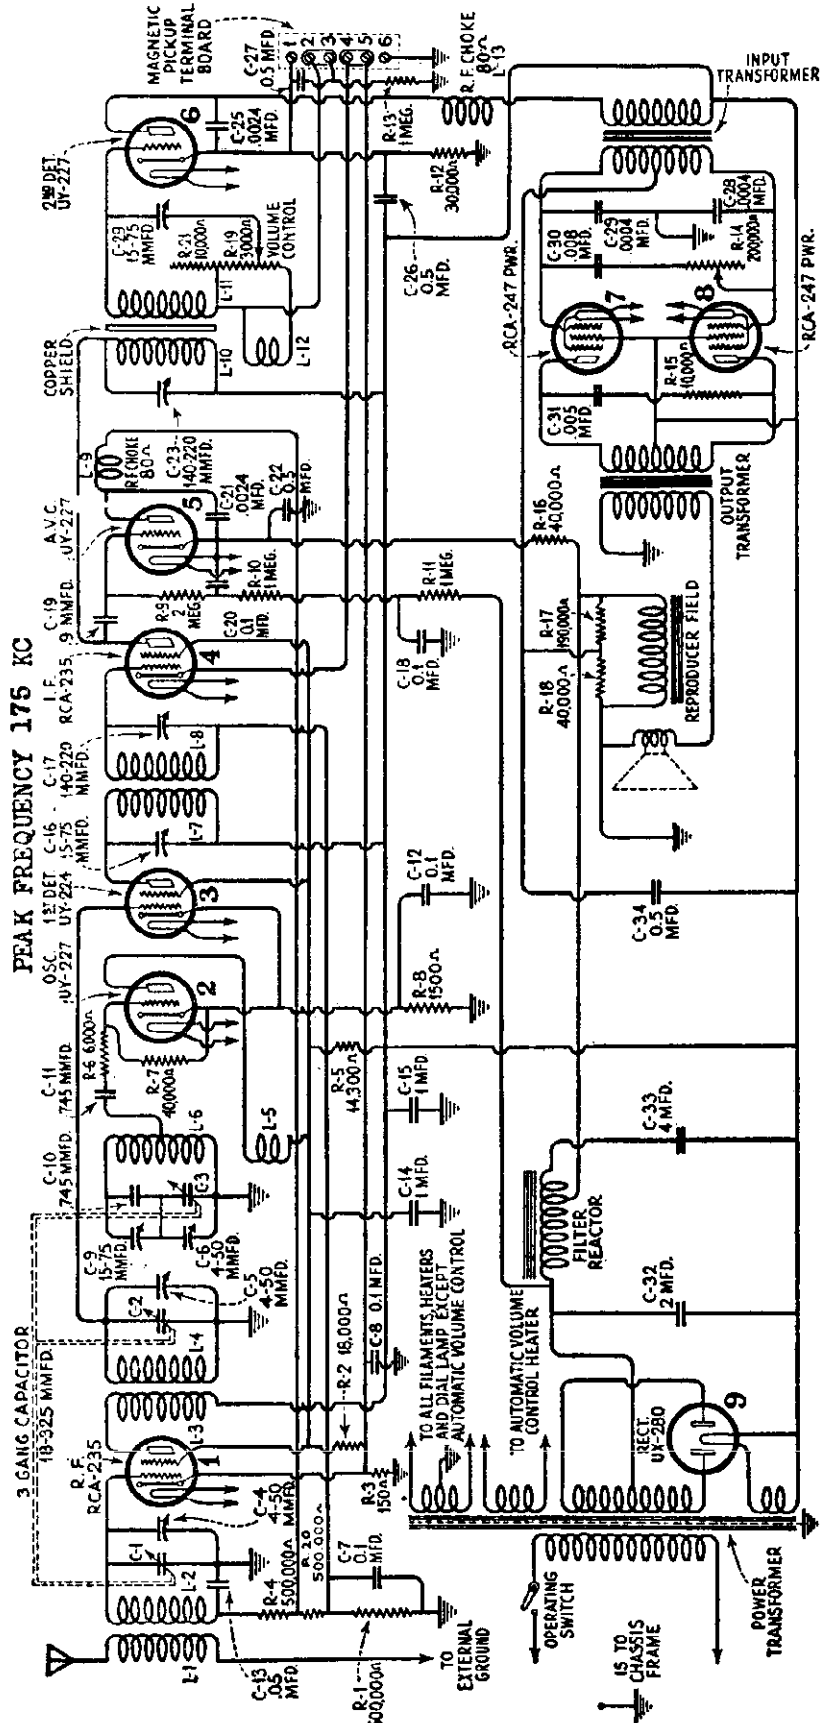

The chassis and loudspeaker used in Model R-21 is identical with that used in the R-11 except for the dial and scale. A reference to the R-11 Service Notes will therefore give any information necessary in reference to circuit diagram, voltage reading and other service information. One change should be noted in later production of R-11s and all R-21s and that is the change in value of Resistor R-9 from 5 Megohms to 2 Megohms.

R. C. A. VICTOR CO., INC.

MODEL RE-21
Chassis

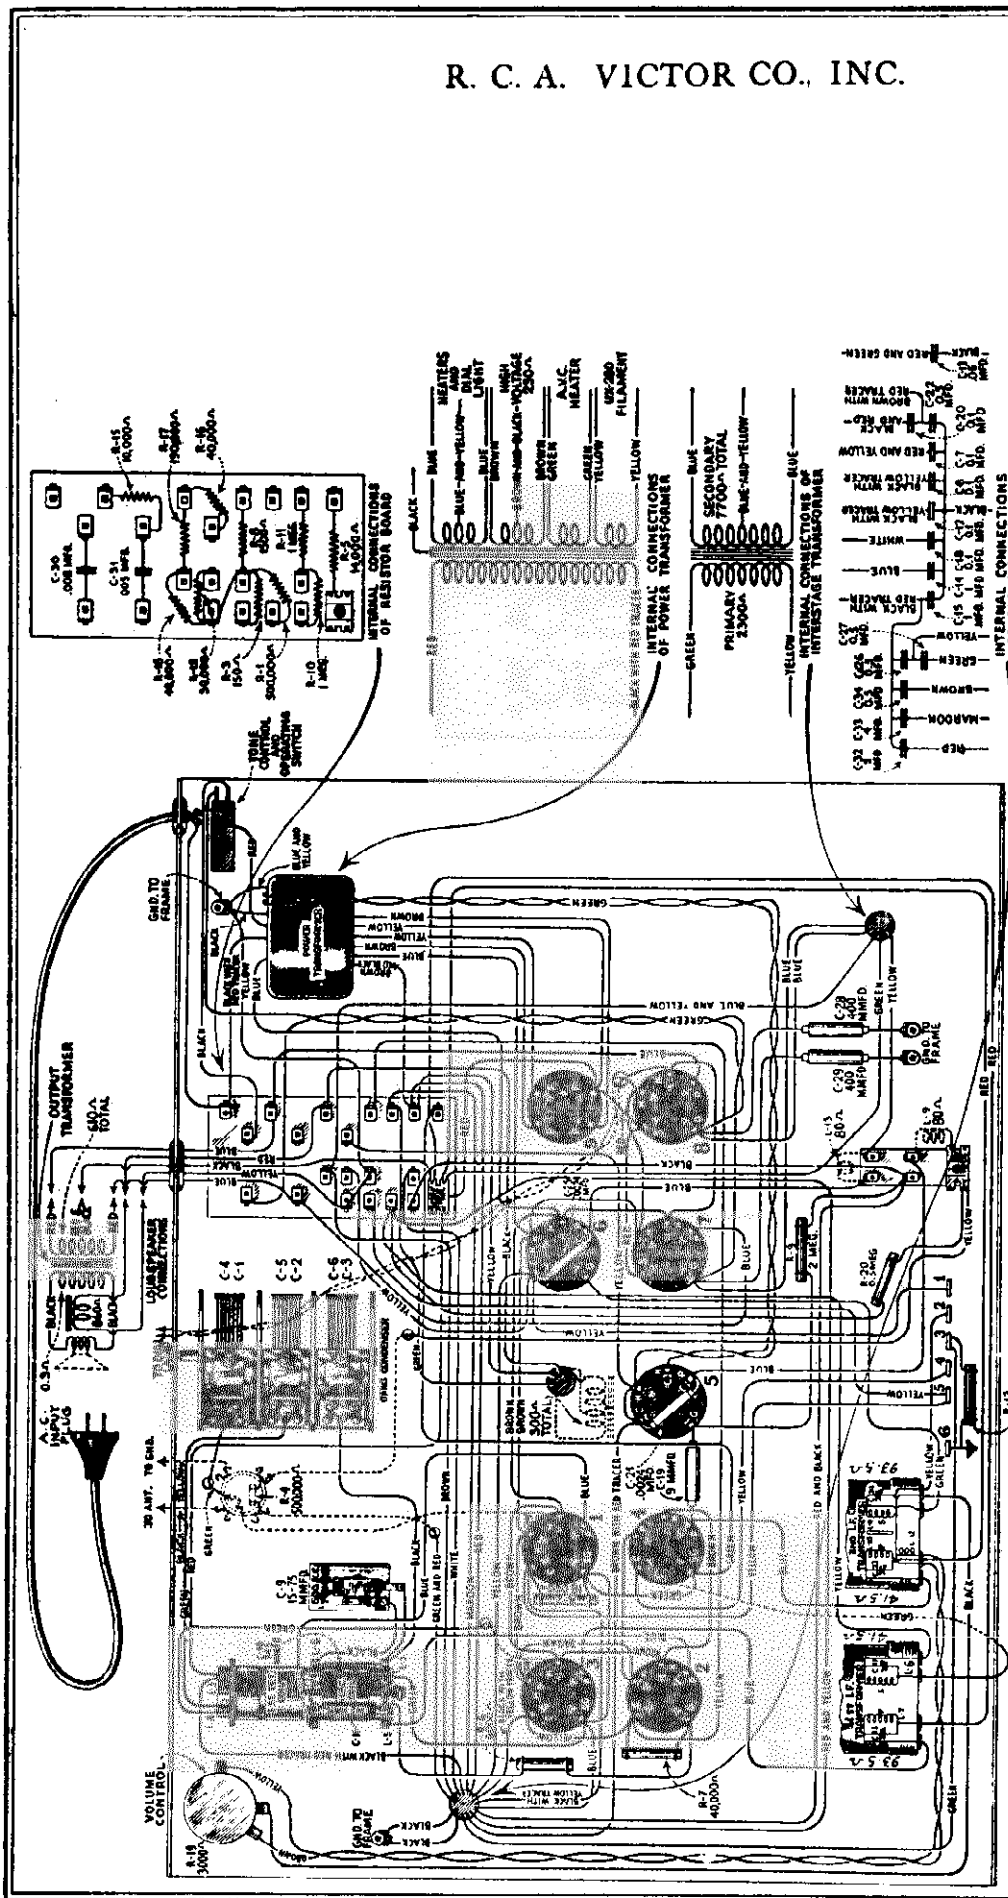

REPLACEMENT PARTS

2543	Resistor—6,000 ohms—Carbon type—1 Watt—Package of 5	\$1.00
2730	Resistor—18,000 ohms—Carbon type—1 Watt—Package of 5	2.00
2734	Capacitor—15 mfd.—Package of 5	2.50
2747	Capacitor—2,000 mfd.—Package of 5	1.50
2749	Capacitor—2,000 mfd.—Package of 5	1.50
2882	Socket—5 contact Radiotron socket—Complete with insulator—8 used	.50
2908	Socket—4 contact Radiotron socket—Complete with insulator—1 used	.50
3046	Resistor—1,500 ohms—Carbon type—1/2 Watt—Package of 5	12.50
3047	Resistor—1,500 ohms—Carbon type—1/2 Watt—Package of 5	2.50
3048	Resistor—590,000 ohms—Carbon type—1/2 Watt—Package of 5	2.50
3049	Resistor—150 ohms—Carbon type—1/2 Watt—Package of 5	2.50
3050	Resistor—15,000 ohms—Carbon type—1/2 Watt—Package of 5	60
3053	Capacitor—1 mfd.—Package of 2	.50
3055	Carbon Resistor—500 ohms—5% tolerance—1/2 Watt—Package of 5	.50
3056	Shield—Radiotron shield—6 used—Package of 2	\$0.50
3076	Resistor—1 Megohm—Carbon type—1/2 Watt—Package of 5	2.50
3077	Resistor—30,000 ohms—Carbon type—1/2 Watt—Package of 5	2.50
3078	Resistor—10,000 ohms—Carbon type—1/2 Watt—Package of 5	2.50
3079	Resistor—40,000 ohms—Carbon type—1/2 Watt—Package of 5	2.50
3085	Capacitor—400 mfd.—Magnetic pickup terminal board—Complete with mounting hardware—A.Y.C. and 500 detector R.F. choke board—1mm choke coils	.50
3090	Board—Resistor board—complete with resistors and capacitors	1.00
3092	Volume Control—Volume control complete with mounting nut	1.50
3093	Tone Control—Tone control complete with mounting nut	1.00
3095	Coil—R.F. coil	1.98
3096	Coil—In detector and oscillator out.	3.55
3098	Capacitor—0.001 mfd.	.50

R. C. A. VICTOR CO., INC.

MODEL RO-23
Schematic

Models R-23, RO-23 (1931)

1 DET '24A	IF '35	A.V.C. '27	AF '47	RF '24A	SHORT WAVE ADAPTER
OSC '27	RF '35	2 DET '27	RECT '8U	OSC '27	
PILOT NO. 41 MAZDA				FRONT	


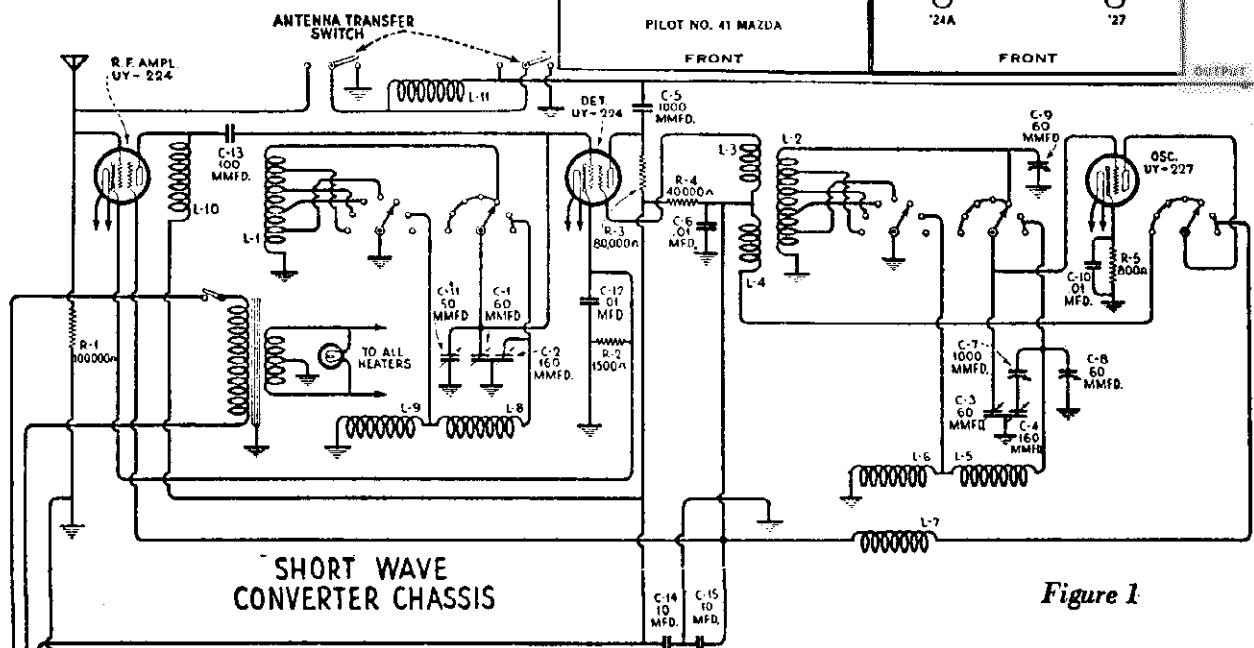


Figure 1

BROADCAST RECEIVER INTERMEDIATE FREQUENCY 175 KC
CONVERTER INTERMEDIATE FREQUENCY 1075 KC

Note—On some models operating switch for broadcast receiver is in circuit to Converter.


BROADCAST RECEIVER CHASSIS

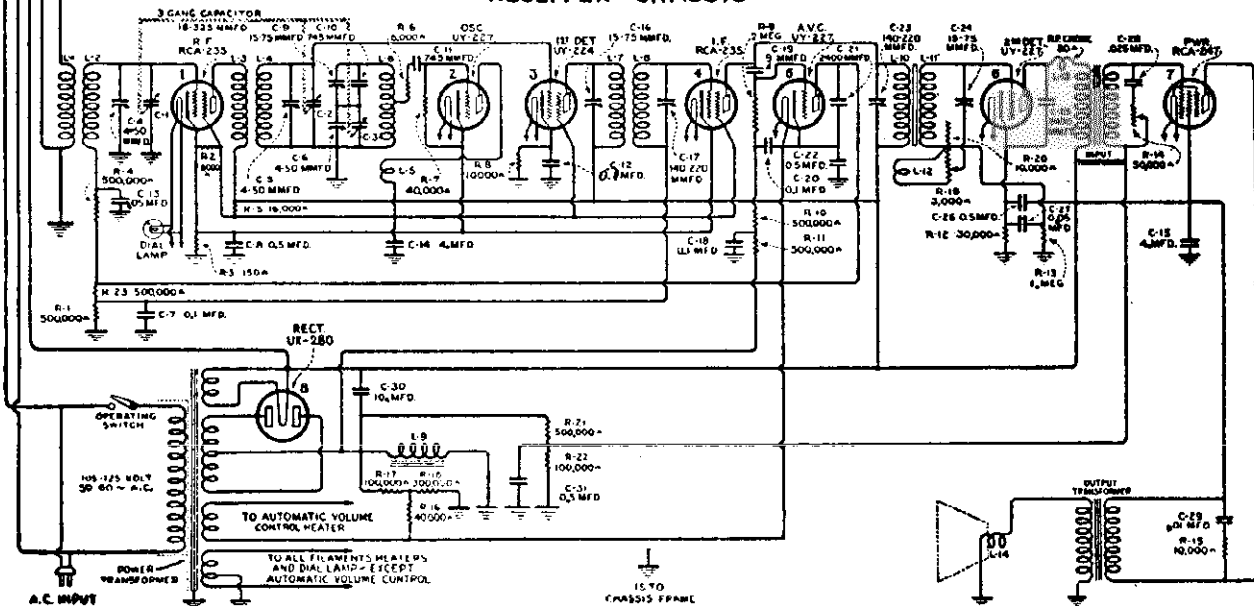

Voltage Rating105-125 Volts and 200-250 Volts
Frequency Rating50-60 cycles and 25-40 cycles
Power Consumption120 Watts

R. C. A. VICTOR CO., INC.

MODEL RO-23
Converter Chassis

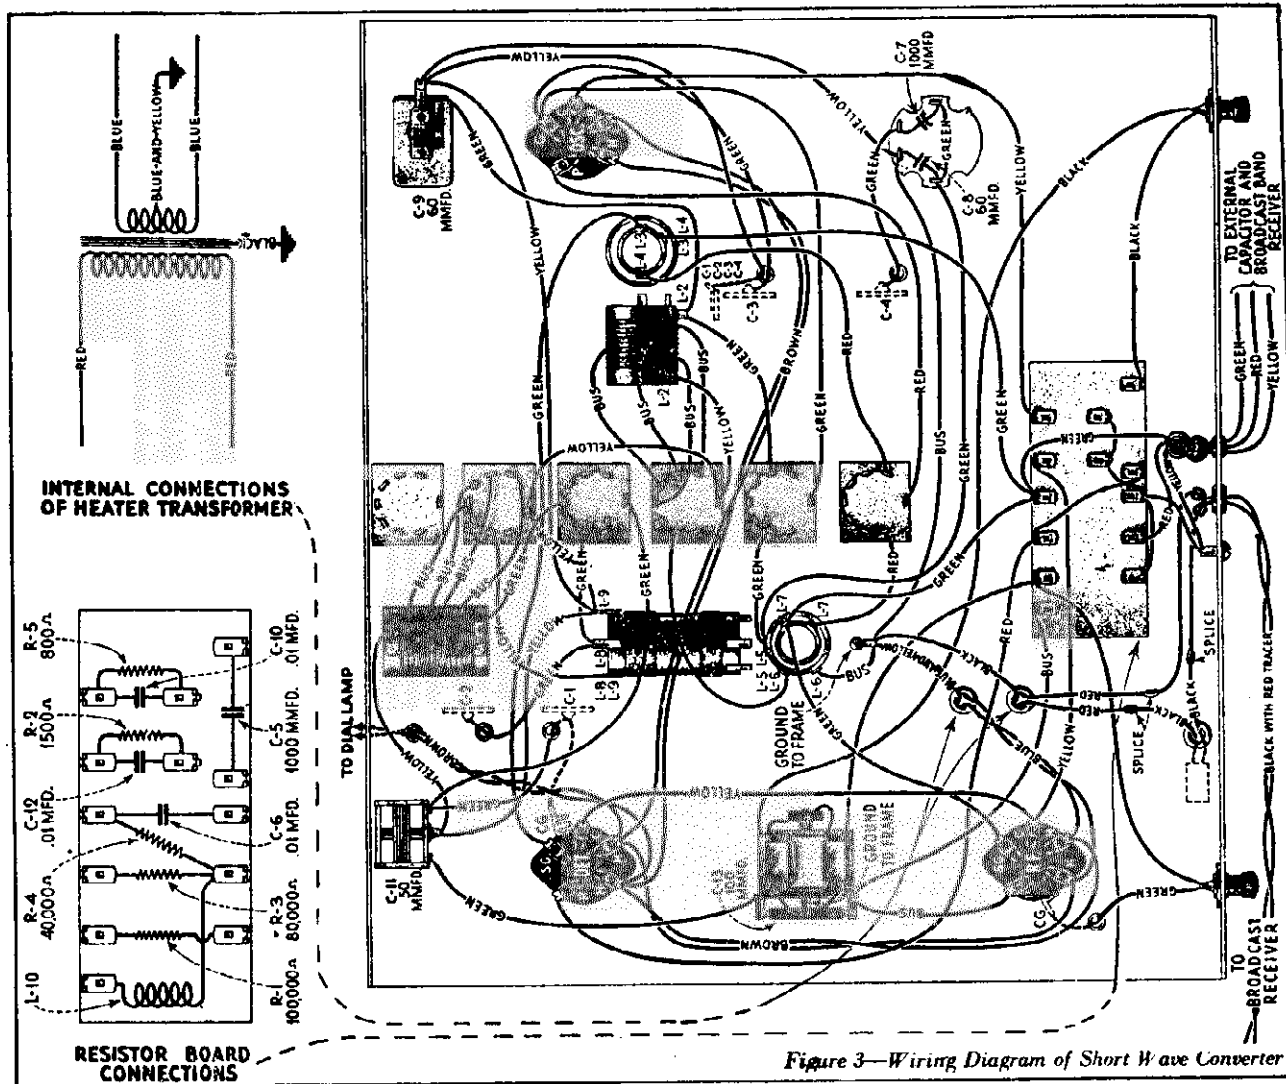

SERVICE DATA

Service information in conjunction with the broadcast receiver is covered in the Service Notes already issued on RCA-Victor Models R-8, R-10 or R-12. The Short Wave Converter is however somewhat different from the usual broadcast receiver and a discussion of its service problems will help the service man in the performance of his work.

ELECTRICAL DESCRIPTION OF CONVERTER CIRCUIT

The RCA Victor Short Wave Converter uses three Radiotrons, one UY-224 as an R. F. Amplifier, one UY-224 as a Detector and one UY-227 as an Oscillator. The purpose of the Converter is to amplify the incoming high frequency signal by means of the R. F. stage, beat it with a local Oscillator signal and produce a modulated beat frequency by means of the Detector, extract the beat frequency so that it may be amplified by means of the broadcast receiver. A special tuning Capacitor, for tuning the Oscillator and Detector stages simultaneously, is incorporated in this unit. A series of tapped coils in conjunction with a range switch provides for the shifting to various bands without interchanging coils as with the older style Converters. Also this switch changes the capacity used by the tuning capacitor so that the frequency range of each band is approximately the same. A small trimmer capacitor, known as the Resonator, is used to re-align the detector circuit with the Oscillator whenever the band is changed or the I. F. frequency is shifted. The shaft that controls the Resonator capacitor is also mechanically connected to the operating switch and the antenna switch. It is so made that when the power is turned "off," the antenna is shifted to the broadcast receiver so that broadcast reception may be obtained.

MODEL RO-23 Alignment Data

R. C. A. VICTOR CO., INC.

(1) ALIGNMENT OF CONVERTER CIRCUITS

If the Converter does not cover the bands indicated on the range switch, refer to Figure 2 and make the following adjustments. A calibrated oscillator or frequency meter is desirable although if the service man is familiar with the stations in the high frequency spectrum, the location of these stations on the scale can be used as a guide for making the adjustments. Also a calibrated short-wave receiver that has an oscillating detector may be used to check the Converter oscillator frequency.

Adjust the broadcast receiver so that it is accurately set at 1075 K. C.—the short wave I. F. frequency. Set the "Range" switch at the 51.3-98.5 meter position.

Set the tuning capacitor at its minimum position. (Plates fully out of mesh.)

Place the external oscillator in operation at 5960 K. C.

Adjust the oscillator shunt capacitor C-8 so that the external oscillator will be heard in the loudspeaker or noted on an output meter.

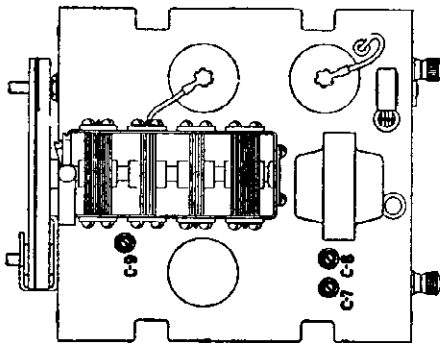


Figure 2—Location of Adjusting Capacitors

If the calibrated oscillator is not available then a calibrated receiver may be used to receive and check the frequency of the converter oscillator. The capacitor C-8 should be adjusted until the oscillator frequency is 7035 K. C.

If a wave meter is the only standard available, then a second receiver should be calibrated from it by means of one of the several methods for doing this accurately.

If no standards are available a satisfactory adjustment can be made by increasing capacitor C-8 slightly more than the point at which the 49 meter broadcasting stations are heard when the tuning capacitor is at its minimum position on the 51.3-98.5 meter band. (With C-8 set at minimum the 49 meter band should be received.)

Now shift the tuning capacitor to its maximum position. The Converter oscillator frequency, as picked up on a calibrated receiver, should be adjusted for 4130 K. C. by the oscillator series capacitor C-7. So adjusted, the receiver will receive a 3055 K. C. signal with an intermediate frequency of 1075.

Again, if no standards are available, an adjustment of C-7 that will give a definite point of resonance near the center range of the Resonator control with the tuning dial at 50 will be satisfactory.

After checking each end of the 51.3 to 98.5 meter band, shift the range switch to the 38-51.3 meter position. Set the tuning capacitor at its minimum position (plates fully out of mesh) and the I. F. frequency at 1075. Adjust the oscillator shunt capacitor C-9 until the oscillator frequency is 9100 K. C. or the receiver will respond to a signal of 8025 K. C. If no standards are available, adjust C-9 until the 49 meter stations all fall within and near the center of the 49 meter markings on the dial. Unless this adjustment is properly made the short wave broadcasting will not fall within the bands marked on the dial.

Alignment at each end of the 51.3-98.5 meter band are also for the 98.5-200 meter band. The other alignment is for the five high frequency ranges. When these alignments are properly made, and an intermediate frequency between 1050 and 1100 K. C. is used, the Resonator control will function properly and the various short wave broadcasting services will fall within the bands indicated on the dial.

Special Notes on Effects of Aligning and I. F. Frequency Changes

Unless the line-up adjustments are carefully and properly made, the dial markings will be found to be incorrect. If it is necessary to replace the oscillator coil, the leads on the new coil should be made as short as possible and the alignment of the set checked. Also during operation it is preferable that the I. F. frequency of 1075 be used although any frequency between 1050 and 1100 will be satisfactory.

In unusual cases where local conditions preclude the use of a frequency between 1050 and 1100 K. C., considerably more variation in I. F. frequency without the loss of sensitivity will be permissible. However, the calibration will be shifted considerably, especially at the lower frequencies.

(2) DIAL INDICATOR

The indicator on the dial lamp should be so adjusted that the dial will read 100 when the tuning capacitor is at its maximum capacity position. It is important that this be checked before any alignment adjustments are made.

(3) BROADCASTING STATION HARMONICS

When tuning on the 98.5-200 meter band, the second and third harmonics of broadcasting stations will be heard and as there is no regular short wave broadcasting service on this band such signals may be discounted as better results will be obtained by listening to such programs on their regular wave band.

On the lower length bands, the short wave broadcasting stations will be received in the bands indicated for each position of the range switch with but few exceptions. Broadcasting received at other positions of the dial should therefore be viewed with skepticism unless it is definitely proved to be a short wave station and not a higher harmonic of a broadcast station.

(4) LOCAL STATION INTERFERENCE

When the receiver is located very close to a powerful transmitter, either broadcasting or code it is recommended that an antenna not exceeding 30 feet in length be used. However, if a longer antenna is necessary in order to obtain satisfactory reception, cross modulation from the local station may occur. Such a condition is evidenced by the local station coming in on unmodulated carriers on top of some short wave stations.

Under such conditions, it is advisable to use a tuned input circuit to the short Wave Converter. Such an input circuit can readily be made by winding 3 turns of No. 20 wire on a 1¼ inch tube, spacing the turns ¼ inch apart. The coil is tuned by means of a .0005 mfd. variable capacitor and should be connected from the antenna input to ground. Such a combination will tune broadly from 13.8 to 51 meters.

(5) ACOUSTIC FEEDBACK

If Acoustic feedback is experienced, it is an indication that the two chassis are not entirely supported on rubber. While with the usual broadcast receiver, such a condition is not so vitally necessary, with high frequency reception, unless each chassis is entirely floating in its rubber mounting and its shafts and knobs not touching the cabinet, howling will result.

(6) BROADCAST RECEIVER HARMONICS

When tuning through the various bands, at various points a slight breathing tone can be heard that is not a C. W. signal, but a harmonic of the broadcast receiver oscillator, being received. If an intermediate frequency of between 1050 and 1100 is used, these will not fall on any of the short wave broadcasting services. However, if they should and thereby cause a whistle, a slight shift—5 kilocycles of the intermediate frequency—will eliminate the interference. Returning the Short Wave Converter will be necessary to restore the signal to its normal intensity. Identification of these harmonics can be made by this means, a slight shift in the intermediate frequency causing them to disappear while an incoming signal will slowly diminish in volume.

R. C. A. VICTOR CO., INC.

(7) C. W. RECEPTION

Normally C. W. transmitters will not be heard unless they are modulated. However, such reception can be obtained by coupling an external oscillator loosely to the second detector of the broadcast receiver. This oscillator should be at about 174 or 176 K. C. so that a pleasing beat note will be obtained. Also a beat note may be obtained by means of an oscillator, the frequency of which is at the 1st I. F. frequency—1150 K. C.—and loosely coupled to the input of the Broadcast receiver chassis.

(8) HUM

In addition to the usual causes of hum in the broadcast receiver, the following points should be checked in relation to hum in the Short Wave Converter.

- (a) A. C. input cord near antenna wire. Keep these two leads separate as much as possible.
- (b) Slack in A. C. cord has been placed close to Converter chassis. Take up the slack near the outlet, not near the Converter.
- (c) Filament transformer center tap not connected.
- (d) One side of filament transformer grounded, thereby shorting one section of the secondary.

(9) RANGE SWITCH

A defective "Range" switch may cause any of the following conditions:

- (a) Noise. A corroded or loose wire or contact may cause excessive noise even when the switch is not being shifted. Check by removing the antenna to see if the noise decreases.
- (b) Resonator control not effective. Check the detector sections—1 and 3 from the front—for faulty contacts.
- (c) Oscillator not functioning. Check the oscillator sections—2, 4 and 5 from the front.
- (d) Shift of dial readings. Check for corroded or loose connections.

(10) ANTENNA RESONANCE COIL

An open antenna resonance coil will lower the sensitivity of short wave reception. Its purpose is to match the output of the Converter to the input of the broadcast receiver.

(11) ANTENNA TRANSFER SWITCH

The Resonator Control shaft also is used to shift the antenna from the Short Wave Converter to the broadcast receiver. Also the power switch to the converter is operated simultaneously. A failure of these switches will usually be due to the failure of the engaging lever to throw the switch. If such a condition develops, the switch may be raised so that it properly engages with the operating arm on the shaft. See that no oil or grease prevents proper connection to the shaft at the friction bearing or noise will result when the Resonator is adjusted.

(12) FLUTTER

Fluttering may be caused by either of the following:

- (a) Open capacitor C-14 or C-15. The purpose of these capacitors is to prevent flutter that may be encountered in a single Pentode receiver.
- (b) Antenna lead close to detector Radiotron. See that this lead is in its proper position and removed from the detector Radiotron in the Converter.

(13) VOLTAGE READINGS

The following voltages are obtained at the Converter Radiotron sockets when measured with the usual set analyzers.

RADIOTRON SOCKET VOLTAGES

120 Volt A. C. Line

Radiotron No.	Control Grid to Cathode Volts D. C.	Screen Grid to Cathode Volts D. C.	Plate to Cathode Volts D. C.	Plate M. A.	Heater Volts A. C.
R. F. Detector Oscillator	-3	50	260	1.0	2.66
	-3	50	180	1.0	2.66
	-5	--	50	5.0	2.66


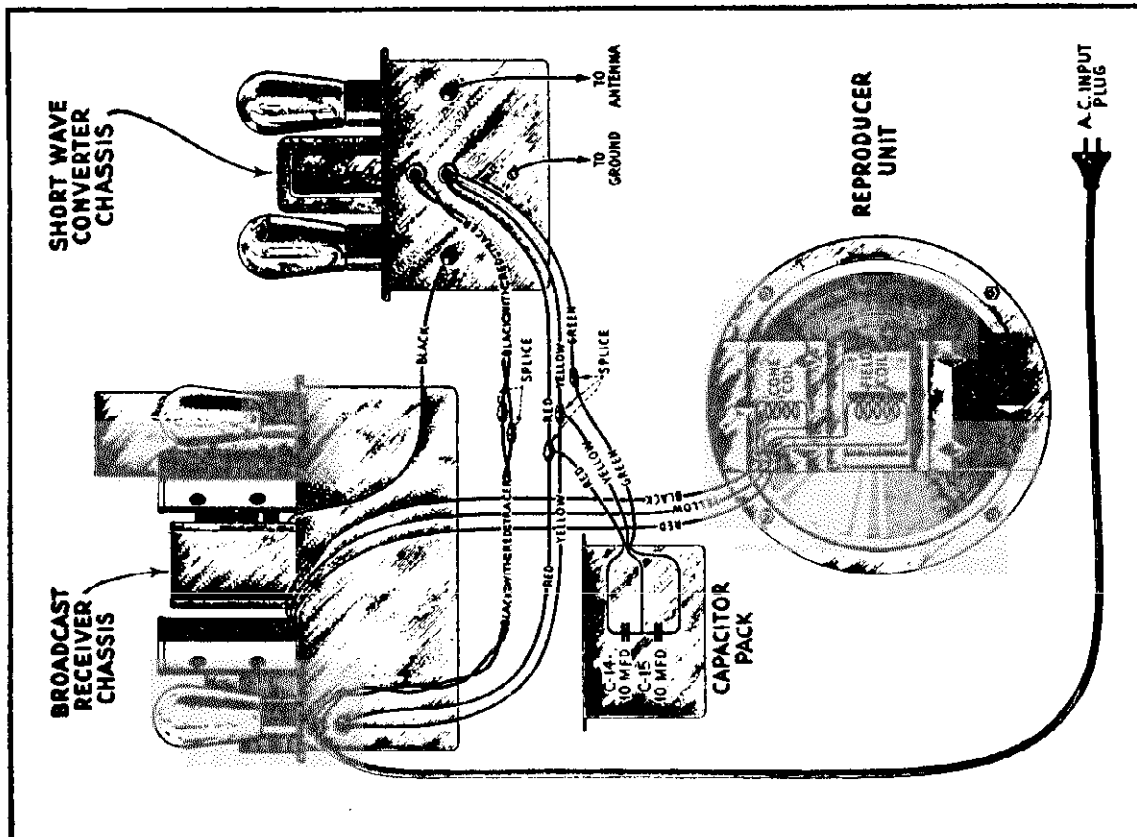


Figure 5—Assembly Wiring

R. C. A. - VICTOR CO., INC.


MODEL RAE-26
Assembly Wiring

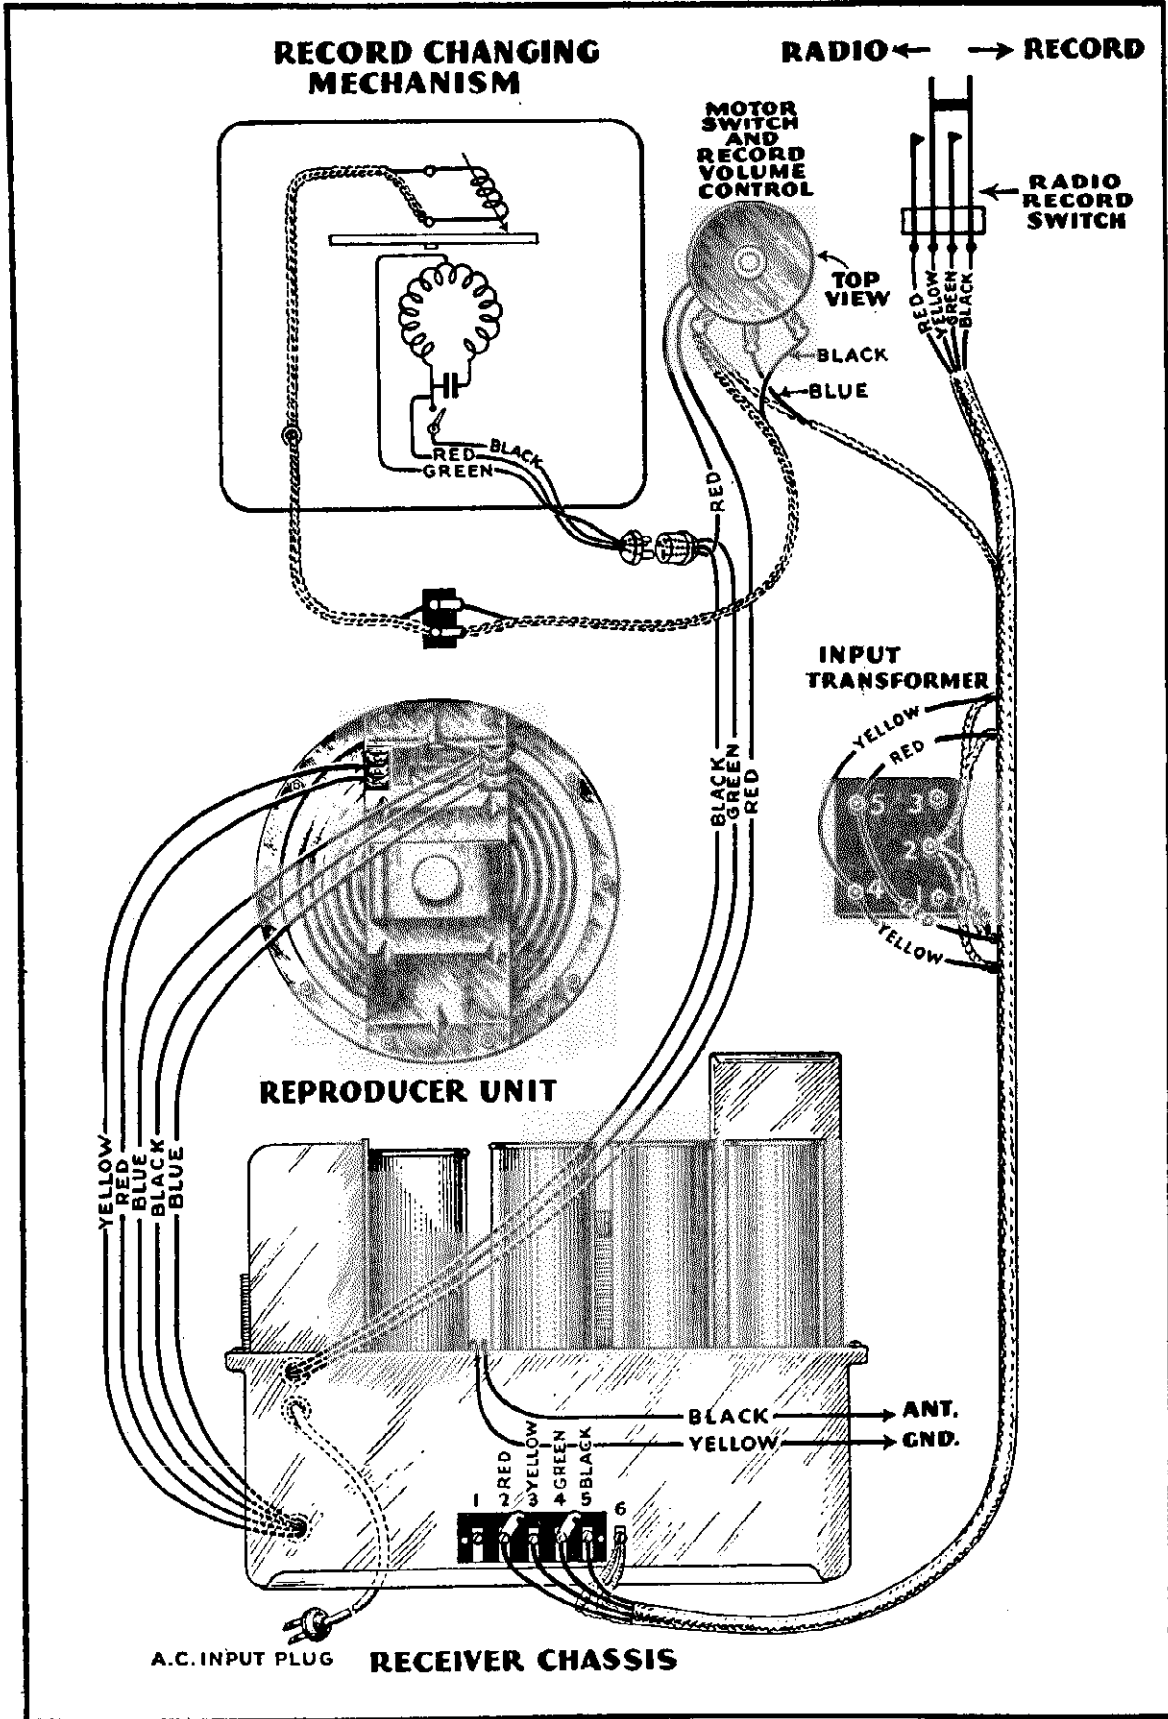

Assembly Wiring Diagram of RAE-26

MODEL RAE-26
Schematic

R. C. A. VICTOR CO., INC.

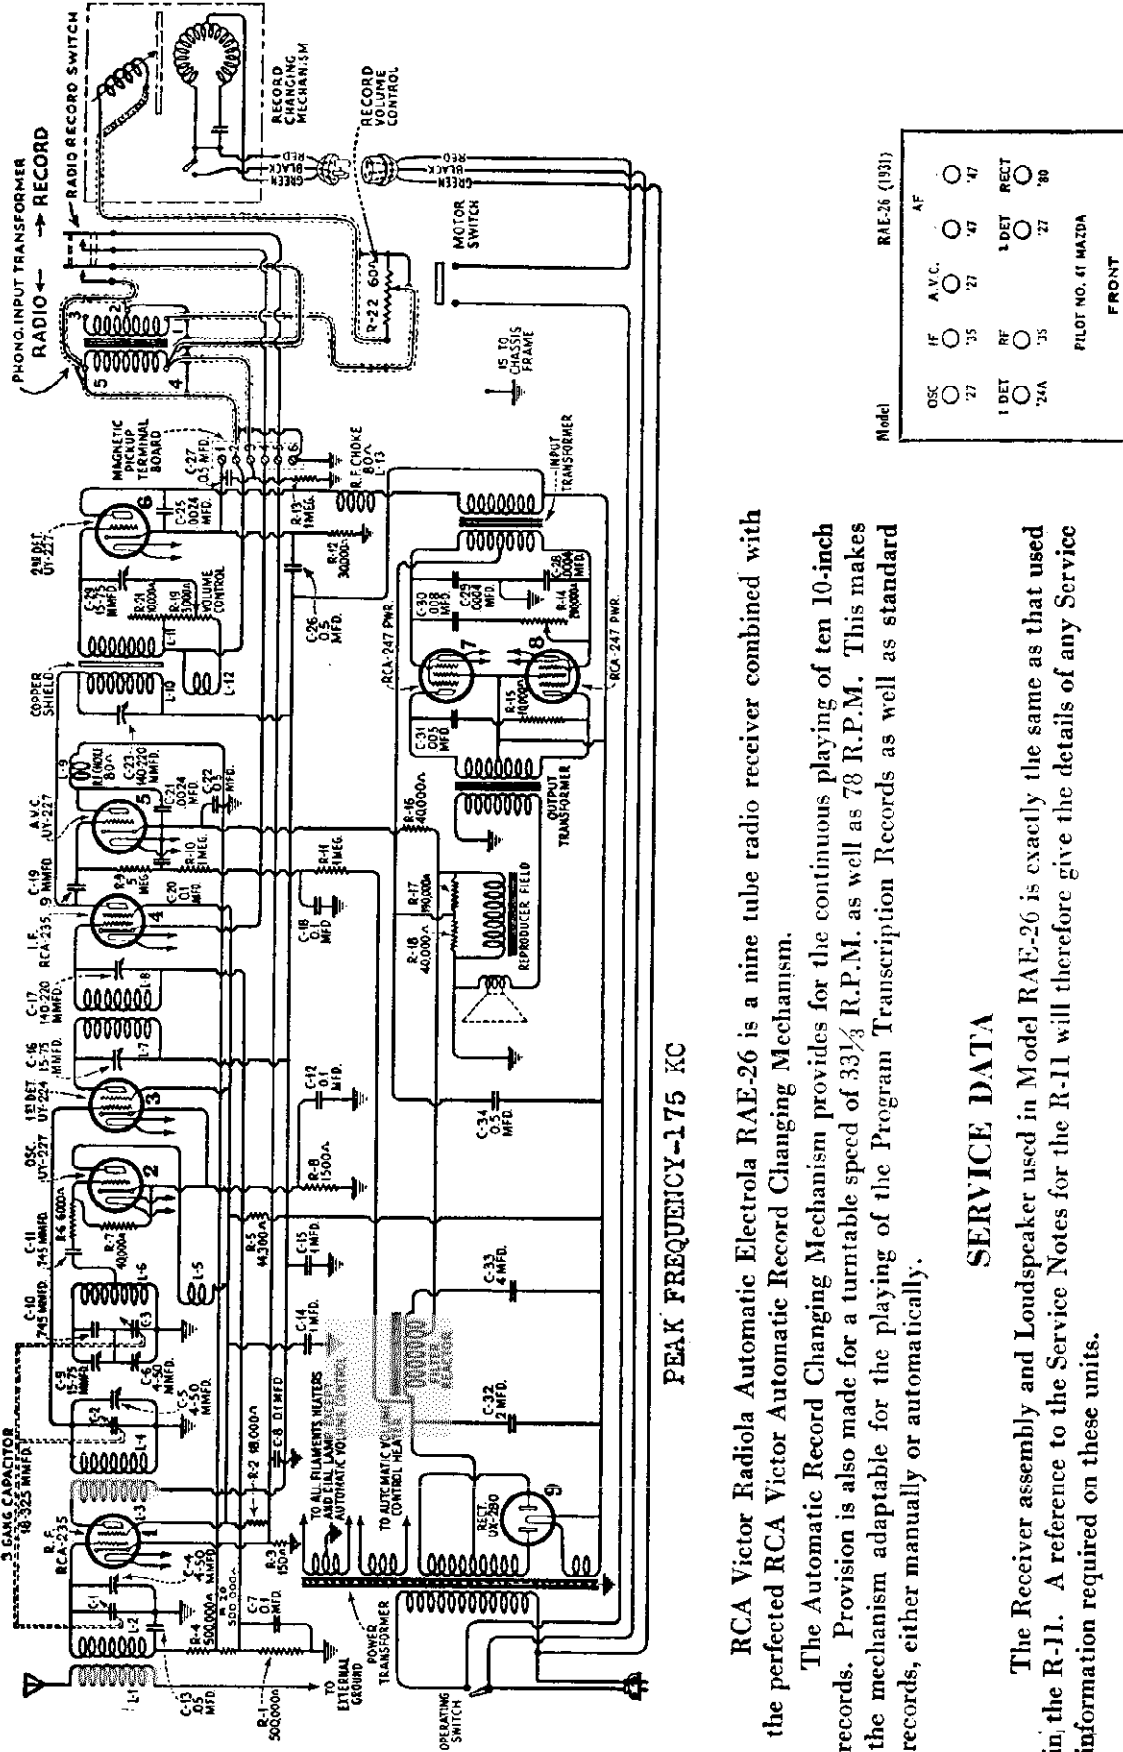

PEAK FREQUENCY-175 KC

RCA Victor Radiola Automatic Electrola RAE-26 is a nine tube radio receiver combined with the perfected RCA Victor Automatic Record Changing Mechanism.

The Automatic Record Changing Mechanism provides for the continuous playing of ten 10-inch records. Provision is also made for a turntable speed of 33 1/3 R.P.M. as well as 78 R.P.M. This makes the mechanism adaptable for the playing of the Program Transcription Records as well as standard records, either manually or automatically.

SERVICE DATA

The Receiver assembly and Loudspeaker used in Model RAE-26 is exactly the same as that used in the R-11. A reference to the Service Notes for the R-11 will therefore give the details of any Service information required on these units.

A reference to the Service Notes on the RCA Victor Automatic Record Changing Mechanism gives details of any service work that may be required on this unit. It will also be found useful in identifying the replacement parts listed below. Figure 1 shows the schematic circuit diagram and Figure 2 the assembly wiring diagram.

MODEL RAE-26
Resistance Data

R. C. A. VICTOR CO., INC.

2 Det Control Grid(Pickup Board Terf2) 95.5 ohms
 2 Det Control Grid to V.C. Arm 3,093.5-10,093.5 ohms TC-2D Cg- VC Arm
 2 Det Cathode 50,000 ohms BC- Terf1-Terf3
 BC- 2 DK-'80 Fil Incorrect

From Chassis To Correct

Pickup Board Terminal 2 1,000,000 ohms BC-Terf1-Terf3
 2 Detector Plate 34,890 ohms See RF Plate
 2 Detector Plate-'30 Fil 2,380 ohms
 '47 Control Grid 45,850 ohms BC- 47 Cg-Y
 '47 Control Grid to Control Grid 7,700 ohms See AVC Cathode
 '47 Screen 32,450 ohms Tone Control Cond
 '47 Plate to Plate 0 ohm Tone Control Resist
 80 Anode to chassis 32,755 ohms See 2 Detector Plate
 80 Anode to Anode 610 ohms See 2 Detector Plate
 80 Fil to chassis 230,400 ohms Harmonic condenser
 Across Speaker Field 280 ohms See AVC Control Grid
 860 ohms See RF Plate
 860 ohms See RF Screen Grid

All tubes removed from socket and AC plug disconnected from power supply
 line. Field coil disconnected. All pickup equipment disconnected from
 terminal board and terminals 2 and 3 should be joined. Also terminals
 4 and 5 should be interconnected.


From Chassis To Correct Incorrect

Aerial to Ground Post 40 ohms

Chassis to

RF Control Grid(early model) 1,000,005 ohms ELC- in tuned circuit (.1 mfd) TC-Y
 RF Control Grid(late model) 1,500,005 ohms ELC- in tuned circuit (.05 mfd) BC-AVC chx-Y
 RF Cathode 150 ohms BC- 1 IF Tr. Sec -Y
 RF Screen Grid 18,150 ohms BC- rf K-Y (.1 mfd) BC- rf Sg-Y (1. mfd)
 RF Plate 32,508 ohms BC-47 Sg-Y (.5 mfd) BC-'80 P- Spkr div. tap
 See RF Screen Grid

RF Plate to '80 Fil 58 ohms TC-Y
 1 Detector Control Grid 5 ohms BC-Y (.1 mfd)
 1 Detector Cathode 1,500 ohms See R-F Screen
 1 Detector Screen 18,150 ohms See R-F Plate
 1 Detector Plate 32,541.5 ohms TC- 1 IF Tr.
 1 Detector Plate to '80 Fil 93.5 ohms BLC-Osc.Grid Ctr. (.0074
 Oscillator Control Grid 41,500 ohms BC-Osc K-Y (.1 mfd)
 Oscillator Cathode 1,500 ohms BC-Osc K-Y (.1 mfd)
 Oscillator Plate 18,151 ohms See R-F Screen
 Osc Plate and Det Screen 1 ohm
 IF Control Grid (all models) 500,041.5 ohms BC-Y (.5 mfd)
 IF Control Grid-AVC Plate (early) 18,150 ohms TC-1 IF Tr Sec
 IF Screen Grid 32,491.5 ohms See RF Screen
 IF Plate 41.5 ohms Te- 2 IF Tr. Pri.
 AVC Control Grid (early) 7,230,285 ohms BLC- 1f P-AVC Cg (9 mmfd)
 BC-5 meg - AVC H (.1 mfd)
 BC-1 meg- Y (.1 mfd)
 FC-'80 Anode - 80 F(2 mfd)
 FC filter chx-80 F(4 mfd)
 BC-AVC K-Y (.5 mfd)
 BC-Spkr divides tap - Y
 BC-AVC K-AVC P (.0024 mfd)
 See early model
 BC-AVC K-AVC P
 BC-AVC K-Y
 BC-AVC P-AVC K
 See RF Control Grid

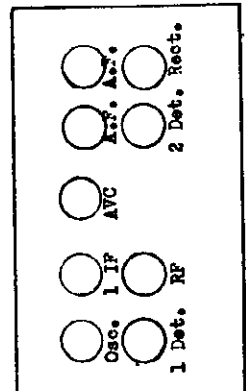

Line Voltage 110. Volume Control does not change voltages.

Tube	Cathode-Heater	Control Grid-Cathode	Screen Grid-Cathode	Plate-Plate Filament	Cathode Current Voltage
RF	2.	0.1*	75.	205.	5-0 ma 2.2
Osc.	8.	0.	70.	60.	5-C 2.2
1 Det.	7.	7.0	70.	200.	0-5 2.2
IF	2.	0.1*	75.	205.	5-0 2.2
AVC	0.	0.	-	25.	- 2.2
2 Det.	20.	8.0*	-	180.	0-5 2.2
Pwr	-	10.	210.	205.	25. 2.2
Pwr	-	10.	210.	205.	25. 2.2

* Not true reading because of resistance in the circuit.

AVC Control Grid (late) 4,230,285 ohms
 AVC Cathode 270,000 ohms
 AVC Plate 1,000,065 ohms

MODEL M-30
Auto Radio
Schematic

R. C. A. VICTOR CO INC.


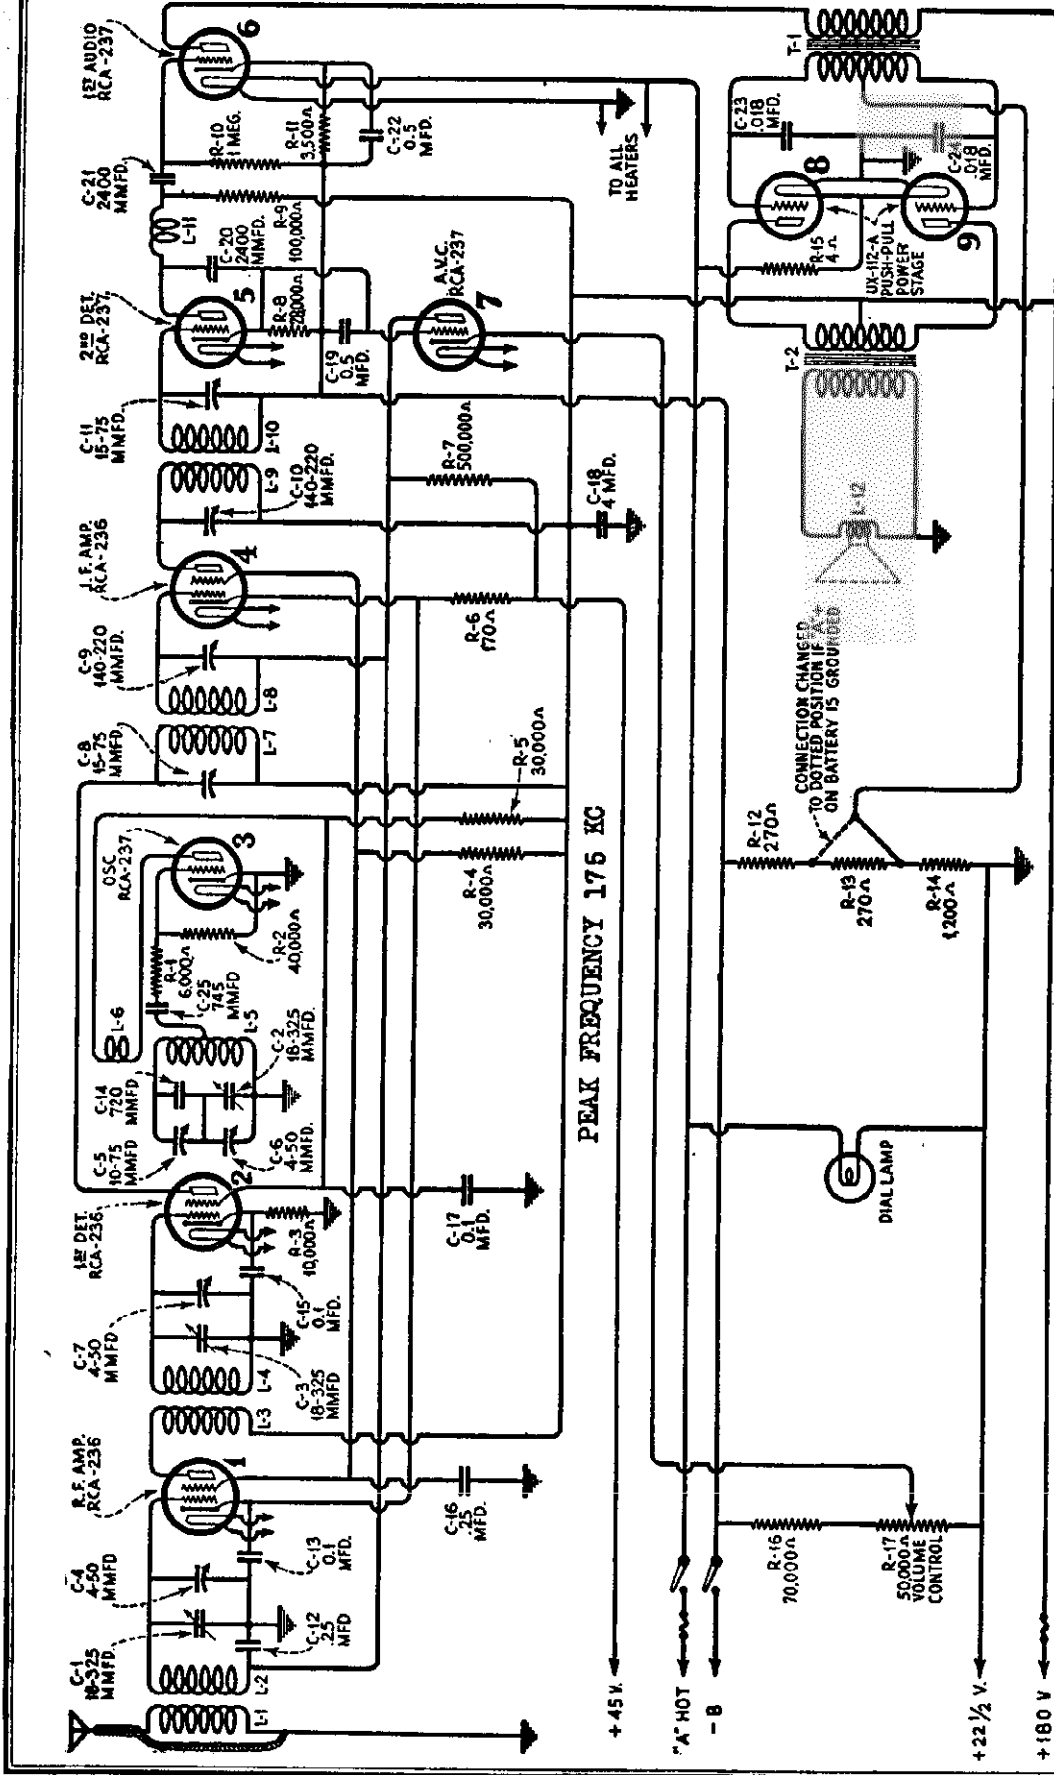


Figure 22—Schematic Wiring Diagram of Receiver Assembly

Model M-30 (Auto) (1931)

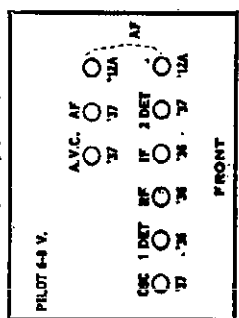

SERVICE AND INSTALLATION NOTES

for

RCA Victor Automobile Radiola
Model M-30

INTRODUCTION

The RCA Victor Automobile Radiola, Model M-30, is a nine tube Super-Heterodyne radio receiver designed for automobile or motor boat use. Features of this receiver are: sensitivity and selectivity equal to that of high quality home receivers, high output Class B amplifier giving a large undistorted output with a small plate battery drain, permanent magnet dynamic loudspeaker requiring no external field supply, automatic volume control using entirely new principles of operation and extremely low battery consumption for both heater and plate supply. This feature allows the use of the automobile battery as "A" supply without imposing an additional load upon it that cannot be readily compensated for by a slight generator charging readjustment. The low plate current drain allows excellent "B" battery life. Use of the new automobile type Radiotrons eliminates the possibility of Radiotron failure due to vibration or varying heater voltage such as is encountered in automobile driving.

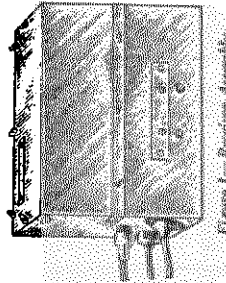


Figure 1—Receiver Assembly

In the design of this receiver, special attention has been given to the ease with which the installation may be made, and the elimination of interference originating in the ignition system. Thorough shielding of all parts together with proper design of the receiver makes it possible to reduce ignition interference to a negligible degree. This is done without any sacrifice in the sensitivity of the receiver.

A description of the various units follows.

RECEIVER ASSEMBLY

The receiver assembly, Figure 1, is housed in a metal case that acts as an effective mechanical and electrical shield. A bracket is provided for mounting so that dismounting is a comparatively simple operation, requiring the removal of but one screw.

The top section of this container is fastened by means of wing nuts. This provides for easy removal for checking or replacing Radiotrons. The battery and control box cable, the loudspeaker cable and the flexible tuning cable are all held in place by means of fittings which allow their easy removal in case the box is to be removed from its mounting. The case is finished in a dull smooth black that is not easily scratched and harmonizes with the usual car finishes.

CONTROL BOX

The control box, Figure 2, contains the station selector knob, the dial scale, the volume control and the key switch. It is provided with a felt strip and mounting clamp for attaching to the steering column of the car. The dial scale is marked in channels (multiply by 10 for kilocycles) and is of the non-glare type. The switch is provided with a key, which when removed, locks the radio at the "off" position.

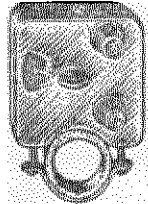


Figure 2—Control Box

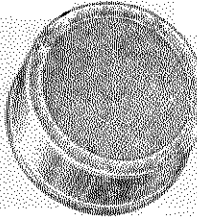


Figure 3—Loudspeaker

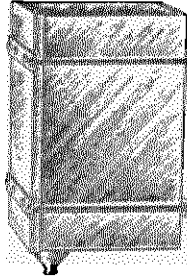


Figure 4—Battery Box

LOUDSPEAKER

The loudspeaker, Figure 3, used in the automobile equipment is of the permanent magnet, dynamic type. It is housed in a smooth black finished metal container which also acts as an effective baffle. Due to the presence of the strong magnetic field, even when the set is turned off, special provision has been made to prevent metallic substances from being drawn into the air gap of the speaker and thereby cause rattles. The speaker edge and center is entirely closed, thus preventing such entry from the front. A fine gauze covering is placed over the back, thus eliminating any such matter from entering from that side. The cord outlet is provided with a rubber bushing that closes up its opening. The speaker has excellent frequency characteristics and is of extremely rugged construction.

BATTERY BOX

A special heavy steel battery box, Figure 4, is furnished as optional equipment when it is either undesirable or impossible to install the batteries behind or under the seats or in the rear compartment of the car. This box is so constructed that the batteries may be mounted and connected therein and then lifted into position beneath the car. Four carriage bolts, each provided with two lock nuts, hold it in place.



Figure 5—Antenna Plate

ANTENNA PLATE

The antenna plate, Figure 5, is provided for use when a roof antenna is not already installed in the car. It is provided with special bolts and clamps that allow easy mounting to the frame of the car. Due to the high sensitivity of this receiver, satisfactory results may be obtained with the undercar antenna except in districts where the signal intensity of all stations is extremely low. In such cases a roof antenna must be erected in accordance with the instructions given in Part I, Section 3.

R. C. A. VICTOR CO., INC.

IGNITION EQUIPMENT

Six spark plug type suppressors, one distributor type suppressor and two 0.75 mfd. capacitors. Figure 6, are provided for the suppression of ignition interference so that it does not materially affect radio reception. The details of installing this equipment are covered in Part I and varies somewhat in different cars.

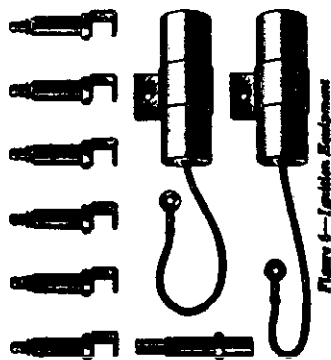


Figure 6—Ignition Equipment

PART I—INSTALLATION

Due to the nature of the installation it is advisable that the RCA Victor Automobile Radiola be installed by a competent radio service man in conjunction with an automobile mechanic. The usual automobile repair shop has the necessary tools and lifts that are desirable in making the installation. If it is necessary to erect a roof antenna, this work must be done by a competent "trim" shop working under direction of the service man. However, after making several installations the service man may feel confident enough to attempt all the installation work himself, with the exception of the roof antenna. For such work the following list of equipment is provided which will be found useful when performing such work.

- 1 Pair Gas Pliers
- 1 Pair Diagonal Pliers
- 1 Pair Long Nose Pliers
- 1 Small Crescent Wrench
- 1 No. 4 Spintite Wrench
- 1 Thin Shank 6" Screw Driver
- 1 Small Screw Driver
- 1 Large Screw Driver
- 1 Pair Tin Shears
- 1 Heavy Duty Soldering Iron
- 1 Medium Soldering Iron
- Supply of Rosin Core Solder
- Supply of Acid Core Solder
- Supply of 1/2" Belden Braid
- Supply of Sheet Copper
- 1 Electric Drill with Set of Drills Up to 1/2"
- 1 Set Seat and Door Protectors
- 1 Reamer—1/4" maximum
- 1 Set Analyzer or Miscellaneous Voltmeters

(1) LOCATION AND MOUNTING OF UNITS

The proper method of installing the equipment of the RCA Victor Automobile Radiola is covered in the Installation Instructions packed with each equipment. However, as there are many different types of installations, this information will be repeated together with a discussion of its numerous variations.

RECEIVER UNIT

Location The usual location for the receiver unit is on the right side of the engine compartment bulkhead directly under the dash. Figure 7 shows a typical installation. In some cars this will have to be on the opposite side directly over the steering column, Figure 8. It is important that the space selected have at least four inches clearance directly over the receiver, otherwise it cannot be removed from the mounting bracket. Interference with other equipment under the dash, and

interference of the mounting bolts with equipment on the engine side of the bulkhead must be avoided. Figure 9A shows an installation where the receiver is in the usual location, but the loud-speaker is in the center.

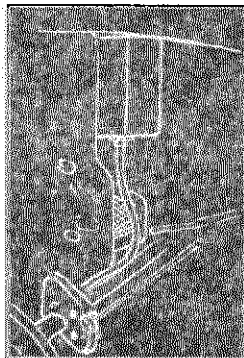


Figure 7—Usual Location of Receiver

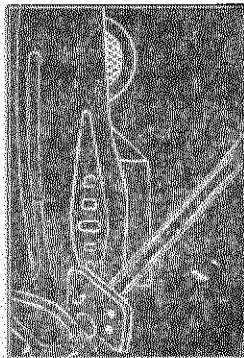


Figure 8—Receiver Over Steering Column

In some cars, the ignition coil is on the compartment side of the bulkhead or under the dash. If there is a choice of places available, the one at the greatest distance from the coil should be chosen. This is important as it reduces the ignition noise considerably.

Mounting Using the card inside of the Receiver Carton as a template, determine the proper location on the bulkhead and mark the location of the three holes with a center punch. A space at least four inches high must be left above the receiver. Extra holes are provided in the bracket to be used in case the regular holes are not satisfactory. If the bulkhead is curved, the template must be used flat and not follow the contour of the curved surface. In some cases, the receiver unit bracket must be mounted away from the bulkhead to clear obstructions. The center punch must be held perpendicular to the template when marking the holes to insure proper alignment. Next drill three 3/8 inch holes as marked. Then attach the bracket to the bulkhead by means of nuts and lockwashers furnished as shown in Figure 9.

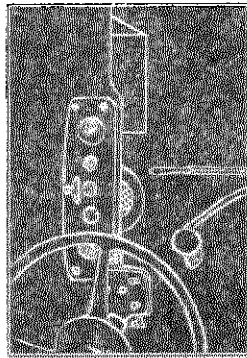


Figure 9A—Receiver on Right with Loudspeaker in Center

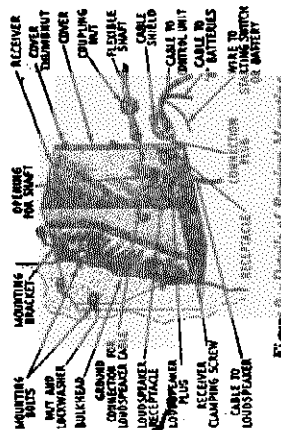


Figure 9—Details of Receiver Mounting

Remove the thumb-nuts from the top, front and sides of the receiver. Remove the packing material from around the Radiotrons and make certain that they are in the proper sockets. (See Figure 10).

Press the grid contact caps firmly over the contacts on top of all RCA-236 Radiotrons. Also make sure that the tuning capacitor rotor plates are fully meshed with the stator plates so that the flexible shaft may be easily mounted. If the positive terminal of the storage battery is grounded to the frame of the car, it will be necessary to remove the bottom of the receiver and change the yellow and blue wire from its normal position on the resistor board to that indicated by the dotted line in Figure 11. Replace the bottom, the cover and thumb-nuts making sure the nuts are tight. Hang the receiver on the bracket hooks, insert the clamp screw and washer at the bottom and tighten with a screw driver.

**MODEL M-30
Auto Radio
Notes Part 3**

R. C. A. VICTOR CO., INC.

ANTENNA PLATE

Location The antenna plate, if used, should be mounted under the car and as far to the rear as possible. Also it must be as low (close to the road) as possible and still maintain the clearance of the lowest point of the car from the road.

Usually, it is mounted on the opposite side from the Muffler and exhaust pipe to prevent crowding. See Figure 13. In some cases, it is desirable to mount the plate crosswise to the car chassis. Avoid any location that will place the plate in a position that will impede the free motion of the chassis parts such as springs, drive shaft, or axles, as damage to the antenna will result.

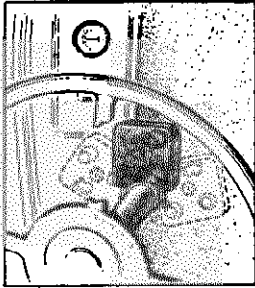


Figure 12—Position for Control Box in Order to Make Adjustments

Mounting After determining the proper location, fasten the plates together with the screws provided. Adjust the length so that the plate is as long as possible and still fulfill the foregoing conditions. Assemble the mounting bolts onto the plate as shown in Figure 5 and fasten the clamps to the car frame. Then tighten the bolt that holds the antenna plate to the bracket and the screw and lock nut that holds the bracket to the car frame. *Too much attention to the proper tightening of these screws is impossible, as any loosening of this plate that results in one end dropping while the car is driven at high speed may result in an accident.*

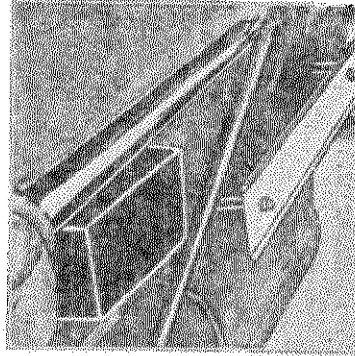


Figure 13—Typical Location of Antenna Plate and Battery Box

"B" BATTERIES

Location If possible, the "B" batteries should be mounted under one of the seats or behind the back of the rear seat. In cars having a rear compartment or trunk, the batteries may be located therein.

However, if such a place is not possible, then a battery box must be used. This box can usually be mounted under the car by fastening to the floor boards. Its location should be as far from the muffler and exhaust pipe as possible, as the heat from these parts will have a detrimental effect on the life of the batteries.

LOUDSPEAKER

Location The Loudspeaker may be mounted at several locations, in most automobiles. However, the preferable location is on the bulkhead facing the rear of the car and on the opposite side from that of the receiver. If several locations are available, choose the one that gives the best acoustical results. This can easily be determined by experiment by not mounting the speaker until the rest of the equipment is in place and the receiver operating.

Mounting The instructions for mounting the receiver assembly apply equally well to the loud speaker, with the exception that the loudspeaker is mounted direct, there being no bracket provided. A template is also provided for this unit. No clearance space above the loudspeaker is required.

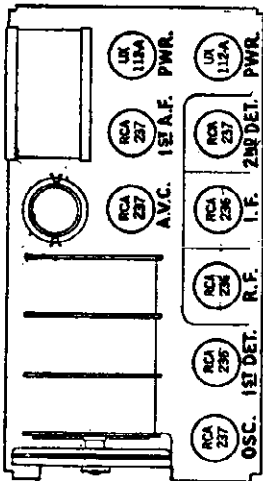


Figure 10—Radiotron Socket Location

CONTROL UNIT

Location The control unit is mounted on the steering column at a convenient height for the driver. Due to the large size of the steering wheel hub on some cars, this distance must be adjusted for best visibility.

Mounting Place the felt around the steering column and hold it in place by means of string or a piece of tape. Remove one screw from the clamp and place the box and clamp around the felt. Replace the screw that was removed and tighten both screws equally.

FLEXIBLE SHAFT

Location The flexible shaft is used to mechanically connect the tuning capacitor in the receiver assembly to the drive and dial in the control box. It should be placed and fastened to the car so that it connects these two points together and is clear of any foot room or instruments. On some cars a special length shaft will be required. Such flexible shafts are listed in Part IV, page 24.

Mounting Turn the Station Selector until the flat side of the shaft may be seen through the hole in the side of the unit. Insert the end of the shaft into the opening at the rear of the Control Unit making certain that it engages the end of the shaft inside of the latter. Turn the shaft until the set screw is visible and tighten the set screw against the flat side of the shaft. Thread the coupling nut of the shaft onto the Control unit.

Turn the Station Selector knob clockwise so that the dial is at the extreme counter-clockwise position. Then insert the free end of the shaft into the opening provided on the receiver, turning the Station Selector knob back and forth until the shaft meshes. Tighten the collar that holds the shaft to the receiver unit.

After completing these two operations, slowly turn the Station Selector knob to the extreme clockwise and then to the extreme counter-clockwise position. Normally, this will insure the use of the complete range of the dial. If, however, it is noticed that a slight amount of tension is present at either end of the dial, then the control unit must be turned on the steering column in the direction of the tension, while making this adjustment. Then returning it to its normal position will relieve this additional tension. Figure 12 gives the details of this latter adjustment.



Figure 11—Wiring Change for Cars Having Positive Side of 1st Battery Grounded

**MODEL M-30
Auto Radio
Notes Part 5**

R. C. A. VICTOR CO., INC.

interfere with the driver's foot room. The switch may then be turned "on" and the receiver operated in the usual manner. Normally, starting the car engine will not introduce any objectionable noise. However, if ignition interference is present that is objectionable, then a reference to Part II will give the details for clearing up this trouble.

(3) INSTALLATION OF ROOF ANTENNA

In cars not already equipped with roof antennae, the usual installation is that of the antenna plate. Due to the high sensitivity of this receiver, entirely satisfactory results are obtained from the plate antenna in most installations. However, if the car is to be operated in a locality remote from any stations and having a general low degree of signal strength, the erection of a roof antenna is advisable. The following details cover the procedure to be used in a majority of closed cars. This work should be done by a competent "trim" man as a degree of skill, only acquired by experience, is necessary in removing and replacing the fabric top of a car.


The antenna should be composed of copper screen having a total area of at least 10 square feet. It should be located as far to the rear as possible and insulated from any metal part of the car which may ground it. In some cars having a metal rib in the center, it will be advisable to make the antenna in two pieces and use insulated wire as straps for bonding it together. All joints together with the lead-in connections should be well soldered.

USE TINNED OR BRIGHT COPPER OR BRONZ WIRE SCREEN ONLY. DO NOT USE GALVANIZED OR OXIDIZED COPPER SCREEN

USE S-SCREEN OF PROPER WIDTH TO AVOID CUTTING LENGTHWISE

DROP THE HEAD LINING FROM FRONT OF CAR SO THAT IT CAN BE FOLDED ON REAR SEAT WHILE WORKING

CUT HOLE TO CLEAR DOME LIGHT AND SOLDER EDGES OF SCREEN

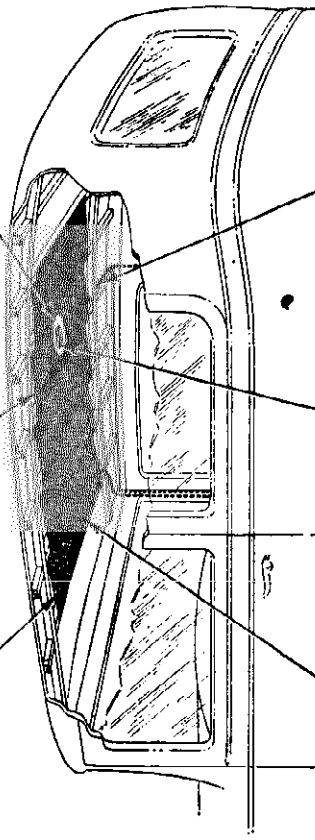

STAGGER TACKS TO PERMIT LISTINGS ON HEAD LINING TO BE TACKED OVER SCREEN

TACK DOME LIGHT WIRING TO UPPER EDGE OF BEAM SO THAT IT WILL NOT SAG OR VIBRATE

TIGHTEN AND IF NECESSARY SOLDER THE DOME LIGHT CONNECTIONS

Figure 18—Details of Roof Antenna

1. First determine if there is a grounded metal screen in the roof of the car, as some cars use such a screen for the top material support. A sharp pointed instrument, connected on one side of a continuity tester, the other side being grounded, should be used. Push the point through the top lining and fish around until it comes in contact with the wire screen. If any reading is obtained, even though very small, the screen is grounded and it cannot be used for an antenna. If not, however, one corner of the head lining may be removed and a connection soldered to the screen which will make an excellent antenna.
2. If the screen is grounded or if no screen is present, it will be necessary to remove the head lining and a strip clipped from the screen several inches from all edges and from the dome light or insert a copper screen approximately of these same dimensions. If there is a possibility of the screen shifting, tack it to one of the ribs and lace the sides with cord.
3. Solder a length of shielded wire to the right front corner of the screen. Then solder or bond the shield securely to the car frame. The lead-in is then run down the right front roof

support. Usually, this can follow the path of the dome light lines. It should be noted however, that if the ignition coil is mounted on either side of the dash, it is preferable to run the lead-in down the column further from the coil.

4. Again test the antenna from the set end of the lead-in to ground for any possible shorts. If none exist then replace the head lining. Figure 18 shows a typical roof antenna installation.

(4) INSTALLATIONS ON MODEL A FORDS

The Model A Ford presents a somewhat involved problem for the installation of the RCA Victor Automobile Radiola. The reason for this is that due to the gasoline tank being part of the cowl, the usual location for the set and speaker cannot be used. Two positions for the receiver and three for the speaker are possible, each having several disadvantages.

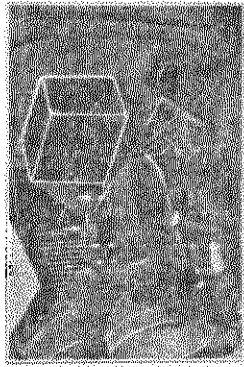


Figure 19—Location of Units in Model A Ford

The receiver unit may be mounted in the engine compartment as shown in Figure 19, more easily than at any other location. The disadvantage of this position is that due to the high noise level present even when suppressors are used, a satisfactory installation cannot always be made. The receiver is also subject to motor fumes, water and steam used in engine cleaning and the usual atmospheric conditions.

The other alternative position for the receiver is on the right side of the driving compartment as shown in Figure 20. The dimensions for a template to be mounted to the body to hold the receiver or loudspeaker are shown in Figure 21. The interference may be successfully eliminated at this location but the position of the receiver interferes with the leg room of the person riding beside the driver.

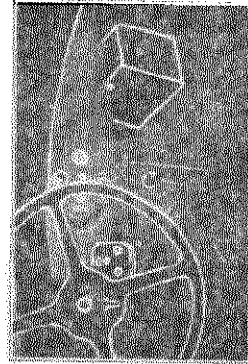


Figure 20—Alternative Position for Receiver and Loudspeaker

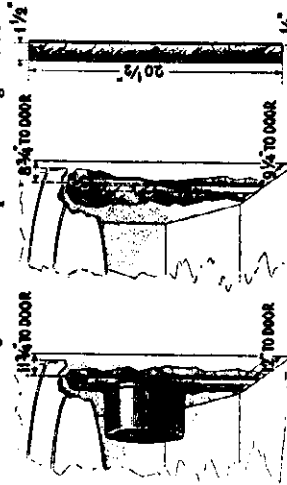


Figure 21—Dimensions of Bracket for Mounting Receiver or Loudspeaker to Side of Driver's Compartment

The loudspeaker may be mounted at either side of the car, using the same template for a bracket as that shown in Figure 21, on models not having pockets at either of these locations. On such models, such as the roadster, the loudspeaker can be mounted directly behind the gear shift lever and bolted to the seat base. This location is not seriously in the way and gives good acoustical results.

The batteries may be mounted behind the rear seat in the sedan models, in the rear compartment of coupes and roadsters or in a battery box on any model.

R. C. A. VICTOR CO., INC.

PART II—SUPPRESSION OF IGNITION INTERFERENCE

In general, the use of the ignition suppressors and capacitors as described in Part I of this booklet will reduce the ignition interference to a negligible amount. However, on some installations it will be found that the noise is still present to a degree that is undesirable. In such cases, the following hints will aid the installation man in clearing up this trouble.

(1) IGNITION ADJUSTMENTS ON MOTOR

The first step in clearing up a noisy installation is to thoroughly check and remedy any defects in the ignition system of the car. By this we mean the spark plugs should be cleaned and adjusted or replaced, the breaker points replaced or adjusted and synchronized if necessary, the distributor arm filled out with solder until it makes a full even contact, and the generator commutator cleaned and its brushes adjusted or replaced. Also all wiring should be cleaned and loose connections or poor joints remedied. This work is the first step in the clean-up job and it should be done by a competent ignition expert, who has been acquainted with the need of accurately making all adjustments.

Usually, such adjustments though made on a motor that is performing efficiently, will materially reduce the ignition noise in the radio receiver.

(2) BY-PASS CAPACITORS

In some installations a re-arrangement of the connections of the by-pass capacitors will be found beneficial. For example, the by-pass capacitor connected to the battery side of the ammeter, if connected to the battery side of the ignition coil may be more effective.

In other cases using an additional capacitor at the coil, a total of three for the installation, will remedy the trouble. In all cases the generator capacitor is used, although if a clicking is heard when the cut-out makes and breaks its circuit, the pigtail should be connected to the load side rather than the generator side of the cut-out relay.

On some cars, two capacitors—one on each terminal—at the ammeter will greatly reduce the noise. This is especially true of 1932 Studebakers.

(3) IGNITION COIL

The car ignition coil, due to the high electromagnetic field surrounding it, should be at as great a distance as possible from the receiver, preferably on the opposite side of the metal bulkhead. On cars that have the ignition coil mounted on the instrument board directly over the receiver unit, it may be necessary to place it in the engine compartment. Where the switch is mounted into one end of the coil, the switch assembly must be removed from the coil and a bracket provided for mounting it. The leads from the coil should be shielded and the shield grounded. (Use Packard High Tension Cable for the high tension lead to the distributor).

Another important point is that of the primary connections. While not affecting the ignition system in its relation to the car, due to the use of auto-transformers as coils, interchanging the primary leads to a coil will sometimes materially reduce the ignition noise.

(4) ANTENNA PLATE


If grounding the antenna at its point of exit from the shield reduces or eliminates the noise, then it is feeding in through the antenna. The remedy in such a case is to place the antenna further toward the rear of the car. Also lowering it, slightly will greatly increase its signal pickup. Care must be exercised when doing this, to ascertain that the road clearance of the car is not reduced. Another important point to check is the grounding of the outer end of the antenna shield. Grounding this end of the shield to the chassis in practically all cases, materially reduces ignition noise. However, in certain cases, grounding this shield may increase the noise. In such cases the shield should be insulated with tape and left ungrounded.

(5) CABLES


Proper placing of the various shielded cables may have a bearing on the ignition noise picked up as well as contact noise caused by a variable contact between the cable shields and the car frame.

The antenna lead should follow the shortest path between the receiver unit and the antenna. If there is any possibility of the shield rubbing against any of the car frame, the cable should be taped or clamped in place. The "B" battery cable should be taut and any slack taken up by means of a loop. It should also be fastened or taped securely.

SPUCE-IN TYPE SUPPRESSOR

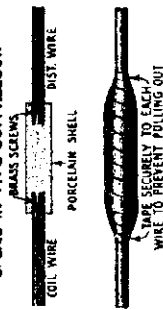

PLUG-IN TYPE SUPPRESSOR

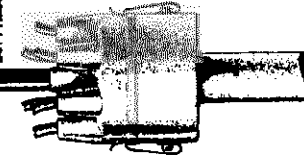

BINDING POST TYPE DISTRIBUTOR USING SPARK-PLUG TYPE SUPPRESSOR.

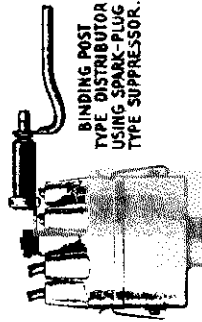


Figure 23—Installation of Various Types of Distributor Suppressors

(6) DISTRIBUTOR SUPPRESSORS

Three different styles of distributor suppressors are used, due to the variations in the distributor head connections. These are illustrated in Figure 23. The plug-in type is supplied with this equipment and is used in the majority of cars. The spark plug type with the end flattened is used in Packard and other cars having the binding post connection. The splice-in type is used on cars that do not have a readily removable connection to the distributor head. It is spliced into the high tension lead, as close to the distributor as possible. This type may also be used on cars not having much room at the spark plugs, such as the Buick. While not furnished with regular equipment, the splice-in type suppressor is listed in Part IV.

PART III—SERVICE DATA

Service work in connection with the RCA Victor Automobile Radiola is very similar to that of the usual broadcast receiver. However, the following description of the circuit and method of making adjustments will be found helpful in locating and remedying any failure that may occur.

ELECTRICAL DESCRIPTION OF CIRCUIT

The following description of the circuit will give the service man a better understanding of the functioning of the receiver and thereby help him in his work. Figure 22 shows the schematic circuit diagram.

The first tube is the tuned R. F. stage. This is the screen Grid Radiotron, RCA-236. The control grid bias for this Radiotron is varied by means of the automatic volume control tube.

The output of the R. F. stage is coupled inductively to the grid coil of the first detector. At this point the oscillator output is also coupled inductively to the grid coil of the first detector.

MODEL M-30 Auto Radio Notes Part 7

R. C. A. VICTOR CO., INC.

If the other adjustments have not been tampered with—the intermediate tuning capacitors—the following procedure may be used for adjusting these capacitors.

1. Loosen the receiver unit clamping screw and dismount the receiver from its mounting bracket. Do not remove any of the connections or the flexible cable.
2. Procure an R. F. oscillator giving a modulated signal at exactly 1400 K. C. and 600 K. C. Also procure a non-metallic screw driver—Stock No. 7065 — and a No. 5 Spintite socket wrench.
3. An output indicator is necessary. This should be a current-squared thermo-galvanometer substituted or connected in parallel to the loudspeaker leads.

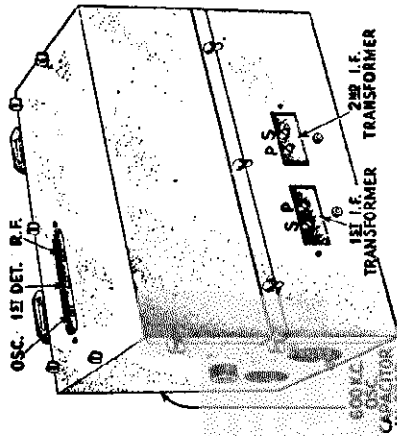


Figure 24—Location of Radio Frequency, Oscillator and Intermediate Frequency Adjustments

4. Remove the top cover of the receiver and remove the automatic volume control tube. Also ascertain that the tuning capacitor is fully meshed when the dial reads 150.
5. Place the oscillator in operation at exactly 1400 K. C. and couple it to the antenna. Set the dial at exactly 140 and adjust the coupling between the antenna and oscillator so that the output indicator does not give an excessive reading.
6. With the socket wrench, adjust the oscillator (see Figure 24), the first detector and the R. F. line-up capacitors until a maximum deflection is obtained in the output meter.
7. Set the oscillator at 600 K. C. Tune in this signal with the receiver and adjust for a deflection in the output meter. Now adjust the 600 K. C. series capacitor, Figure 24, until maximum output is obtained. Rock the tuning capacitor back and forth while making this adjustment.
8. Change the oscillator frequency to 1400 K. C. and set the dial at 140. Again make the adjustments given under 2, 3, 4, 5 and 6.

(2) I. F. TUNING CAPACITOR ADJUSTMENTS

A single intermediate frequency amplifier stage is used in this receiver. Two transformers are used and all circuits are tuned to 175 K. C. The circuits are peaked and when alignment adjustments are made, the capacitors are adjusted for maximum output. It will be necessary to remove the chassis from its mounting bracket as is the case of the R. F. adjustments.

This is a tuned grid circuit oscillator using a Radiotron RCA-237 and having a closely coupled plate coil that gives sufficient feedback to provide stable operation. The grid circuit is so designed that by means of a correct combination of capacity and inductance a constant frequency difference between the oscillator and the tuned R. F. circuits throughout the tuning range of the receiver is obtained.

The next circuit to examine is the first detector. The circuit is tuned by means of one of the gang condensers to the frequency of the incoming signal. Radiotron RCA-236 is used in this stage. In the grid circuit is present the incoming signal and oscillator frequencies. The beat frequency —175 K. C.—appears in the plate circuit of the first detector which is accurately tuned to 175 K. C.

The next stage is that of the I. F. amplifier. A single stage is used, requiring two I. F. transformers, consisting of four tuned circuits. The plate circuit of the first detector, the grid and plate circuit of the I. F. amplifier and the grid circuit of the second detector are all tuned to 175 K. C. Radiotron RCA-236 is used in this stage and its control grid voltage is also varied by means of the automatic volume control tube.

At this point it is well to consider the action of the automatic volume control tube as it controls the R. F. and I. F. amplifiers of the receiver. The grid of the automatic volume control tube, RCA-237, is connected direct to the cathode of the second detector.

The change in the bias voltage of the second detector, due to fluctuation of the signal, is applied to the grid of the A. V. C. tube. This produces a voltage drop across a resistor in the plate circuit which constitutes the control grid bias for the R. F. and I. F. amplifier. As the value of the plate current is a direct result of the voltage applied to the grid, a greater plate current gives a greater voltage drop across the resistor in its plate circuit and therefore a higher bias on the I. F. and R. F. stage. This results in less sensitivity and vice versa. The volume control varies the bias on the grid of the volume control tube.

The second detector is of the grid-biased type, using Radiotron RCA-237. The purpose of the second detector is to extract the audio frequency component of the R. F. signal which represents the voice or musical modulations produced in the studio of the broadcasting station. The audio component is extracted and used to drive the first A. F. tubes while the R. F. current is by-passed and not further used.

The output of the second detector is coupled by means of resistance coupling to the grid of the first A. F. Radiotron RCA-237. This audio stage is used as a driver for the Class B amplifier.

The output of the first audio stage is coupled by means of transformer coupling to the grids of the Radiotrons UX-112-A used as a push-pull Class "B" power stage. This stage is so biased that normally no plate current flows. However, as the grid swings positive due to the signal voltage being applied, plate current flows which is entirely of an audio character. As there is little residual current when no signal is present, this is a very economical amplifier as well as providing a high undistorted output—2 Watts.

The entire "A" battery current drain is 2.85 Amperes and the "B" current 12 M.A. minimum and 25 M.A. average maximum.

Filament and heater current is supplied from the storage battery in the car. Plate current is supplied by means of four medium size "B" batteries. A fuse is provided in both filament and plate circuits to protect the batteries and tubes.

(1) R. F. AND OSCILLATOR ADJUSTMENTS

Four adjustable capacitors are provided for aligning the R. F. circuits and adjusting the oscillator frequency so that it will be at a 175 K. C. difference from the incoming R. F. signal throughout the tuning range of the set. Poor quality, insensitivity, and possible inoperation of the receiver may be caused by these capacitors being out of adjustment.

R. C. A. VICTOR CO., INC.

MODEL M-30
Auto Radio
Voltage
Notes Part 8

(4) TESTING CAPACITORS

The by-pass capacitors are in a metal container. The internal wiring diagram is shown in Figure 26.

The capacitors can best be tested by freeing their connections and charging them with approximately 180 volts D. C. (use the four "B" batteries) and then noting their ability to hold the charge. After charging, short circuiting the capacitor terminals with a screw driver should produce a flash the size of the flash depending on the capacity of the capacitor and the voltage used for charging. A capacitor that will not hold its charge is defective and requires replacement of the entire unit.

(5) CHECKING RESISTANCE VALUES

The values of the various resistance units in this receiver are shown in the schematic diagram, Figure 22. When testing a receiver for defects, the various values of resistance should be checked. This may be done by a resistance bridge; the voltmeter-ammeter method, or by the following method.

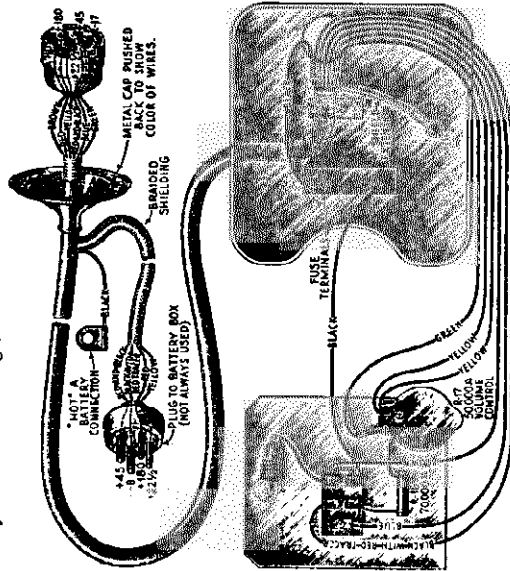


Figure 25—Control Box Wiring

For resistance of low value, 5000 ohms or less, use a voltmeter having a resistance not greater than 100 ohms per volt. For high values of resistance use a meter of 1000 ohms or more per volt. The Weston meters, Type 301 or 280, each have a resistance of 62 ohms per volt and are satisfactory for the low values. Use sufficient battery to give a good deflection on the meter, for example, a 45 volt "B" battery for a 0-50 voltmeter. Take two readings, one of the battery alone, and one of the battery with the unknown resistance in series. Then apply the following formula:

$$\left[\frac{\text{Reading obtained of battery alone}}{\text{Reading obtained with resistance in series}} - 1 \right] \times \text{Resistance of meter} = \text{Unknown Resistance}$$

(6) WIRING DIAGRAMS

The schematic wiring diagram is shown in Figure 22. The Control Unit wiring is shown in Figure 25 and the general wiring in Figure 26. A reference to these diagrams when locating trouble or replacing a unit will usually prove helpful. The internal connections of the cables are shown in Figure 27.

A detailed procedure for making these adjustments follows:

- a. Procure a modulated R. F. oscillator giving a signal at 175 K. C. The General Radio Type 360 is suitable. A non-metallic screw driver such as Stock No. 7065 is also necessary.
- b. Connect an output meter in the circuit. A current-squared galvanometer connected either in place of or across the loudspeaker leads is suitable.
- c. Remove the metal cover over the top of the receiver and then remove the oscillator and automatic volume control tube, Figure 10. Make a good ground connection between the receiver chassis and the car frame.
- d. Place the oscillator in operation and connect its output between the control grid connection of the first detector and ground, see Figure 10.
- e. Now adjust the secondary and primary of the second and first I. F. transformers until a maximum output is obtained in the output meter. Go through these adjustments a second time as a slight readjustment may be necessary. Be sure the output from the oscillator is not great enough to overload the first detector and I. F. tubes.
- f. When the adjustments are made, the set should perform at maximum efficiency. However, due to the interlocking of adjustments, it is a good plan to always follow the I. F. adjustments with the R. F. and oscillator lineup capacitor adjustments as described in Part III, Section I.

(3) VOLTAGE READINGS AT RADIOTRON SOCKETS

The following voltages taken at each Radiotron socket with the receiver in operating condition should prove of value when checking with test sets such as the Weston Model 547, Type 3, or others giving similar readings. The plate currents shown are not necessarily accurate for each tube, as the cable in the test set will cause some circuits to oscillate, due to its added capacity. Small variations of voltages will be caused by different tubes. Therefore, the following values must be taken as approximately those that will be found under varying conditions. The numbers in column 1 indicate the tube socket numbers shown in Figure 26.


RADIOTRON SOCKET VOLTAGES

Tube No.	VOLUME CONTROL AT MINIMUM					Heater or Filament Voltage
	Cathode to Heater Voltage	Cathode to Screen Grid Voltage	Cathode to Filament to Plate Voltage	Plate Current M. A.	Screen Grid Current M. A.	
1. R. F.	18	0.5	100	0	0	6.0
2. 1st Det.	1.0	3.0	42	0.25	0.1	6.0
3. Osc.	6.0	0	45	3.5	—	6.0
4. I. F.	18	1.0	100	0	0	6.0
5. 2nd Det.	12	10	110	0.5	—	6.0
6. 1st A. F.	15	2.0	165	3.5	—	6.0
7. A. V. C.	10	1.0	15	1.5	—	4.5
8. P. W. R.	—	20	155	1.5	—	4.5
9. P. W. R.	—	20	155	1.5	—	4.5

Tube No.	VOLUME CONTROL AT MAXIMUM (NO SIGNAL BEING RECEIVED)					Heater or Filament Voltage
	Cathode to Heater Voltage	Cathode to Screen Grid Voltage	Cathode to Filament to Plate Voltage	Plate Current M. A.	Screen Grid Current M. A.	
1. R. F.	18	0.5	70	4.0	1.0	6.0
2. 1st Det.	1.0	3.0	42	0.25	0.1	6.0
3. Osc.	6.0	0	45	3.5	—	6.0
4. I. F.	18	0.5	70	4.0	1.0	6.0
5. 2nd Det.	12	10	110	0.5	—	6.0
6. 1st A. F.	15	2.0	165	3.5	—	6.0
7. A. V. C.	5.0	9.0	15	0	—	6.0
8. P. W. R.	—	20	155	1.5	—	4.5
9. P. W. R.	—	20	155	1.5	—	4.5

MODEL M-30
Auto Radio
Notes Part 9

R. C. A. VICTOR CO., INC.

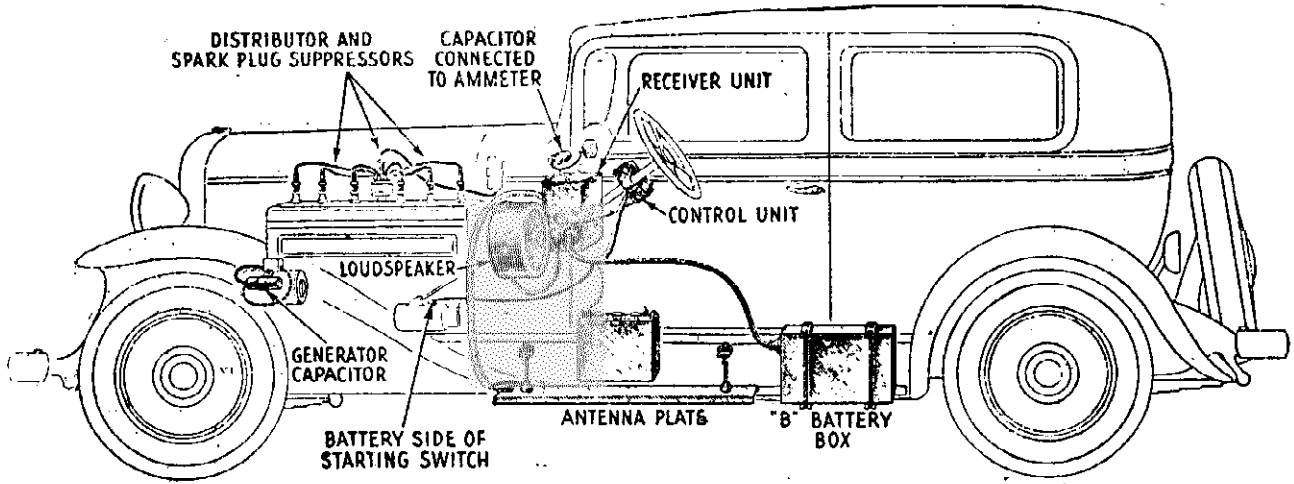

General View of Typical Installation of Automobile Radio

(7) VOLUME CONTROL

Normally, turning the volume control to the extreme counter-clockwise position will reduce the output volume of the receiver to zero. However, in event a powerful local station does not reduce to a satisfactory level, then check the following points.

- a. Automatic volume control tube. Try interchanging it with others of a similar type or replacing it with a new one.
- b. Volume control. Normally the volume control is of 50,000 ohms resistance. If for any reason it should be less, then the fixed resistor R-16 must also be reduced in value so that the proportion of 50,000 ohms to 70,000 ohms is maintained. For example—if the volume control measures 30,000 ohms, the fixed resistor should be replaced with one of 42,000 ohms. Such a replacement is much easier than a replacement of the complete volume control.

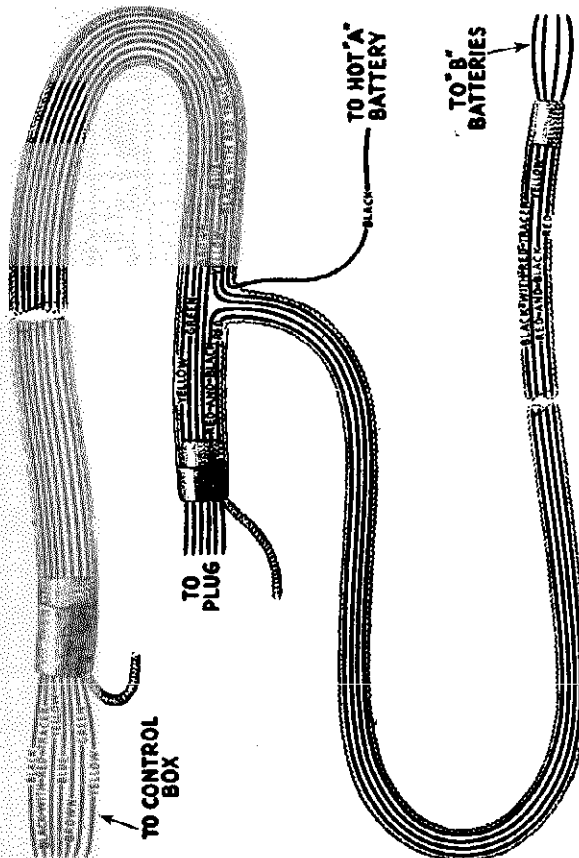


Figure 27.—Internal Connections of Cables

PART IV—REPLACEMENT PARTS

On the following pages the parts that are required for replacement use are listed. It will be noted that several parts not included in the standard equipment are also listed. There are respectively, several types of ignition suppressors and special length flexible shafts. Reference to these parts has been made in the text and on some special installations they will be required.

R. C. A. VICTOR CO., INC.

MODEL M-30
Auto Radio
Parts List

REPLACEMENT PARTS—(Continued)

Stock No.	Description	List Price	Stock No.	Description	List Price	Stock No.	Description	List Price	Stock No.	Description	List Price
2240	RECEIVER ASSEMBLY		3287	CONTROL BOX ASSEMBLY		8229	LOUDSPEAKER ASSEMBLY				
2246	Resistor—30,000 ohms—Carbon type—1 watt	\$0.70	5153	Label—Metal trade mark label—Package of 5	\$0.75		Conc.—Speaker paper conc.	Package of 5	\$8.00		
2736	Resistor—1 megohm—Carbon type—1 watt—Package of 5	3.00	6154	Clamp—For clamping control box to steering wheel shaft—Package of 5	.50	8830	Housing—Speaker housing complete—Comprising front screen, back disk screen, case and mounting bracket	3.00			
2741	Inductor—Tuning capacitor drive idler—Package of 5	2.00	6155	Screw—Clamp mounting screw—Package of 50	.50	8831	Bracket assembly—Speaker housing bracket—Comprising bracket, 2 mounting bolts, 4 washers and 4 nuts	.95			
2742	Spring—Tuning capacitor drive tension spring—Package of 5	.30	6156	Shaft—Tuning dial shaft with gear and drive washer—Package of 5	1.25	8832	Cable—Speaker shielded cable less plug	.55			
2747	Cap—Grid condenser cap—Package of 5	.50	6157	Switch—Lock switch—Complete with mounting nut and washer	.80	8838	Speaker complete—Comprising Speaker, housing case and cord—Assembled	13.50			
2749	Capacitor—2400 mmfd.	1.50	6158	Volume control—Volume control complete with mounting nut	1.50		ANTENNA ASSEMBLY				
2966	Resistor—28,000 ohms—Carbon type—1 watt—Package of 5	2.50	6159	Nut—Knurled nut for lock switch—Package of 10	.50	6129	Staple—Insulated staple—Package of 100	.75			
2994	Coil—2nd detector R.F. choke coil	.60	6160	Resistor—70,000 ohms—Carbon type—1/2 watt—Package of 5	2.00	6130	Screw and Nut—U bracket set screw—14—16 x 1/4—Complete with lock nut—Package of 10	.50			
3048	Resistor—300,000 ohms—Carbon type—1/2 watt—Package of 5	2.50	6161	Dial seal—Package of 5	2.50	6131	Insulator—Insulator bushing for No. 7420—Package of 10	.70			
3078	Resistor—10,000 ohms—Carbon type—1 watt—Package of 5	2.50	6162	Knob—Tuning control knob—Package of 5	2.50	7419	Bracket—U bracket for mounting antenna plates—Package of 2	1.00			
3118	Resistor—100,000 ohms—Carbon type—1/2 watt—Package of 5	2.00	6163	Spring—Knob tension spring—Package of 25	1.85	7420	Stud—Antenna plate stud—14—16 x 8/16—Complete with 5 mounting nuts—Package of 5	1.00			
3288	Socket—11Y Radiotron socket—Complete with insulation strip	.50	6164	Key—Lock switch key—Package of 10	.75	8819	Plate—Single antenna plate	1.75			
6133	Socket—11X Radiotron socket—Complete with insulation strip	.50	6165	Lamp—Dial scale lamp—Package of 5	1.75	2968	Receipt—Four prong receipt complete	.50			
6134	Resistor—1200 ohms—Carbon type—1 watt—Package of 5	2.00	6169	Felt—Felt strip for steering column—Package of 10	.50	6122	Clamp—Cable clamp—Package of 15	.50			
6135	Resistor—270 ohms—Carbon type—1/2 watt—Package of 5	2.00	7430	Control box complete—Less flexible shaft and cable	5.25	6123	Cap—Plug cover rubber cap for No. 6123—Package of 5	.50			
6136	Coil—R.F. coil	1.90	7431	Cover assembly—Comprising top and bottom covers	1.20	6125	Fuse—1/4 ampere—Package of 5	1.50			
6138	Coil—1st detector and oscillator coil	3.30	7432	Bracket assembly—Comprising brackets, studs, stop washer and lamp socket—Located inside of control box	2.20	6126	Clip—Fuse clip—Package of 12	.50			
6139	Cord—Tuning condenser drive cord—Package of 5	.65		LOUDSPEAKER ASSEMBLY		6127	Bolt—Carrage bolt for mounting top of box to car—5/16—18 x 1 1/2—Complete with lock nut—Package of 5	.50			
6140	Plug—6 prong male plug and plug receptacle	.50	2975	Rivet—One retaining ring mounting rivet—Package of 100	8.60	7418	Bolt—Hanger bolt 5/16—18 x 9 1/2—Complete with two lock nuts—Package of 5	.50			
6141	Receptacle—Two prong receptacle for speaker cord plug—Package of 2	.70	6166	Board—Terminal board with two terminals—Located on cone bracket—Package of 5	4.90	8817	Box body assembly—Comprising bottom plate, 2 side plates, 2 horn strips and receptacle—Assembled	3.45			
6142	Resistor—6,000 ohms—Carbon type—1/2 watt—Package of 5	2.00	6167	Plug—Two prong male plug—For cable No. 8832—Package of 5	2.05	8818	Box cover assembly—Comprising cover plate, 2 strips and 2 rubber strips—Assembled	1.70			
6143	Resistor—10,000 ohms—Carbon type—1 watt—Package of 5	2.00	6170	Rivet—For mounting speaker and front grille into housing—Package of 100	1.10	8820	Plate and strip assembly—Cardboard plate and strip assembly comprising six strips and one plate—Package of 5	.75			
6144	Resistor—4 ohms—Flexible wire type—Package of 5	1.00	6171	Rivet—For mounting No. 8831 bracket to housing—Package of 100	1.15						
6145	Cover Plate—Adjustable capacitor adjustment cover plate—Located on back receiver shield—Package of 5	1.00	7433	Screen—Speaker housing case wire screen—Package of 5	1.20						
6146	Screw—Self tapping hex head screw—For mounting cover plates to shield—Package of 40	.50	7434	Screen—Dust screen for back of speaker housing case—Package of 5	2.20	8702	Ring—Cone retaining ring	.80			
6147	Nut—Wing nut for receiver shield—Package of 20	.60	8828	Magnet assembly—Comprising cone bracket, cone and magnet	9.35						
6148	Fuse—30 ampere—Package of 5	.60			9.65						
6149	Bumper—Rubber bumpers—Mounted on receiver mounting bracket—Package of 10	.50			10.10						
6150	Plug—Six prong female plug—Located on main cable	.50									

Order By Stock Number Only



Order By Stock Number Only

MODEL M-30
Auto Radio
Resistance Data


R. C. A. VICTOR CO., INC.

All tubes removed from sockets and all batteries disconnected. Dial lamp removed

From Chassis to	Correct	Incorrect
Aerial to Ground	28 ohms	
RF Control Grid to 45+	500,000 ohms	TC- rf Cg-Y
RF Control Grid to Chassis	0 ohms	BLC- in tuned circuit
RF Control Grid to AVC Plate	5 ohms	
RF Cathode to 45+	170 ohms	BC- rf E-Y
RF Cathode to chassis	0 ohms	
RF Cathode Grid to 180+	30,000 ohms	EC- rf Sg-Y
RF Screen Grid to chassis	0 ohms	FC-Y (4 mfd)
RF Plate to 180+	58 ohms	TC- 1 D Cg-Y
		EC- 1 DK-Y
1 Detector Cg to chassis	5 ohms	
1 Detector Cathode to chassis	10,000 ohms	
1 Detector Screen Grid to 180+	30,000 ohms	
1 Detector Screen Grid to chassis	0 ohms	FC-Y (4 mfd)
		EC- 1 D Sg-Y
1 Detector Plate to 180+	89 ohms	TC- IF Tr
Oscillator Cg to chassis	40,000 ohms	Osc Grid Condenser
Oscillator Cathode to chassis	0 ohms	
Oscillator Plate to 180+	30,000 ohms	
Oscillator Plate to 1 D Screen	1 ohm	See Rf Screen
IF Control Grid to AVC Plate	40 ohms	TC- IF Tr
IF Cathode to 45+	170 ohms	
IF Screen to 180+	30,000 ohms	See Rf Screen
IF Plate to 180+	40 ohms	TC- 1 D Plate
		TC- IF Tr
2 Detector Control Grid to B-	89 ohms	
2 Detector Cathode to B-	28,000 ohms	
2 Detector Plate to 180+	100,080 ohms	
2 Detector Plate to Cathode	0 ohms	
1 Audio Control Grid to B-	1,000,000 ohms	BC- 2 DP- 2 DM
1 Audio Cathode to B-	3,589 ohms	BC- 1 AF E-B-
1 Audio Plate- 180+	920 ohms	
2 AF Cg to Cg	320 ohms	
2 AF Cg to chassis (A- grounded)	1,800 ohms	BC- 2 AF Cg-Y
2 AF Plate to Plate	560 ohms	
Between B- and 22+	1,716 ohms	
Across Output Transformer Secondary only	.4 ohms	
AVC Plate to 45+	500,000 ohms	
AVC Control Grid to B-	28,000 ohms	
AVC Cathode to 22+	0-29,455 ohms	

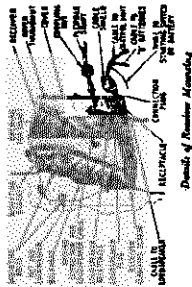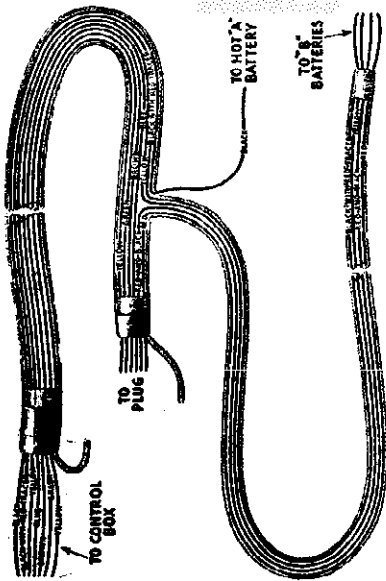

A 4 ohm resistor is to be found between one output tube filament terminal and the "A" hot lead. This lead contains a fuse between the "A" terminal and the switch. The control grid of the AVC tube is joined directly to the cathode of the 2nd detector. The normal circuit arrangement used in the receiver assumes A- of the car battery connected to ground. If A+ is grounded, a change is required. This change is shown in the wiring diagram upon page 504-Y

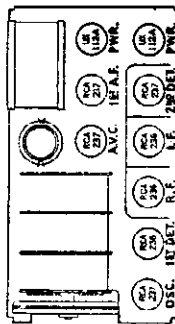

RADIOTRON SOCKET VOLTAGES

Tube No.	VOLUME CONTROL AT MINIMUM			Plate to Cathode Ratio	Plate to Grid Ratio	Plate to Screen Grid Ratio
	Cathode to Filament	Cathode to Plate	Grid to Plate			
1. B.F.	15	100	100	100	100	100
2. 2nd Det.	10	100	100	100	100	100
3. 1st Det.	10	100	100	100	100	100
4. 1st F.	10	100	100	100	100	100
5. 2nd F.	10	100	100	100	100	100
6. 1st A.F.	10	100	100	100	100	100
7. A.V.C.	10	100	100	100	100	100
8. P.W.R.	10	100	100	100	100	100
9. P.W.R.	10	100	100	100	100	100


VOLUME CONTROL AT MAXIMUM

Tube No.	VOLUME CONTROL AT MAXIMUM			Plate to Cathode Ratio	Plate to Grid Ratio	Plate to Screen Grid Ratio
	Cathode to Filament	Cathode to Plate	Grid to Plate			
1. B.F.	15	100	100	100	100	100
2. 2nd Det.	10	100	100	100	100	100
3. 1st Det.	10	100	100	100	100	100
4. 1st F.	10	100	100	100	100	100
5. 2nd F.	10	100	100	100	100	100
6. 1st A.F.	10	100	100	100	100	100
7. A.V.C.	10	100	100	100	100	100
8. P.W.R.	10	100	100	100	100	100
9. P.W.R.	10	100	100	100	100	100

Internal Connections of Chassis

R. C. A. VICTOR CO., INC.


MODEL P-31
Portable
Schematic
Voltage

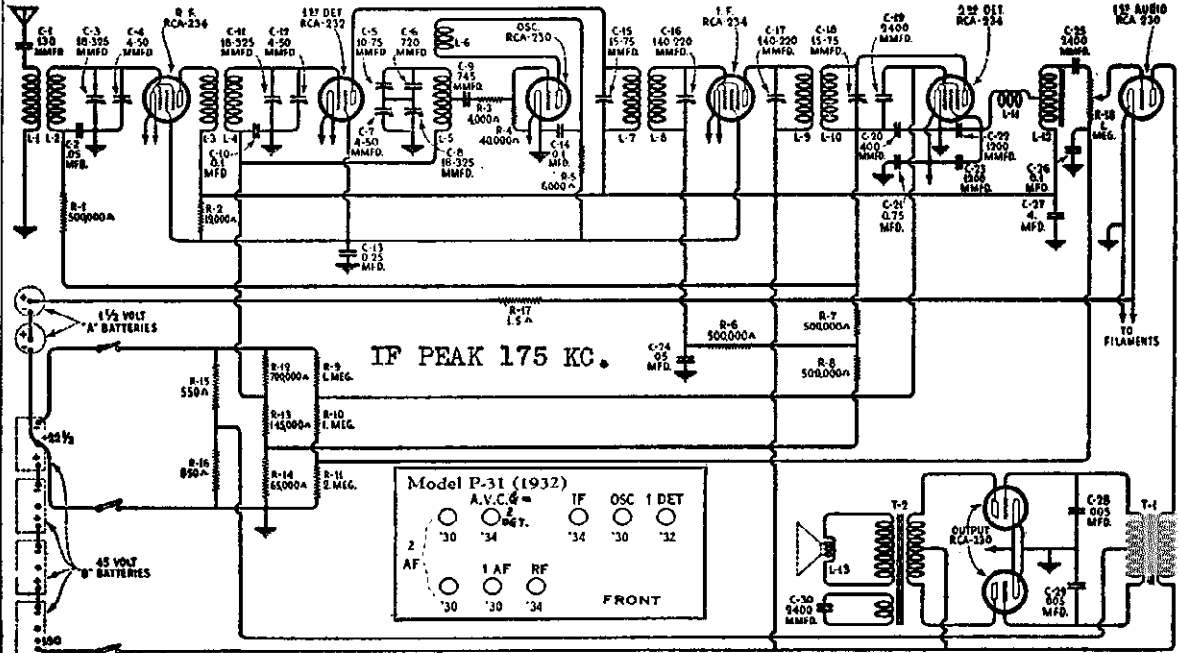

"A" Battery Current.....0.48 Amps.
Average "B" Battery Current...18 M. A.
Type of Audio Output Amplifier...Class "B"
Undistorted Output.....0.75 Watts

RADIOTRON SOCKET VOLTAGES
(No Signal Being Received)





Radiotron No.	Control Grid to Filament Volts	Screen Grid to Filament Volts	Plate to Filament Volts	Screen Current M. A.	Plate Current M. A.	Filament Volts
1. R. F.	0.2	65	150	1.0	3.0	2.0
2. 1st Det.	0.5	65	150	0.1	0.2	2.0
3. Osc.	1.0	—	45	—	3.0	2.0
4. I. F.	0.5	65	150	1.0	3.0	2.0
5. 2nd Det.	2.0	150	-1.5	4.0	0	2.0
6. 1st A. F.	1.0	—	145	—	2.5	2.0
7. Power	14.0	—	150	—	1.5	2.0
8. Power	14.0	—	150	—	1.5	2.0

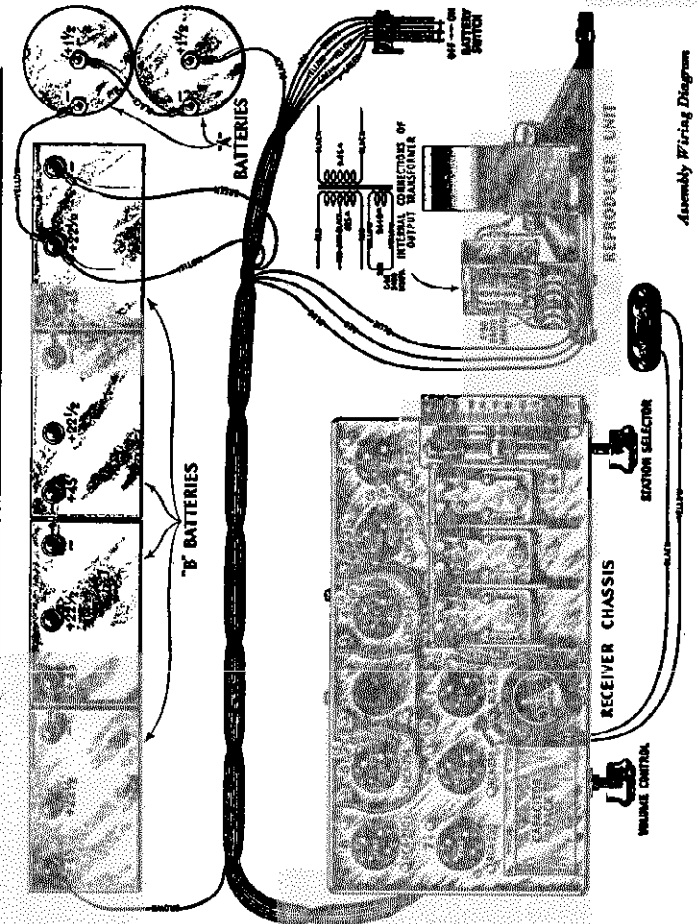

MODEL P-31
Portable
Chassis-Notes

R. C. A. VICTOR CO., INC.

PORTABLE
RADIOLA P-31

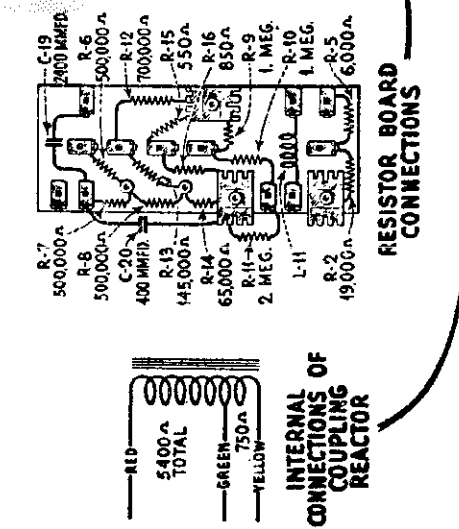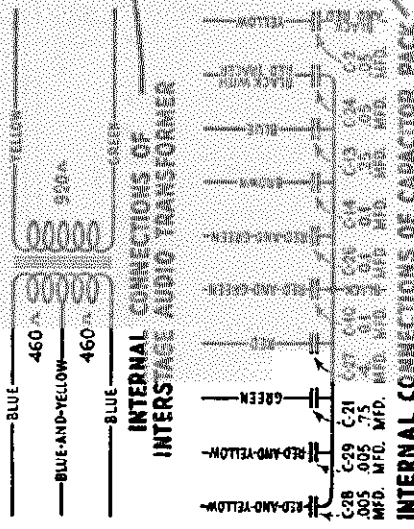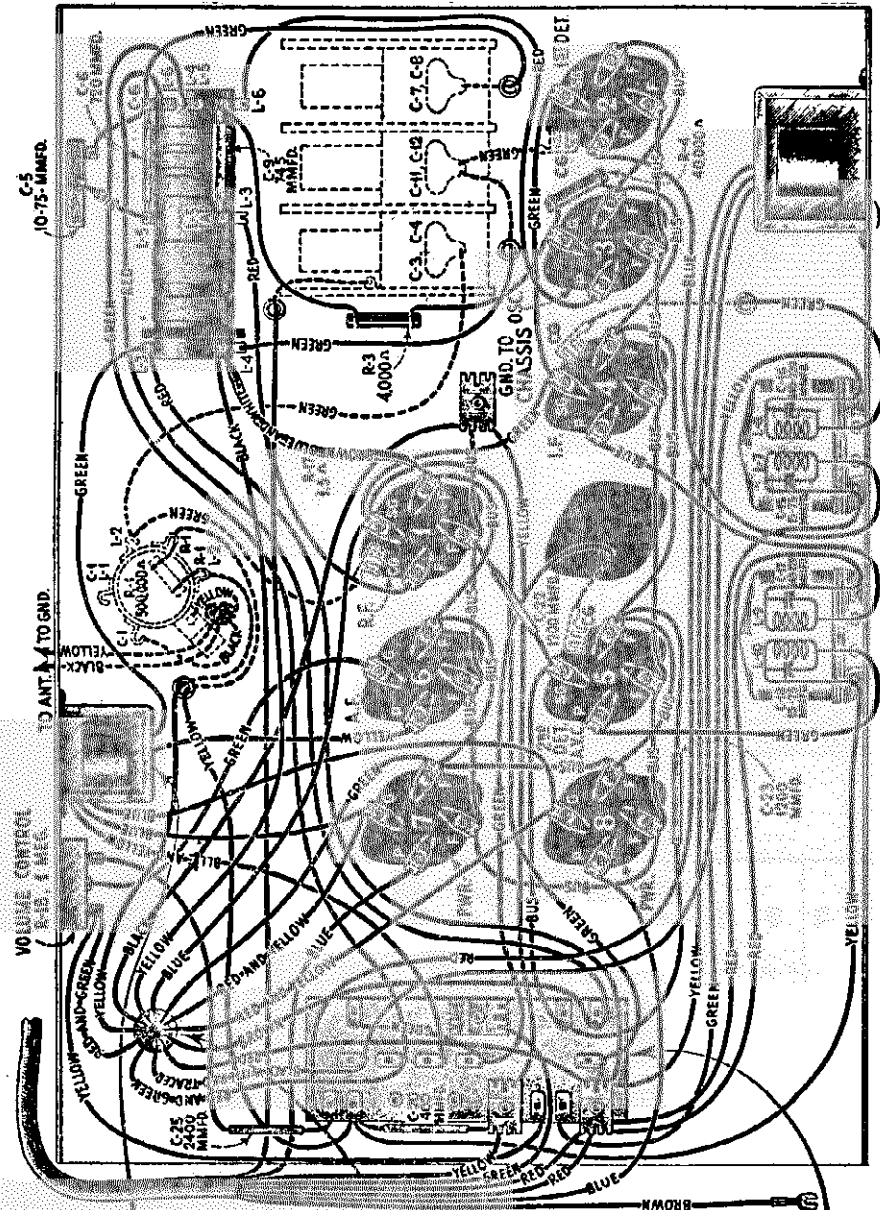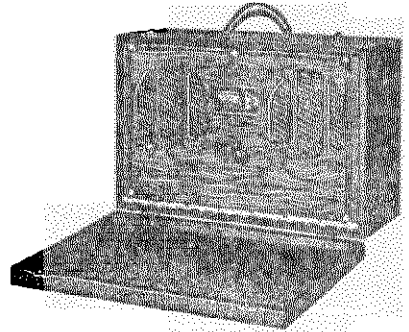

Permanent magnet dynamic type loudspeaker. An extra winding, shunted by a capacitor, acts as a high frequency pick-off.

See page 2-59 for the RCA Victor Portable Radiola P-31 is similar to that of other RCA Victor Super-Hi-Fi only receivers. Adjustments of the R. F. Oscillator and I. F. stage should be made in a manner similar to that described in the Service Notes on the Automobile Radiola W-30. The location of the various line-up capacitors is the same as that of the W-30.

In making line-up adjustments on the P-31, there is one important feature that affects the operation that should be remembered. That feature is the automatic volume control. Due to it being a combined A. V. C. and second detector, it cannot be removed from its socket or replaced with a dummy Radiotron.

R. F. OSCILLATOR AND I. F. ADJUSTMENTS

The R. F. Oscillator and I. F. Adjustments in Model P-31 are similar to those of the Automobile Radiola W-30. However, due to the A. V. C. tube also being the second detector, it cannot be removed while line-up adjustments are made. The proper manner in making this adjustment is as follows:

- Set the volume control of the receiver at maximum.
- Reduce the output of the external oscillator or its coupling to the receiver until a definite reduction in output meter reading is obtained. The oscillator output should again be reduced until but a slight indication on the output meter is obtained. At this low input the A. V. C. action is not sufficiently flat to interfere with the proper alignment of the various circuits.

SERVICE DATA

The plate circuit of the first detector, the grid circuit of the I. F. amplifier, the plate circuit of the I. F. amplifier and the grid circuit of the second detector are all tuned to 175 K. C.

The Radiotron RCA-234 used as the second detector is also the automatic volume control. It is a double detector, being a straight rectifier, a radio audio amplifier and a bias control automatic volume control, the signal being applied to the filament and plate of the second detector, being rectified by straight diode action. The audio output is taken applied to the control grid and filament by means of capacitor C-19. The tube then operates as an Audio Amplifier, the screen grid acting as the plate. In wiring the input circuit it will be noted that the signal current flows through resistors R-7 and R-8. The drop across resistor R-8 constitutes the control grid bias for the I. F. amplifier and the 1.5 volt bias is present on these tubes being the drop across the 65,000 ohm resistor of the voltage dividing system. Also the control grid bias for the second detector is obtained from the drop across the resistors R-10 and R-11, while R-9 and R-10 in parallel constitute a grid leak for its operation as an audio amplifier, C-19 being the coupling capacitor.

The output of the detector is then coupled by means of impedance coupling to the grid of the first A. F. amplifier tube. The grid leak is in the form of a potentiometer which is the volume control, its action controlled by the audio voltage applied to the grid of the first A. F. tube. The output of this tube is then applied to the grids of the two Radiotrons RCA-230 which are connected in Push-Pull as a Class "B" amplifier. The output of this stage is then transformer coupled to the cone coil of the

RCA-VICTOR CO., INC.

MODEL M-32
Installation Notes
Part 1

INTRODUCTION

This automobile radio receiver utilizes a highly-efficient six-tube Superheterodyne circuit, a remote control unit, and a newly-designed electrodynamic loudspeaker. Because of the inherently adverse conditions to which an instrument of this type is subjected, more attention should be given to its installation than is required by a modern radio for the home. Comparable performance, however, will be obtained if these instructions are carefully followed, both with respect to installation and operation.

Three new-type Radiotrons are used: (1) the "r-f exponential pentode" RCA-39, (2) the "duo-diode triode" RCA-85, and (3) the "a-f power pentode" RCA-89. These tubes incorporate the most recent engineering features and contribute materially to the outstanding performance of this receiver. An innovation in design is found in the use of Radiotron RCA-85 which combines automatic volume control with the normal function of the second detector in a single stage.

The receiver unit is extremely compact and is enclosed by a metallic shield case. The case may be quickly detached from its mounting bolts, thereby affording maximum convenience in replacing Radiotrons or other servicing. The remote control unit

is arranged for clamping to the steering column and thus places the volume and tuning controls and the key-operated power switch readily accessible to the driver. The dial scale, located only slightly below the normal driving line of vision, is glare-proof illuminated and is calibrated to facilitate frequency selection.

High-quality reproduction is obtained by use of the new electrodynamic loudspeaker. This unit is protected against mechanical injury by enclosure in an acoustically correct and attractive metallic container equipped with tone equalizers.

Plate voltage supply for the Radiotrons is obtained from an economical "B" battery eliminator unit which is furnished as a part of the standard equipment. (A special companion model of this receiver without the eliminator and suitable for operation from external "B" batteries, is available if preferred. See Appendix I.) Equipment for the suppression of ignition interference is included with the instrument.

The use of a roof antenna in all installations is recommended. Satisfactory results in many cases, however, may be obtained with a plate-type antenna mounted beneath the floor of the car.

PART I—INSTALLATION

Equipment

A. Equipment Furnished:

1. Receiver Unit—complete with the following Radiotrons:
 - (a) Three RCA-39.
 - (b) One RCA-37.
 - (c) One RCA-85.
 - (d) One RCA-89.
2. Loudspeaker—with cable and connector plug, washer, and nuts (2).
3. "B" Battery Eliminator Unit.
4. Outfit Package—containing:
 - (a) Remote Control Unit—with bracket, felt, screws, and interconnecting cable.
 - (b) Switch Keys (2) and Fuse—packed in instruction envelope (attached to control knob of item a).
 - (c) Flexible Shafts (2) and Set Screws (6).
 - (d) Antenna Coupling Connector Sleeve.
 - (e) Mounting Brackets (4) (for receiver and "B" battery eliminator units)—complete with screws (8), bolts (8), nuts (16), washers (8), and lockwashers (8).
 - (f) Insulation Bushing (for cable entrance slot in "B" battery eliminator unit).
 - (g) Wiring Clamp (for loud-speaker cable).
 - (h) Ignition Interference Suppression Equipment:
 - 6 Sparkplug type suppressors (additional obtainable from your Dealer).
 - 1 Distributor type suppressor.
 - 2 Capacitors.
 - (i) Instruction Book

B. Additional Equipment Required:

1. Antenna—

- (a) Roof (built-in) type recommended.
- (b) Plate (sub-mounted) type—alternative. A special plate antenna complete with mounting clamps, studs, and lead-in wire is obtainable from your Dealer, if required.

Location of Units

The arrangement of units shown in Figure 1 is applicable to the majority of automobiles. In certain installations, however, such locations may be considered impractical or not in accordance with personal preference, thereby necessitating a slight change in layout. The following suggestions will be of assistance in determining the most suitable position for each unit in any given case.

Receiver and Loudspeaker—In mounting these units, the adaptability of both to bulkhead (the partition between the engine and driving compartments) suspension should be determined initially. Consideration should be given to the space available and to the possibility of interference of the units with other equipment beneath the instrument panel or of the mounting bolts with apparatus on the engine side of the bulkhead.

Remote Control Unit—The control unit should be mounted on the steering column in a position chosen to afford greatest accessibility.

MODEL M-32

Installation Notes
Part 2

RCA-VICTOR CO., INC.

Antenna—

Roof Type: Best results will be obtained by use of a roof antenna. The majority of modern automobiles (closed body types only) are already equipped with such an antenna installed at the factory, the lead-in wire from which will usually be found coiled up beneath the instrument panel. Many other earlier cars employ a piece of metallic screen—for top material support—which, if ungrounded (not in electrical contact with the metallic frame), may be readily utilized as an antenna.

NOTE—The presence of a top support screen and of grounds in that screen may be determined without removing any portion of the top fabric. Consult your Dealer as to the proper procedure for making this test.

In order to use an ungrounded support screen, one corner only of the head-lining need be removed. A shielded lead should be first soldered to the screen and then carried down the front pillar post nearest the receiver unit. Its shield covering must be soldered or bonded to the car frame prior to replacement of the head lining.

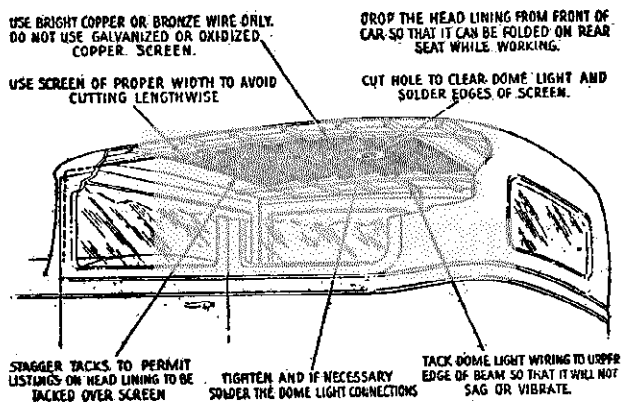


Figure 2

If the top support screen is grounded, or if no screen is present, it will be necessary to remove the entire head-lining (see Figure 2). In the former case, the screen may be insulated by removal of a strip several inches from all edges and from the dome light fixture. The possibility of subsequent shifting may be eliminated by tacking the screen to one of the ribs and by lacing the sides with cord. Where no support screen is used, a copper screen having a total area of at least ten square feet should be inserted. It should be located as far to the rear as possible and insulated from all metallic parts grounded to the frame of the car. The lead-in wire may then be attached as noted above and the head-lining replaced.

NOTE—Since a degree of skill—only acquired by experience—is necessary in removing and replacing the top fabric material, such work should be allotted to a competent "trim" man.

Plate Type: For those cases where the installation of a roof antenna is considered impractical or too costly, satisfactory reception from local or semi-

distant powerful stations may be obtained by use of the special, plate-type antenna. This unit should be clamped to the frame of the chassis as far to the rear as possible. It is adjustable in length and may be mounted either lengthwise or crosswise of the chassis which position should be selected with due regard to the prevention of overcrowding. The plate must be placed as close to the ground as possible, but not below the lowest portion of the chassis at the desired location as sufficient road clearance must be retained. It is also important to avoid any position in which the plate will impede free motion of chassis parts such as springs, drive shaft, or axles in order to prevent antenna damage.

"B" Battery Eliminator—The "B" battery eliminator may be mounted at any convenient position in the car. It is preferable, however, to place this unit near the receiver and to use bulkhead suspension when sufficient space is available. To conserve mounting space, the eliminator may be fastened to the engine side of the bulkhead but, in such cases, it is important that the unit be located as far as possible from the exhaust manifold.

Mounting the Units

Details of mounting the various units are shown in Figure 1. The following procedures are recommended:

Receiver Unit—Assemble the mounting brackets (packed in receiver carton) to the rear of the shield case by means of the machine screws furnished. Support the unit in the proper location, allowing a clearance of at least one inch above the top surface to permit ready removal for servicing. On the proposed mounting surface mark the outlines of the four key-hole shaped, bracket slots. Then drill four $\frac{5}{16}$ inch holes, coinciding with the top of the slot markings, and insert the receiver mounting bolts loosely.

The front cover of the receiver unit case (held in place by four screws) must now be removed and all packing material—inserted for protection of the Radiotrons during shipment—withdrawn. Make certain that all tubes are in position and that the control grid clips are pressed down firmly over the respective dome terminals as shown by the diagram printed on the label affixed to the top of the case. Rotate the tuning control shaft until the plates of the variable capacitor are fully meshed and adjust both shafts to positions wherein the flatted portions face upward. Then replace the front cover and tighten the cover screws in place.

NOTE—In order to further examine the radio chassis, that unit may be withdrawn from the body of the case subsequent to the removal of three screws from the lower surface. The antenna lead and the associated shield pigtail, however, must first be passed through the case side—which operation may be facilitated by detaching the small rubber bushing secured in the entrance opening.

MODEL M-32

Installation Notes

Part 4

RCA-VICTOR CO., INC.

the five leads and, when replacing the cover, secured in the cable entrance slot. The shield pigtail should be brought out through the bushing and fastened beneath the nearest cover mounting screw.

The *special* four prong plug attached to the main wiring cable must be inserted in the corresponding socket located on the left side of the receiver unit and the shield pigtail should be secured beneath a convenient screw in the lower surface of the container.

Loudspeaker to Receiver—The *standard* four-prong plug attached to the loudspeaker cable must be inserted in the remaining socket located on the left side of the receiver unit. The pigtail extending from the cable shield should be secured beneath that container screw to which the shield extension from the adjacent main wiring cable is attached.

Antenna to Receiver—The shielded lead-in wire extending from the roof or plate antenna should be cut to a length sufficient to facilitate attachment to the coupling type connector (secured to the receiver antenna lead) and to eliminate excessive slack. Refer to the detailed view of this coupling connector in Figure 1, which shows clearly the connections to be made as follows:

The small copper sleeve (packed in Outfit Package) should be slipped over the shield braid of the lead-in wire and the small internal insulated conductor passed through the female portion of the coupling type connector. Solder this conductor securely to the end of the internal eyelet. Then slip the sleeve forward to a position wherein the adjacent ends of the connector and the shield braid are covered. Finally solder the sleeve both to the coupling and to the shield and connect the assembly to that portion secured to the receiver antenna lead. Make certain that the shield pigtail extending from the antenna entrance bushing in the receiver container is securely fastened beneath one of the cover screws.

Suppression of Ignition Interference

(1) Disconnect all wires from the spark plugs. Fasten one spark plug suppressor to the top of each plug and re-attach the wires to the free ends of the suppressors.

(2) If the distributor is of the plug-in type, disconnect the center wire from the head. Plug the distributor suppressor into the distributor head and insert the wire in the free end of the suppressor.

For cap-type distributors, proceed as follows: Exchange the distributor suppressor at your Dealer's for one of a special type. Cut the wire leading from the distributor to the coil and screw the suppressor into the end attached to the distributor. Screw the other end of the wire (leading to the coil) into the opposite end of the suppressor.

(3) Clamp one of the by-pass capacitors against the generator frame. The screw holding the cut-out ordinarily may also be utilized for securing this unit. Connect the capacitor lead to the terminal on the generator side of the cut-out switch. (In some cases, interference will be reduced by connecting the capacitor lead to the opposite side of the cut-out. The most suitable position for this lead must be determined by trial.)

(4) Clamp the other by-pass capacitor securely to the instrument panel (if metallic) or to a convenient portion of the metal frame of the car, and connect the capacitor lead to the battery side of the ammeter (usually the terminal with only one lead). In certain cases, interference will be reduced by connecting the lead of this capacitor to the battery side of the ignition coil instead of to the ammeter.

(5) It may be found necessary to secure the loudspeaker cable beneath the grounding clamp (packed in Outfit Package) in order to minimize ignition interference. This clamp (as shown in Figure 1) may be attached conveniently to the left side of the receiver container.

PART II—OPERATION

The instrument should be operated as follows:

1. Insert the key in the lock on the Control Unit and turn it to the "on" position clockwise.
2. Set the Volume Control (left-hand knob) at or near the extreme clockwise position. Then turn the Station Selector (right-hand knob) in either direction until a station is heard. (Note—The dial scale is calibrated in channels to aid in station identification. Add one cipher to the scale marking to obtain the actual frequency in kilocycles.)
3. After receiving a signal, turn the Volume Control counter-clockwise until the volume is reduced to a low level. Now, re-adjust the Station Selector to the position midway be-

tween the points where the quality becomes poor or the signal disappears. *This operation insures the best quality of reproduction.*

4. Finally, advance the Volume Control (clockwise) until the desired level is obtained. Except on weak signals, the automatic volume control will maintain the volume substantially at the latter level, thereby precluding further manual adjustments. (Fading of the signal may be experienced in extreme cases, as when passing under bridges or other metallic structures, since such structures almost completely shield the antenna.)
5. When through operating, turn the key to the "off" position, counter-clockwise. The instrument is then locked by removing the key.

RCA-VICTOR CO., INC.

MODEL M-32
Battery Operated
Terminal Data

APPENDIX I—"B" BATTERY OPERATED MODEL

As noted in the Introductory section, a special instrument is available for "B" battery operation. This receiver is identical to the standard model except that the "B" Battery Eliminator Unit is omitted and a specially designed interconnecting cable is used. For such operation, four 45 volt "B" batteries are required and may be obtained from your Dealer.

The following parts are furnished as standard equipment with the battery operated receiver:

- 1 Fuse (rated 0.50 amp.)
- 2 Fuse Leads (with clips)
- 1 Fuse Insulation Sleeve
- 3 Battery Jumper Wires

Certain body types, such as coupes or sedans, afford sufficient space to permit internal mounting of the batteries. In these cases, it is necessary only to clamp the units in a manner to prevent injury or grounding through undue motion while the car is in operation. In such installations, the batteries will probably be most conveniently stacked "end to end" as shown in Figure 3.

For other installations, a special battery box for external mounting (also available from your Dealer) will probably be found necessary or desirable. This box (as shown in Figure 1) may be located at any position under the floorboards of the vehicle except near the exhaust line or where interference with free-moving parts of the chassis will be encountered. If placed in close proximity to the exhaust pipe or muffler, the heat radiation therefrom will cause rapid

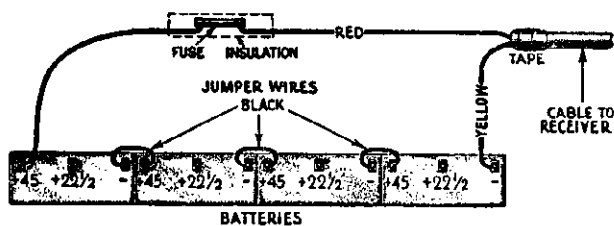


Figure 3

deterioration of the batteries. The box is of suitable dimensions to accommodate the following types of "B" batteries:

- Eveready—No. 485, No. 772, No. 796
Burgess—No. 2305, No. 2308, D-308
General—"Flying Squad" V 30 DX

If the battery box is used, it may be mounted most conveniently by drilling the required four (4) three-eighths inch holes in the floorboard with the box cover serving as a template. Insert the four

carriage bolts from above and fasten the box cover (with the hanger bolts inserted) in position beneath the floorboard with the nuts and lockwashers provided. Place the "B" batteries in the box and make all necessary internal connections (see Figure 4). With the fibre spacers in position above the batteries and the nuts on the hanger bolts unscrewed to the ends, lift the battery box into place, swing the hanger bolts into the case brackets and tighten all nuts. Make certain that both nuts are on each bolt and locked tightly. These operations, naturally, will be facilitated by placing the car on a lift.

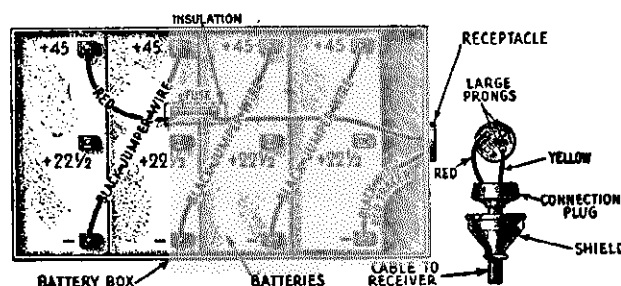


Figure 4

With the battery operated receiver, it will be noted that a plate circuit fuse must be employed. If the cable is to be connected directly to the batteries, the metal braid on the outside of the cable must be pushed back for a short distance in order to obtain leads of suitable length. As indicated in Figure 3, one fuse lead must be soldered to the cable wire and taped and the other connected to the end battery. The leads are equipped with clips (to permit ready replacement of the fuse) which in assembly are protected by an insulation sleeve. The end of the cable should be wrapped with tape for a short distance in order to prevent fraying and grounding to the battery terminals.

If the battery box is used, slip the rubber cover and the plug cap over the cable and solder the lead into the connection plug as indicated in Figure 4. Then fasten the cap to the plug, push the rubber cover forward and insert in the receptacle. One of the fuse leads must be connected to the proper terminal of the receptacle and the other to the end battery.

Worn out "B" batteries cause noisy and weak reception. Renew the batteries when they fail to give a reading of at least 35 volts per block as indicated by a high resistance voltmeter with the set turned "on."

MODEL M-32
Service Data
Voltage

RCA-VICTOR CO., INC.

APPENDIX II—SERVICE DATA

Electrical Specifications

Radiotrons Required
1 RCA-237, 3 RCA-239, 1 RCA-85, 1 RCA-89, Total—6

"A" Battery Consumption—Loudspeaker... 1.35 Amperes
Receiver... 2.15 Amperes
Converter... 3.0 Amperes

Plate Power Consumption... 35 M. A.
Undistorted Output... 1.25 Watts
Intermediate Frequency... 175 K. C.
R. F. Line-up Frequency... 1400 K. C.
Oscillator Line-Up Frequency... 1400 Only

This six tube automobile receiver gives excellent performance in respect to sensitivity, selectivity and tone quality. When used with the converter unit, operation entirely from the car battery is obtained.

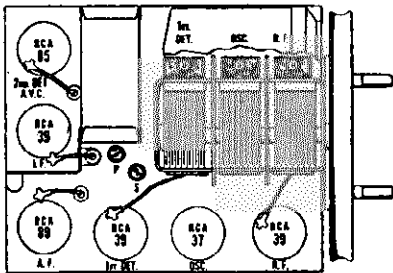


Figure A—Location of Radiotrons and Line-up Capacitors

Line-up Capacitor Adjustments

The receiver must be removed from its metal case to permit correct adjustment of the line-up capacitors. After being removed, a grounded metal plate must be provided for the receiver to rest upon, otherwise the adjustments will be found to be incorrect when the assembly is returned to its metal case. After removal from its case and placing upon the metal plate, proceed as follows:

I. F. Line-up Capacitor Adjustment—The I. F. Amplifier uses two transformers, one being of the untuned variety and one having each of its windings tuned by means of two adjustable capacitors. Figure A shows the location of these capacitors.

- (a) Procure a modulated oscillator giving a signal at 175 K. C. and having its output adjustable. A non-metallic screwdriver such as Stock No. 7065 is necessary together with an output meter.
- (b) Remove the receiver from its case, place it in operation and connect the output of the oscillator between the control grid and ground of the first detector. Remove the oscillator tube and connect the output meter—preferably a thermo-galvanometer—across the voice

coil of the loudspeaker. Then with the volume control at maximum, reduce the oscillator output until a small indication is obtained. Unless this is done, the action of the A. V. C. will make it impossible to obtain correct adjustments.

- (c) Adjust the secondary and then the primary of the I. F. transformer until a maximum deflection is obtained in the output meter. This is the correct adjustment.

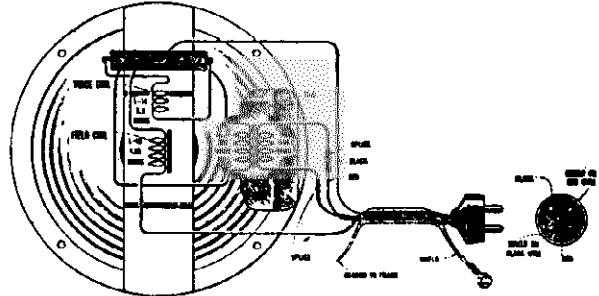


Figure B—Loudspeaker Wiring Diagram

R. F. Line-up Capacitor Adjustment—The R. F., 1st detector and oscillator stages are aligned at 1400 K. C. A socket wrench and an output meter are necessary for correctly making these adjustments.

- (a) Remove the receiver from its metal case and place on a grounded metal plate. Connect the tuning control and place in operation. Connect the output of the oscillator between antenna and ground. Connect the output meter across the voice coil of the loudspeaker.
- (b) Place the oscillator in operation at 1400 K. C. and adjust its output so that a small deflection is obtained when the receiver volume control is at maximum and the dial set at 1400. Then adjust the three line-up capacitors until a maximum deflection is obtained. This is done by means of a socket wrench.

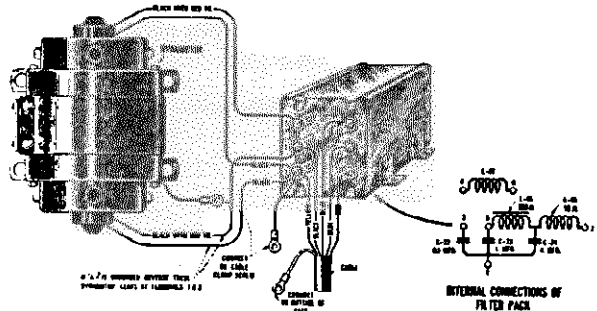


Figure C—Plate Supply Unit Wiring

RADIOTRON SOCKET VOLTAGES

Radiotron No.	Cathode or Filament to Control Grid Volts	Cathode or Filament to Screen Grid Volts	Cathode or Filament to Plate Volts	Plate Current M. A.	Filament or Heater Volts
1. R. F. RCA-39	0.9	71	177	4.5	5.2
2. 1st Det. RCA-39	6.0	67	172	1.35	5.2
3. Osc. RCA-37	—	—	72	5.5	5.2
4. I. F. RCA-39	0.9	71	177	4.5	5.2
5. 2nd Det. and A.V.C. RCA-85	—	—	175	4.5	5.2
6. P.W.R. RCA-89	18	178	160	18.0	5.2

Voltages are those at which Radiotrons are operating and with no signal impressed on input

OTHER IMPORTANT VOLTAGES

Battery Voltage... 6.0 Volts
Input to Dynamotor... 5.75 Volts
Battery Drain... 5 Amperes
Output from Dynamotor... 178 Vc at 34.5 M.A.
Loudspeaker Field Drain... 1.35 Amperes

RCA-VICTOR CO., INC.

MODEL M-32
Chassis Wiring

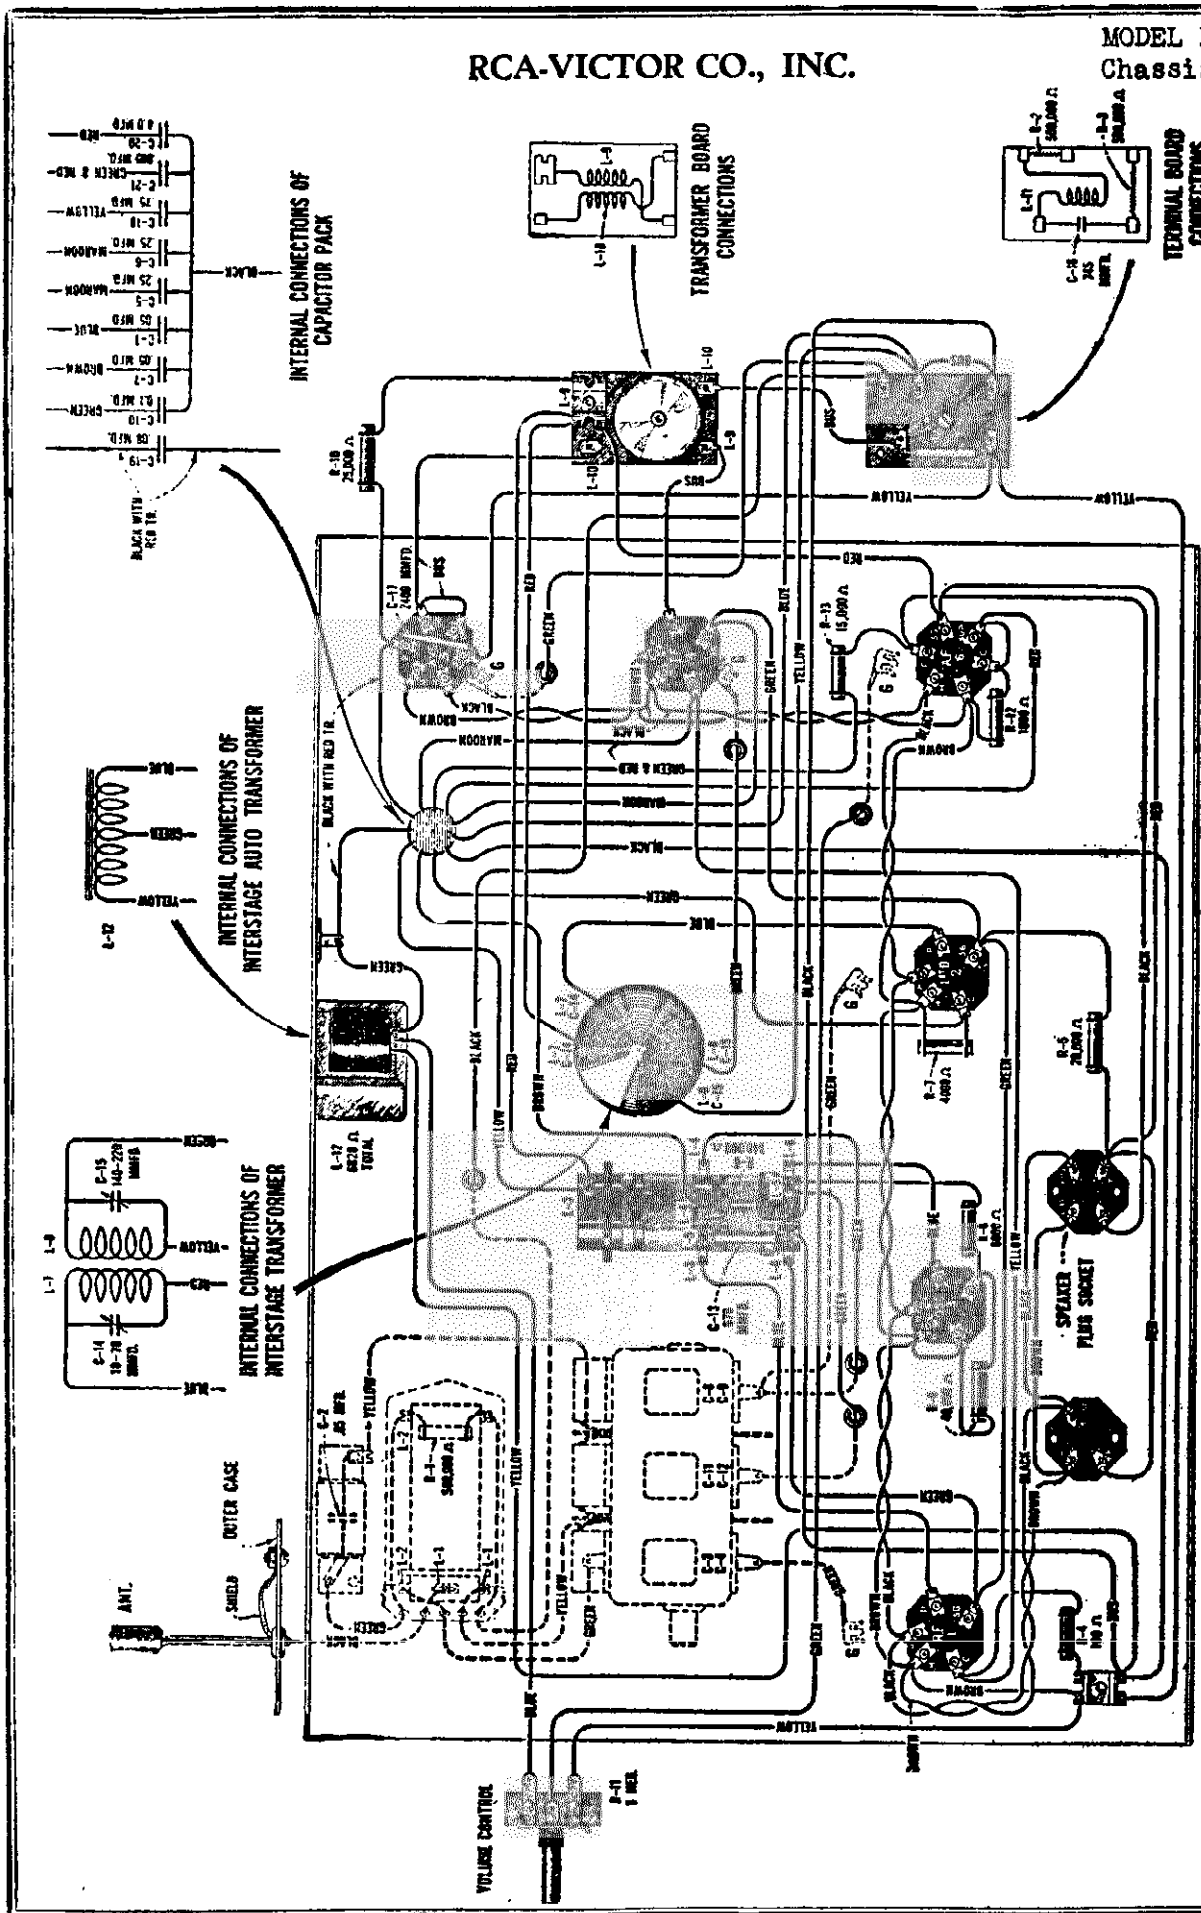


Figure E—Receiver Wiring Diagram

RCA-VICTOR CO., INC.

MODEL M-32
Parts List

REPLACEMENT PARTS


(Replacement Parts May be Purchased from Authorized Dealers and Distributors Only)

Stock No.	DESCRIPTION	List Price	Stock No.	DESCRIPTION	List Price
RECEIVER ASSEMBLIES			ANTENNA ASSEMBLY		
2734	Capacitor—745 mmfd.—Package of 5.....	\$2.20	3465	Cable—Antenna lead-in shielded cable.....	\$0.35
2747	Contact cap—Package of 5.....	.50	3466	Connector—Antenna lead-in connector.....	.60
2749	Capacitor—2,400 mmfd.....	1.50	3491	Washer—Rubber insulating washer—Used with insulator No. 6131—Package of 4....	.25
2816	Resistor—1,000 ohm—Carbon type— $\frac{1}{2}$ watt—Package of 5.....	2.50	6129	Staple—Insulated staple—Package of 100...	.75
3264	Resistor—25,000 ohms—Carbon type— $\frac{1}{2}$ watt—Package of 5.....	2.00	6130	Screw and nut—U bracket set screw— $\frac{1}{4}$ — 16 x 1—Complete with lock nut—Pkg. of 10.	.50
3442	Resistor—100 ohms—Carbon type— $\frac{1}{4}$ watt —Package of 5.....	1.00	6131	Insulator—Insulator bushing for No. 7420— Package of 10.....	.70
3443	Resistor—140 ohms—Carbon type— $\frac{1}{4}$ watt —Package of 5.....	1.00	6381	Cable—Shielded antenna cable—For use with antenna plate.....	2.94
3447	Coil—Automatic volume control coupling coil.	.66	7419	Bracket—U bracket for mounting antenna plates—Package of 2.....	1.60
3448	Cord—3 gang tuning capacitor drive cord...	.50	7420	Stud—Antenna plate stud— $\frac{1}{4}$ —16 x 8"— Complete with 5 mounting nuts—Pkg. of 5.	1.90
3454	Scale—Dial Scale.....	.54	8819	Plate—Single antenna plate.....	1.75
6114	Resistor—20,000 ohms—Carbon type—1 watt—Package of 5.....	2.00	MISCELLANEOUS PARTS		
6143	Resistor—40,000 ohms—Carbon type— $\frac{1}{4}$ watt—Package of 5.....	2.00	6148	Fuse—10 amperes—Package of 5.....	.50
6186	Resistor—500,000 ohms—Carbon type— $\frac{1}{4}$ watt—Package of 5.....	2.00	6151	Suppressor—Spark plug suppressor.....	.65
6192	Spring—3 gang tuning capacitor drive cord tension spring—Package of 10.....	.50	6152	Suppressor—Distributor suppressor.....	.65
6241	Resistor—140,000 ohms—Carbon type— $\frac{1}{4}$ watt—Package of 5.....	2.00	6169	Felt—Felt strip for steering column—Pk. of 10.	.50
6243	Resistor—6,000 ohms—Carbon type— $\frac{1}{4}$ watt—Package of 5.....	2.00	7065	Screwdriver—Non metallic Screwdriver— For line-up adjustments.....	1.10
6250	Resistor—4,000 ohms—Carbon type— $\frac{1}{2}$ watt—Package of 5.....	2.00	7429	Capacitor—0.625 mfd. capacitor in metal casing with mounting bracket.....	2.20
6300	Socket—4 contact Radiotron socket.....	.55	7553	Cable—Inter-connecting cable complete with male section of connector plug—For eliminator operation.....	2.66
6317	Capacitor—0.05 mfd. capacitor.....	.70	7561	Cable—Inter-connecting cable complete with male section of connector plug—For battery operation.....	2.12
6320	Capacitor—670 mmfd.—Oscillator series ca- pacitor—Package of 5.....	2.50	REPRODUCER ASSEMBLIES		
6358	Socket—3 contact socket.....	.38	6182	Terminal board—Reproducer terminal board with 3 terminals—Package of 5.....	.50
6359	Shield—Radiotron tube shield.....	.36	6364	Transformer—Output transformer.....	2.00
6360	Transformer—First intermediate frequency transformer.....	2.14	8702	Ring—Cone retaining ring.....	.80
6361	Transformer—Second intermediate fre- quency transformer.....	2.28	8961	Coil assembly—Comprising field coil, magnet and cone support.....	3.34
6362	Shaft—Tuning capacitor drive shaft with two "C" washers.....	.40	8962	Cone—Reproducer cone.....	1.12
6363	Volume control—Complete with mounting nut.	1.38	8963	Bracket—Reproducer mounting bracket complete with washer and nuts.....	.98
6365	Coil—Detector and oscillator coil.....	2.32	8964	Housing—Reproducer housing.....	2.08
6366	Coil—R. F. coil assembly.....	1.60	8965	Screen—Dust screen.....	.40
7484	Socket—UY type Radiotron socket.....	.65	BATTERY BOX ASSEMBLY		
7485	Socket—Radiotron 6 contact socket.....	.70	2968	Receptacle—Four prong receptacle complete.	.50
7545	Transformer—Interstage auto transformer...	2.48	6122	Clamp—Cable clamp—Package of 15.....	.50
7546	Capacitor pack—Comprising one 0.08 mfd., one 0.1 mfd., two 0.05 mfd., two 0.25 mfd., one 0.75 mfd., one 0.005 mfd., and one 4.0 mfd. capacitors in metal container.....	3.58	6123	Plug—Four prong male plug.....	.50
7547	Drum—For 3 gang tuning capacitor.....	.70	6124	Cap—Plug cover rubber cap for #6123—Pk. of 5.	1.50
7548	Capacitor—3 gang variable tuning capacitor assembly.....	3.50	6125	Fuse— $\frac{1}{4}$ ampere—Package of 5.....	.50
CONTROL BOX ASSEMBLIES			6126	Clip—Fuse clip—Package of 12.....	.50
3444	Socket—Dial lamp socket.....	.38	6127	Bolt—Carriage bolt for mounting top of box to car— $\frac{1}{4}$ —18 x $1\frac{1}{4}$ "—Complete with lock nut—Package of 5.....	.50
3445	Shaft—Volume control shaft with "C" washer.	.48	7418	Bolt—Hanger bolt $\frac{1}{4}$ —18 x $9\frac{1}{2}$ "—Complete with two lock nuts—Package of 5.....	.50
3446	Shaft—Station selector shaft with "C" washer.	.38	8817	Box body assembly—Comprising bottom plate, 2 side plates, 2 bottom strips and receptacle—Assembled.....	3.45
3454	Scale—Dial scale.....	.54	8818	Box cover assembly—Comprising cover plate, 2 strips and 2 rubber strips—Assembled...	1.70
6158	Nut—Knurled nut for lock switch—Pkg. of 10.	.50	8820	Plate and strip assembly—Cardboard plate and strip assembly comprising air strips and one plate—Package of 5 sets.....	.75
G5021	Knob—Station selector knob or volume con- trol knob—Package of 5.....	1.50	"B" ELIMINATOR ASSEMBLIES		
G5022	Label—Metal trade mark label—Pkg. of 5.	.75	3473	Brushes—One set of 2—For low voltage end of dynamotor.....	1.04
6164	Key—For lock switch—Package of 10.....	.50	3474	Brushes—One set of 2—For high voltage end of dynamotor.....	.82
6357	Switch—Lock switch complete.....	1.46	7554	Filter pack—Comprising one 0.5 mfd., two 4.0 mfd. capacitors, one reactor and two choke coils.....	4.87
7543	Shaft—Volume control or station selector flexible shaft—Approximately 39" long..	1.92	7555	Dynamotor complete.....	23.52
7562	Shaft—Volume control or station selector flexible shaft—Approximately 51" long..	1.62			
7563	Shaft—Flexible shaft—Volume control or station selector shaft—Approx. 27" long...	1.94			
G7842	Cover—Control box cover assembly compris- ing cover, cover mounting screws, mounting clamp and clamp mounting screws.....	.76			

MODEL Radiola 48
Resistance Data

R. C. A. VICTOR CO., INC.

Between 1 rf P- 2 rf P
2 rf P- 3 rf P
D P- Output P

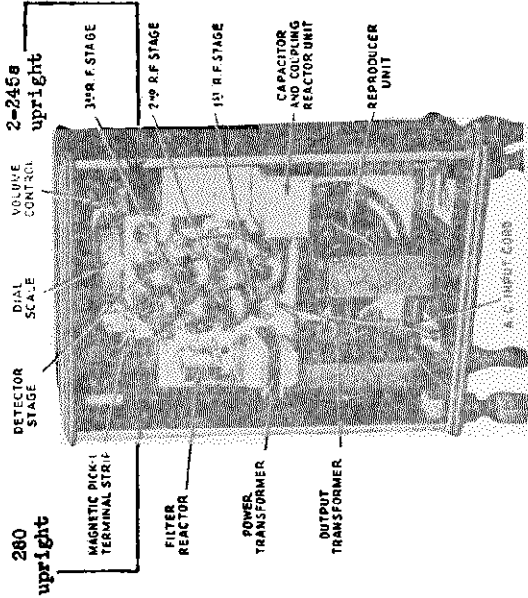

RADIO TUBE SOURCE VOLTAGES -- 120-VOLT LINE

All tubes out of sockets and AC plug removed from power supply line.
Volume Control maximum unless otherwise stated.

From Chassis To

From Chassis To	Correct	Incorrect
Aerial (V.C. Min)	50,000 ohms	
Aerial (V.C. Max)	30 ohms	
1 R-F Control Grid	3 ohms	TC-Cg-Y
1 R-F Heater	730 ohms	BC-D H-Y
1 R-F Cathode	120 ohms	BC- 1 rf K-Y
		BC- 3 rf K-Y
1 R-F Screen Grid (V.C.Min)	15,950 ohms	BC- 1 rf SG-1 rf K
1 R-F Plate	15,917 ohms	BC- 1 rf P- 1 rf K
		BC- 3 rf P- 3 rf K
		FC-Y
2 R-F Control Grid	3 ohms	TC-Cg-Y
2 R-F Cathode	120 ohms	See Ir-F Cathode
2 R-F Screen Grid	16,950 ohms	BC- 1 rf SG- 1 rf K
		BC- 3 rf SG- 3 rf K
2 R-F Plate	15,917 ohms	See 1 R-F Plate
3 R-F Control Grid	3 ohms	TC-Cg-Y
3 R-F Cathode	170 ohms	See 1 R-F Cathode
		Rf ohk- 3 rf K
3 R-F Screen Grid	16,975 ohms	See 2 rf SG.
3 R-F Plate	15,892 ohms	See 1 R-F Plate
Detector Control Grid	3 ohms	TC-Cg-Y
Detector Cathode	17,000 ohms	BC- D K-Y
Detector Screen Grid	210,627 ohms	BC- 2 R-F Screen Grid
		See 2 R-F Screen Grid
Detector Plate	24,707 ohms	FC-Y (1. mfd)
		BC-D P- D K (See OutputP.)
Detector Plate to '80 Fil.	7,630 ohms	FC-Y (1.5 mfd)
Output Tube Control Grid	430,000 ohms	BLC- Af ohk
Output Tube Control Grid	430,000 ohms	BLC- Af ohk
Output Tube Cg to Cg	860,000 ohms	
Output Tube Plate (2 tubes)	17,492 ohms	FC-Y (2. mfd)
		FC-Y (.1 mfd)
Output Tube Plate to Plate	930 ohms	EC- Plate to Plate
'80 Plate	1,895 ohms	
'80 Plate to Plate	550 ohms	
Field Coil	1,350 ohms	
Output Transformer Secondary	.2 ohm	Disconnect voice coil
Voice coil only	2.5 ohms	

Tube No.	Cathode to Heater Volts D.C.	Grid- Screen Grid Volts D.C.	Cathode or Filament to Plate Volts D.C.	Plate Current M. A.	Heater or Filament Volts
RF	-40	+85	160	3.0	2.3
RF	-36	+95	155	3.5	2.3
RF	-36	+75	155	3.5	2.3
DET	-28	+55	225	0.5	2.3
AF	--	* -1.0	200	25.0	2.3
AF	--	* -1.0	200	25.0	2.3
VOLUME CONTROL at MAXIMUM					
RF	-40	+6	200	0	2.3
RF	-40	+6	200	0	2.3
RF	-40	+5	200	0	2.3
DET	-28	+75	230	-6	2.5
AF	--	* -1.0	205	25.0	2.3
AF	--	* -1.0	205	25.0	2.3
VOLUME CONTROL at MINIMUM					

MODEL R-50, R-55
Assembly Wiring
Voltage

R. C. A. VICTOR CO., INC.

SERVICE DATA

Information pertaining to R. F. Oscillator and I. F. adjustments together with general service data for this type receiver may be obtained from the Service Notes already issued on the RCA Radiola 80.


The beat frequency—175 K. C.—appears in the plate circuit of the first detector which is accurately tuned to 175 K. C.: The tube used as a first detector is Radiotron UY-224.

R. F. OSCILLATOR AND I. F. ADJUSTMENTS


A reference to the RCA Radiola 80 Notes will give the details for making correct R. F., I. F. and Oscillator adjustments. However, due to the use of an automatic volume control tube, its action will defeat the use of an output meter. To overcome this, a "dummy" Radiotron UY-227 (one that has one heater prong removed but is otherwise O. K.) should be substituted for the tube in the automatic volume control socket. Do not make any adjustments with this tube removed from the socket. While apparently everything functions in the normal manner, the lack of tube capacity in the circuits will cause an incorrect alignment to be made.

In the RCA Victor Radiola R-50 and R-55 the I. F. transformers are adjusted for maximum output and no attempt at band pass tuning should be made when these adjustments are made.

It will be noted on the early Models of R-50 and R-55 that a small 9 mmfd. capacitor is inserted in series with the oscillator trimming capacitor. This capacitor is not used on later models that have a slightly different dial scale. When replacing a dial scale it may therefore be necessary to short this capacitor. A failure in the capacitor may be remedied either by replacing the capacitor or the dial scale.

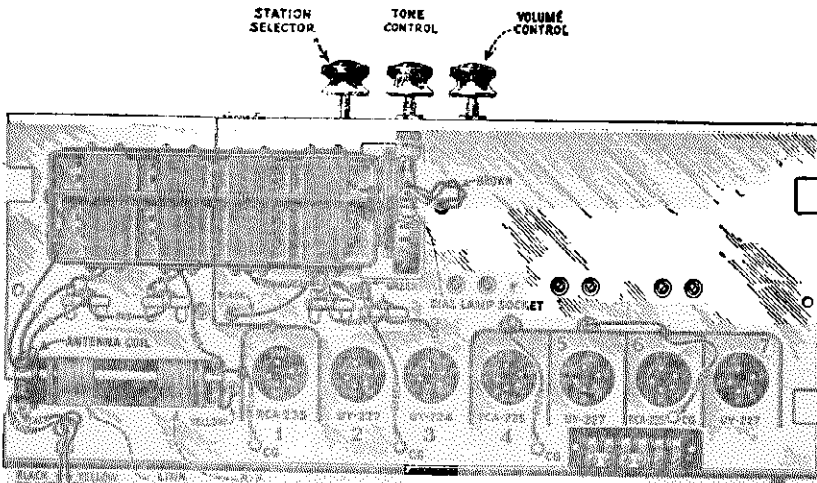

RECEIVER ASSEMBLY

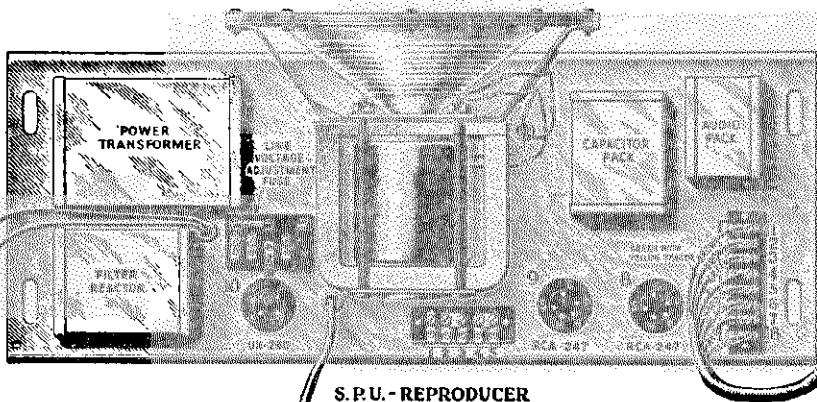

S.P.U. - REPRODUCER ASSEMBLY

OPERATING SWITCH

A.C. INPUT PLUG

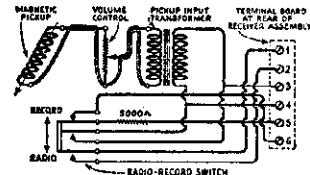


Figure 3—Magnetic Pickup connections


Note: Place the Radio-Record switch and input transformer in the receiver cabinet. Try connecting a wire from receiver terminal No. 6 to input transformer frame or braided shield to pickup and use connection that gives minimum hum.



VOLTAGES ARE THE SAME AT EITHER POSITION OF THE VOLUME CONTROL
 110 VOLT LINE

Radiotron No.	Heater to Cathode Volts	Cathode or Filament or Control Grid Volts	Cathode or Filament to Screen Grid Volts	Cathode or Filament to Plate Volts	Plate Current M. A.	Heater Volts
1. R.F.	2.0	*0.2	60	230	3.5	2.5
2. Osc.	5.0	0	—	50	4.0	2.5
3. 1st Det.	4.0	3.5	60	230	0.5	2.5
4. 1st I.F.	2.0	*0.2	60	230	3.5	2.5
5. A.V.C.	0	0	—	30	0.1	2.5
6. 2nd I.F.	2.0	3.5	60	230	2.5	2.5
7. 2nd Det.	20.0	*8.0	—	210	0.5	2.5
8. Pwr.	—	*10.0	250	235	25.0	2.5
9. Pwr.	—	*10.0	250	235	25.0	2.5

*These readings are not correct due to the resistance in the circuits

Models R-50, R-55, RAE-59 (1931)

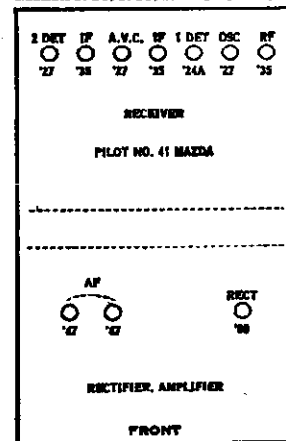

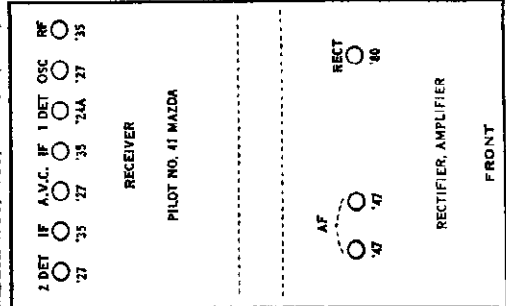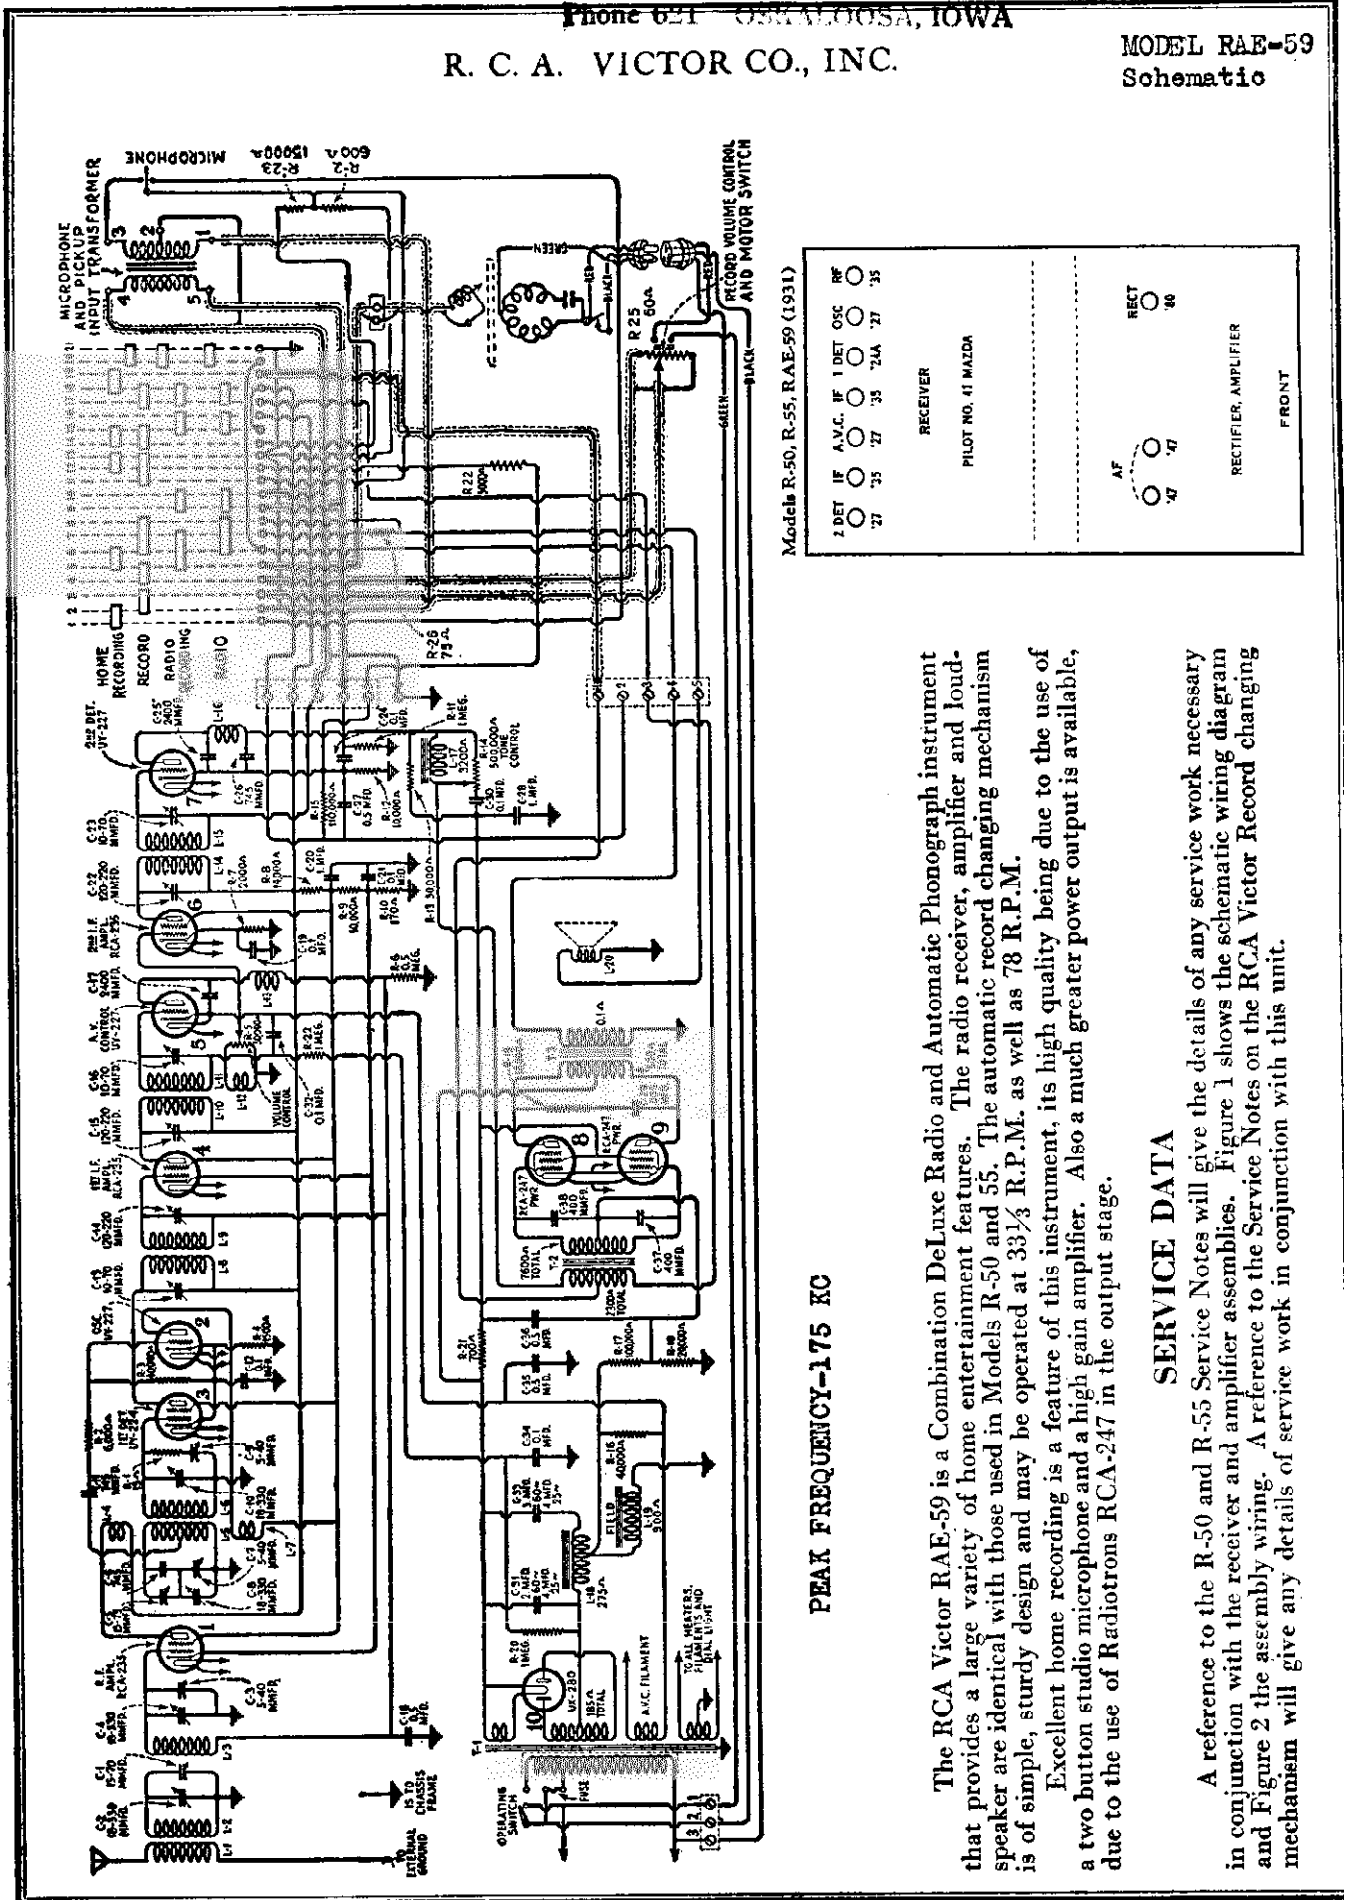

PEAK FREQUENCY-175 KC

The RCA Victor RAE-59 is a Combination DeLuxe Radio and Automatic Phonograph instrument that provides a large variety of home entertainment features. The radio receiver, amplifier and loud-speaker are identical with those used in Models R-50 and 55. The automatic record changing mechanism is of simple, sturdy design and may be operated at 33 1/3 R.P.M. as well as 78 R.P.M.


Excellent home recording is a feature of this instrument, its high quality being due to the use of a two button studio microphone and a high gain amplifier. Also a much greater power output is available, due to the use of Radiotrons RCA-247 in the output stage.

SERVICE DATA

A reference to the R-50 and R-55 Service Notes will give the details of any service work necessary in conjunction with the receiver and amplifier assemblies. Figure 1 shows the schematic wiring diagram and Figure 2 the assembly wiring. A reference to the Service Notes on the RCA Victor Record changing mechanism will give any details of service work in conjunction with this unit.

MODEL RAE-59
Assembly Wiring

R. C. A. VICTOR CO., INC.

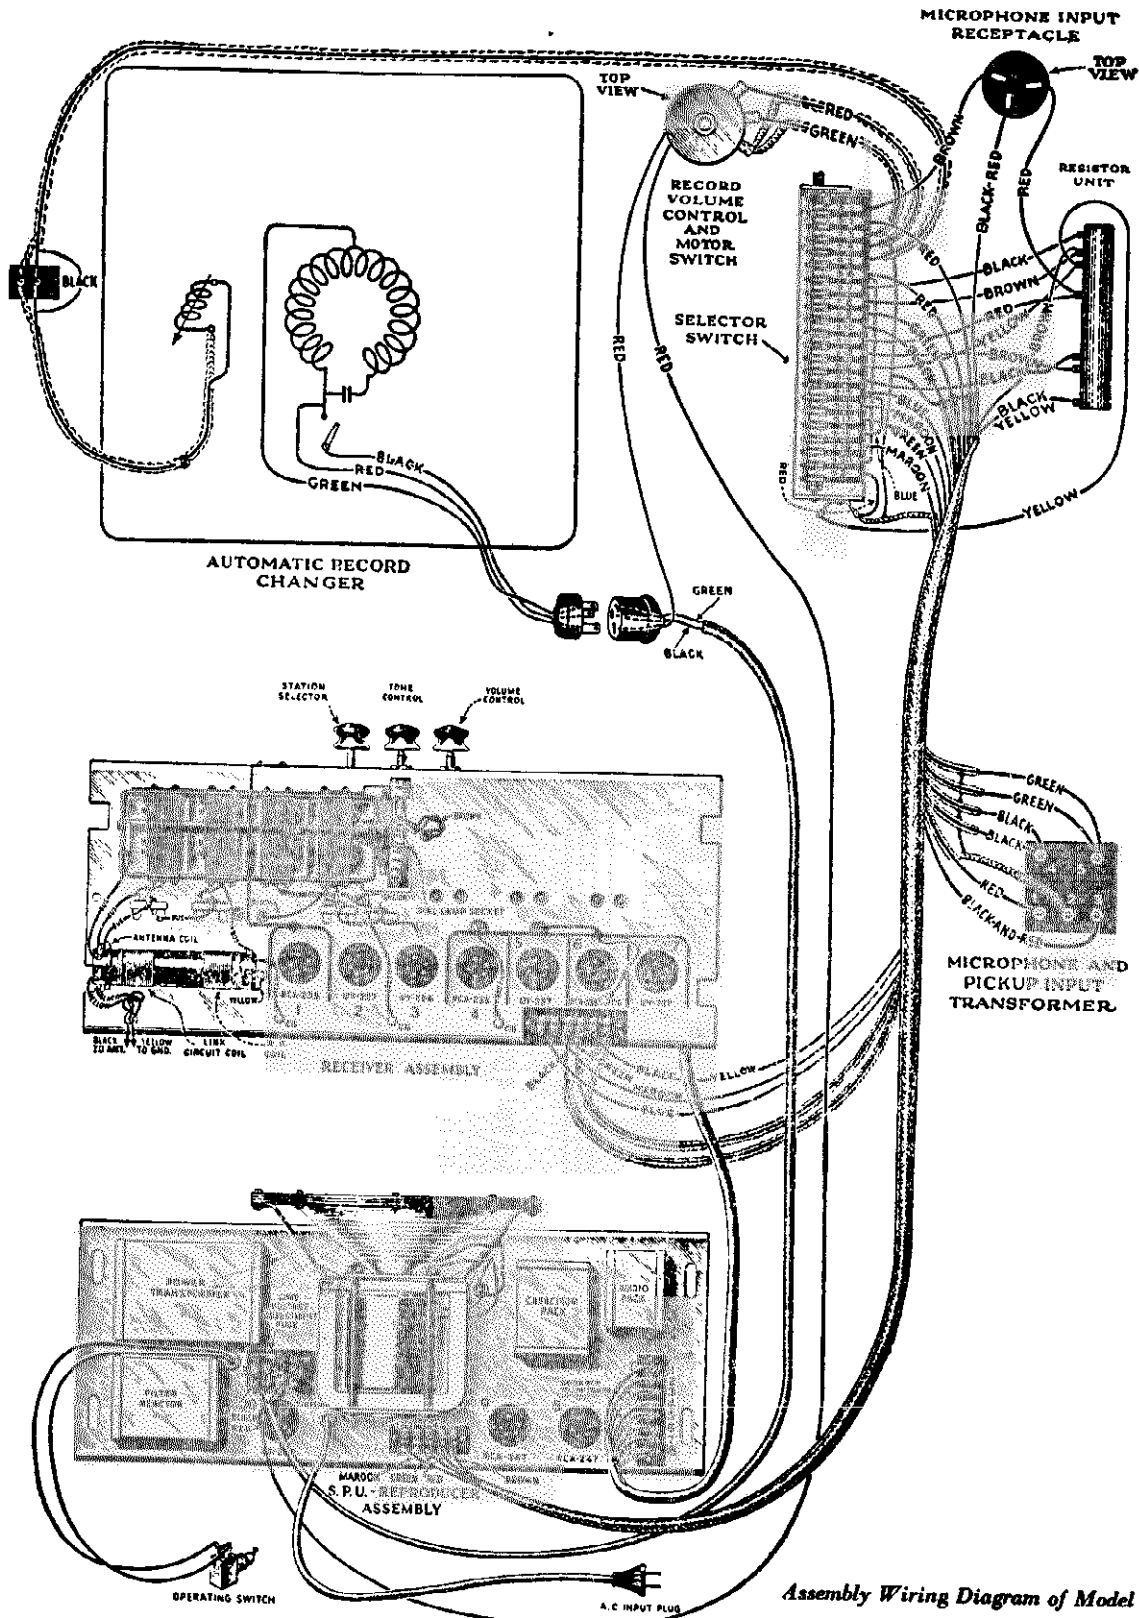



Assembly Wiring Diagram of Model RAE-59

R. C. A. VICTOR CO., INC.

MODEL RE-73
Assembly Wiring

RCA Victor Radiola Electrola RE-73 is an eight tube screen grid tuned R. F. type radio receiver combined with a standard Electrola mechanism. The receiver assembly and amplifier of this model is similar to that used in the 1930 Victor Receivers, Models R-35, R-39, and RE-57. The loudspeaker used is similar to that employed in the RCA Victor Superette R-7.

A reference to the RCA Radiola 86 Service Notes will give the details of any service work necessary in conjunction with the motor board assembly.

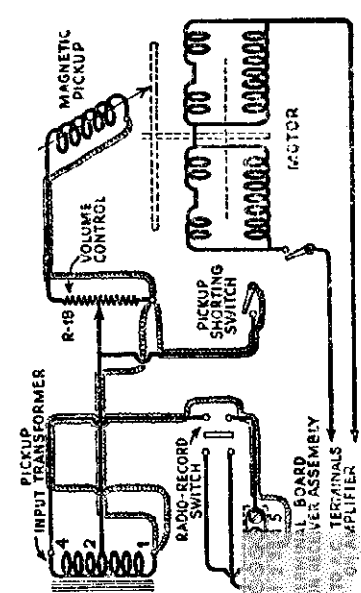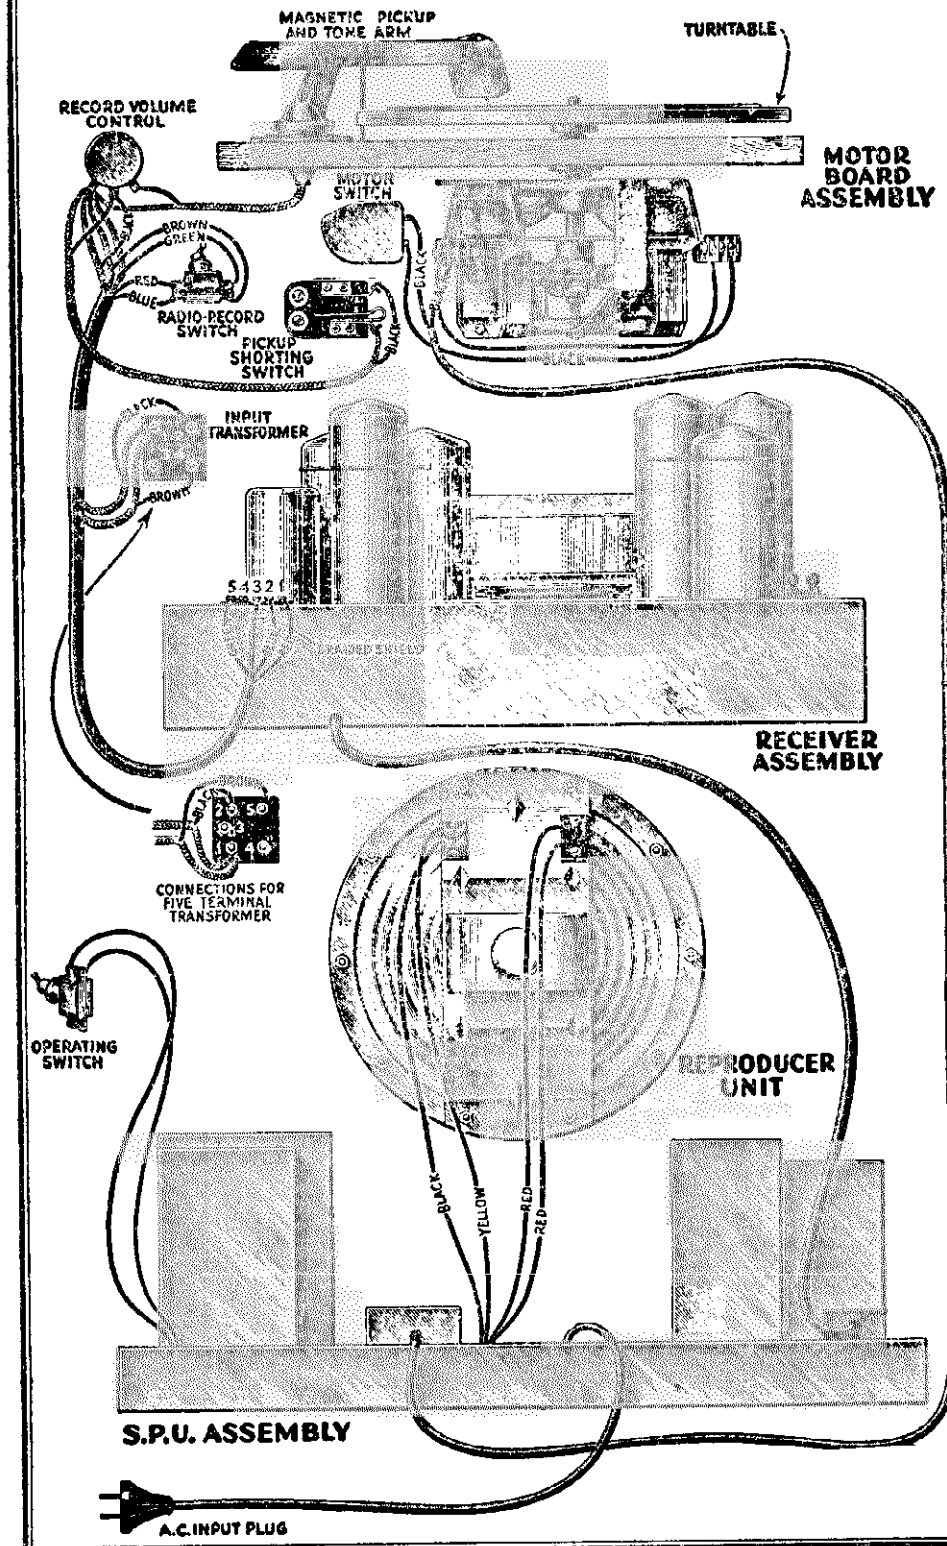

Schematic Diagram of Motor Board

MODEL RE-73
Parts List


R. C. A. VICTOR CO., INC.

REPLACEMENT PARTS


Stock No.	DESCRIPTION	List Price	Stock No.	DESCRIPTION	List Price
RECEIVER ASSEMBLY—Continued					
10838	Resistor—9000 ohms—Carbon type—Package of 5	\$2.50	3082	Screw assembly—Pickup pole piece mounting screw, nut, washer—Package of 10 sets	.50
10839	Resistor—130 ohms—Carbon type—Package of 5	2.50	3101	Switch—Record-radio toggle switch with mounting nuts and escutcheon plate—Located on top of motor board	1.25
10840	Resistor—2800 ohms—Carbon type—Package of 5	2.50	3102	Receptacle—Needle receptacle	.75
10841	Resistor—1½ megohm—Carbon type—Package of 5	2.50	3158	Screw assembly—Motor mounting screw assembly—Comprising 3 screws, 3 bushings, 3 metal washers and 12 cushion washers	.80
10842	Capacitor—10 mfd. condenser—Package of 2	.60	3162	Regulator—Speed regulator with mounting screws—Comprising cam and shaft, bushing and bracket	.80
10843	Shield—Radiotron shield body with cap—Package of 1 set	.90	3163	Escutcheon—Speed regulator escutcheon with mounting screw—Package of 5	2.00
10844	Shield—Coil shield body with cap—Package of 1 set	.90	3164	Control—Record volume control with mounting washer and nut—Lens knob	1.70
10851	Panel—Radio chassis escutcheon panel—Less dial	3.00	3167	Magnet—Pickup magnet	2.60
10920	Cable—Wiring cable—Used to connect receiver to amplifier	2.75	3168	Coil—Pickup coil	.85
10948	Spring—Tuning condenser spring—Package of 5	.50	3169	Shoe—Pickup pole shoe R. H.	1.45
10949	Link—Tuning condenser link—Bakelite—Package of 5	.60	3170	Shoe—Pickup pole shoe L. H.	1.45
10969	Roller—Tuning condenser roller and shaft with eyelet screw and nut—Package of 5	.50	3249	Sleeve—Spindle sleeve complete with set screw	.50
S. P. U.					
2721	Socket—UX-245 Radiotron double socket with insulator and rivets	1.00	6067	Lever—Speed control regulator lever for motor—Comprising lever, spring, mounting bolt, nut and washer	1.60
2722	Resistor—55 ohm—Mid-tapped—Wire wound—Filament resistor	1.00	6069	Coil assembly—Located nearest governor—105-125 volts, 60 cycles—Comprising 2 current coils, 1 voltage coil, laminated core and bracket, terminal board, nuts, bolts, screws and washers—Completely assembled ready for mounting	8.40
2723	Switch—Operating switch—Toggle—With mounting nuts and washer—Package of 5	3.00	6070	Coil assembly—Located farthest from governor—105-125 volts, 60 cycles—Comprising 2 current coils, 1 voltage coil, laminated core, end bracket, terminal board, nut, bolts, screws and washers—Completely assembled ready for mounting	8.40
2757	Strip—Terminal strip—Two contact	.50	RECEIVER ASSEMBLY		
2880	Resistor—70,000 ohms—Carbon type—Package of 5	3.00	2012	Condenser—1200 MMFD. condenser	\$0.55
2963	Resistor—8,000 ohms—Carbon type—Package of 5	2.50	2546	Resistor—1 megohm—Carbon type resistor—Package of 5	3.00
7053	Resistor—715 ohms—Wire wound	.70	2746	Socket—Dial lamp socket	.50
7054	Cord—Amplifier power cord with male connector plug	1.00	2747	Cap—Contact cap—Package of 5	.50
7075	Socket—UX-280 Radiotron socket	1.80	2748	Posts—Twin binding posts with lock washers and nut—Antenna and ground	.50
7224	Cover—Fuse cover with bushing and insulator	.50	2804	Knob—Volume or station selector knob—Package of 5	2.50
10845	Transformer—A. F. transformer	14.00	2966	Resistor—28,000 ohm—Carbon type—Package of 5	2.50
10907	Fuse—3 amperes—Package of 5	1.00	2970	Resistor—¼ megohm—Carbon type—Package of 5	2.50
10908	Cover—Terminal strip cover—Package of 2	.50	7124	Socket—UY Radiotron socket	.80
10909	Condenser—Condenser bank—60 cycles	16.00	7303	Dial—Station selector dial scale—Package of 5	3.00
10910	Capacitor—Extra filter capacitor for 25 cycles	5.00	10426	Screw—Cam wheel adjusting screw—Package of 20	.50
10911	Reactor—Filter reactor	4.50	10805	Shield—Round condenser shield	.75
10912	Strip—Terminal strip—8 contacts	.70	10806	Shield—Variable condenser shield	1.50
10913	Cable—Amplifier wiring cable	2.00	10807	Shield—White enamel lamp shield	.60
10915	Transformer—Power transformer—105-125 volts—25-40 cycles	16.00	10808	Indicator—Dial indicator—Package of 5	.50
10917	Transformer—Power transformer—105-125 volts—50-60 cycles	12.00	10809	Plate—Cover plate with screw—Package of 5	.50
PHONOGRAPH PARTS					
2614	Switch—Automatic brake contact switch	1.40	10810	Roller—Cam roller—Package of 5	.50
2615	Springs—Brake springs—Set of 4 springs—Package of 2 sets	.50	10811	Condenser—Variable condenser	3.50
2620	Cushions—Pickup rubber cushion—Comprising 1 damper and 2 pivot cushions—Package of 5 sets	1.25	10812	Shaft—Cam roller shaft with washer and nuts—Package of 2	.50
2622	Coil assembly—Located nearest governor—105-125 volts, 25 cycles—Comprising 2 current coils, 1 voltage coil, laminated core, end bracket, terminal board, nuts, bolts, screws and washers—Completely assembled ready for mounting	9.00	10813	Control—Tone control with plate washers and nut	1.60
2623	Coil assembly—Located farthest from governor—105-125 volts, 25 cycles—Comprising 2 current coils, 1 voltage coil, laminated core and bracket, terminal board nuts, bolts, screws and washers—Completely assembled ready for mounting	9.00	10814	Shield—Filter coil and capacitor shield with washers and nuts—Package of 2	.60
2691	Governor—Comprising shaft with worm, brake disc, weights, springs and screws—Assembled	5.25	10815	Coil—Filter coil and capacitor with mounting screws, lock washers and nuts	\$1.50
2692	Bearings—Governor shaft bearings—One set of 2	1.35	10816	Coil—3rd R. F. coil	1.60
2693	Gear—Governor drive worm gear with set screw	1.35	10817	Coil—Link coil	1.50
2695	Bearings—Threaded thrust bearing with lock nut for end of turntable spindle	.50	10818	Condenser—Bank of two condensers—0.25 and 0.75 mfd.	1.80
2759	Box—Needle box with lid—Package of 2	.60	10819	Condenser—Bank of three condensers—Three 0.1 mfd.	1.80
2765	Screw—Pickup needle holding screw—Package of 10	.80	10820	Condenser—100 mmfd. condenser	.50
2766	Screw—Pickup cover mounting screw—Package of 10	.50	10821	Coil—Resistor board coil	.80
2767	Spring—Pickup magnet spring—Package of 10	.50	10822	Wheel—Cam wheel with spring washers, cup washer and pin	2.60
2768	Armature—Pickup armature	.50	10824	Strip—Terminal strip with insulation and rivet—Two contact	.50
2770	Plate—Pickup damper plate—Package of 5	.50	10825	Inductor—Stabilizing inductor with screw, lock washer and nut	2.20
2771	Screw—Pickup damper plate mounting screw—Package of 10	.50	10826	Control—Volume control with nut, washer and locking plate	2.50
2787	Switch—Pickup shorting switch	1.00	10828	Coil—Antenna coupling coil	1.50
2789	Cord—Motor cord—Connects motor coil and starting switch	.60	10829	Coil—1st R. F. coil	1.60
2826	Cable—Shielded cable from shorting switch to record volume control	.50	10830	Coil—2nd R. F. coil	1.60
2829	Knob—Motor board lifting knob and screw—Package of 2	\$0.50	10831	Strip—Terminal strip with link	.70
2858	Rest—Pickup rubber rest with mounting bracket—Package of 5	.50	10832	Socket—UX Radiotron single socket with insulator	.60
			10833	Strip—Terminal strip with insulation and rivets—Six contacts	.70
			10834	Clip—Tube socket clips—Package of 10	.50
			10835	Capacitor—.01 mfd.	.50
			10837	Capacitor—Bank of three 0.1 mfd. capacitors	.75

MODEL RE-73
Top Views

R. C. A. VICTOR CO., INC.

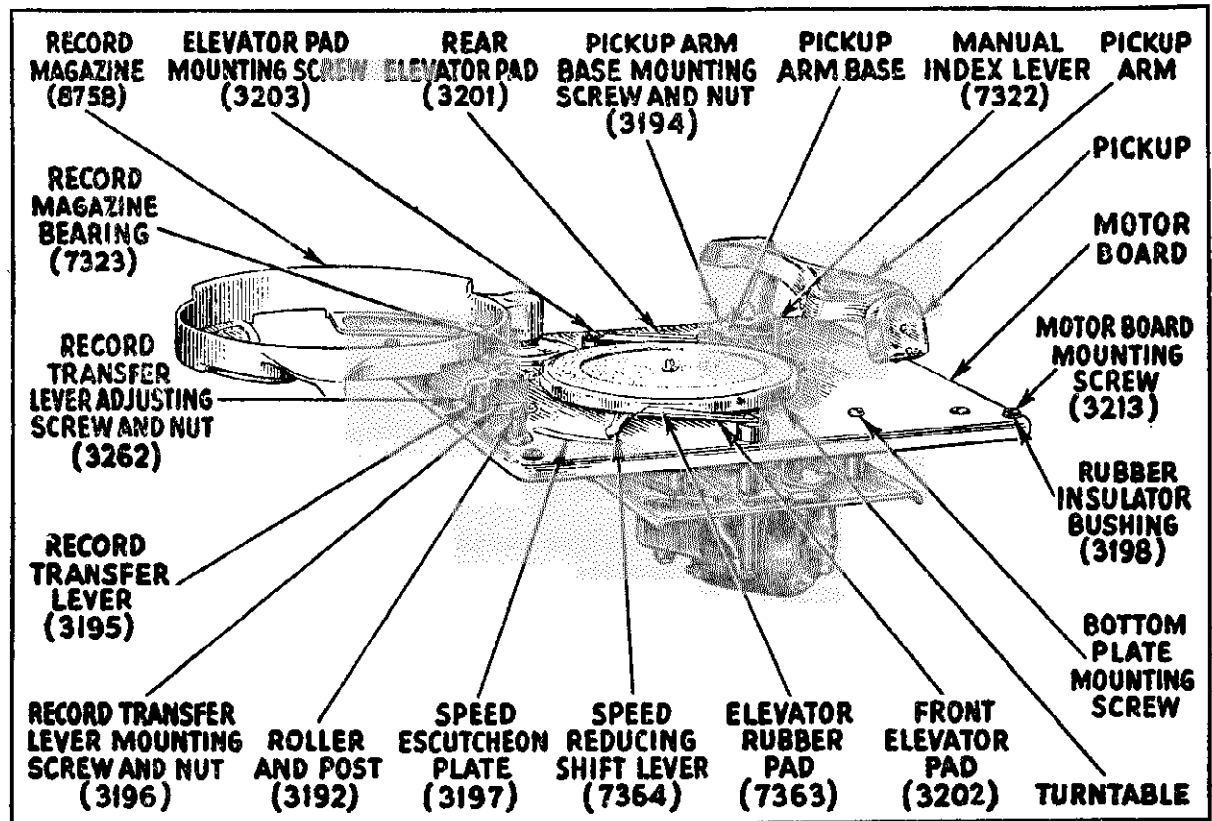

Top view of mechanism showing parts

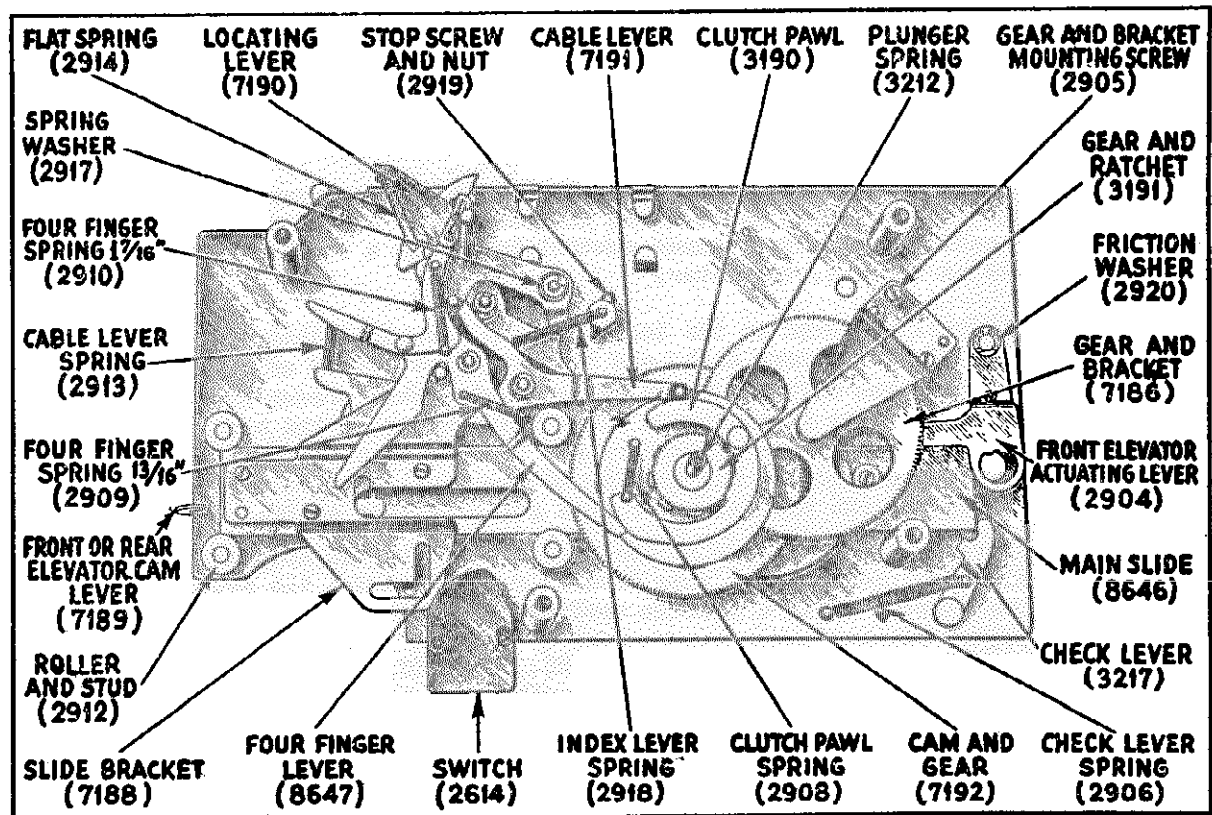

Top view of mechanism with plate removed

Re-aligning
Tuning Condensers

R. C. A. VICTOR CO., INC.

Under normal conditions, the occasion will seldom arise when it will be necessary to re-align the tuning condensers. Low sensitivity and selectivity and improper dial settings over certain sections of the dial for stations of known broadcast frequencies are indications that the tuning condensers are out of line.

NOTE: Improper dial settings should not be confused with improper location of selector scale.

The parts required for re-aligning consist of a modulated oscillator such as stock No.A-6004; a special aligning wrench, stock No.A-6085; and a 0-8 a-c. voltmeter.

The Victor oscillator is accurately calibrated at 550,710,1000,1300 and 1500 kilocycles. These aligning frequencies, which are the correct values used in the factory, must be employed in all cases. If a standard wavemeter is not available for calibrating, the signals from a number of reliable broadcast stations, operating on known frequencies from 550 to 1500 KC, can be used by plotting a curve of oscillator dial settings against frequencies.

Proceed to re-align the tuning condensers in the following manner:

- a. Disconnect the link (on straight radio models) across the two terminals on the base of the amplifier, and connect one side of the 0-8 volt a-c. voltmeter to the terminal nearer the UX-245 Radiotrons. Connect the other side of the a-c. voltmeter to No.3 terminal (ground) on the amplifier terminal strip or clip to any clean metallic part of the amplifier base. The meter is thus connected in the speaker output circuit, but the voice coil is out of the circuit. Silent aligning can thus be accomplished.
- b. Connect the shielded leads from the oscillator terminals to the antenna and ground terminals of the radio set, making sure that the ground wire is still connected to the radio chassis.
- c. Remove the small metal plate in the center of the cam wheel by taking out the retaining screw.
- d. Place the radio set in operation with the volume control turned to maximum.
- e. Place the oscillator in operation at 550 KC. and move the tuning lever of the Victor Radio until the oscillator signal is heard. Adjust the oscillator output volume control to obtain a reading of 2 or 3 volts on the a-c. voltmeter.
- f. It will be noted on the inside of the cam wheel that there are five groups of five screws each, and that the first screw of each group is opposite a cam roller. Using the special socket wrench No.A-6085, adjust each of the first screws until the reading on the a-c. voltmeter is a maximum. As the condensers are brought into alignment, it may be necessary to decrease the setting of the oscillator volume control in order to prevent the voltmeter from going off the scale.
- g. Move the tuning lever of the Victor Radio to 710 KC. and set the oscillator dial at this same frequency. Now adjust the second screw of each group until a maximum reading is obtained on the voltmeter.
- h. Repeat this procedure for 1000 KC., 1300 KC., and 1500 KC. The alignment is now complete. The flexible cam strip around the outer edge of the cam wheel assures perfect alignment between the aligning frequencies mentioned.
- i. Remove all oscillator and meter connections, and reconnect the link (or wire in the case of combination models).

R. C. A. VICTOR CO. INC.

SERVICE NOTES

for

RCA Victor Automatic Record
Changing Mechanism

The RCA Victor Automatic Record Changing Mechanism is used in RCA Victor Models RAE-26, RAE-59 and RAE-79. Except for the finish of exposed parts, these units are identical. This mechanism is of simple, fool-proof design and will perform efficiently with a minimum of service requirements. Features of this mechanism are: continuous playing of one side of ten 10-inch records, operation at either 33 $\frac{1}{3}$ or 78 R.P.M. for playing standard or Program Transcription records manually or automatically, a special clutch to prevent jamming in case of failure of a part and a heavy duty motor operating at synchronous speed thereby eliminating any need for regulating devices. A general view of the mechanism is shown on the cover page. Figure 1 shows the schematic wiring diagram.

The Replacement Parts for this mechanism are listed in the Service Notes on each individual instrument. The identification nomenclature given on pages 10 and 11, will be found useful in identifying parts. Where parts are identical in all models the Stock Number of each part is given in addition to its name.

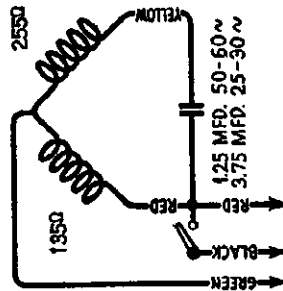


Figure 1—Schematic Diagram

INSTALLATION

After unpacking the instruments in which this mechanism is used, it is imperative that certain preliminary checks be made before they are placed in operation. These checks should be performed in the order given and any adjustments found necessary must be made.

- When installing the instrument it is advisable to see that all parts are properly lubricated without excess grease or oil on any parts. This is especially important in the speed reducing unit. A lack of oil in the spindle bearings or between the sprocket and the surface upon which it rests, may be the cause of a "wow" at slow speed. Also excessive grease on the gears or on the damper pads may cause this same condition. The motor should be lubricated with light oil once every six months. Oil holes are provided at each end of the motor. Once a year the turntable and speed reducing unit should be removed and all exposed gears thoroughly cleaned and lubricated with light grease. All bearings should be lubricated with oil. Be careful not to lose the spiral spring in the end of the spindle or the washers under the turntable and speed reducing unit.

- The motor board must be level. This should be checked both ways by means of a small spirit level. Placing the cabinet legs on the same surface will usually insure the motor board being level.

- A small spring is located in the center of the turntable spindle. Be sure that this is in position before placing the turntable on the spindle. After placing the turntable on the spindle make sure that the spindle nose may be easily depressed. If it is not, then remove the turntable and turn the spring upside down or replace it with a new spring.

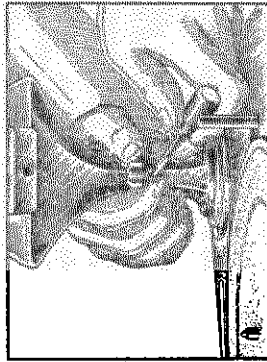


Figure 2—Adjusting height of tone arm

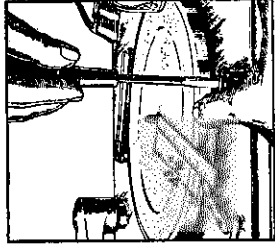


Figure 3—Adjusting elevator pad

- Examine the wire cable that is attached to the back of the tone arm. It should be seated on the small pulleys over which it passes.
- Place a Home Recording needle into the pickup as far as it will go. Then lower the pickup on the side of the turntable. The needle should extend from $\frac{1}{8}$ " to $\frac{1}{16}$ " below the top of the metal edge of the turntable. If it does not, an adjustment can be made by means of a screw located under the tone arm. Lifting the arm provides accessibility to the screw. See Figure 2.
- If when starting the automatic mechanism, the needle lowers onto the smooth outer rim of the record but fails to swing into the first groove, it may be caused by the following:
 - Cabinet not level. Check as indicated in Paragraph 1.
 - Weak tension in spring. A flat spring presses against the tone arm lever on the under side of the motor board. See Figure 17 Page 11. Bending it so as to increase its tension against the tone arm lever will cause the needle to swing into the first record groove. Be careful not to bend it too much as excessive tension will cause the needle to skip several grooves.

- After the instrument has completed one record changing operation, a ten inch record should extend about three-quarters way over each elevator pad. If this condition does not exist, an adjustment can be made by means of the screws that hold the pads in position. A pair of pliers heavily padded with cloth or other soft material should be used to hold the elevator shafts while loosening and tightening the screws. The distance from the closest part of either pad to the edge of the spindle is approximately $\frac{1}{16}$ ". Figure 3 shows the method of making this adjustment.

If any adjustments are necessary other than the foregoing, a reference to the Service Data section of this booklet should be made.

Remember That the Control Lever Can Be Changed from Automatic to Manual Only When the Mechanism is Not Changing Records

MODEL RE-73
Notes Part 2
R. C. A. VICTOR CO., INC.
SERVICE DATA

The following Service information will be found useful in making any adjustments or correction of any irregular operation that may be necessary. All the major adjustments are accessible from the rear of the cabinet. For the sake of clearness the illustrations in this text do not show the cabinet background.

No special tools required other than a small offset screw driver. (Stock No. 2930) A stand consisting of three Stock No. 77-99 will be found useful in supporting the mechanism should removal from the cabinet be required.

(1) SPEED VARIATIONS (WOW)

A variation in the speed of the turntable evidenced by distortion on long sustained notes when playing Program Transcription records may be caused by any of the following:

- (a) Improper operation. It is very important when changing the speed shift lever from 78 R.P.M. operation to 33 $\frac{1}{3}$ R.P.M. operation, to place the hand on the turntable and hold it until it is positively engaged by the driving mechanism.



Figure 4—Adjustment of damper pads

- (b) Lack of proper lubrication. It is important that excessive grease on the gear reducing mechanism be avoided and that sufficient oil is present between the ratchet and the surface upon which it rests. Also clean and oil the spindle bearing and wipe off any excess lubricant that may be on the damper pads or the drive gear upon which it rests.
- (c) Improper Adjustment of the Damper Pads. The damping pads with the necessary springs are provided to place a load on the 33 $\frac{1}{3}$ R.P.M. driving gear at all times while it is in operation. Placing such a load on the gear takes up any possible play and reduces the possibility of a "wow" during operation at the slower speed. Adjust these pads by slipping each spring to one side and bend them until they are $\frac{1}{16}$ " beyond the opposite surface upon which they rest. (See Figure 4).
- (d) Washers Not in Place. A metal washer is placed directly under the speed reducing mechanism and a leather washer directly over it, both washers being over the spindle. These washers must be in their proper position. Also if the leather washer has become hard it must be replaced.
- (e) In some cases, removing the speed reducing mechanism and turning it approximately 90° and then replacing it, may eliminate a "wow" caused by improper meshing of the gears.

(2) ADJUSTMENT OF MAGAZINE ROLLER

The magazine roller should be set in such a position that the plane of the roller is 90° to a line drawn from the center of the magazine bearing to the center of the roller. The height should be adjusted so that it will just touch the magazine when it is empty.

(3) FAILURE OF NEEDLE TO LOWER PROPERLY

Failure of the needle to lower onto the smooth outer rim of the 10-inch records when the instrument is playing automatically may be caused by:

- (a) Improper Tone Arm Setting. Loosen the set screws as shown in Figure 5. With the mechanism out of its cycle, press the locating lever at a point near the flat spring until the lever strikes the stop screw. Holding the locating lever, Figure 17, in this position, move the front portion of the trip lever, Figure 15, until the pin against which the flat spring presses, is making contact with the locating lever. Holding the two levers in this position, move the pickup arm until the needle is $\frac{1}{16}$ " from the first groove of a standard 10-inch record. Now retighten the two set screws shown in Figure 5.

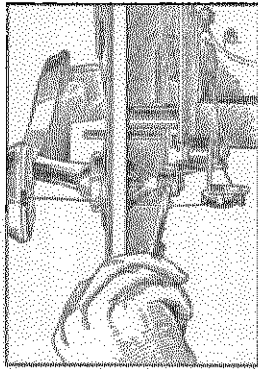


Figure 5—Adjusting position of tone arm

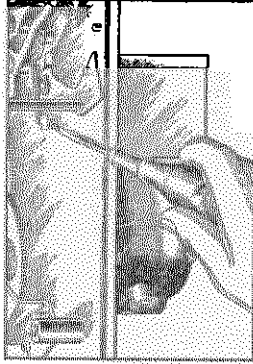


Figure 6—Adjusting tone arm locating screw

- (b) Improper adjustment of tone arm locating screw. This adjustment, shown in Figure 6, can be used to make a substitute adjustment for that described in (a), when the mechanism is out of the cabinet. Make the adjustment so that the needle will lower exactly $\frac{1}{16}$ " from the first groove on a standard 10-inch record. Loosen the lock nut on the adjusting screw by means of a No. 4 Spintite wrench on which the shoulder has been ground sufficiently thin for clearance. Do not attempt to make this adjustment without first loosening the lock nut. Tighten the lock nut when the proper adjustment has been made.

(4) FAILURE OF NEEDLE TO LOWER ONTO RECORD SURFACE

- Failure of the needle to lower onto the record surface may be caused by:
- (a) Cable out of pulley. Examine the tone arm cable and ascertain that it is seated in the pulley.
- (b) Shielded pickup wire improperly placed. Examine the shielded lead coming out of the tone arm base and make sure that it is free from the moving parts of the mechanism.
- (c) Incorrect setting of tone arm lowering screw. Check the position of the tone arm as described in Paragraph 5, Page 4.
- (d) Turntable washer not in place. A leather washer is supplied to fit under the turntable. If this part is not in place, the turntable will be too low, and may cause the needle not to lower onto the record.
- (e) Incorrect adjustment of cable tension screw. The cable tension screw shown in Figure 7 should be so adjusted that the needle will lower smoothly onto the record without dropping. When this adjustment is obtained, the cable will be slightly loose when the needle is lowered onto a record. Loosen the lock nuts, turn the screw to the right or left as required and retighten the lock nut. Check the adjustment to make sure that the needle clears the record on the return of the tone arm. The needle should rise $\frac{1}{16}$ " from the record before any horizontal motion takes place.

(5) NEEDLE FAILS TO CLEAR RECORD AFTER PLAYING

Failure of the needle to clear the record surface on the return of the tone arm is caused by loose adjustment of the cable tension. Adjust this tension as described in Section 4, Para

R. C. A. VICTOR CO., INC.

MODEL RE-73
Notes Part 3

(6) FAILURE OF RECORD TO DEPOSIT ON TURNTABLE

Incorrect lowering of the record onto the turntable may be caused by:

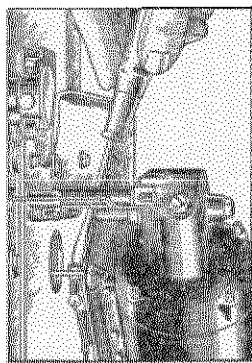


Figure 7—Adjusting base screw down screw

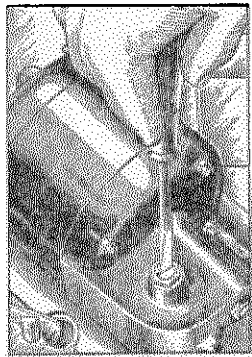


Figure 8—Adjusting spindle height

- (a) Improper turntable spindle height. The height of the turntable spindle nose should be approximately $\frac{1}{32}$ " above the inside bottom surface of the record magazine. Adjustment of this height made by means of the screw at the bottom of the motor. (See Figure 8).
- (b) Improper setting of magazine. The horizontal swing of the magazine should be so adjusted when the mechanism is out of cycle that the outer surface at its nearest point to the nearest side of the turntable spindle is $5 \frac{1}{16}$ ". This can be done by loosening the two screws as shown in Figure 9, moving the magazine to its correct position and retightening the screws.
- (c) Improper height of record transfer lever. The small plate on top of the motor board at the left side of the turntable should be so adjusted that it will depress approximately $\frac{1}{16}$ " when the magazine swings over the turntable. When this adjustment is made correctly, the transfer lever will engage the bottom record in the magazine as the latter is swinging back into the playing position. A small adjusting screw and lock nut are provided for this adjustment. See Figure 10.
- (d) Improper Position of Record Transfer Lever. When a ten-inch record is placed so that its edge touches both pins on the record transfer lever, a line drawn from the center of the hole of the lever to the center of the record hole should pass directly over the center of the spindle. See Figure 11. The two record transfer lever mounting screws can be loosened and the lever shifted until this condition exists. Also when a record is on the turntable it should just clear this lever. Unless this adjustment is properly made the record may not center properly over the spindle.

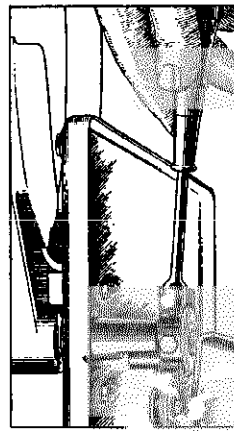


Figure 9—Magazine on turntable

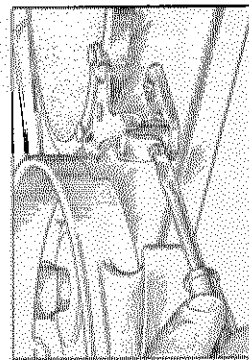


Figure 10—Record transfer lever adjustment

- (e) Weak spring on turntable spindle. The spring inside the turntable spindle which holds up the spindle nose should be adjusted to align properly with the turntable spindle if the spring tension is too weak or if the spindle nose is sticking inside the spindle. Access to the spring for retensioning the coils or for replacement can be obtained by removing the turntable.

7) RECORDS DISCHARGED IMPROPERLY FROM TURNTABLE

Failure of the Record on the turntable to be removed and placed in the magazine can be caused by:

- (a) Improper horizontal adjustment of elevator pads. The elevator pads Figure 16, should be so adjusted that the inside of the pad flange is $4 \frac{1}{16}$ " from the nearest side of the turntable spindle. See Figure 3. Loosen the screw on top of the elevator shaft, move the pad to its correct position, holding both the pad and the elevator shaft in position and tighten the screw. Care should be observed that the ridge in the elevator shaft is not turned against the slot in the elevator shaft actuating lever so as to cut the latter. Grip the shaft with padded pliers while this adjustment is being made in order to prevent the shaft from turning. If for any reason the elevator pads have been removed, always place the one with the rubber surface toward the front of the mechanism when replacements are being made.
- (b) Improper adjustment of elevator shaft. The elevator shafts should rise to such a height as to give $\frac{1}{16}$ " clearance between the lowest surface of the elevator pad bottom and the top of the empty magazine. This adjustment can be made by means of the screw and lock nut as shown in Figure 12.

(8) FAILURE TO TRIP ON ECCENTRIC GROOVE

Failure of the mechanism to change records when the eccentric groove is reached may be caused by:

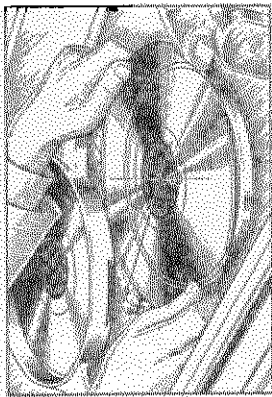


Figure 11—Method of checking transfer lever level adjustment

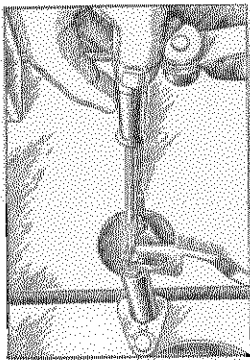


Figure 13—Adjusting height of elevator shaft

- (a) Improper setting of the latch plate. Adjust the latch plate, Figure 17, by means of a small offset screw driver such as Stock No. 2930, until it makes proper contact with the latch trip when the eccentric groove is reached.
- (b) Weak spring on trip lever. A weak spring on the latch trip lever will be a cause of failure to trip.

(9) INABILITY TO SET FOR MANUAL OPERATION

The manual operation lever should set in its back position so as to free the tone arm and prevent the mechanism from tripping. This change from automatic to manual operation should be made only when the mechanism is out of its cycle, otherwise the mechanism will reject continuously. The back position of the lever should be such that the end of the lever causes the latch trip to clear the latch plate by $\frac{1}{16}$ ". An incorrect setting of the latch plate may cause the trip lever to clear the plate at one position of the tone arm, but to make contact with the plate at some other position of the tone arm. Check this point when adjusting the latch plate.

(10) FAILURE TO STOP

Failure of the mechanism to stop after the "off" button has been pressed, and the mechanism has completed its cycle is caused by improper setting of the secondary stop switch. See Figure 17. The switch body should be so mounted that the contacts will open $\frac{1}{16}$ " when the cycle is completed, but will close as soon as the mechanism has tripped.

(11) CONTINUED TRIPPING OF MECHANISM

This condition may be caused by:

- (a) Manual operation lever set for non-automatic operation during cycle.
- (b) Improper setting of latch plate.
- (c) Improper timing of gears and associated parts. See Section 13 for the correct method of retiming.

(12) CLUTCH SLIPPING

Slipping of the clutch when the mechanism is passing through the cycle causing a loud clicking noise, may be caused by:

- (a) Weak spring on pawl carrier. Remove the pawl spring Figure 17, and increase its tension by removing two or three coils.

MODEL RE-73
Notes Part 4

R. C. A. VICTOR CO., INC.

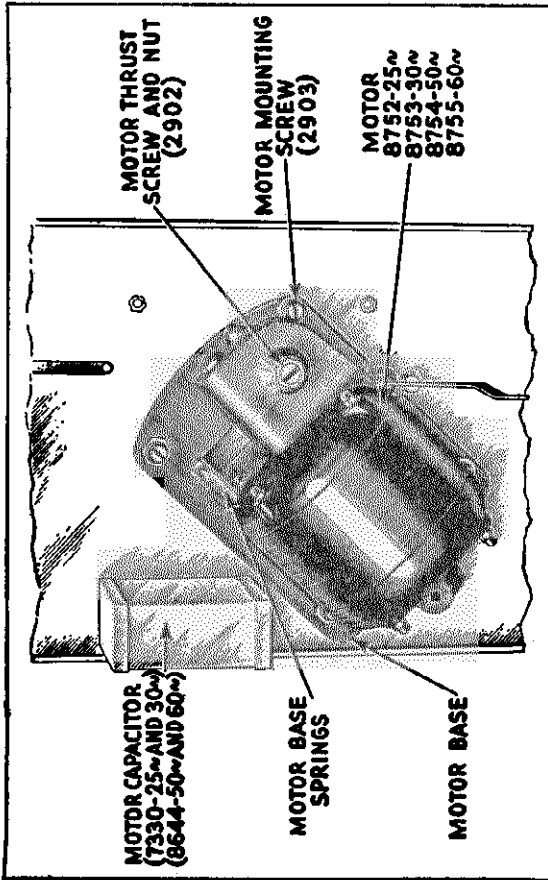


Figure 14—Motor parts

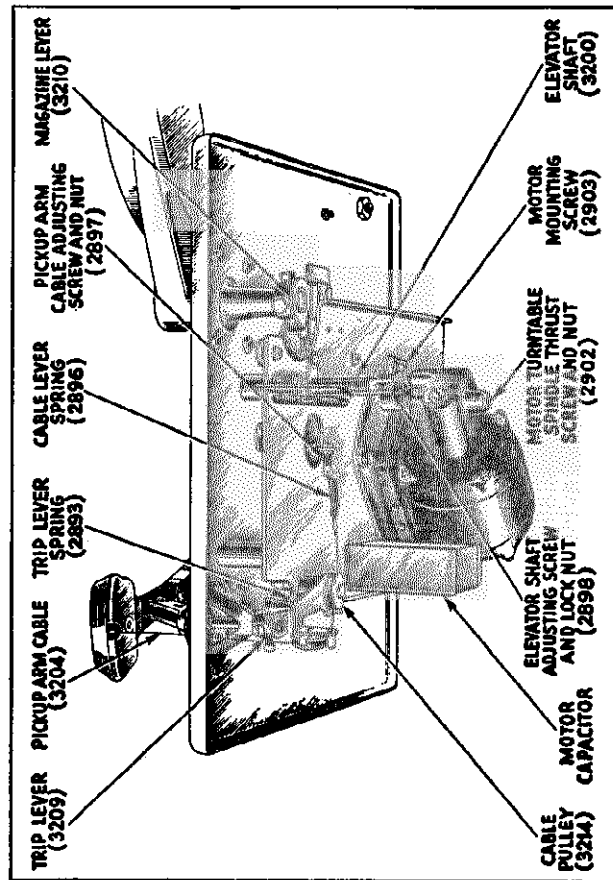


Figure 15—Bottom view of mechanism showing parts

(b) To adjust spindle thrust too low. This condition will cause binding between the pawl carrier and the tone arm wheel. Refer to the slide as shown in Figure 8. The binding may be in any of the moving parts. Such binding may be in the slide, the magazine, the tone arm wheel, the tone arm shaft, or the tone arm lever. The tone arm lever is mounted on eccentric collars at the left are mounted on eccentric collars for adjustment. The tone arm shaft may be so regulated as to cause excessive binding between the tone arm shaft and the tone arm lever. Examine all of these parts carefully, and take any necessary steps to relieve the binding.

RESETTING THE MECHANISM

The tone arm mechanism after replacing parts, or because of continued operation of the mechanism until the slide Figure 17 is in its extreme forwarding position. When this setting is reached the straight side of the cam, Figure 17, will be engaged with the side of the slide. The position of the trip lever and roller at this time to see that they are approximately as shown in Figure 13. If the various parts are not in their proper relation, the mechanism should be retimed.

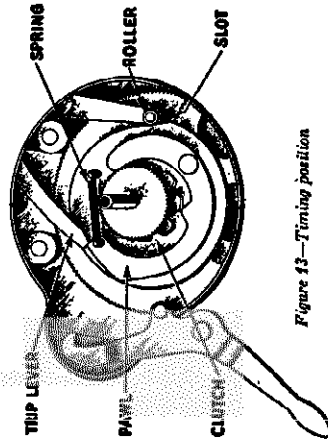


Figure 13—Timing position

- Loosen the set screw in the clutch wheel and lift the wheel from the turntable spindle.
- Lift the pawl carrier until it disengages from the gear.
- Lower the pawl carrier into mesh with the gears so that the trip lever is touching the end of the pawl as shown in Figure 13, when the cable lever roller is engaged in the slot on the side of the pawl carrier as shown.
- Recheck to see that the straight side of the cam is parallel with the slide.
- Replace the clutch wheel and retighten the set screw, making sure that the set screw fits into the spot on the turntable spindle.

(14) REMOVING MOTOR BOARD


Should it be necessary to remove the motor board from the mechanism for replacement of any of the parts, the following procedure should be used:

- Remove nuts and washers from the bolts which hold the motor board to the cabinet, and disconnect the pickup leads and power wiring to the mechanism. Then lift the mechanism from the cabinet.
- Loosen the two set screws and remove the magazine lever Figure 9.
- Lift out magazine.
- Unhook tone arm cable from spring.
- Loosen the two set screws in the tone arm lever.
- Remove the three small screws in the tone arm base, taking care not to lose the lock nuts.
- Disengage the tone arm lever from the tone arm shaft and carefully lift the tone arm from the motor board, bringing the tone arm lever and the shielded cable up through the tone arm base hole in the motor board.
- Remove the screw and lock nuts in the bottom of the elevator shaft.
- Lift elevator shaft from mechanism.
- Unfasten wires from motor board.
- Remove the four motor board screws which support the bottom plate.
- Carefully lift the motor board from the mechanism.

Access can now be had to all the parts on the bottom plate. The parts can be assembled in the reverse order from that given above. It will then be necessary to make various adjustments after the parts have been reassembled.

R. C. A. VICTOR CO., INC.

MODEL RAE-79 Schematic

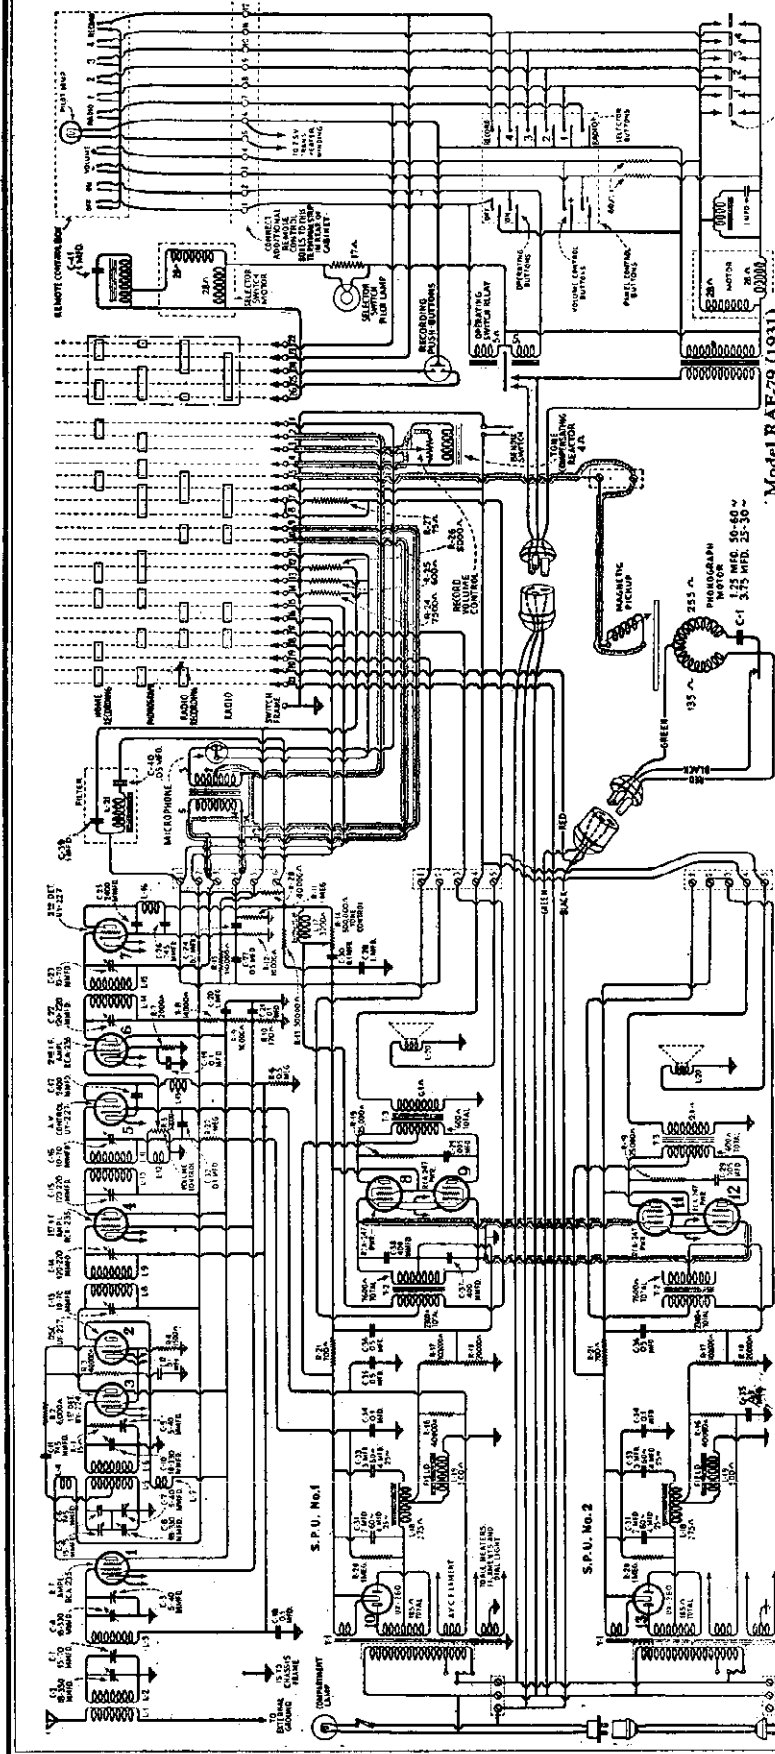

Schematic diagram of Model RAE-79

PEAK FREQUENCY 175 KC

The RCA Victor Model RAE-79 is a thirteen tube, super-heterodyne radio receiver incorporated in the same cabinet with the perfected RCA Victor automatic record changing mechanism.

Features of the instrument are:

- Automatic Chassis Radio Chassis incorporating Super Control Radiotrons, automatic volume control, a degree of quiet operation, remote control of tuning and volume, double push-button operation, Pentode Output Radiotrons, and twin loudspeakers. The automatic record changing mechanism provides a provision for playing continuously, one side of ten 10-inch records manually. The record changer on the RAE-79 reaches a new degree of perfection through the use of a double push-button mechanism and Pentode Output Radiotrons. Such records may be made either 75 or 33 1/3 R.P.M., giving a maximum of eight minutes of home recording on a 10-inch record.

A reference to the R-50 and R-50 Service Notes covers the general service data on this type of instrument.

Model RAE-79 (1931)

2 DET IF A.V.C. IF 1 DET OSC RF	PILOT NO. 41 NAZDA
<input type="radio"/> '27 <input type="radio"/> '35 <input type="radio"/> '37 <input type="radio"/> '47	RECT '90 RECTIFIER, AMPLIFIER NO. 1 PILOT 115 V. TUBULAR INT. BASE RECT '90 RECTIFIER, AMPLIFIER NO. 2

FRONT

MODEL RAE-79
Receiver Chassis

R. C. A. VICTOR CO., INC.


SERVICING DATA ON REMOTE CONTROL UNIT

The Remote Control Contactor of Model RAE-79 are adjusted at the Factory with a 115 volt A. C. input being applied to the receiver. Due to the extreme selectivity of the receiver used, it may be necessary to readjust the motor contactors when the instrument is used on extremely high or low line voltage. The following test covers these adjustments thoroughly.

This is also true on Models used at frequencies other than that specified. For example, when a 60 cycle model is used at 50 cycles, the phonograph motor must be changed and the remote control contactors completely readjusted.


The remote control feature is unique in that it not only allows control of the receiver from a distant point but also pre-selects the desired station accurately. Manual tuning, other than necessary for the original setting of the selector buttons, is therefore eliminated. Selection of any one of four stations, adjustment of the volume control, turning the receiver "on" or "off" or changing from Radio to Record may be accomplished at one or more remote points from the receiver. Operation of the tone control or home recording must be done at the receiver.

One control box and twenty-five feet of flat cable are supplied. If desired, any number of additional units may be installed or the cable lengthened to seventy-five feet.

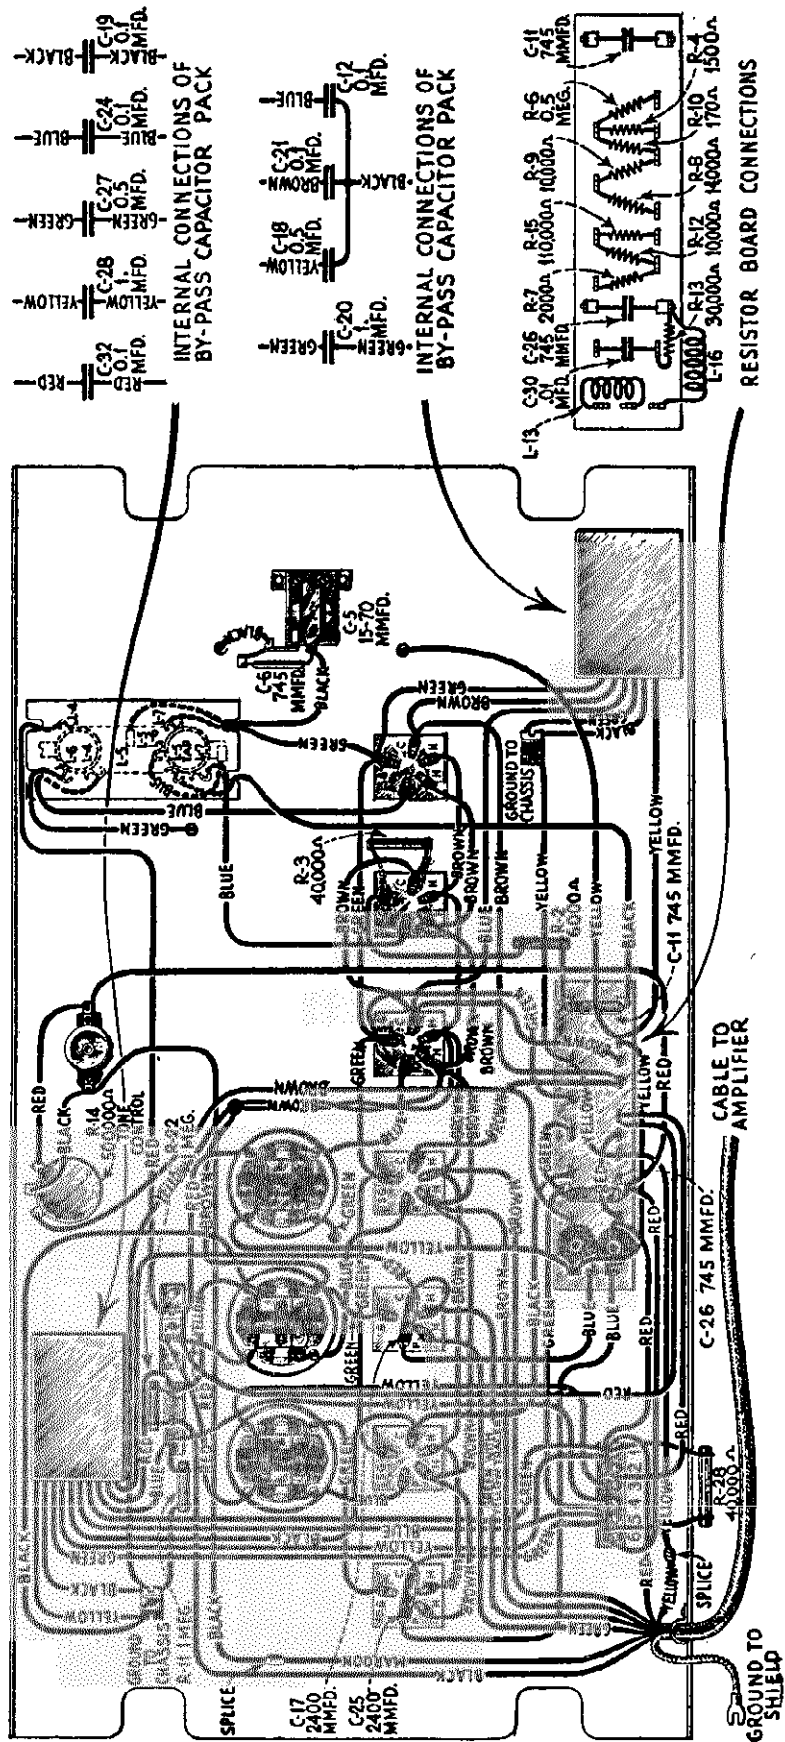

R. C. A. VICTOR CO., INC.

MODEL RAE-79
Assembly Wiring

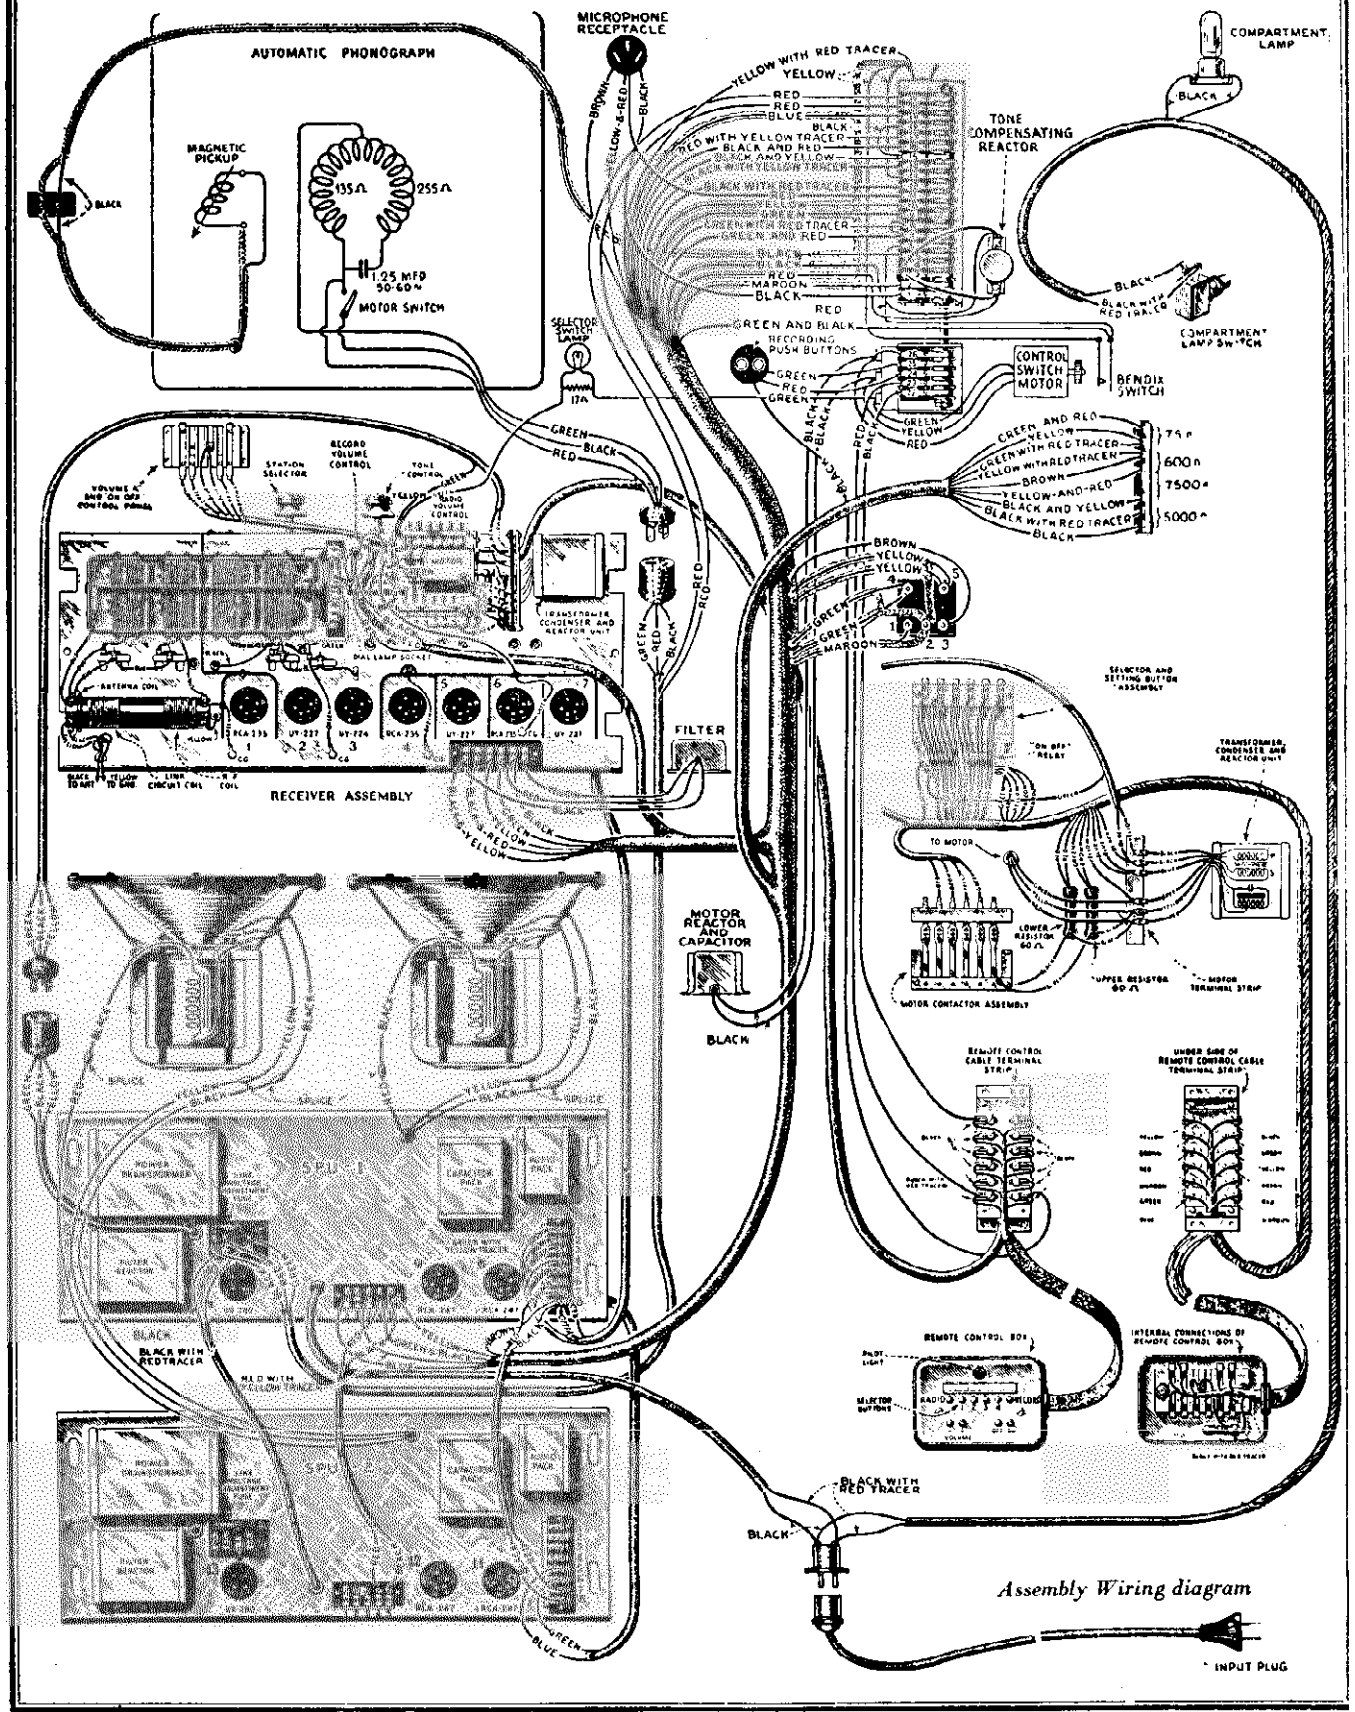

Assembly Wiring diagram

INPUT PLUG

MODEL RAE-79
Remote Control

R. C. A. VICTOR CO., INC.

Electrical Description of Unit

The remote control feature consists of a standard R-50 chassis with a special gang condenser; a capacitor motor coupled to the gang condenser through a series of gears; a series of drums and contactors by which the motor is started in the right direction for a given station and stopped at the right point; a special volume control geared to the motor; a relay to turn the set "on" or "off" and a remote control box by which these operations are controlled.

The motor is provided with a tapped reactor and condenser for changing the phase angle of the applied current so that operation in either direction may be secured. The motor operates at 23 volts for the station selector and 18 volts for the volume control.

Referring to Figure 1 we see the normal position of the motor armature. It will be noted that a spring holds the armature so that the gear at one end is meshed with the volume control gears. At 18 volts, the voltage used for volume control operation, the gears remain in this position and operation of the volume control is secured. When the speed of the motor is increased by operating it at 23 volts, this voltage being used when the selector buttons are pressed, the end thrust of the armature causes it to move laterally, thereby disengaging the gear at the volume control end and engaging the gear at the station selector end. See Figure 2. The spring at the end of the armature causes it to always return to the volume control position when the current is "off" at the motor. As this action takes place with the motor operating in either direction, controlling the voltage at which the motor is operated determines its function. A sixty ohm resistor is placed in each motor circuit controlling the volume to reduce the voltage from 23 to 18 volts.

The proper direction of operation and stopping of the motor for selection of a desired station is controlled by a series of drums and contactors. Figure 3 shows a schematic circuit of the motor and its adjacent circuits. The drums hold the contactors in the proper position so that when a particular selector button is depressed, the motor will turn in the right direction. When the contactor is at the point on the drum where it is half way between each contact, the motor stops. This is 180° from the hole that is used to set the drum for a particular station.

The setting of the drums is made by the pins on the front panel. These are known as the "setting buttons." The selector button is pressed and the drum is moved by the motor until the corresponding contactor is midway between the contacts. The pin will now fall in the hole in the drum if pushed in by the finger. See Figure 4. Holding the pin firmly in the hole, the desired station is then accurately tuned in by means of the manual station selector knob. After tuning, the pin is then released. As the point on the opposite side of the drum is where the diameter of the drum changes, the contactor is half way between the contacts. Pressing the selector buttons will therefore cause no movement of the motor. If another button is pressed and the drum moved, pressing the original button will always bring the drum back to the position for which it was set.

Referring to Figure 10, the schematic diagram, it will be noted that a common lead is used for the pilot lamp and the selector buttons in the remote control box. By doing this, when a selector button on the box is pressed, the current through the common lead is increased, likewise the voltage drop in the lead is increased. The result is that while the motor is running the pilot lamp becomes very dim. As soon as the motor stops, the lamp flashes bright, thus indicating that the motor has stopped and the station is tuned in. If the station is not then heard, it is necessary to press the + volume control button a little at a time until the desired output level is obtained.

Special Installations

(1) INCREASING LENGTH OF REMOTE CONTROL BOX CABLE

The cable to the remote control box supplied with the remote control models is twenty-five (25) feet in length. This is ample for most rooms as it is very rare that a person wishes to listen to a program at a greater distance from the loudspeaker.

If, however, it is desired to place the remote control box at a greater distance from the set, any twelve conductor cable, the wires of which are No. 14 or larger in size, may be used to splice onto the regular cable and increase the total length up to seventy-five (75) feet. Figure 5 shows the method recommended for adding this additional cable.

(2) INCREASING NUMBER OF REMOTE CONTROL BOXES

One remote control box is supplied as standard equipment. Any number of additional boxes may be installed if desired although only one box can be used at a time for controlling the receiver. The boxes should be connected in parallel at the terminal strip on the rear of the Radiola. Figure 11 shows such a connection.

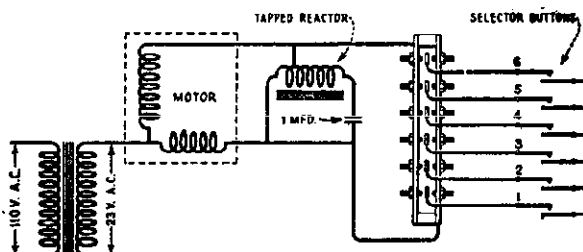


Figure 3—Schematic diagram of motor circuits

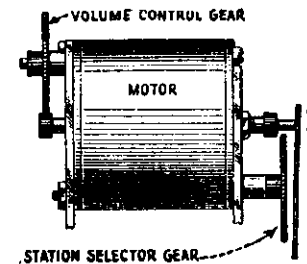


Figure 1—Motor with armature in volume control position

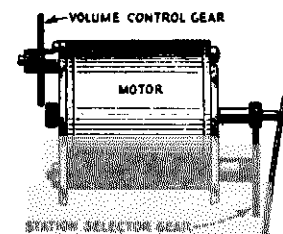


Figure 2—Motor with armature in station selector position

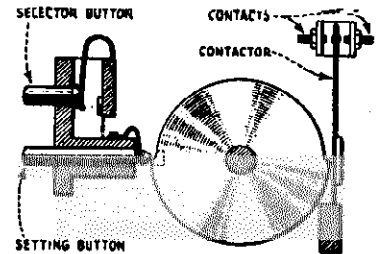


Figure 4—End view of drum and contactor

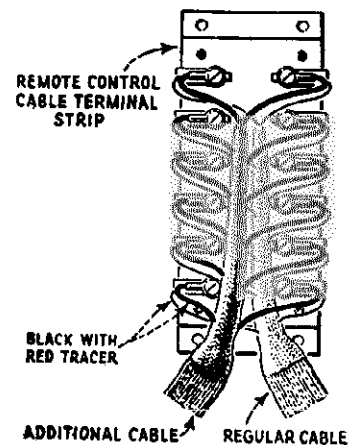


Figure 6—Connections for adding additional boxes

**MODEL RAE-79
Motor Adjustment**
R. C. A. VICTOR CO., INC.

Adjustments

(1) ADJUSTMENT OF MOTOR CONTACTORS

The four station selector motor contactors located at the rear of the motor may require adjustment due to changes in the amount of friction in the entire drive assembly. Need for adjustment is evidenced by the motor failing to stop at the exact point for a particular station.

In order to make these adjustments two tools are necessary. They may be constructed, see Figure 7, or obtained as a spare part, the replacement parts section listing them. The chart on page 4 gives the procedure to be followed for making adjustments. This procedure must be repeated on each contactor that is out of adjustment.

If all contactors are out of adjustment in a similar manner, then the friction screw, see Figure 8, requires adjustment. This should be either tightened or loosened, the exact adjustment to be determined by trial. The adjustment that is correct for one contactor will be correct for all, assuming the friction screw to be at fault.

(2) REPLACING OR ADJUSTING CONTACTORS

Six contactors are used for connecting the motor so that it rotates in the proper direction. To make this adjustment or replacement, a special offset screw driver will be required unless the unit is to be removed from the base. This is shown in Figure 12.

Referring to Figure 4 we see that when the setting button is in the hole in the drum, the contactor for that particular drum is exactly half way between the contacts. The holes that hold the contactors are elongated so that they may be raised or lowered until they rest exactly half way between the contacts when the setting button is inserted in the drum hole. This is the only adjustment required of these contactors, and with the special screw driver is quite easy to make.

(3) MAKING REPLACEMENTS

The operating relay, the resistors, the motor, the gears and other small parts may be replaced. All power transformers when replaced must have the primaries so connected that the pilot light on the remote control box lights properly. If the transformers are improperly phased, the lamp will brighten instead of dim when a selector button is pressed. The drum assembly is specially fitted and assembled and any individual replacements can not be made. If trouble is experienced in this assembly, a complete replacement of the unit will be required.

SELECTOR SWITCH AND MISCELLANEOUS INFORMATION

(1) BENDIX LOUDSPEAKER SWITCH

At the end of the selector switch motor a switch is located that shorts the cone coil when the instrument is changing from one function to another.

The switch is operated by the lateral thrust of the motor wherever it goes into operation. If for any reason, noise should be heard when changing from Radio to Record or Home Recording, it may be due to this switch not functioning. Bending the lever so that it makes proper contact will remedy this condition.

(2) PRECAUTIONS WHEN MAKING RADIO RECORDING RECORDS

When making radio recording records, it is necessary that the radio volume be adjusted for its greatest undistorted output if good quality records are to be obtained. While using the maximum undistorted output it is also important that the volume control should not be advanced beyond this point, as it is possible that the maximum distorted output, if fed into the pickup long enough, will cause the pickup coil to heat and its wax to run out.

(3) SERVICE DATA ON MICROPHONE

The Microphone used on Model RAE-79 is a two-button studio type that has excellent frequency characteristics and is simple and rugged in construction. Generally, any failure in the microphone can be remedied only by replacing the unit. However, an unbalance in the buttons may be corrected by means of a small adjustment. The following procedure details the correct manner in making this adjustment. Refer to Figure 9.

(a) Remove the microphone from its shell. Be careful not to lose its supporting springs. Measure the D. C. resistance of each button. This may vary from 200 to 1000 ohms, but each button should be measured within 50% of the other.

(b) Loosen the set screw shown in Figure 9, and adjust the pressure of the cup by either increasing or decreasing its pressure against the diaphragm. Increasing the pressure reduces the resistance and decreasing it, increases the resistance of the button. Usually it is best practice to match the buttons by increasing the resistance rather than by decreasing it. Be very careful however to avoid spilling any carbon granules.

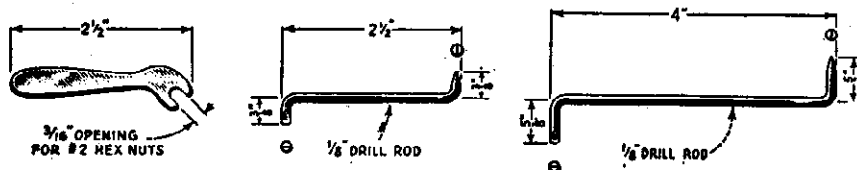


Figure 7—Constructional details of special tools used with remote control models

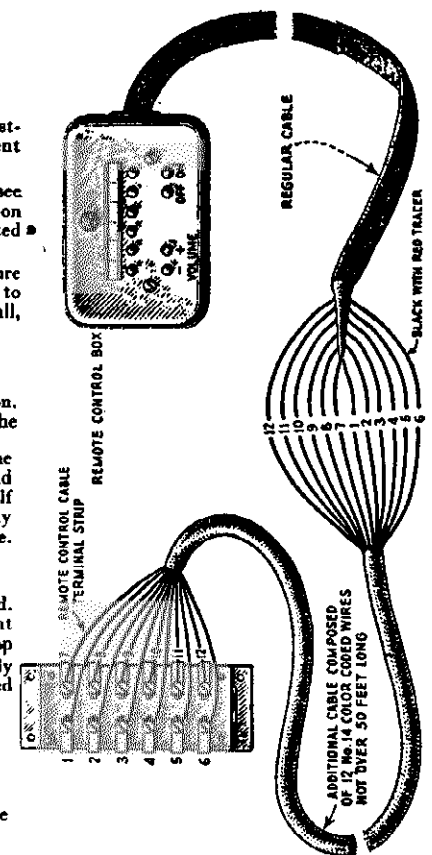


Figure 5

Wiring diagram of method for connecting additional cable

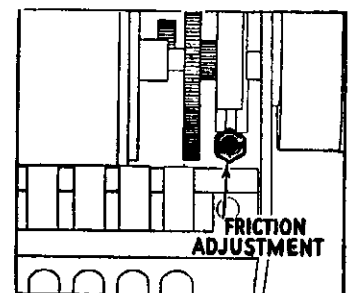


Figure 8—Location of Friction Adjustment


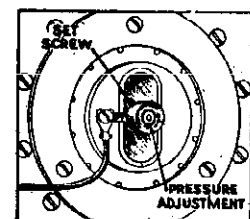


Figure 9—Details of Microphone Adjustment

MODEL Radiola 80
Receiver chassis

R. C. A. - VICTOR CO., INC.

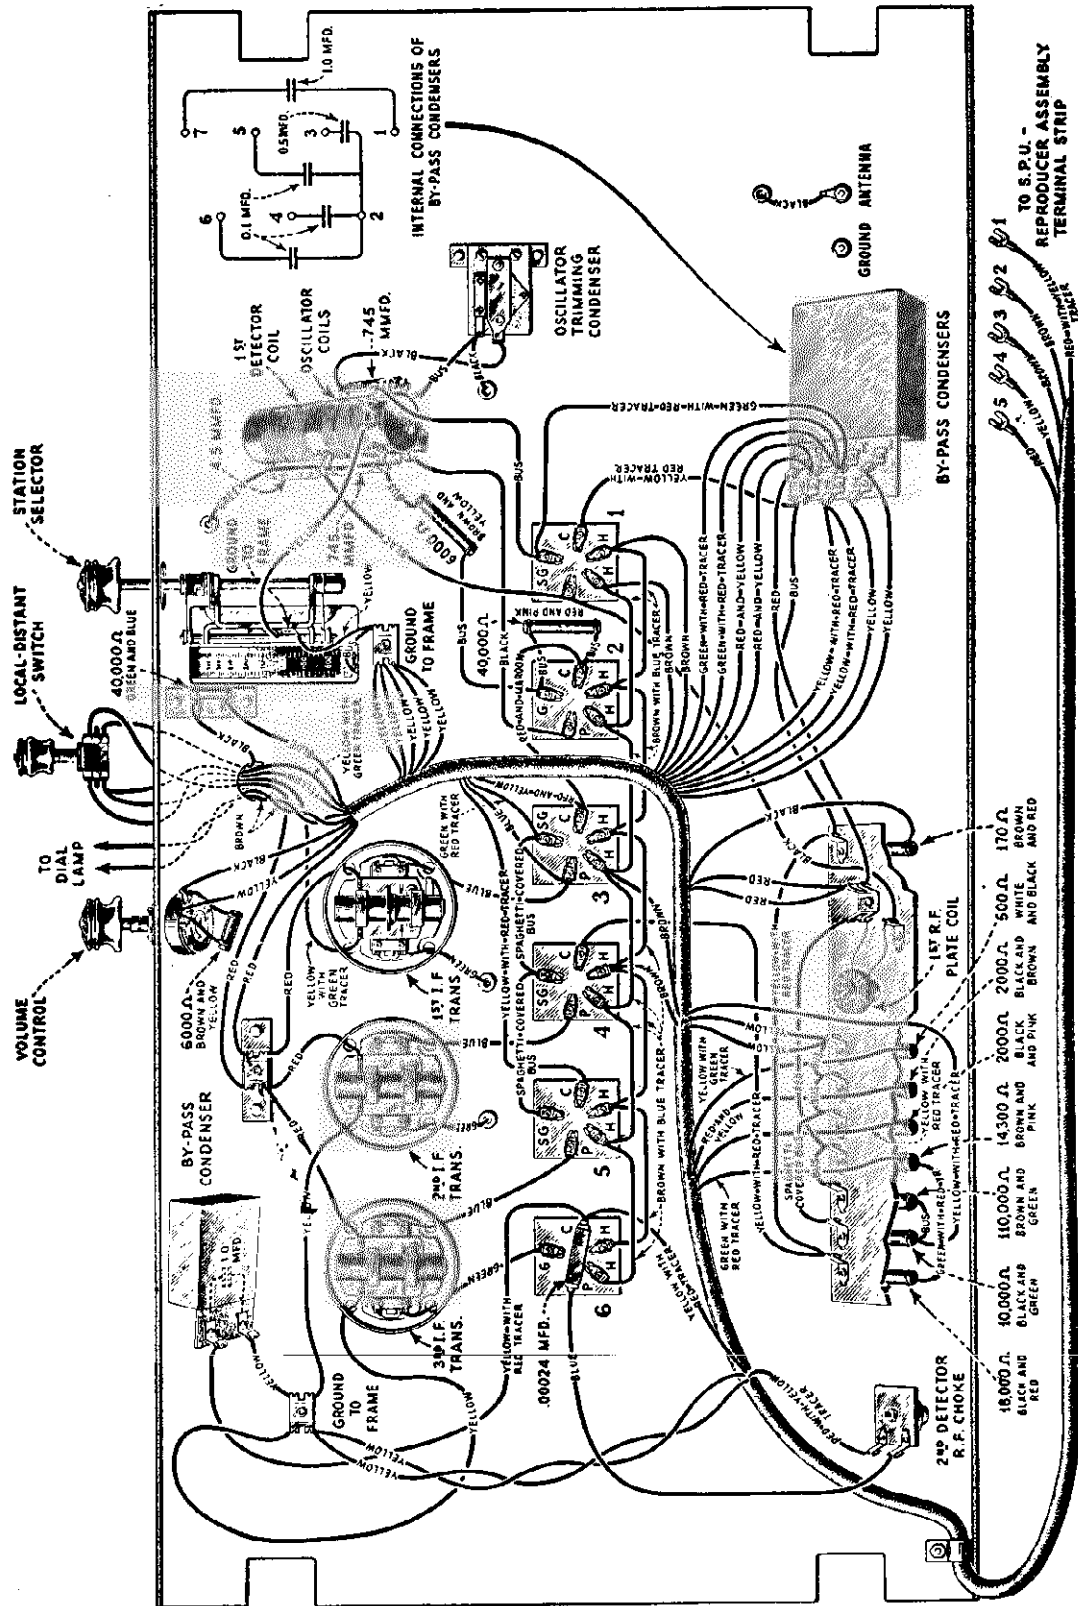

Wiring diagram of receiver assembly


MODEL Radiola 80
Resistance Data
R. C. A. VICTOR CO., INC.

All tubes out of sockets and AC plug disconnected from power supply.
 Volume Control set for maximum signal unless otherwise specified

From Chassis To	Correct		Incorrect
Aerial to Ground	40	ohms	
Chassis to			
Link circuit condenser stator	5	ohms	TC-Y
RF Control Grid	5	ohms	TC- rf Cg-Y
RF Cathode (V.C.Min)	2,570	ohms	BC- rf K-Y (.1 mfd) BC- rf Sg-Y (.5 mfd)
RF Cathode (V.C. Max)	170	ohms	See V.C. Min
RF Screen Grid	16,000	ohms	BC- rf Sg- Y (.5 mfd) BC-2 D - Y (1. mfd) FC- '80 F-Y (3. mfd)
RF Plate	26,597	ohms	See RF Cathode
RF Plate to '80 Fil	42	ohms	
1 Detector Control Grid	5	ohms	TC- 1 D Cg-Y
1 Detector Cathode	2,000	ohms	BC- 1 D K-Y (.1 mfd)
1 Detector Screen Grid	16,000	ohms	See RF Screen
1 Detector Plate (distant)	26,594	ohms	See RF Screen
1 Detector Plate to '80 Fil9 distant)	39	ohms	
Oscillator Control Grid	42,000	ohms	BC- 1 D K-Y (.1 mfd) Oscillator Grid condenser
Oscillator Cathode	2,000	ohms	BC- 1 D K-Y (.1 mfd)
Osc control grid to cathode	40,000	ohms	
Oscillator Plate	16,000	ohms	See RF Screen
Oscillator Plate to RF Screen	1	ohm	
1 IF Control Grid	41	ohms	TC- 1 IF Cg-Y
1 IF Control Grid to distant switch	541	ohms	"Distant" Adjustment
1 IF Cathode	170	ohms	See RF Cathode
1 IF Screen Grid	16,000	ohms	See Rf Screen
1 IF Plate	26,594	ohms	See RF Screen
1 IF Plate to '80 Fil	39	ohms	
2 IF Control Grid	41	ohms	TC- 2 IF Cg-Y
2 IF Cathode	2,000	ohms	BC- 2 IF K-Y (.1 mfd)
2 IF Screen Grid	16,000	ohms	See RF Screen
2 IF Plate	26,594	ohms	See RF Screen
2 Detector Control Grid	41	ohms	TC-2D Cg-Y
2 Detector Cathode	9,346	ohms	BC-2D K-Y (1. mfd)
2 Detector Plate	28,540	ohms	FC-'80 F-Y (3 mfd)
2 Det Plate to '80 Fil	1,985	ohms	BC-2DP-2DK(.0024 mfd)
'45 Control Grid	66,500	ohms	
'45 Control Grid to Control Grid	13,000	ohms	
'45 Plate	26,730	ohms	See RF Screen
'45 Plate to 45 Plate	350	ohms	
'45 Plate to '80 Fil	175	ohms	
'45 Filament	730	ohms	BC-715 ohm unit-Y (.05 mfd)
'80 Filament	26,555	ohms	
'80 Filament to '80 Plate	28,445	ohms	FC-80F (2 mfd) FC-80F (3 .mfd) Harm. Condenser (3. mfd) See RF Screen
80 Anode to 80 Anode	350	ohms	
Speaker field only	1,330	ohms	
Output transformer secondary only	.8	ohm	
Voice coil only	10	ohms	
Oscillator coil only	5	ohms	
Across AC Plug	3.5	ohms	

R. C. A. VICTOR CO., INC.


MODEL Radiola 82
Power Unit Chassis

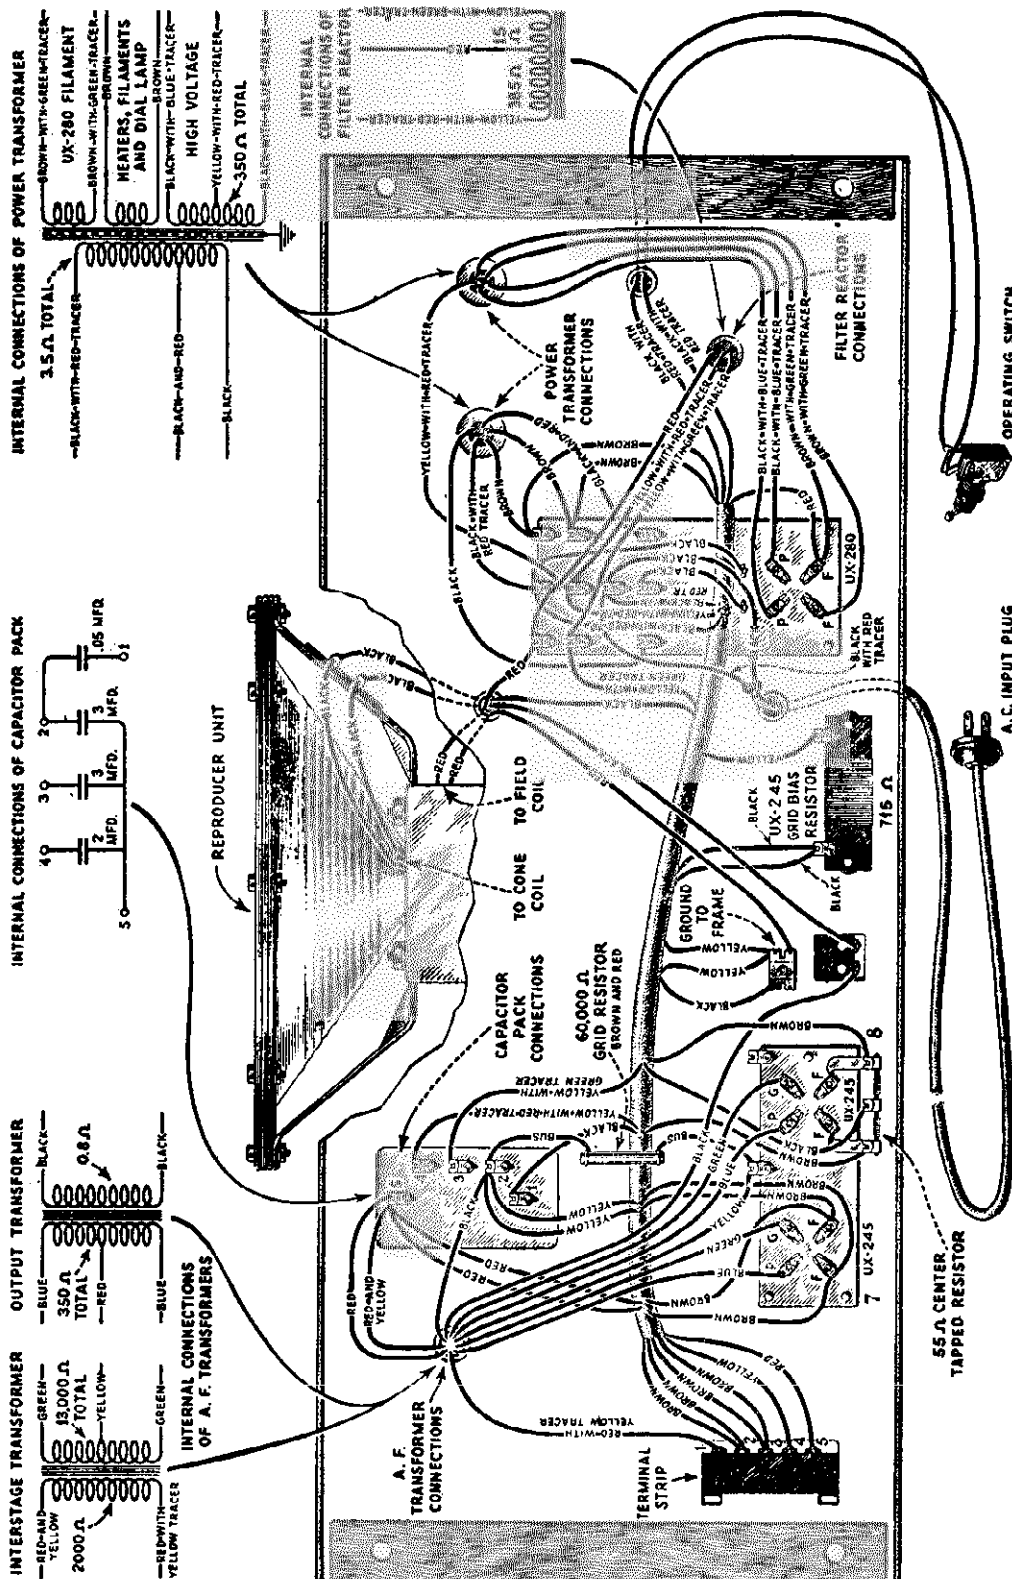

Wiring diagram of the socket power unit.

MODEL Radiola 86
Assembly Wiring

R. C. A. VICTOR CO., INC.

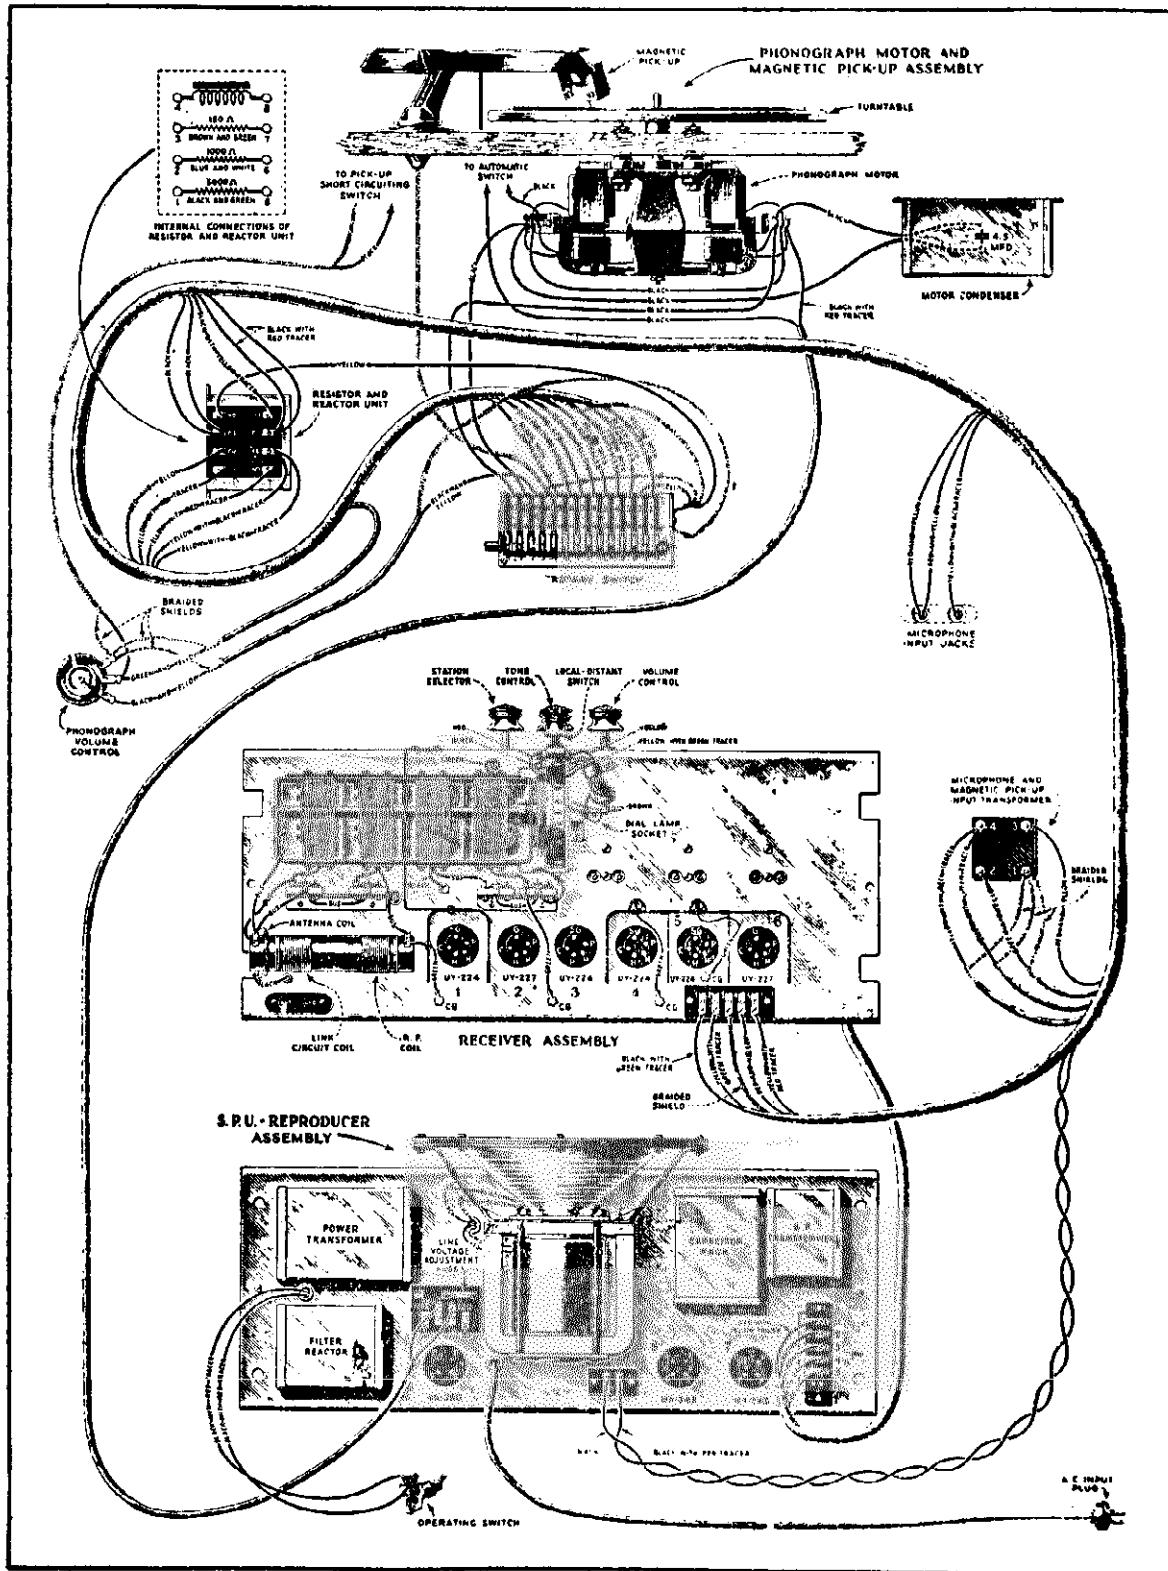

MODEL SWA-2 SW Converter
Chassis - Parts List

R. C. A. VICTOR CO., INC.

MODEL SWA-2 SHORT WAVE CONVERTER


RCA Victor Short Wave Converter SWA-2 is a t' rec tube, single control short wave unit designed to convert all short wave signals from 13.8-200 meters to a single frequency so that they may then be amplified by means of the usual broadcast receiver.

One Radiotron UY-224 is used as an R. F. Amplifying stage, one UY-224 as the detector and one UY-227 as the oscillator. Heater current for these Radiotrons is obtained from a small transformer incorporated in the unit. Plate supply is obtained from the broadcasting receiver.

A wafer connector is supplied that may be inserted under the tube socket when a receiver using a UX-280 rectifier and a filter in the negative side of the line is used. Under these conditions—most modern receivers are so designed that this is true—the plate supply to the converter is obtained through the contact on the wafer connector to the UX-280 filament. On receivers where this condition does not exist, but where Pentode output tubes are used, the wafer connector can be used to make connection to the screen grid of the Pentode. On receivers where neither condition exist any connection that gives a filtered D. C. output of from 180 to 260 volts between the contact and ground will be suitable.

Due to the SWA-2 being identical with the converter chassis used in the RO-23, reference to the RO-23 Service Notes should be made for data pertaining to Service work.

Stock No.	DESCRIPTION	List Price	Stock No.	DESCRIPTION	List Price
2742	Cap—Grid contactor cap—Package of 5.....	\$0.50	6109	Knob—Knob with pointer—Package of 5.....	\$1.75
2977	Knob—Station selector, or Resonator knob—Package of 5.....	2.50	6110	Dial lamp shield and indicator.....	.50
3058	Resistor—100,000 ohms—Carbon type—1 watt—Package of 5.....	2.50	6111	Escutcheon—Range switch knob escutcheon—Package of 5.....	1.80
3153	Resistor—1500 ohms—Carbon type—1 watt—Package of 5.....	2.75	6112	Cushion—Receiver chassis rubber cushion—Package of 5.....	.50
3285	Cord—Drive cord—Package of 5.....	1.00	7062	Capacitor—Adjustable capacitor—15-70 mmfd.....	1.00
3286	Spring—Drive cord tension spring—Package of 5.....	1.40	7298	Capacitor—0.01 mfd.....	.80
3288	Socket—UY Radiotron socket—Complete with insulator strip.....	.50	7406	Capacitor—Double adjustable capacitor—One section 10-70 mmfd.—One section 800-1000 mmfd.....	1.10
3289	Contact lug—Complete with mounting rivets—Package of 10.....	.50	7407	Coil—High frequency detector coil.....	1.05
3290	Switch—Antenna—On and Off—Toggle type—2 used—Complete with mounting nut.....	1.00	7408	Coil—Low frequency detector and oscillator coil.....	1.45
3291	Board—Terminal board with two soldering terminals complete with mounting rivets. Located on switch bracket—Package of 5.....	.50	7409	Coil—High frequency oscillator coil.....	1.85
3292	Drive shaft with pulley—Package of 5.....	2.35	7410	Capacitor—Variable capacitor—7 plate—Complete with mounting nut and washers.....	1.75
3293	Coil—For resistor board assembly.....	.65	8006	Transformer—Filament power transformer—110 volts—25 cycle.....	3.25
6100	Coil—Coil assembly with mounting eyelet—For switch and bracket assembly.....	.75	8807	Transformer—Filament power transformer—220 volts—60 cycle.....	5.75
6101	Socket—Dial lamp socket and bracket with mounting rivets.....	.50	8808	Transformer—Filament power transformer—110 volts—60 cycle.....	3.40
6102	Capacitor—1000 mmfd.—Package of 5.....	2.50	8809	Board—Resistor board less resistors, capacitors and coil.....	1.00
6103	Resistor—800 ohms—Carbon type—1 watt—Package of 5.....	2.00	8810	Lever—Switch lever assembly—Comprising shaft, 3 switch levers and coupling bushing.....	.70
6104	Resistor—80,000 ohms—Carbon type—1 watt—Package of 5.....	2.00	8811	Switch—Range switch complete with mounting washer and nut.....	6.60
6105	Resistor—40,000 ohms—Carbon type—3 watt—Package of 5.....	3.00	8812	Capacitor—Variable tuning capacitor assembly.....	5.10
6106	Coupling—Switch lever shaft coupling with 2 taper pins—Package of 5.....	.50	8813	Dial drum and scale.....	1.20
6107	Switch—Toggle type—Power switch.....	1.00	10620	Capacitor—100 mmfd.....	.50
6108	Blinding post—Complete with terminal lug, mounting washer and mounting nut—Package of 5.....	1.75			
				CABINET	
			3229	Escutcheon—Tuning dial escutcheon with mounting screws.....	.70
			6113	Foot—Cabinet felt foot—Package of 15.....	.50
			9390	Cabinet—Complete less equipment.....	12.00



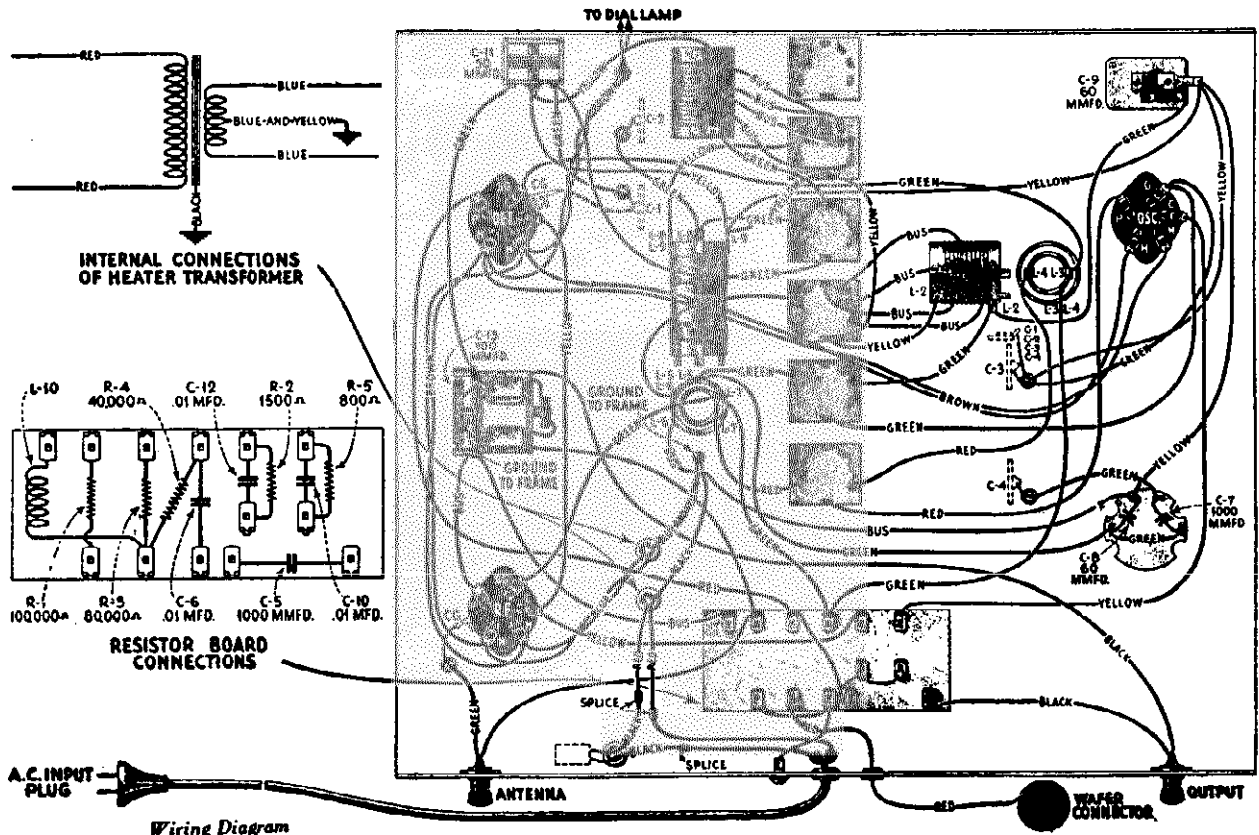


Model SW-2 (1931)

R. C. A. VICTOR CO., INC.

MODEL SWA-2 SW Converter Schematic

MODEL SWA-2 SHORT WAVE CONVERTER

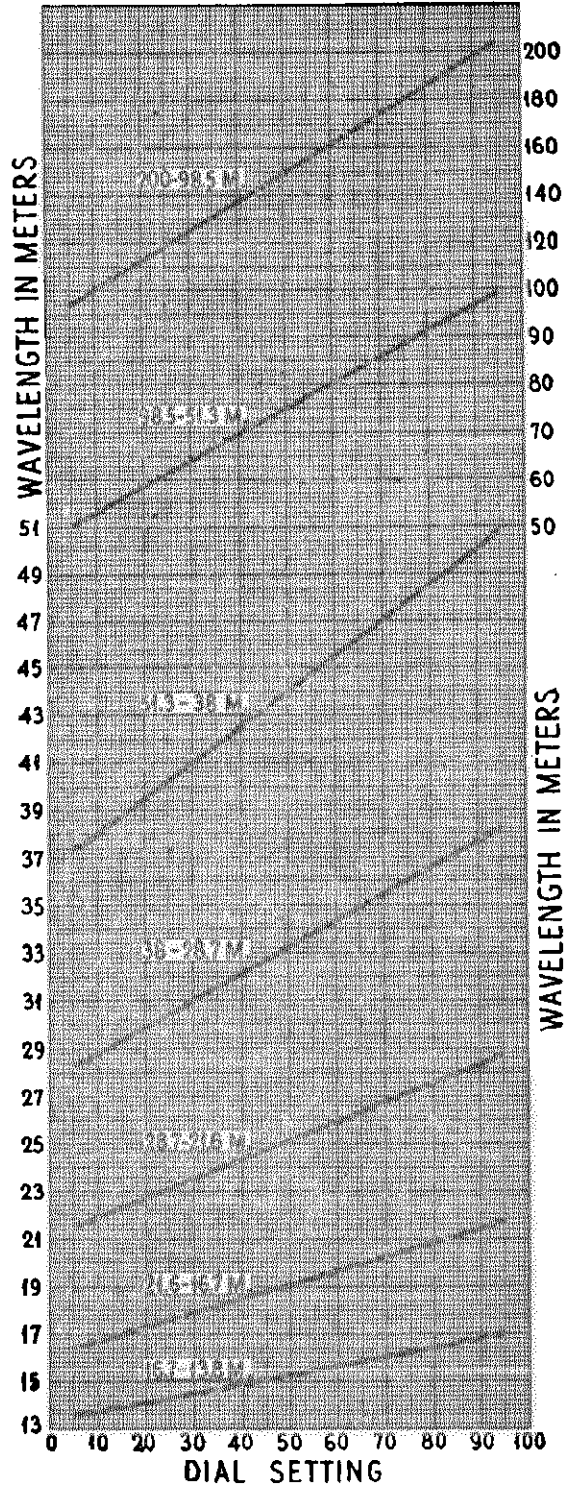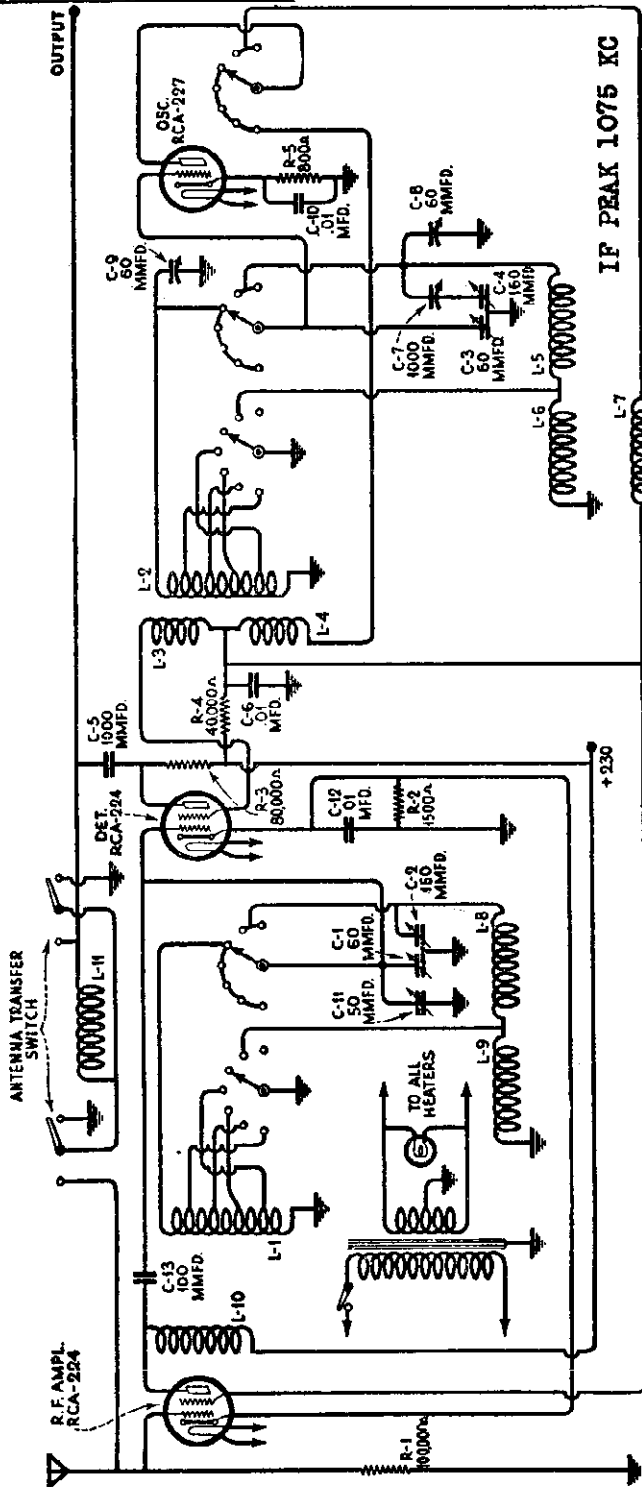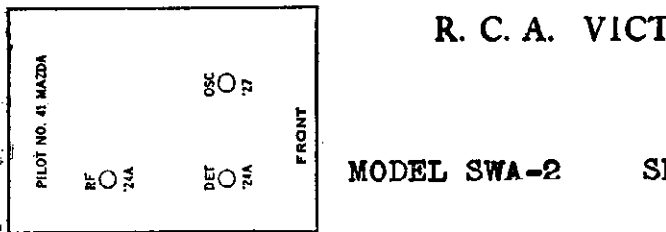

Voltage Rating..... 105-125 Volts and 200-250 Volts
 Frequency Rating..... 50-60 cycles and 25-40 cycles
 Power Consumption..... 20 Watts
 Recommended Antenna Length..... 25-75 feet

Approximate Calibration
 of Short Wave Tuning Dial of RO-23
 (with 1075 K.C. Intermediate Frequency).

MODEL 2-25
Portable
Victrola

R. C. A. VICTOR CO., INC.

REPLACEMENT PARTS

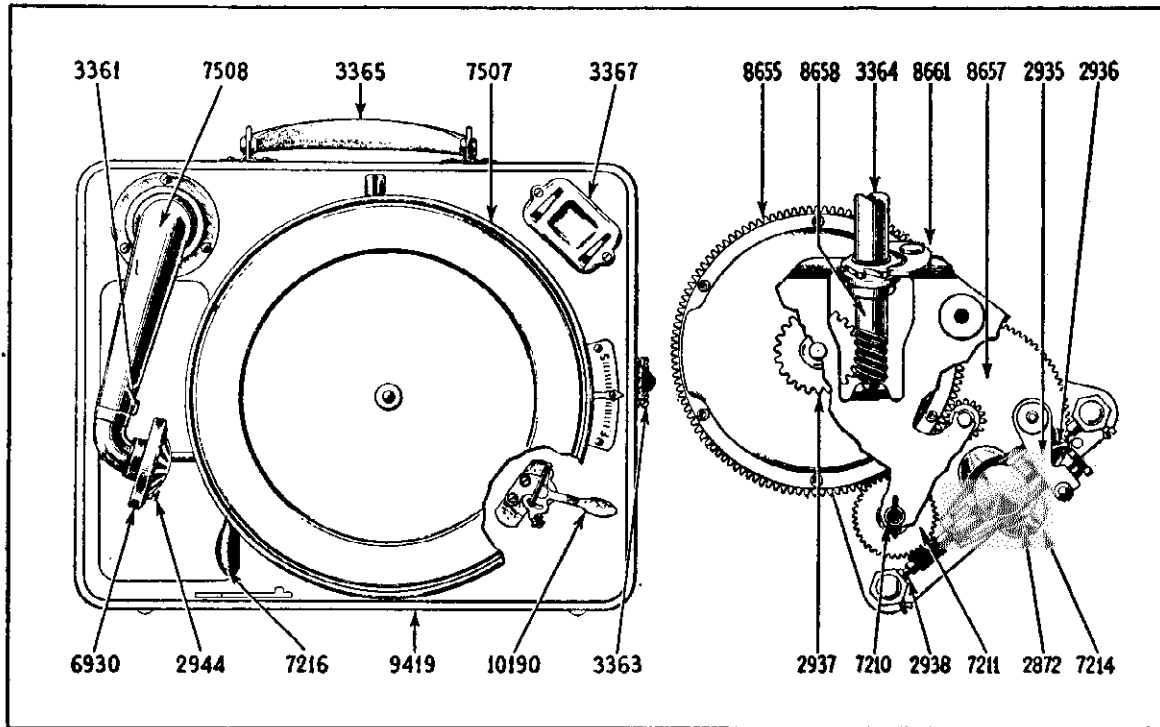


Figure 2—Cabinet, Motor Board and Motor Parts

Stock No.	DESCRIPTION	List Price	Stock No.	DESCRIPTION	List Price
2872	Governor ball and spring assembly—Comprising ball, spring, mounting screws and washers—Package of 5....	\$0.75	7211	Gear—Turntable spindle gear complete with set screw.....	\$0.50
2935	Lever—Speed regulator lever complete with stud and spring—Package of 2..	.50	7214	Governor assembly—Comprising governor spindle, disc, collar, governor balls and springs.....	2.50
2936	Spring—Speed regulator lever spring—Package of 1050	7216	Key—Winding key.....	1.00
2937	Gear—Winding gear and sleeve.....	.90	7226	RCA Victor motor oil—1 pint can.....	.50
2943	Cap—Turntable spindle cap screw—Package of 5.....	1.50	7227	RCA Victor motor grease—1 pint can..	.60
2944	Screw—Sound box needle screw—Package of 20.....	1.00	7228	RCA Victor spring lubricant—1 pint can.....	.65
2947	Leather—Friction leather for brake—Package of 20.....	.50	7447	Plate—Top plate assembly comprising top and bottom plates complete.....	3.00
3361	Hook—Tone arm and crank hook.....	.65	7507	Turntable—Complete with covering....	2.90
3362	Hinge—Cabinet hinge with mounting screws—Package of 260	7508	Tube—Taper tube with pivot pin—Less sound box—Used with sound box No. 6930.....	2.20
3363	Lock—Lid lock with mounting screws..	.90	8655	Barrel—Spring barrel complete with main spring and driving gear—Less winding gear.....	3.00
3364	Extension—Winding shaft extension....	.70	8656	Spring—Main spring.....	1.15
3365	Handle—Carrying handle complete with bracket and mounting rivets.....	.90	8657	Gear—Intermediate gear complete with pinion and shaft.....	.70
3366	Scale—Speed regulator scale complete with mounting screws.....	.50	8658	Shaft—Winding shaft—Comprising shaft, collar, pin, ratchet and washer—Less winding extension.....	1.25
3367	Holder—Needle holder.....	.75	8661	Motor—Motor complete with spindle cap.....	12.00
6930	Sound box—Complete with needle screw.....	4.50	9419	Cabinet complete—Less mechanism....	Price on application
7210	Spindle—Turntable spindle complete with pins and ball bearing—Less gear	.80	10190	Brake—Turntable hand brake—Package of 2.....	

R. C. A. VICTOR CO. INC.

MODEL 2-25
Portable
Victrola

RCA Victor Portable Victrola Model 2-25

The RCA Victor Portable Victrola Model 2-25 is a small portable type reproducing instrument built into a metal cabinet resembling a small suitcase. Excellent quality, high output and good mechanical construction are features of this instrument.

LUBRICATION

Premature wear, noisy operation and failure of parts are direct results of failure to clean and lubricate the motor at necessary intervals. The various bearings and gears of the motor should be cleaned and lubricated at least once every six months. In addition to the regular lubrication, all motor parts should be covered with a light film of oil to prevent rusting. Use only RCA Victor Motor Oil and Motor Grease when lubricating this instrument.

Initial Operation. When the instrument is first played, wind the motor and allow it to run down completely several times. This insures a complete distribution of lubricant within the spring barrel. Maximum run is dependent on this point.

The speed of the motor should be adjusted so that the turntable revolves at 78 R. P. M. This can be checked by means of a Stroboscope Disc in conjunction with a source of A. C. illumination of proper frequency for the disc used or by counting the revolutions. In both cases a record must be playing in the normal manner when the check is made.

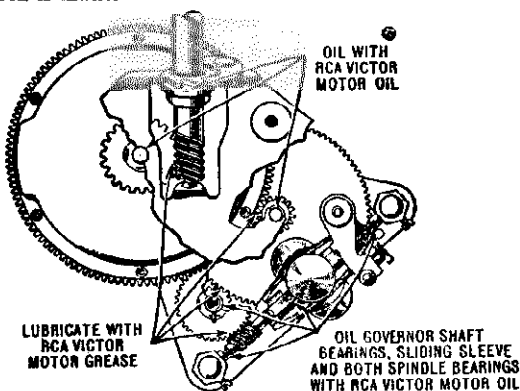


Figure 1—Lubrication Diagram of Model 2-25

Motor. Figure 1 shows a view of the motor with the top plate removed. Before lubricating the parts shown in this illustration, a thorough cleaning with carbon tetrachloride (Carbona) or gasoline is necessary. If necessary disassemble the entire motor for such cleaning.

Tone Arm. The joint between the taper tube and the sound chamber must be free to swing easily without play and be sealed with grease. This bearing is accessible when the three mounting screws are removed. Failure to seal this joint will result in poor quality. Unnecessary friction will cause undue record wear.

MOTOR

The motor used in Model 2-25 is of simple design and will give excellent performance. If kept clean and properly lubricated, little service attention will be required. The

following points may prove useful when it is necessary to effect repairs. *Before doing any work on the motor the machine must be allowed to run down completely.*

Removing Motor from Cabinet. To remove the motor from the cabinet proceed as follows:

- (a) Unscrew the spindle cap and remove the turntable.
- (b) Remove the four machine screws that hold the motor in place. The motor may then be removed through the hole in the motor board.

Changing Motor Springs. Should a spring break and require replacement the best method to make a repair is to replace the entire spring barrel. While the cost of the spring barrel is greater than that of the spring alone, the saving in labor will usually justify such replacement. Unless the serviceman is experienced in handling springs of this type, the following directions should be followed carefully:

- (a) Disassemble the motor and remove the spring barrel. Remove the winding gear.
- (b) Place the gear flat on a piece of metal and file off the ends of the six rivets. Remove the rivets and gear.
- (c) Place the palm of the right hand over the closed end of the barrel, making sure that the fingers do not protrude beyond the open side. Firmly hold the barrel, open side downward over a large can or barrel. With the left hand pull the center turns of the spring out. As soon as the spring starts, pull the left hand clear of the can holding the spring barrel firmly until the spring is entirely clear.

(d) A new coiled spring may prove extremely dangerous if not properly handled. Read these instructions and work very carefully especially if not experienced in work of this kind. The new spring is furnished coiled and with a heavy wire clamp holding the spring tightly wound. Pull out about one foot of the spring. Then with the spring flat on a table gently tap the ring until it comes to the edge. Do not push the clamp so close to the edge that it will not hold the spring.

Place the hook end of the spring over the barrel hook. Wind the exposed end into the barrel and then insert the entire spring in the barrel allowing the clamp to be on the outer edge. Place a block over the entire spring and force the spring into the barrel thereby releasing the clamp.

- (f) Place a tablespoonful of spring lubricant between the spring leaves and in the center of the spring.
- (g) Place the gear in position and rivet it with six rivets to the spring barrel. Use a small punch for flattening the ends of the rivets. Place the gear on a flat surface while re-riveting the barrel to it.
- (h) Reassemble the motor in the reverse manner of that used to dismantle it.

Winding Shaft Binding. A heavy jar may cause the motor to shift slightly on the motor board and produce binding of the winding shaft against the motor board. Loosening the motor mounting screws and shifting the motor to its proper position will correct this condition.

The RCA Victor Portable Victrola Model 2-65 is a small portable type instrument built into a cabinet resembling a small suitcase. Excellent quality, high output and good mechanical construction are features of this instrument.

LUBRICATION

Premature wear, noisy operation and failure of parts are direct results of failure to clean and lubricate the motor at necessary intervals. The various bearings and gears of the motor should be cleaned and lubricated at least once every six months. In addition to the regular lubrication, all parts should be covered with a light film of oil to prevent rusting. Use only RCA Victor Motor Oil and Motor Grease when lubricating this instrument.

Initial Operation. When the instrument is first played, wind the motor and allow it to run down completely several times. This insures a complete distribution of lubricant within the spring barrel. Maximum run is dependent on this point.

The speed of the motor should be adjusted so that the turntable revolves at 78 R.P.M. This can be checked by means of a Stroboscope Disc in conjunction with a source of A.C. illumination of proper frequency for the disc used or by counting the revolutions. In both cases a Record must be playing in the normal manner when the check is made.

Motor. Figure 1 shows a view of the motor with the top plate removed. Before lubricating the parts shown in this illustration, a thorough cleaning with carbon tetra-chloride (Carbena) or gasoline is necessary. If necessary disassemble the entire motor for such cleaning.

Tone Arm. The joint between the goose neck and tone arm and that between the tone arm and sound chamber must be free to swing easily without play and be sealed with grease. The goose neck is detached or adjusted by means of two collars that hold it in place. The bearing between the tone arm and sound box is accessible when the swivel and three mounting screws are removed. Failure to seal these joints will result in poor quality. Unnecessary friction at either of these points will cause undue record wear.

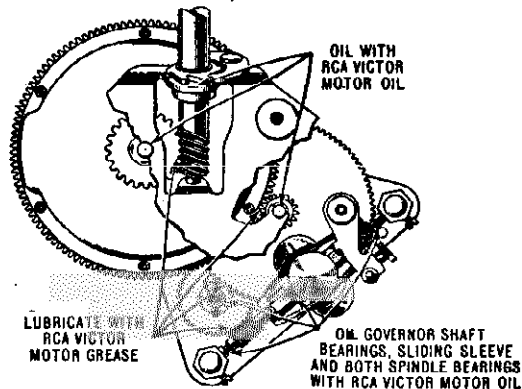


Figure 1—Lubrication Diagram of Model 2-65

AUTOMATIC STOP MECHANISM

The Automatic Stop Mechanism is simple of design and effective in operation. Figure 2 shows its principal parts.

Failure to Start. Should pulling the tone arm to the right and then placing the sound box on the record fail to start the motor, it may be due to:

(a) Improper location of base plate. Loosen the screws A, B, and C and shift position of mechanism counter-clockwise until proper operation is secured.

(b) Worn or rounded surfaces at point D. Square these points with a small file.

(c) Insufficient tension at spring E. Remove a few turns or replace spring.

Failure to Trip. Should the mechanism fail to stop the motor at the end of a Victor record having the eccentric groove, check the following:

(a) Improperly adjusted base plate. Loosen screws A, B, and C and shift the mechanism clockwise until proper operation is obtained.

(b) Loose or improperly adjusted latch plate.

(c) Insufficient tension at spring F. Remove several turns or replace spring.

Tripping during Operation. Premature tripping during the operation of a record may be caused by:

(a) Binding at bearing G. Clean and lubricate this bearing.

(b) Insufficient bite at point D. Loosen the screws A, B, and C and adjust the base plate so that a larger bite is obtained at point D.

MOTOR

The motor used in Model 2-65 is of simple design and will give excellent performance. If kept clean and properly lubricated, little service attention will be required. The following points may prove useful when it is necessary to effect repairs.

Removing Motor from Cabinet. To remove the motor from the cabinet proceed as follows:

(a) Unscrew the spindle cap and remove the turntable.

(b) Remove the eight machine screws that hold the motor board in place. The sound deflector is also removed.

(c) Remove the three motor mounting screws, together with the one holding the speed regulator lever. Remove this lever. The motor board may now be turned over and the motor pulled clear and placed in a position convenient for work. The various parts are

easy of access and adjustments or replacements are simple to make.

Changing Motor Springs. Should a spring break and require replacement the best method to make a repair is to replace the entire spring barrel. While the cost of the spring barrel is greater than that of the spring alone, the saving in labor will usually justify such replacement. Unless the serviceman is experienced in handling springs of this type, the following directions should be followed carefully:

(a) Disassemble the motor and remove the spring barrel. Remove the winding gear.

(b) Place the gear flat on a piece of metal and file off the ends of the six rivets. Remove the rivets and gear.

(c) Place the palm of the right hand over the closed end of the barrel, making sure that the fingers do not protrude beyond the open side. Firmly hold the barrel, open side downward over a large can or barrel. With the left hand pull the

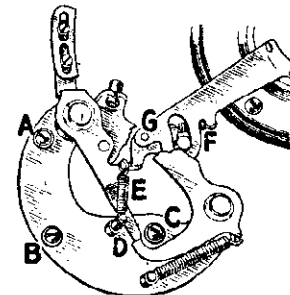


Figure 2—Automatic Stop Mechanism

center turns of the spring out. As soon as the spring starts, pull the left hand clear of the can holding the spring barrel firmly until the spring is entirely clear.

(d) The new spring is furnished coiled and with a heavy wire clamp. Hit the spring flat on a table thereby driving the clamp to one edge of the spring. Grasp the exposed part of the spring firmly with the right hand and pull the clamp off with the left hand. Allow the spring to gradually release its tension in the right hand and then unwind it completely.

(e) Place the hooked end of the spring over the barrel hook and wind the spring into the barrel toward the center. Be careful to push each turn completely inside the barrel before winding on the next turn.


(f) Place a tablespoonful of spring lubricant between the spring leaves and in the center of the spring.

(g) Place the gear in position and rivet it with six rivets to the spring barrel. Use a small punch for flattening the ends of the rivets. Place the gear on a flat surface while re-riveting the barrel to it.

(h) Reassemble the motor in the reverse manner of that used to disassemble it.

Winding Shaft Binding. A heavy jar may cause the motor to shift slightly on the motor board and produce binding of the winding shaft against the motor board. Loosening the motor mounting screws and shifting the motor to its proper position will correct this condition.


R. C. A. VICTOR CO., INC. MODEL Photophone PG-32 Schematic

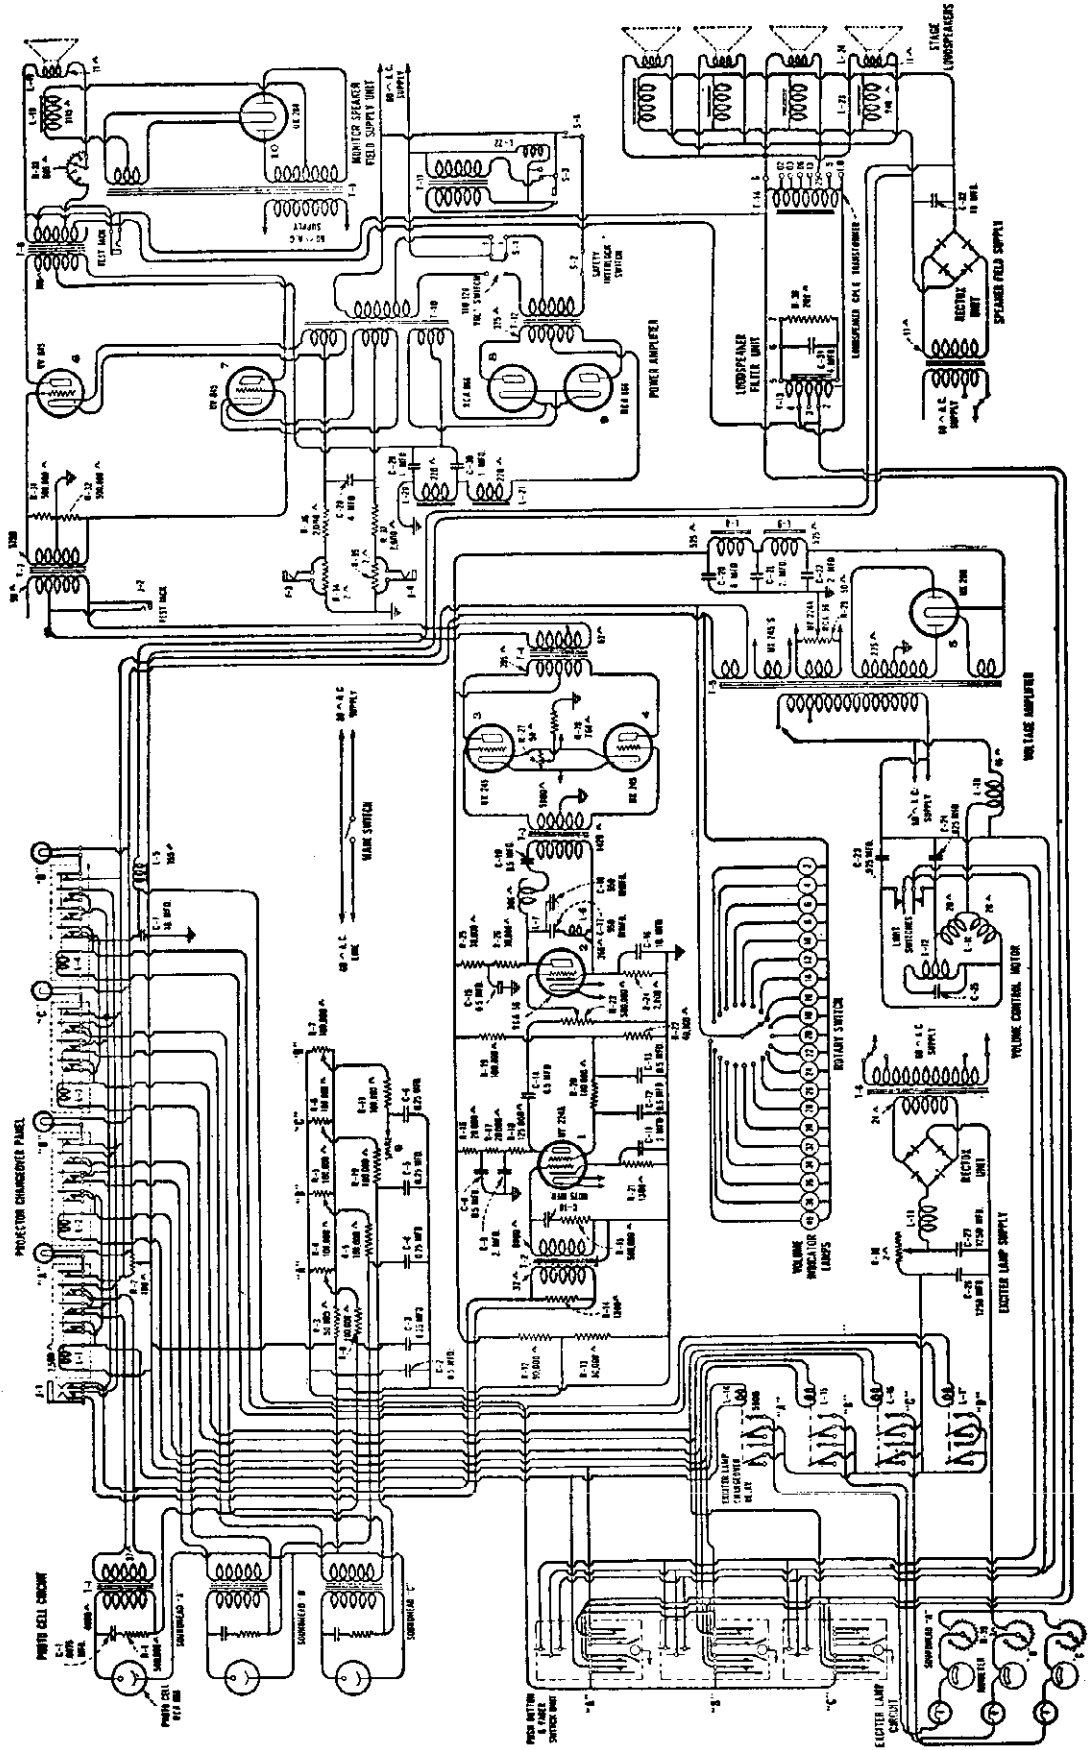

PG-32 Schematic Circuit Diagram

MODEL Photophone PG-32
Change Over Panel
Chassis


R. C. A. VICTOR CO., INC.

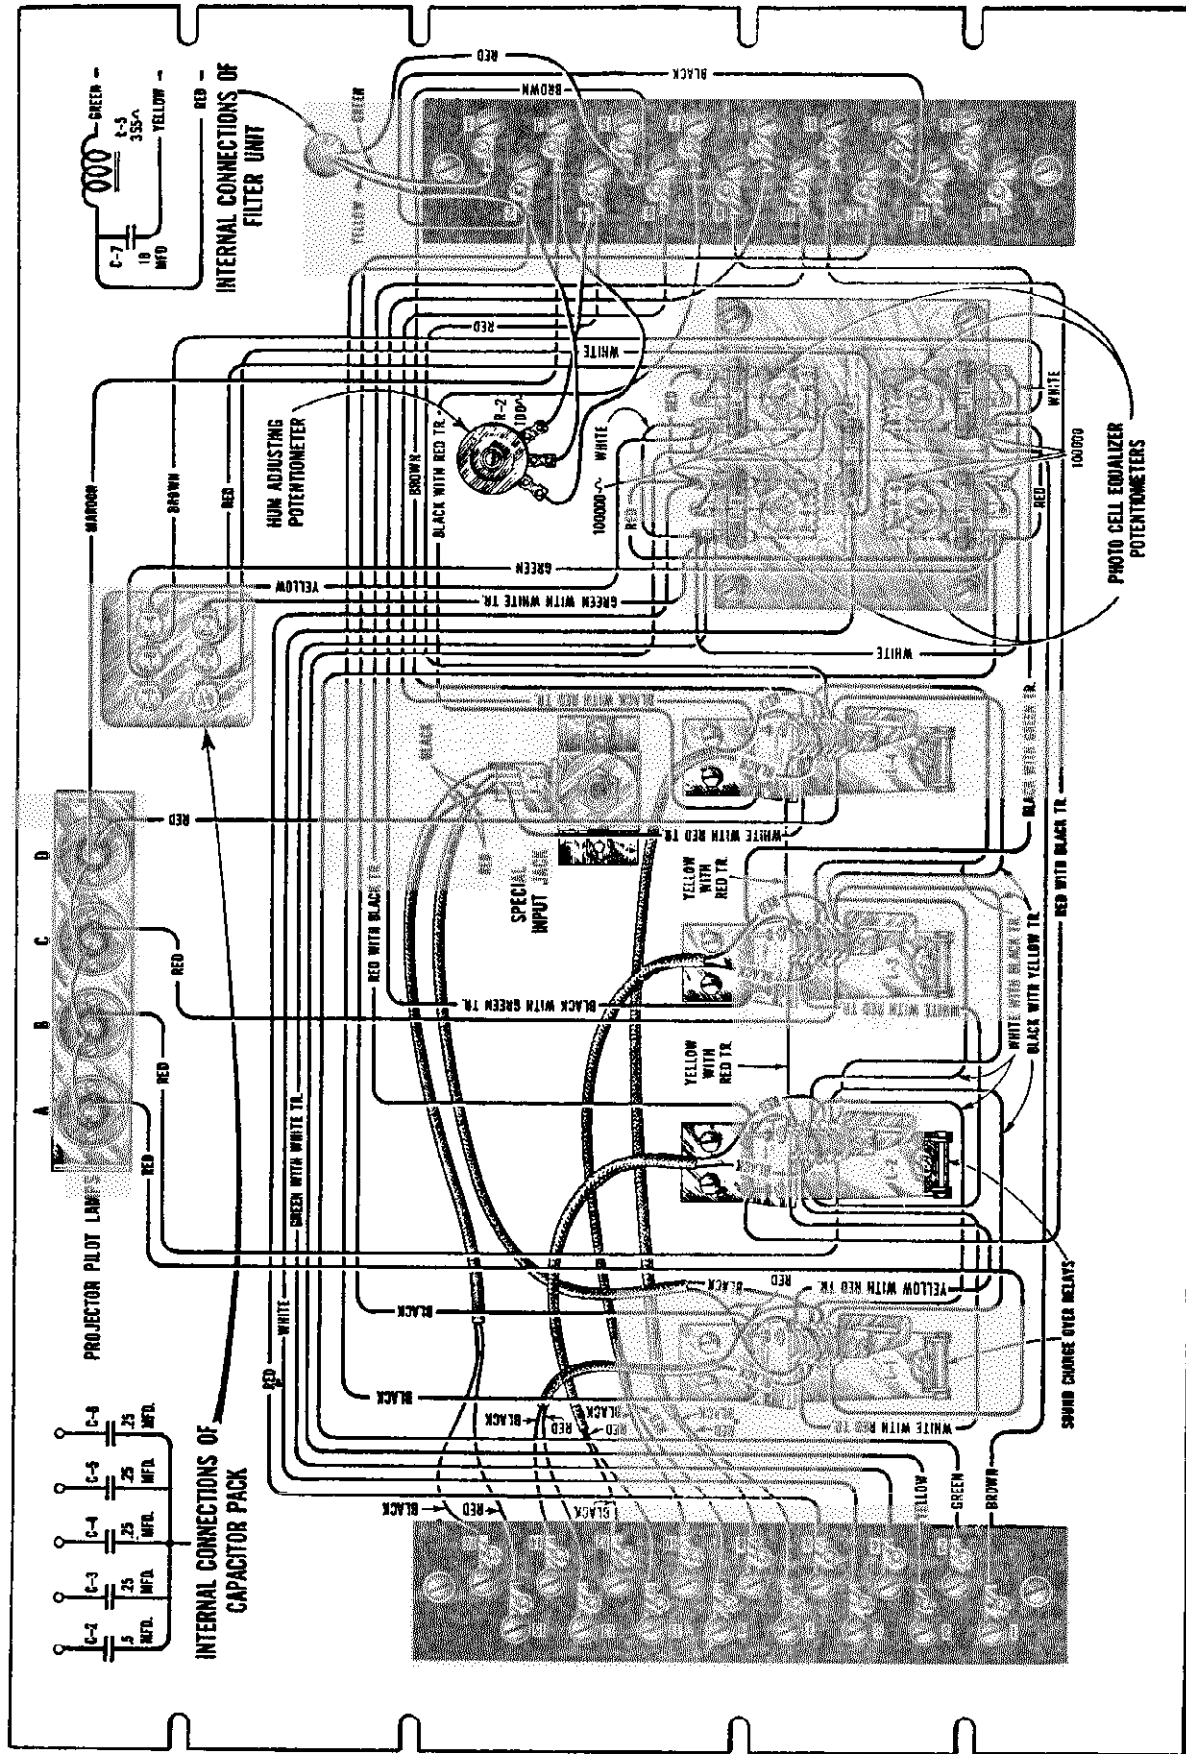

— Projector Change-Over Panel Wiring

R. C. A. VICTOR CO., INC.


MODEL Photophone PG-32
Voltage Amplifier
Chassis

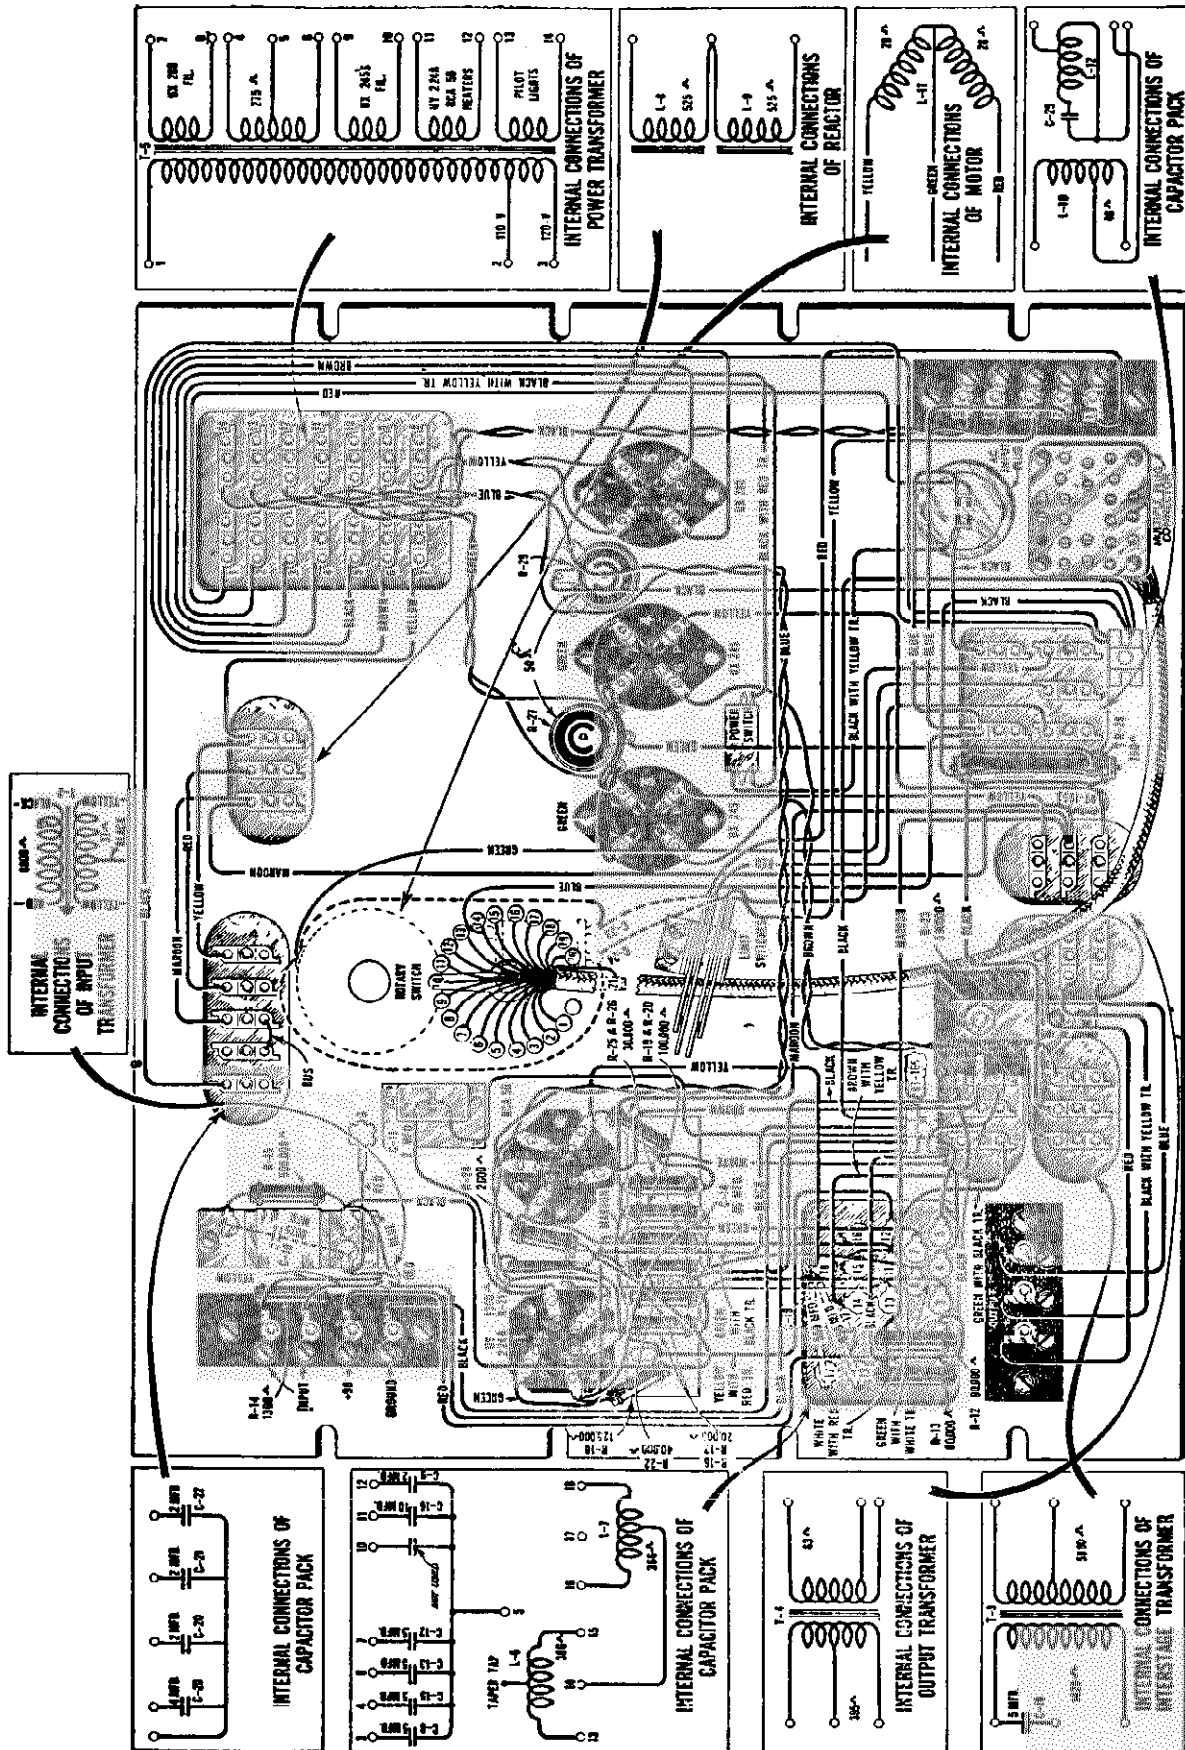

Voltage Amplifier Panel Wiring





R. C. A. VICTOR CO., INC.

MODEL Photophone PG-3
Schematic

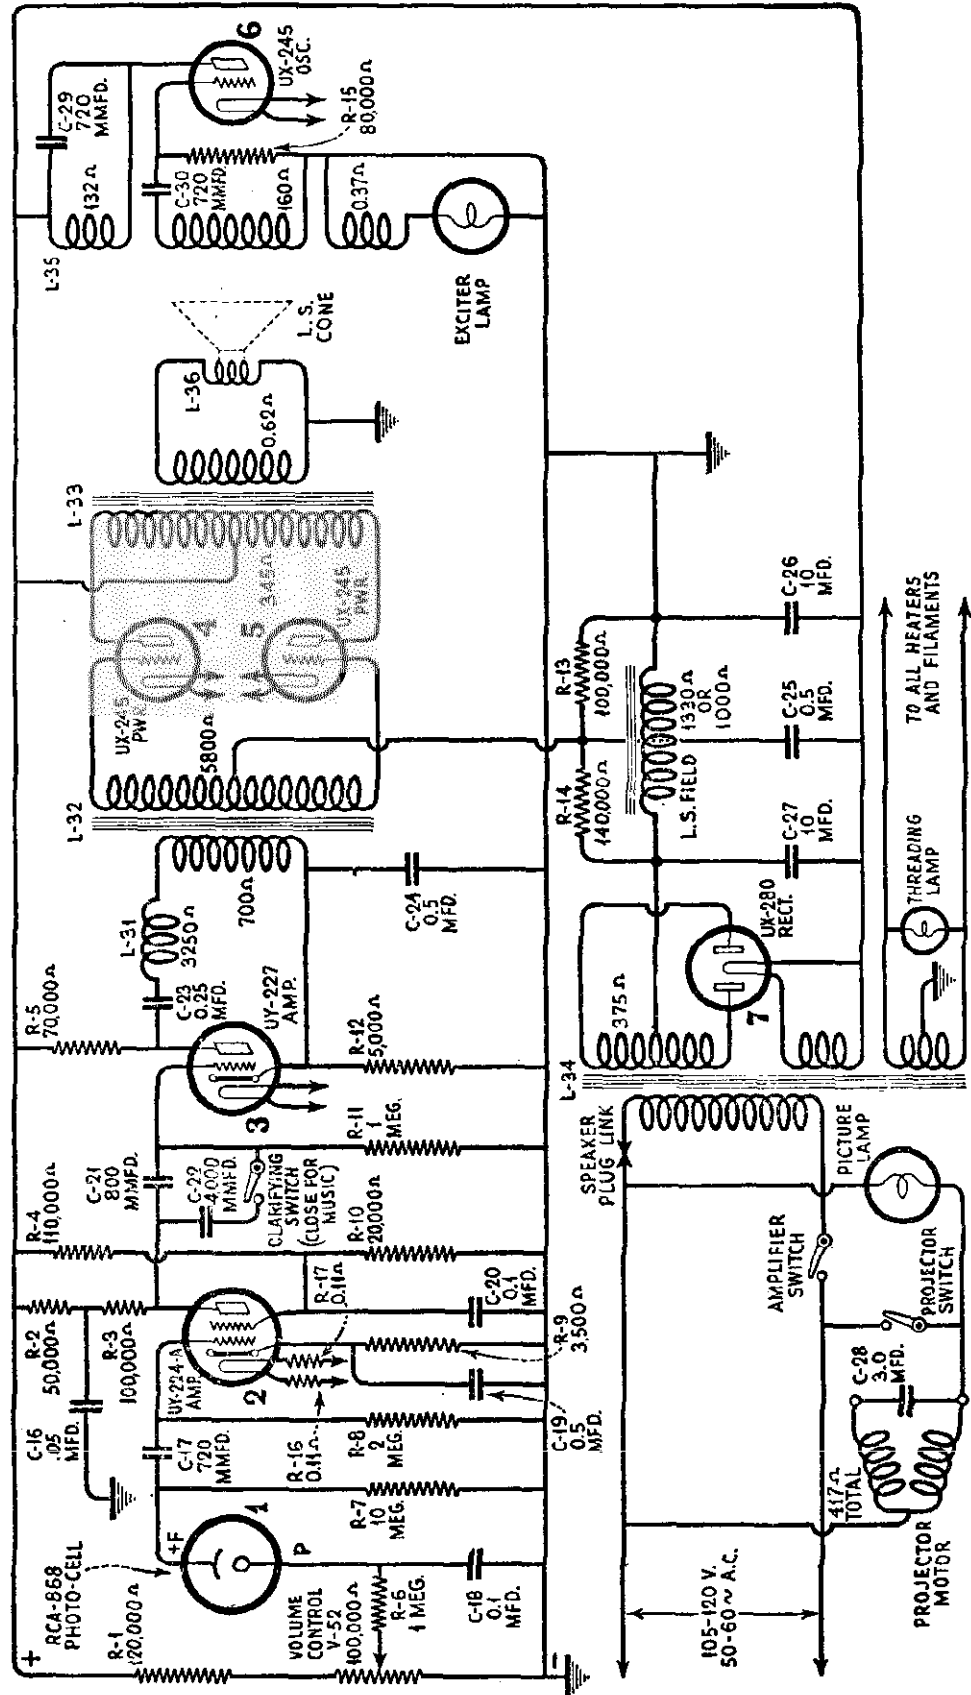

**MODEL Photophone PG-38
Chassis**

R. C. A. VICTOR CO., INC.

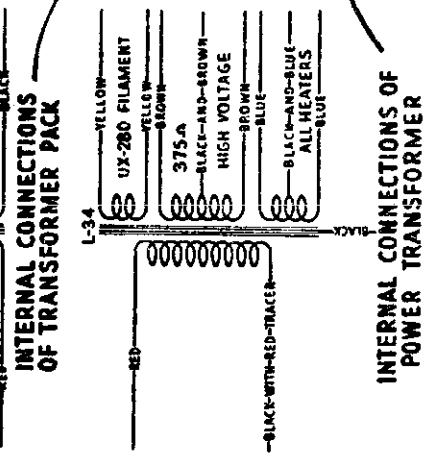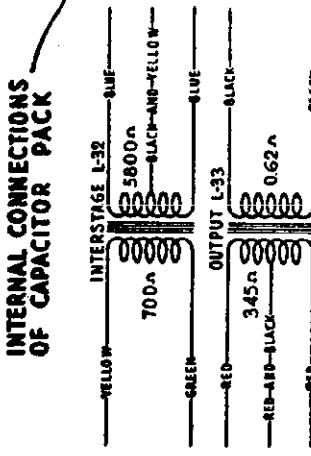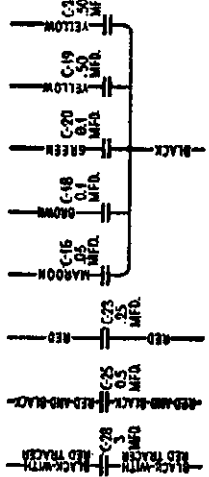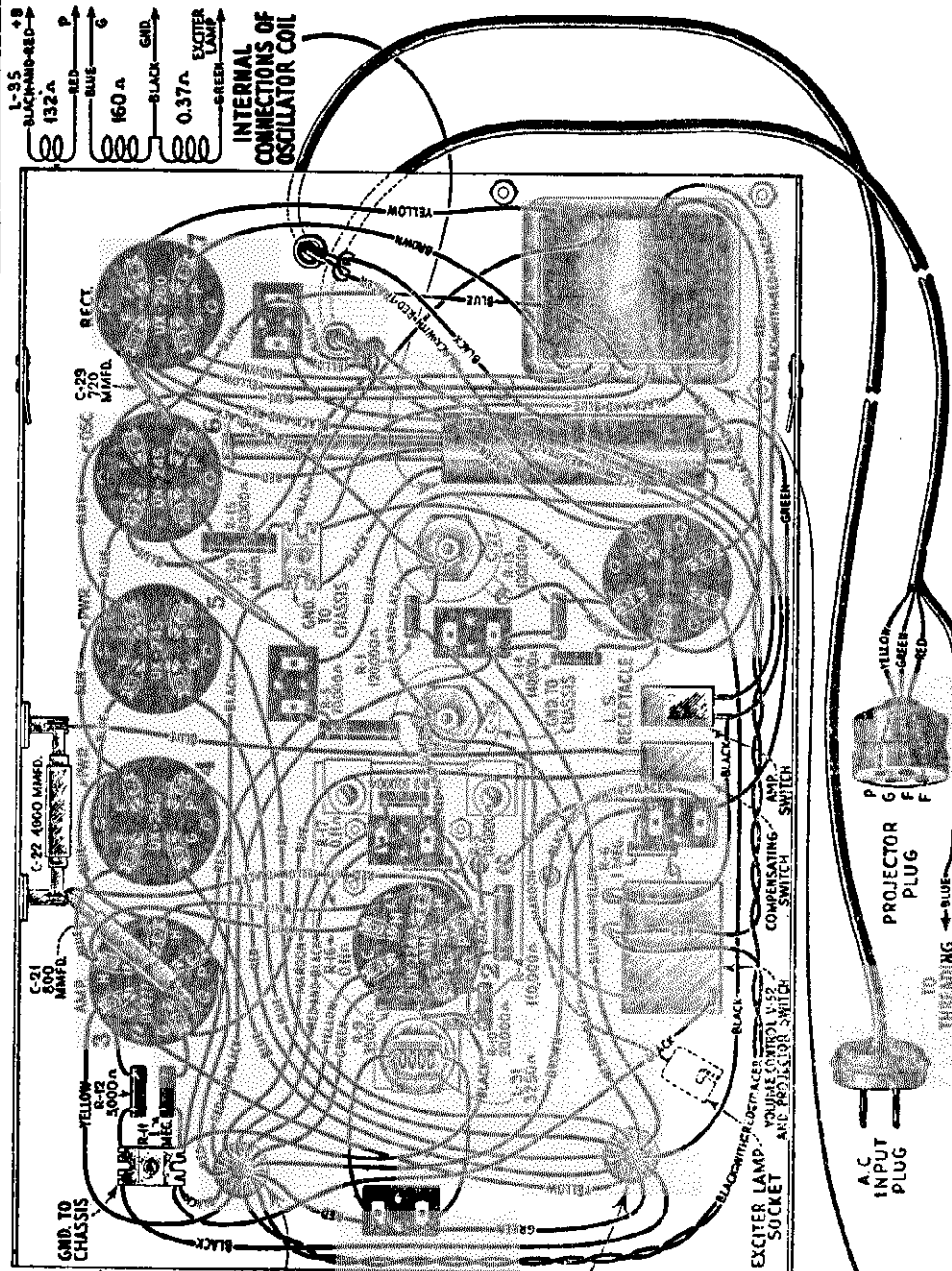


Radiotron No.	Control Grid to Cathode or Filament Volts	Screen Grid to Cathode or Filament Volts	Plate to Cathode or Filament Volts	Plate Current M. A.	Filament or Heater Volts
2-UY-224-A	0.1	28	150	0.5	2.3
3-UY-227	1.5	-	110	2.0	2.5
4-UX-245	35	-	240	30	2.5
5-UX-245	35	-	240	30	2.5
6-UX-245 O _{hec}	75	-	240	25	2.5


**Volume Control at Minimum
115 Volt Line**

R. C. A. VICTOR CO., INC.

MODEL Photophone PK-25
Schematic
Chassis

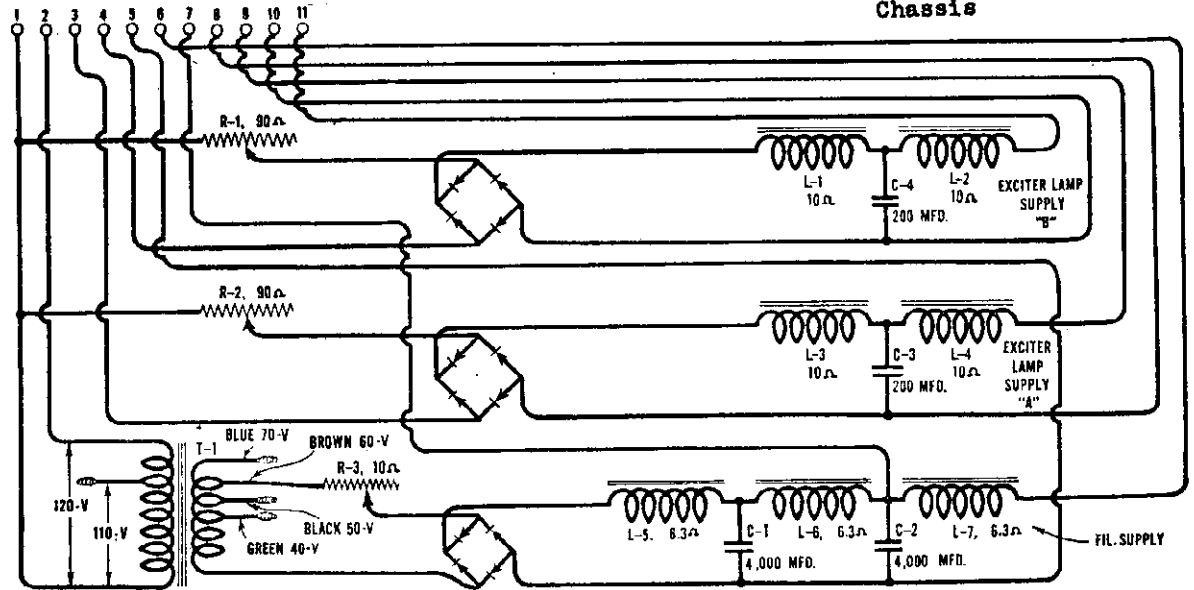


SCHEMATIC DIAGRAM PK-25 UNIT

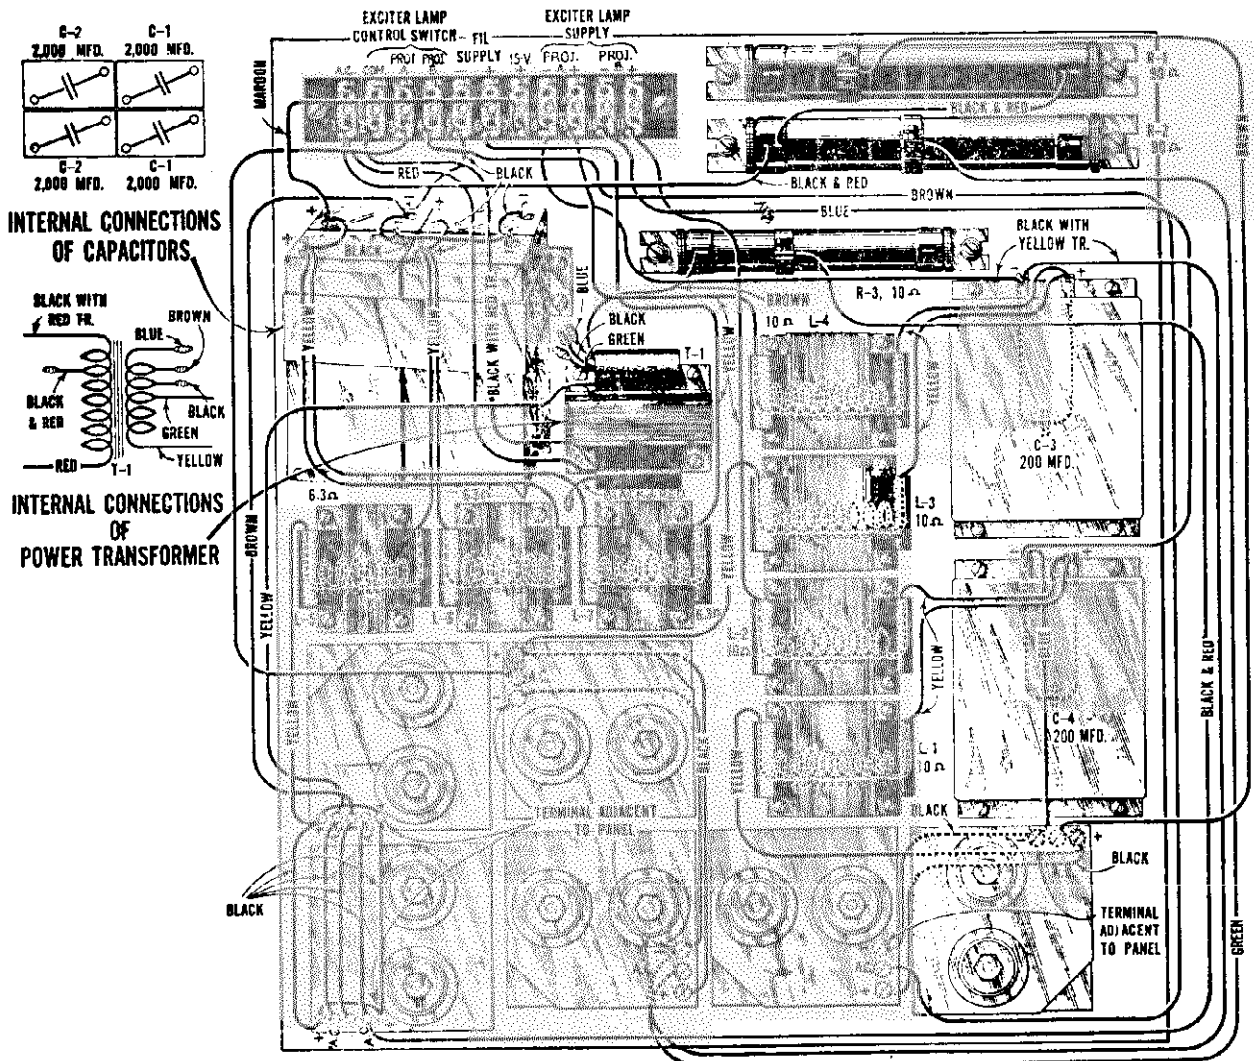


WIRING DIAGRAM PK-25 UNIT

RADIO RECEPTOR CO.

MODEL PMA-1
MODEL P-50-W

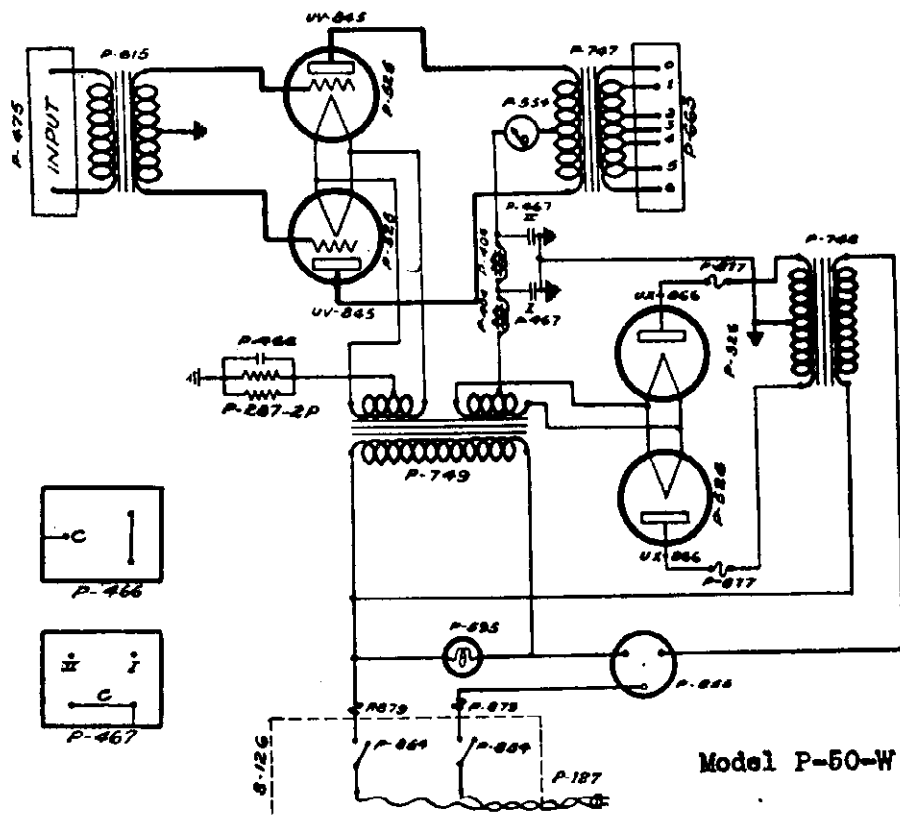




Model P-50-W

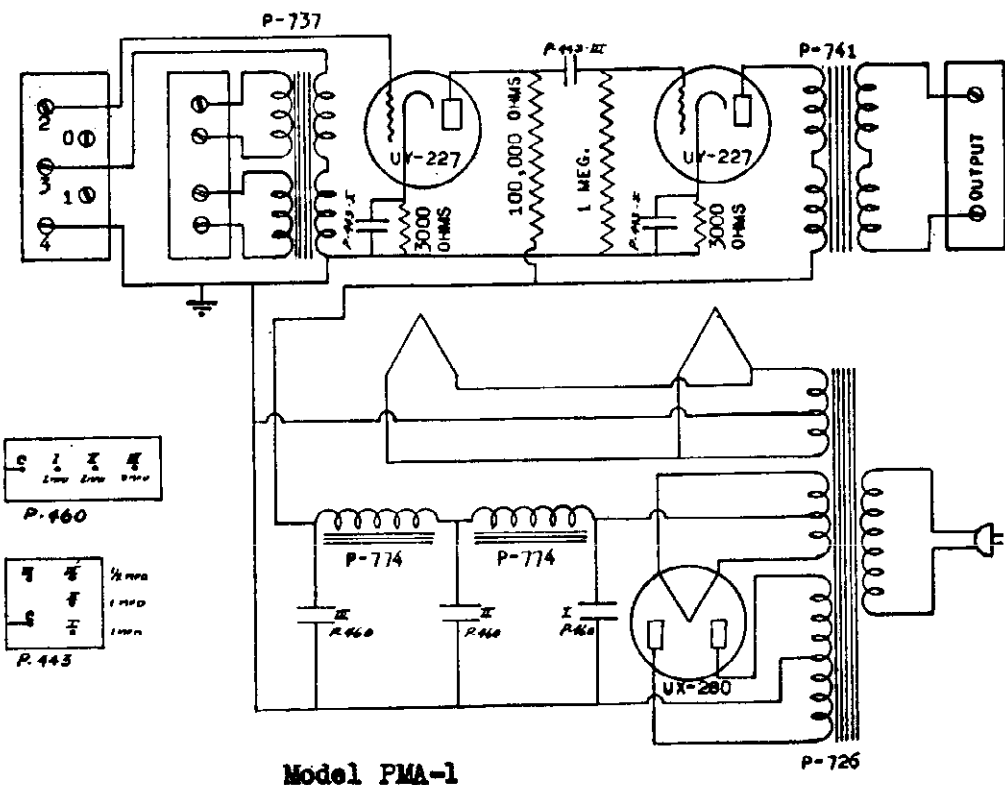

Model PMA-1



RAD OLEK

MODEL Monroe-Marvelo 30
 MODEL Marvelo "6" Midget
 MODEL Radolek 5 Tube Super

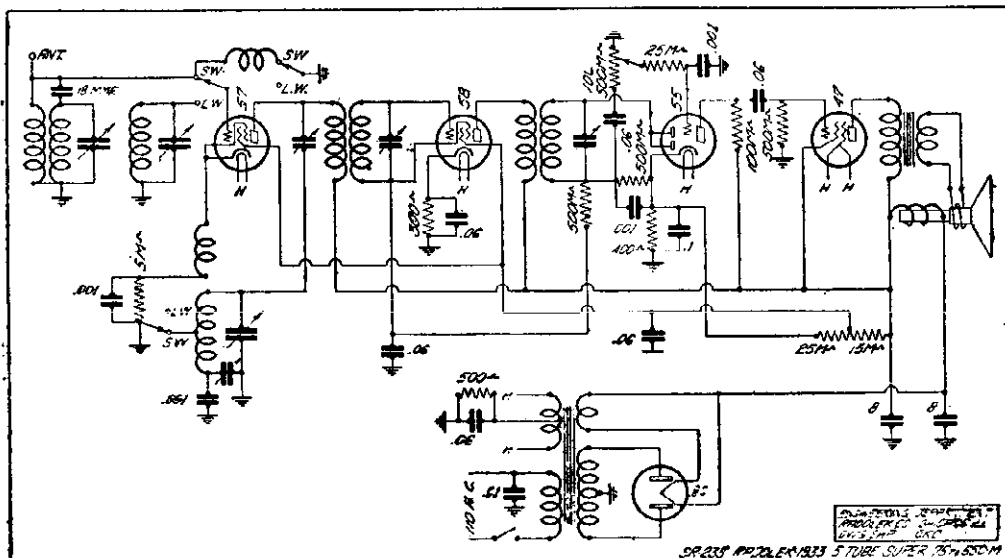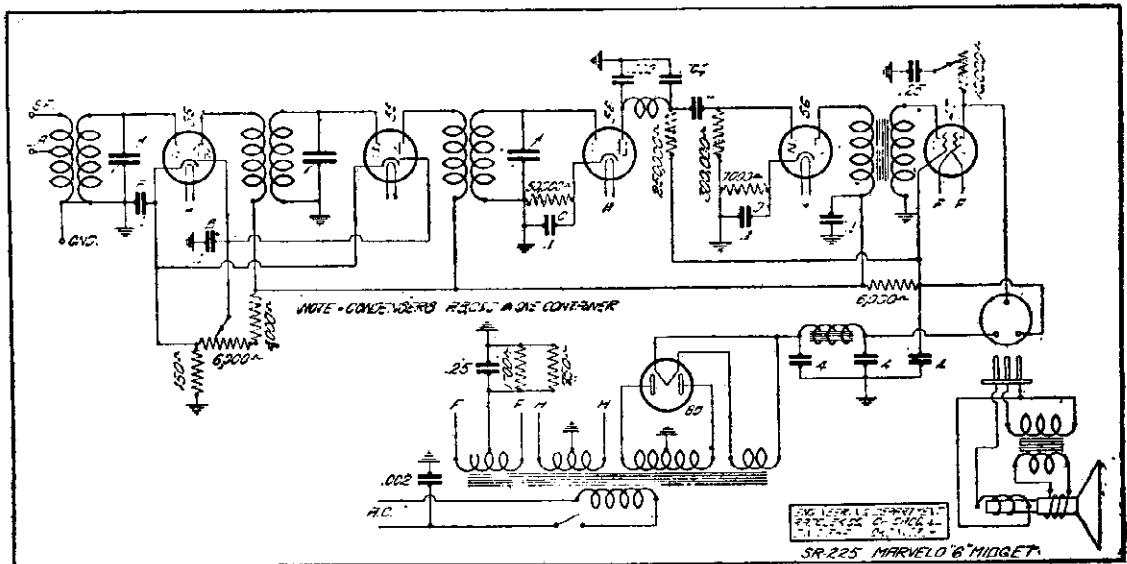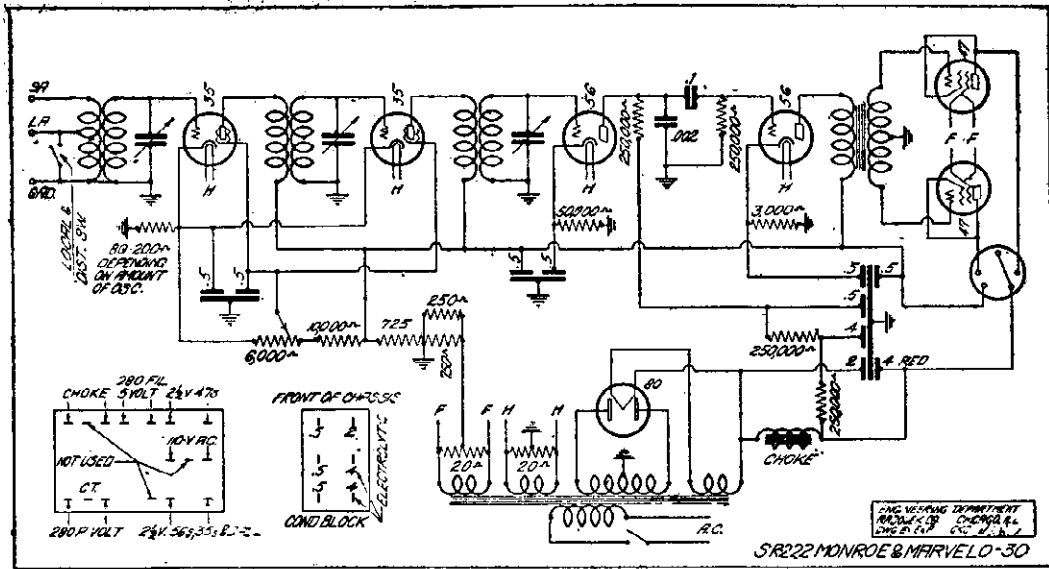




READRITE METER WORKS

MODEL 400 Tube Tester
MODEL 405 Tube Checker

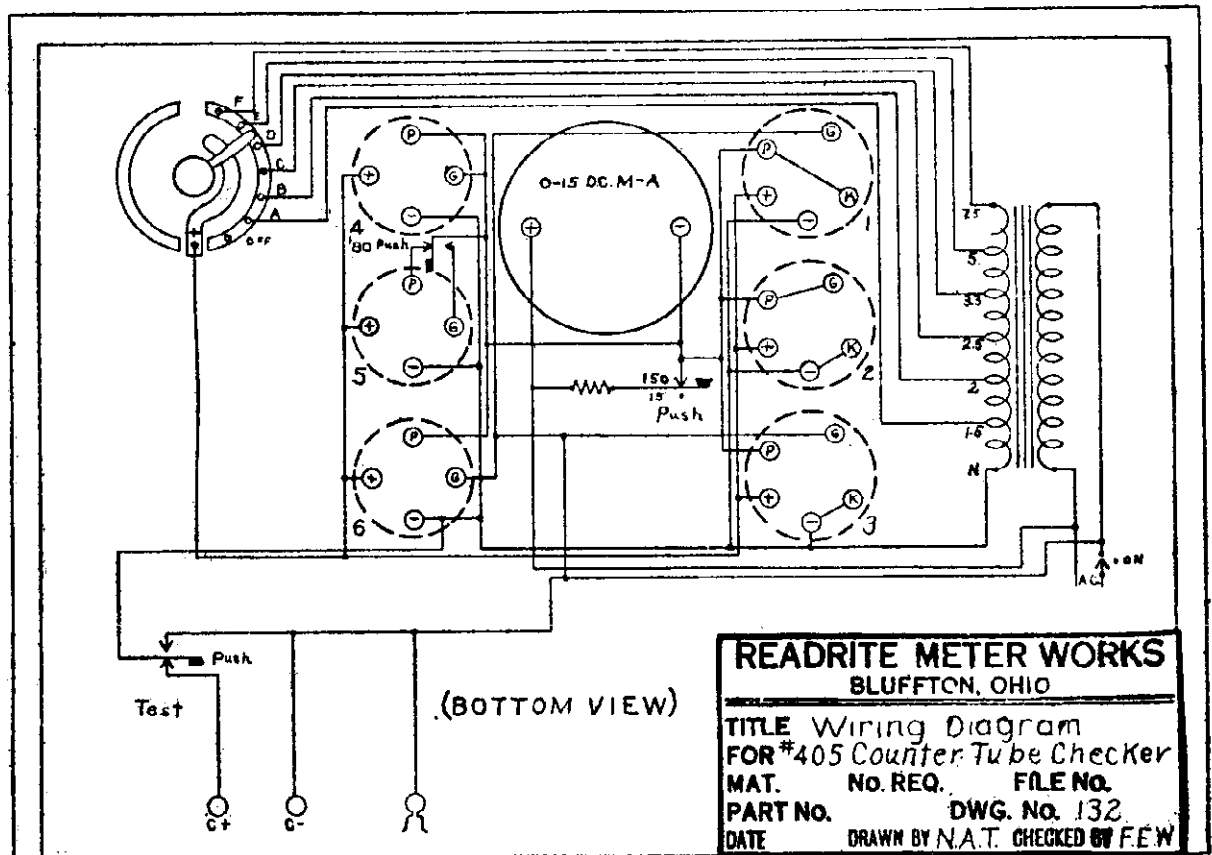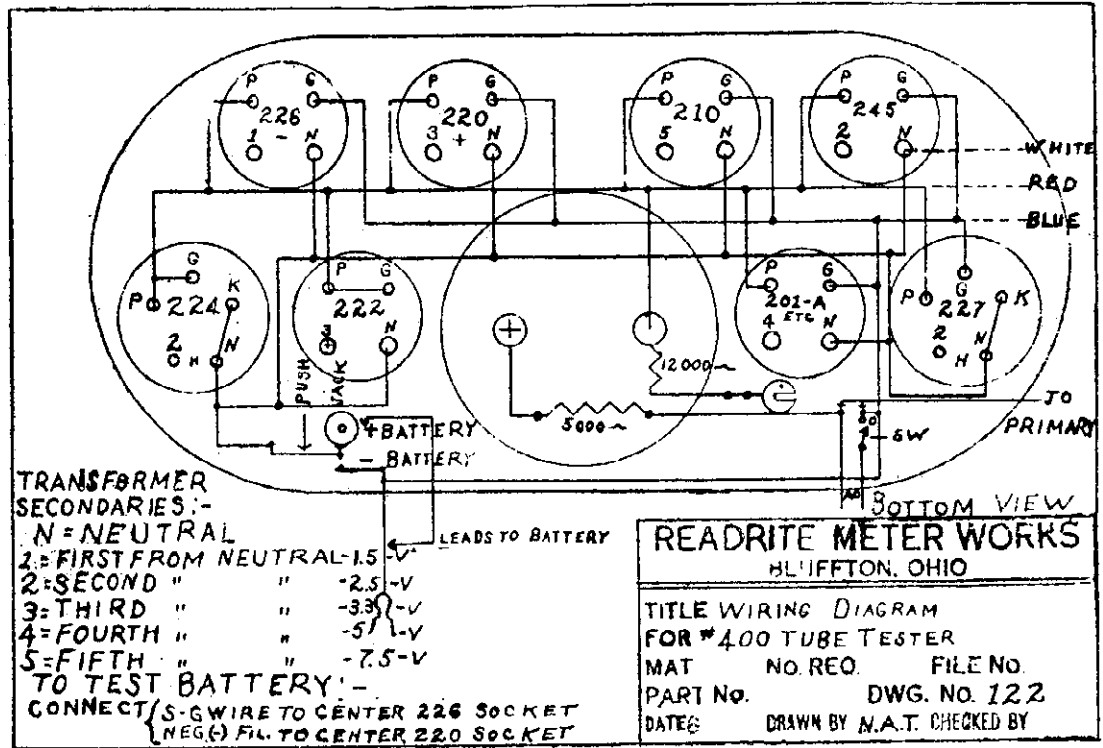

MODEL 1927 Infradyne
 MODEL 1928 Infradyne
 MODEL Remler 40 KC.



REMLER COMPANY, LTD.

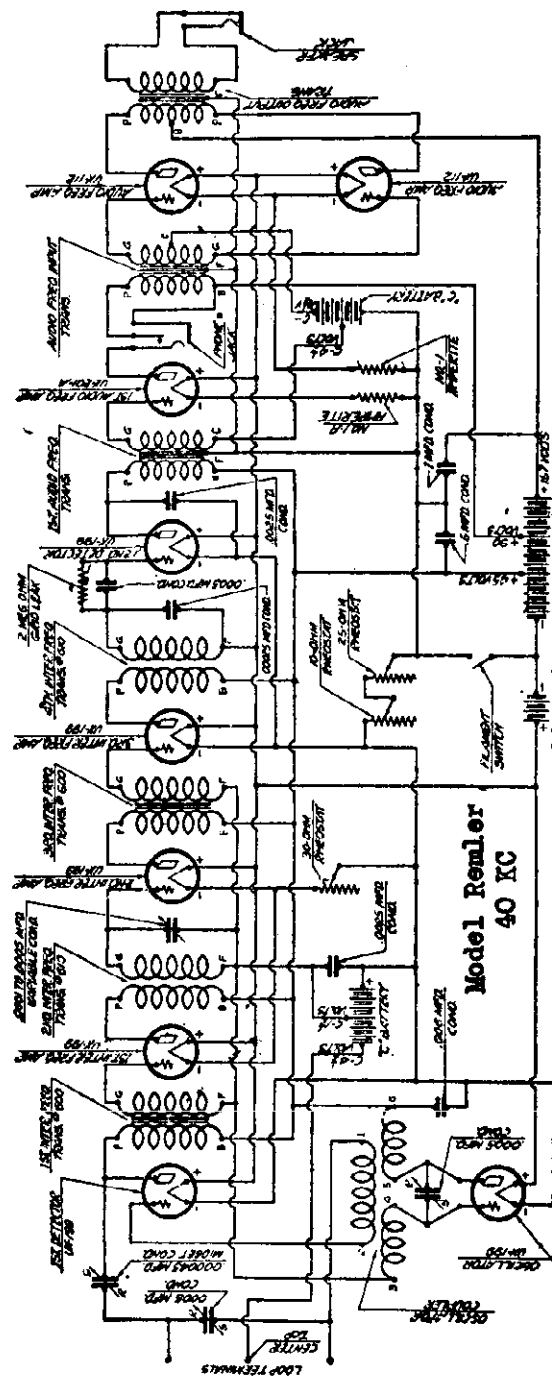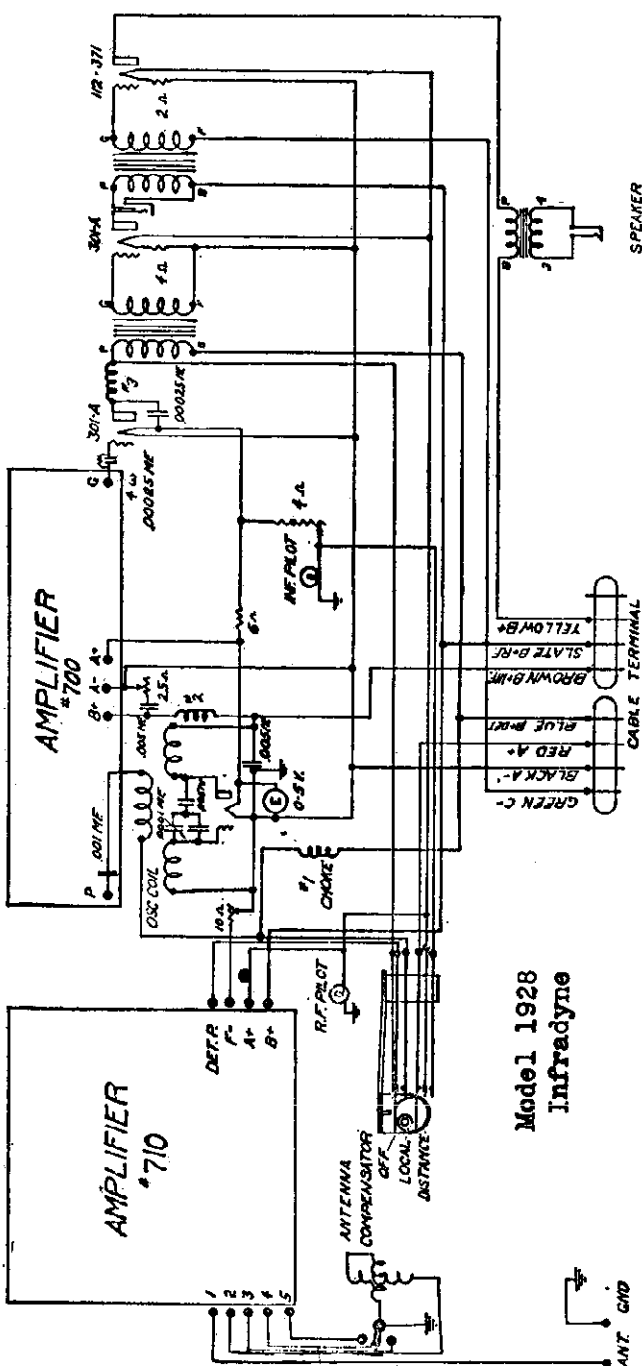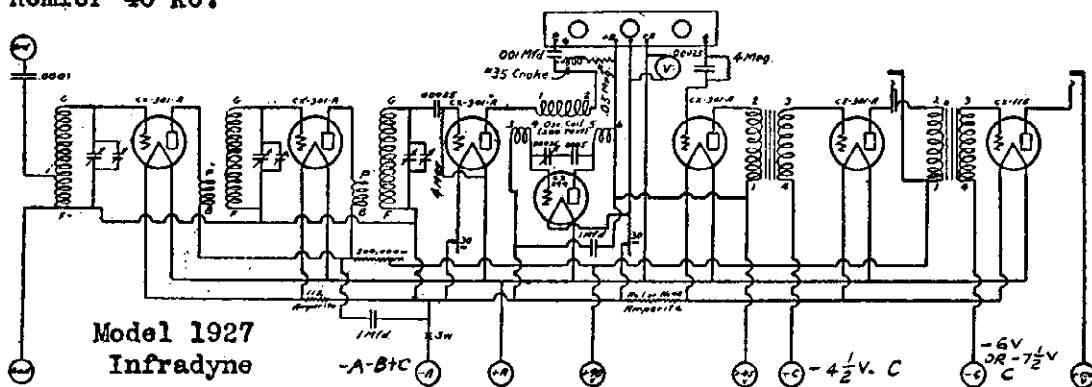

Schematic Wiring Diagram of the Remler 45 K. C. Super-Heterodyne Receiver, Using the Rice Split-Loop to Obtain Regeneration.

MODEL 10-3
MODEL 15-3

REMLER COMPANY, LTD.

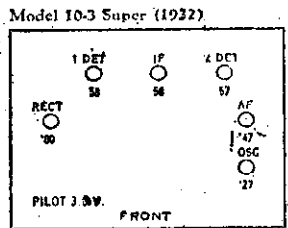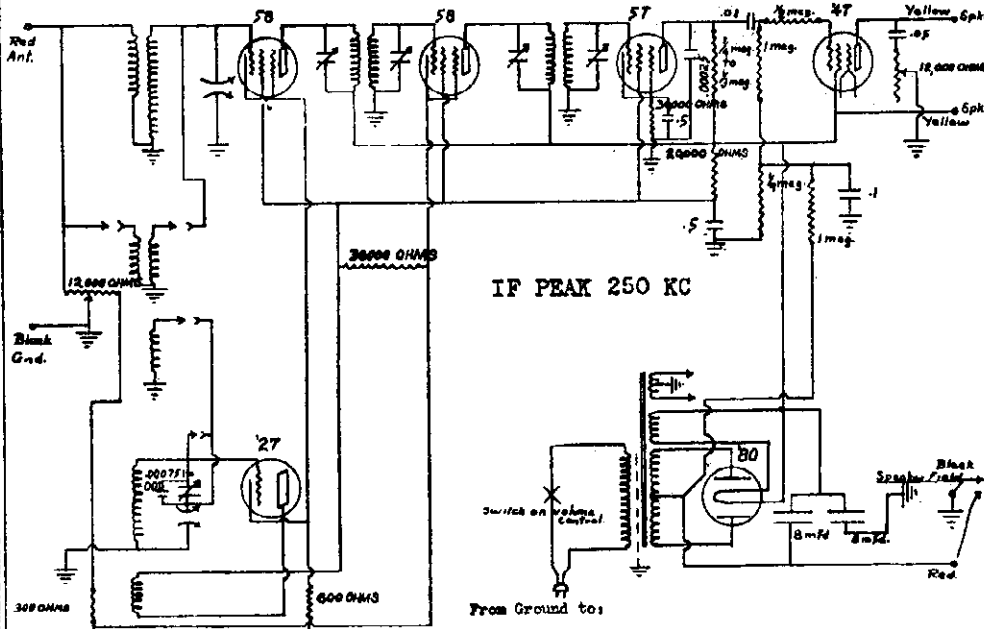

IF PEAK 250 KC

Model 10-3
A.C. Voltages:
Line --- 120 volts
Heater filaments --- 2.5
Power tube filament --- 2.5
Rectifier filament --- 5.0


From Ground to:

#580 Rectifier tube filament	235 volts
#547 Power screen grid	235
#547 Power plate	230
#547 Power grid	17
#58 Mixer plate	235
#58 screen grid	60
#58 cathode	4
#58 Intermediate Plate	235
#58 screen grid	60
#58 cathode	2 to 20 volts

#57 Detector Tube plate --- 120 volts
#57 screen grid --- 60
#57 cathode --- 3.4
#527 Oscillator Tube plate --- 60
#527 cathode --- 4

Due to small current, meter readings will be inaccurate on detector plate and power tube grid.

Speaker field (red lead) --- 105 volts negative.

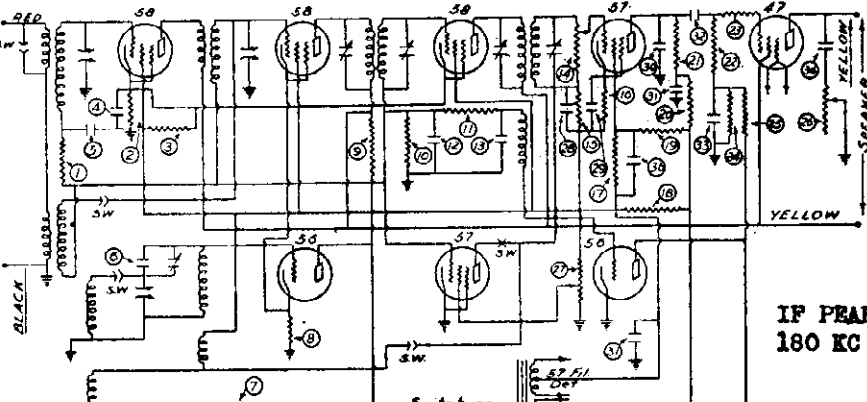

IF PEAK 180 KC

CONDENSER DATA		RESISTOR DATA	
Number	Capacity	Number	Resistor
(4)(12)(31)(32)	.1	(25)(42)	1,000,000
(5) (34)	.05	(2)	150
(6) (13)	.01	(3)(16)	25,000
(7)	.002	(8)	500
(20)(23)(37)	.5	(3)(20)(17)	50,000
(30)	.00025	(11)(13)(1)	100,000
(31)	4 mfd	(14)(10)(27 var)	500,000
(32)	.02	(18)	20,000
(33)(35)	0 mfd	(19)(23)(24)(28)	250,000
		(26 var)	12,000

Model 15-3

Voltage readings for servicing purposes follows

D. C. VOLTAGES FROM GROUND:			
#52 Rectifier tube filament	280 volts	#56	cathode --- 5
#47 Power screen grid	260	#57 Detector screen grid	110
#47 Power plate	245	#57 Detector plate	135
#47 Power grid	18	#57 Detector cathode	90
#58 R.F. screen grid	95	#57 Noise suppressor tube plate	Var. 0-90
#58 R.F. plate	260	#57 Noise suppressor tube cathode	0
#58 R.F. cathode	2.5	#57 Noise suppressor screen grid	Var. 0-90
#58 Mixer screen grid	95	VOLTAGES:	
#58 Mixer plate	260	Line	120
#58 Mixer cathode	5	Heater Filaments	2.55
#58 Intermediate screen grid	95	Power tube filament	2.55
#58 Intermediate plate	260	Detector tube filament	2.5
#58 Intermediate cathode	2.5	Rectifier filament	2.5
#58 Oscillator plate	60		


Set the LOCAL - DISTANCE switch on DISTANCE and the wave-changing switch on LOW. With the 180 K.C. signal attenuated so low as to be just audible adjust the four controlling trimmers of the I.F. for maximum signal.

The two I.F. transformers and their trimmers are located in the upper right shield cans at the extreme left of the chassis.

To make the dial run true to its kilocycle markings, set the dial at or near 800 K.C. using an oscillator or a Broadcasting Station of known frequency. By tuning to an oscillator or station at or near 500 K.C. the dial may now be made to "track" by adjusting the radio set's oscillator series padding condenser. This is located next to the oscillator tube socket beneath the chassis but must be adjusted thru the hole in the chassis between the oscillator tube and the variable tuning condenser.

SAMSON ELECTRIC CO.

* Indicates Splice
 B - Black Y - Yellow
 R - Red G - Green

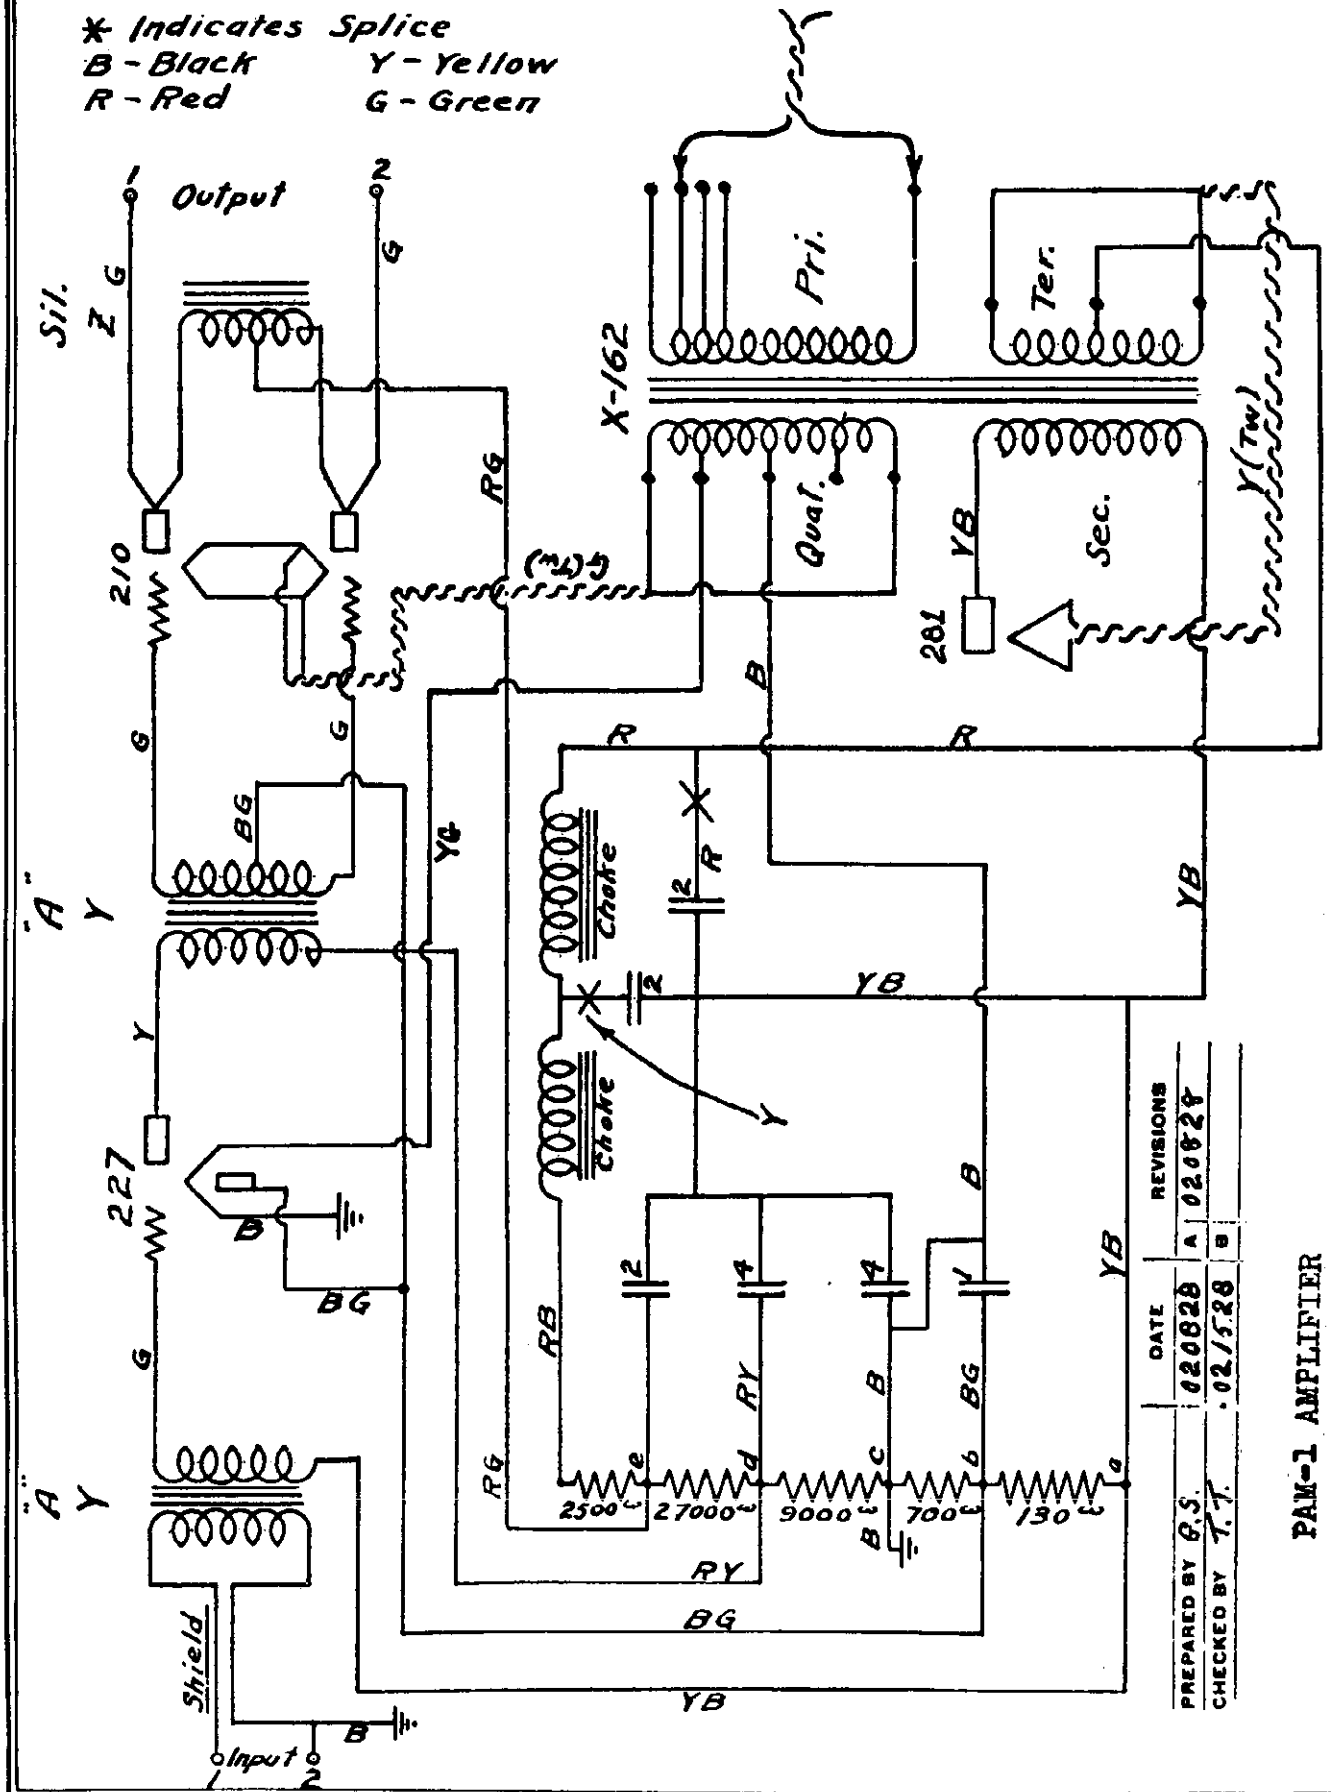



DATE	REVISIONS
020828	A 020828
02/5/28	B

PREPARED BY G.S.
 CHECKED BY T.T.


PAM-1 AMPLIFIER

MODEL PABC-2
 MODEL PABC-3
 MODEL PAM-5

SAMSON ELECTRIC CO.

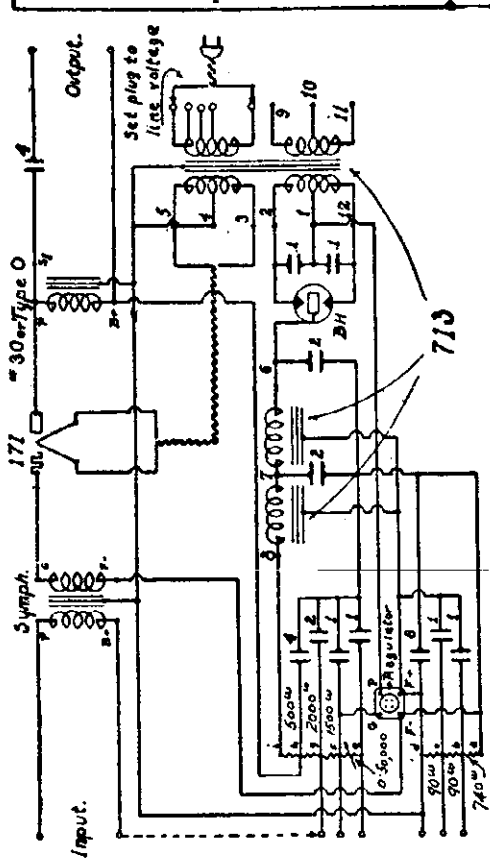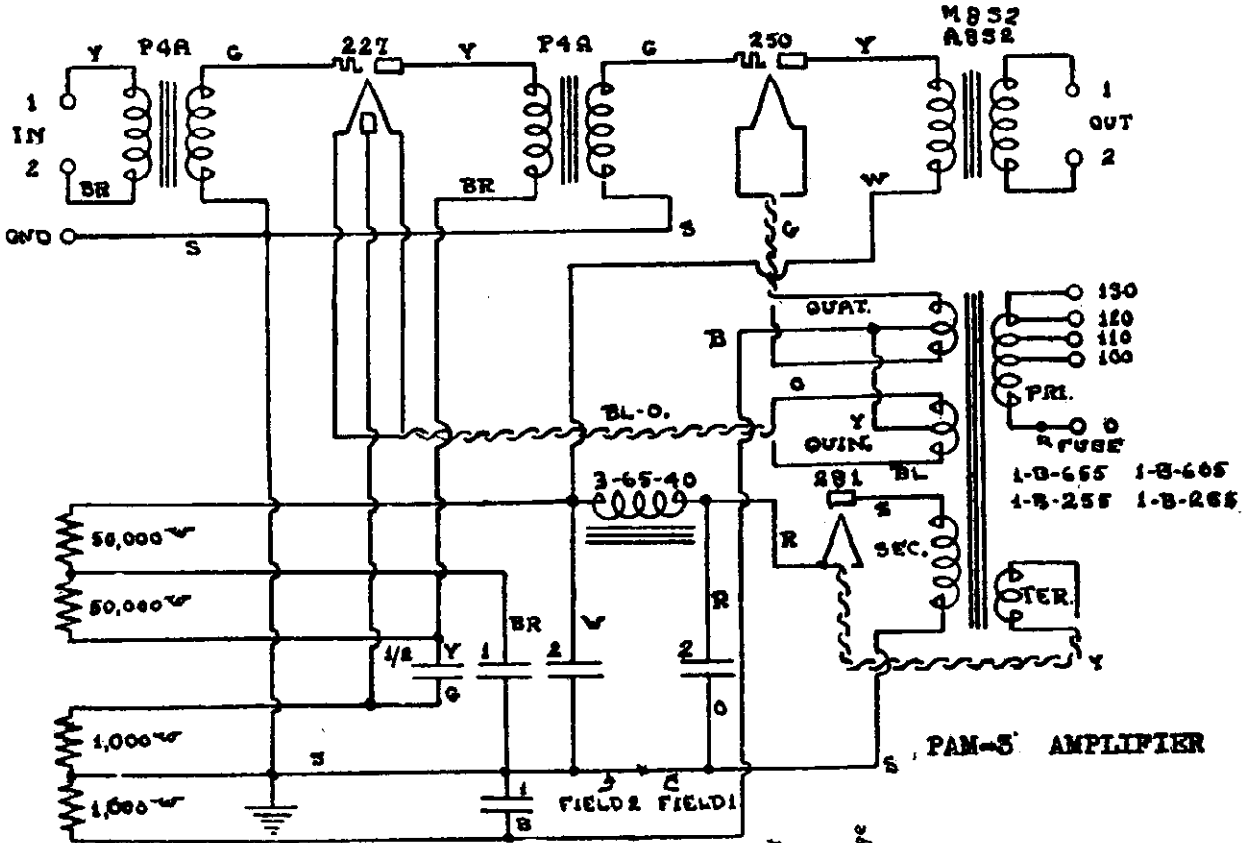


PABC-2 Schematic.

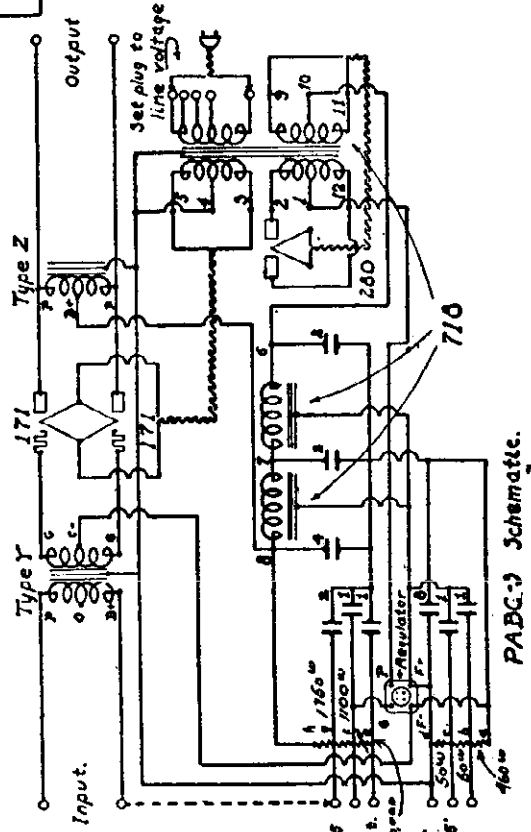


PABC-3 Schematic.

MODEL PAM-5
MODEL PAM-5-D

SAMSON ELECTRIC CO.

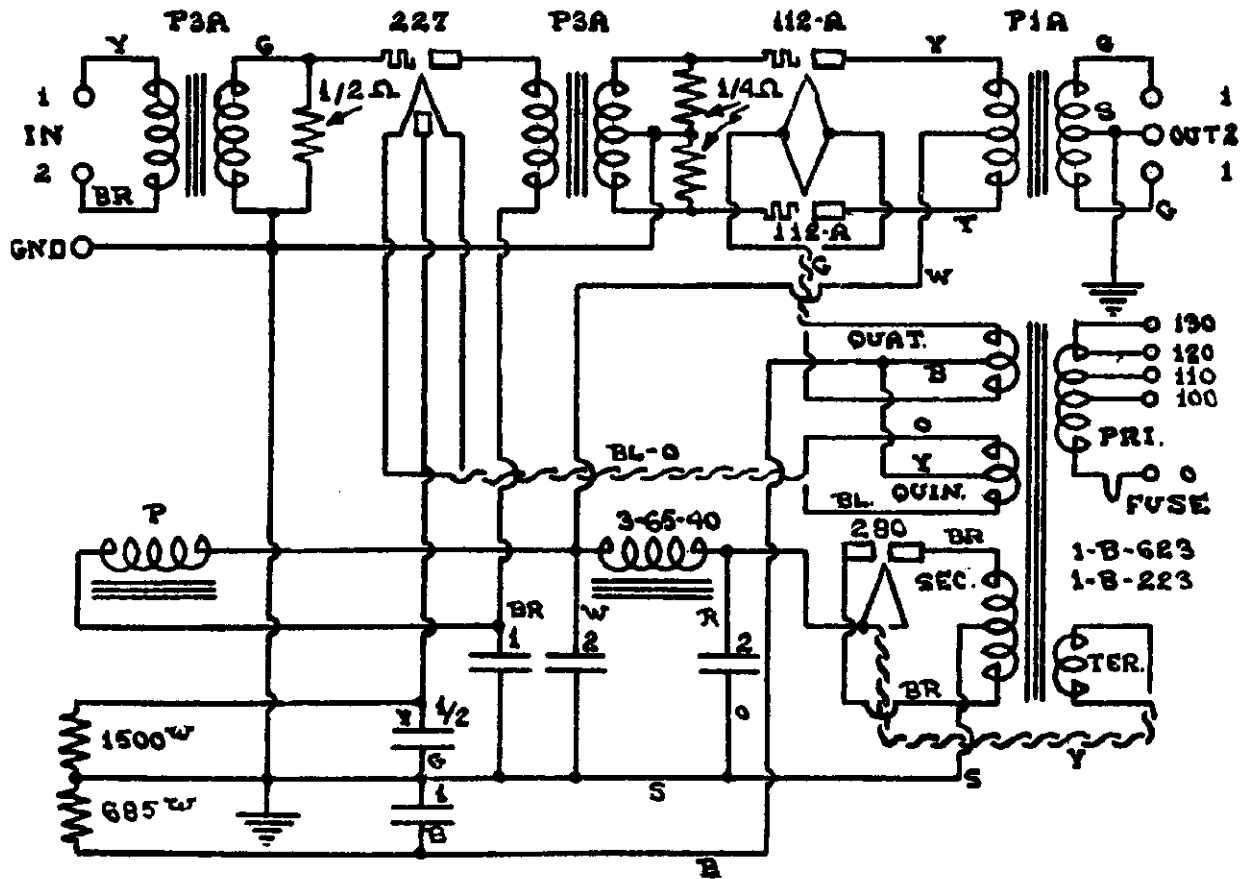

PAM-5 AMPLIFIER

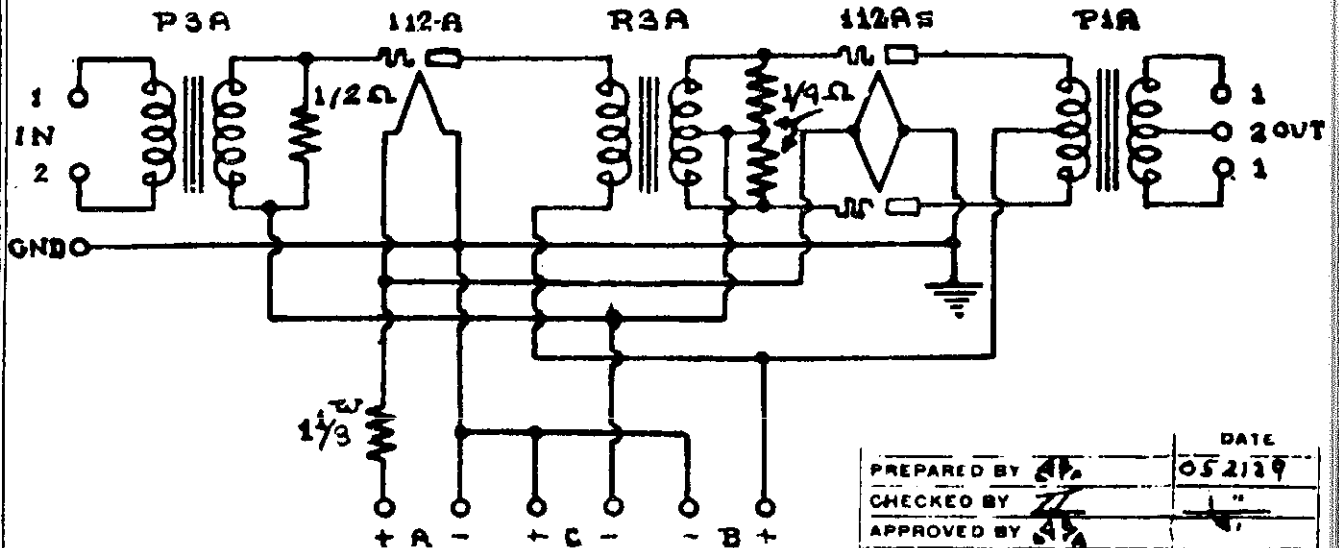


PAM-5-D AMPLIFIER

		DATE
PREPARED BY	AP	052129
CHECKED BY	ZZ	
APPROVED BY	AP	
FORM BY	E.W.B.	120529


SAMSON ELECTRIC CO.

MODEL PAM-8,18

MODEL PAM-9

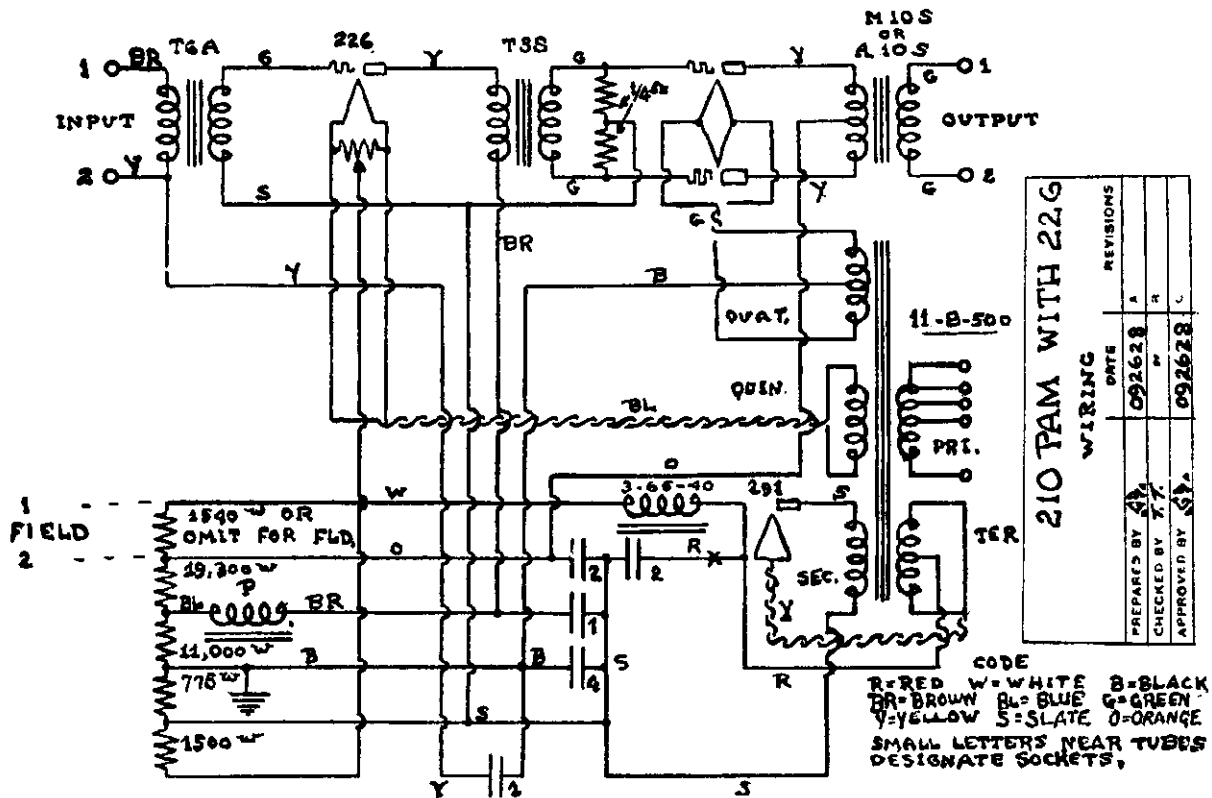


PAM-8 & PAM-18 AMPLIFIER

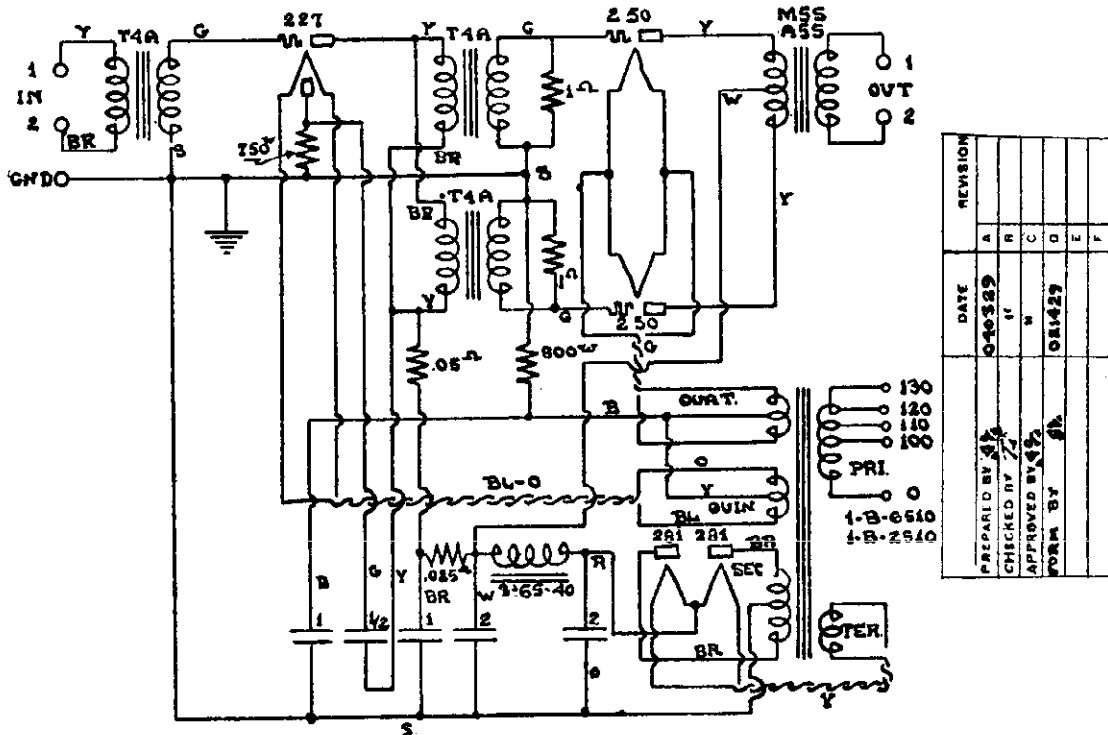

PAM-9 AMPLIFIER

MODEL PAM-11,12,13,14

SAMSON ELECTRIC CO.

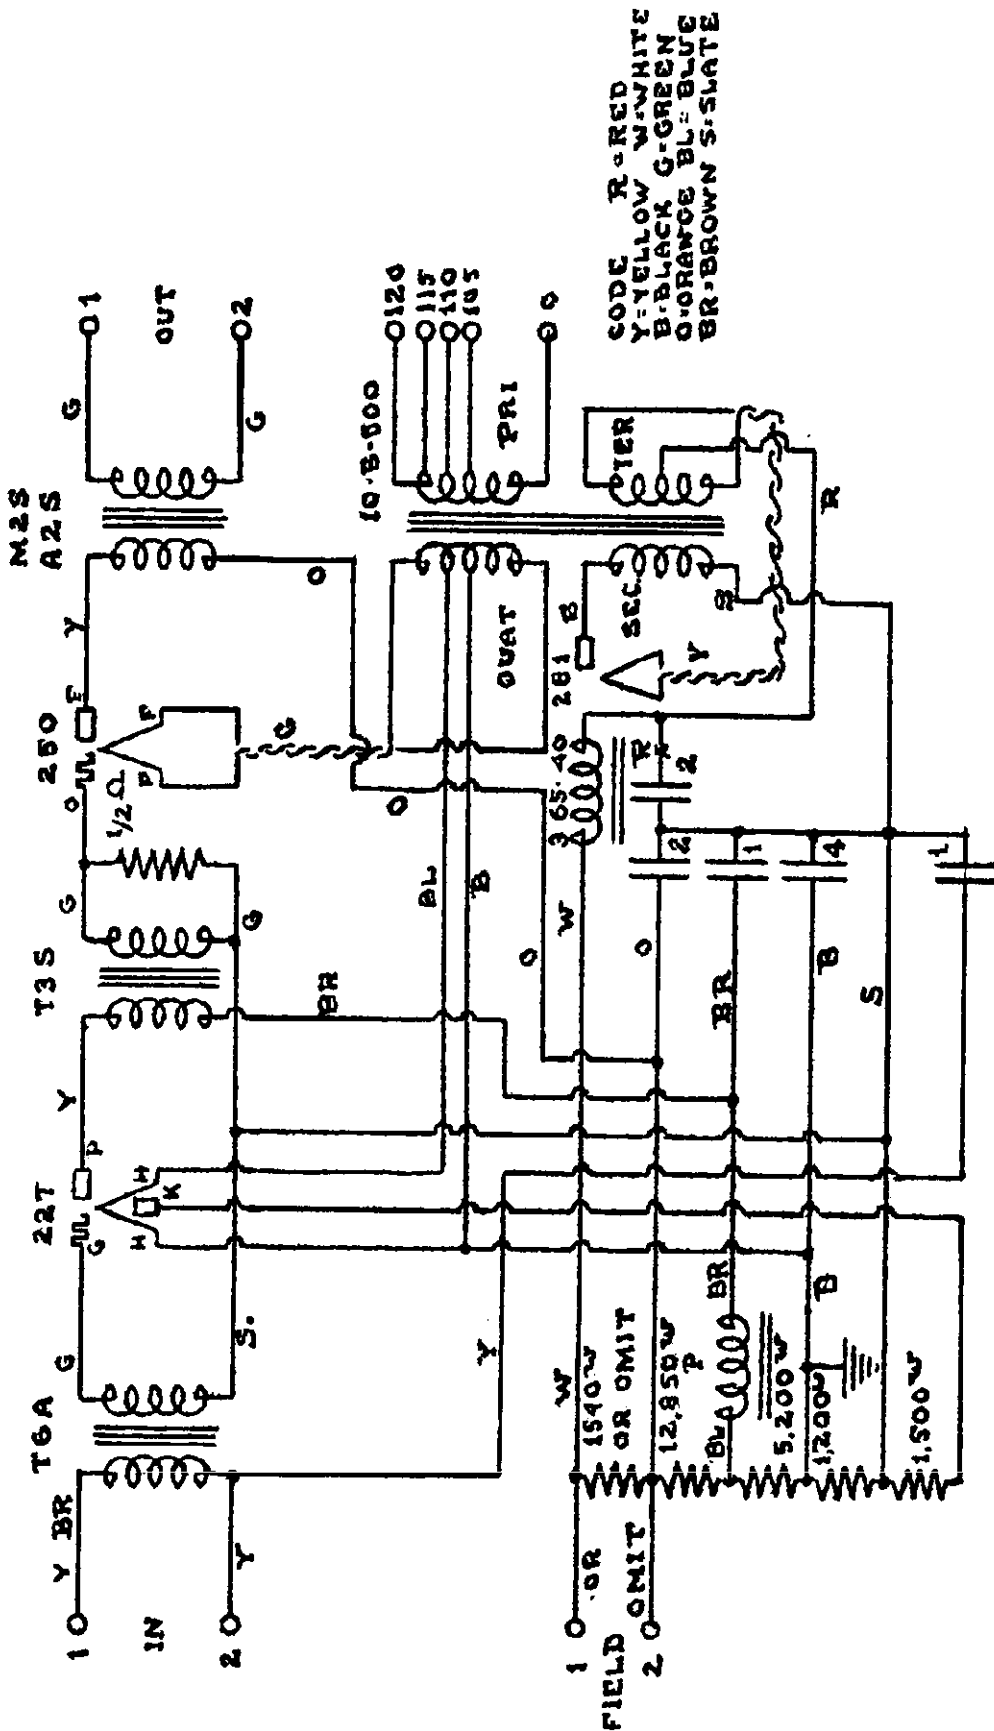

NOTE: SIMILAR JOB WITH 226 REQUIRES UX SOCKET, HUM CONTROL, AND 11-B-500 TRANSFORMER. SEE DIAGRAM OF 210PAM WITH 226


DATE	REVISION
120728	A
"	B
"	C

PREPARED BY *SP*
 CHECKED BY *T.T.*
 APPROVED BY *SP*

PAM-11, 12, 13, 14 AMPLIFIERS

SAMSON ELECTRIC CO.

MODEL PAM-16
 MODEL PAM-16-N
 MODEL PAM-17
 MODEL PAM-17-N

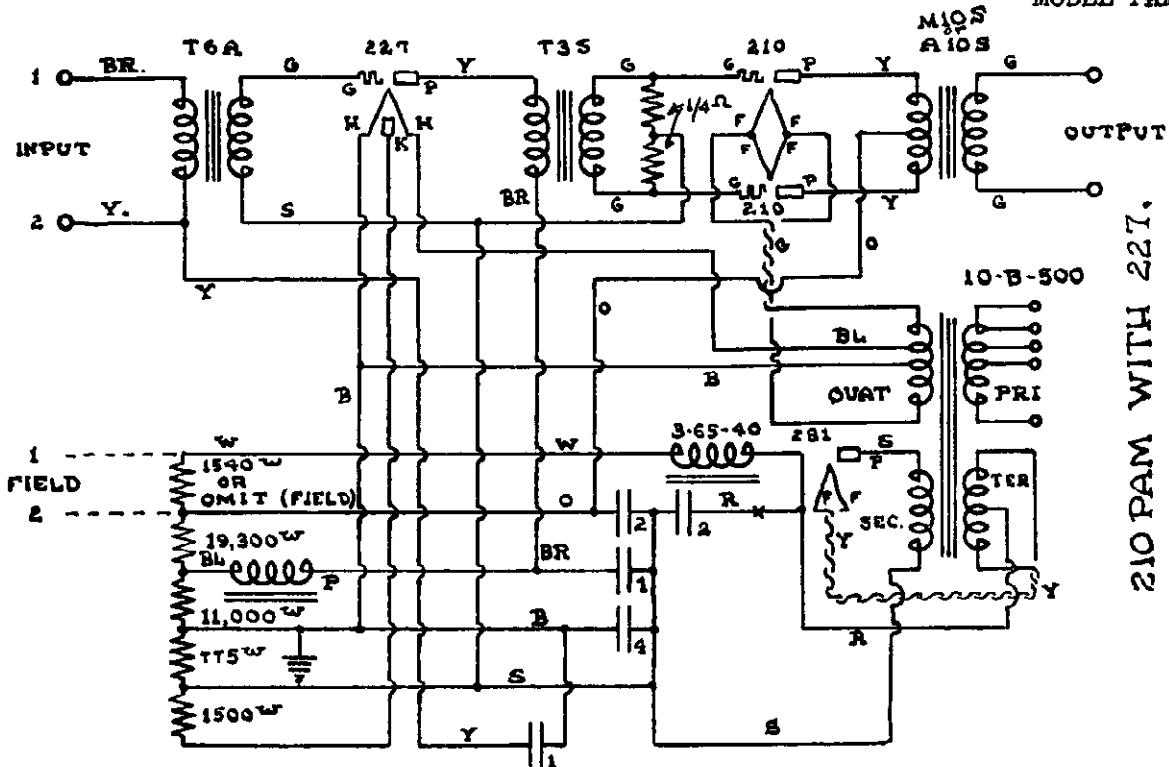


210 PAM WITH 227.

WIRING
 PAM-16 (No Field)
 PAM-17 (Field)

CODE
 S - SLATE R - RED
 Y - YELLOW G - GREEN
 B - BLACK BR - BROWN
 BL - BLUE O - ORANGE
 W - WHITE

THE SMALL LETTERS NEAR THE TUBES DESIGNATE SOCKET TERMINALS

	DATE
PREPARED BY <i>SP</i>	092628
CHECKED BY <i>T.T.</i>	"
APPROVED BY <i>SP</i>	092628

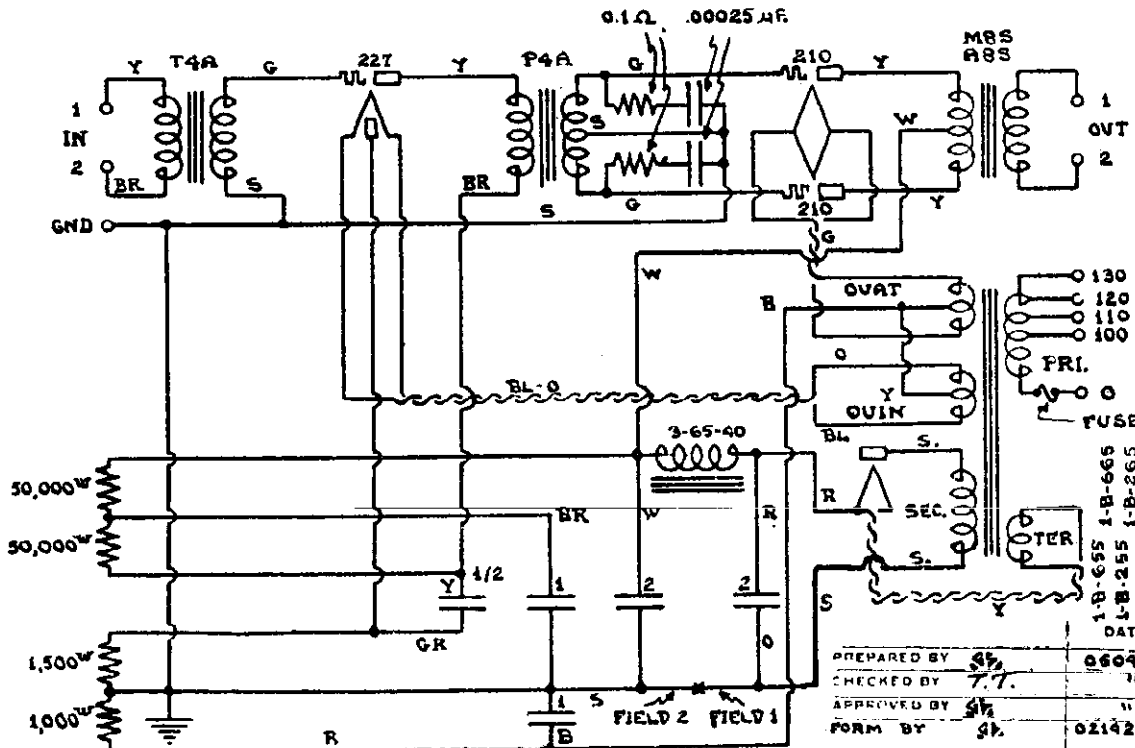


PAM-16-N (No Field)
 PAM-17-N (Field)


	DATE
PREPARED BY <i>SP</i>	060429
CHECKED BY <i>T.T.</i>	"
APPROVED BY <i>SP</i>	"
FORM BY <i>SP</i>	021429

SAMSON ELECTRIC CO.

MODEL PAM-19-N
MODEL PAM-19-Q

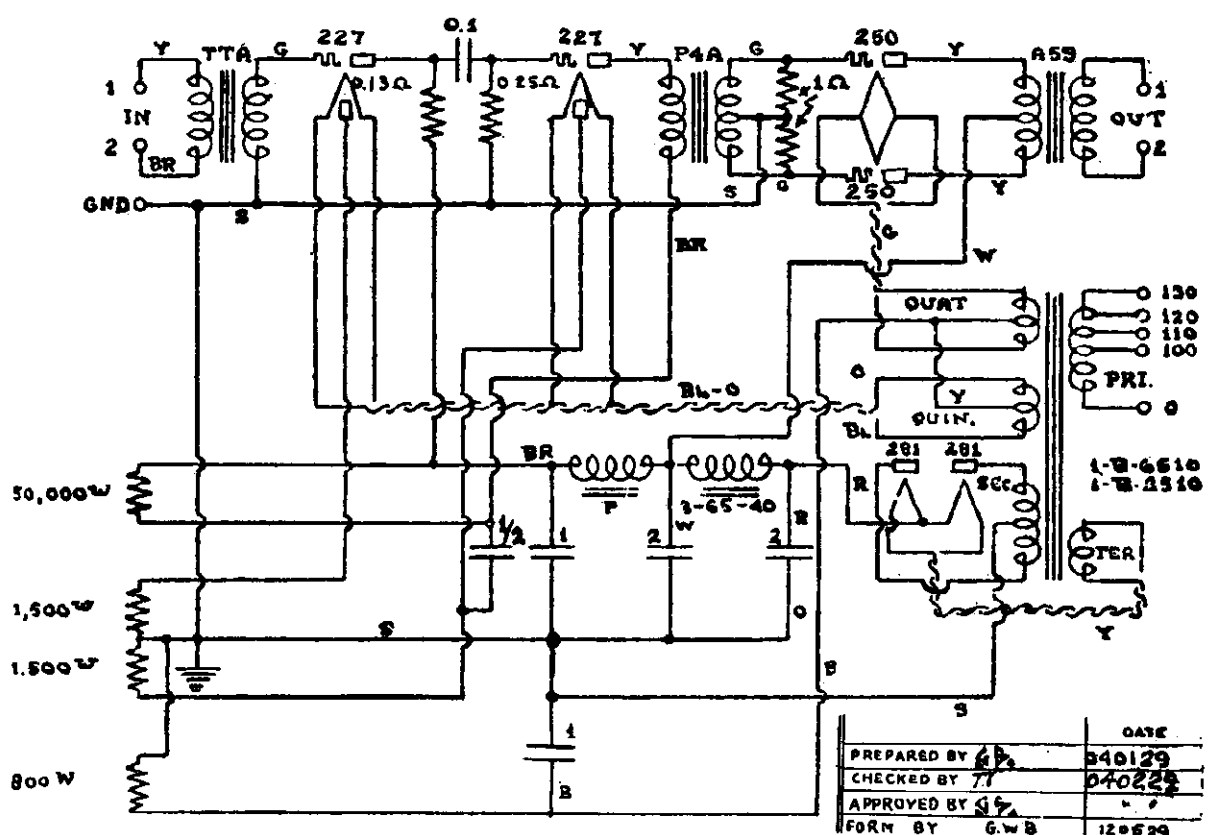

PAM-19-N AMPLIFIER

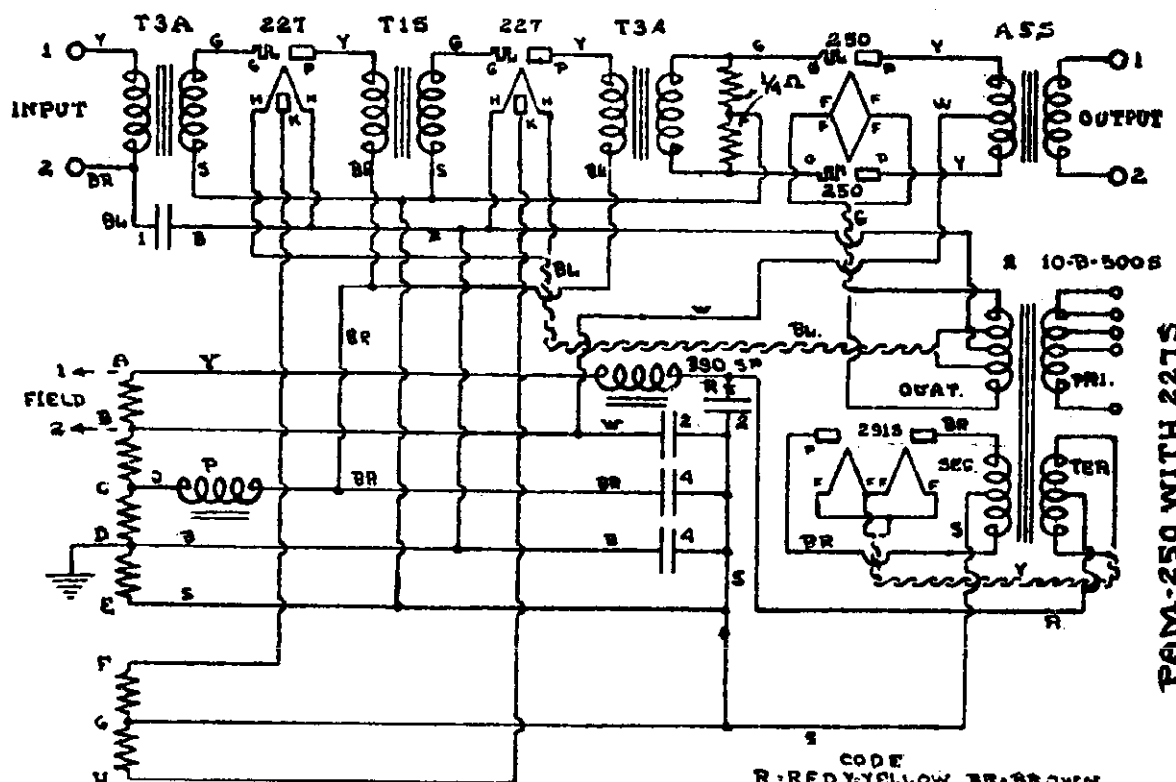


PAM-250 WITH 227'S

PAM-19-Q AMPLIFIER

CODE
R-RED-YELLOW BR-BROWN
W-WHITE BL-BLUE G-GREEN
O-ORANGE B-BLACK S-SLATE
THE SMALL LETTERS NEAR TUBES
DESIGNATE SOCKET TERMINALS.
SEE OTHER PRINTS FOR DETAILS.

MODEL PAM-22

SAMSON ELECTRIC CO.

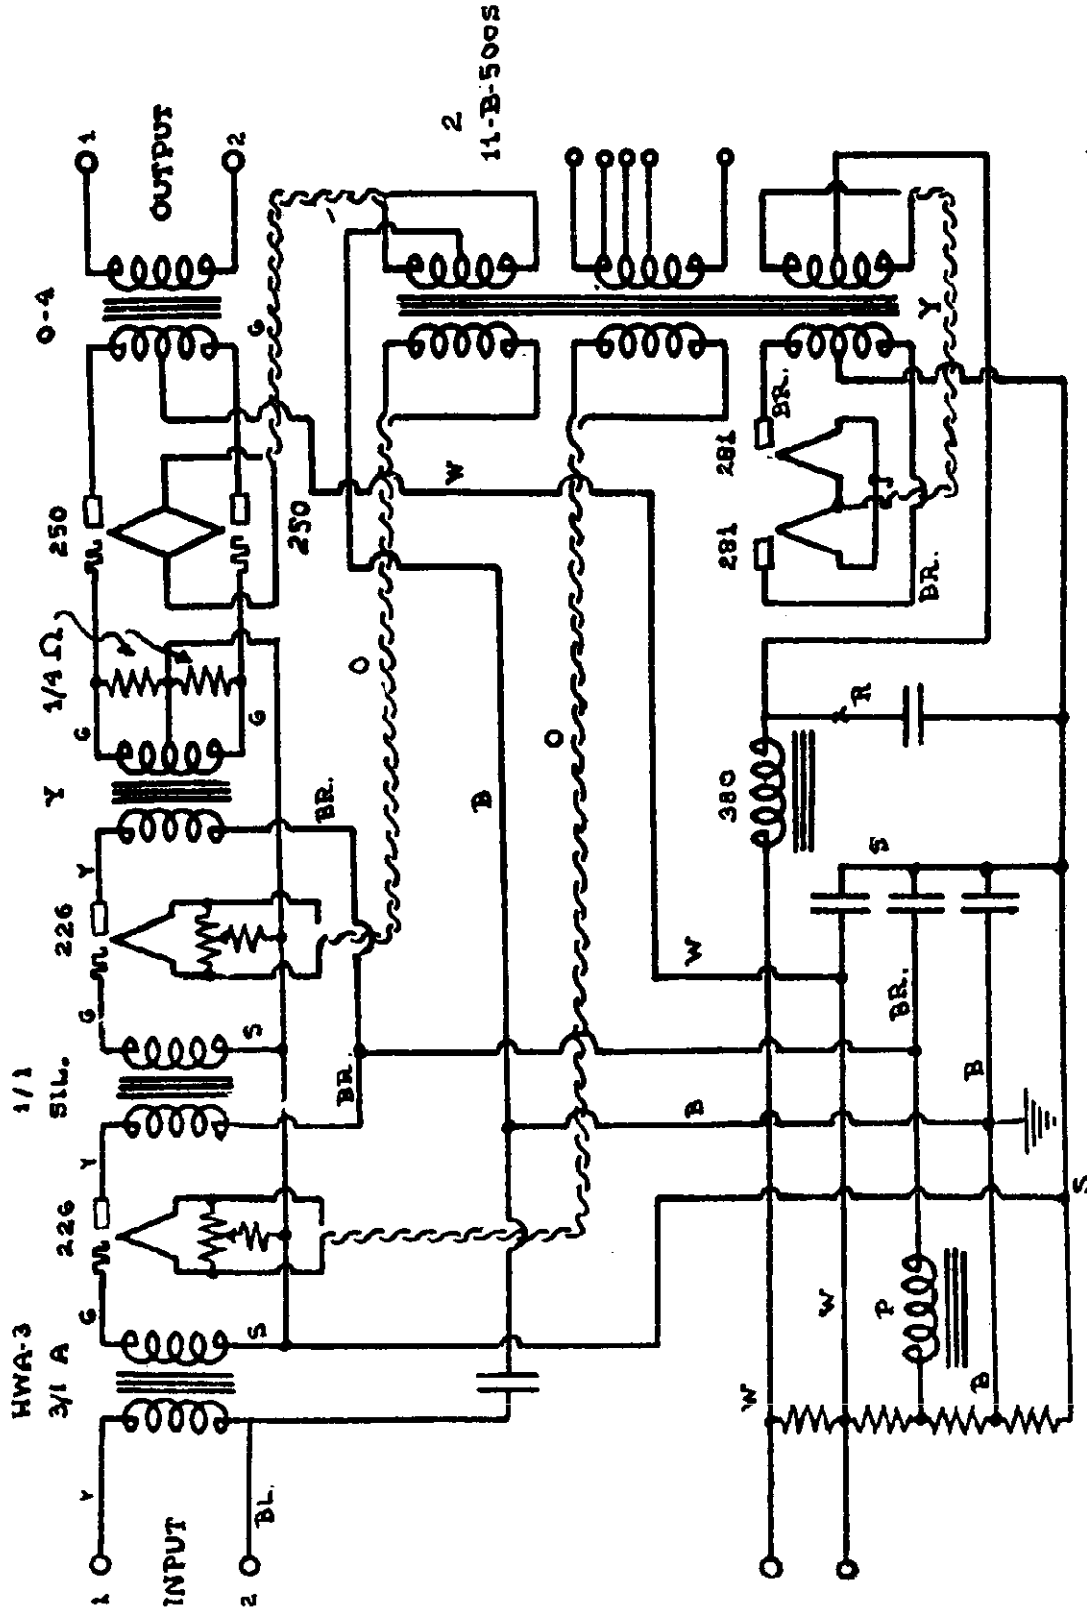


DATE	PREPARED BY	CHECKED BY	APPROVED BY
09/14/28	JE	T.T.	JE
09/14/28			
09/14/28			

PAM-22 AMPLIFIER

MODEL PAM-29
MODEL PAM-39


SAMSON ELECTRIC CO.

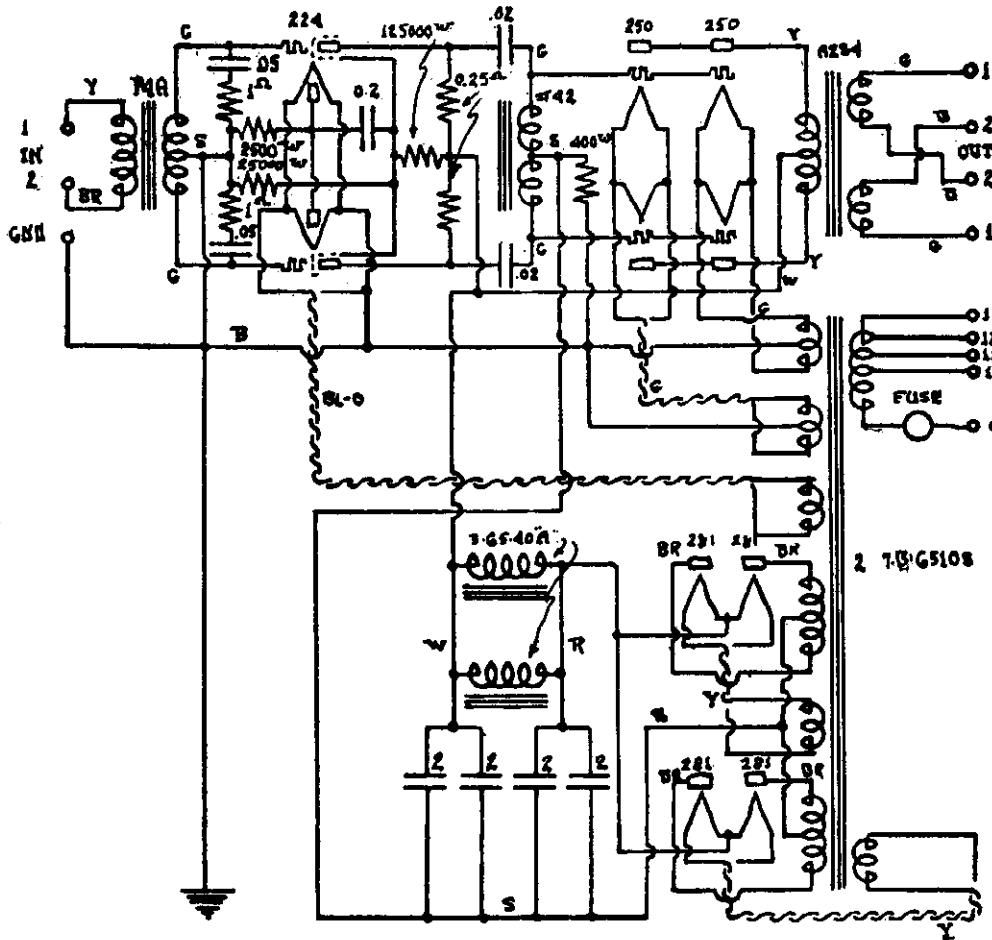

REVISIONS		DR	G.S.	APP	DATE
1	11/4/30	Ch	A	F.S.	103030
2	12/31/30				

W-331-E

PAM-29 AMPLIFIER

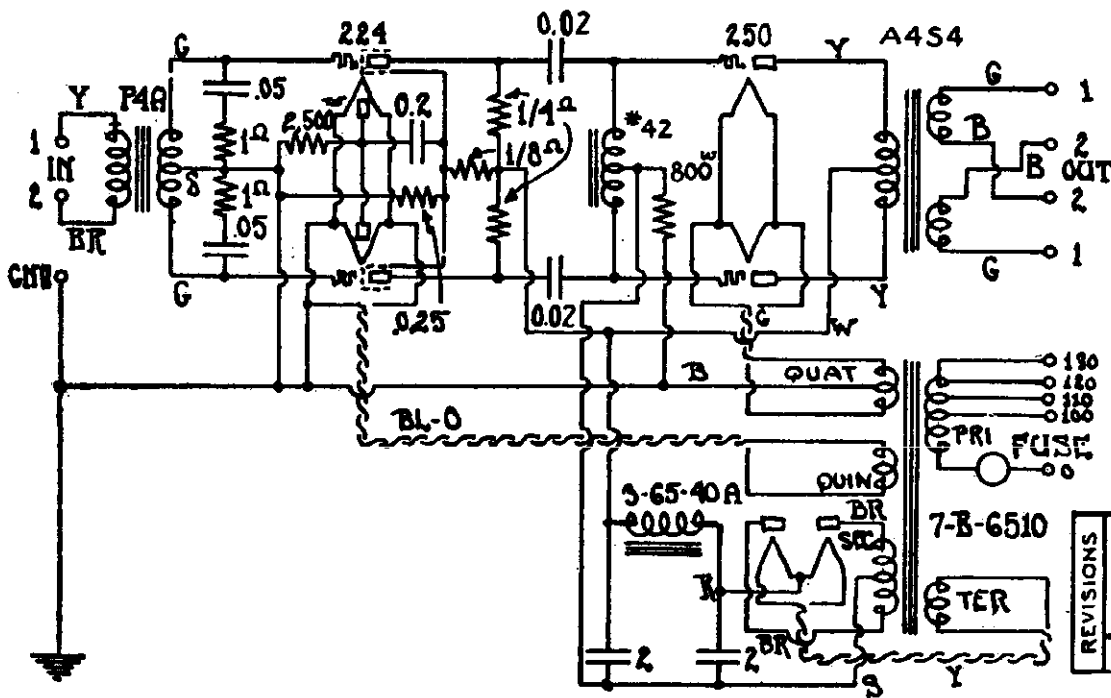


REVISIONS		DR	G.S.	APP	DATE
1	09/09/30				1050230
2	11/4/30	Ch.			
3	12/31/30				

W-325-E

PAM-39 AMPLIFIER


SAMSON ELECTRIC CO.

MODEL PAM-45
MODEL PAM-48

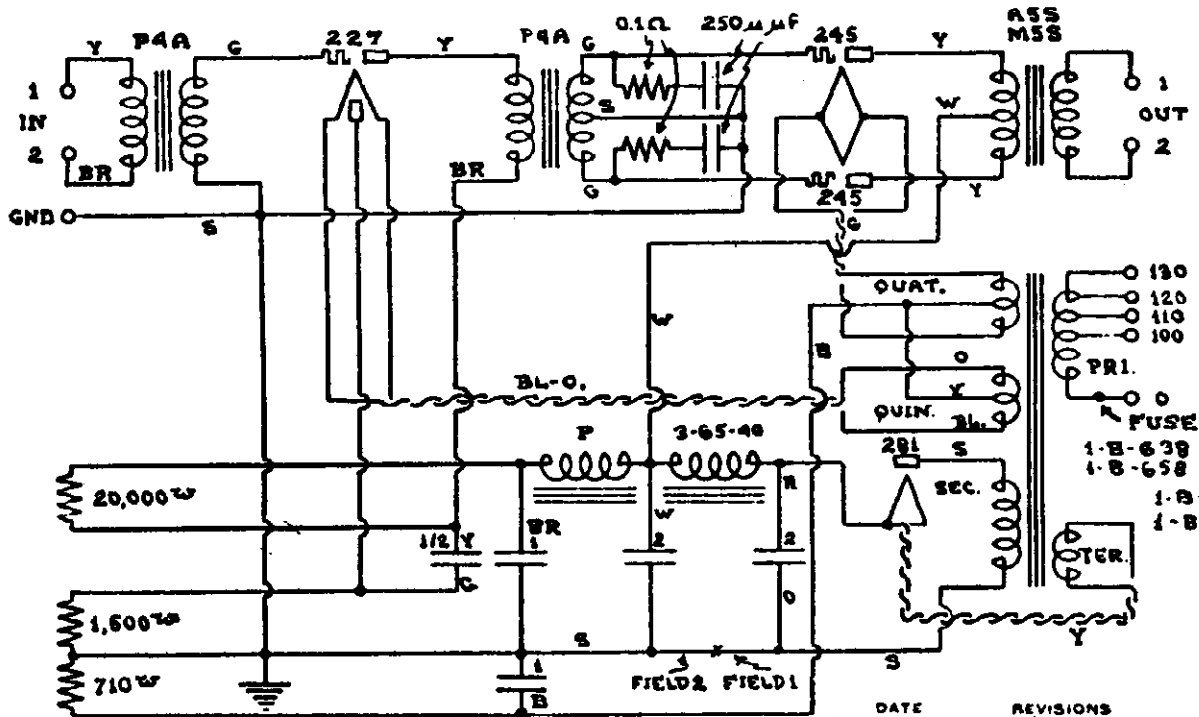

	DATE	REVISIONS
PREPARED BY <i>St.</i>	050929	A
CHECKED BY <i>St.</i>	"	B
APPROVED BY <i>St.</i>	"	C
FORM BY G.W.B.	120529	D

PAM-45 AMPLIFIER

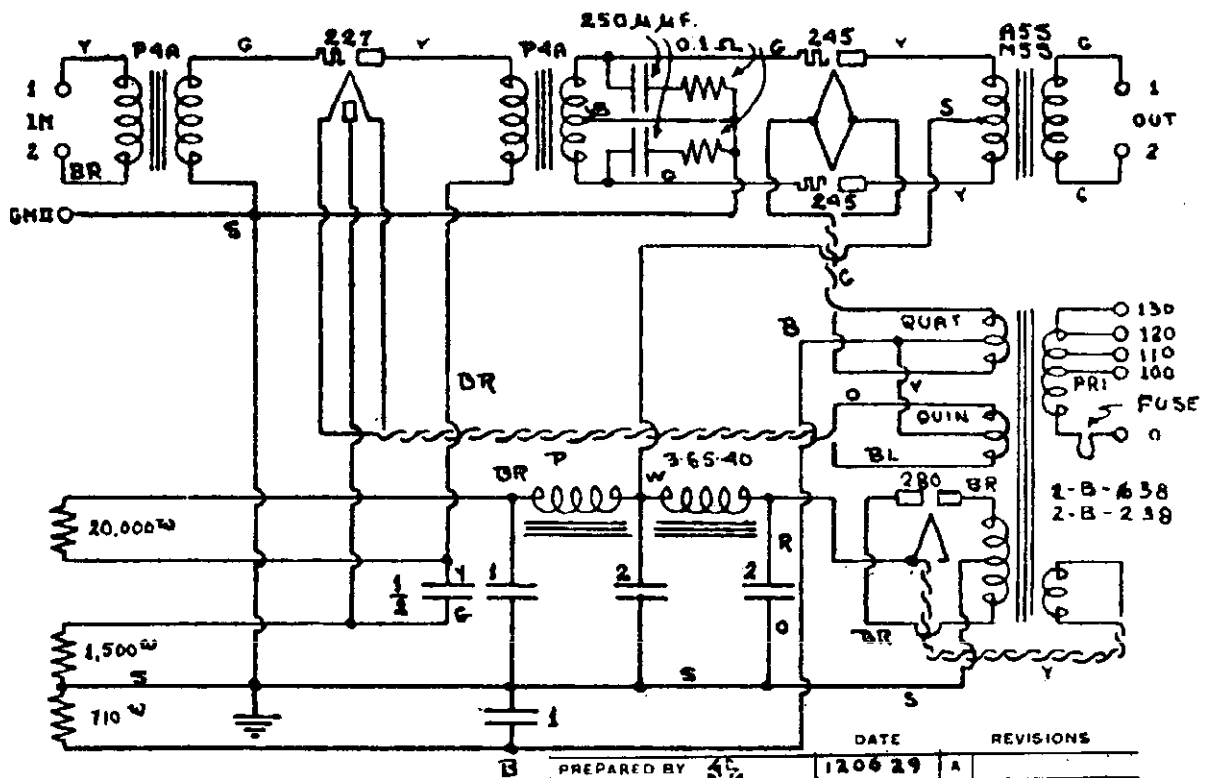


	DATE	REVISIONS
PREPARED BY <i>St.</i>	120629	A
CHECKED BY G.W.B.	120729	B
APPROVED BY <i>St.</i>	"	C
FORM BY <i>St.</i>	021429	D

PAM-48 AMPLIFIER


MODEL MIK-1
 MODEL MIK-1-D
 MODEL HA-2
 MODEL PAM-59

SAMSON ELECTRIC CO.

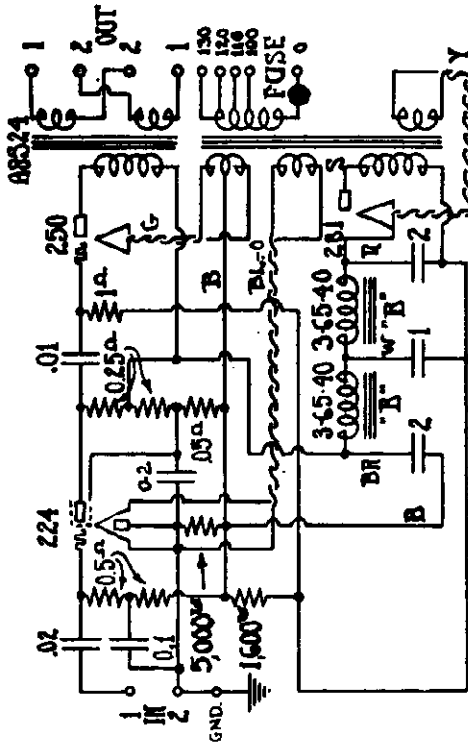

REVISIONS	DR	G.S.	APP.	DATE	W-336-E
1	110730	CH		110330	
2	122330				

PAM-59 AMPLIFIER

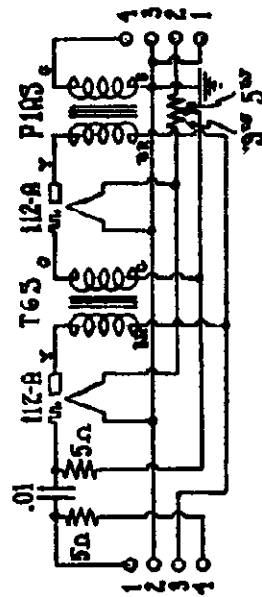


DATE	REVISIONS
031330	A
	B
	C
	D
	E


PREPARED BY A.P.S.
 CHECKED BY A.P.S.
 APPROVED BY

HA-2 AMPLIFIER

PAM-59 AMPLIFIER
 HA-2 AMPLIFIER

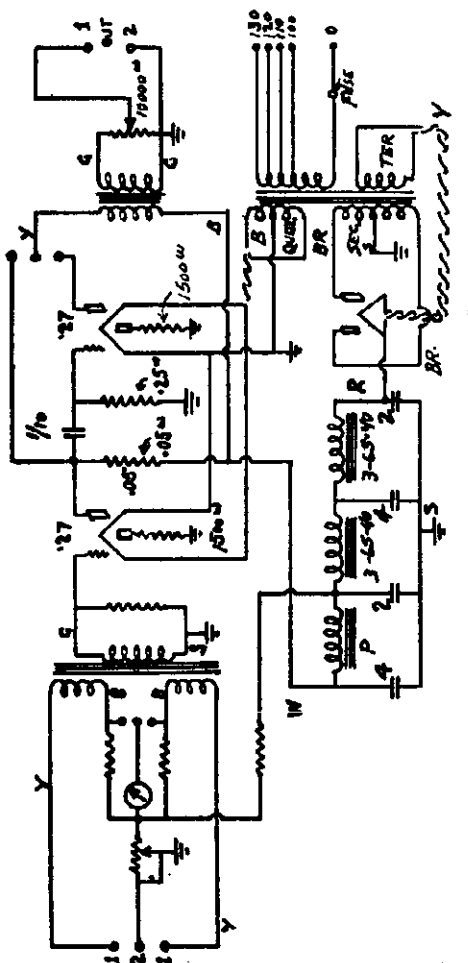

MIK-1 AMPLIFIER


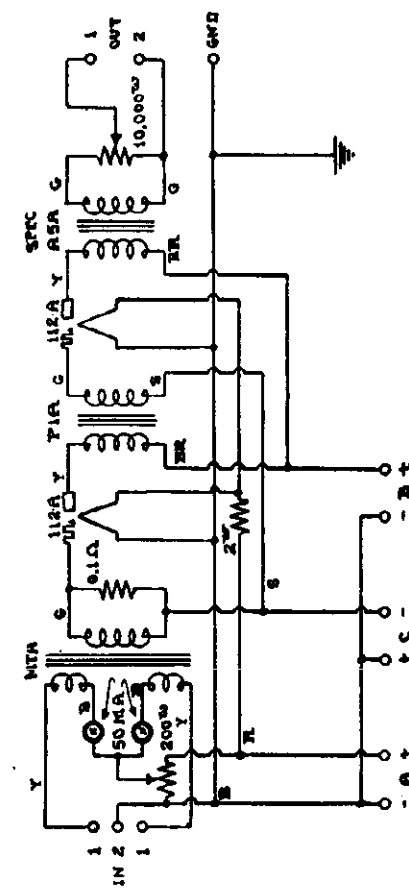


MIK-1-D AMPLIFIER

MIK-1 AMPLIFIER
 MIK-1-D AMPLIFIER

SAMSON ELECTRIC CO.



MODEL MIK-80
MODEL PAM-80

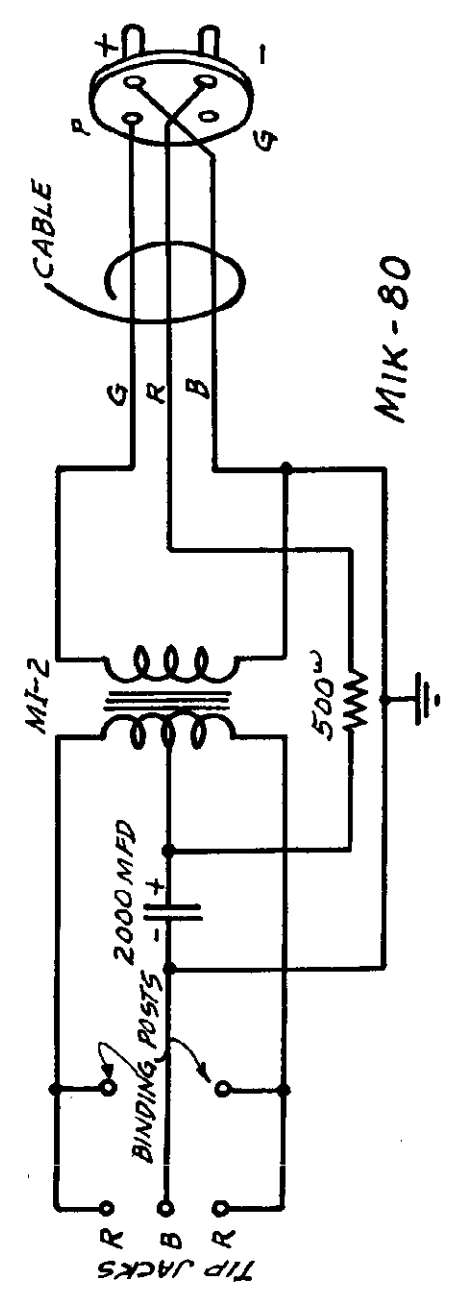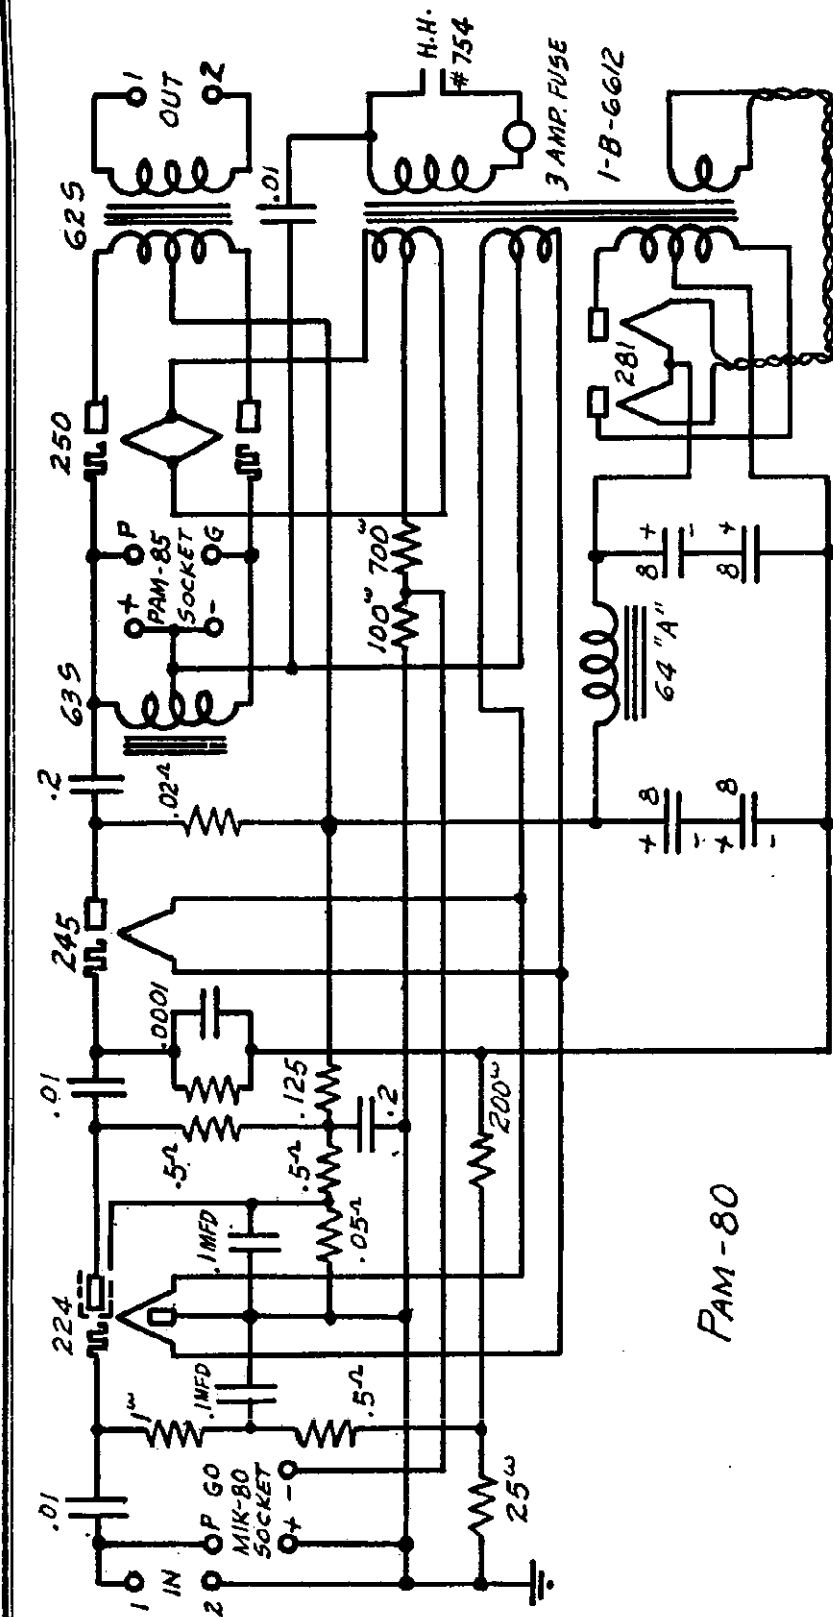


SCOTT TRANSFORMER CO.

MODEL "World Record" 10
MODEL Shield Grid "9"

Model World Record 10

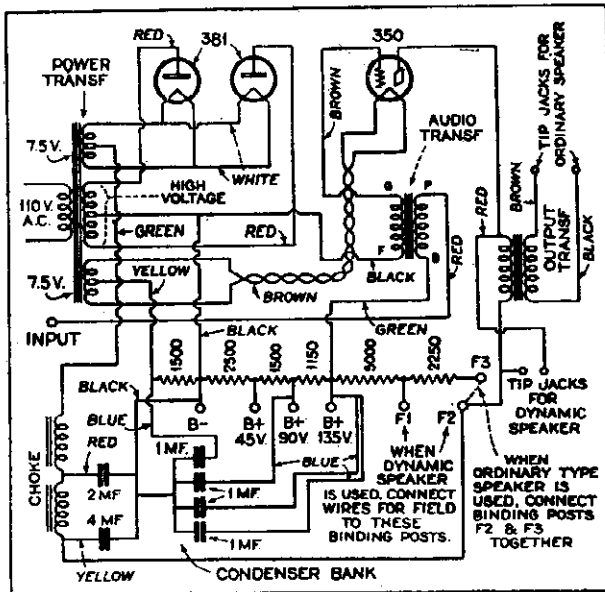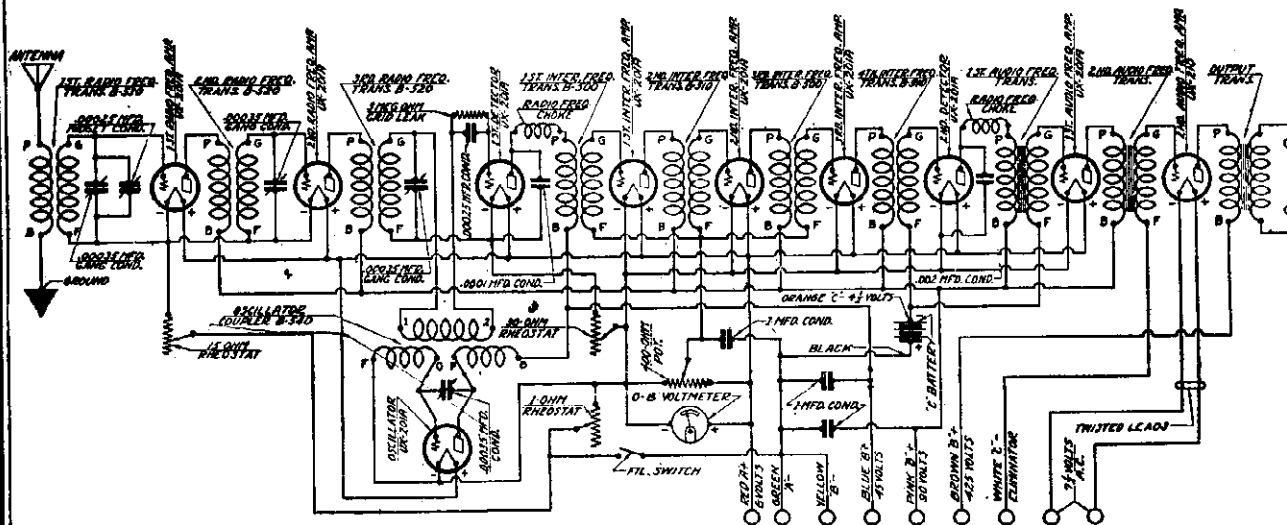


Model Shield Grid 9
Power Pack

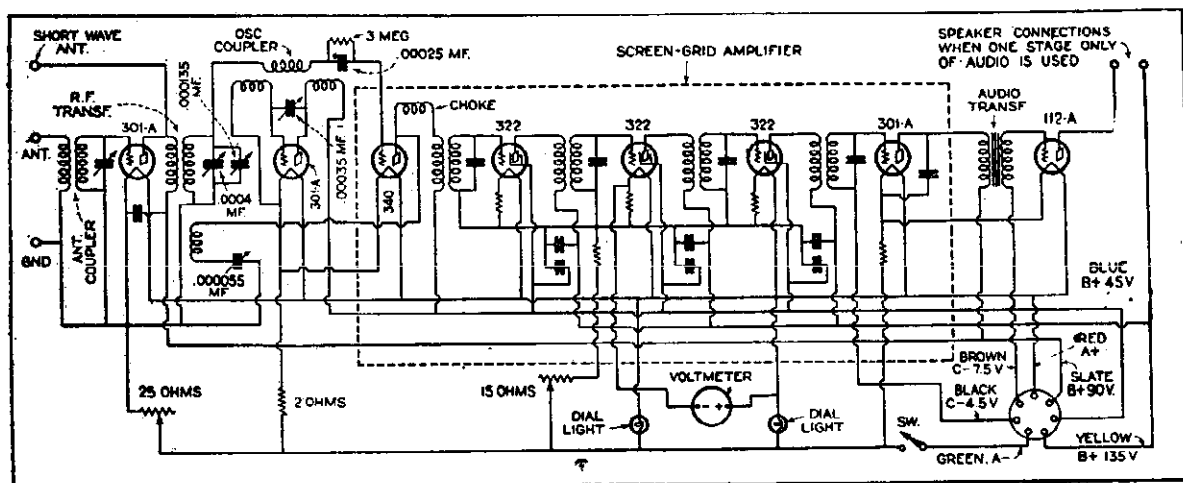

Model Shield Grid 9 Receiver Schematic

MODEL "All Wave" Super Receiver Chassis

SCOTT TRANSFORMER CO.,

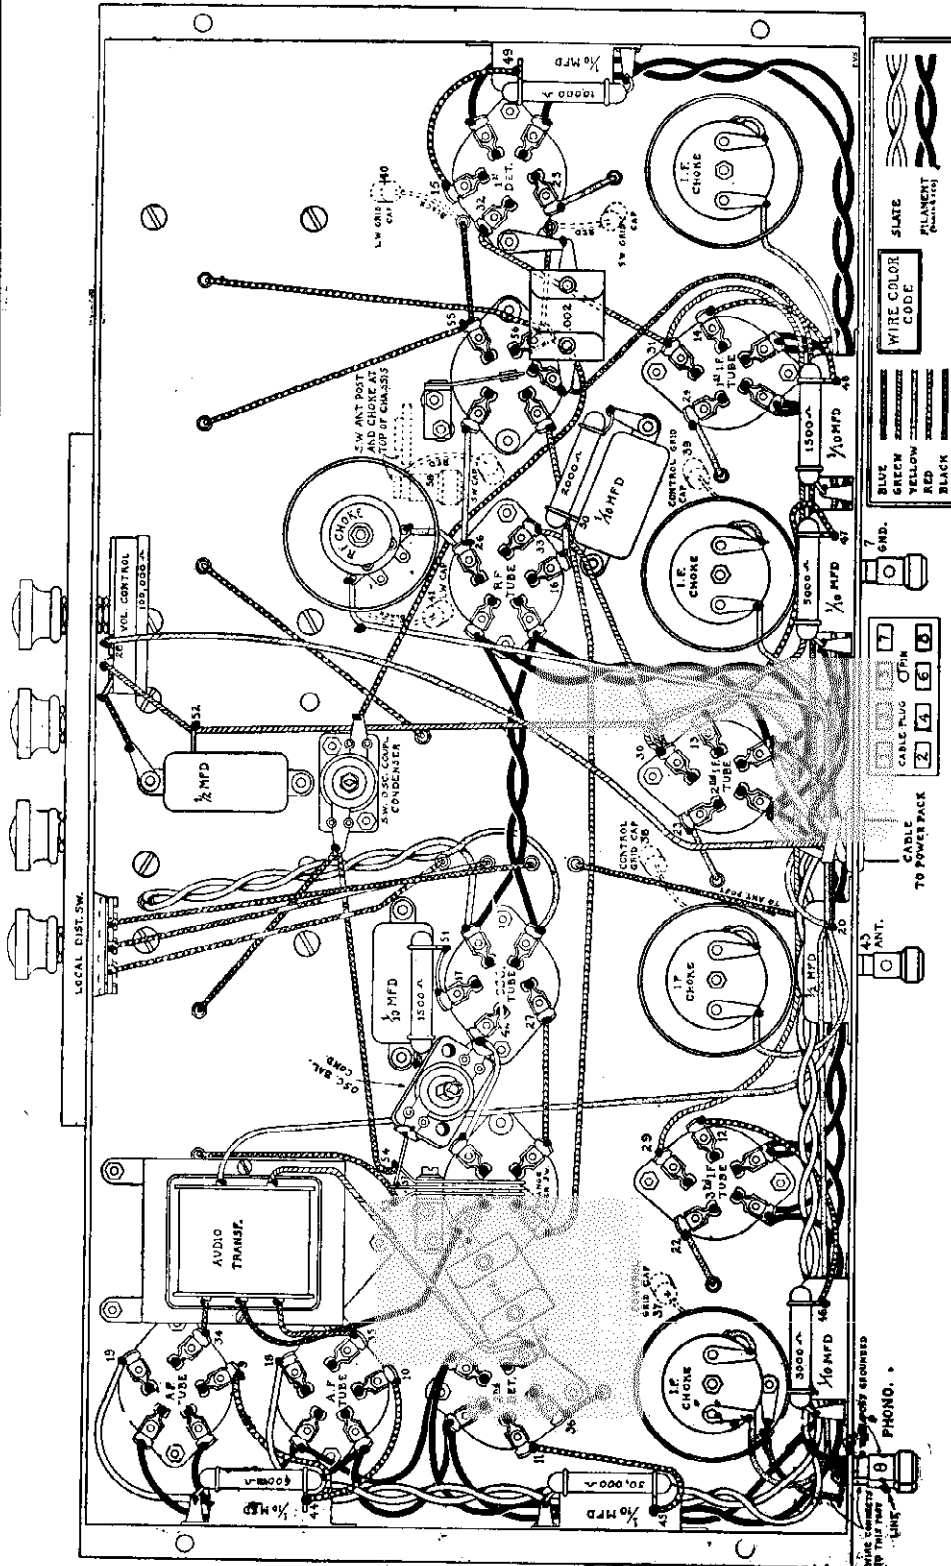

HOW TO DISTINGUISH OSCILLATOR FROM R. F. COIL

Oscillator Coil

- 15-21 Meters Two Enamel Wire Windings
- 21-27 Meters Two Enamel Wire Windings
- 27-38 Meters Two Enamel Wire Windings
- 38-84 Meters Two Enamel Wire Windings
- 84-184 Meters Two Enamel Wire Windings


R. F. Coil

- One Enamel Wire Winding
- One Enamel Wire Winding
- One Enamel Wire Winding
- One Enamel, One Silk Winding
- One Enamel, One Silk Winding


NOTE:—When tuning short wave stations the short wave coils must be left exposed (the aluminum covers should not be replaced). Be sure that both oscillator and R. F. coils are for the same wave length band. The tube on the extreme right of the chassis is the first detector

SCOTT TRANSFORMER CO.

MODEL "All Wave" Super
145 Power Pack
Schematic- Chassis

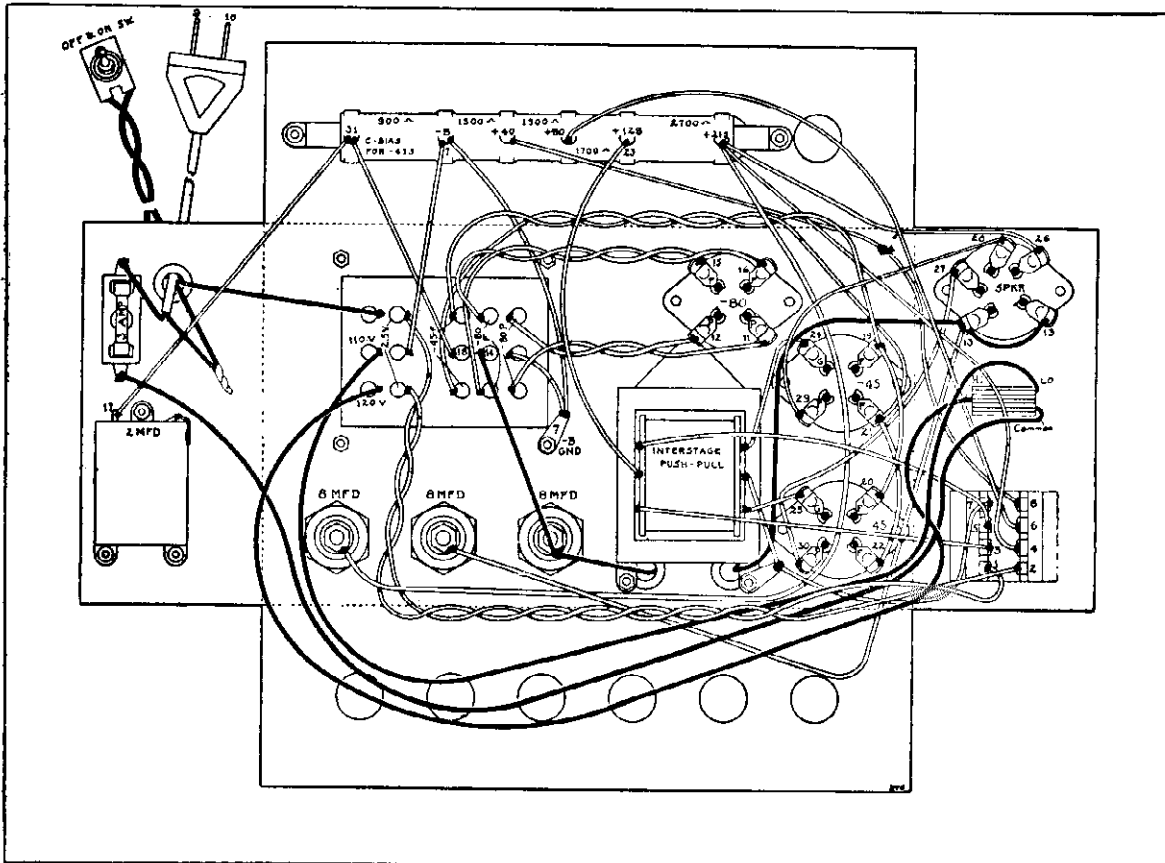



Wiring Diagram of 145 Power Pack

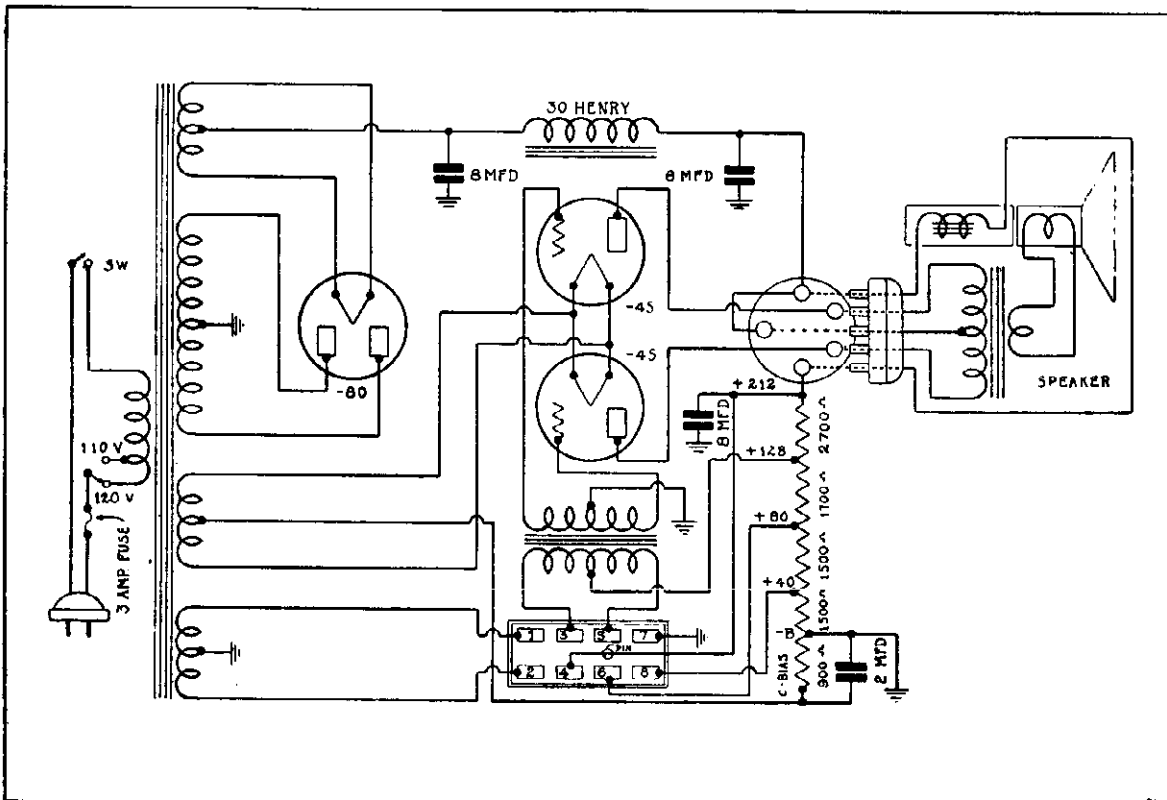

Schematic Diagram of 145 Power Pack


SEARS-ROEBUCK & CO.

MODEL 1150
MODEL 1260

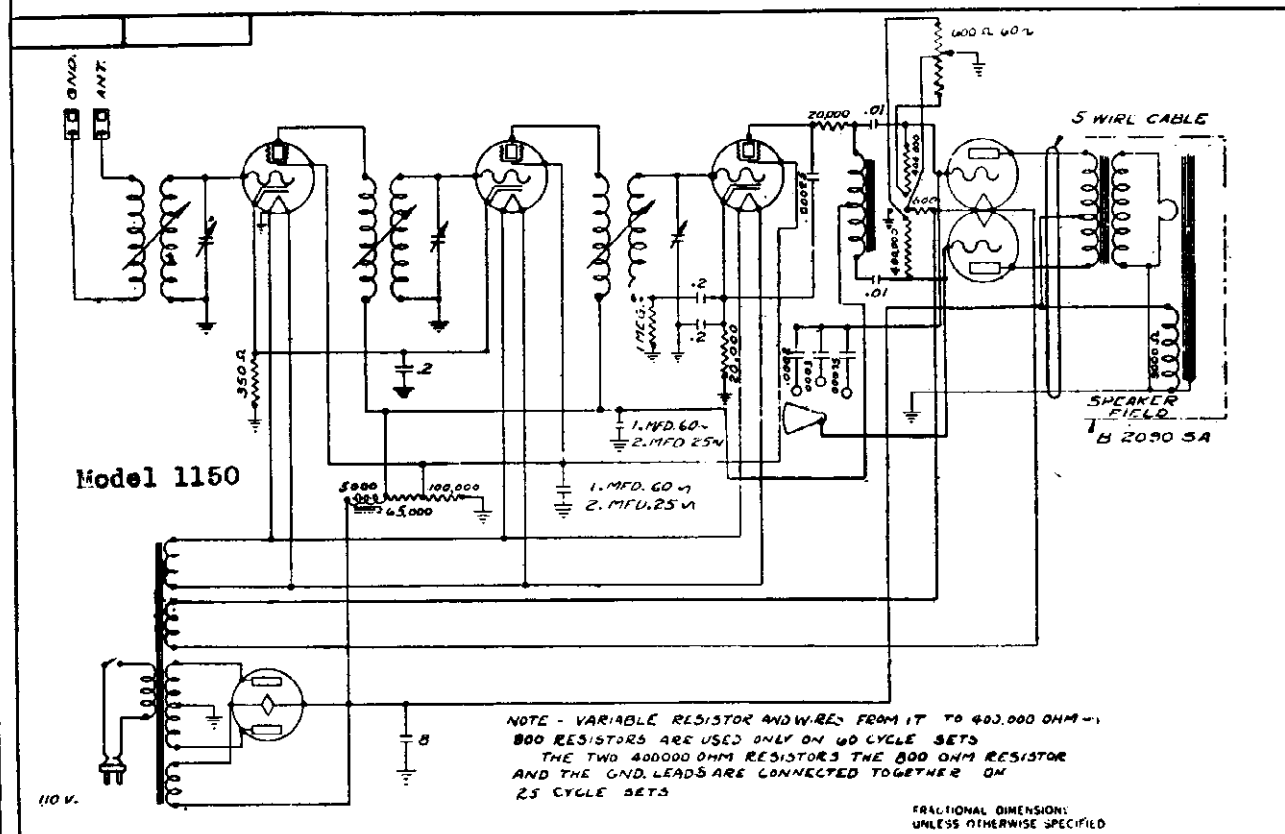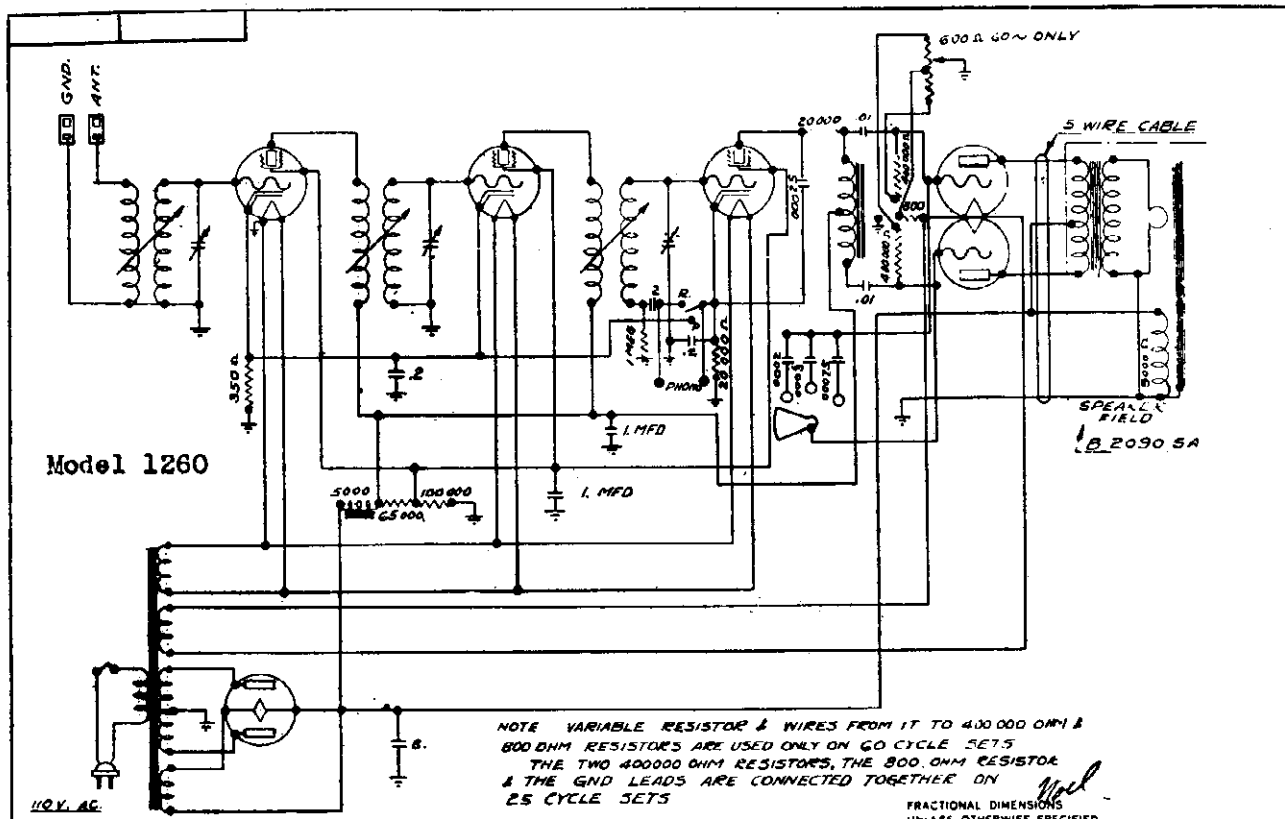

MODEL 1150
Voltage-Data

SEARS-ROEBUCK & CO.

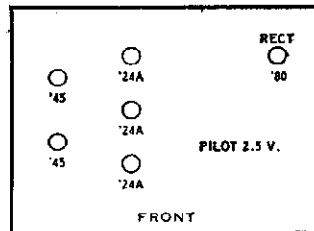

	60 cycle	Line 115 V.	RF1	RF2	Det.	245#1	2452	280AC	280DC
Plate Voltage D.C.			250	250	235	250	250	330	300
Screen Voltage D.C.			85	85	85				
Heater Voltage A.C.			2.45	2.45	2.45	2.4	2.4	4.7	
Control Grid Voltage D.C.			3	3	8	50			
Speaker Field Voltage		300							
Total Rectifier Current		.090							

	25 cycle	Line 115 V.	RF1	RF2	Det.	245#1	245#2	280AC	280DC
Plate Voltage D.C.			230	230	215	230	230	315	270
Screen Voltage D.C.			75	75	75				
Heater Voltage A.C.			2.3	2.3	2.3	2.3	2.3	4.85	
Control Grid Voltage D.C.			2.8	2.8	7.5		45	45	
Speaker Field Voltage		270							
Total Rectifier Current		.090							



Control grid volts of the R.F. tubes and detector are measured from Cathode to Ground. 245 Grid volts Filament to Ground.

CIRCUIT DATA - The 25 cycle models are identical electrically with the 60 cycle models except for power transformer, filter condensers and omission of hum balance potentiometer. Characteristics are the same as the 60 cycle models. Voltages are slightly lower and there is a difference in the arrangement of parts. The volume control used on these receivers operates by varying the coupling between the primary and secondary on the antenna and R.F. stages. This variation in coupling is effected by moving the primary coils. The antenna and R.F. primaries are also moved by the rotation of the tuning condenser to maintain uniform sensitivity over the broadcast band. The detector primary is not moved to control volume but is moved by rotation of the tuning condenser. This system of volume control does not change the voltages or currents in the tubes. The new variable-mu, screen grid tube, -35, may be used interchangeably with the -24 in the R.F. stages only.

OSCILLATION - Oscillation in receivers employing the variable coupling volume control may be caused by (A) Leads to the movable primary coils too close together, causing interstage coupling. The pairs of leads should be spaced at least 1-1/4 inches apart throughout their length. (B) Movable primaries in wrong position. When the dial is set at 55, and the volume control set at maximum, the primaries should be at the position of maximum coupling. The U-brackets carrying the coils should have about 1/32 clearance from the plate which supports the RF coils. When the volume control is left at maximum and the dial turned to move the condenser to the higher frequency settings, the coils should remain approximately in line, the RF coils moving out slightly more than the detector primary. Adjustment may be made by moving stop collar on rear end of volume control shaft.


SEARS-ROEBUCK & CO.

MODEL 1250
MODEL 1152, 1420
Schematics

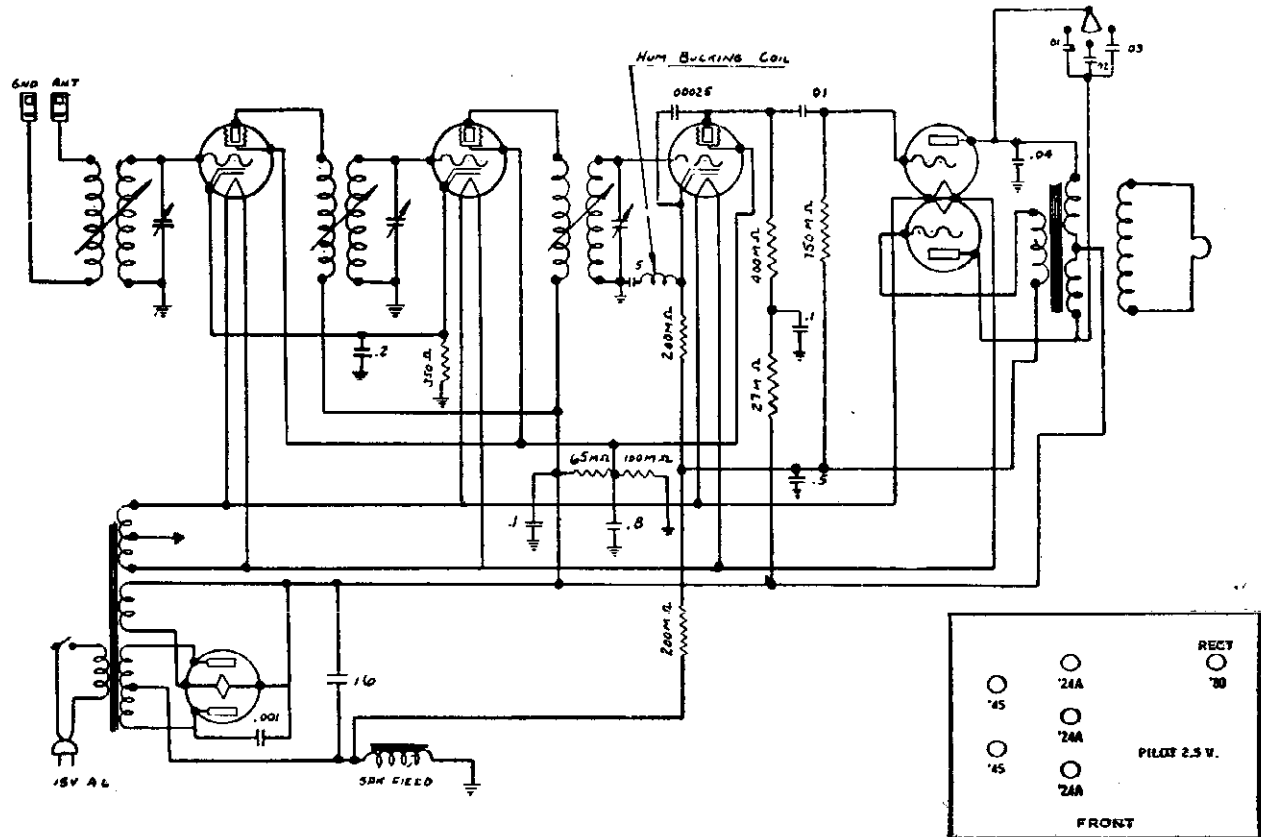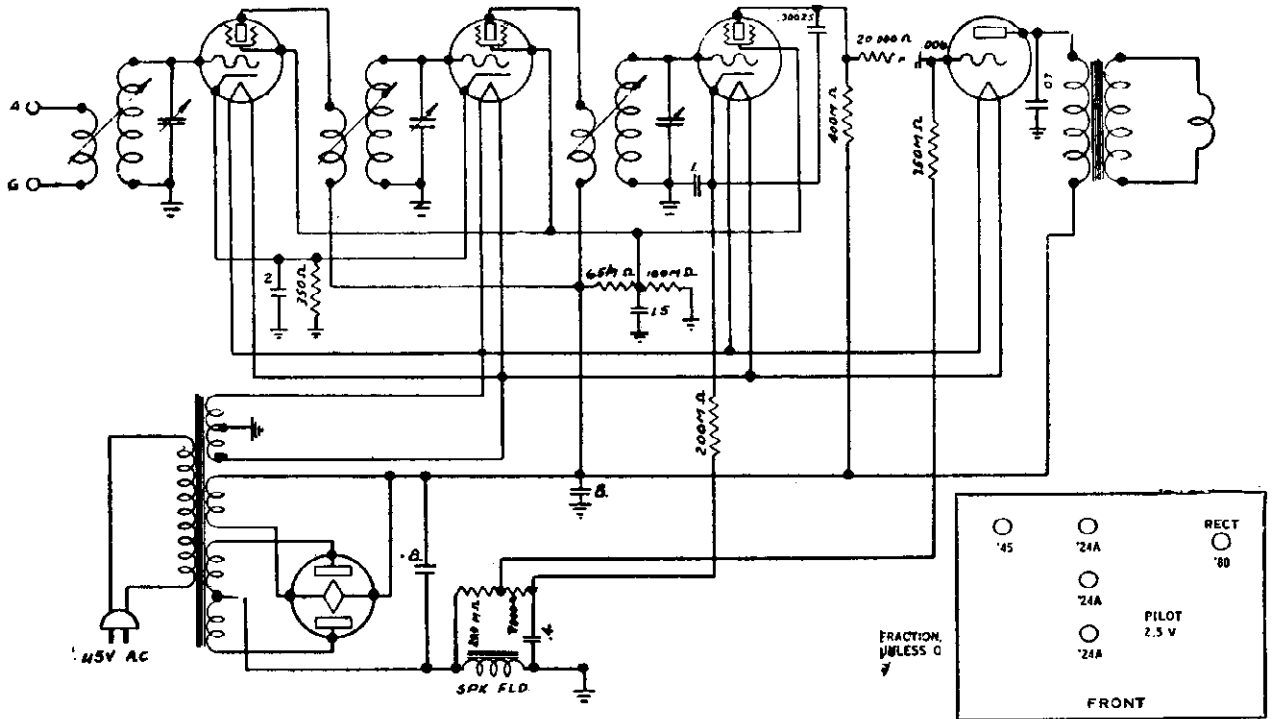

SEARS-ROEBUCK & CO.

MODEL 1252
Chassis-Voltag





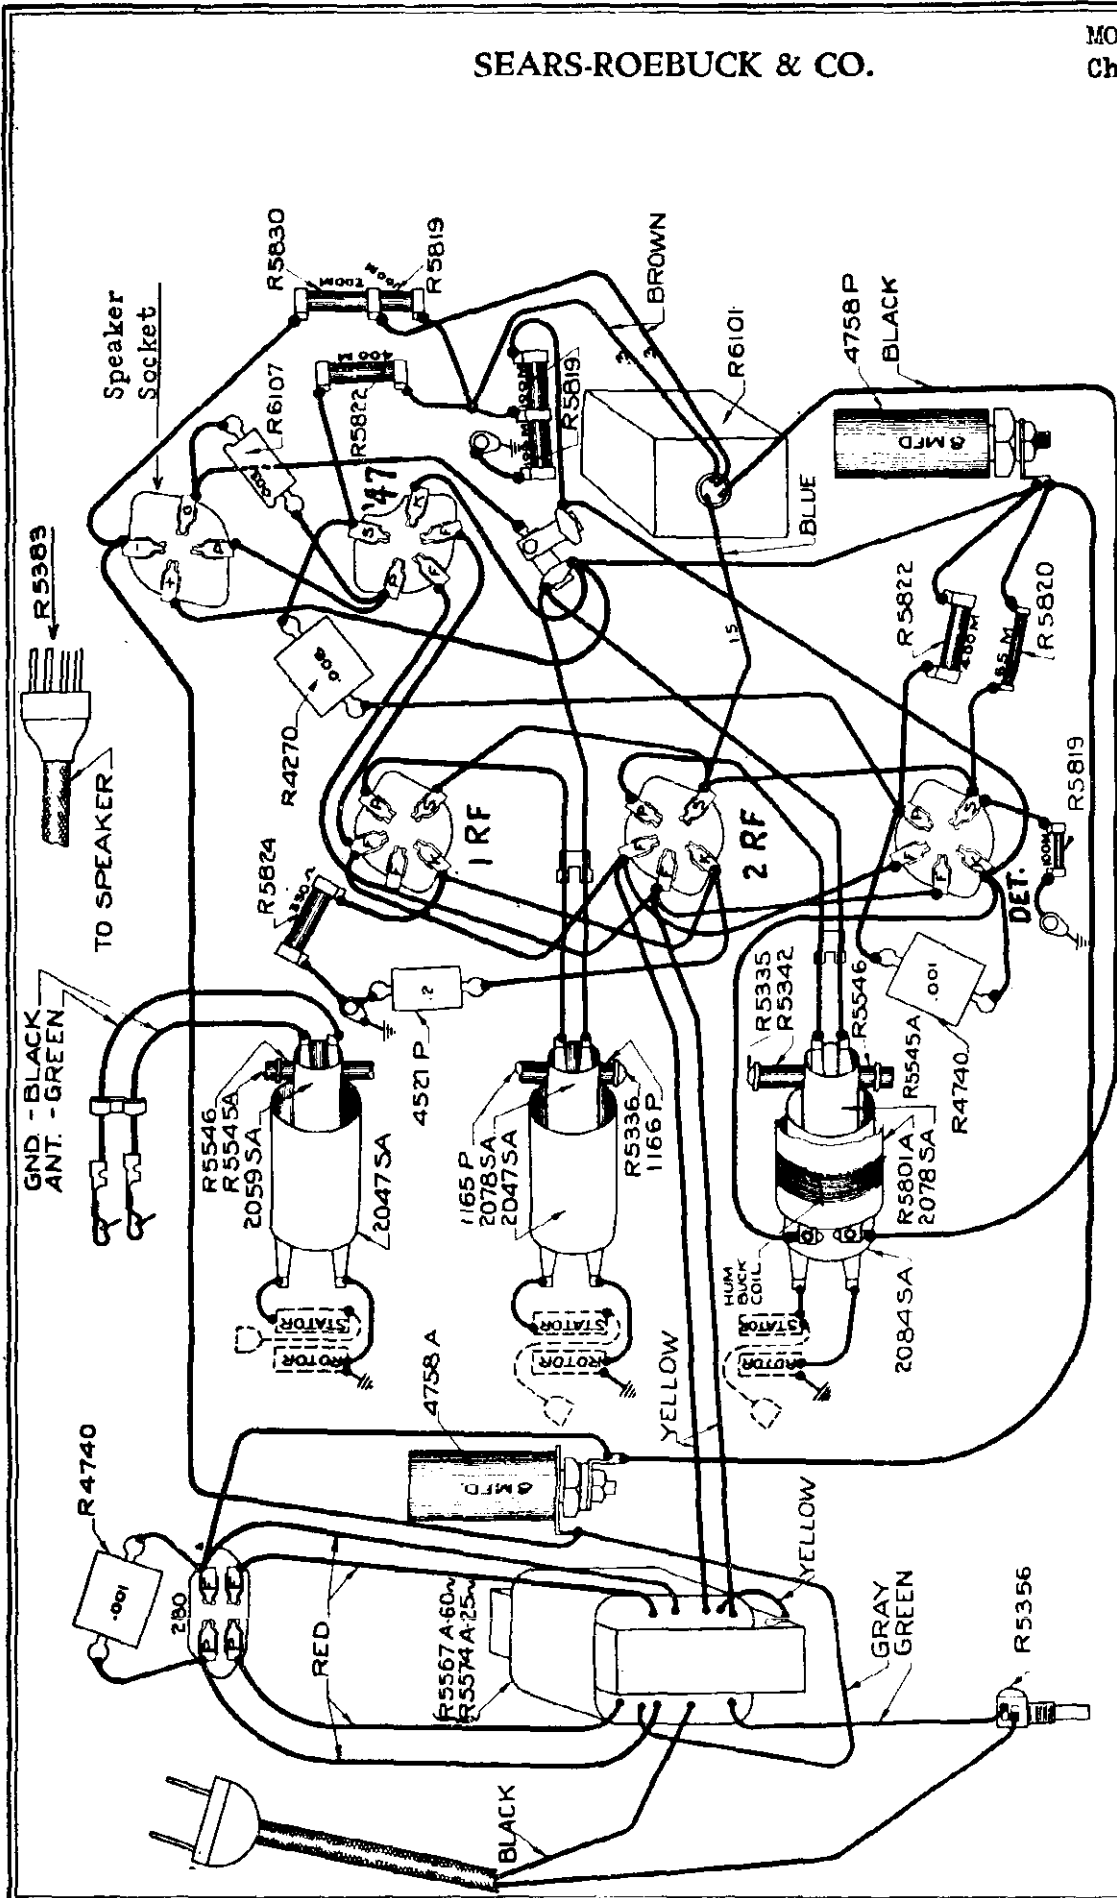


60 Cycle		RF1	RF2	Det.	247	280AC	280DC
Plate Voltage D.C.	220	220	100	70	210	340	320
Screen Voltage D.C.	70	70	70				
Heater Voltage A.C.	2.3	2.3	2.3	2.3	2.3	4.8	
Control Grid Voltage D.C.	2.4	2.4	7	15			
Speaker Field Voltage	100						
Total Rectifier Current	.045						
Line Voltage	115						

25 Cycle		RF1	RF2	Det.	247	280AC	280DC
Plate Voltage D.C.	240	240	100	70	230	340	
Screen Voltage D.C.	70	70	70				
Heater Voltage A.C.	2.4	2.4	2.4	2.4	2.4	5	
Control Grid Voltage D.C.	2.3	2.3	7	15			
Speaker Field Voltage	100						
Total Rectifier Current	.045						
Line Voltage	115						


MODEL 1252
Schematic

SEARS-ROEBUCK & CO.

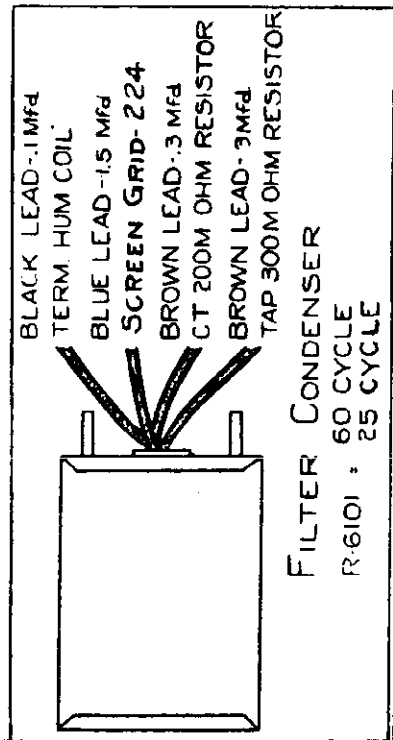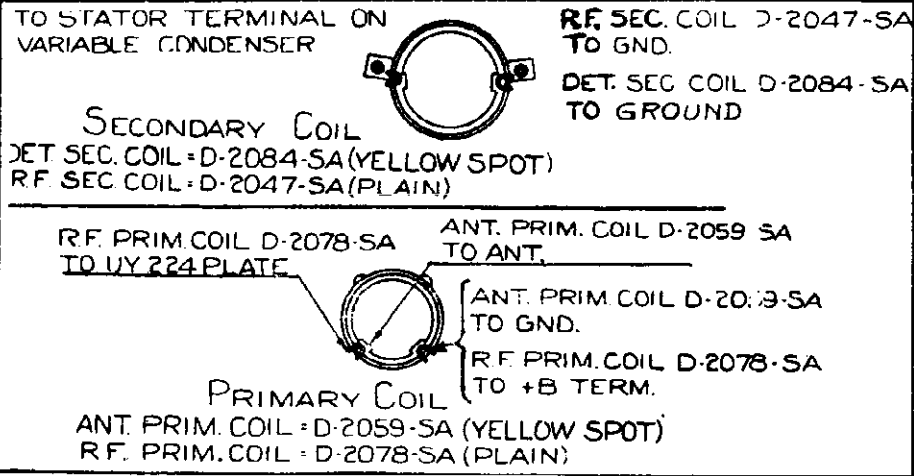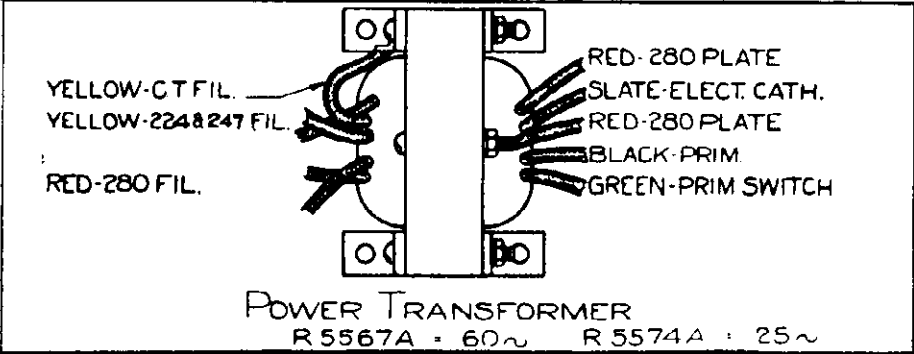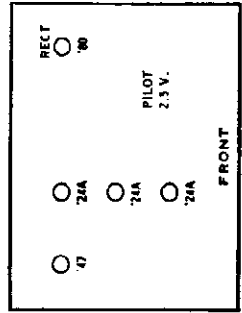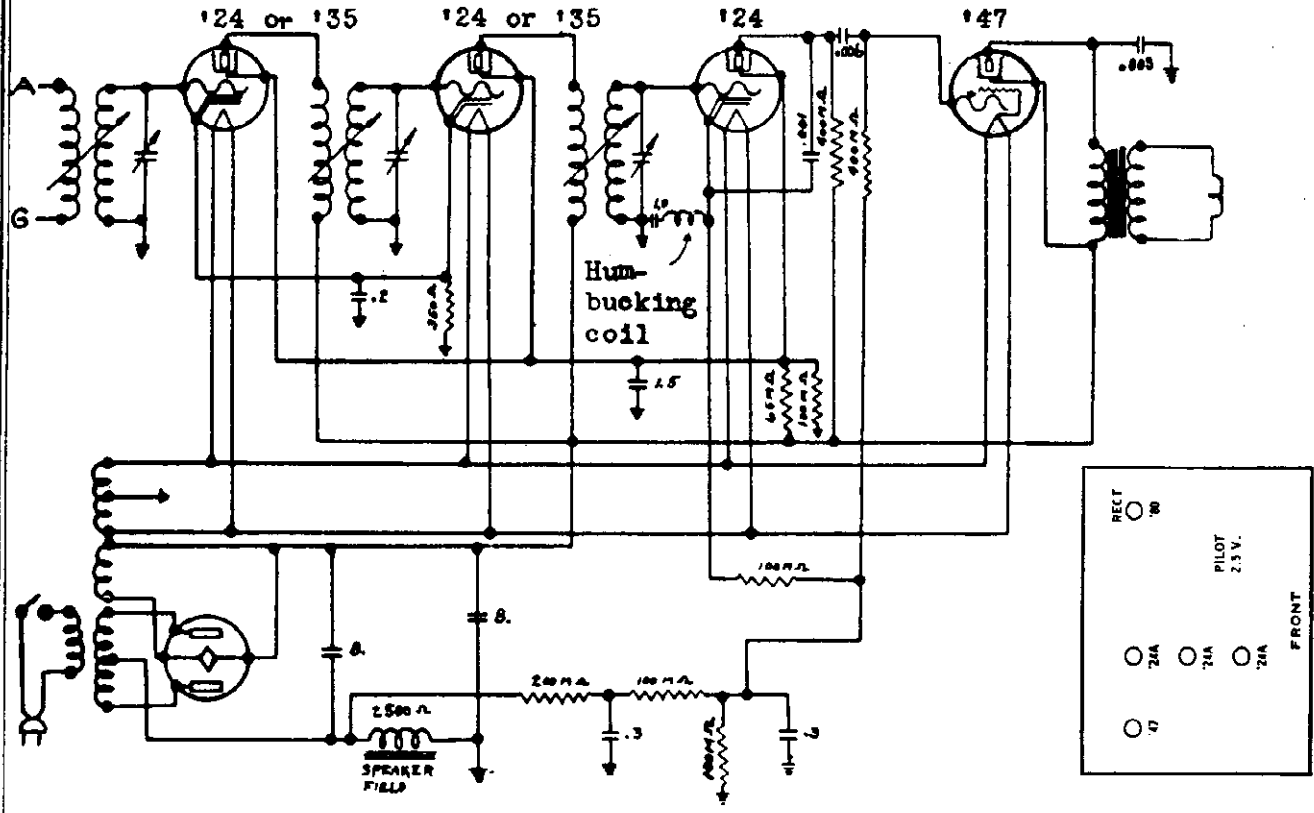


SEARS-ROEBUCK & CO.

MODEL 1290,1300
MODEL 1292,1302
Chassis

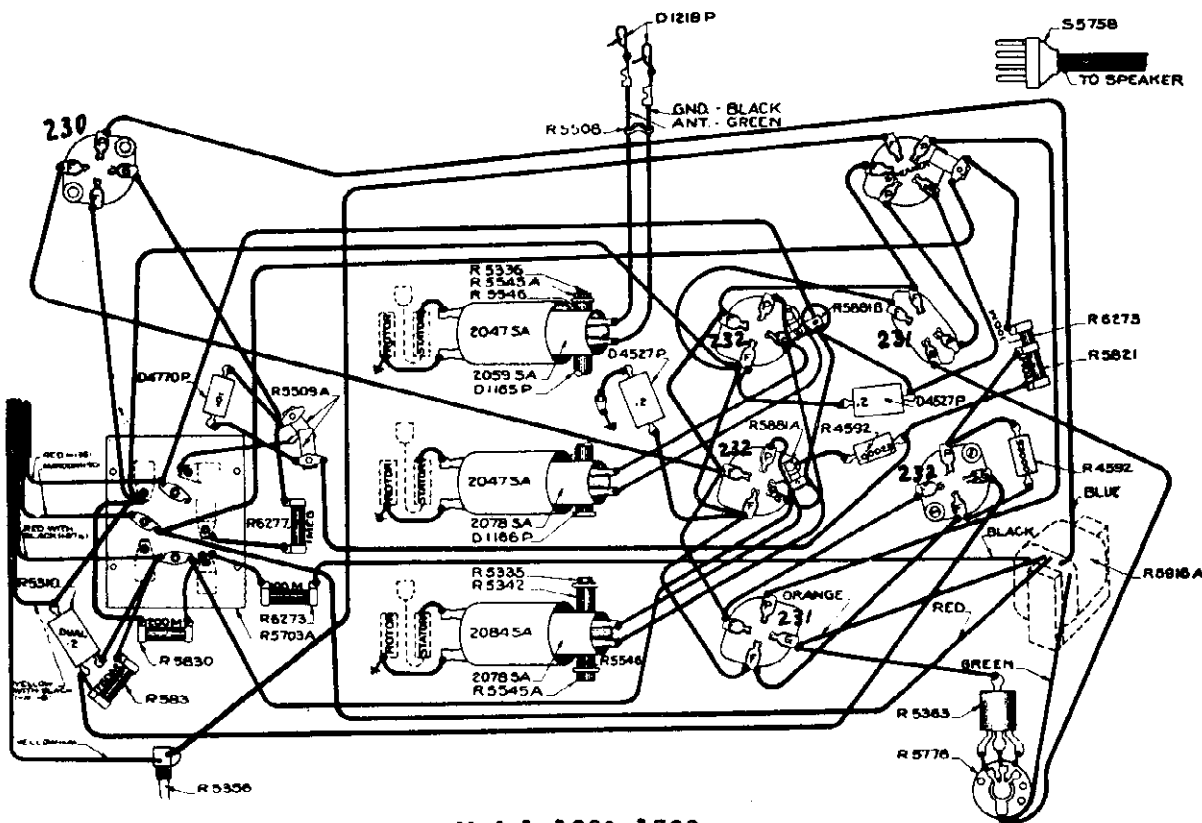

Model 1290,1300






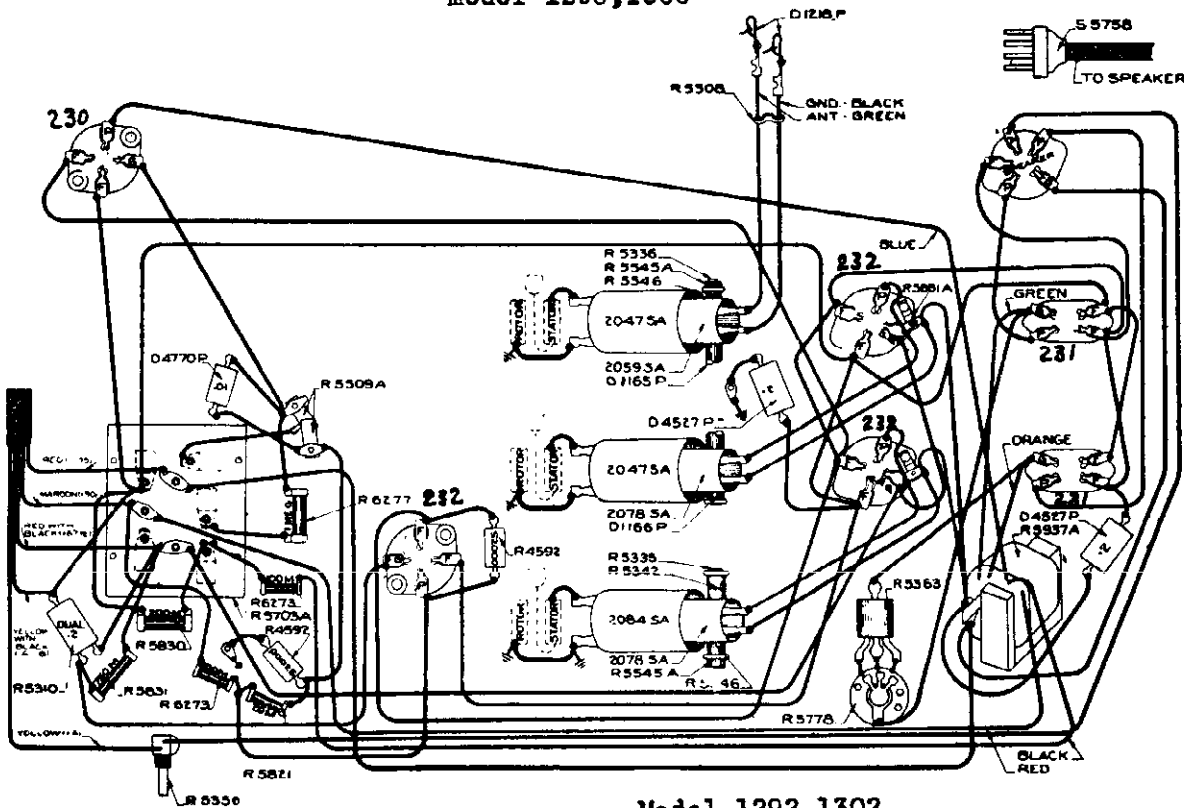


Model 1292,1302



MODEL 1290,1300
 MODEL 1292,1302
 Schematic

SEARS-ROEBUCK & CO.


Model 40	RF1	RF2	Det.	1st Audio	2S1
Plate Voltage D.C.	135	135	80	90	130
Screen Voltage D.C.	87	87	25		
Filament Voltage D.C.	2.0	2.0	2.0	2.0	2.0
Control Grid Voltage D.C.	3	3		4.5	22.5

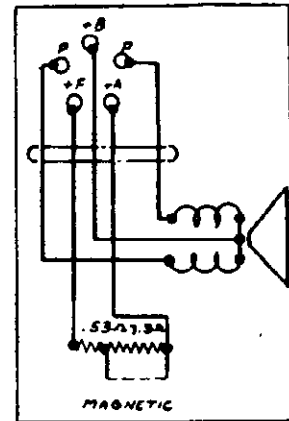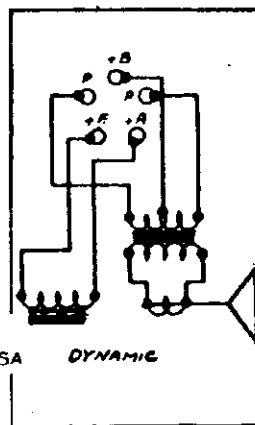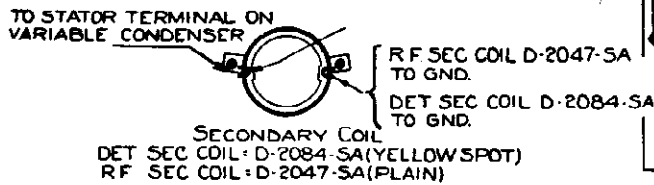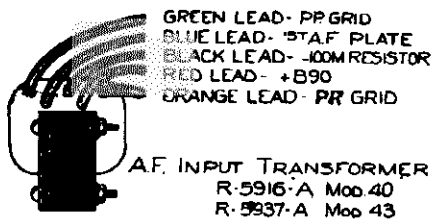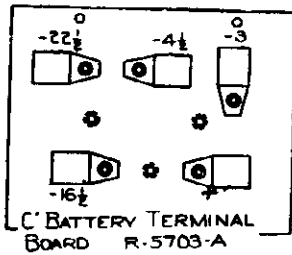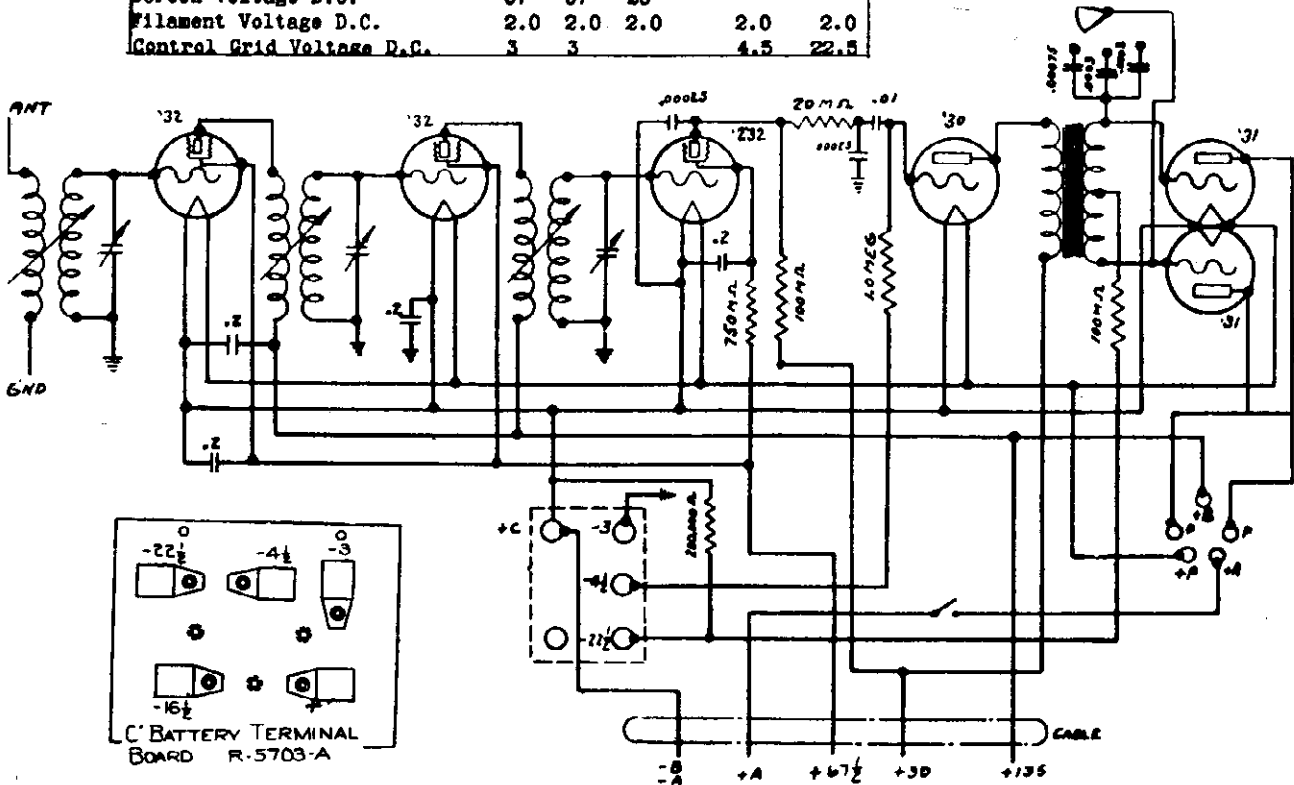

1290,1300

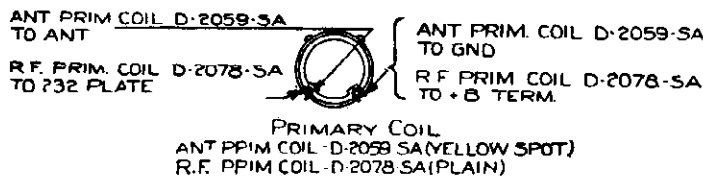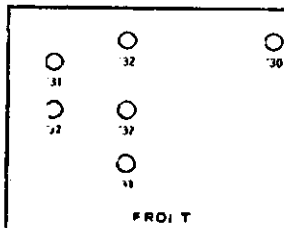


1292,1302

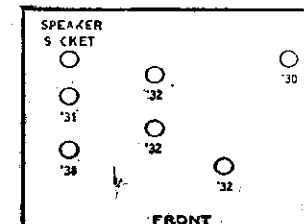

MODEL 1310,1312
Voltage-Data

SEARS-ROEBUCK & CO.

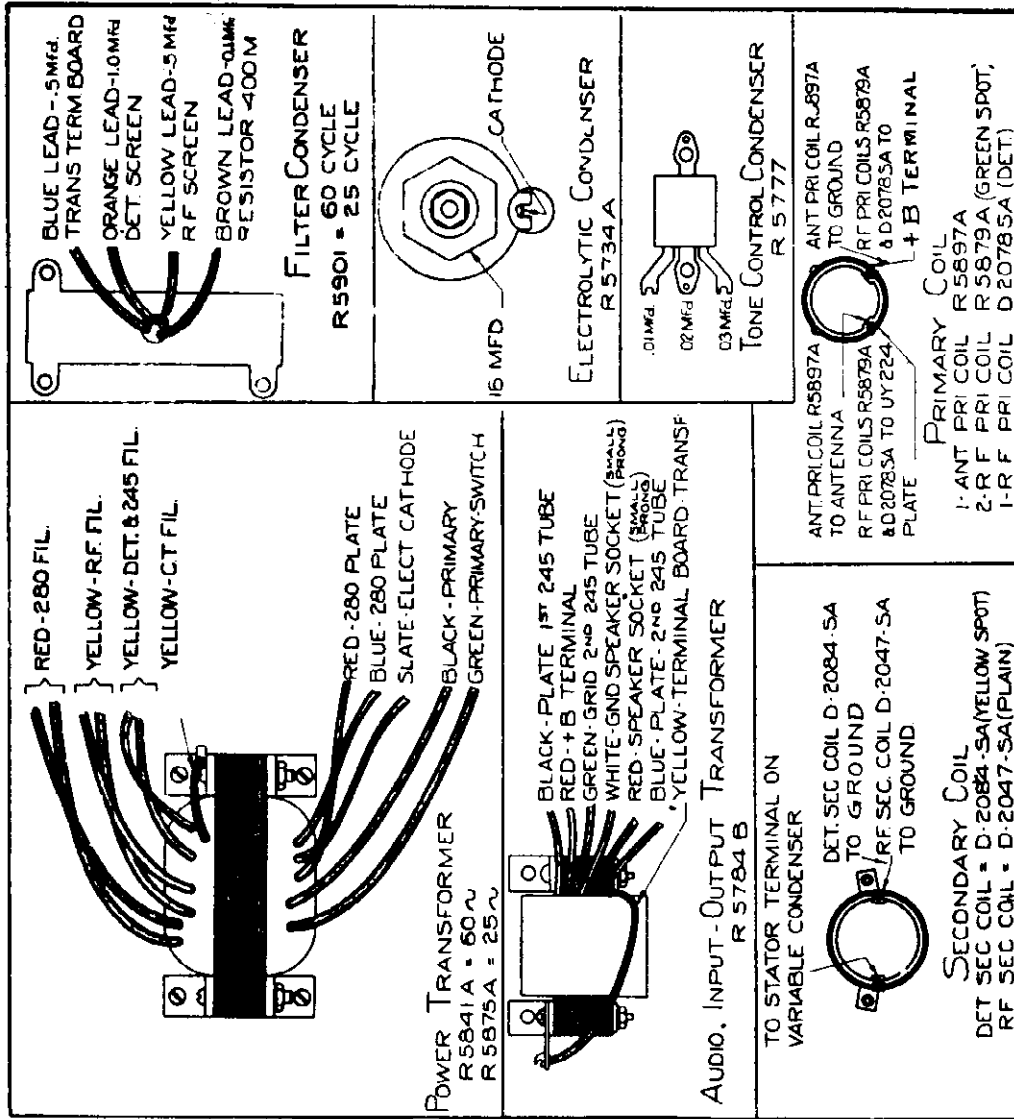

LEAD DETAILS OF POWER & AUDIO TRANSFORMER, FILTER, TONE CONTROL, ELECTROLYTIC CONDENSERS AND R.F. COILS.

VOLTAGE READINGS - MODELS 37 & 37-P

60 Cycle	Line Voltage 115								
		RF1	RF2	RF3	Det.	245#1	245#2	280AC	280DC
Plate Voltage D.C.	250	250	250	115	250	250	345	350	
Screen Voltage D.C.	65	65	65	100					
Heater Voltage A.C.	2.4	2.4	2.4	2.4	2.4	2.4	4.8		
Control Grid Voltage D.C.	2.2	2.4	2.4	10	20	48			
Speaker Field Voltage	100								
Total Rectifier Current	.070								

25 Cycle	Line Voltage 115								
		RF1	RF2	RF3	Det.	245#1	245#2	280AC	280DC
Plate Voltage D.C.	240	240	240	100	240	240	340	340	
Screen Voltage D.C.	65	65	65	100					
Heater Voltage A.C.	2.4	2.4	2.4	2.4	2.4	2.4	4.8		
Control Grid Voltage D.C.	2.2	2.4	2.4	10	20	45			
Speaker Field Voltage	100								
Total Rectifier Current	MADC .070								

Control grid voltage measured from cathode to ground or from cathode to filament. 245 grid voltage measured from grid to ground.


SEARS-ROEBUCK & CO.

MODEL 1320,1322,1324
MODEL 1450
Schematics


60 Cycle	Total Watts - 80								
Line Voltage - 115	Tran.	Osc.	I.F.	R.F.	Det.	2-247	280AC	280DC	
Plate Voltage DC	230	40	240	240	160	235	240	350	
Screen Voltage DC	65		65	65	20	240			
Heater Voltage AC	2.44	2.44	2.44	2.44	2.44	2.45	4.85		
Control Grid Voltage DC	10		1.7-40	1.7-40	20	16			
Speaker Field Voltage	110 Volts.								
Total Plate Current	1075 amp.								

25 Cycle	Total Watts - 85								
Line Voltage - 115	Tran.	Osc.	I.F.	R.F.	Det.	2-247	280AC	280DC	
Plate Voltage DC	220	40	230	230	160	225	325	340	
Screen Voltage DC	70		70	70	25	230			
Heater Voltage AC	2.25	2.25	2.25	2.25	2.45	2.45	4.7		
Control Grid Voltage DC	10		2-38	2-38	20	15			
Speaker Field Voltage	100 Volts								
Total Plate Current	.075 amp.								

Note: Control grid volts are measured from cathode to ground or cathode to heater. 247 grid voltage from grid to ground or filament.

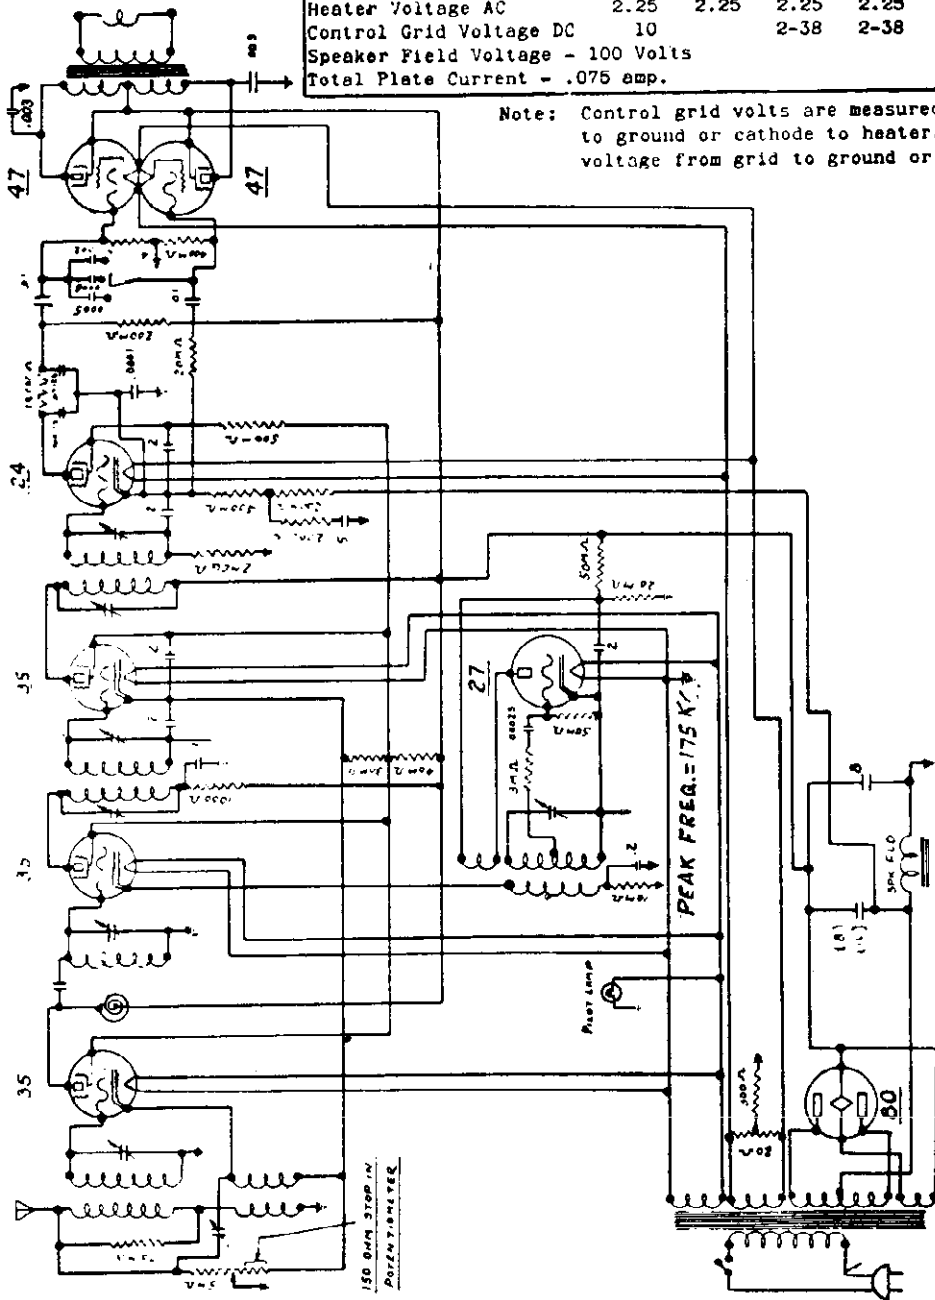


NOTE: In this set the hum across the field coil is used to buck out hum set up in the tube circuits. Causes of hum can be traced to defective detector or output tubes. (Interchange output tubes) Shorted condenser or open resistors in hum filter circuit. The hum filter circuit consists of a 2000 ohm resistor and a 0.5 condenser in the grid bias resistor circuit. This connects from the cathode of the detector to the negative side of the speaker field. Other causes of hum are Reversed speaker field, open or shorted condensers in detector circuit, open or grounded 20 ohm center tamped resistor, defective tone control, defective speaker or a defective electrolytic condenser.

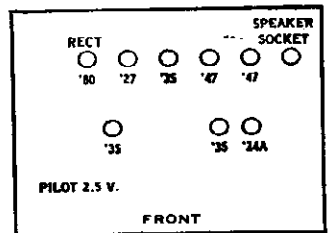

SEARS-ROEBUCK & CO.

MODEL 1430
Parts-Voltage

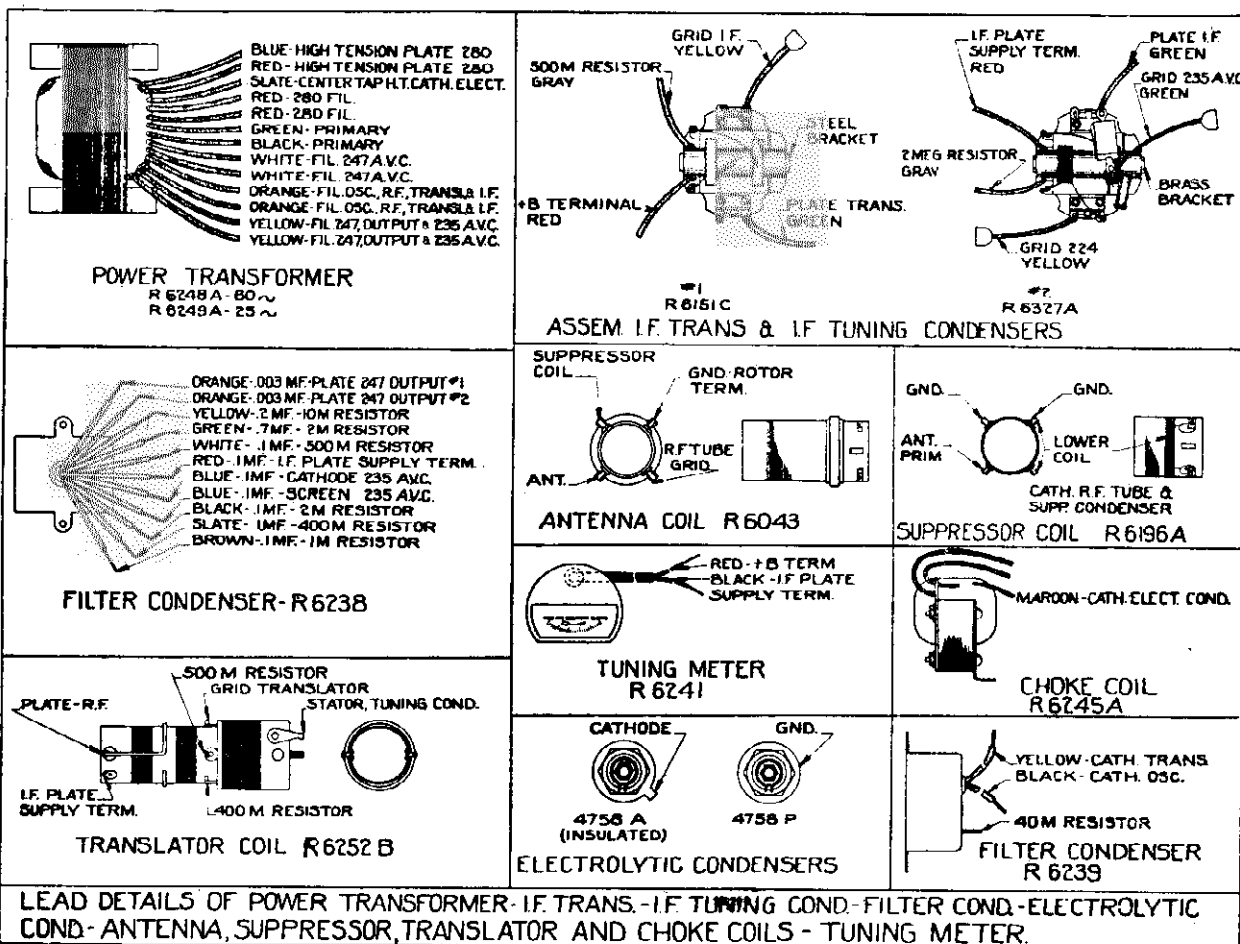

MODEL 1430 - 60 CYCLE
Line Voltage 115
Total Watts 100

	Trans	Osc.	IF	RF	Det	#1 247 Output	#2 247 Output	AVC Amp	AVC 235	AVC 247	AVC 280	AVC 280
Plate Voltage	230	20	230	230	160	230	230	230	230	70	100	340
Screen Voltage	70		70	70	25	230	230	70	100			340
Grid Voltage	var		var.	var.	20	15	15	var.	18			
Filament Voltage	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	4.85			
Speaker Field Voltage	-	110										
Total Plate Current	-	80 ma.										


Note: All voltages measured with a 1000 ohm per volt meter, 250 volt scale, with volume level control at maximum. 247 output grid voltages were measured from filament to ground, and translator grid from cathode to ground. Grid voltages on the RF and IF will be variable when the set is operating. AVC plate voltages will be the grid voltages on RF IF and translator tubes.

Notes - Causes of no signals can be traced to some of the following reasons. Grid slips shorted to tops of tube shields. Open or shorted condensers. Unsoldered leads. Solder under tube socket terminals. Defective tubes. Oscillator not working. Open image suppressor coil. Defective speaker or shorted tone control connection. Poor quality can be traced to defective output or detector tubes. Set not tuned properly. A poor 235 in the IF, RF or translator sockets will give poor quality and unsatisfactory volume control. Shorted or open grid

coupling condenser in the audio circuit, or open resistors in the audio circuits will also contribute to poor quality. Oscillation can be traced to defective tubes, grid leads of detector and IF too close, or an open condenser in the plate circuit of the translator.


MODEL 1430
Schematic

SEARS-ROEBUCK & CO.

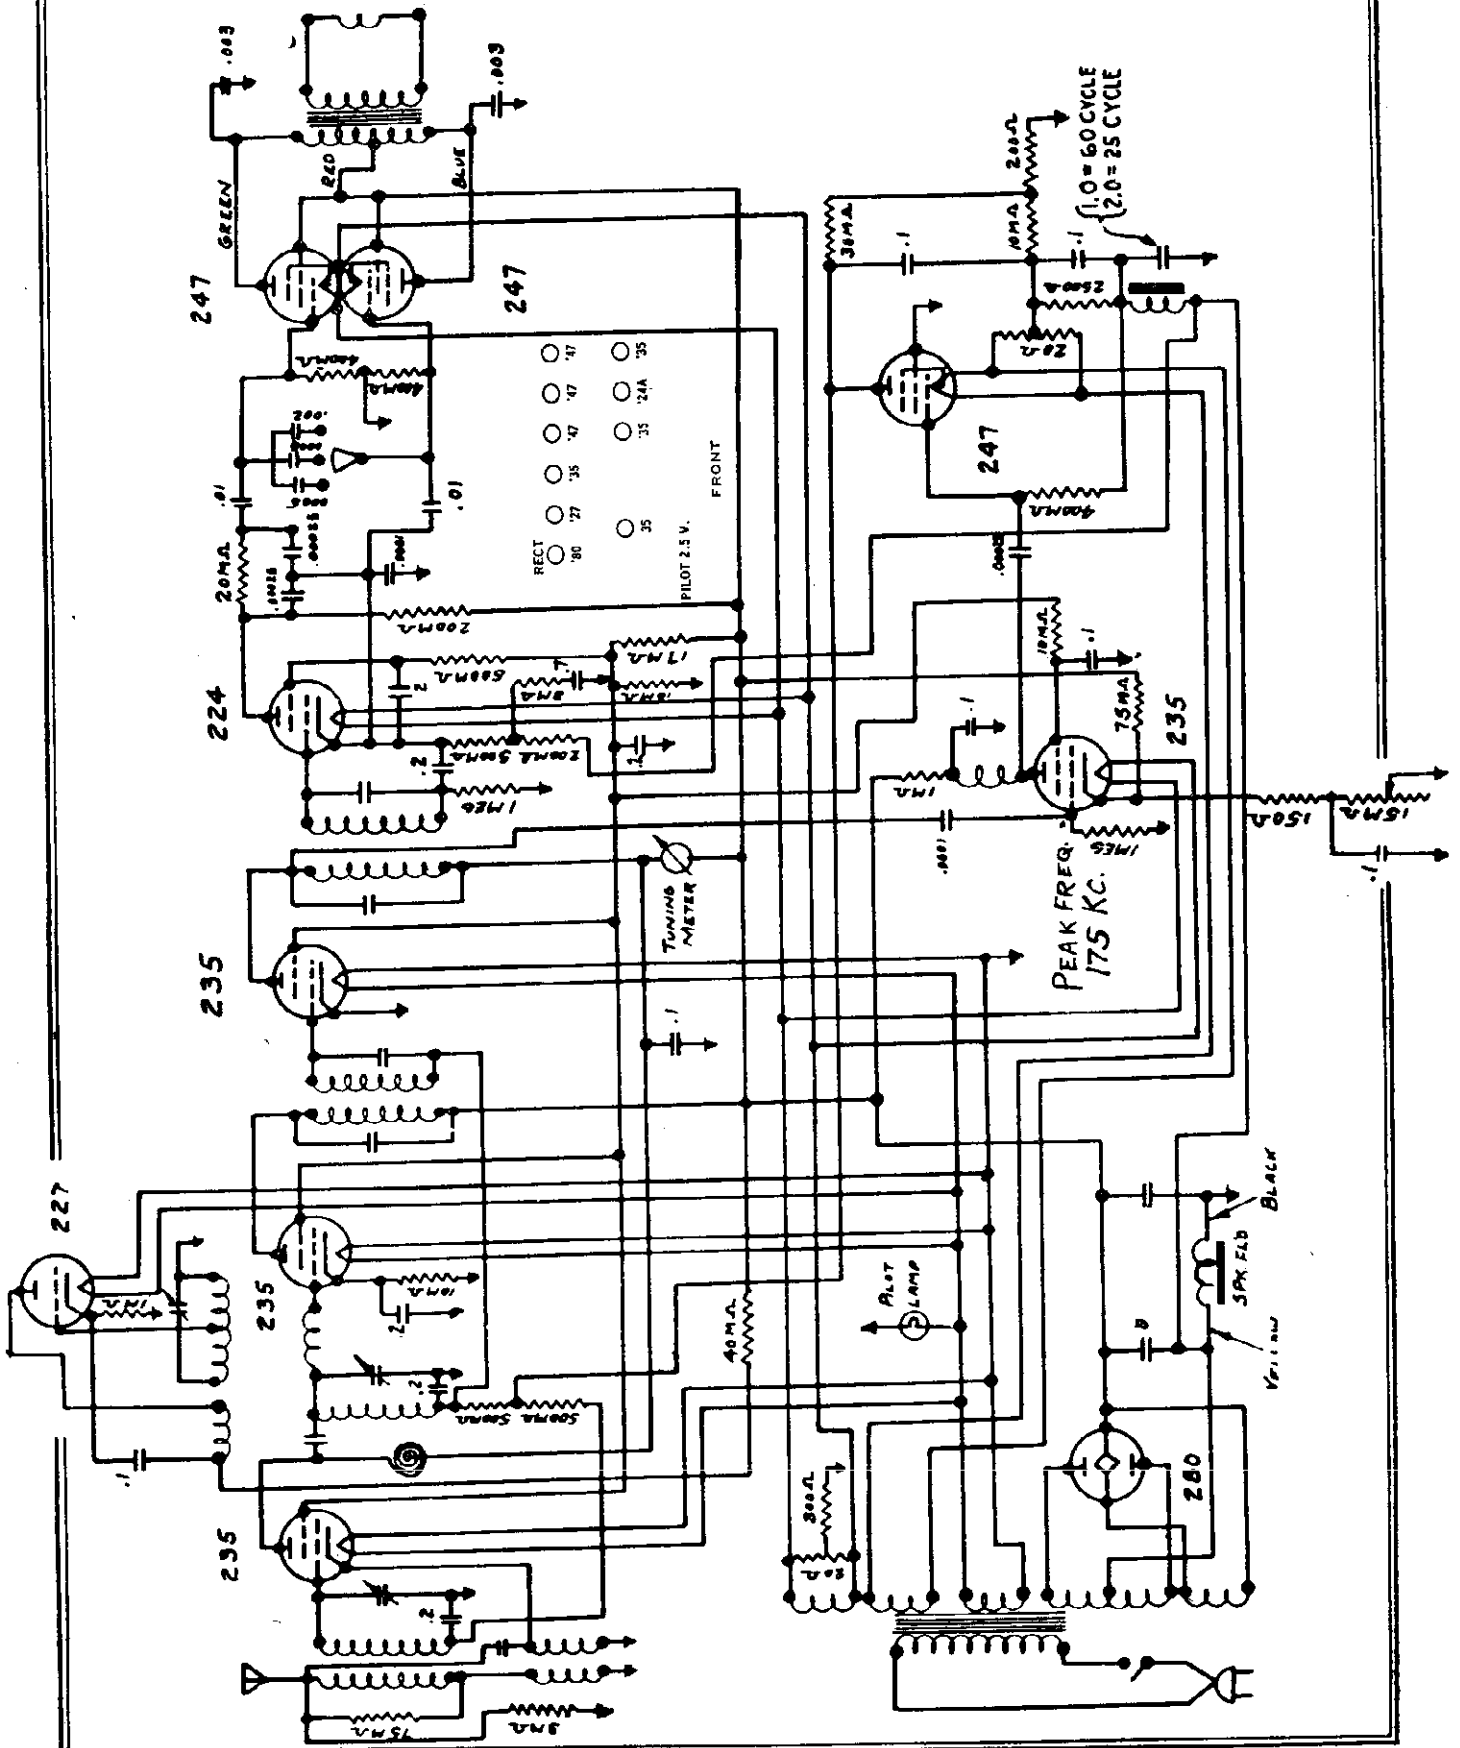

SEARS-ROEBUCK & CO.

MODEL Silvertone 218

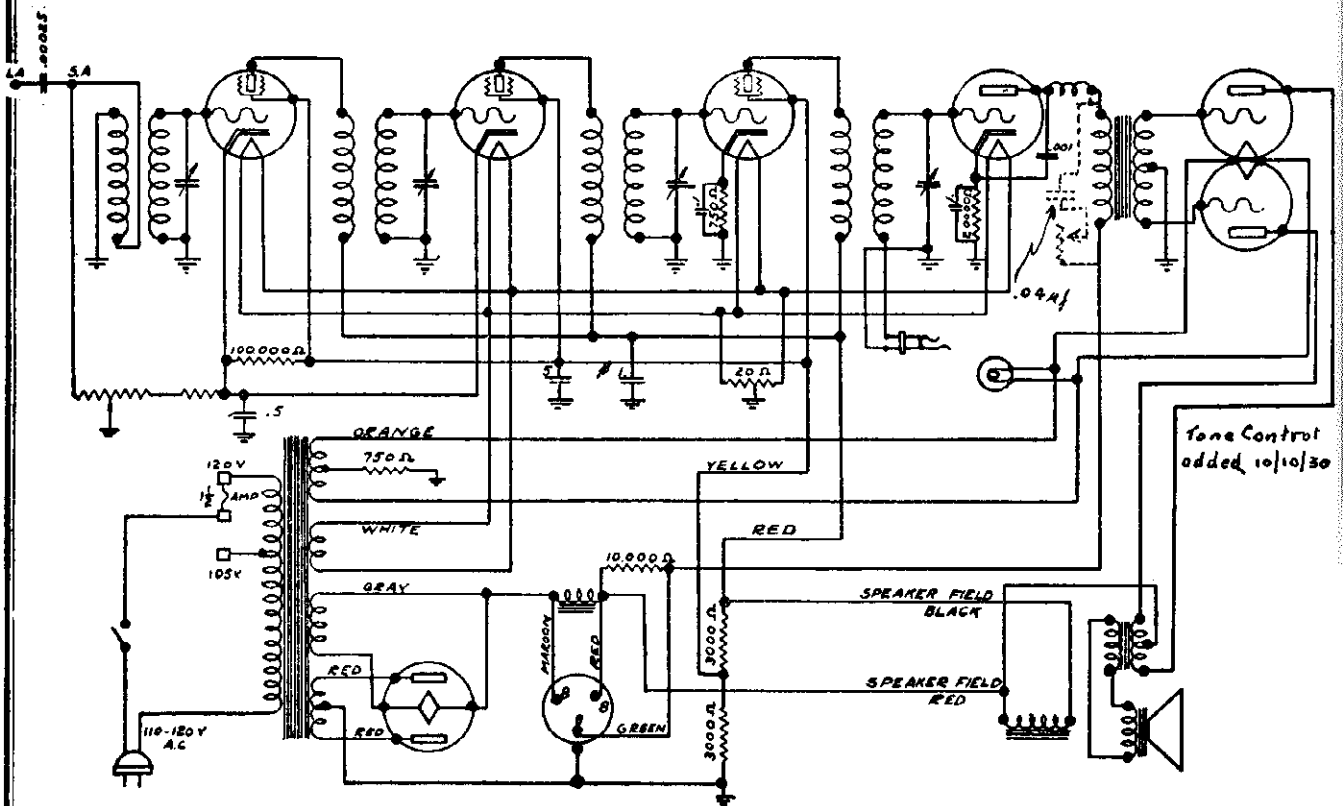


READINGS WITH PLUG IN SET SOCKET AND TUBE IN TESTER SOCKET

Tube No. in Order	Position of Tube	Type of Tube	A Volts	B Volts	C Volts	Cathode	Plate M.A.	Screen Grid Volts
1	1st R.F.	224	2.4	178	3.4	3.4	3.5	85
2	2nd R.F.	224	2.4	178	3.4	3.4	3.5	85
3	3rd R.F.	224	2.4	178	3.4	3.4	3.5	85
4	DET.	227	2.4	240	23.	2.5	1.1	
5	Push-Pull	245	2.4	235	45		27	
6	Push-Pull	245	2.4	235	45		27	
7	RECT.	280	5.	310				

Line Voltage 120

Set On 120 Volt Tap

Volume Control FULL ON

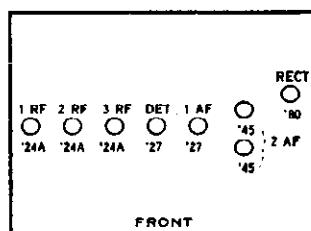

SEARS-ROEBUCK & CO.

MODEL 1462
 MODEL 1480,1482,
 1484

Model 1462


	Trans. 235	Osc. 227	IF 235	RF 235	247 Output	AVC 227	280 DC	Det 224
PLATE VOLTAGE	160	55	160	160	242	48	370	80
AVERAGE PLATE CURRENT MA	1.	-	5.	5.	26.	-	-	.2
SCREEN VOLTAGE	58	-	58	58	250	-	-	40
AVERAGE SCREEN CURRENT MA	.2	-	1.	1.	7.	-	-	.15
GRID VOLTAGE	10	-	1.5	1.5	18	-	-	6
FILAMENT VOLTAGE	2.4	2.4	2.4	2.4	2.6	2.5	5	2.5
SPEAKER FIELD VOLTAGE	83 volts		Line Voltage		115 volts			
TOTAL PLATE CURRENT	60 ma		Total Watts		85			

Model 1480,1482,1484

	Trans. 235	Osc. 227	IF 235	RF 235	Det 224	Pentode 247	280
PLATE VOLTAGE	230	55	230	230	75	220	360
AVERAGE PLATE CURRENT MA	1.	3.	5.	5.	.2	26.	
SCREEN VOLTAGE	55		55	55	38	230	
AVERAGE SCREEN CURRENT MA	.2		1.	1.	.15	7.	
GRID VOLTAGE	10		1.5	1.5	5	17	
FILAMENT VOLTAGE	2.47	2.52	2.54	2.56	2.5	2.49	
SPEAKER FIELD	115 volts		LINE VOLTAGE		115		
TOTAL PLATE CURRENT	40 ma.		TOTAL WATTS		70		

MODEL 1480,1482,1484
Schematic

SEARS-ROEBUCK & CO.

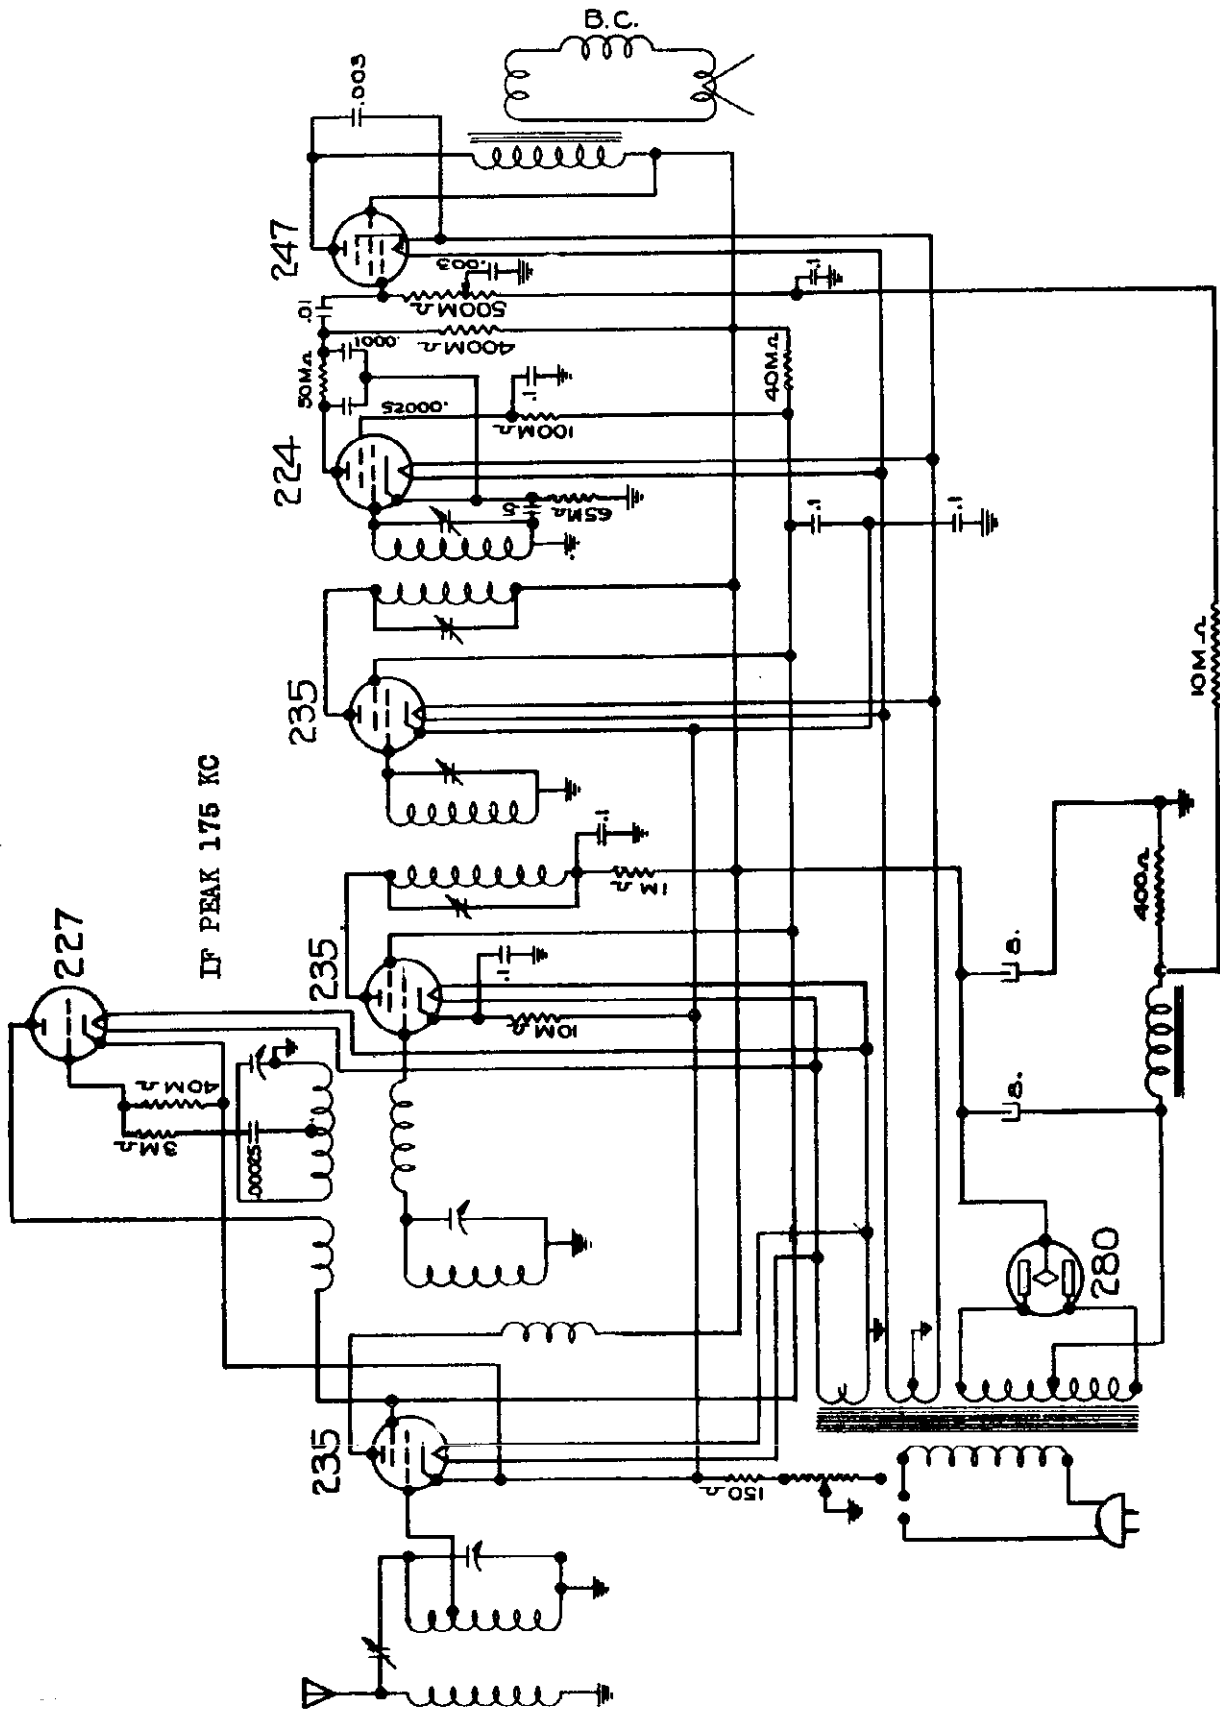

MODEL 108-A,110

Voltage, Data

SENTINEL RADIO CORP.

VOLTAGE TABLE

Never check voltages until all tubes are fully warmed up to proper operating condition. The voltage table given below is taken at 115 volts line with a Model 547 Weston set checker. It must be remembered that the voltage readings taken vary directly as the line voltage and also with the accuracy of the meters used. A variation of 10% plus or minus is permissible.

TUBE VOLTAGES		115 V. Line Volume Control Full On				
Type of Tube	Position of Tube	Filament Volts	B Volts	C Volts	NORMAL PLATE M.A.	Screen Volts
227	Oscillator	2.4	62.5		4.75	
235	Radio Frequency	2.4	240	2.15	2.75	27
224	1st Detector	2.4	230	4.35	.5	65
235	Intermediate	2.4	237	2.15	2.75	72
224	2nd Detector	2.4	100*	2.1*	2.5	35*
247	Pentode	2.4	250	16.5**	32.5	250
280	Rectifier	4.95			27.ea.plate	

*These readings are only comparative and are not true voltages applied. The volt meter, when the readings are taken at these points, is in series with a very high resistance.

** To read the 247 bias, read between H.K.speaker socket and ground.

ALIGNMENT OF RECEIVER:

Because of the construction and thorough impregnation of the intermediate coils, the intermediate stages should rarely need re-tracking. Only when an intermediate coil has become defective due either to an open or burned out winding, should it be necessary to re-adjust the intermediate trimmers. Should this occur, it is necessary that an oscillator be used and the intermediate trimmers be adjusted at 175 kilocycles. To align the intermediate stages, connect the high side of the oscillator output to the grid circuit of the first detector, which is done by disconnecting the grid cap of the 224 first detector and connecting the high side of the test oscillator to the control grid of this tube. The ground side of the test oscillator should be connected to the ground post on the chassis. Set the oscillator at 175 kilocycles and adjust the output of the oscillator so that a convenient reading is obtained on the output meter. Be sure that the output from the oscillator is not so large that it will overload the second detector. If during the alignment the meter goes off scale, reduce the output of the test oscillator or adjust the receiver volume control.

The trimmers of the intermediate coils are accessible through the small holes in the top of the intermediate shield can. There are two trimmers to each intermediate coil. Align the grid trimmer of the first intermediate coil. After a maximum reading is obtained by adjusting the grid trimmer on the first intermediate, adjust the primary for maximum reading and then re-check the grid side to make certain the alignment of the secondary has not been changed by the adjustment of the primary. The same procedure is followed in aligning the second intermediate coils. After both intermediate coils are properly aligned the adjustment of the intermediate stage is complete and they should not be further disturbed.

Replace the grid cap on the first detector and connect the oscillator output leads to the antenna and ground posts of the receiver and set the oscillator at 1435 kilocycles. Then tune the receiver to 1435 kilocycles on the dial. It is important that the receiver be tuned to this point. If the receiver is out of the cabinet it will be necessary to use some temporary indicator so that the position 1435 kilocycles on the dial may be accurately located. (This indicator should be set so that when the variable condensers are at the maximum capacity stop the indicator points to the last line on the dial at the low frequency end.) Then track the variable condensers by adjusting the trimmer condensers in the following order: Oscillator, antenna and radio frequency - (reading from the front of the receiver toward the back, the variable condenser sections are: Oscillator, antenna and radio frequency). After the variable condensers have been properly tracked at 1435 kilocycles, adjust the oscillator to 1295 kilocycles. Tune the receiver to this frequency. Check alignment of the condensers at this point by bending the end plate of the rotors in and out, noting the change in reading on the output meter. If when the plates are bent in the reading is increased, it is an indication that that particular section requires more capacity and the end plate should be permanently bent in at this point; or, if when the end plate is bent away, the reading is increased, the end plate should be bent away permanently, as it is an indication that that particular section requires less capacity at that particular point. The variable condensers should be checked in this manner at 1295, 880, 650 and 550 kilocycles. These points have been chosen so as to take advantage of the slots in the end plates of the variable condensers. This procedure of bending plates should rarely be necessary on the oscillator section, as the plates of the oscillator section are especially designed to properly track over the broadcast spectrum, providing the antenna and radio frequency stages are correctly aligned.


ANTENNA:

Satisfactory radio reception is largely dependent upon a proper antenna and ground installation. It is not possible to prescribe any definite form of antenna construction, as the most satisfactory aerial for any particular installation will vary in different locations, depending largely upon local structural details and sources of interference. Because of the enormous amplification obtained from the superheterodyne receiver, a large antenna is not desirable nor necessary. An antenna of from 15 to 35 feet, including lead-in and ground, will in most installations be ample. In congested districts an excessively long antenna will result in apparent loss of tone quality and increased hum. In isolated communities where distant daylight reception is desired, the length of the antenna may be increased so as to obtain satisfactory reception.

While in most installations A.C. receivers apparently work almost as well without a ground as they do with one, in no case should an installation be made where the receiver is not connected to a good ground. Water pipes and steam radiators generally make satisfactory grounds. The ground lead should be connected by means of an approved ground clamp or soldered to a section of the pipe that has been thoroughly cleaned. If neither are available a 6 ft. iron pipe driven in the ground, preferably in a position where the soil is moist, will be satisfactory.

MODEL 109

SENTINEL RADIO CORP.

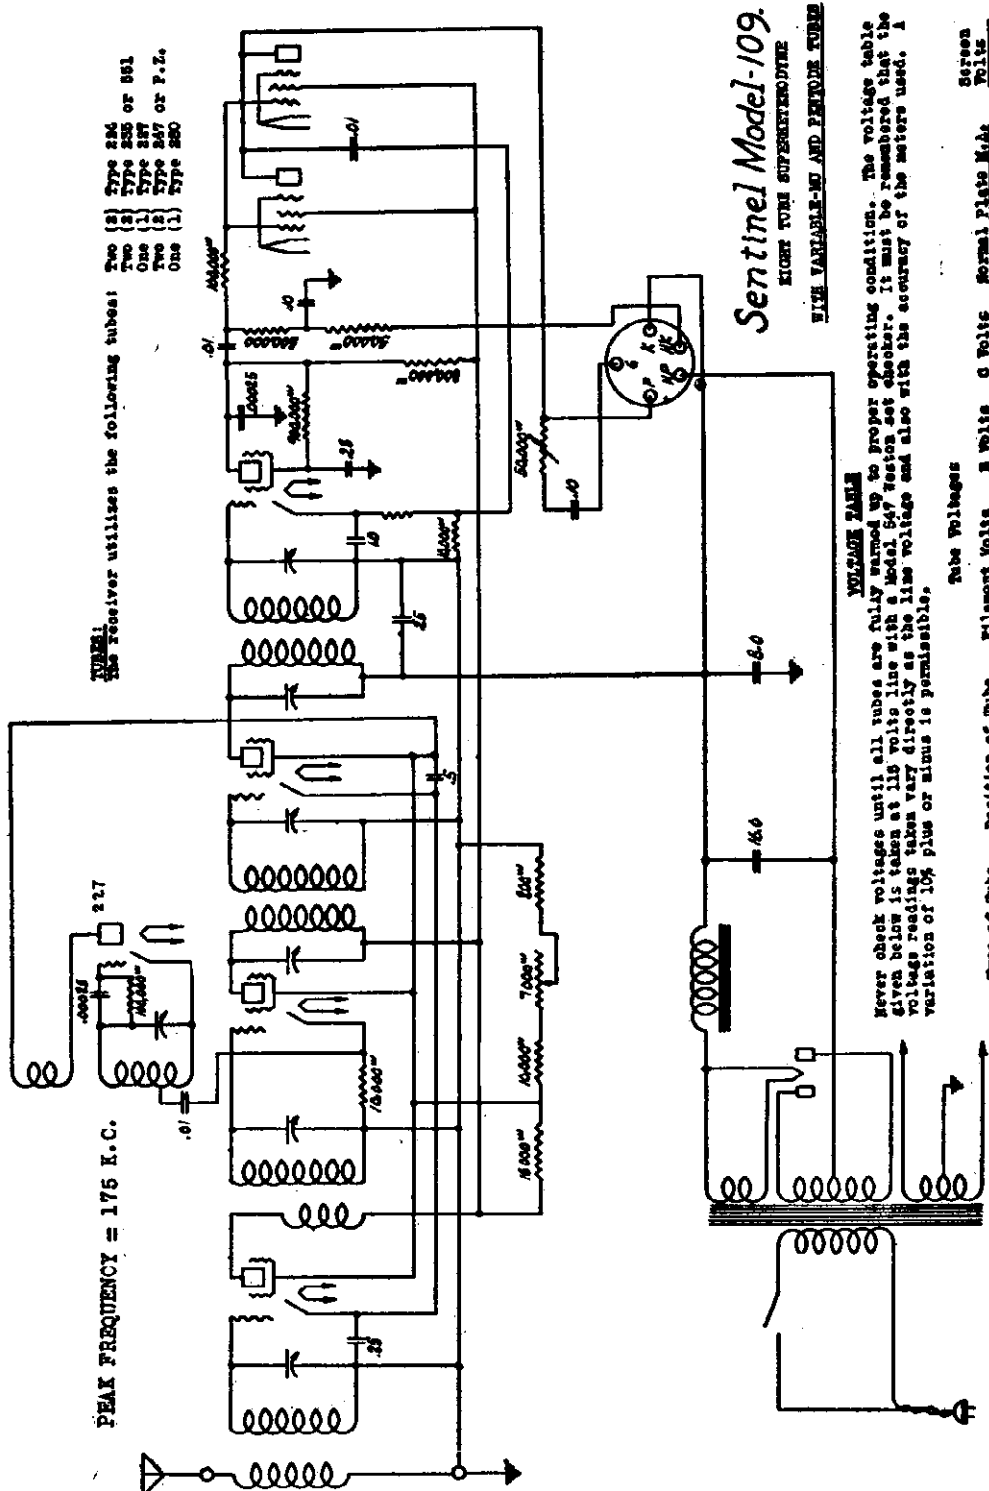

TUBES:
 This Receiver utilizes the following tubes:
 Two (2) Type 234
 Two (2) Type 235 or 251
 One (1) Type 237
 Two (2) Type 247 or P.Z.
 One (1) Type 250


PEAK FREQUENCY = 175 K.C.

Sentinel Model-109.
 HIGH VARIABLE-INDUCTIVE
 ELECTRON SUPERHETERODYNE

VOLTAGE TABLE
 Never check voltages until all tubes are fully warmed up to proper operating condition. The voltage table given below is taken at 115 volts line with a Model 547 section set absorber. It must be remembered that the voltage readings taken vary directly as the line voltage and also with the accuracy of the meters used. A variation of 10% plus or minus is permissible.

Type of Tube	Position of Tube	Filament Volts	B Volts	G Volts	Normal Plate Grids	Screen Plate
234	Oscillator	1.4	21.5	21.5	4.75	27
235	Radio Frequency	2.4	4.35	4.35	2.75	65
237	1st Detector	2.4	2.15	2.15	2.75	72
247	Intermediate	2.4	2.1	2.1	2.5	25*
247	2nd Detector	2.4	10.0*	10.0*	22.5	250
247	Pentode	2.4	16.8**	16.8**	22.5	250
250	Rectifier	4.56	250	250	47.5	250

115 V. Line Volume Control Full On
 *These readings are only comparative and are not true voltages applied. The volt meter, when the readings are taken at these points, is in series with a very high resistance.
 **To read the 247 bias, read between H.K. speaker socket and ground.

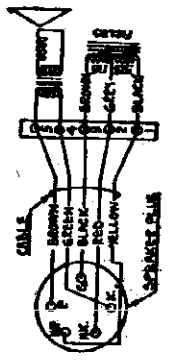


ELECTRO DYNAMIC SPEAKER:
 The electro dynamic speaker has a tapped field winding - one section of which is 585 ohms and is utilized as the second choke in the filter circuit. The other section, which is 175 ohms, is used to obtain the proper bias for the 247 tubes, as well as acting as an additional filter choke.

VOLTAGE REGULATOR TUBE:
 Shipped with each receiver is a fuse plug containing a 4 ampere fuse and one spare 4 ampere fuse. Frequent and continued burning out of the fuse is an indication that either there is a defective tube, or some part of the receiver is defective, and these possible sources of trouble should be carefully checked if this condition exists. In districts where the line voltage is excessively high or low or fluctuating, the fuse plug may be substituted by a line voltage regulator tube which will maintain the voltage applied to the primary more constant. Either an Aerovite #10-10 or Durovite #101 may be used.

SENTINEL RADIO CORP.

MODEL 111

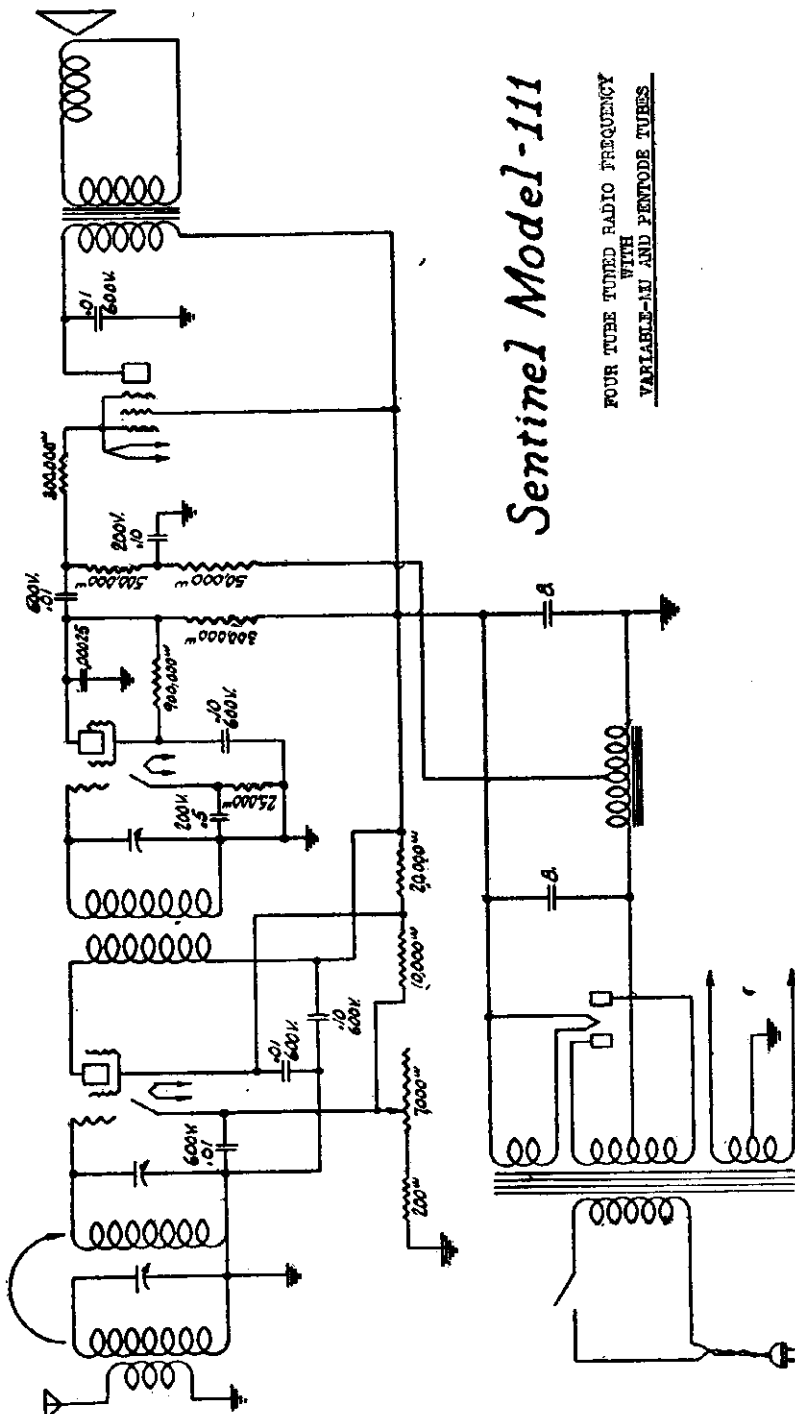


Sentinel Model-111

FOUR TUBE TUNED RADIO FREQUENCY WITH VARIABLE-TU AND PENTODE TUBES

ALIGNMENT OF RECEIVER:
 To align receiver it is recommended that an oscillator and output meter be used, as much better results can be obtained than by aligning on a broadcast signal. However, in either case the procedure is the same. To align the variable condensers connect the high side of the test oscillator to the antenna lead and the low side of the oscillator to the ground lead and tune the oscillator to 1500 kilocycles, adjusting the output of the oscillator so that a convenient reading is obtained on the output meter. If during the alignment the meter goes off scale, adjust the output of the test oscillator or reduce the output by adjusting the receiver volume control. It is important that the receiver be tuned to minimum capacity stop. Then track the variable condensers at this point by adjusting the trimmer condensers, which are mounted on top of the variable condensers, to maximum reading on the output meter in the following order: Antenna, Coupling Stage and Radio Frequency Stage. The variable condenser sections are: (Antenna, Coupling Stage, and Radio Frequency Stage looking at the receiver from the front, reading toward the back.)

After the variable condensers are properly aligned at 1500 kilocycles by adjusting the trimmer condensers, adjust the oscillator to 1295 kilocycles. Tune the receiver to this frequency, making sure that the receiver is tuned exactly in resonance with the incoming signal, and check alignment of the condensers at this point by bending the end plate of the rotors on the antenna, coupling stage and radio frequency stage in the order named, noting the change in reading on the output meter. If when the plates are bent in the point of the variable condenser and the end plate should be permanently bent; or if when the end plate is bent away the reading is increased, that section requires less capacity at that particular point, and the end plate should be permanently bent away from the stator. Each section of the variable condenser should be checked in this manner at 1295, 830, 750 and 550 kilocycles. These frequencies have been chosen so as to take advantage of the slots in the end plates of the variable condenser.

Model 111

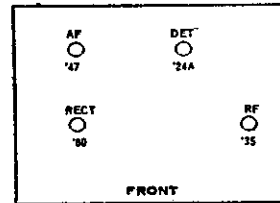

ELECTRO DYNAMIC SPEAKER:

The electro dynamic speaker has a tapped winding, one section of which is 1320 ohms and the other section 300 ohms is used to obtain the proper bias for the 247 tube. The field winding is used as the filter choke.


Tube Voltage

Type of Tube	Position of Tube	Filament Volts	Plate Volts	C Volts	Normal Plate M.A.	Space Charge Grid	Screen Volts
235	Radio Frequency,	2.4	250	2.5	4		90
224	Detector	2.4	65*	3.5*	4		37.5*
247	Output	2.4	230	16.5*	35	250	
250	Rectifier,	5.			30 M.A.		

115 V. Line Volume Control Full On

*These readings are only comparative and are not true voltages applied. The volt meter, when the readings are taken at these points, is in series with a very high resistance.

SENTINEL RADIO CORP.

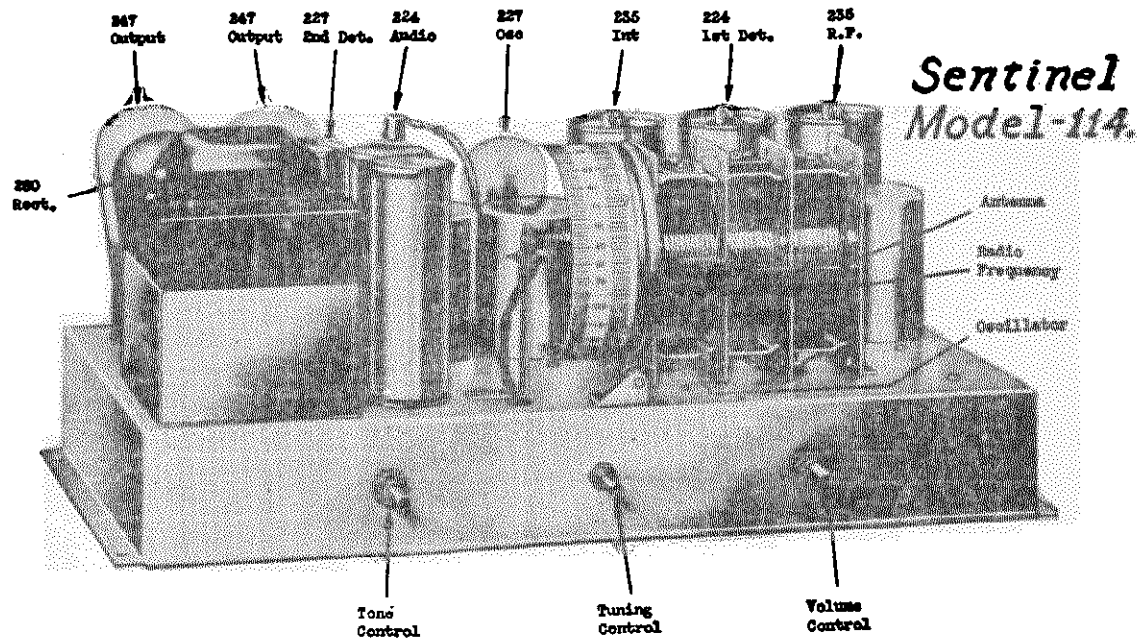MODEL 114
Voltage- Data**ALIGNMENT OF RECEIVER:**

Because of the construction and thorough impregnation of the intermediate coils, the intermediate stages should rarely need retracking. Only when an intermediate coil has become defective due to an open or burned out winding, should it be necessary to readjust the intermediate trimmers. Should this occur, it is necessary that an oscillator be used and the intermediate trimmers be adjusted at 175 kilocycles. To align the intermediate stages, connect the high side of the oscillator output to the grid circuit of the first detector, which is done by disconnecting the grid cap of the 224 first detector and connecting the high side of the test oscillator to the control grid of this tube. The ground side of the test oscillator should be connected to the ground post on the chassis. Set the oscillator at 175 kilocycles and adjust the output of the oscillator so that a convenient reading is obtained on the output meter. Be sure that the output from the oscillator is not so large that it will overload the second detector. If during the alignment the meter goes off scale, reduce the output of the test oscillator or adjust the receiver volume control.

The trimmers of the intermediate coils are accessible through the small holes in the bottom of the chassis. There are two trimmers to each intermediate coil. Align the grid trimmer of the first intermediate coil. After a maximum reading is obtained by adjusting the grid trimmer on the first intermediate, adjust the primary for maximum reading and then recheck the grid side to make certain the alignment of the secondary has not been changed by the adjustment of the primary. The same procedure is followed in aligning the second intermediate coils. After both intermediate coils are properly aligned the adjustment of the intermediate stage is complete and they should not be further disturbed.

Replace the grid cap on the first detector and connect the oscillator output leads to the antenna and ground posts of the receiver and set the oscillator at 1435 kilocycles. Then tune the receiver to 1435 kilocycles on the dial. It is important that the receiver be tuned to this point. If the receiver is out of the cabinet it will be necessary to use some temporary indicator so that the position 1435 kilocycles on the dial may be accurately located. (This indicator should be set so that when the variable condensers are at the maximum capacity stop the indicator points to the last line on the dial at the low frequency end.) Then track the variable condensers by adjusting the trimmer condensers in the following order: Oscillator, antenna and radio frequency - (reading from the front of the receiver toward the back, the variable condenser sections are: Oscillator, antenna and radio frequency). After the variable condensers have been properly tracked at 1435 kilocycles, adjust the oscillator to 1295 kilocycles. Tune the receiver to this frequency. Check alignment of the condensers at this point by bending the end plate of the rotors in and out, noting the change in reading on the output meter. If when the plates are bent in the reading is increased, it is an indication that that particular section requires more capacity and the end plate should be permanently bent in at this point; or, if when the end plate is bent away the reading is increased, the end plate should be bent away permanently, as it is an indication that that particular section requires less capacity at that particular point. The variable condensers should be checked in this manner at 1295, 880, 650 and 550 kilocycles. These points have been chosen so as to take advantage of the slots in the end plates of the variable condensers. This procedure of bending plates should rarely be necessary on the oscillator section, as the plates of the oscillator section are especially designed to properly track over the broadcast spectrum, providing the antenna and radio frequency stages are correctly aligned.

Tube Voltages


Type of tube	Position of Tube	Filament Volts	B Volts	G Volts	Normal Plate M.A.	Screen Volts
287	Oscillator	2.4	62.5		4.75	
235	Radio Frequency	2.4	240	2.15	2.75	27
224	1st Detector	2.4	250	4.35	.5	65
235	Intermediate	2.4	237	2.15	2.75	72
227	End Detector	2.4				
247	Pentode	2.4	220	8.**	32.5	250
247	Pentode	2.4	220	8.**	32.5	250
280	Rectifier	4.9			47.5 ca. plate	
224	1st Andio	2.4	100	2.1*	.5	35*

115 V. line Volume Control Full On

**To read the 247 bias, read between 247 grid and ground.

*These readings are only comparative and are not true voltages applied. The volt meter, when the readings are taken at these points, is in series with a very high resistance.

SENTINEL RADIO CORP.

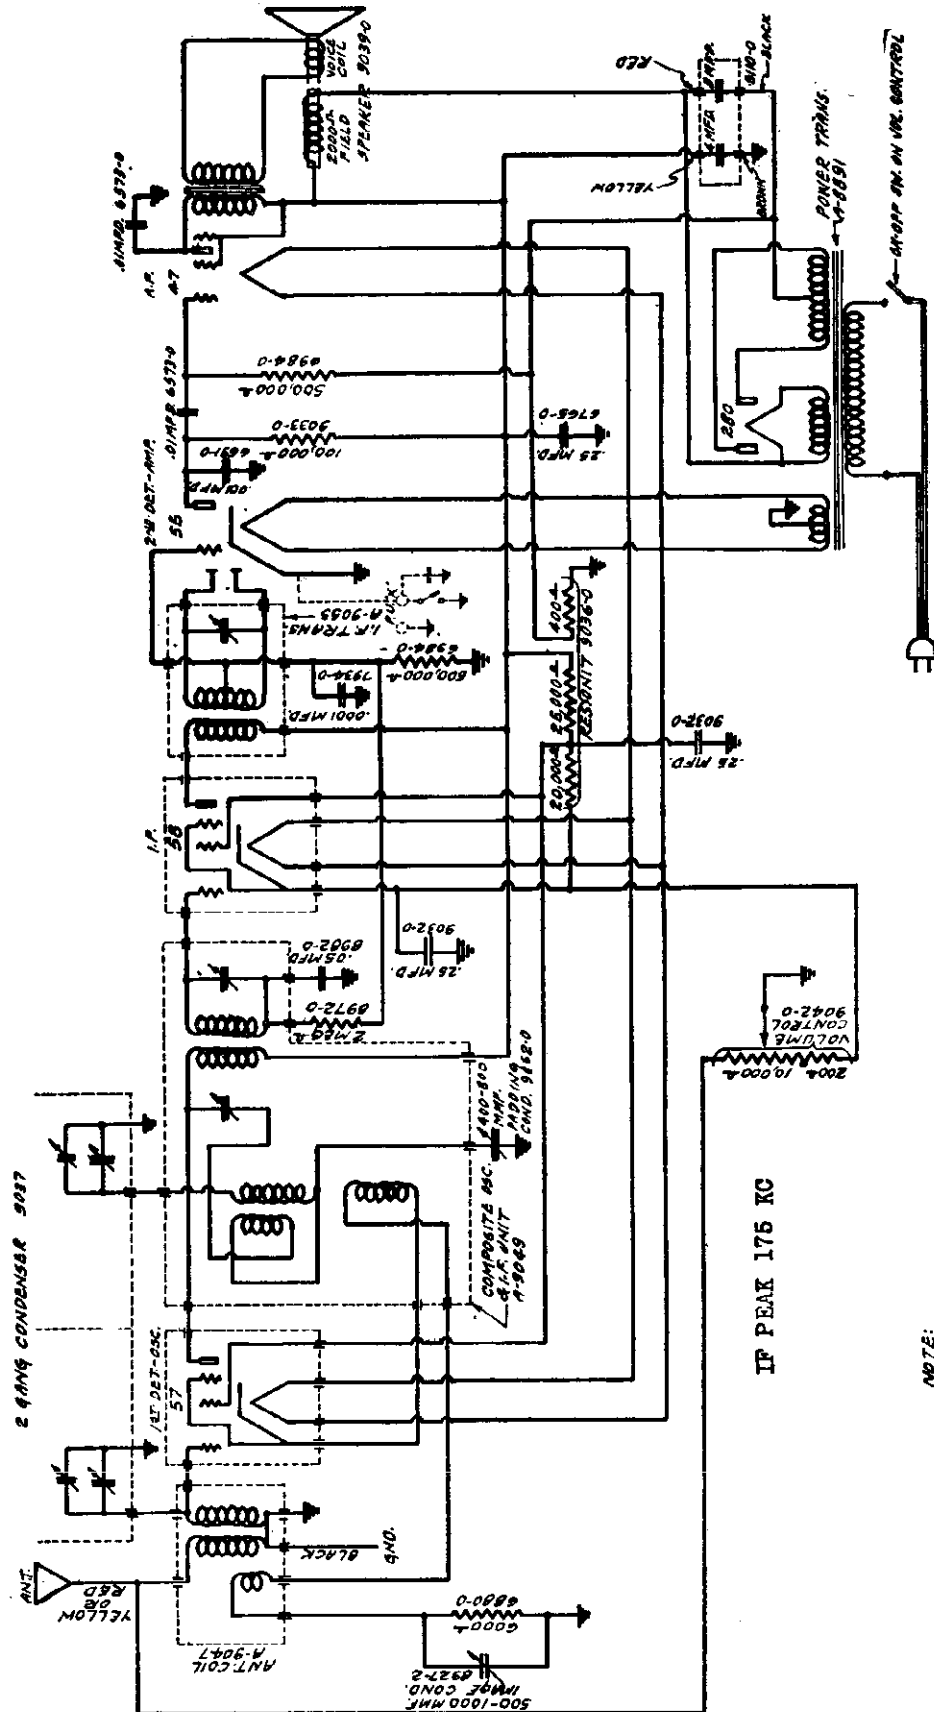


- NOTE:
1. DOTTED LINES DENOTE SHIELDING
 2. ALL NUMBERS SHOWN RELATIVE TO PARTS ARE OUR PART NOS.
 3. NUMBERS SHOWN WITH PREFIX "A" ARE COMPLETE ASSEMBLIES.
 4. WHEN PHONO JACKS ARE USED, CATHODE OF 55 TUBE IS CONNECTED TO POINT MARKED "X"

IP PEAK 175 KC


SENTINEL RADIO CORP.

MODEL 1020, 1030

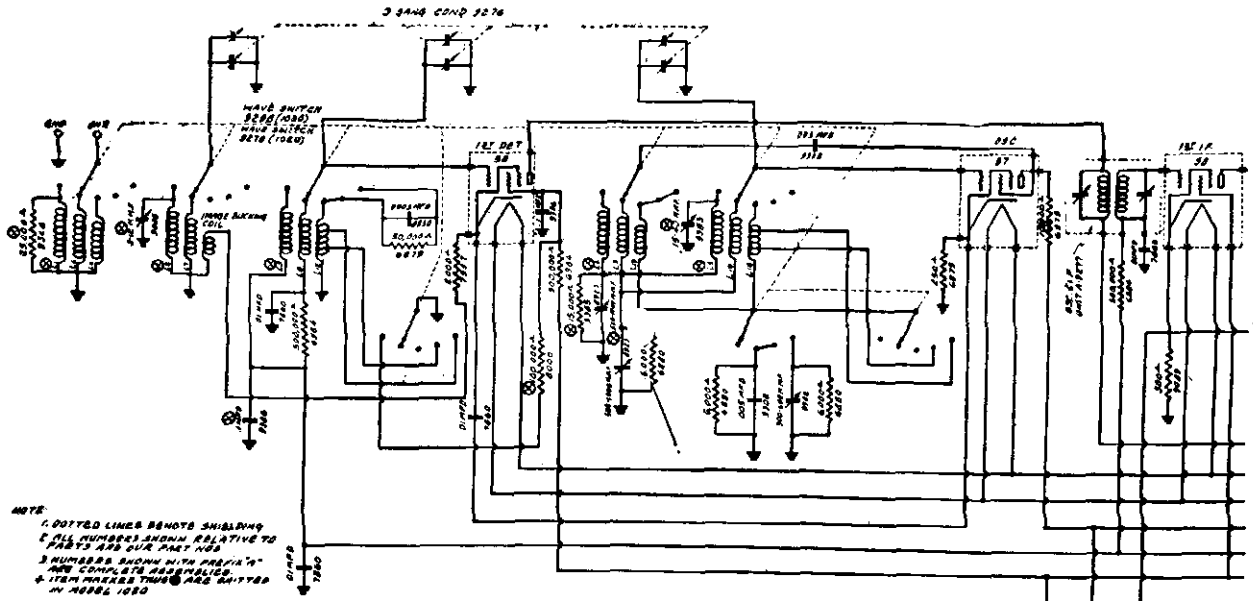

WIRING DIAGRAM
MODEL 1020 & 1030 RECEIVER


L1, L2, L3, L4 = 140-370 K.C. ANT. REFLECTOR, 1ST DET. & OSC. COIL ASSEMBLY #301 (IN MODEL 1030 ONLY)
 L1, L2 COUPLED TO L3. L3 COUPLED TO L4.
 L5, L6, L7 = 850-1800 K.C. ANT. REFLECTOR & 1ST DET. COIL ASSEMBLY #268
 L5 COUPLED TO L6. L6 COUPLED TO L7.
 L8 & L9 = 850-1800 K.C. OSC. COIL ASSEMBLY #288
 L10, L11, L12, L13 = 1.5-26.5 M.C. ANT., 1ST DET. & OSC. COIL ASSEMBLY #288
 L10, L11 COUPLED TO L12

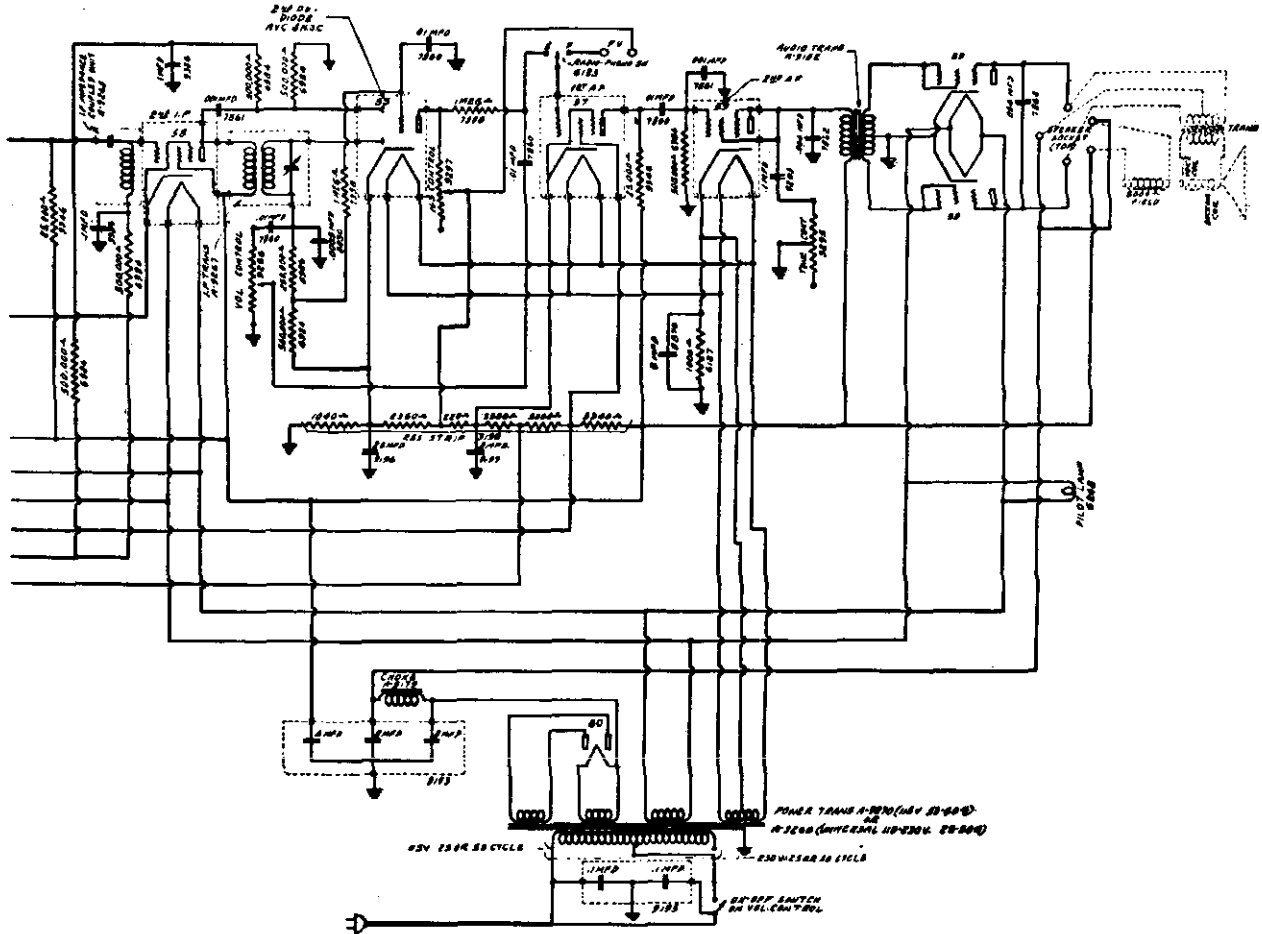

POWER TRANS. #312 (100-0-100)
 #312 (100-0-100) 250-VA 60 CYCLES
 #312 (100-0-100) 250-VA 60 CYCLES
 #312 (100-0-100) 250-VA 60 CYCLES

MODEL 684

SILVER - MARSHALL, INC.

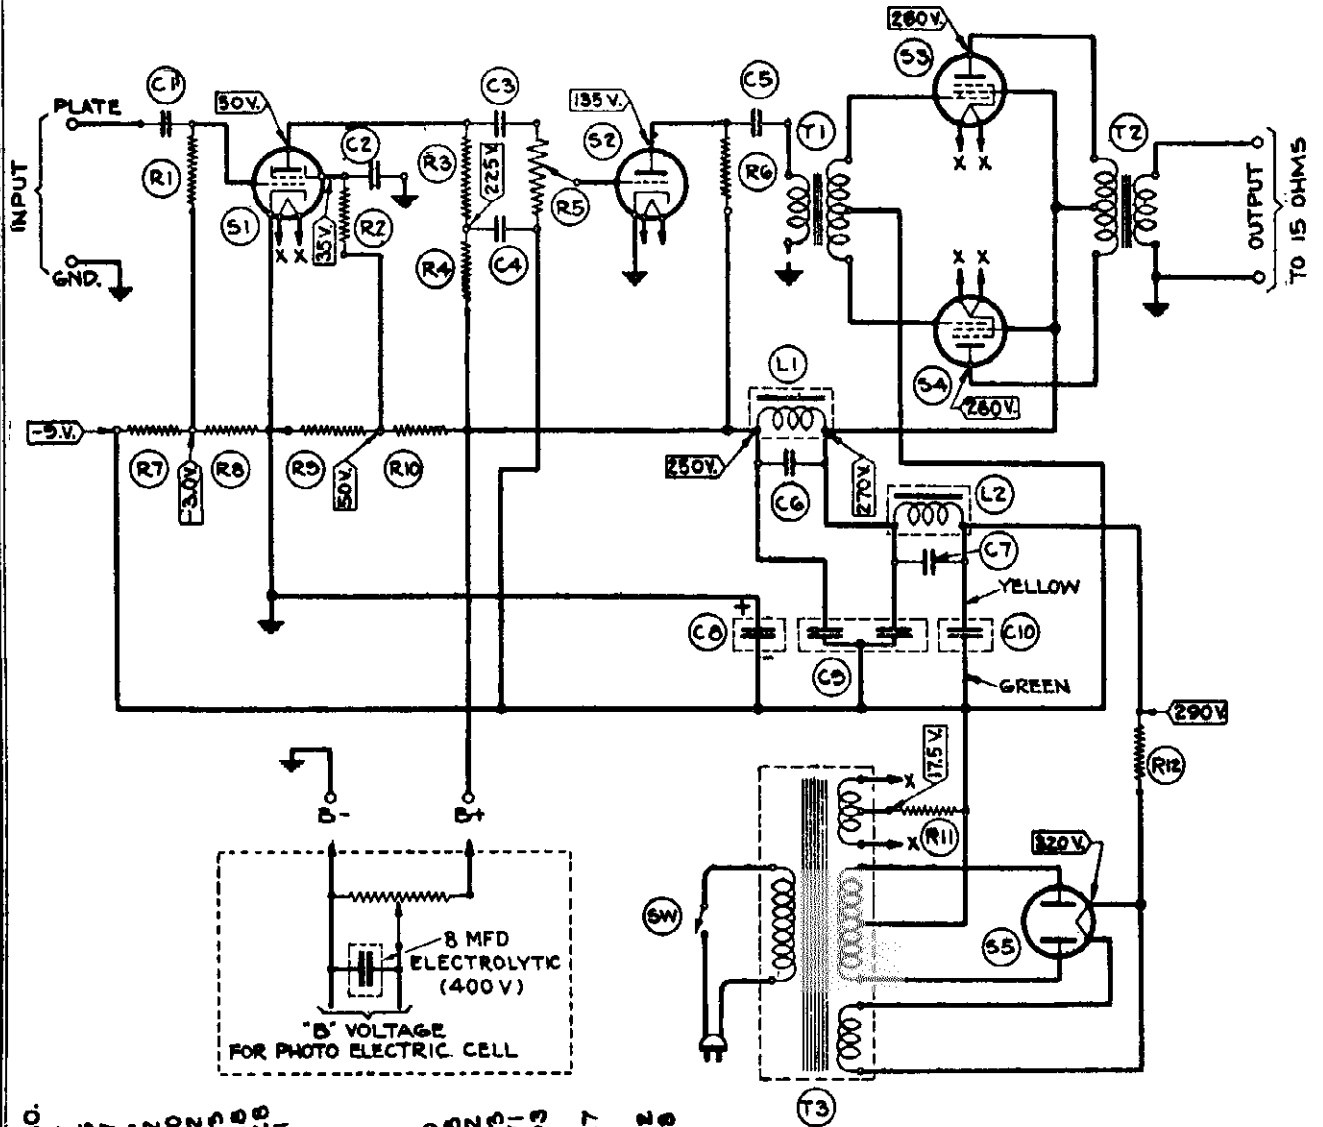


LEGEND	P.P. NO.
C1 - .05 MFD. SPRAGUE (400 V.)	13127
C2 - .10 MFD. (150V.)	3325
C3 - .01 MFD. (MICA)	7047
C4 - .10 MFD. (200V.)	7116
C5 - .25 MFD. SPRAGUE (750V.)	3322
C6 - .1 MFD.	3220
C7 - .25 MFD.	3322
C8 - .10 MFD. ELECTROLYTIC (25 V.) DRY	13205
C9 - 2 MFD.(PAPER) (400 V.)	3328
C10 - 8 MFD. ELECTROLYTIC (450 V.) DRY	3328

L1 - 101A5 CHOKE	4700
L2 - 35R-U CHOKE	4696
R1 - 2 MEGOHMS 1 WATT	4772
R2 - 60,000 OHMS 1 WATT	14693
R3 - 1/2 MEGOHM 1 WATT	14571
R4 - 30,000 OHMS 1 WATT	14693
R5 - 1 MEGOHM TAPERED VARIABLE RESISTOR	14693
R6 - 30,000 OHMS 1 WATT	14727
R7 - 250 OHMS	14728
R8 - 125 OHMS	14692
R9 - 2300 OHMS	14728
R10 - 11,300 OHMS	
R11 - 220 OHMS	
R12 - 300 OHMS	

S1 - '24	5485
S2 - '27	
S3 - '47	
S4 - '47	
S5 - '60	
SW - ON-OFF SWITCH	
T1 - 10159 INPUT TRANS.	
T2 - 101A5 OUTPUT TRANS.	
T3 - 360-U POWER TRANS.	

SILVER - MARSHALL, INC.

MODEL 716
MODEL 683
Schematic Data

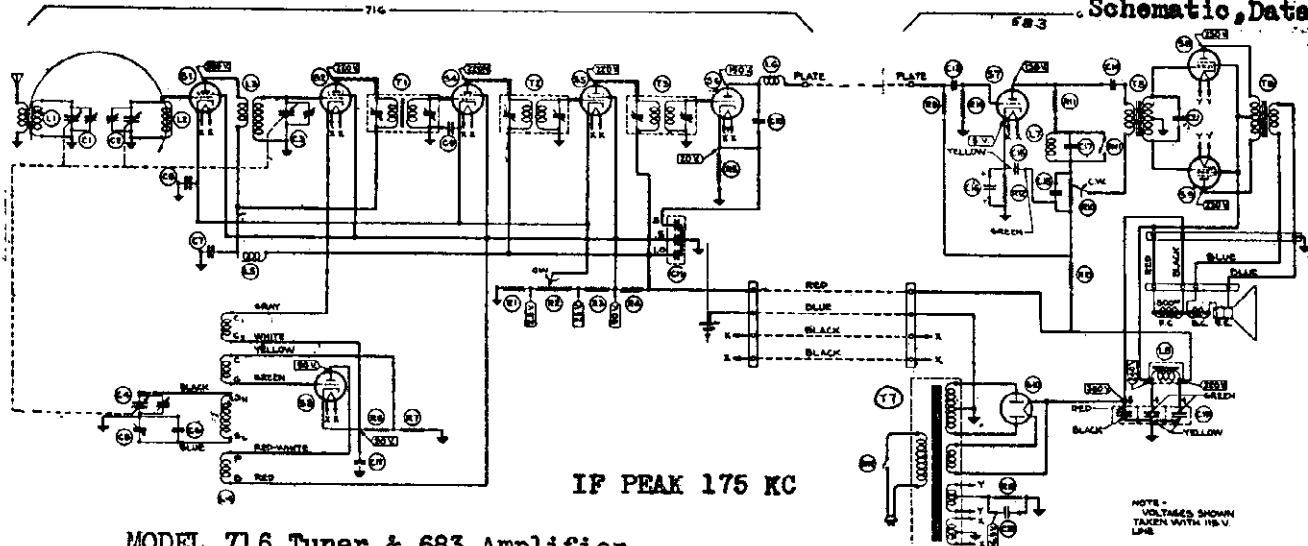

MODEL 716 Tuner & 683 Amplifier and Power Supply

There are two mounting holes left open on the tuner chassis for mounting the variable bass, and the high tone controls that are connected to flexible leads on the 683 amplifier.

Looking at the rear of the tuner, the antenna and ground posts are mounted on the top left of the chassis. On the right rear of the chassis is the output post marked "plate". This is connected to the input post on the 683 amplifier.

In the rear center of the chassis is a four terminal strip, color coded as follows: Red, Blue, Black, Black. A coded cable is furnished with the tuner for connecting this terminal strip to the 683 or similar amplifier.


The color code reads as follows: Red-B positive 240 volts, Blue-B negative or ground, Black, Black - 2½ volt heater or filament supply. The cable supplied with the tuner contains two heavy duty filament lead wires colored Green-Black and connect to the two Black terminals on this strip.

There are two sets of four terminal lugs on the back of the amplifier. Looking at the rear of the amplifier the set on the right are connections for the SM 855B speaker or similar type of speaker. Cable is furnished with the amplifier. This terminal strip is color coded as follows: red, black, blue, blue. The two blue leads connect to the speaker voice coil, the red and The SM 855B


- C1 -
- C2 -
- C3 -
- C4 - Variable Condenser 365 Mmfd. Max - 5 Mmfd. 15217
- C5 - Osc. Trimmer Cond. - 120 to 325 Mmfd. 18035
- C6 - 500 Mmfd. Cond. Mica - 10% 450-500 (Blue) 500-550 (Red) "
- C7 - .1 Mfd. Cond. 200 V. Sprague 3220
- C8 - .1 Mfd. Cond. 200 V. " 3220
- C9 - .1 Mfd. Cond. 200 V. " 3220
- C10 - .001 Mfd. Cond. Mica 7039
- C11 - .5, .5, 1.0 Mfd. Cond. (.5-200V.) (1.0-300V.) 13140
- C12 - .1 Mfd. Cond. 200V. 3220
- C13 - .02 Mfd. Cond. 500V. 13195
- C14 - .04 Mfd. Cond. 7048
- C15 - 4 Mfd. Cond. Dry Electro 450V. 13177
- C16 - 10 Mfd. Cond. Dry Electrolytic (25V.) 15023
- C17 - .01 Mfd. Cond. Mica 7047
- C18 - 0.25 Mfd. Cond. 500V. Sprague 3222
- C19 - 2 Mfd. Cond. Dry Electrolytic (450V.) 13177
- C20 - .1 Mfd. Cond. 200V. 13181
- C21 - .00025 Mfd. Cond. Mica 3220
- L1 -
- L2 - 170 A Coil 4743
- L3 - 178 Coil 14242
- L4 - 179 Coil 14694
- L5 - 281 R.F. Choke 4726
- L6 - 281 R.F. Choke 4698
- L7 - 10164 Air Cone Choke
- L8 - 10145 Choke
- R1 - 100 Ohm Resistor - wire wound 4743
- R2 - 4500 Ohm Volume Control 14242
- R3 - 13,000 Ohm Resistor - 1 Watt. Carbon, Brown, Orange, Or. 14694
- R4 - 10,000 Ohm Resistor - 2 Watt. Carbon, Brown, Black, Or. 4726
- R5 - 60,000 Ohm Resistor - 1 Watt. Carbon, Blue, Black, Or. 4698
- R6 - 100 Ohms) Wire wound tapped resistor No color 14723
- R7 - 1700 Ohms)
- R9 - 30,000 Ohm Resistor - 1 Watt. Carbon, Orange, Black, Or. 14693
- R10 - 10,000 Potentiometer 4492
- R11 - 720 Ohm Resistor - wire wound No color 4788
- R12 - 2,800 Ohm Resistor - 1 watt Carbon Red, Blue, Red. 4770
- R13 - 220 Ohm Resistor - 2 Watt. Ohmite (Red Devil) 14692
- R14 - 300,000 Ohm Resistor 1 Watt. Carbon, Orange, Black, Yel. 4685
- R15 - 10,000 Ohm Resistor 1 Watt. Carbon, Brown, Black, Orange 14696
- S1-84-85 - 151 Tubes
- S2 - 124 "
- S3-86-87 - 127 "
- S8-89 - 147 "
- S10 - 180 "
- SW1 - Tone Control Switch 5485
- SW2 - On-Off Switch (Combines with R2)
- T1 - 1st I.F. Transformer (G-1)
- T2 - 2nd I.F. Transformer (G-4) Same spacing as G-3
- T3 - 3rd I.F. Transformer (G-3)
- T5 - 10159 Input Transformer
- T6 - 10143 Output Transformer
- T7 - 3470 Power Transformer.

List of Parts Used in 716 and 683.

Model 716 (Receiver) (1930)

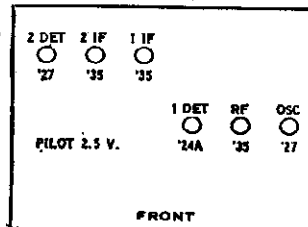

Model 683 (Amplifier) (1931)

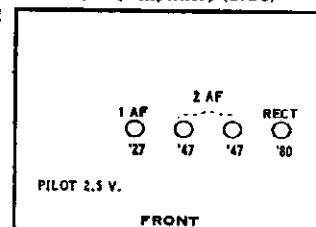


MODEL 727 SW - All Wave
Parts List

SILVER-MARSHALL, INC.

L1 - 197 Broadcast Antenna Coil (550-1500 K.C.) L2 - 302 Short Wave Antenna Coil (1.56-3.46 megacycles) L3 - 201 Short Wave Antenna Coil (3.51-5.36 megacycles) L4 - 200 Short Wave Antenna Coil (5.54-10.29 megacycles) L5 - 199 Short Wave Antenna Coil (9.6-18.15 megacycles) L6 - 198 Oscillator Coil L7 - 281 R.F. Choke L8 - 283 R.F. Choke	T1 - Q-1 I. F. Transformer T2 - Q-2 I. F. Transformer T3 - Q-4 I. F. Transformer T4 - 10208 Output Transformer T5 - 10202 Power Transformer S2-S3 - '51 Tubes S10 - '80 Tubes S11 - Speaker Socket S1 - '24 Tube S4-S7-S8-S9 - '27 Tubes S5-S6 - '47 Tubes	C1-C2 - 2 Gang Variable Condenser-365 mmfd. Max. ± 5 mmfd. 13372 0° - 90° ± 1 mmfd. 90° - 180° $\pm \frac{1}{2}$ of 1% C3 - 25 Mmfd. Trimmer Cond. 16249 C4 -200 Mmfd. Variable trimmer condenser 13302 C5 - 0.1 Mfd. Condenser - Sprague 200 V. 3220 C6 - 0.1 Mfd. Condenser - Sprague 200 V. 3220 C7 - 0.1 Mfd. Condenser - Sprague 200 V. 3220 C8 - 0.1 Mfd. Condenser - Sprague 200V. 3220 C9 - 0.1 Mfd. Condenser - Sprague 200 V. 3220 C10 - $\frac{1}{2}$ Mfd. Condenser - Polymet Waxtite 200 V. 13329 C11 - .001 Mfd. Condenser - Mica 7039 C12 - .001 Mfd. Condenser - Mica 7039 C13 - .025 Mfd. Condenser - Sprague 200 V. 3333 C14 - .025 Mfd. Condenser - Sprague 200 V. 3333 C15 - .03 Mfd. Condenser - Sprague 700 V. 13331 C16 - .00015 Mfd. Condenser - Mica 3313 C17 - Oscillator Trimmer Condenser 16179 C18 - 0.1 Mfd. Condenser - Sprague 200 V. 3220 C19 - 0.1 Mfd. Condenser - Sprague 200 V. 3220 C20 - 0.15Mfd. Condenser - Sprague 13145 C21 - .0005 Mfd. Condenser - Mica 7052 C22 - 0.1 Mfd. Condenser - Sprague 200 V. 3220 C23 - 1.0, .5, .5 Mfd. Condenser 13140 C24 - 8 Mfd. Dry Electrolytic Cond. 450 V. 13181 C25 - 12 Mfd. Dry Electrolytic Cond. 450 V. 3162 M - Tuning Meter - 15 M.A. 13923 P1 - 100,000 Ohm Pot. (Tone control) 14438 P2 - 250,000 Ohm Pot. (Volume control-Comb. with A.C. Switch) 4360 R1 - 100,000 Ohm Resistor - 1 watt carbon 14691 R2 - 250 Ohm Resistor - wire wound 4725 R3 - 60,000 Ohm Resistor - 1 watt carbon 4695 R4 - 25,000 ohm Resistor - 1 watt carbon 4697 R5 - 500,000 Ohm Resistor - 1 watt carbon 4772 R6 - 100,000 Ohm Resistor - 1 watt carbon 14691 R7 - 5,000 Ohm Resistor - 1 watt carbon 14765 R8 - 1 Megohm Resistor - 1 watt carbon 4759 R9 - 1 Megohm Resistor - 1 watt carbon 4759 R10 - 1 Megohm Resistor - 1 watt carbon 4759 R11 - 12,000 Ohm Resistor - 1 watt carbon 4746 R12 - 9,000 Ohm Resistor - 1 watt carbon 14746 R13 - 8,250 Ohm) R14 - 6,500 Ohm) 14,750 Ohm R.D. Ohmite - 3 watt 14781 R15 - 300,000 Ohm Resistor - 1 watt carbon 4685 R16 - 400 Ohm Resistor - wire wound 4701 R17 - 400 Ohm Resistor - wire wound 4701 R18 - 300,000 Ohm Resistor - 1 watt carbon 4685 R19 - 3,500 Ohm Resistor - 1 watt carbon 4804 R20 - 60,000 Ohm Resistor - 1 watt carbon 4695 SW1-SW2 - Tandem change-over switch 15298 SW3 - A.C. switch (Combination with volume control)
--	--	---

MODEL 727 SW-All Wave
Schematic, Data

SILVER - MARSHALL, INC.

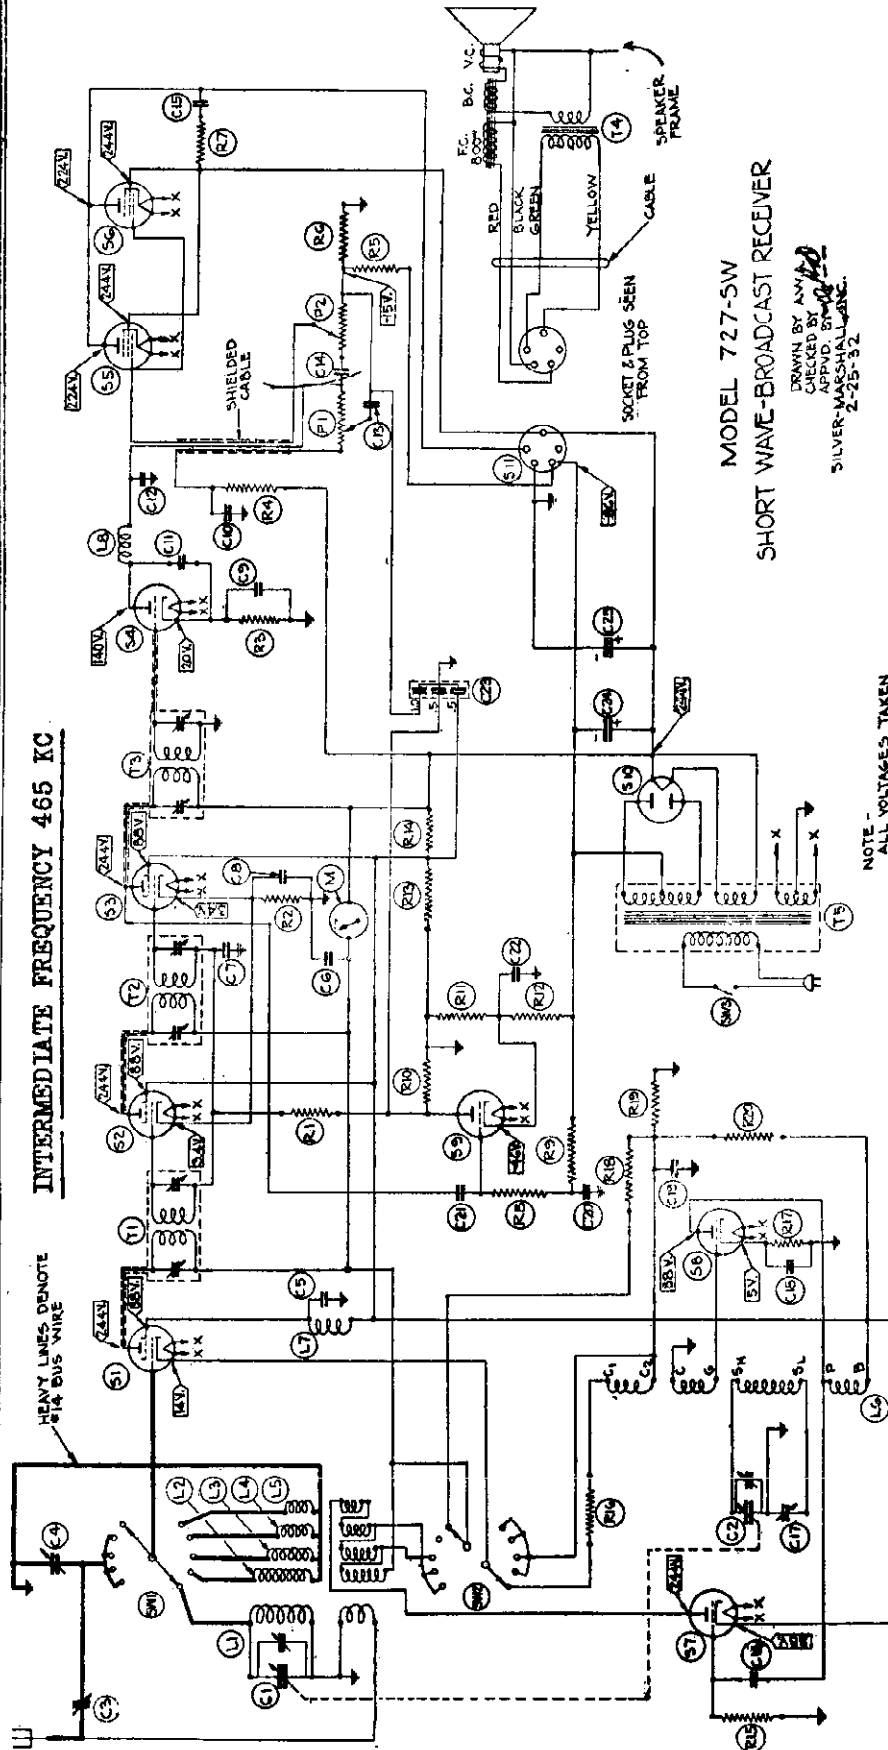

INTERMEDIATE FREQUENCY 465 KC

MODEL 727-SW
SHORT WAVE-BROADCAST RECEIVER


DESIGNED BY AMY
CHECKED BY
APPROVED BY
SILVER-MARSHALL, INC.
2-25-32

DWG. No. 155-4

NOTE - ALL VOLTAGES TAKEN FROM GROUND


The Clough scheme is to use only one oscillator in the set, which must tune from 16.5 to 550 meters, or 18,000 to 550 kc. This is impossible, for even the harmonics of the oscillator are too weak to be of direct use. The crux of the idea lies in the use of a tube directly coupled to the oscillator, which is so set as to tune over the broadcast band of 550 to 1500 kc., this tube acting as a harmonic generator and providing the necessary local frequencies to heterodyne signals in the 16 to 35, 35 to 65, 65 to 100 and 100 to 200 meter short wave bands. This system re-

sults in only one permanently connected and aligned oscillator circuit, the harmonic generator tube providing the required heterodyne voltages for the short wave bands. A single selector switch knob gives a choice of five separate coils to enable the first detector to cover the four short wave and broadcast bands. In the final embodiment, one dial tunes the broadcast band, this same dial plus an auxiliary trimmer tunes the short wave bands, and one five position switch selects the five bands at will

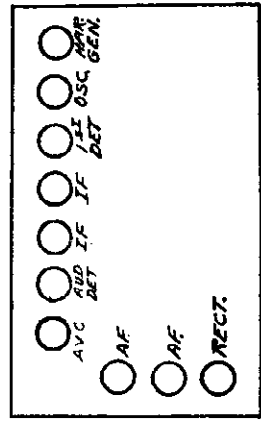

MODEL B

SILVER - MARSHALL, INC.

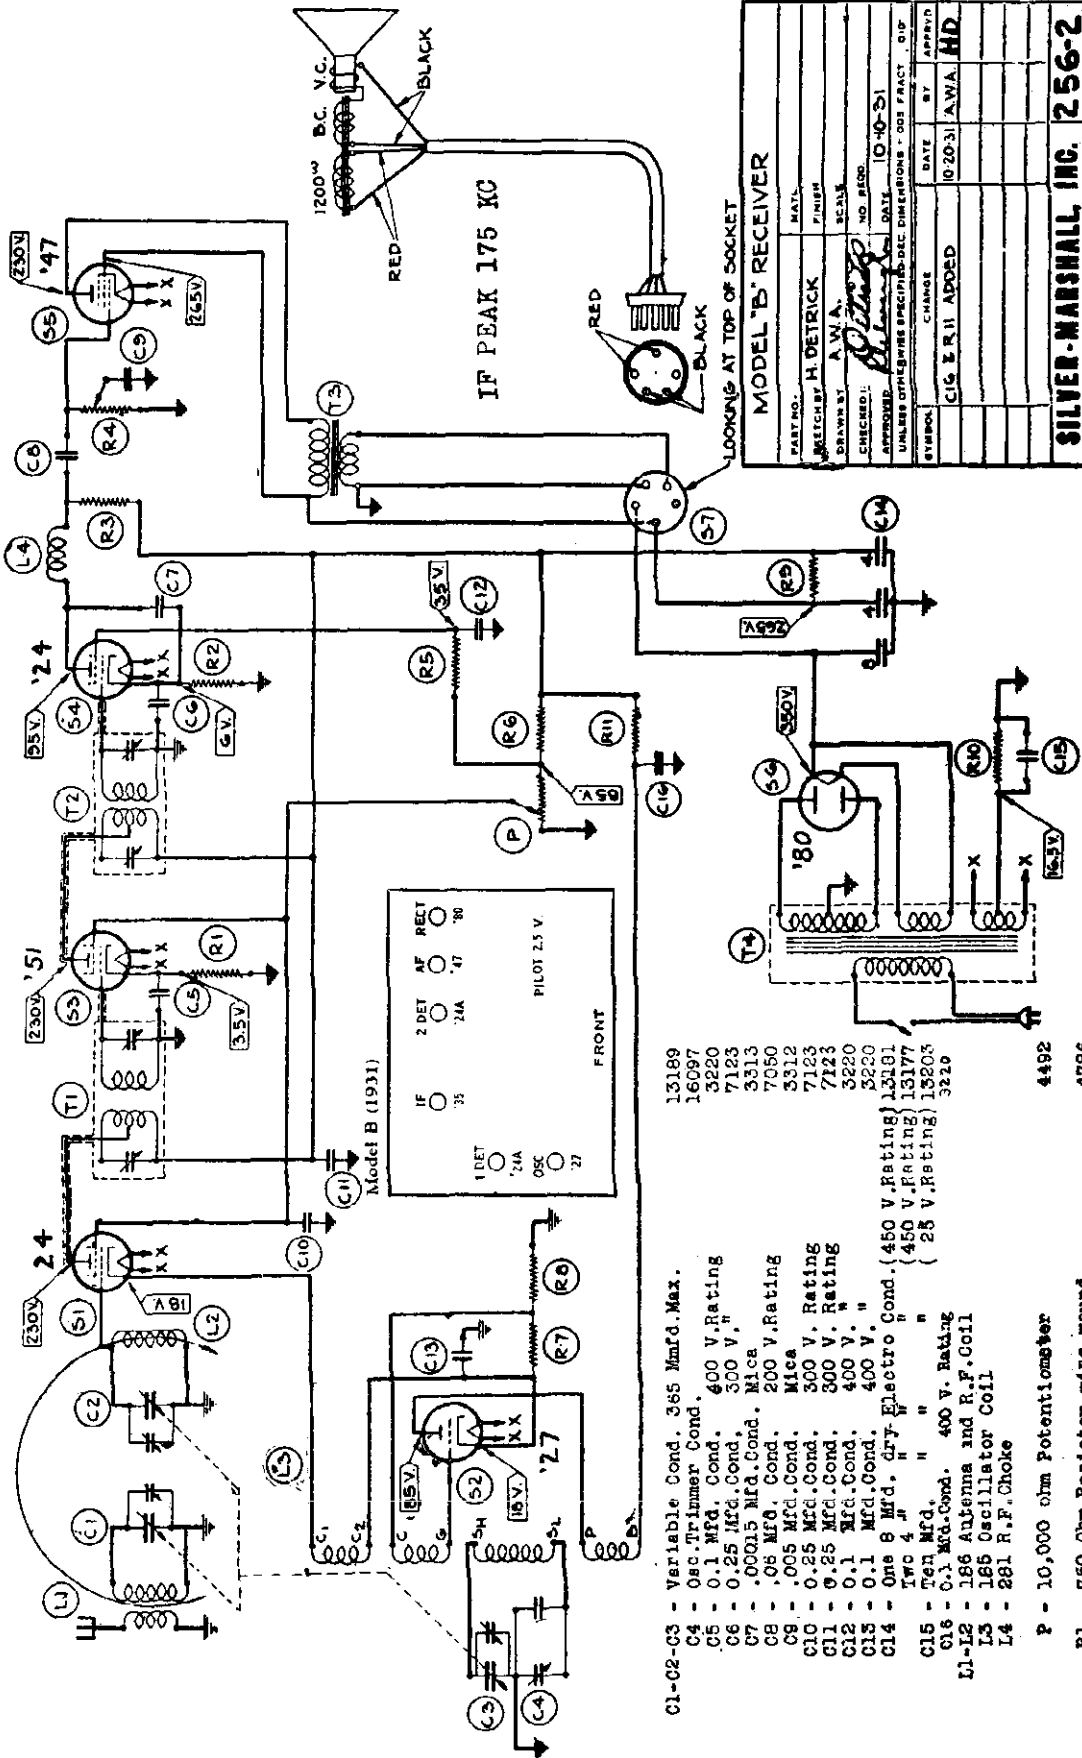

PART NO.		DATE		BY		APPROV'D	
DRAWN BY H. DETRICK		DATE 10-20-31		BY A.W.A.		APPROV'D A.W.A. HD	
CHECKED BY		NO. RECD		SYMBOL		CHANGE	
APPROVED: <i>[Signature]</i>		DIMENSIONS - ODS FRACT		C15 R11 ADDED		0/20/31	
UNLESS OTHERWISE SPECIFIED DEC DIMENSIONS - ODS FRACT							

SILVER-MARSHALL INC. 256-2


- C1-C2-C3 - Variable Cond. 365 Mmfd. Max.
- C4 - Osc. Trimmer Cond. 400 V. Rating
- C5 - 0.1 Mfd. Cond. 300 V. "
- C6 - 0.25 Mfd. Cond. 300 V. "
- C7 - .00015 Mfd. Cond. Mica
- C8 - .08 Mfd. Cond. 200 V. Rating
- C9 - .005 Mfd. Cond. Mica
- C10 - 0.25 Mfd. Cond. 300 V. Rating
- C11 - 0.25 Mfd. Cond. 300 V. Rating
- C12 - 0.1 Mfd. Cond. 400 V. "
- C13 - 0.1 Mfd. Cond. 400 V. "
- C14 - One 8 Mfd. Dry Electro Cond. (450 V. Rating) 13181
Two 4 " " " (450 V. Rating) 13177
(25 V. Rating) 13205
3220
- C15 - Ten Mfd. "
- C16 - 0.1 Mfd. Cond. 400 V. Rating
- L1-L2 - 186 Antenna and R.F. Coil
- L3 - 166 Oscillator Coil
- L4 - 281 R.F. Choke
- P - 10,000 ohm Potentiometer
- R1 - 750 Ohm Resistor wire wound
- R2 - 30,000 ohm Resistor 1 Watt Carbon
- R3 - 300,000 ohm Resistor 1 Watt Carbon
- R4 - Megohm Potentiometer
- R5 - 500,000 ohm Resistor 1 Watt Carbon
- R6 - 10,000 ohm Resistor 3 Watt Carbon
- R7 - 100 ohm 1800 ohm wire wound, tapped unit
- R8 - 1700 ohm
- R9 - 1750 ohm Resistor
- R10 - 425 ohm Resistor
- R11 - 20,000 ohm Resistor
- T1 - E-1 I.F. Trans.
- T2 - E-2 I.F. Trans.
- T3 - 10178 Output Trans.
- T4 - 10178 Power Trans.

14747
14692
4718

1 Watt Carbon
1 Watt Carbon



13189
16097
3220
7123
3313
7050
3312
7123
7123
3220
13181
13177
13205
3220
4482
4786
14693
4885
14403
4685
4789
14723

SILVER - MARSHALL, INC.

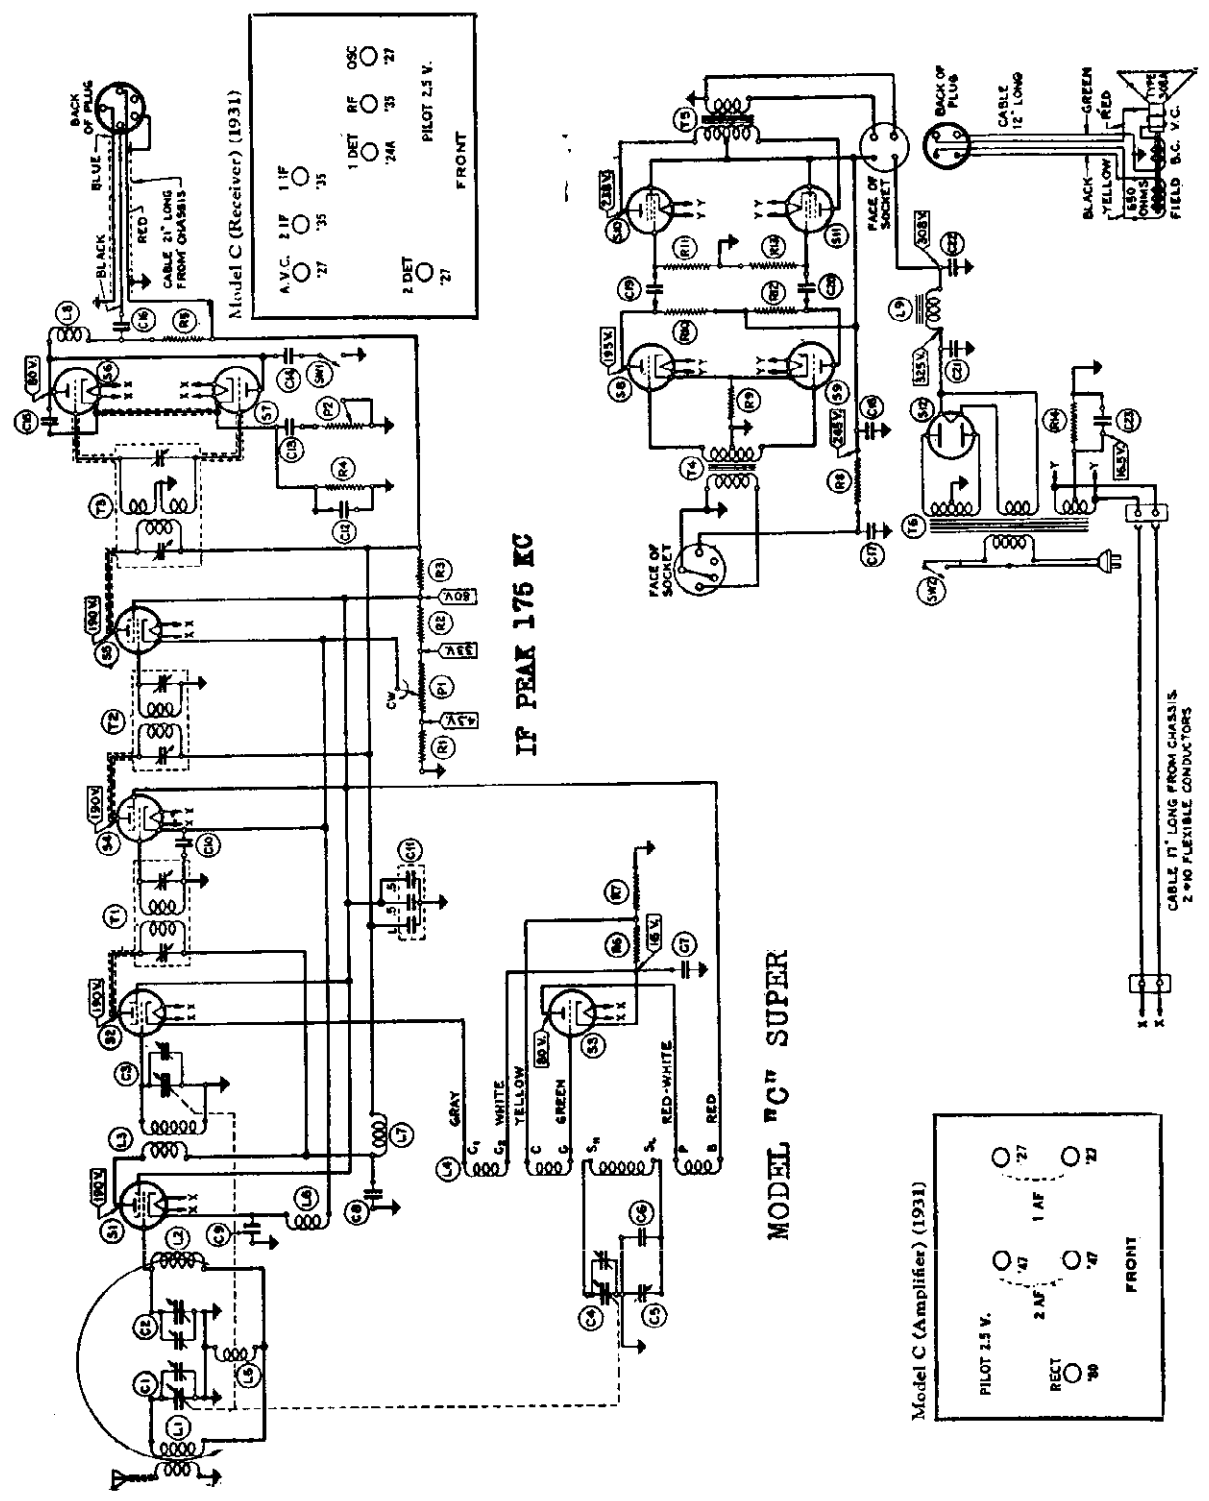

IF PEAK 175 KC

MODEL "C" SUPER

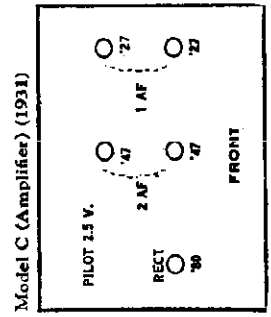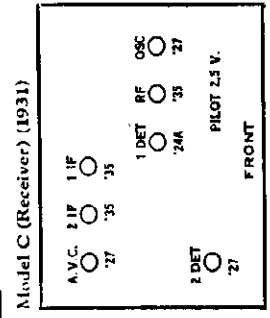


CABLE 17" LONG FROM CHASSIS
2 #10 FLEXIBLE CONDUCTORS

MODEL C
Parts List
SILVER - MARSHALL, INC.
MODEL "C" SUPERHETERODYNE (60 ~)

C1-C2-C3-C4 - 365 Mmfd. Condenser \pm 5 Mmfd. Max.	13217
C5 - Trimmer Cond. 120-325 Mmfd.)16035
C6 - 750 Mmfd. Cond.(mica) \pm 10%(675-750Blue)(750-825Red))	
C7-C8-C9 - .1 Mfd. Cond.	3220
C10 - .25 Mfd. Cond. (1.Mfd. Cond.-300 V.)	7114
C11 - (.5 Mfd. Cond-200V.) (.5 Mfd. Cond - 200 V)	13140
C12 - .04 Mfd. Cond.	7046
C13 - 1.Mfd. Cond. 150 V.Rating	3254
C14 - .025 Mfd. Cond.	3333
C15 - .001 Mfd. Cond.	7039
C16 - .08 Mfd. Cond.	13288
C17 - 8 Mfd. Cond.-450 V.Rating (Dry Electrolytic)	13181
C18 - 4 Mfd. Cond.-450 V.Rating (Dry Electrolytic)	13177
C19-C20 - .15 Mfd. Cond.	13145
C21 - 2 Mfd. Cond. - 600 V.Rating (Paper)	3328
C22 - 8 Mfd. Cond. - 450 V.Rating (Dry Electrolytic)	13181
C23 - .1 Mfd. Cond.	3220
L1 - 194s ANTENNA Coil	
L2 - 193s R.F.Coil	
L3 - 195s R.F.Coil	
L4 - 196s OSC.Coil	
L5 - 30 C Coupling Coil	
L6-L7-L8 - 281 Choke Coil	
L9 - 339U Filter Choke	
P1 - 4500 Ohm Potentiometer	14419
P2 - 20,000 Ohm Potentiometer	14427
R1 - 400 Ohm Resistor, Wire wound Blue	4701
R2 - 10,000 Ohm Resistor, 1 watt, Brown,Black,Orange	14696
R3 - 10,000 Ohm Resistor, 2 watt, Brown,Black,Orange	4726
R4-R5 - 25,000 Ohm Resistor, 1 watt, Brown,Black,Orange	4697
R6 - 100 Ohm Resistor) R7 - 1700 Ohm Resistor) wire wound	14723
R8 - 2600 Ohm Resistor 1 watt, Red,Blue,Red	4770
R9 - 1350 Ohm Resistor 1 watt,	14767
R10-R12 - 10,000 Ohm Resistor 1 watt, Brown,Black,Orange	14696
R11-R13 - 300,000 Ohm Resistor 1 watt, Orange,Black,Yellow	4685
R14 - 220 Ohm Resistor, 2 watt, Ohmite Red Devil	14766
SW1 - Tone Control Switch	5485
SW2 - On-Off Switch	5199

MODEL G



SILVER - MARSHALL, INC.

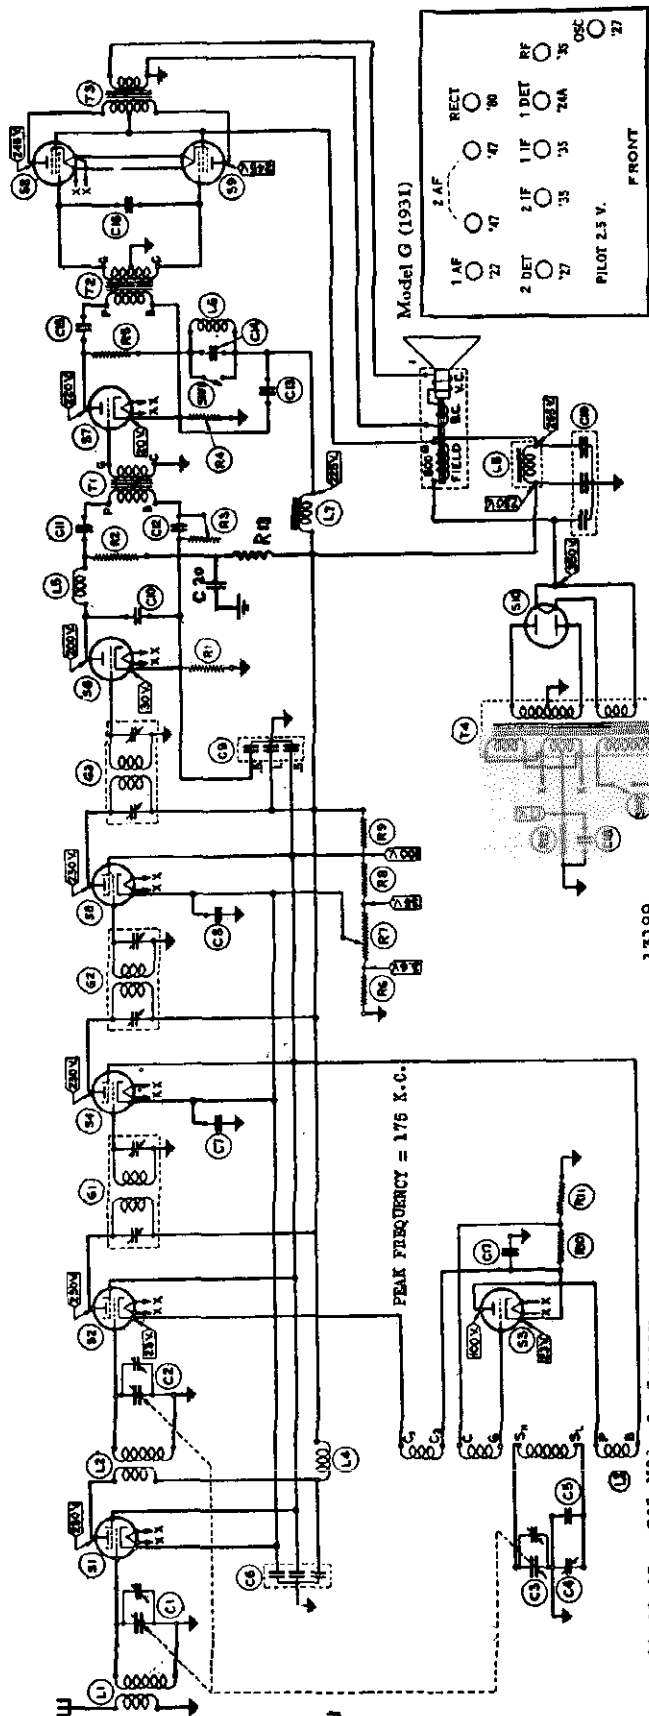

- C1-C2-C3 - 365 Mfd. Condenser
 - C4 - Variable 250-500 Mmfd. }
 - C5 - 500 Mmfd. Cond. (Mica) }
 - C6 - Triple .1 Mfd. Cond.
 - C7-C8 - .1 Mfd. Cond. 200 V Rating
 - C9 - .5 - .5 - .1 Mfd. Cond.
 - C10 - .001 Mfd. Cond. Mica
 - C11 - .02 Mfd. Cond.
 - C12 - .001 Mfd. Cond. Mica
 - C13 - .4 Mfd. Cond. - 450V Rating
 - C14 - .01 Mfd. Cond.
 - C15 - .06 Mfd. Cond.
 - C16 - .00075 Mfd. Cond. Mica
 - C17-C18 - .1 Mfd. Cond. - 200V Rating
 - C19 - Three 4 Mfd. Units 450V Rating
 - C20 - 4 Mfd. Cond.
 - G1 - 1st I.P. Transformer
 - G2 - 2nd I.P. Transformer
 - G3 - 3rd I.P. Transformer
 - G20 -
 - L1 - 182 Ant. Coil
 - L2 - 178 R.F. Coil
 - L3 - 179 Osc. Coil
 - L4 - 281 Choke Coil
 - L5 - 281 Choke Coil
 - L6 - 10164 Choke Coil
 - L7 - 10145 Choke
 - L8 - 10145 Choke
- (.5 - 200V rating
(1.0 - 500V rating
- 13189
 - 16097
 - 3316
 - 3220
 - 13140
 - 7039
 - 13195
 - 7039
 - 13177
 - 7047
 - 7050
 - 7344
 - 3220
 - 13120
 - 13177
- R1 - 60,000 ohm resistor
 - R2 - 30,000 ohm "
 - R3 - 1 Megohm variable resistor
 - R4 - 2600 ohm resistor
 - R5 - 1000 ohm resistor
 - R6 - 300 ohm resistor
 - R7 - 4500 ohm potentiometer with on-off switch
 - R8 - 15,500 ohm resistor
 - R9 - 10,000 ohm resistor
 - R10 - 100 ohm resistor
 - R11 - 1700 ohm resistor
 - R12 - 210 ohm resistor
 - R13 - 10,000 Ohm
 - S1 - 1S1 Tube
 - S2 - 124 "
 - S3 - 127 "
 - S4-S5 - 151 "
 - S6-S7 - 127 "
 - S8-S9 - 147 "
 - S10 - 180 "
- T1 - 10149 Transformer (Specification 8-7-31)
 - T2 - 10159 Transformer (Specification 8-7-31)
 - T3 - 10143 Transformer
 - T4 - 10177 Transformer 60 Cycle
- SW1 - Tone Control Switch
 - SW2 - On-Off Switch (Combined with volume control)
- PILOT 2.5 V.
- FRONT
- 1 watt 4698
 - 1 watt 14693
 - 1 watt 14371
 - 1 watt 4770
 - 1 watt 14722
 - wire wound 14692
 - 1 watt 14323
 - 1 watt 14694
 - 2 watt 4726
 - 1 watt 14723
 - 2 watt - carbon 4774
 - 14696
- 5485

SILVER - MARSHALL, INC.

MODEL J.

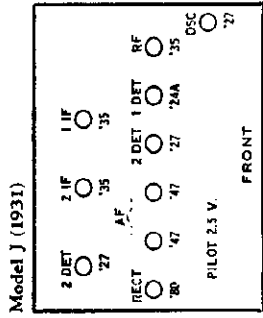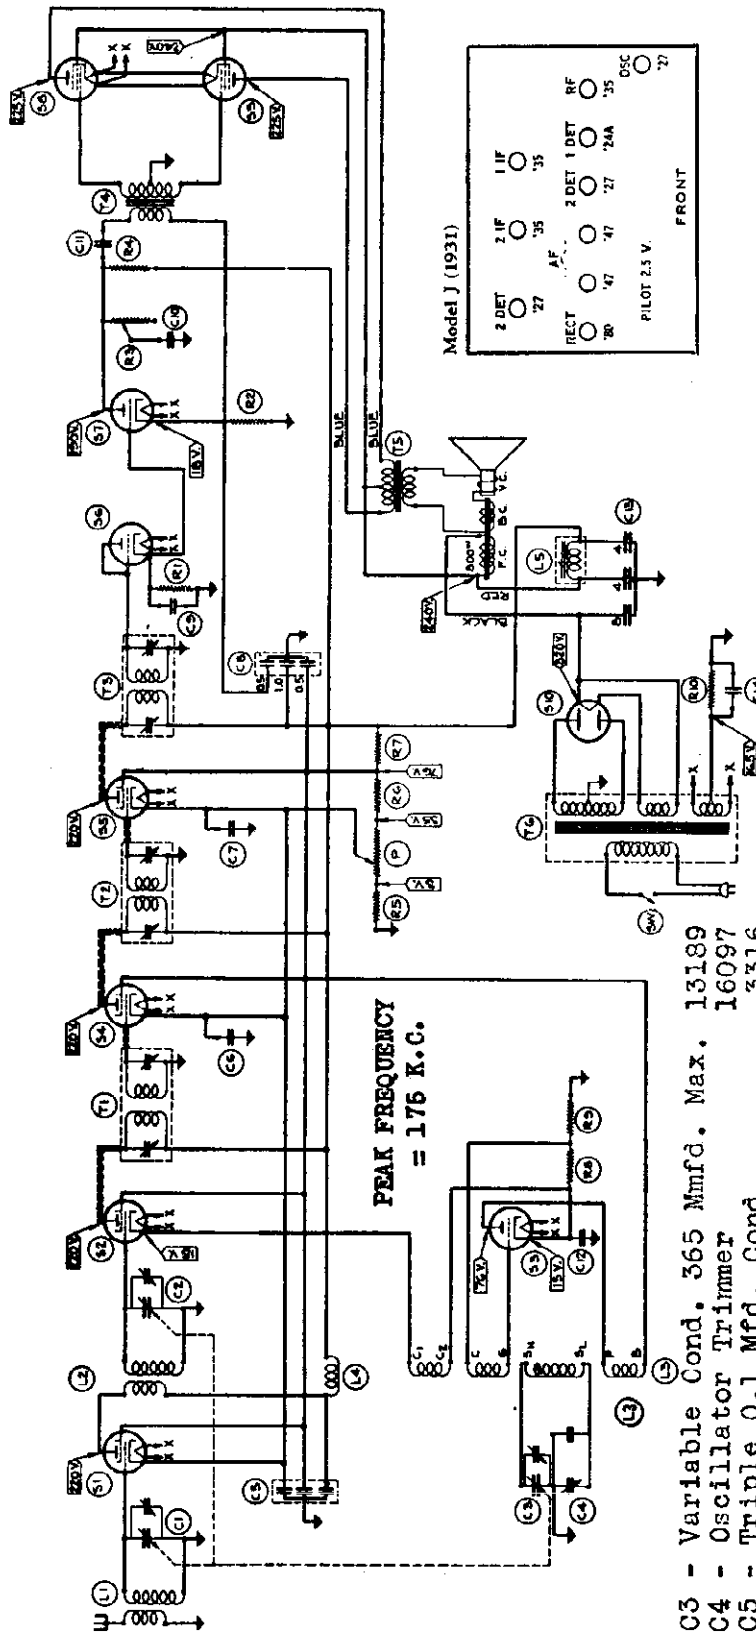

P-4500 Ohm Potentiometer (Combination)
 SW-On-Off A.C.Switch (Combined with Pot)

- C1-C2-C3 - Variable Cond. 365 Mmfd. Max. 13189
- C4 - Oscillator Trimmer 16097
- C5 - Triple 0.1 Mfd. Cond. 3316
- C6 - 0.1 Mfd. Cond. 200 V. Rating 3220
- C7 - 0.1 Mfd. Cond. 200 V. Rating 3220
- C8 - .5, .5, 1.0 Mfd. Cond.
- C9 - (10, 300 V. O. 5, 0.5-200 V.) 13140
- C10 - .00015 Mfd. Cond. Mica
- C11 - .06 Mfd. Cond.
- C12 - 0.15 Mfd. Cond.
- C13 - 0.1 Mfd. Cond. 200 V. Rating
- C14 - Two 4 Mfd. (Dry Electro.) 450 V. Rating
- One 8 Mfd. (" ")
- 0.1 Mfd. Cond. 200 V. Rating
- L1 - 182 Antenna Coil
- L2 - 178 R.F. Coil
- L3 - 179 Osc. Coil
- L4 - 281 R.F. Choke
- L5 - 10145 Choke
- R1 - 500,000 Ohm Resistor 1 Watt Carbon
- R2 - 30,000 Ohm Resistor 1 Watt Carbon
- R3 - 1/2 Megohm Tapered variable resistor
- R4 - 30,000 Ohm Resistor 1 Watt Carbon
- R5 - 120 Ohm Resistor Wire Wound
- R6 - 10,000 Ohm Resistor 1 Watt Carbon
- R7 - 10,000 Ohm Resistor 3 Watt Carbon
- R8 - 100 Ohm (1800 Ohm) 1800 Ohm tapped resistor
- R9 - 1700 Ohm Resistor
- R10 - 220 Ohm Resistor 2 Watt Carbon
- T1 - C-1 I.F. Transformer
- T2 - C-2 " " "
- T3 - C-3 " " "
- T4 - A-270 Input Transformer
- T5 - 10143 Output Transformer
- T6 - 10176 Power Transformer


SILVER - MARSHALL, INC.

MODEL Q DeLuxe
Parts List

C1 - 60-120 mmfd. antenna trimmer condenser	6182	M - Tuning meter - 20 ma.	
C2 - 200 mmfd. variable trimmer condenser	3283	P1 - 3000 ohm variable resistance	4430
C3-C4 - 2 gang variable condenser - 365 mmfd.	3189	P2 - 100,000 ohm tone control	14438
C5 - .002 mfd. mica condenser	3311	P3 - 375,000 ohm pot.	4380
C6 - .1 mfd. condenser - Sprague 200 v.	3277	P4 - 40 ohm hum balance	4445
C7 - .1 mfd. condenser - Sprague 400 v.	3278	R1 - 25,000 ohm Resistor - 1 watt carbon	4697
C8 - .25 mfd. condenser - Sprague 200 v.	3269	R2-R3 - 1,000 ohm Resistor - wire wound	4688
C9 - .5 mfd. condenser - Sprague 200 v.	3266	R4 - 1 megohm Resistor - 1 watt carbon	4759
C10 - .1 mfd. condenser - Sprague 400 v.	3278	R5 - 6,500 ohm Resistor - Ohmite Red Devil	14777
C11 - .1 mfd. condenser - Sprague 400 v.	7052	R6 - 200 ohm Resistor - wire wound	4722
C12 - .0005 mfd. condenser - Sprague	3277	R7-R8 - 1 megohm Resistor - 1 watt carbon	4759
C13 - .1 mfd. condenser - Sprague 200 v.	3266	R9 - .5 megohm Resistor - 1 watt carbon	4772
C14 - .5 mfd. condenser - Sprague 200 v.	3266	R10 - 30,000 ohm Resistor - 1 watt carbon	14693
C15 - .5 mfd. condenser - Sprague 200 v.	7052	R11 - 25,000 ohm Resistor - 1 watt carbon	4697
C16 - .0005 mfd. condenser - Sprague	3273	R12 - 1405 ohms)	
C17 - .5 mfd. condenser - Sprague 400 v.	3333	R13 - 8720 ohms)	
C18 - .025 mfd. condenser - Sprague 400 v.	13127	R14 - 7315 ohms)	Ohmite Red Devil Resistor 4752
C19 - .05 mfd. condenser - Sprague 400 v.	16179	R15 - 14,000 ohms)	
C20 - 275-550 mmfd. osc. trimmer condenser	13127	R16 - 2,000 ohms)	
C21 - .05 mfd. condenser - Sprague 400 v.	3330	R17 - 4,000 ohms)	
C22 - .00025 mfd. condenser - Sprague	3230	S1-S2-S3 - '58 tubes	
C23 - .25 mfd. condenser - Sprague 400 v.	13326	S4-S5-S9-S10-S11 - '56 tubes	
C24 - 8 mfd. dry electrolytic cond. - 75 v.	13177	S6-S7-S8 - '45 tubes	
C25 - 4 mfd. dry electrolytic cond. - 450 v.	13145	S12 - '82 tubes.	
C26 - .15 mfd. condenser - Sprague 400 v.	3162	SW1 - Tandem Band Selector Switch	15348
C27 - 12 mfd. dry electrolytic cond. 450 v.	3277	SW2 - Noise Control Switch	5121
C28 - .1 mfd. condenser - Sprague 200 v.		SW3 - A.C.Switch (combined with volume control)	
L1 - 209 Antenna choke coil		T1 - V1 I.F.Transformor	
L2 - 208 Antenna coil		T2 - V2 I.F.Transformor	
L3 - 517 short wave coil (4800- 1550 kilocycles)		T3 - V3 I.F.Transformor	
L4 - 518 short wave coil (10,000- 3600 kilocycles)		T4 - 10268 Driver transformor	
L5 - 519 short wave coil (25,350- 9600 kilocycles)		T5 - Output transformor (10244 for Single speaker 10245 for Two speakers	
L6 - 207 Broadcast oscillator coil		T6 - 10231 Power transformor	
L7 - 516 Short wave oscillator coil			
L8-L9-L10 - 283 choke coils			
L11-L12 - 281 choke coils			
L13 - 10238 Filter choke coil			

MODEL Q DeLuxe

SILVER - MARSHALL, INC.

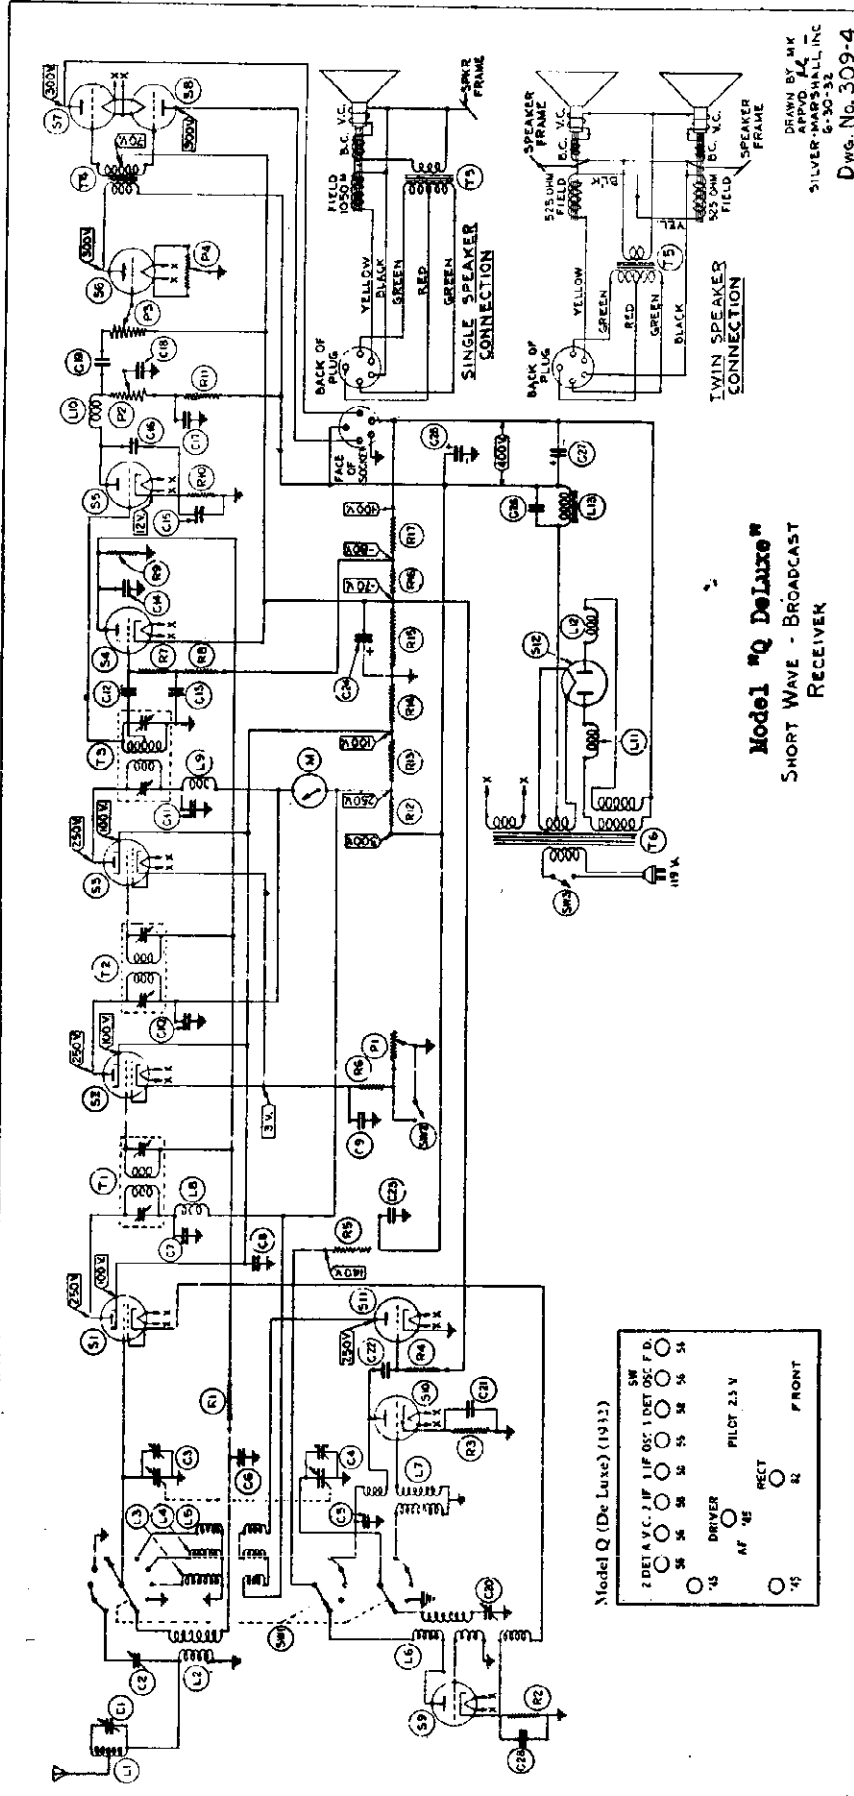

Model "Q DeLuxe"
SHORT WAVE - BROADCAST
RECEIVER

- Model Q (De Luxe) (1932)
- 2 DET. A.C. I.F. 11F 6C 1 DET. 5A
 - 5W F.D.
 - 5C
 - 5D
 - 5E
 - 5F
 - 5G
 - 5H
 - 5I
 - 5J
 - 5K
 - 5L
 - 5M
 - 5N
 - 5O
 - 5P
 - 5Q
 - 5R
 - 5S
 - 5T
 - 5U
 - 5V
 - 5W
 - 5X
 - 5Y
 - 5Z
 - PILOT 2.5 V
 - DRIVER AF '45
 - RECT '45
 - FRONT '45

DRAWN BY H.K.
APPROV. BY
SILVER-MARSHALL, INC.
6-30-32
Dwg. No. 309-4

SILVER - MARSHALL, INC.

MODEL R
Parts List


' MODEL "R" SUPERHETERODYNE

C1	- 48-112 mmfd. Trimmer Condenser	15275
C2-C3	- 2 gang variable Condenser - 365 mmfd. max.	13372
C4	- 4 mfd. Dry Electrolytic Condenser 450 V.	13177
C5	- .1 Mfd. Condenser 200 V.	3220
C6	- .1 Mfd. Condenser 400 V.	3173
C7	- .1 mfd. Condenser 200 V.	3220
C8	- .001 Mfd. Condenser - mica	7039
C9	- .001 Mfd. Condenser - Mica	7039
C10	- .025 Mfd. Condenser - Sprague 200 V.	3333
C11	- $\frac{1}{2}$ Mfd. Condenser - Polymet Waxtite - 200 V.	13329
C12	- .025 Mfd. Condenser - Sprague 200 V.	3333
C13	- 1 Mfd. Cond. (1, $\frac{1}{2}$, $\frac{1}{2}$, mfd. Unit)	13140
C14	- .03 Mfd. Condenser - Sprague 700 V.	13331
C15	- 75-500 Mfd. Osc. Trimmer Condenser	16179
C16	- .1 Mfd. Condenser - Sprague 200 V.	3220
C17	- .1 Mfd. Condenser - Sprague 200 V.	3220
C18	- .15 Mfd. Condenser - Sprague 200 V.	13145
C19	- $\frac{1}{2}$ Mfd. Condenser - Polymet Waxtite 200 V.	13329
C20	- .0005 Mfd. Condenser - Mica	7052
C21	- .1 Mfd. Condenser - Sprague 200 V.	3220
C22	- $\frac{1}{2}$ Mfd. Condenser (See C13)	
C23	- $\frac{1}{2}$ Mfd. Condenser (See C13)	
C24	- 8 Mfd. Dry Electrolytic Condenser 450 V.	13181
C25	- 12 Mfd. Dry Electrolytic Condenser 450 V.	3162
M	- Tuning Meter - 15 ma.	13923
P1	- 100,000 Ohm Pot. (Tone Control)	14438
P2	- 250,000 Ohm Pot. (Vol Control combined with A.C. Switch)	4360
R1	- 250 Ohm Resistor - wire wound	4726
R2	- 60,000 Ohm Resistor - 1 watt carbon	4696
R3	- 25,000 Ohm Resistor - 1 watt carbon	4697
R4	- 100,000 Ohm Resistor - 1 watt carbon	14691
R5	- 5,000 Ohm Resistor - 1 watt carbon	14765
R6	- 400 Ohm Resistor - wire wound	4701
R7	- 3,500 Ohm Resistor - 1 watt carbon	4804
R8	- 80,000 Ohm Resistor - 1 watt carbon	14778
R9	- 1 Megohm Resistor - 1 watt carbon	4759
R10	- 1 Megohm Resistor - 1 watt carbon	4759
R11	- 9,000 Ohm Resistor - 1 watt carbon	14746
R12	- 60,000 Ohm Resistor - 1 watt carbon	4696
R13	- 100,000 Ohm Resistor - 1 watt carbon	14691
R14	- 1 megohm Resistor - 1 watt carbon	4759
R15	- 8,250 Ohms)	
R16	- 6,500 ohms) 14,750 Ohm R.D. Ohmite - 3 watt	14781
R17	- $\frac{1}{2}$ Megohm Resistor - 1 watt	4772
R18	- 12,000 Ohm Resistor - 1 watt	4746
SW1	- Change-over Switch	15327
SW2	- A.C. Switch (Combined with Vol. Control)	


MODEL R

SILVER - MARSHALL, INC.

- T1 - Q-1 I.F. Transformer
- T2 - Q-2 I.F. Transformer
- T3 - Q-4 I.F. Transformer
- T4 - 10202 Power Transformer
- T5 - 10208 Output Transformer.
- L1 - 203 Police Cali Coil
- L2 - 204 Antenna Coil
- L3 - 205 Oscillator Coil
- L4 - 283 K.F. Choke
- S1 - '24 Tube
- S2-S3 - '51 Tubes
- S4-S5-S8-S9 - '27 Tubes
- S6-S7 - '47 Tubes
- S10 - '80 Tube

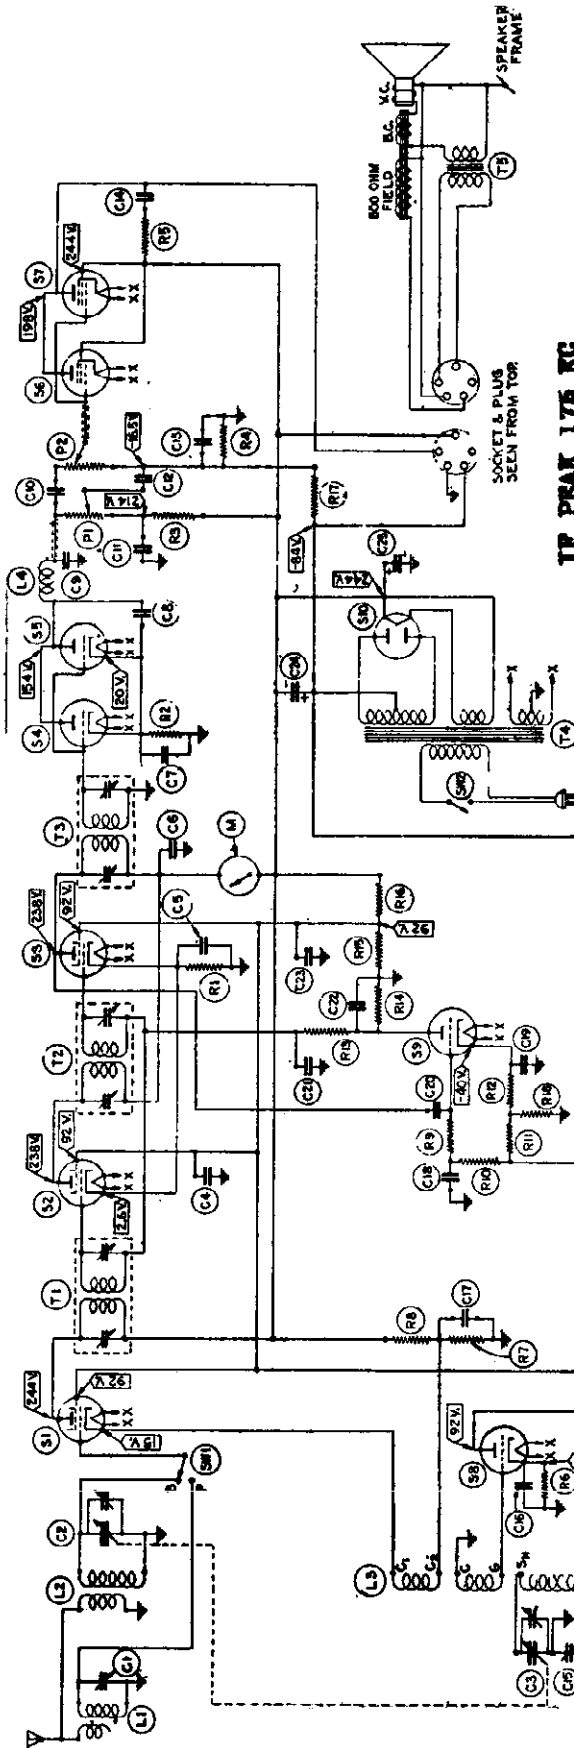


NOTE - VOLTAGES MEASURED ALL FROM GROUND.

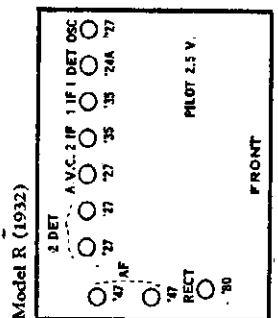

DRAWN BY M.S.
 CHECKED BY J.H.O.
 SILVER-MARSHALL, INC.
 MARCH 5, 1932.
 Dwg. No. 156

SONORA

MODEL 71, 72, 73
Schematic

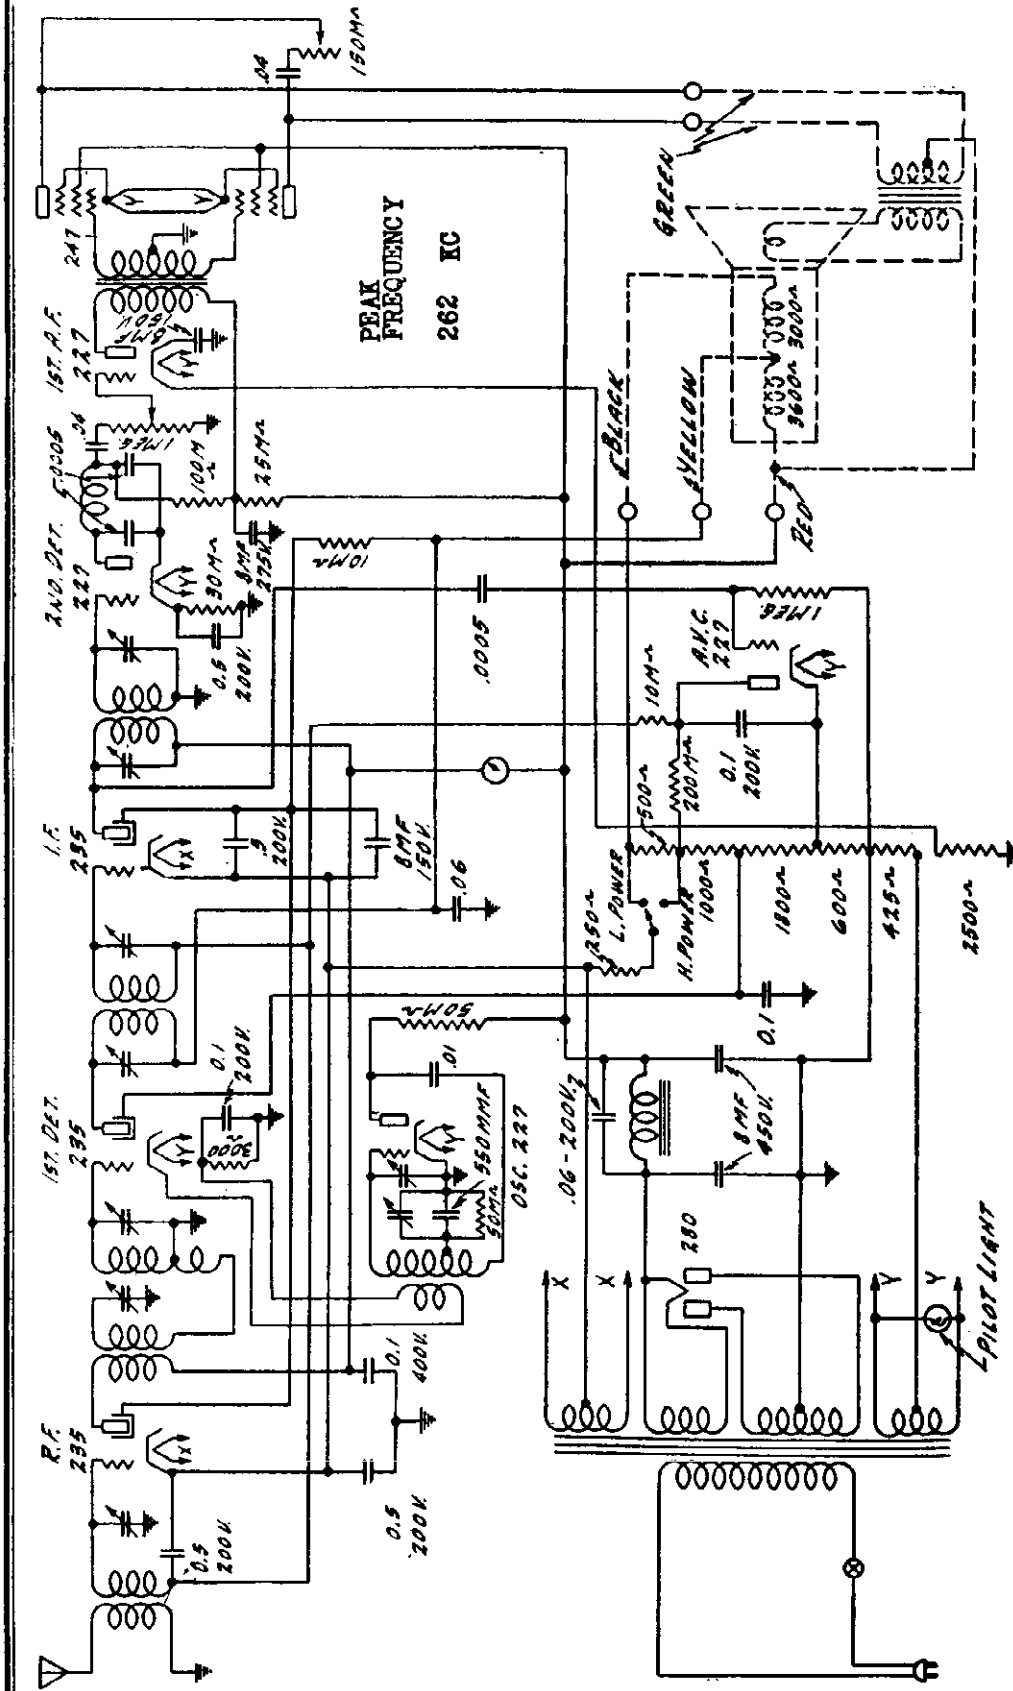


DOTTED LINES SHOWN ARE IN SPEAKER

The 25 cycle chassis can be operated satisfactorily from a 60 cycle power supply. If there is excessive hum it will be necessary to secure a .06 Mfd. condenser, Part No. 2854, and connect it in the circuit across the filter choke. The reverse is not true, that is, the No. 10, 60 cycle receiver cannot be operated satisfactorily from a 25 cycle power supply.


Aligning R.F. and Oscillator Condensers—For adjusting the R.F. and oscillator condensers the signal input from the antenna post should be made to the antenna post.

MODEL 84,85
 Socket
 Voltage, Notes

SONORA

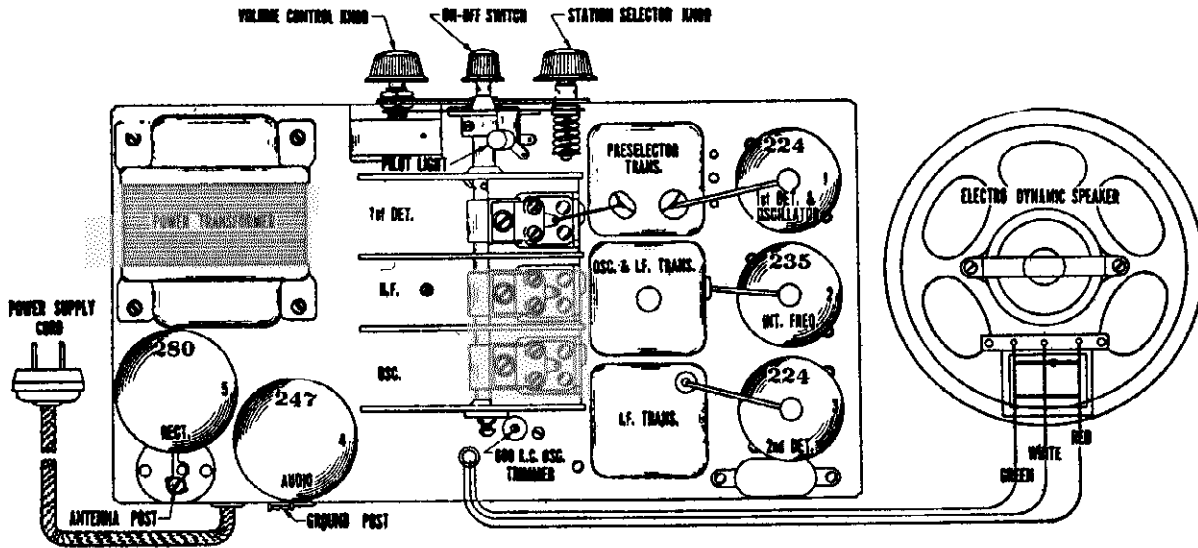

Top View of Chassis showing Tube Sequence and Speaker Connections

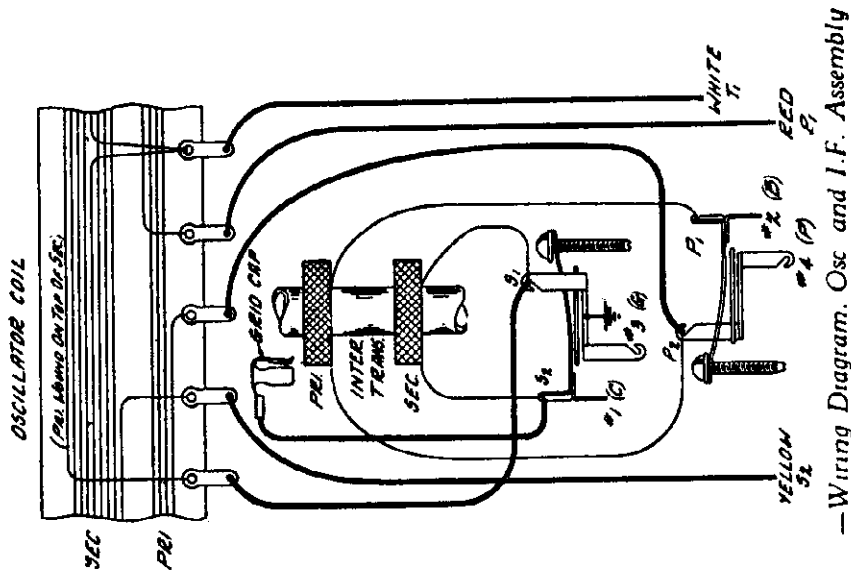

— Wiring Diagram. Osc and I.F. Assembly



VOLTAGES AT SOCKETS
 LINE VOLTAGE 115—VOLUME CONTROL AT MAXIMUM

Type of Tube	Position of Tube	Function	"A" Volts	"B" Volts	Control Grid "C" Volts	Screen Volts	Screen Current MA	Cathode Volts	Plate MA	Grid Test MA
224	1	1st Det. & Osc.	2.25	165	4.5-5.25 ⁽¹⁾	65	.4	4.5-5.25 ⁽¹⁾	1.3	2.0
235	2	I.F.	2.25	165	2.5	65	1.5	2.5	6.4	7.4
224	3	2nd Det.	2.25	128	6.5	60 ⁽²⁾	.05	6.5	.22	.23
247	4	Audio	2.25	205	16. ⁽³⁾	225	8.0		29.	33.
280	5	Rect.	4.9						27. Per Plate	

(1) Varies with frequency setting of dial approximately as shown.
 (2) Voltage as measured with 600,000 ohm meter.
 (3) Measured across 300 ohm section of voltage divider resistor.

SONORA

MODEL 64,85
Schematic

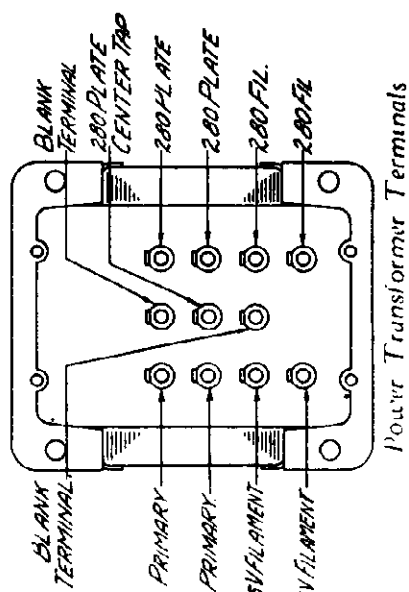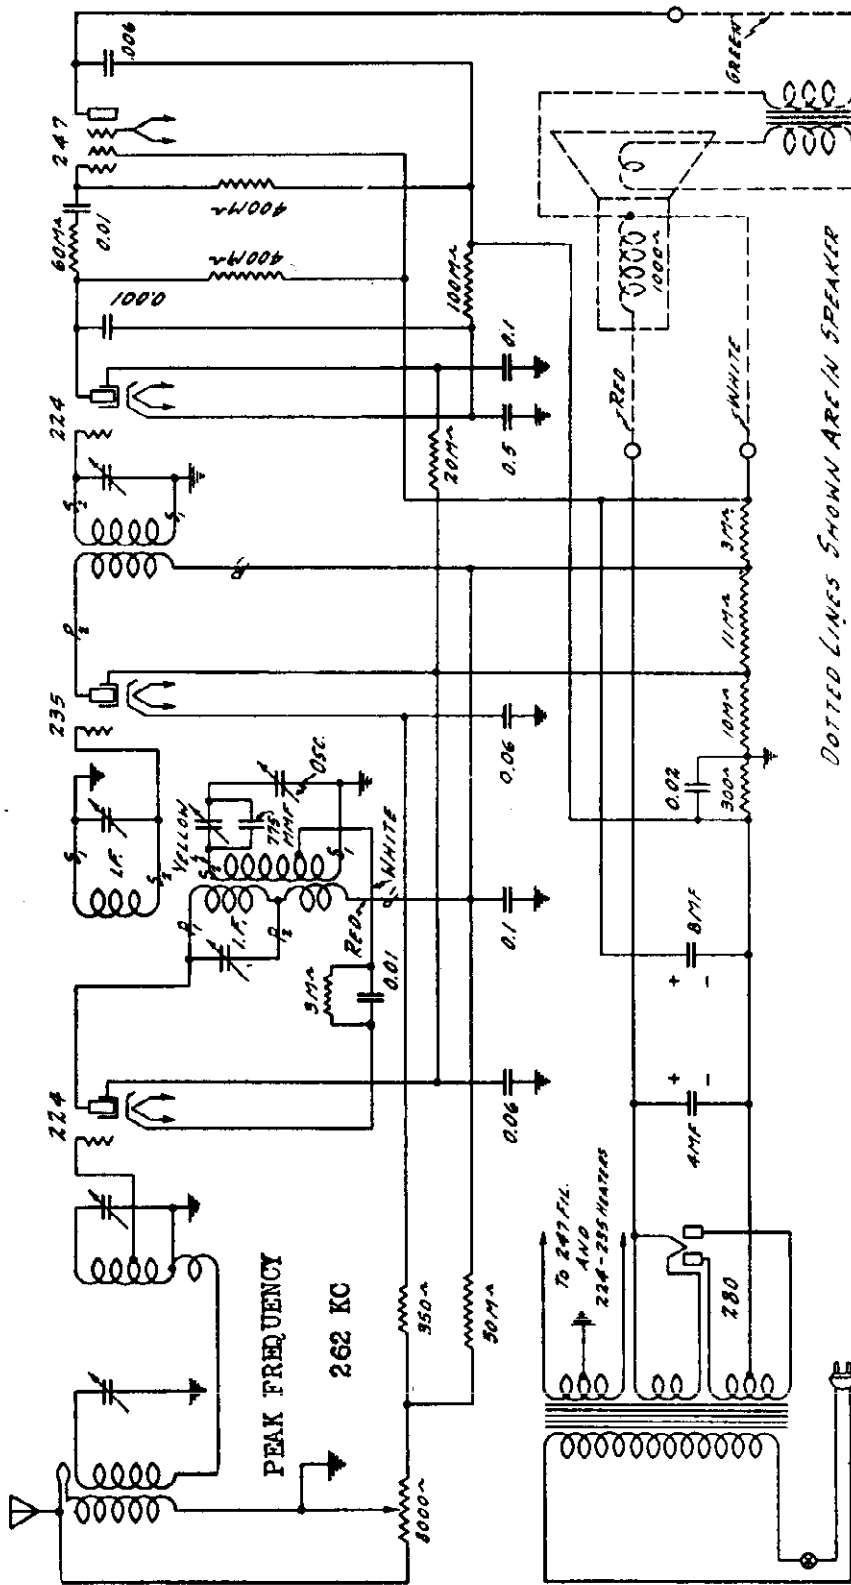


DOTTED LINES SHOWN ARE IN SPEAKER


There are certain features to be noted in this receiver. The mixer is of the autodyne type, wherein it functions as a mixer (1st detector) and also as an oscillator. Also that the grid lead from the mixer tube joins the grid coil at a tap upon this winding. This tap is so apporioned that the circuit acts to suppress the transmission of image frequency signals, in this case 524 KC higher than the frequency setting of the tuned circuit. The IF transformer is also of special structure combining the coupling transformer and also the oscillator system. The structure of this transformer-oscillator is illustrated upon the next page.

MODEL 86,87
Voltage
Transformer
Notes


SONORA

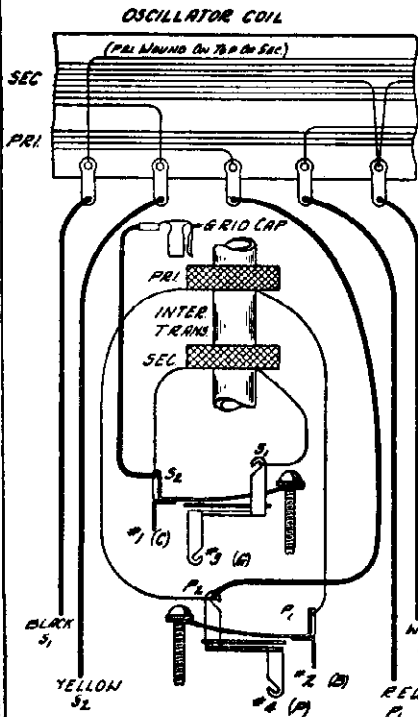

-Wiring Diagram, Osc. and I.F. Assembly'

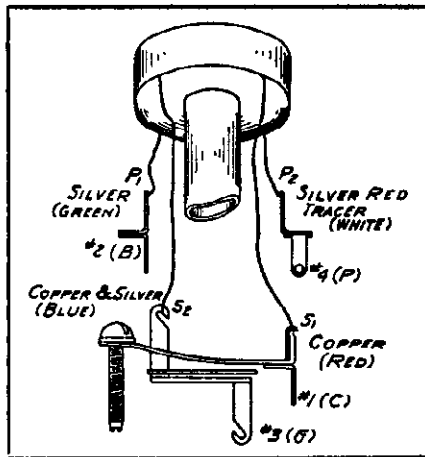

WHITE Wiring Diagram, 2nd I.F. Assembly

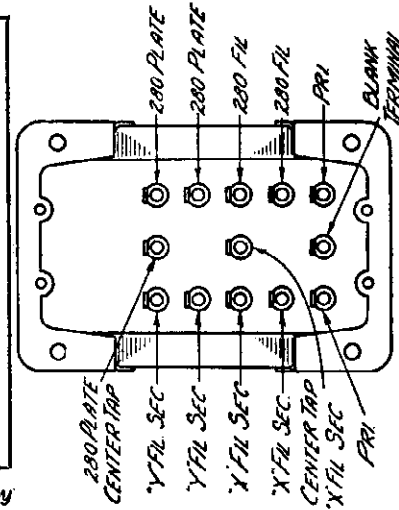

-Power Transformer Terminals

VOLTAGES AT SOCKETS—LINE VOLTAGE 115

VOLUME CONTROL AT MAXIMUM—LOCALIZER AT NORMAL SETTING

Type of Tube	Position of Tube	Function	Across Filament or Heater	Plate to Cathode	Grid to Cathode	Screen to Cathode	Screen MA	Cathode to Heater	Plate MA	Grid Test MA
235	1	R.F.	2.35	150	4.5 ⁽¹⁾	70 ⁽²⁾	.9	4.5	2.7	4.2
224	2	1st Det. & Osc.	2.35	240	6.4	93	.3	6.4	1.8	2.6
235	3	I.F.	2.35	150	4.5 ⁽¹⁾	70 ⁽²⁾	.9	4.5	2.7	4.2
227	4	2nd Det.	2.35	150	12-24 ⁽³⁾			0-10 ⁽³⁾	2-.5 ⁽³⁾	21-51 ⁽³⁾
224	5	A.V.C.	2.35	60	0-15 ⁽³⁾	9	0 ⁽⁴⁾	12	0 ⁽⁴⁾	0 ⁽⁴⁾
247	6	Power	2.35	220	16 ⁽⁵⁾	240	6.4		34	40
280	7	Rect.	4.9						39	
									Per Plate	



- (1) This voltage read across 800 ohm resistor.
- (2) Voltage as read with 600,000 ohm meter.
- (3) Varies with setting of localizer. Voltages read with high resistance meter
- (4) Current zero with no signal and localizer at normal position.
- (5) The voltage read across 200 ohm section of voltage divider.

SETTING THE LOCALIZER.


Turn the localizer knob counterclockwise as far as it will go. Then turn the knob one quarter turn clockwise. Next tune in a fairly strong signal and reduce the volume by means of the volume control knob on the front panel. Then turn the localizer knob to the extreme clockwise position. This will cause plate current cutoff in the RF and IF tubes. Then turn the knob slowly in a counterclockwise direction until the signal is again heard. With a slight additional turn in the same direction the signal builds up sharply to full strength and this is the correct position of the localizer setting. This adjustment should not be changed unless the set is reinstalled or the tubes are changed. Incorrect adjustment of this knob will control the action of the AVC tube in such fashion that the automatic action will commence too soon or too late.

SONORA

MODEL 86,87
Schematic
Socket

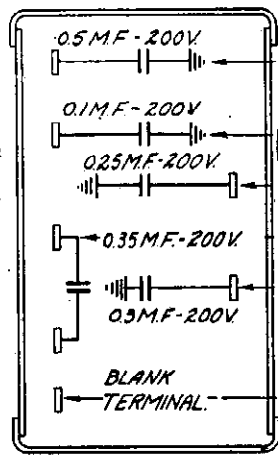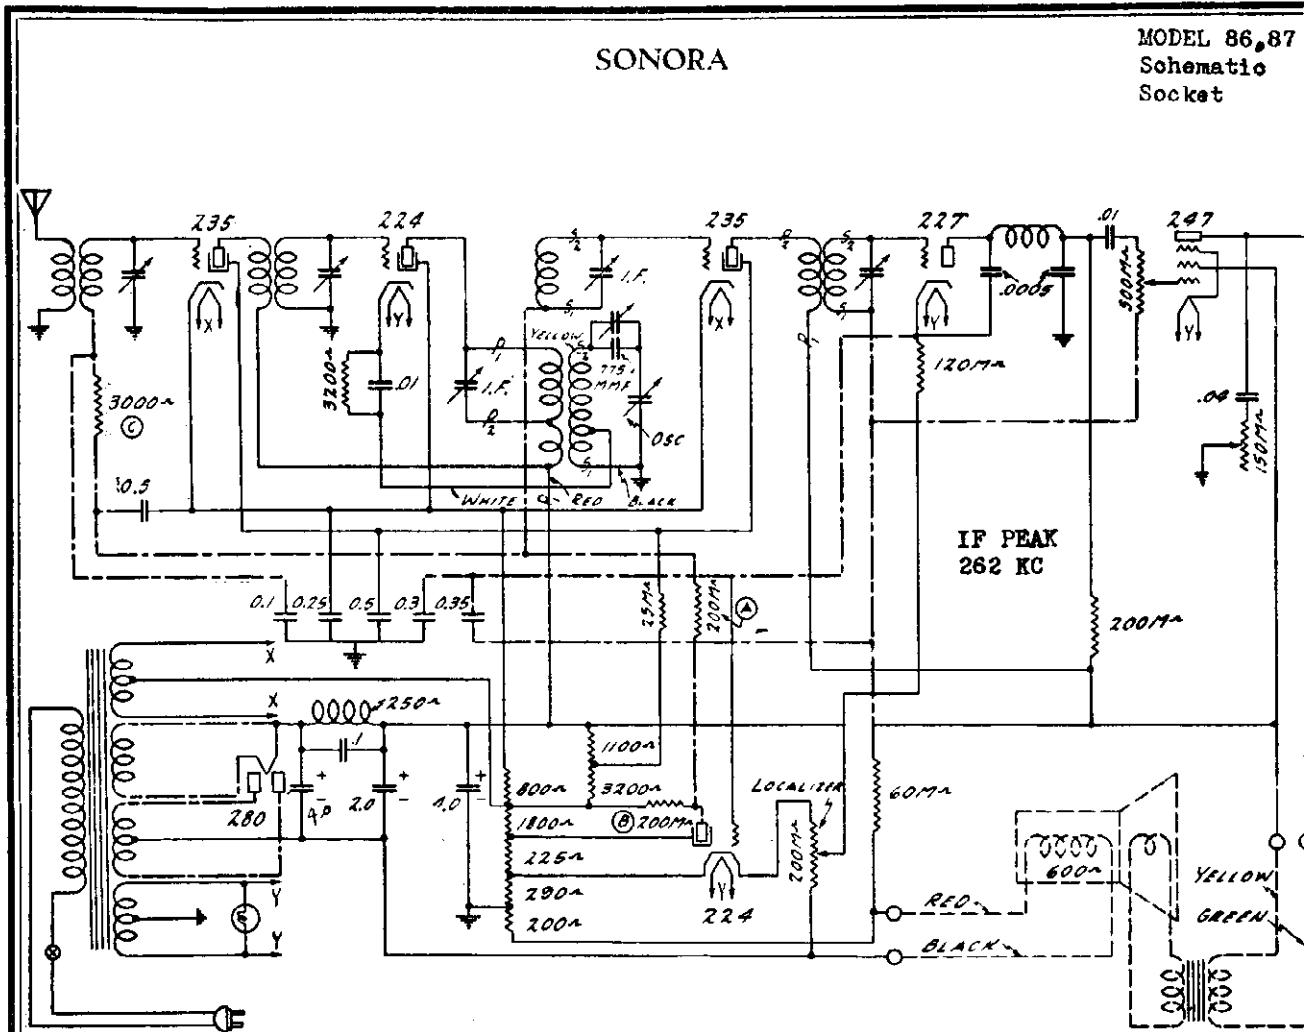

5 Section Condenser
Internal Wiring

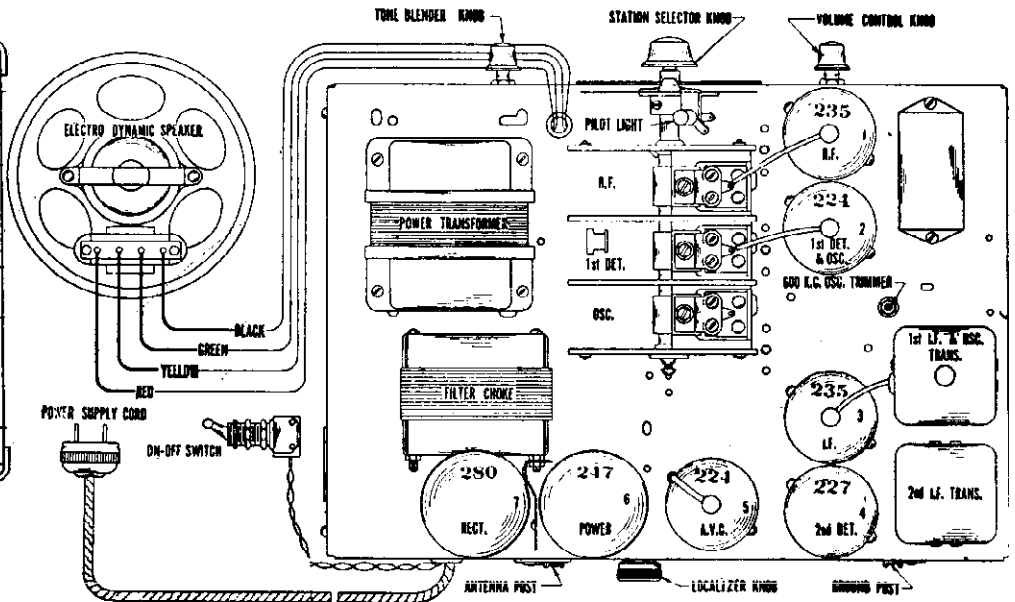


—Top View of Chassis showing Tube Sequence and Speaker Connections

There are certain features to be noted in this receiver. The mixer tube is of the auto-dyne type, wherein it functions as the mixer (1st detector) and at the same time functions as the oscillator. The structure of the oscillator-IF transformer is shown elsewhere. The structure of the 2nd IF transformer is also shown upon the same page. Take note of the changes recorded upon the wiring diagram. See the footnotes concerning the significance of the numbers contained within the circles.

MODEL 5,9
Schematic
Chassis, Voltage

SPARKS WITHINGTON CO.

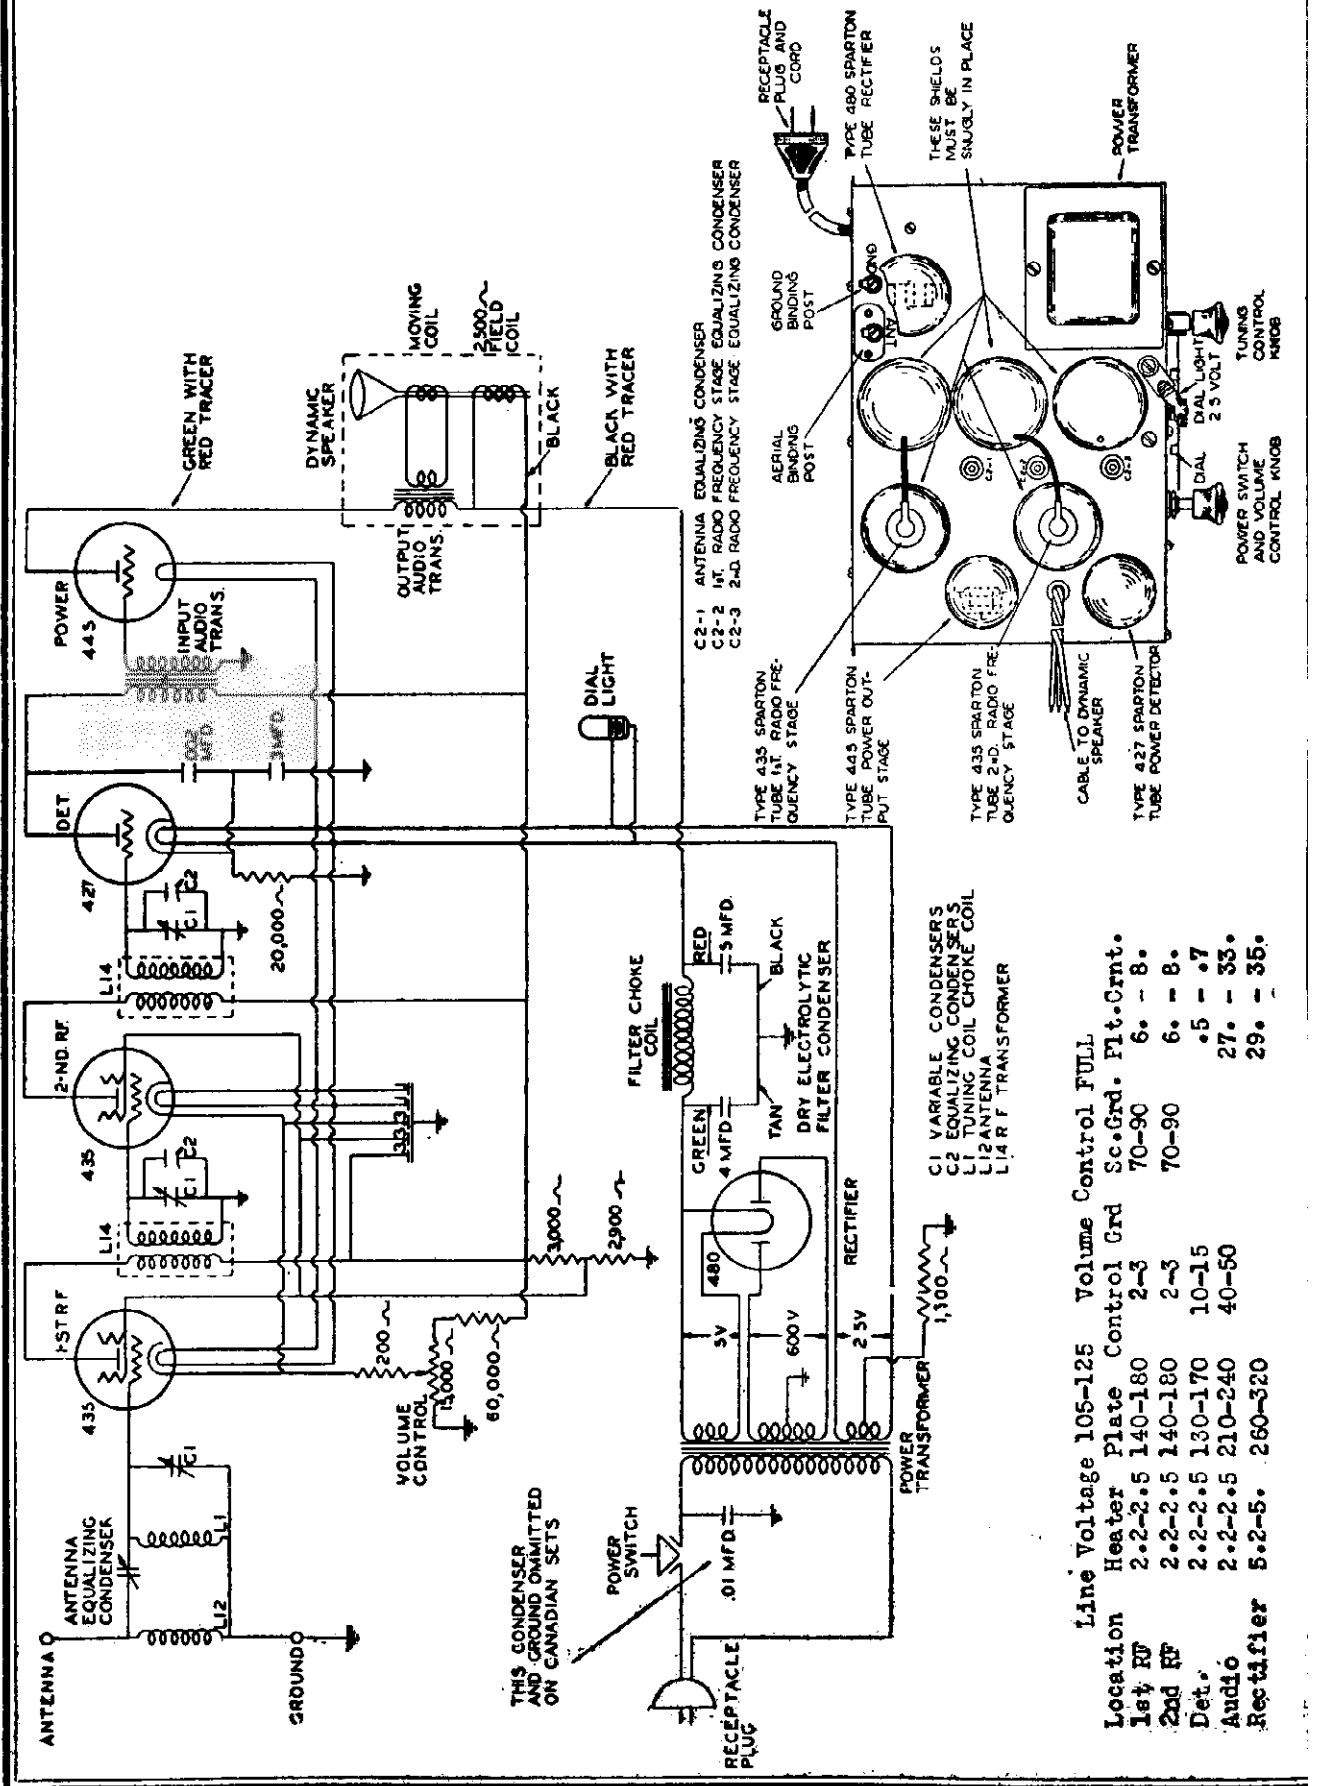

Line Voltage 105-125 Volume Control FULL

Location	Heater	Plate	Control	Grd	Sc.Gr.	Plt.Crnt.
1st RF	2.2-2.5	140-180	2-3	70-90	6.	- 8.
2nd RF	2.2-2.5	140-180	2-3	70-90	6.	- 8.
Det.	2.2-2.5	130-170	10-15		.5	- .7
Audio	2.2-2.5	210-240	40-50		27.	- 33.
Rectifier	5.2-5.	260-320			29.	- 35.



- C1 VARIABLE CONDENSERS
- C2 EQUALIZING CONDENSERS
- L1 TUNING COIL
- L2 ANTENNA
- L3 R.F. TRANSFORMER

THIS CONDENSER AND GROUND OMITTED ON CANADIAN SETS

SPARKS WITHINGTON CO.

MODEL 9-A
Schematic
Voltage

Antenna Compensating Condenser
Accessible Thru Rear Of Chassis

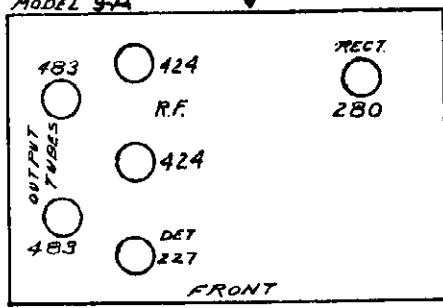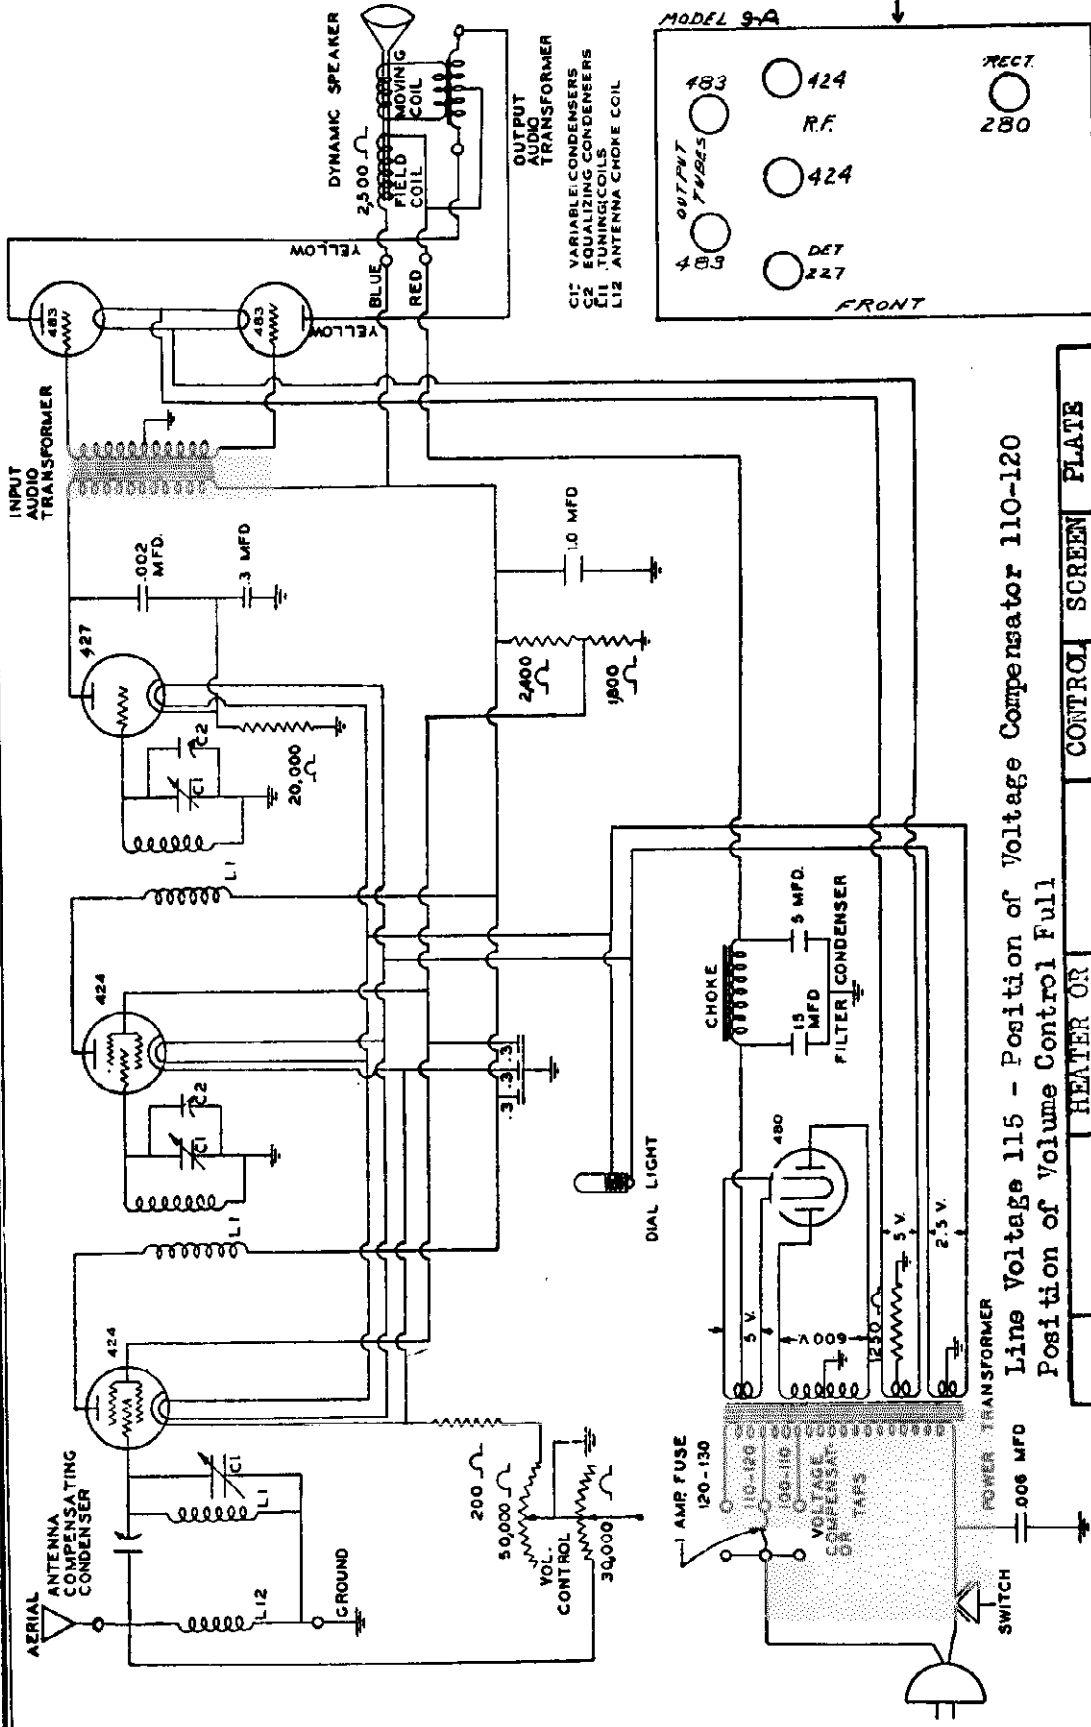


Line Voltage 115 - Position of Voltage Compensator 110-120
Position of Volume Control Full

TUBE	LOCATION	HEATER OR FILAMENT	PLATE	CONTROL GRID--	SCREEN GRID+	PLATE CURRENT
424	1st R.F.	2.2 - 2.5	160 - 180	2 - 3	60 - 80	2.5 - 4
424	2nd R.F.	2.2 - 2.5	160 - 180	2 - 3	60 - 80	2.5 - 4
427	Detector	2.2 - 2.5	145 - 165	12 - 18		.4 - 1
483	Power	4.7 - 5	220 - 240	45 - 55		24. - 28
483	Power	4.7 - 5	220 - 240	45 - 55		24. - 28
480	Rectifier	4.7 - 5	320 - 340			40. - 55

SPARKS WITHINGTON CO.

MODEL 10
Chassis, Voltag

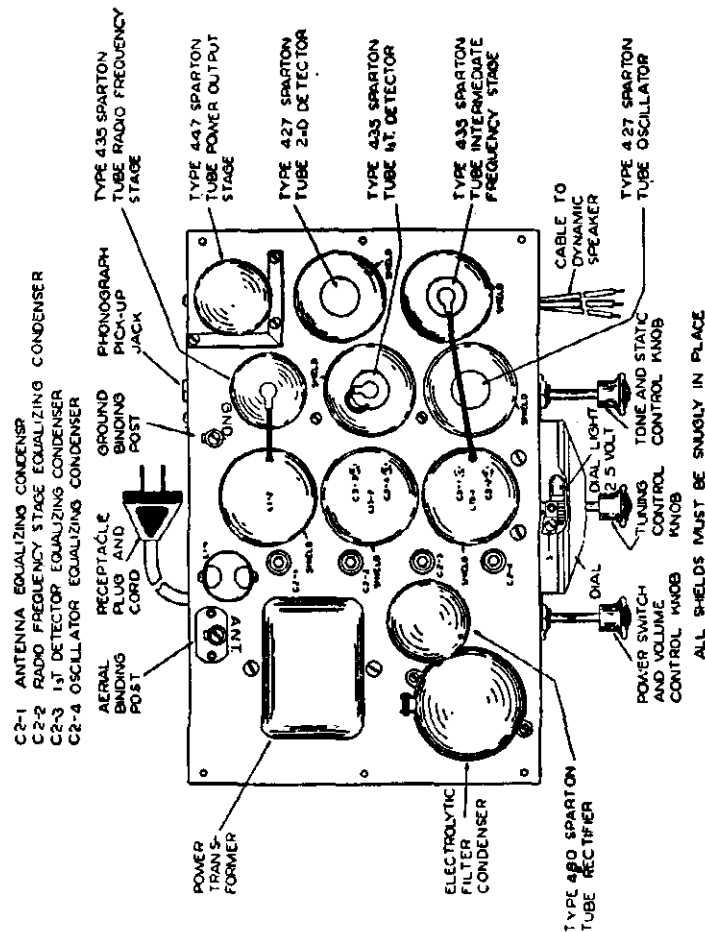

TOP VIEW MODEL 10 SUPERHETERODYNE CHASSIS

- L1-1 First R. F. Tuning Coil
- L1-2 Second R. F. Tuning Coil
- L15-1 First I. F. Transformer (1st. Det. to I.F. Stage)
- L15-2 Second I. F. Transformer (I.F. to 2nd. Det. Stage)
- C3-1 I. F. Stage First Adjustable Condenser
- C3-2 I. F. Stage Second Adjustable Condenser
- C3-3 I. F. Stage Third Adjustable Condenser
- C3-4 I. F. Stage Fourth Adjustable Condenser

Voltage-Current Characteristics

Line Voltage 115—Position of Voltage Compensator 100-115—Position of Volume Control Full


Tube	Location	OPERATING VOLTAGES				Plate Current Mills.
		Heater or Filament	Plate	Control Grid -	Screen Grid +	
435	1st R. F.	2.2 - 2.5	230 - 270	2.5 - 4.0	85 - 100	5 - 8
435	1st Det.	2.2 - 2.5	230 - 270	**4.5 - 7.5	85 - 110	**1.8 - 3.5
435	1st I. F.	2.2 - 2.5	230 - 270	2.5 - 4.0	85 - 110	5 - 8
427	Oscillator	2.2 - 2.5	85 - 110	†	-----	‡
427	2nd Det.	2.2 - 2.5	*100 - 135	8 - 14	-----	4.0 - .7
447	Power	2.2 - 2.5	220 - 260	15 - 18	-----	30 - 36
480	Rectifier	4.2 - 5	360 - 420	-----	-----	40 - 55

*Use 300 volt scale.
**Remove Oscillator tube.

†Tube generates own bias when oscillating.
‡Test with plug in 2nd. Detector socket and tube in analyz

MODEL 10
Schematic

SPARKS WITHINGTON CO.

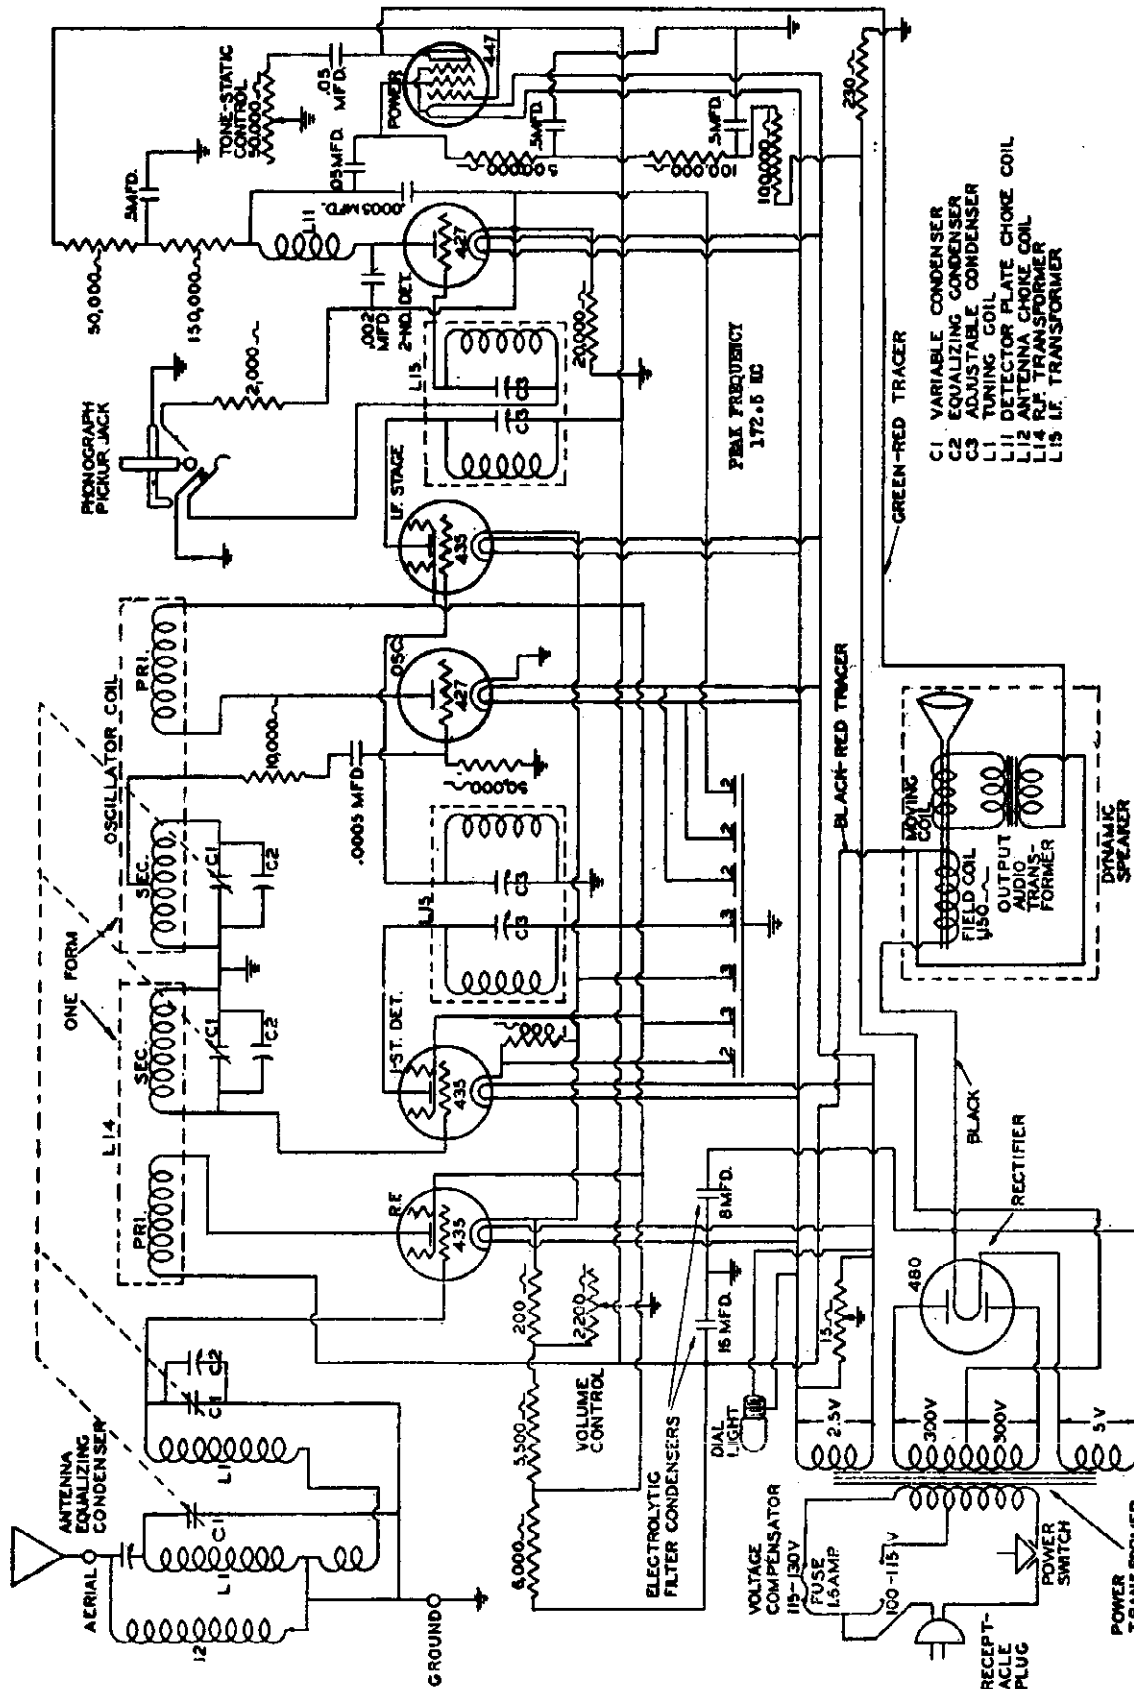


- C1 VARIABLE CONDENSER
- C2 EQUALIZING CONDENSER
- C3 ADJUSTABLE CONDENSER
- L1 TUNING COIL
- L11 DETECTOR PLATE CHOKE COIL
- L12 ANTENNA CHOKE COIL
- L14 RF TRANSFORMER
- L15 IF TRANSFORMER

IF PEAK 172.5 KC

MODEL 12
Schematic
Chassis, Voltage

SPARKS WITHINGTON CO.

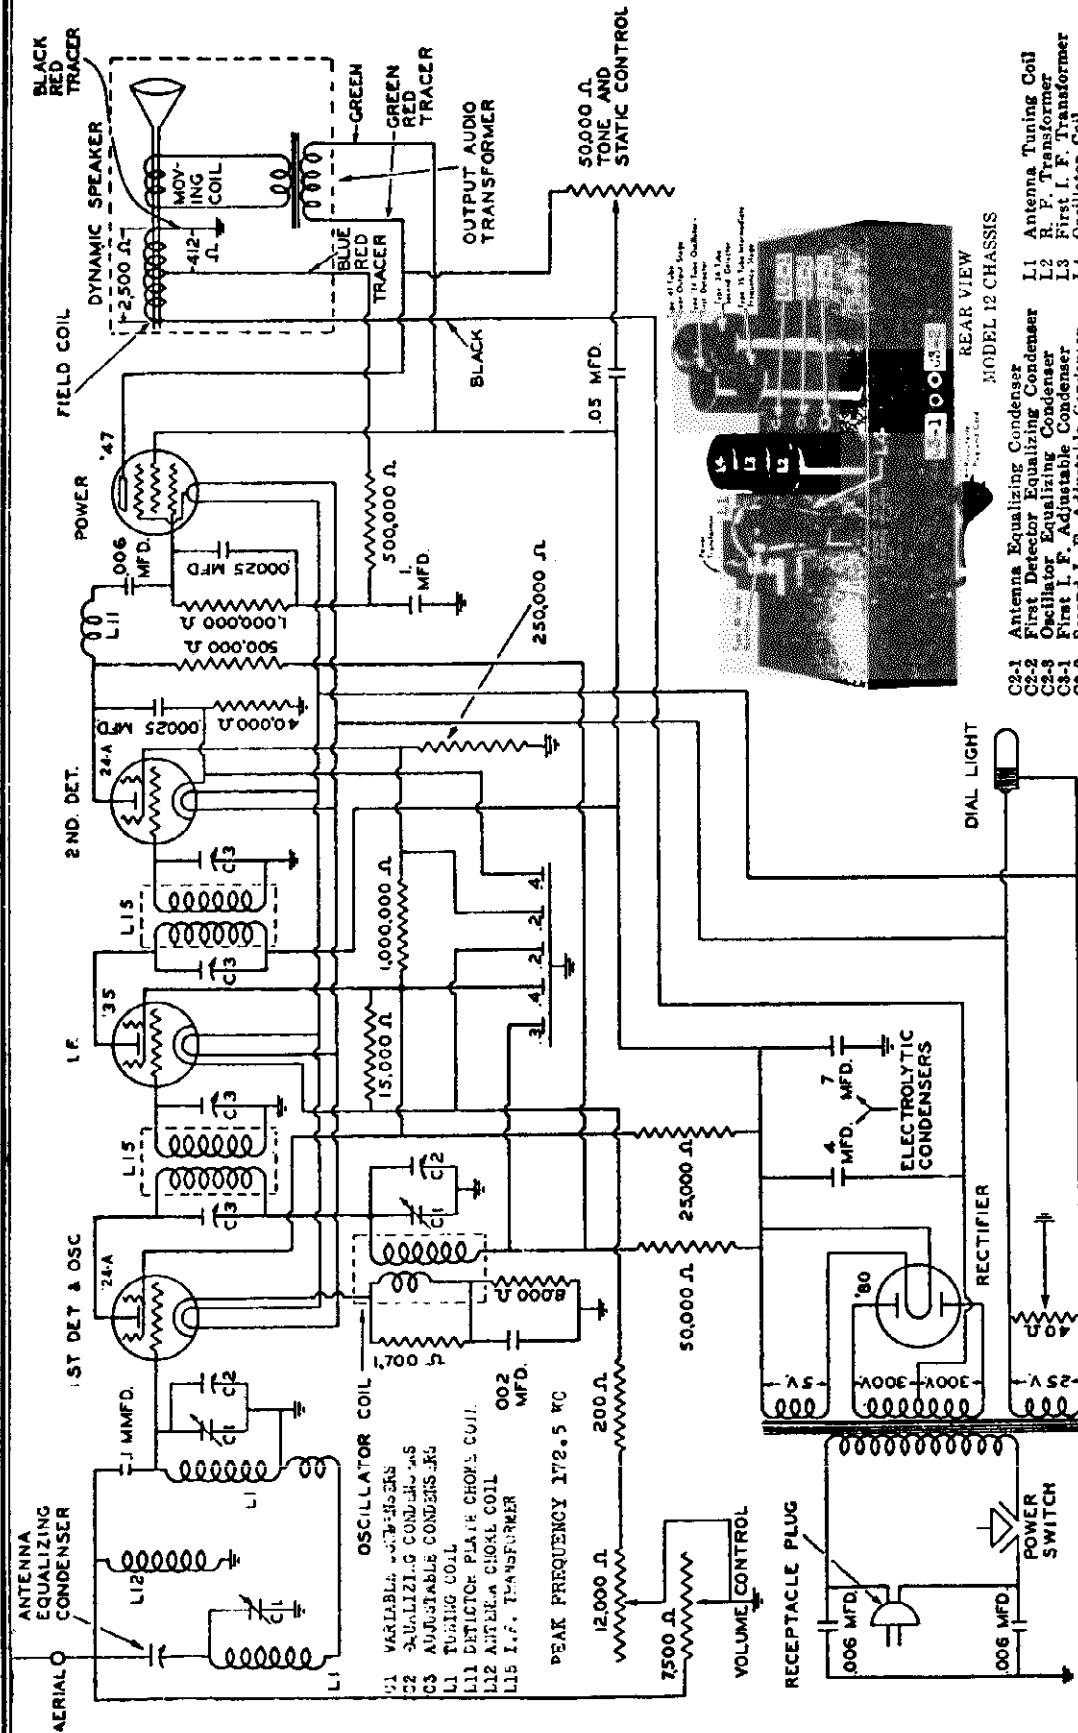

- L1 Antenna Tuning Coil
- L2 R. F. Transformer
- L3 First I. F. Transformer
- L4 Oscillator Coil

- C2-1 Antenna Equalizing Condenser
- C2-2 First Detector Equalizing Condenser
- C2-3 Oscillator Equalizing Condenser
- C3-1 First I. F. Adjustable Condenser
- C3-2 Second I. F. Adjustable Condenser

MODEL 12

Tube	Location	Factor of Filament	Plate	Control Grid -	Screen Grid +	Plate Current M. A.
24-A	1st Det.-Osc.	2.2 - 2.5	149 - 171	9.2 - 10.8	59 - 70	9 - 11
24-A	2nd Det.	2.2 - 2.5	62 - 74	1.6 - 2.0	5.4 - 6.6	.17 - .20
'35	I. F.	2.2 - 2.5	227 - 253	3.2 - 3.8	58 - 70	6.9 - 8.1
'47	Power	2.2 - 2.5	221 - 247	11.0 - 13.0	237 - 263	21.5 - 25.3
'80	Rectifier	4.4 - 5.0	319 - 375			19 - 23

LINE VOLTAGE 115 POSITION OF VOLUME CONTROL FULL

IF PEAK 172.5 KC

POWER TRANSFORMER

REAR VIEW
MODEL 12 CHASSIS

MODEL 14
Chassis, Voltage

SPARKS WITHINGTON CO.

Sparton Model 14 Super-Heterodyne Schematic Diagram and Voltage Analysis


VOLTAGE ANALYSIS

Line Voltage 115—Position of Voltage Compensator 100-115—Position of Volume Control Full

Tube	Location	Heater or Filament	Plate	Control Grid —	Screen Grid +	Plate Current M. A
58	R. F. Stage	2.2—2.5	218—242	2—4	95—105	5.5—7.0
'24	1st Det.-Osc.	2.2—2.5	218—242	—	95—105	0.7—8.0
58	I. F. Stage	2.2—2.5	218—242	2—4	95—105	5.5—7.0
56	2nd Det.-AVC	2.2—2.5	*	*	—	*
56	2nd Det.-AVC	2.2—2.5	*	*	—	*
56	A. F. Stage	2.2—2.5	20—40	Zero	—	0.5—0.7
'47	Power Stage	2.2—2.5	205—225	†18—20	218—242	20—24
'80	Rectifier	4.5—5.0	315—345	—	—	19—23 per Plate

* Present only when signal is applied.
† Measured from tap on field coil to ground.

MODEL 14 CHASSIS

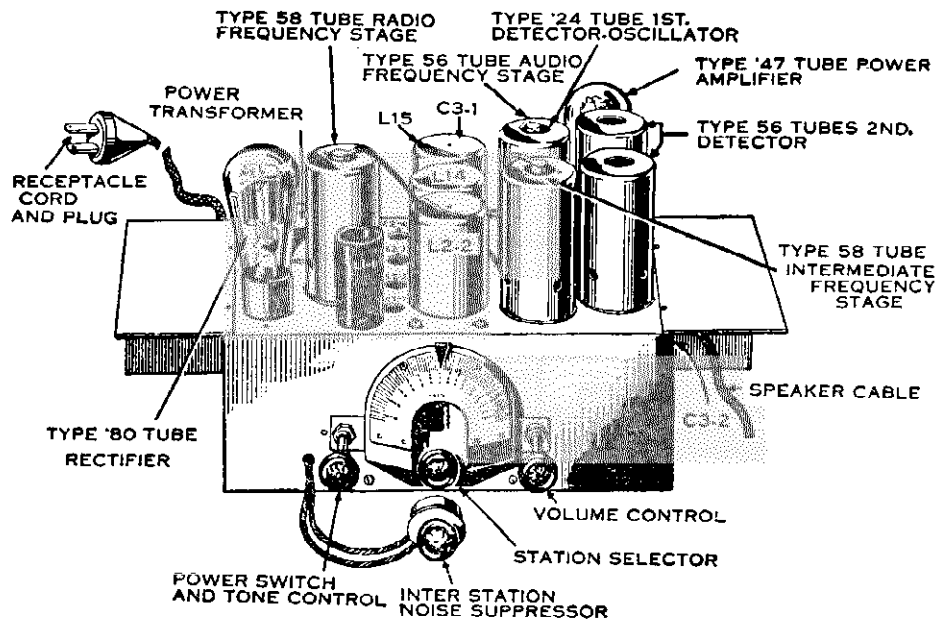


- C2-1 Antenna Equalizing Condenser
- C2-2 R. F. Stage Equalizing Condenser
- C2-3 1st Detector Equalizing Condenser
- C2-4 Oscillator Equalizing Condenser
- C3-1 I. F. Input Stage Adjustable Condenser

- C3-2 I. F. Output Stage Adjustable Condenser
- L1 1st Tuning Coil
- L2 Second Tuning Coil
- L14 R. F. Transformer
- L15 I. F. Transformer

MODEL 15
Chassis, Voltage

SPARKS WITHINGTON CO.

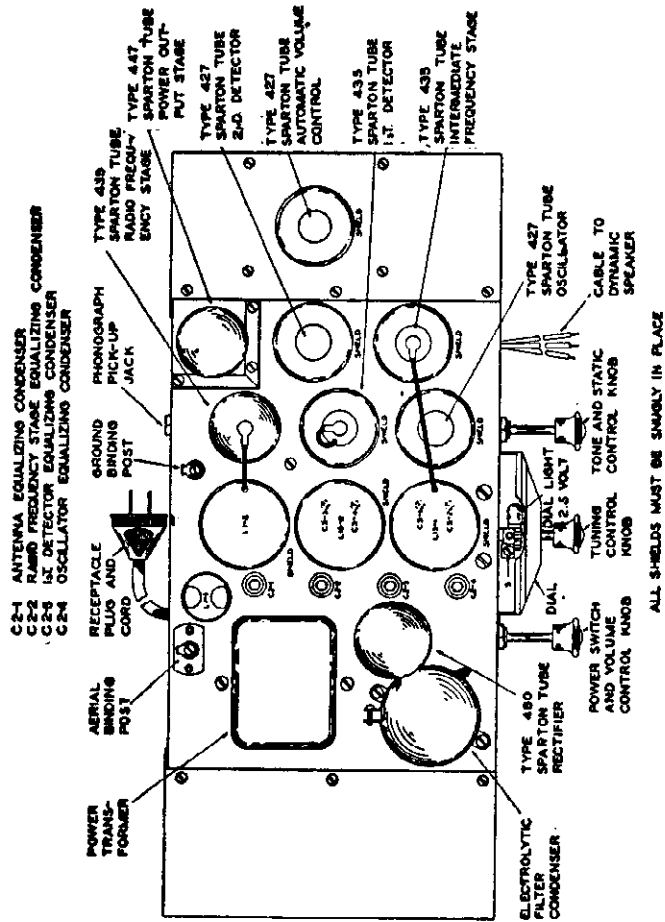

TOP VIEW

- L1-1 First R. F. Tuning Coil
- L1-2 Second R. F. Tuning Coil
- L15-1 First I. F. Transformer (1st. Det. to I. F. Stage)
- L15-2 Second I. F. Transformer (I. F. to 2nd. Det. Stage)
- C3-1 I. F. Stage First Adjustable Condenser
- C3-2 I. F. Stage Second Adjustable Condenser
- C3-3 I. F. Stage Third Adjustable Condenser
- C3-4 I. F. Stage Fourth Adjustable Condenser

Voltage-Current Characteristics

Line Voltage 115—Position of Voltage Compensator 115-130—Position of Volume Control Full

Tube	Location	OPERATING VOLTAGES					Plate Current Mills.
		Heater or Filament	Plate	Control Grid—	Screen Grid+		
435	1st R. F.	2.2 - 2.5	155 - 185	2 - 3	70 - 100	3 - 6	
435	1st Det.	2.2 - 2.5	150 - 180	§ 7 - 11	70 - 100	§ 1.8 - 3	
435	1st I. F.	2.2 - 2.5	155 - 185	2 - 3	70 - 100	3 - 6	
427	Oscillator	2.2 - 2.5	70 - 95	†	†	
427	2nd Det.	2.2 - 2.5	*100 - 135	8 - 14	4.0 - .7	
427	A. V. C.	2.2 - 2.5	30 - 40	24	Zero	
427	Power	2.2 - 2.5	220 - 260	15 - 18	230 - 270	30 - 36	
480	Rectifier	4.2 - 5	320 - 370	40 - 55	

* Use 300 volt scale.


† Tube generates own bias when oscillating.

§ Remove Oscillator tube.

‡ Test with plug in 2nd. Detector socket and tube in analyzer.

MODEL 16-AW, 26-AW
Short-Wave Receiver
Schematic, Voltage

SPARKS WITHINGTON CO.

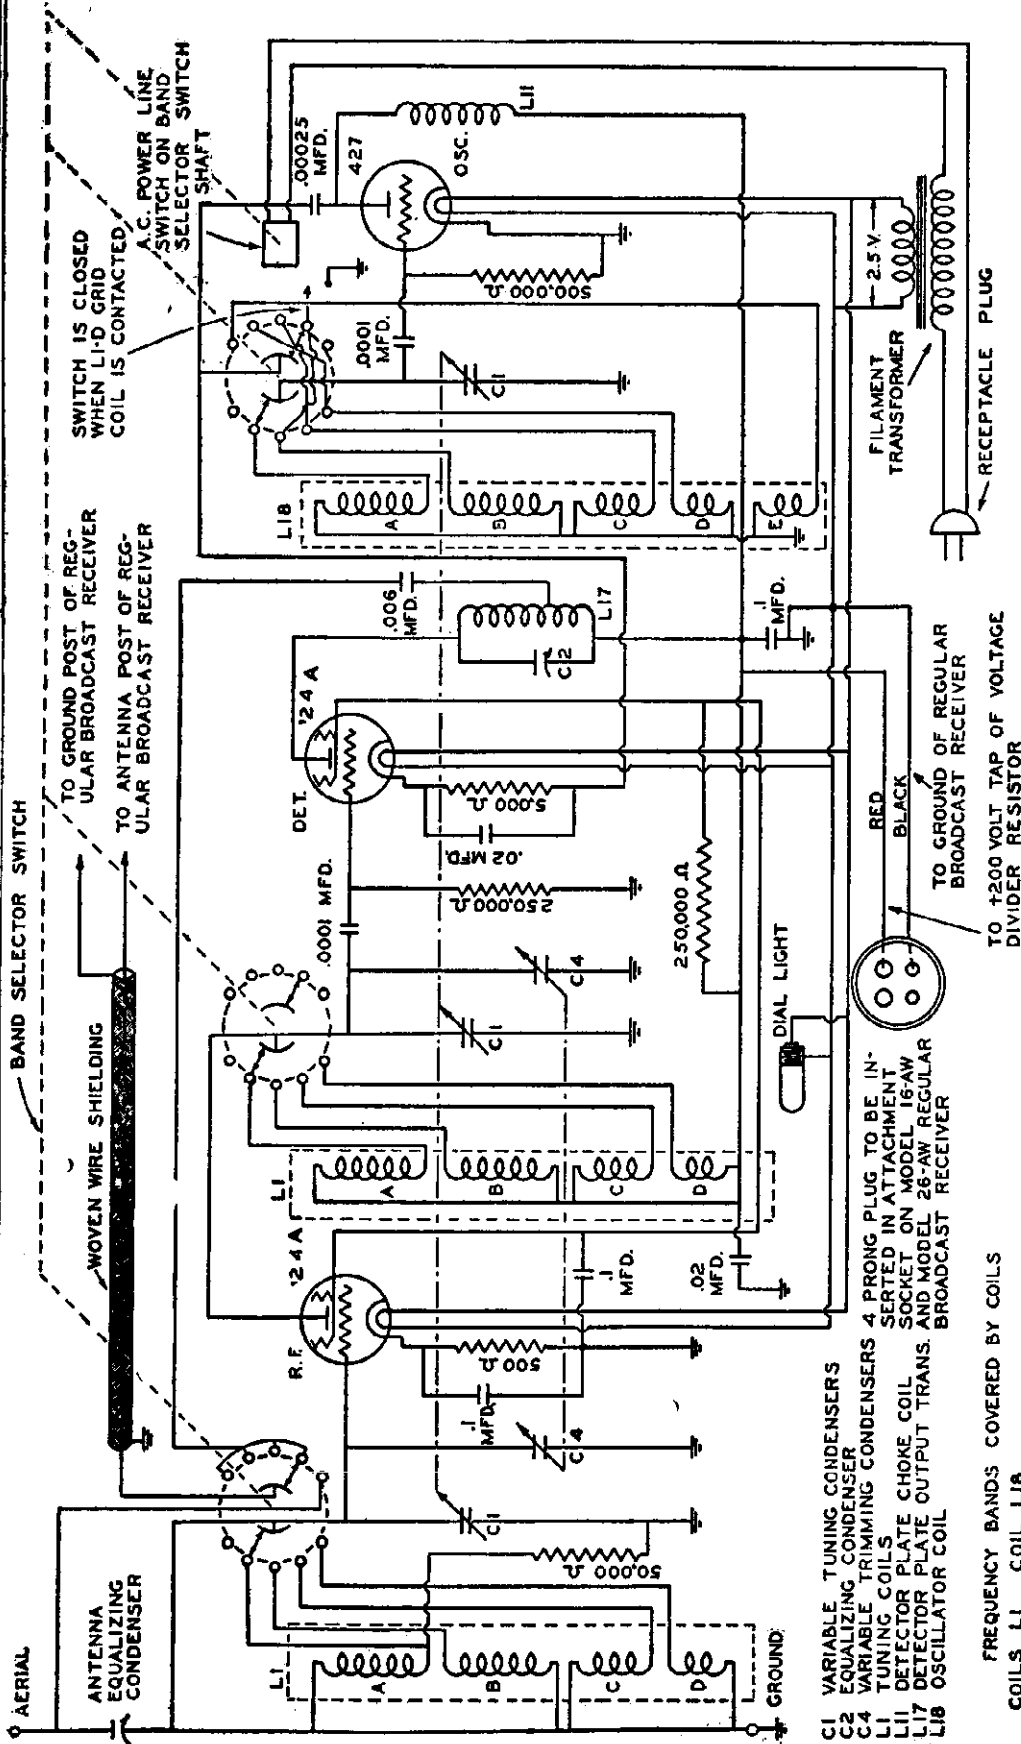

- C1 VARIABLE TUNING CONDENSERS
- C2 EQUALIZING CONDENSER
- C4 VARIABLE TRIMMING CONDENSERS
- L1 TUNING COILS
- L11 DETECTOR PLATE CHOKE COIL
- L17 DETECTOR PLATE OUTPUT TRANS. AND MODEL 26-AW REGULAR BROADCAST RECEIVER
- L18 OSCILLATOR COIL

FREQUENCY BANDS COVERED BY COILS

COILS	L1	L18
A	1.5-3.7	MEGACYCLES
B	3.2-7.55	MEGACYCLES
C	7.2-15.5	MEGACYCLES
D	15.2-25.5	MEGACYCLES

MODEL 16-AW SHORT-WAVE UNIT

24-A	R. F.	2.2 - 2.5	230 - 280	2 - 3	70 - 100	3.0 - 6.0
24-A	Detector	2.2 - 2.5	230 - 280	15 - 6	70 - 100	0.2 1.0
427	Oscillator	2.2 - 2.5	230 - 280	†		x

* True value, Amount is less if measured on test kit.
† True value, Amount is more if measured on test kit.
‡ Measure with plug in second detector socket and tube in test kit.
§ Presence of voltage can only be determined by testing circuit continuity and measuring the plate and screen grid current of this tube. Voltage is five thousand times current in amperes.


MODEL 26-AW SHORT-WAVE UNIT

24-A	R. F.	2.2 - 2.4	170 - 200	2 - 3	70 - 100	3 - 6
24-A	Detector	2.2 - 2.4 <th>170 - 200</th> <td>15 - 6</td> <td>70 - 100</td> <td>0.2 - 1</td>	170 - 200	15 - 6	70 - 100	0.2 - 1
427	Oscillator	2.2 - 2.4 <th>170 - 200</th> <td>†</td> <td></td> <td>x</td>	170 - 200	†		x

* Remove oscillator tube † Tube generates own bias when oscillating.
‡ Presence of voltage can only be determined by testing circuit continuity and measuring the plate and screen grid current of this tube. Voltage is five thousand times current in amperes.
§ Measure with plug in second detector socket and tube in test kit.
¶ Test kit reading. True voltage is 125 volts.
‡ Meter reading on 150 volt scale. True voltage 50-75. If lower scale voltmeter is used select lower voltage.

SPARKS WITHINGTON CO.

MODEL 16, 16-AW
Broadcast Receiver
Schematic, Voltage

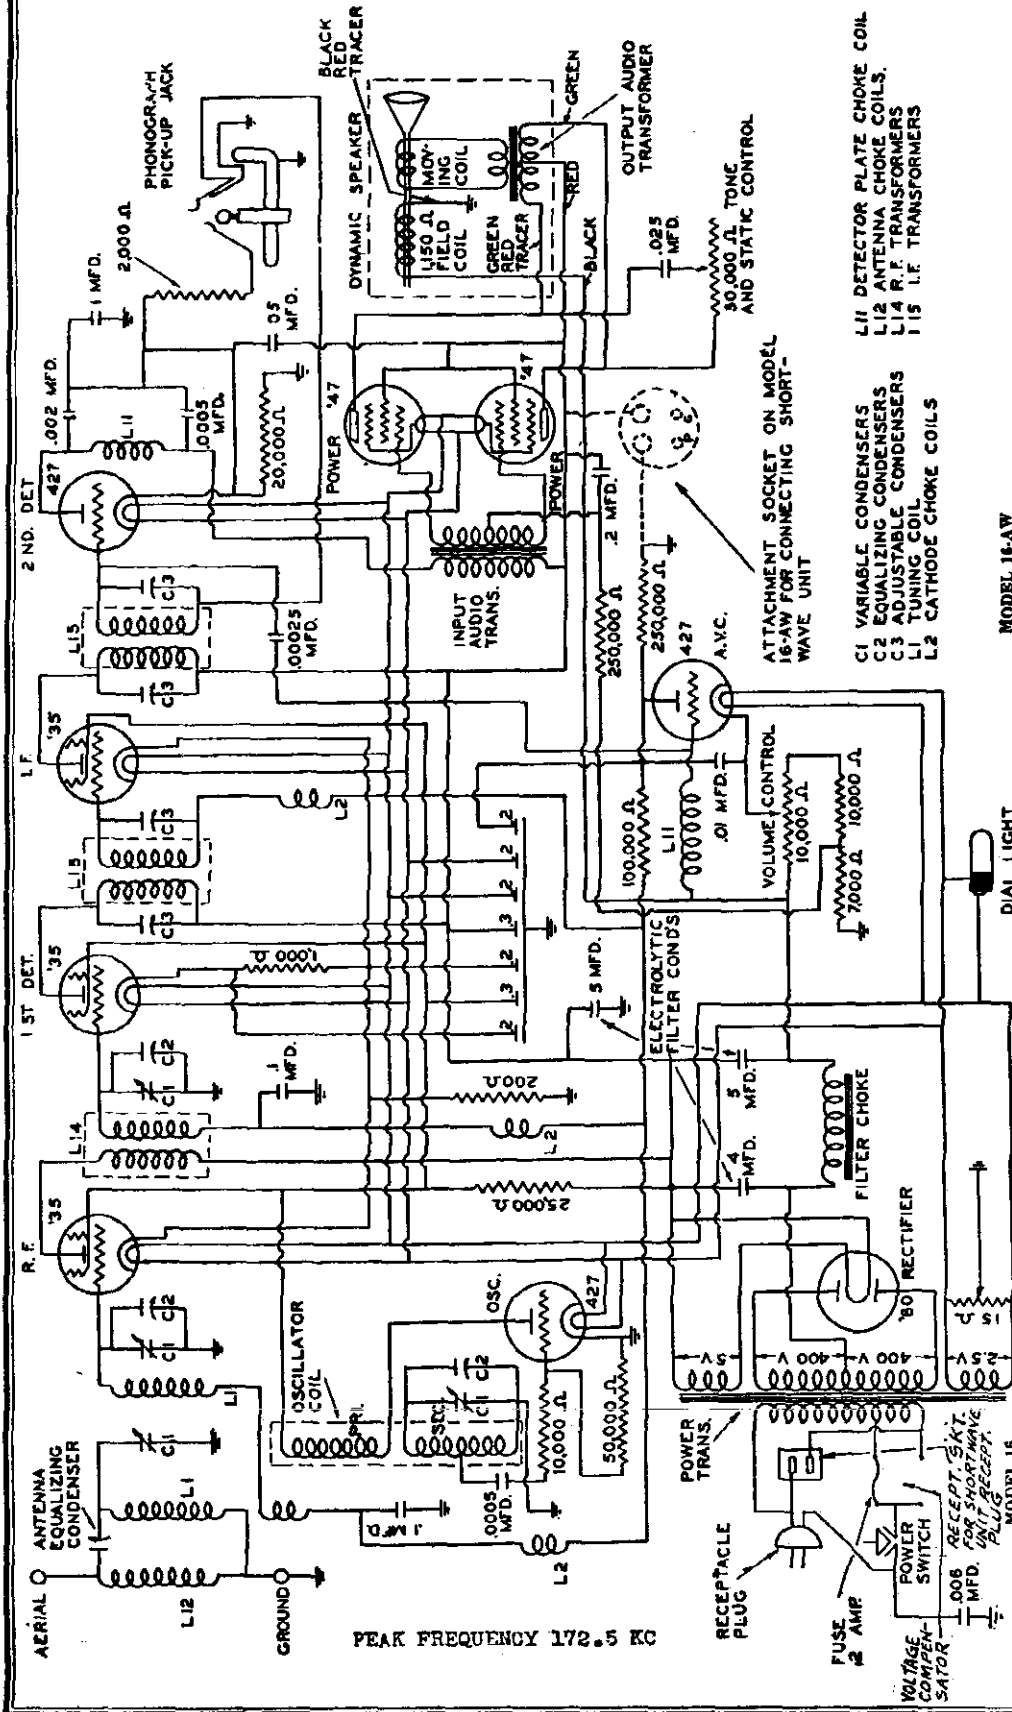

- C1 VARIABLE CONDENSERS
- C2 EQUALIZING CONDENSERS
- C3 ADJUSTABLE CONDENSERS
- L1 TUNING COIL
- L2 CATHODE CHOKE COILS
- L11 DETECTOR PLATE CHOKE COIL
- L12 ANTENNA CHOKE COILS
- L14 R.F. TRANSFORMERS
- L15 I.F. TRANSFORMERS

MODEL 16-AW

Line Voltage 115—Position of Volume Control Full

Tube	Location	Heater or Filament	Plate	Control Grid —	Screen Grid +	Plate Current M. A.
'35	R. F.	2.2 - 2.5	250 - 250	2 - 3	80 - 100	3.5 - 6.0
'35	1st Det.	2.2 - 2.5	245 - 275	*4 - 6	80 - 100	2.7 - 3.1
'35	I. F.	2.2 - 2.5	250 - 250	2 - 3	80 - 100	3.5 - 6.0
427	Oscillator	2.2 - 2.5	70 - 100	†	-----	13.0 - 5.0
427	2nd Det.	2.2 - 2.5	230 - 260	18 - 23	-----	0.8 - 1.2
427	A. V. C.	2.2 - 2.5	25 - 35	27 - 35	-----	Zero
'47	Power	2.2 - 2.5	240 - 275	17 - 20	250 - 280	20 - 28
'47	Power	2.2 - 2.5	240 - 275	17 - 20	250 - 280	20 - 28

Line Voltage 115—Position of Volume Compensator 115-130—Position of Volume Control Full



Tube	Location	Heater or Filament	Plate	Control Grid —	Screen Grid +	Plate Current M. A.
'35	R. F.	2.2 - 2.5	255 - 285	2 - 3	80 - 100	3.5 - 6.0
'35	1st Det.	2.2 - 2.5	245 - 275	*4 - 6	80 - 100	2.7 - 3.1
'35	I. F.	2.2 - 2.5	245 - 285	2 - 3	80 - 100	3.5 - 6.0
427	Oscillator	2.2 - 2.5	70 - 100	†	-----	13.0 - 5.0
427	2nd Det.	2.2 - 2.5	235 - 265	18 - 23	-----	0.8 - 1.2
427	A. V. C.	2.2 - 2.5	25 - 35	27 - 35	-----	Zero
'47	Power	2.2 - 2.5	245 - 275	17 - 20	255 - 285	20 - 28
'47	Power	2.2 - 2.5	245 - 275	17 - 20	255 - 285	20 - 28

MODEL AR-19
MODEL AR-50
Chassis

SPARKS WITHINGTON CO.

Top View—Models AR-19 and AR-50 Receiving Units

NOTE: Model AR-50 does not employ variable condensers, and the volume control and switch is mounted on a steering column.

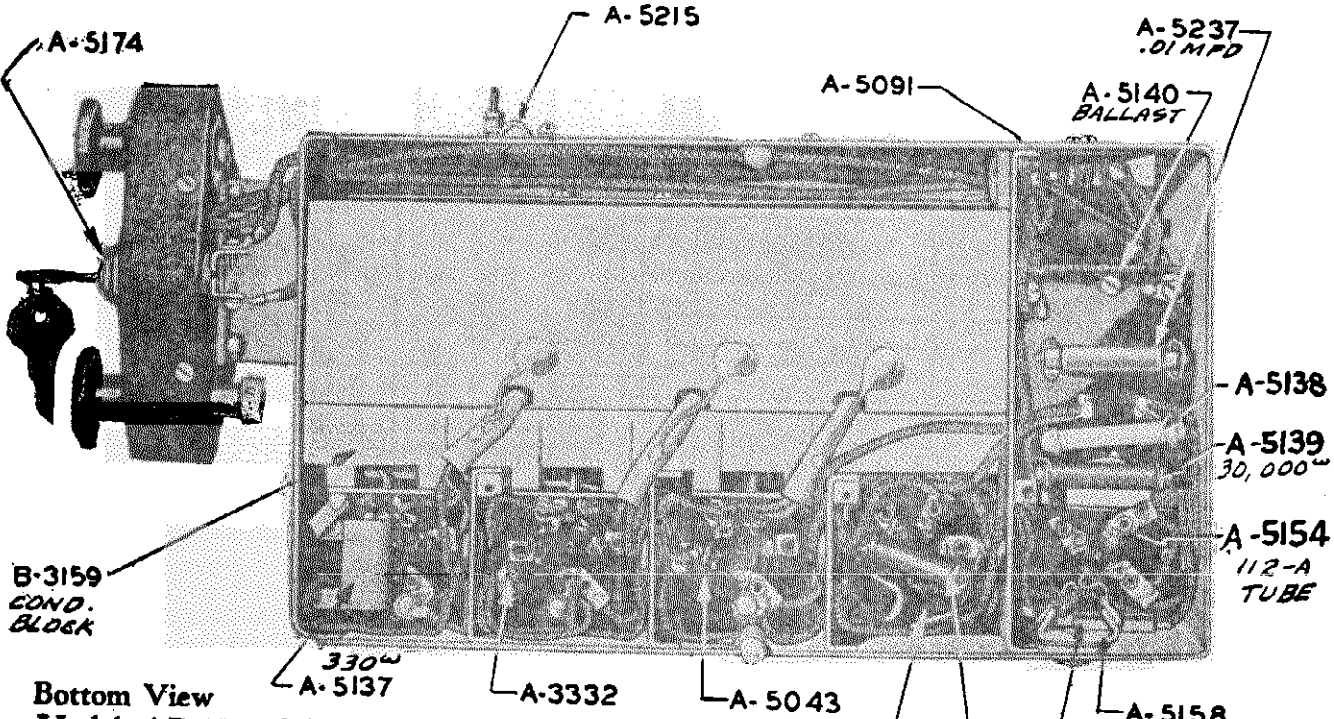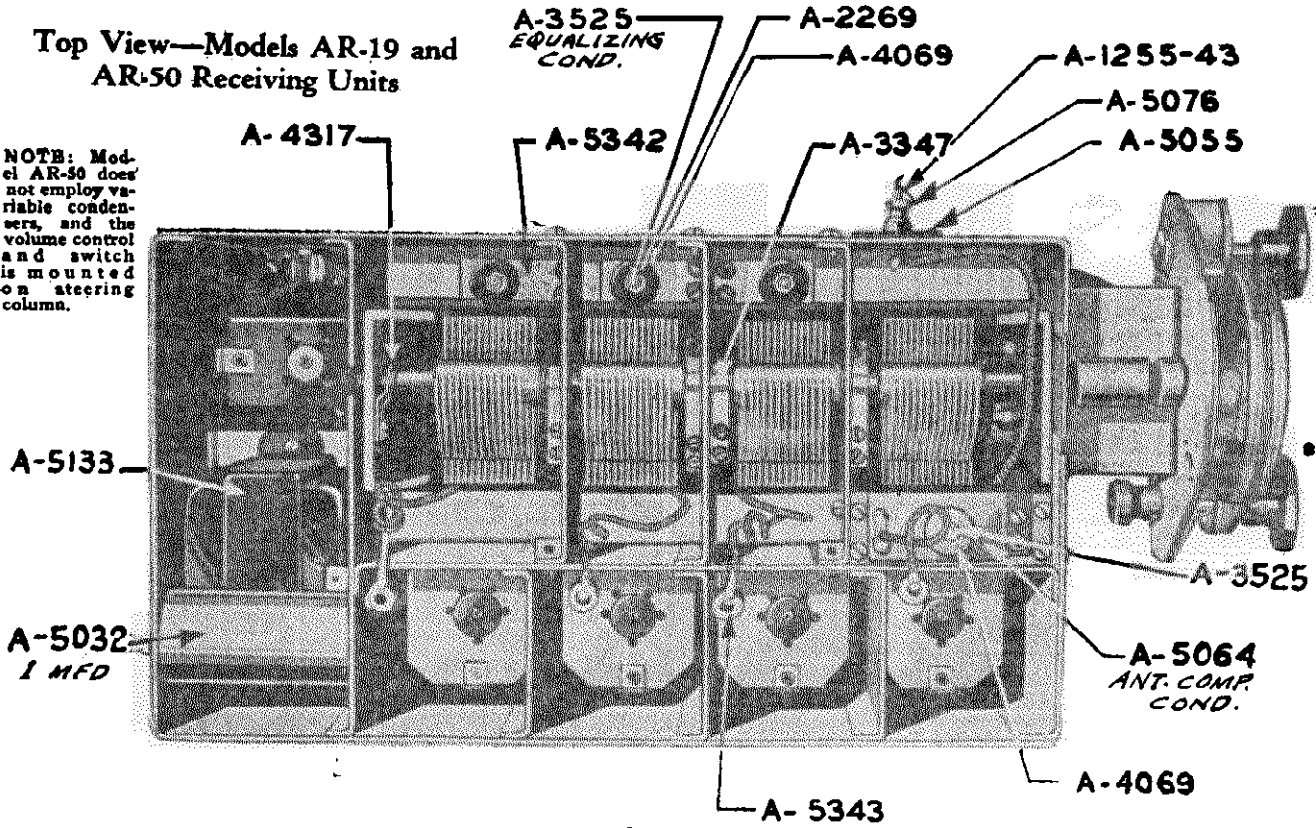


Bottom View
Models AR-19 and AR-50 Receiving Units

NOTE: In Model AR-50, A-5139 resistor is replaced with A-4261 resistor; A-5174 key switch is replaced with A-5903 toggle switch.

PART #A5217 FOR SPARK PLUG=.01 MFD
PART #A5238 FOR GENERATOR=.01 MFD

MODEL 25,26
Schematic

SPARKS WITHINGTON CO.

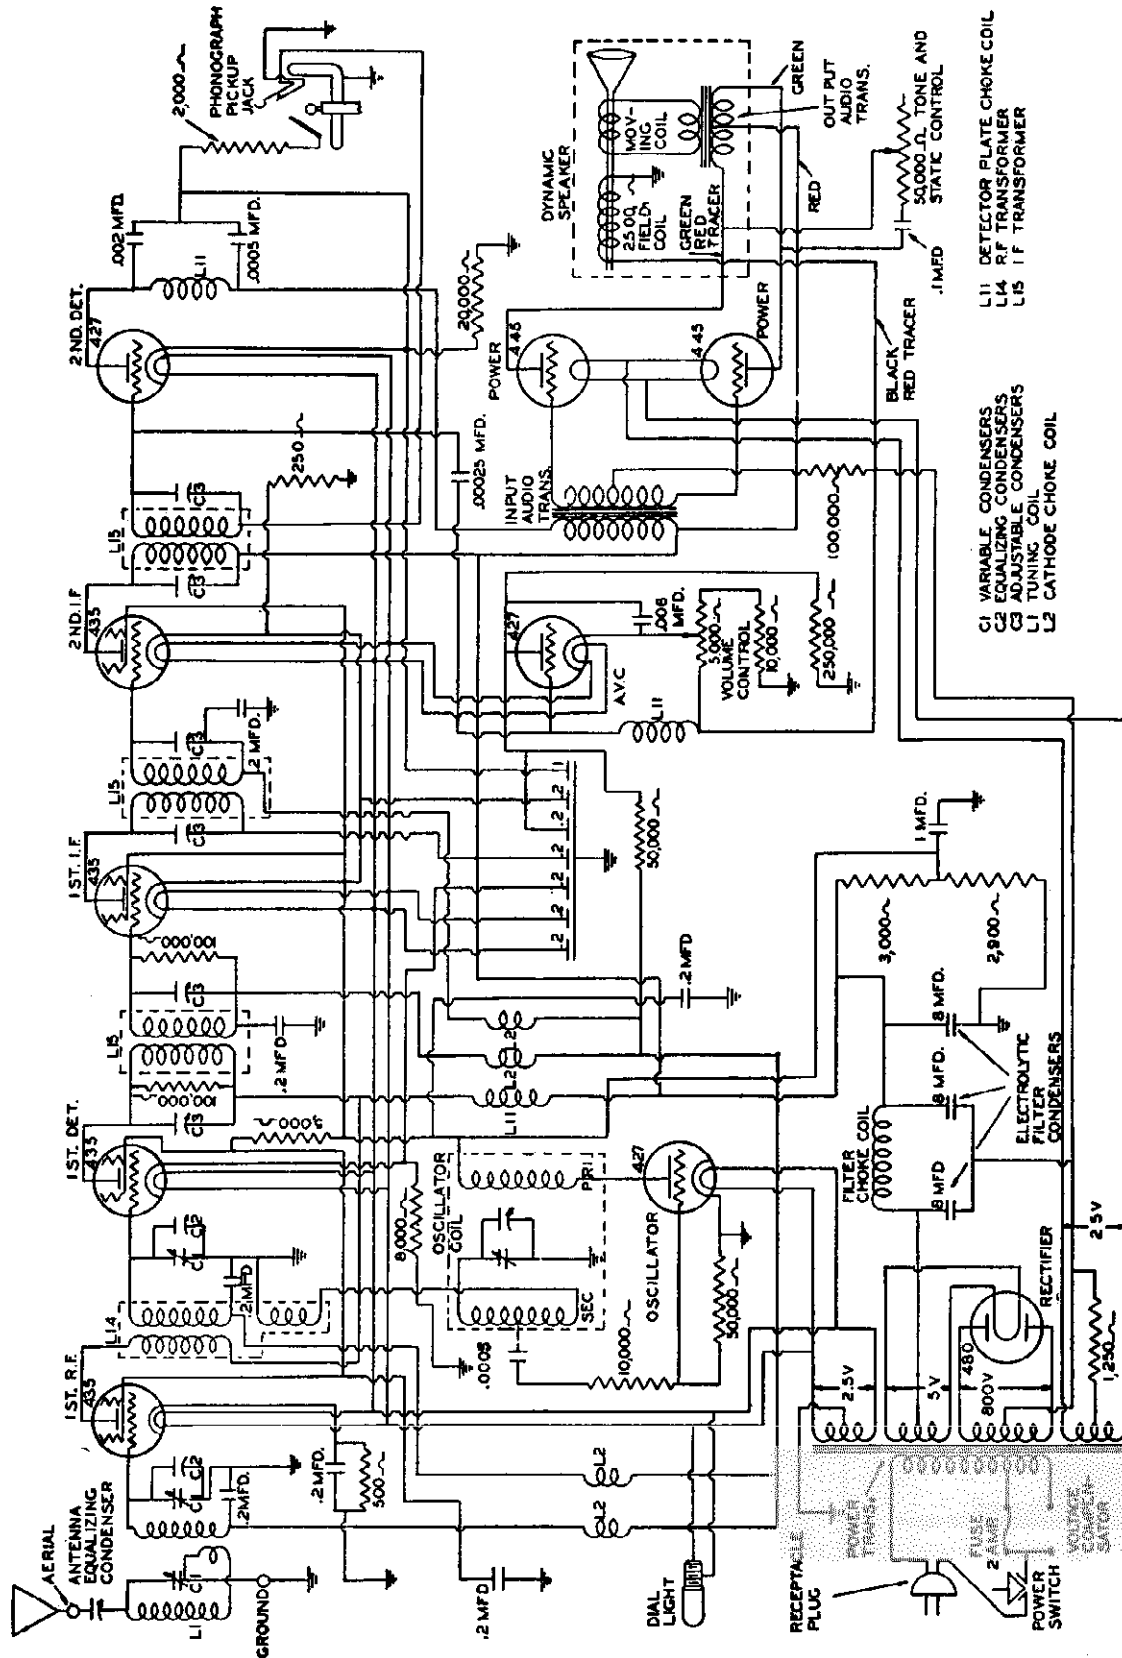


- C1 VARIABLE CONDENSERS
- C2 EQUALIZING CONDENSERS
- C3 ADJUSTABLE CONDENSERS
- L1 TUNING COIL
- L2 CATHODE CHOKE COIL
- L11 DETECTOR PLATE CHOKE COIL
- L14 RF TRANSFORMER
- L15 I.F. TRANSFORMER

IF PEAK 172.5 KC

SPARKS WITHINGTON CO

MODEL 25,26
Chassis, Voltage

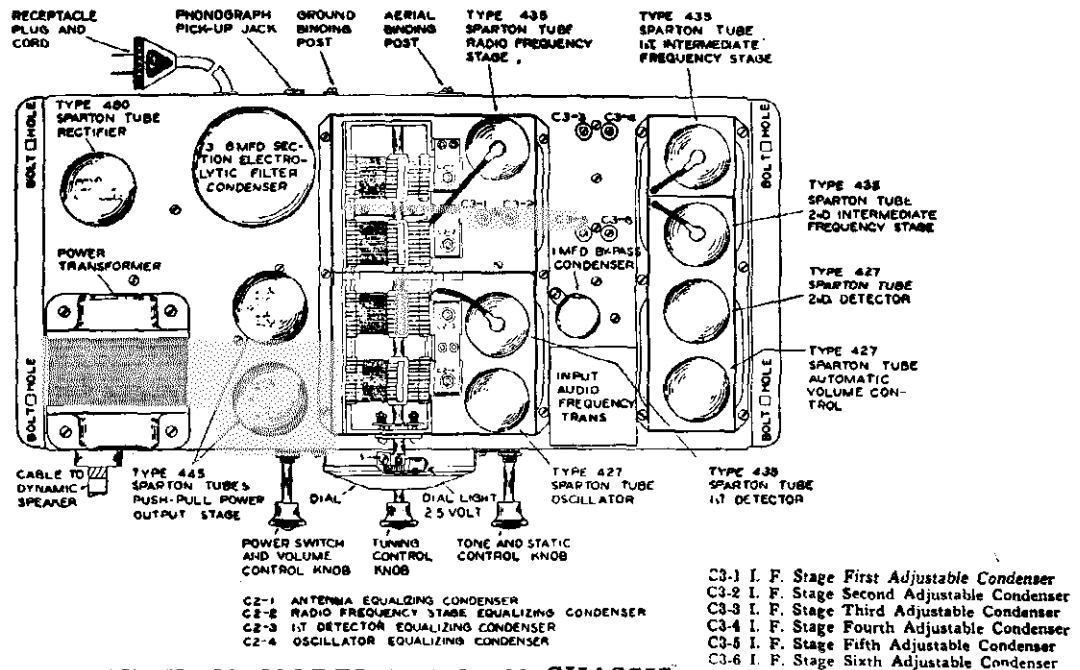

TOP VIEW OF MODEL 25 AND 26 CHASSIS

Voltage-Current Characteristics

Line Voltage 115—Position of Voltage Compensator 100-115—Position of Volume Control Full

Tube	Location	OPERATING VOLTAGES				
		Heater or Filament	Plate	Control Grid—	Screen Grid+	Plate Current Mills.
435	1st R. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8
435	1st Det.	2.2 - 2.5	180 - 220	*6.4 - 14	80 - 100	*.8 - 1.8
435	1st I. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8
435	2nd I. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8
427	Oscillator	2.2 - 2.5	80 - 100	†	‡
427	2nd Det.	2.2 - 2.5	170 - 205	14 - 207 - 1.0
427	A. V. C.	2.2 - 2.5	§	30 - 50	Zero
445	Power	2.2 - 2.5	225 - 270	30 - 45	20 - 30
445	Power	2.2 - 2.5	225 - 270	30 - 45	20 - 30
480	Rectifier	4.2 - 5	360 - 440	48 - 58

* Remove oscillator tube.

† Tube generates own bias when oscillating.

|| Meter reading use 150 volt scale—true voltage 50-75—if lower scale voltmeter is used expect lower voltages.

§ Test from grid prong to ground approx. 125 volts.


‡ Test with plug in 2nd. Detector socket and tube in Analyzer.

MODEL 26-AW

Circuit #2 (Revised)

SPARKS WITHINGTON CO.

Schematic

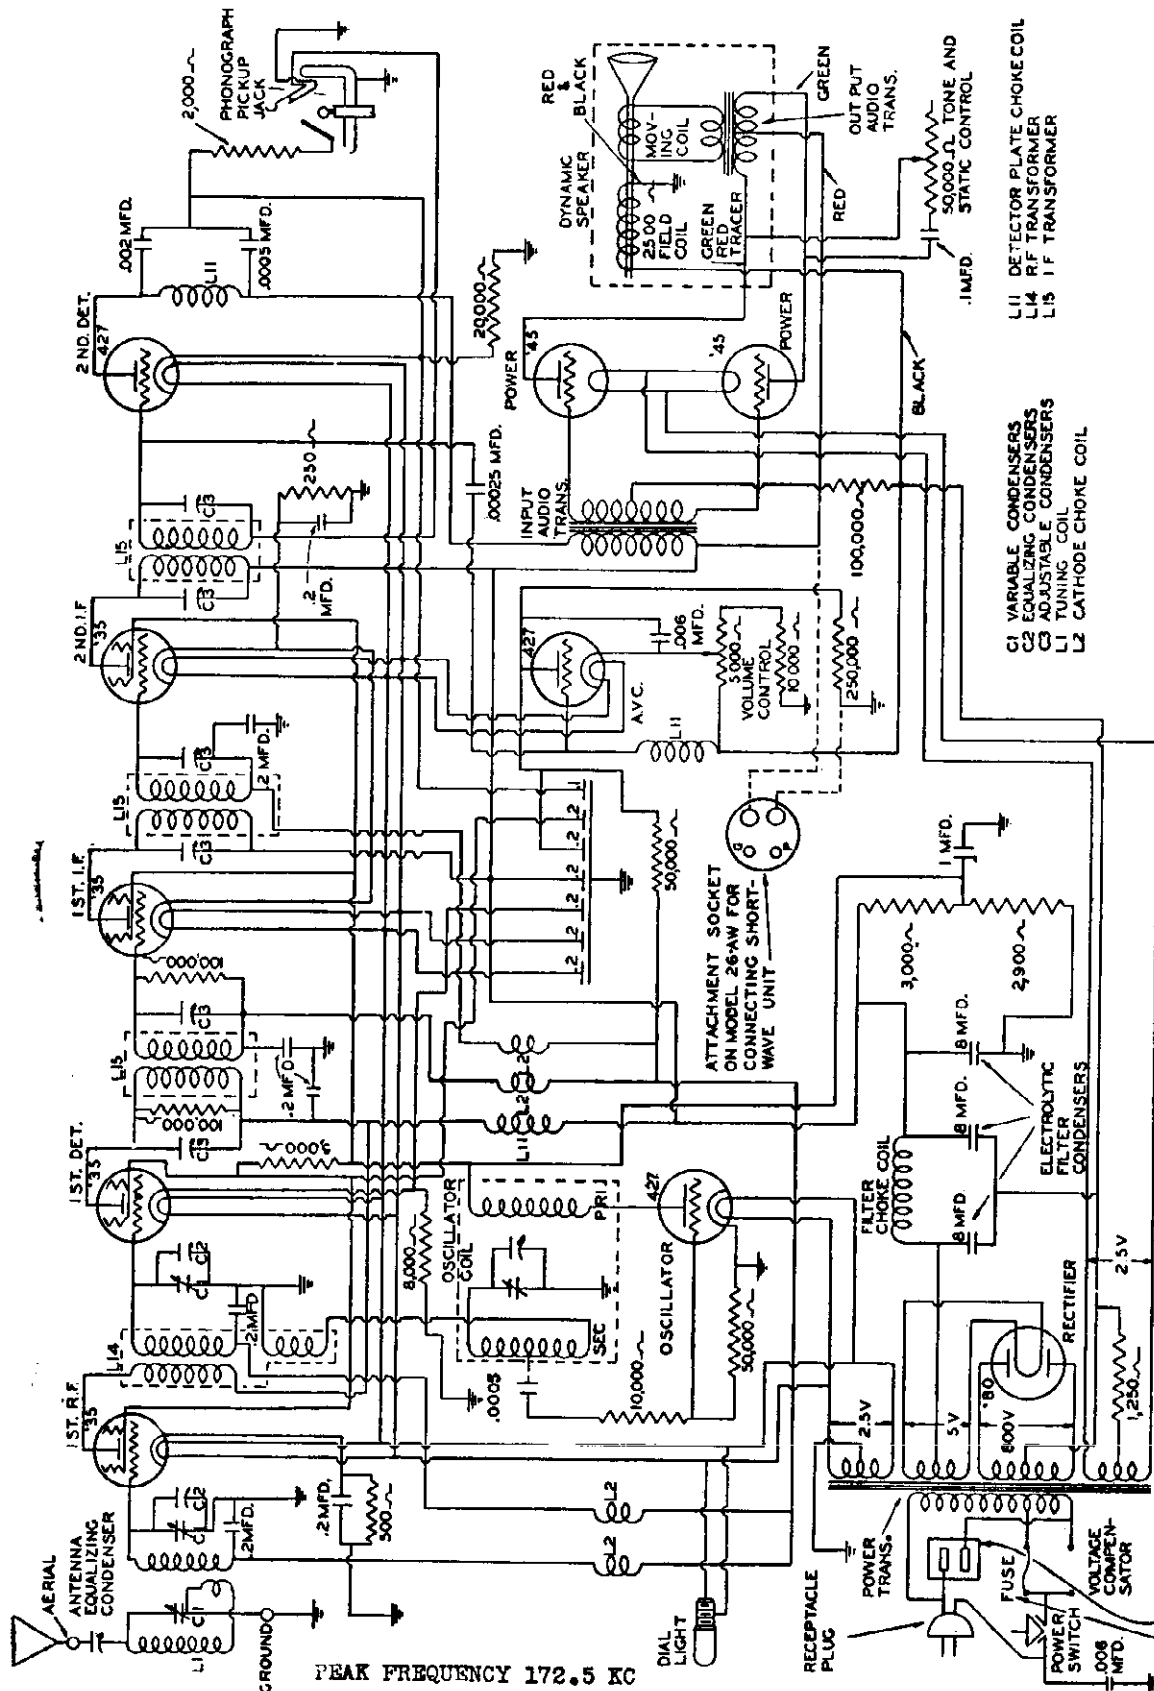

- L11 DETECTOR PLATE CHOKE COIL
- L14 R.F. TRANSFORMER
- L15 I.F. TRANSFORMER
- C1 VARIABLE CONDENSERS
- C2 EQUALIZING CONDENSERS
- C3 ADJUSTABLE CONDENSERS
- L1 TUNING COIL
- L2 CATHODE CHOKE COIL

Circuit # 2 (Revised)



RECEPTACLE SOCKET FOR SHORT-WAVE UNIT RECEPTACLE PLUG
 L2 AMP FUSE USED ON MODELS 25 & 26.- 2.5 AMP ON MODEL 26-AW

PEAK FREQUENCY 172.5 KC

SPARKS WITHINGTON CO.

MODEL 3
Chassis
Voltage

SPARTON MODEL 30
ENSEMBLE

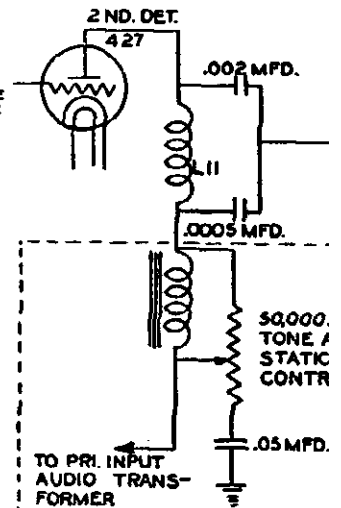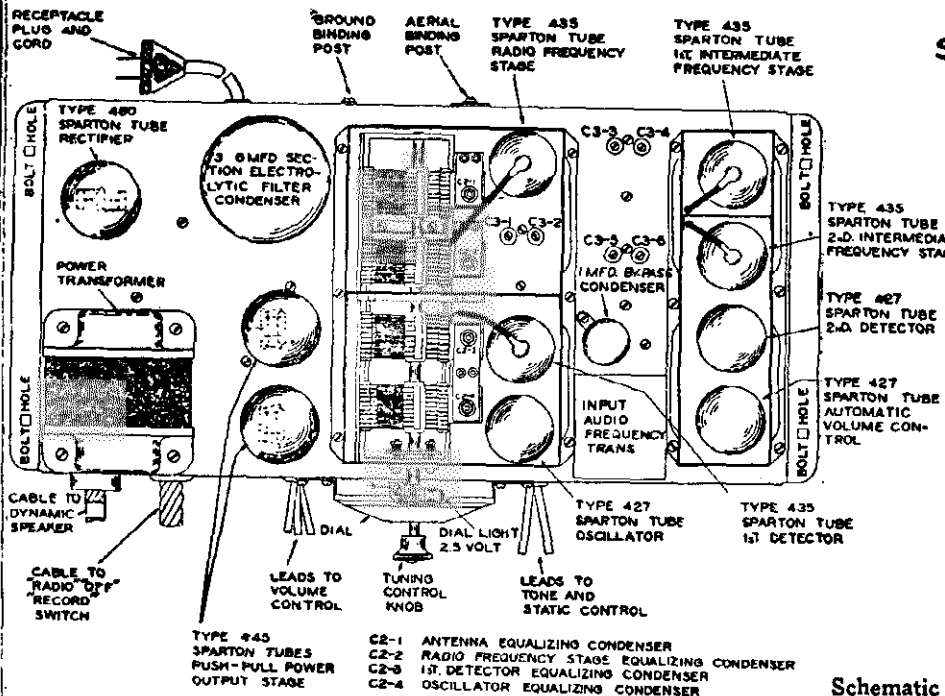

Schematic Diagram of Tone Control System used on a few of the first SPARTON Model 30.

TOP VIEW

Voltage-Current Characteristics

Line Voltage 115—Position of Voltage Compensator 100-115—Position of Volume Control Full

Tube	Location	OPERATING VOLTAGES					Plate Current Mills.
		Heater or Filament	Plate	Control Grid—	Screen Grid+	Plate Current Mills.	
435	1st R. F.	2.2 - 2.5	180 - 220	2.5 4	80 - 100	5 - 8	
435	1st Det.	2.2 - 2.5	180 - 220	*6.4 - 14	80 - 100	*.8 - 1.8	
435	1st I. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8	
435	2nd I. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8	
427	Oscillator	2.2 - 2.5	80 - 100	†	‡	
427	2nd Det	2.2 - 2.5	170 - 205	14 - 207 - 1.0	
427	A. V. C.	2.2 - 2.5	§	30 - 50	Zero	
445	Power	2.2 - 2.5	225 - 270	30 - 45	20 - 30	
445	Power	2.2 - 2.5	225 - 270	30 - 45	20 - 30	
480	Rectifier	4.2 - 5	360 - 440	48 - 58	

* Remove oscillator tube.

† Tube generates own bias when oscillating.


|| Meter reading use 150 volt scale—true voltage 50-75—If lower scale is used expect lower voltage

§ Test from grid prong to ground approx. 125 volts.

‡ Test with plug in 2nd. Detector socket and tube in Analyzer.

MODEL 30
Schematic

SPARKS WITHINGTON CO.

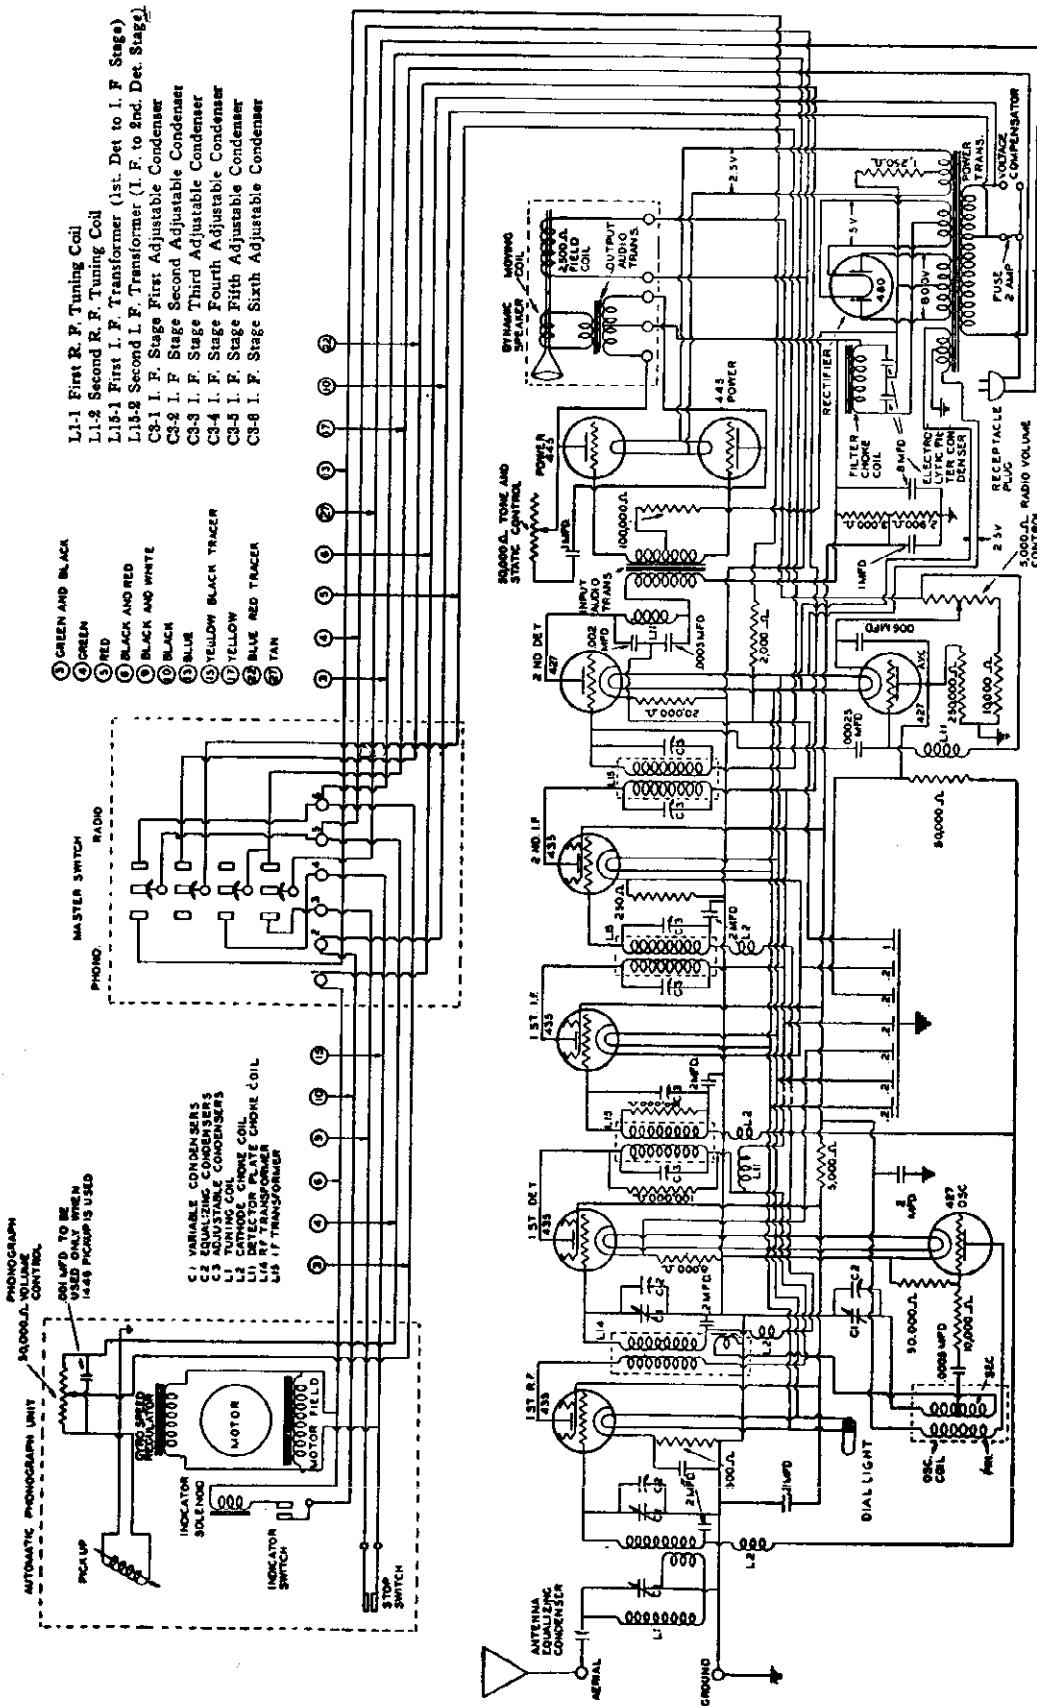

- L1-1 First R. F. Tuning Coil
- L1-2 Second R. F. Tuning Coil
- L15-1 First I. F. Transformer (1st. Det. to I. F. Stage)
- L15-2 Second I. F. Transformer (I. F. to 2nd. Det. Stage)
- C3-1 I. F. Stage First Adjustable Condenser
- C3-2 I. F. Stage Second Adjustable Condenser
- C3-3 I. F. Stage Third Adjustable Condenser
- C3-4 I. F. Stage Fourth Adjustable Condenser
- C3-5 I. F. Stage Fifth Adjustable Condenser
- C3-6 I. F. Stage Sixth Adjustable Condenser

- ③ GREEN AND BLACK
- ④ GREEN
- ⑤ RED
- ⑥ BLACK AND RED
- ⑦ BLACK AND WHITE
- ⑧ BLACK
- ⑨ BLUE
- ⑩ YELLOW BLACK TRACER
- ⑪ YELLOW
- ⑫ BLUE RED TRACER
- ⑬ TAN

- C1 VARIABLE CONDENSERS
- C2 EQUALIZING CONDENSERS
- C3 ADJUSTABLE CONDENSERS
- L1 CATHODE CHOKE COIL
- L15 DETECTOR PLATE CHOKE COIL
- L16 I.F. TRANSFORMER
- L17 I.F. TRANSFORMER

IF PEAK 172.5 KC

Sparton Model 30
Radio Phonograph Combination

MODEL 30
Service Data

SPARKS WITHINGTON CO.

Service Data for Sparton Ensemble Model 30
Automatic Phonograph Mechanism

The automatic phonograph mechanism of the Model 30 SPARTON Ensemble consists of three principal divisions: The Power Source, the Tripping mechanism, and the Discard-Indicating mechanism. A description of the construction and function of each division is outlined in the following paragraphs.

POWER SOURCE

The Power Source consists of (Fig. 1) Motor 1381 mounted between Top Plate C-693 and Bottom Plate C-619, which are held parallel by (Fig. 2) Spreader 1251 and together by (Fig. 1) eight screws 1383. A worm in the Motor Shaft meshes with the Worm Gear, on the Turntable Shaft and causes the Turntable Shaft to revolve. A portion of this shaft protrudes below the Worm Gear Chamber. On this portion of the shaft (Fig. 2) Pinion 1207 turns freely. It is held in position by Thrust Washers bearing on the end of (Fig. 1) Sleeve 1266, on which Clutch Spool 1206 is mounted and held by Pin 1351. This pin holds the Sleeve integral with the shaft, but allows the Clutch Spool to travel up and down. The pin works in the Slot on the Clutch Spool. The Clutch Spool always revolves with the Turntable Shaft. Raising the Clutch Spool causes one of its three teeth to mesh with one of the two teeth in (Fig. 2) Pinion 1207, causing Pinion to turn with the Turntable Shaft. The teeth of this pinion mesh with the teeth in the (Fig. 1) Compound Intermediate Gear A-6138 causing it to revolve, then the teeth in the Compound Intermediate Gear mesh with the teeth of (Fig. 2) Cam B-3715 and causes the cam to revolve in a clockwise direction. The Compound Intermediate Gear and Cam are held in position by Pivot Studs in The Top Plate, and (Fig. 2) Pivot Bearings, 1262 which are adjustable, and locked into The Bottom Plate by means of Nut 733. These Pivot Bearings should be adjusted so the shafts turn freely, but do not move up and down. Cam B-3715 is the "heart" of the mechanism. All motions and power are derived from it, except the Power for (Fig. 3) Turntable C-617-A which is revolved by (Fig. 1) Rubber Washer 1392-1 acting against Metal Washer 1321-2 which is driven by a pin through

the top of the Turntable Shaft. The thrust from the Turntable Shaft is taken by (Fig. 1) Thrust Screw 1255-A, which is locked in position by Nut 773.

TRIPPING MECHANISM

When a record has been reproduced the needle in (Fig. 1) Pickup Unit A-6136 travels into the center of the record by means of the eccentric groove on the spiral groove depending upon the type of record. This motion is transmitted through Pickup Arm C-631 which is pivoted to (Fig. 3) Bracket 1269 by (Fig. 2) pivot screws 1270. (Fig. 3) Bracket 1269 is pivoted between the Top and Bottom Plates, at the top by (Fig. 2) Pivot Stud 1263 which is held in position by Top Support 1242-A, and at the bottom by Pivot Bearing 1262. The motion of (Fig. 1) Pickup Unit A-6136 causes (Fig. 3) Bracket 1269 to move on a vertical axis. In case of Spiral Groove records (Fig. 2) Pawl Arm 1234 attached to Bracket 1269 moves in and out, causing Spiral Pawl 1245 to raise Trip Lever 1238. In case of Eccentric Groove records Eccentric Pawl 1246 raises Trip Lever 1232. This causes Throw-Out Lever 1276 to be released, allowing it to travel downward and act on (Fig. 1) Clutch Lever 1277-A which pivots on Stud 1467. This allows the forked end to travel upward, which causes Clutch Spool 1206 to also travel upward, and its lugs engage with the lugs on (Fig. 2) Driving Pinion 1207, causing Pinion 1207 to turn which turns Cam B-3715 through (Fig. 1) Compound Intermediate Gear A-6138. When the cam (Fig. 2) B-3715 has nearly completed its cycle the Lug on it passes under the cam surface of Throw-out Lever 1275, causing it to rise and be held in position by allowing the notch in Trip Lever 1265 to engage under the projection atop in Throw-out Lever 1276. The Lug also prevents (Fig. 1) Clutch Lever 1277-A from rising. This holds Clutch Spool 1206 in mesh with (Fig. 2) Drive Pinion 1207 placing a strain on Spring 1366. When the Lug passes over the end of (Fig. 1) Clutch Lever 1277-A, the end snaps up, the forked end snaps down, and causes Clutch Spool 1206 to disengage from (Fig. 2) Pinion 1207. This stops the cycle operation.

MOVEMENT OF PICKUP

The (Fig. 1) Pick-up Unit A-6136 is moved by means of (Fig. 3) Follow Arm 1271 attached to (Fig. 1) Pick-up Unit Arm C-621 by (Fig. 3) Screws 1383-7 and 1383-9. The Follow Arm is moved by a Pin on the end of it which travels in a groove on the top of (Fig. 2) Cam B-3715. One quarter of the way around the top of the Cam there are two grooves. When the Pin is in the inner groove, the needle in (Fig. 1) Pick-up Unit A-6136 will lower at the starting position for 10" records. When the Pin is in the outer groove the Pick-up Unit will lower at the starting position for 12" records. Cam Track Switch 1268 (not shown) changes this pin into groove required. This is done by (Fig. 3) Switch Cam 1297 being raised up by (Fig. 3) Piston 1303-A, which is pulled forward by (Fig. 3) A-6133 in Solenoid A-6133-A which is energized by the Indicator Switch described in a subsequent discussion. When Switch Cam 1297 is pivoted on Bracket 1267-A, is in contact with Finger 1303-A it causes the inner side of (Fig. 2) Cam B-3715 to rise, making it engage on lower lug of Cam Track Switch 1268 (not shown). This changes the position of the Cam Track Switch, causing the necessary movement for the Pick-up Unit to lower to the starting position for 12" records.

DISCARD-INDICATING MECHANISM

(Fig. 3) Lift Lever 1202-A attached to Shift Lever 1203-A, is caused to rise at each revolution of the (Fig. 3) Cam B-3715 by a roller acting on a perpendicular surface inside of the cam. If (Fig. 3) Shift Lever 1202-A is in the proper position to raise Cam 1297 it also will cause end of (Fig. 2) Roller Arm 1471 causing Roller 1243 to rise on largest perpendicular cam surface on Cam B-3715. This causes (Fig. 1) Discard B-3711-AA to be pulled back into the proper position to discard 12" records. If (Fig. 3) Shift Lever 1203-A is not in the forward position, Lift Lever 1202-A does not come up under the low part of (Fig. 2) Roller Arm 1471 and the Roller travels around on the smaller perpendicular surface of Cam B-3715 and the (Fig. 1) Discard B-3711-AA stays at the proper position to discard 10" records. These two discarder motions are accomplished by the fork in (Fig. 3) Roller

Arm 1471 engaging in the fork of (Fig. 1) Yoke 1238 which is attached to the top and bottom plate by (Fig. 3) Links 1217 and (Fig. 1) 1440 so the entire Discard Mechanism B-3711-AA can travel back and forth being controlled by (Fig. 3) Roller Arm 1471, which acts on either of the perpendicular cam surfaces on Cam B-3715. To (Fig. 1) Link Yoke 1238 Links 1235 are attached. These Links are also attached to Discard Arm B-3711 and Shoe 1226. This gives a parallel motion to the Discard Arm up and down. This movement is accomplished by (Fig. 3) Lift Lever 1224 acting on (Fig. 1) Shoe 1226, when (Fig. 2) Lever 1223 is raised and lowered. Lever 1224 is raised and lowered by Lever 1279-A which is acted upon by the stud in it being in contact with the bottom surface of Cam B-3715. The inward motion of the Discarder is caused by the tension of Spring 1370 and is stopped by Stop Stud 1378. This relieves the pressure of Roller 1243 and allows Roller Arm 1471 to drop from the 12" record position to the 10" record position when the Roller is at the neutral part of cam surface. To prevent this roller from dropping down at any other time, (Fig. 1) Roller Arm Holdup 1453 is made use of, because (Fig. 2) Roller Arm 1471 is always over the vertical leg of (Fig. 1) Hold-up Arm 1453 when it is acting on the 12" cam surface. Repeat Lever 1377 is used when the continuous playing of one record is desired. This Lever when moved in, comes under Link 1226, making it impossible for Discard Arm B-3711 to Lower to the position to discard a record. (Fig. 3) Rest Hook 1249 is made use of when loading records. When Follow-Arm 1271 is placed on this hook, (Fig. 3) Discard Hold-up B-3712 is brought over (Fig. 2) Lever 1279-A, preventing it from acting to lower (Fig. 1) Discard Mechanism and remains in this position until it is pushed out by the Lug on (Fig. 2) Cam B-3715. This is why the Pick-up Unit can be brought to the center of the record and tripped without discarding the record, thus enabling the needle to start in the proper position, according to the record that is to be reproduced.

When (Fig. 1) pick-up Unit A-6136 causes mechanism to trip and begin a cycle of operation due to motion transmitted through it via the spiral or eccentric groove of the record, it is immediately swung away from the center of the record and pivoted above the edge of the turntable. At the same instant the pick-up Unit has

SPARKS WITHINGTON CO.

MODEL 30
Parts List

SPARTON ENSEMBLE MODEL 30

RECEIVING UNIT PARTS



Description	Part No.
Antenna Terminal and Insulation Assembly	A-6898
Body Complete—Amplifier	B-3627
Body Complete—Selector Assembly Top	B-3623
Bracket—Base Mounting	A-6718
Bracket—Dial Drive Support	B-4109
Bracket—2 Mfd. Condenser	A-7499
Bulb—Dial Light	A-5058
Chassis Less Tubes 25 Cycle	D-327
Chassis—Less Tubes 60 Cycle	D-326
Clamp—Cable 1/32" Radius	A-5215
Clamp—Cable 3/16" Radius	A-2251
Clip—Fuse	A-4983
Choke Coil—Cathode	A-7209
Choke Coil—Detector Plate	A-7297
Choke Coil—Filter	B-3429
Choke Coil—Tone Control	A-6862
Coil—Oscillator	A-6873
Coil—Tuning No. 1	A-6791
Coil—Tuning No. 2	A-6794
Condenser Frame and Anchor Plate Insulation	B-4021
Condenser—Double Equalizing	A-7054
Condenser—I. F. Adjustable and Bracket	A-7097
Condenser—Rotor Assembly	B-3648
Condenser—Single Equalizing	A-2053
Condenser Stator Assembly No. 1, 2, and 4	A-6582
Condenser Stator Assembly No. 3	A-6581
Condenser—.1 Mfd.	A-7475
Condenser—.2 Mfd. Cub	A-7005
Condenser—.2 Mfd. with Cap	A-4998
Condenser—.2 Mfd. Less Cap	A-7094
Condenser—.05 Mfd.	A-6927
Condenser—.002 Mfd.	A-7038-3
Condenser—.006 Mfd.	A-4434
Condenser—.0005 Mfd.	A-7038-1
Condenser—.00025 Mfd.	A-5175
Condenser—1 Mfd.	A-5032
Condenser—8 Mfd. Electrolytic	A-6884
Condenser—Block 7 Lead	B-4107
Contact—Rotor Shaft Center	A-5814
Contact—Rotor Shaft Front	A-5808
Contact—Rotor Shaft Rear	A-4317
Cotter Key—Drive Shaft	A-7130
Cover—Amplifier Body	B-3625
Cover—Bottom	B-4084
Cover—Electrolytic Condenser Assembly	A-6715
Cover—Selector Body	B-3621
Cushion—Rubber Mounting	A-6967
Dial Control Assembly	A-7070
Drive Disc and Light Shield Assembly	A-7166
Fuse—1½ Ampere	A-4980-4

RECEIVING UNIT PARTS (Continued)

Description	Part No.
Grommet—Rubber	A-5183
Insulation—Filter Condenser	A-7264-A
Insulation—Phonograph Volume Control	A-6970
Insulation—1st I. F. Transformer Shield	A-7445
Kilocycle Scale and Support	B-4120
Lug—I. F. Transformer Soldering	A-3737
Lug—Rivet Soldering	A-1866
Lug—Screw Soldering	A-1865
Nut—Equalizing Condenser	A-2269
Plate—Condenser Bearing	A-4226
Plate—Clamping	A-3799-A
Plate and Double Terminal	A-7051
Plate—Filter Condenser Mounting	A-6705
Plate—8 Point Resistor and Condenser	A-7055
Plate—Rotor Shaft Thrust	A-4310-A
Plate—Stator Clamping	A-5751
Pointer—Dial	A-7113
Receptacle Cord and Plug	A-6743
Resistor and Condenser Assembly	B-4259
Resistor—200 Ohm	B-4114-11
Resistor—250 Ohm	B-4114-3
Resistor—1250 Ohm	A-7018
Resistor—500 Ohm	B-4114-1
Resistor—2,000 Ohm	B-4114-6
Resistor—5,000 Ohm	B-4114-20
Resistor—8,000 Ohm	B-4114-2
Resistor—10,000 Ohm .5 Watt	B-4114-7
Resistor—10,000 Ohm 3 Watt	B-4114-5
Resistor—20,000 Ohm	B-4114-14
Resistor—50,000 Ohm	B-4114-12
Resistor—100,000 Ohm	B-4114-10
Resistor—2,900-3,000 Ohm	A-6619
Resistor—250,000 Ohm	B-4114-4
Screw—Aerial and Ground Binding Post	A-6575
Screw—Equalizing Condenser	A-3525
Screw—I. F. Adjustable Condenser	A-7692
Selector Assembly	C-687
Shaft—Drive and Spring	A-7165
Shaft—Drive and Washer	A-7058
Shield—Input Transformer	A-7680
Shield—Condenser Rear Stator	A-6767
Shield—Coil Copper Selector Assembly	B-3602
Shield—I. F. Adjustable Condensers	A-7211
Shield—I. F. Transformer Bottom	A-6600
Spacer Bushing—6 x 1/8	A-6731
Spacer Bushing—1/4 x 7/32	A-7040
Spacer Bushing—1/4 x 5/8	A-3725
Spring—Drive	A-7112


MODEL 30
Chassis Views

SPARKS WITHINGTON CO.

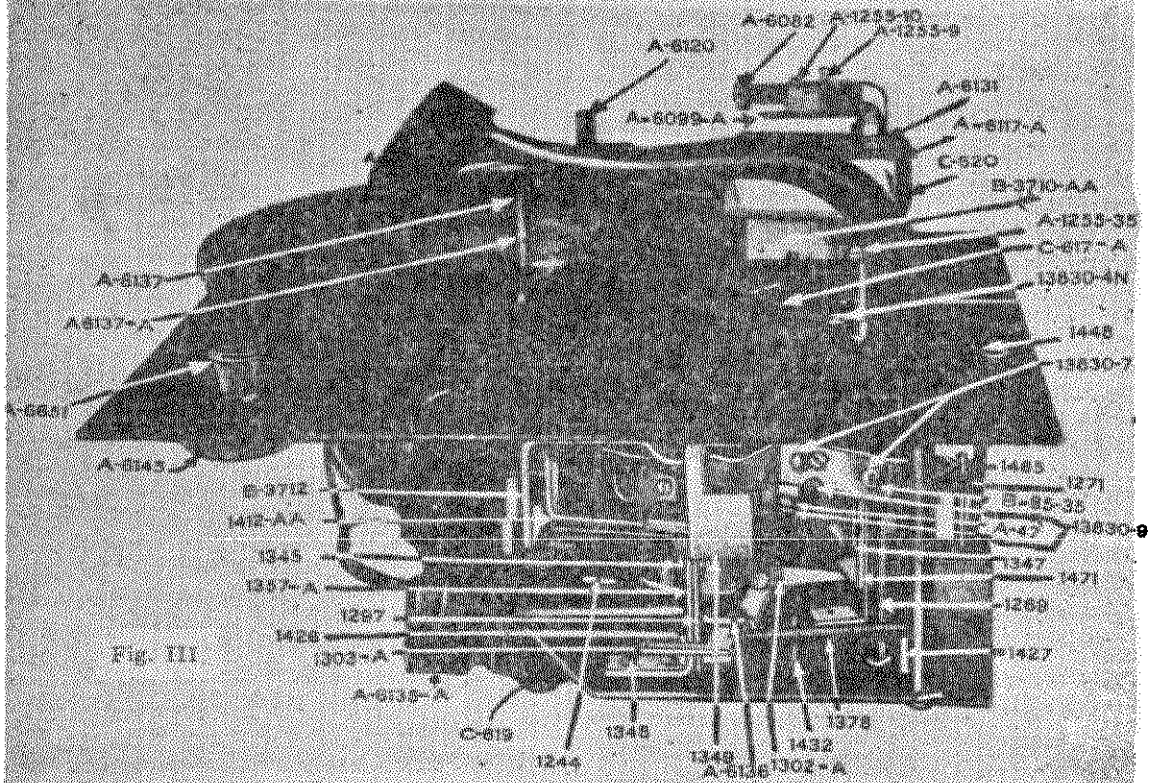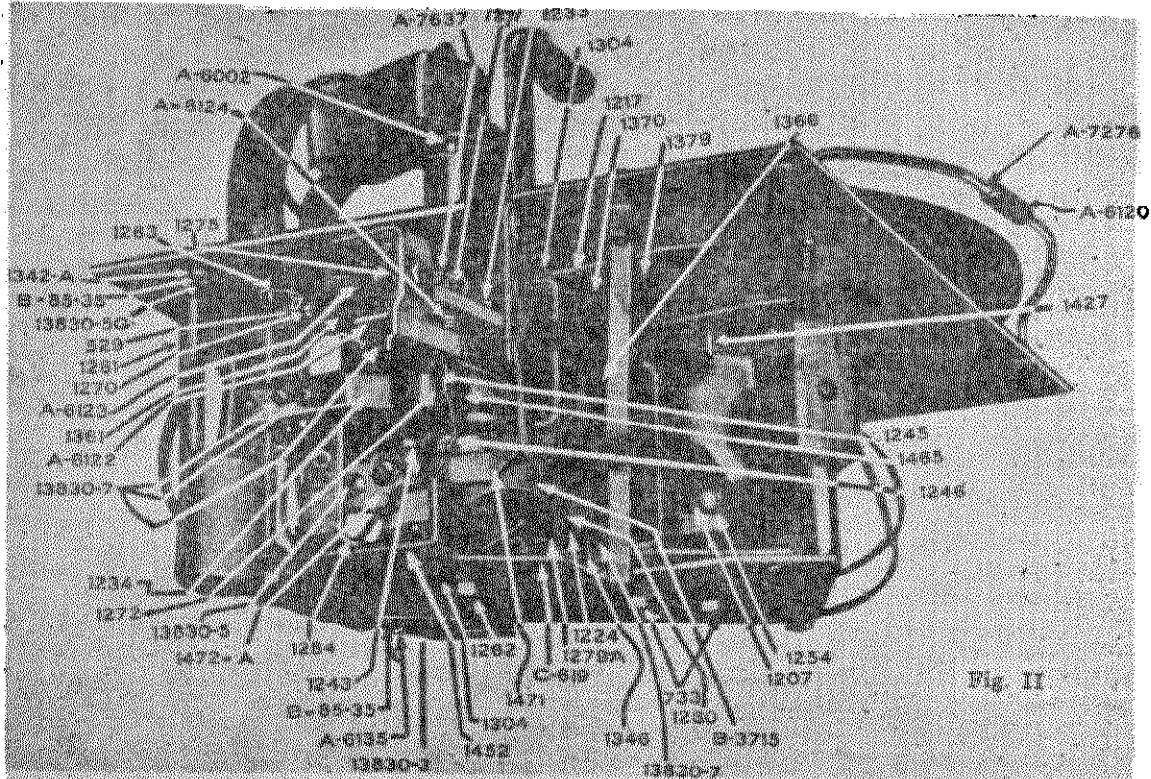


SPARKS WITHINGTON CO.


MODEL 51,52
Chassis Views

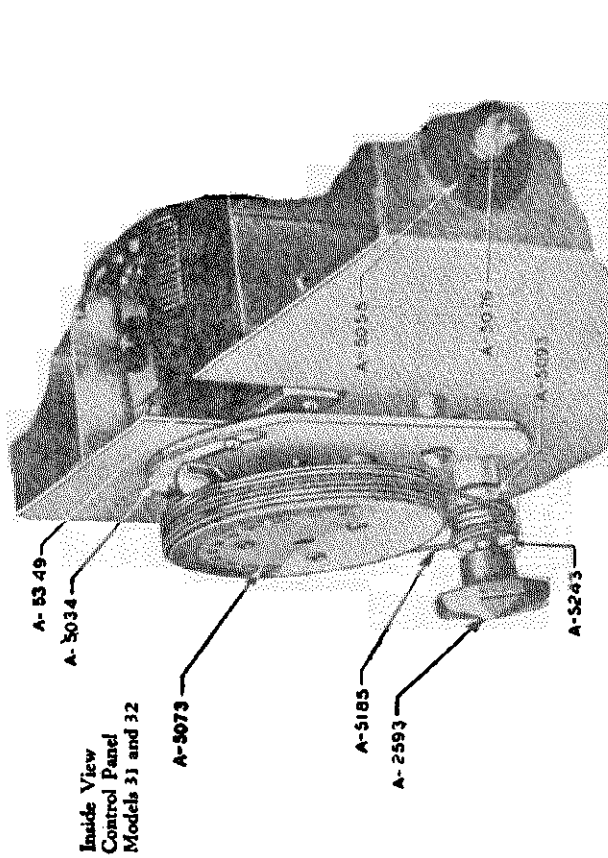

Inside View
Control Panel
Models 31 and 32

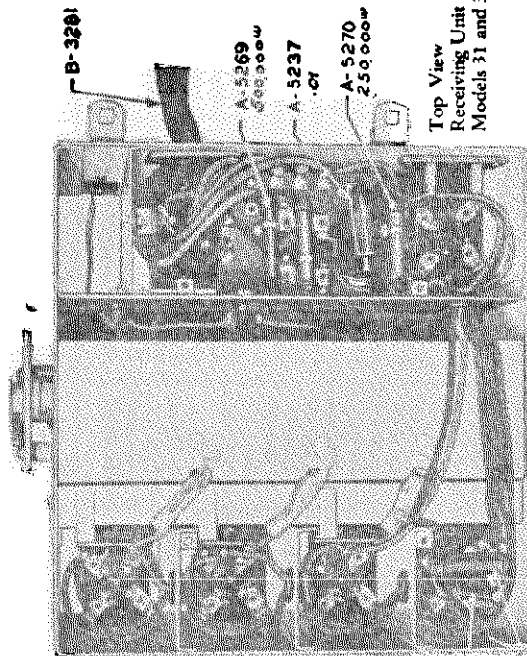


Top View
Receiving Unit
Models 31 and 32

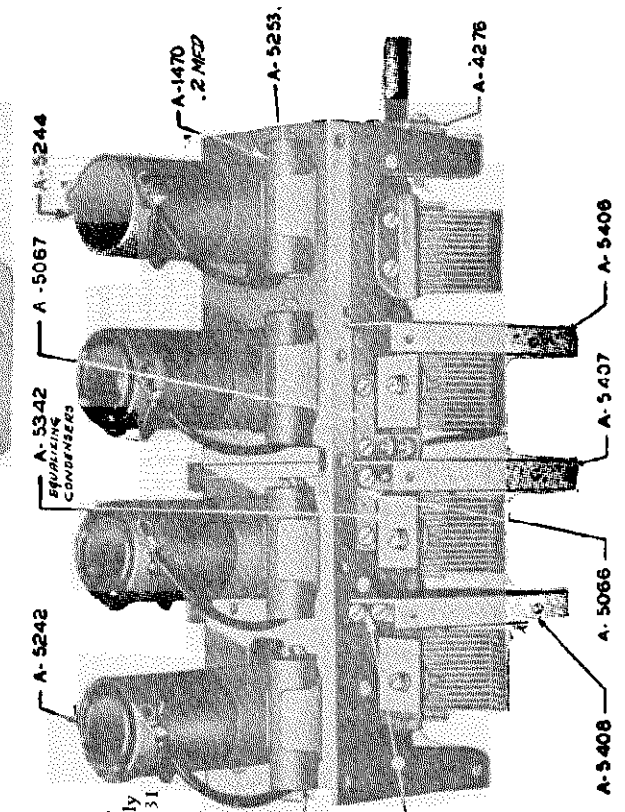

Selector
Assembly
Models 31
and 32

Bottom View
Receiving Unit
Models 31
and 32

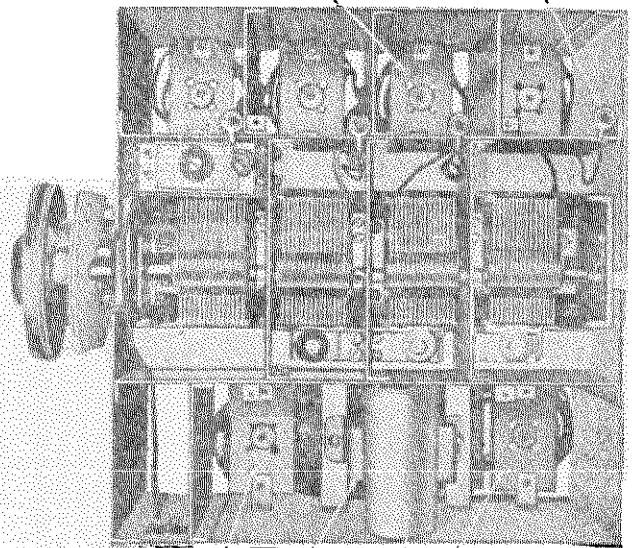

A-5175
.00025

A-5210
DET. PLATE
CHECK

A-5261

A-4812

A-5032

A-5260

MODEL 55
Service Data

SPARKS WITHINGTON CO.

Service Data for Sparton Ensemble Model 35 Automatic Phonograph Mechanism

GENERAL OPERATION

At the completion of the reproduction portion of a record, the needle moves into the groove in the center of the record. The first oscillatory movement of the needle on an eccentric groove record, or the feed-in movement on a spiral groove record trips Trip Lever 814, figure 1.

Dog 813 figure 2 for eccentric groove records and Spiral Trip Dog 533 for spiral groove records is attached to Pick-up Arm Lever 811 by means of Adjusting Stud 860 and Adjustment for Pick-up Lever 812. Pick-up Arm Lever 811 is attached to Pick-up Unit 904, figure 3 by means of Yoke 867 and Pick-up Arm 866 which is connected to Bracket 810 figure 4, onto which Pick-up Arm Lever 811, figure 3 is attached by means of two screws 155 figure 4. This whole device is allowed to swing from right to left due to its attachment to Standard 788 by the Dog Point Set Screws 823 which fit into the Bearing in Bracket 810.

When Trip Lever 814 figure 1 is tripped, it allows Throwout Lever 822 to drop, and this causes Clutch Lever 816-C to push Clutch 826 into the Pins of Clutch, Collar 527-C which is revolving; acting through Worm Gear 514-C which is driven by the Worm in Drive Shaft 793 connected to Motor by means of Drive Spring 877. The connecting of this Clutch causes worm shaft 524-C which is meshed with Cam Worm Gear 528-C to cause Cam 789 to revolve and lower the Turntable to the "swing back" elevation. This is accomplished by Lift Lever 817 figure 2 which is operated by Cam 789 figure 1 acting on the bottom of Turntable Shaft 607-C, through Turntable Lift 516 figure 2 and Adjustment 618 to which the Turntable Shaft is attached.

Turntable 510-C figure 1 is driven in a clockwise motion by means of Worm Gear 583-C (not shown), which is meshed with Drive Shaft 793. This Worm Gear is provided with inside lugs which fit into the grooves in Turntable Shaft

507-C* and allows the Shaft to raise up and down without interfering with its turning motion.

DISCARD POSITION OF TURNABLE

Returning to the action of Cam 789 figure 1 as it rotates further, Turntable 510-C* drops to the discard position, allowing the record to come in contact with Discard Rubber 660 figure 4. This raises the record above Receiving Stud 508 figure 3 and the rotation of Turntable 510-C* then causes the record to be discarded into the Receiving Compartment.

"SWING BACK" OF PICKUP UNIT

Before the Cam 789 figure 1 allows the Turntable to be moved into the discard elevation, and while the Turntable is still in the "swing back" elevation, the Pick-up Unit is swung away from the record by means of Index Lever 815 figure 2 which is connected to the Pick-up Arm through Pick-up Arm Lever 811. The inner end of the slot in Index Lever 815 acts on Pin 768 figure 1 that revolves with the Cam in a clockwise motion. It is through this means that the Pick-up is swung away from the record.

SLIDE MOVEMENT FOR 10" RECORDS

When Cam 789 figure 1 starts to revolve, Eject Arm 790 figure 2 also starts to revolve as it is driven by Dog 822. Roller 662 attached to Eject Arm 790, travels in the slot in Drive Lever 550 and causes it to move from the left to right, which moves Eject Slide 835-C and brings the center of the record over Receiving Pin 508 figure 3 in Turntable 510-C*. This motion is caused by Drive Lever 560 figure 2 acting through Link 852 attached to Lever 865 which is pinned to Shaft 558 connected to Top Lever 863-C which acts on Transverse Lever 854-C through Link 866. The Transverse Lever is connected to the twelve inch record Regulating Lever 869 which is fastened to Eject Slide 835-C by means of the Stud in the "I," shaped slot. This Stud remains in the "L," end of Lever

869 and allows Slide 835-C to place a ten inch record in the proper position over Receiving Stud 508 figure 3.

SLIDE MOVEMENT FOR 12" RECORDS

In case a twelve inch record is on the Slide, Centering Lever 860-C figure 4 is pushed out by the record to a position where its tail end trips the twelve inch Regulating Lever 859 figure 2. Eject Slide 835-C moves forward, causing the Stud to leave the "L," end of the slot in Lever 859 allowing Eject Slide 835-C to travel just far enough to place a twelve inch record over Receiving Stud 508 figure 3.

Ten or twelve inch records can be used without discrimination. The engagement of the needle on ten or twelve inch records is controlled by Engaging Regulator Weight 872 figure 4 acting on Cable 900 which is attached to Index Lever 815 figure 2. When the Weight is allowed to act, Index Lever 815 is pulled over and the long slot engages on Pin 768 figure 1 causing the Pick-up Unit to swing into the proper place to engage on a 12" record. If Regulator Weight 872 figure 4 is not allowed to act, Index Lever 815 figure 2 is carried over by means of Drag Link 530 figure 1 so that the short notch engages on Pin 783 and the needle engages at the proper place to start a 10" record. Whether or not the Weight 872 figure 4 is allowed to act depends on Shaft 824 which, when under Weight 872, keeps the Weight from acting. Shaft 824 is controlled by Engaging Regulator Arm 787.

When a 12" record is fed out, Centering Lever 850-C figure 4 is pushed out. The Finger end of carries Arm 787 out with it, swinging end of Shaft 824 from under Weight 872, allowing 872 to act. Shaft 824 will remain in this position until a 10" record is fed out of the Hopper. Thus, a 12" record may be repeated on the Turntable as many times as desired. When a 10" record is fed out of the Hopper, Eject Slide 835-C figure 2 goes out further over the Turntable, allowing Pin 887 to come in contact with Arm 787 causing it to move so that Shaft 824

takes a position under Weight 872 and prevents it from acting. This position will be held until a 12" record is fed out of the Hopper, thus, a 10" Record will continue to repeat until the position of Shaft 824 is changed.

RECEIVING POSITION OF TURNABLE

Again returning to the motion of Cam 789 figure 1 further rotation of this Cam causes the Turntable to rise to receiving elevation, in time to receive the record which has been moved to the positions just described. The Turntable remains in this position while the Cam rotates further, allowing Roller 662 figure 2 which is attached to Eject Arm 790, to travel in the slot in Drive Lever 560 and return Eject Slide 835-C to its original position. As soon as Eject Slide 835-C has returned to this position, Cam 789 figure 1 has revolved to a position where it allows the Turntable to drop to the "swing in" elevation.

"SWING IN" MOVEMENT OF PICK-UP UNIT

At this time Pin 763 figure 1 has revolved far enough to connect with either the ten or twelve inch notch in Index Lever 815 figure 2. Its further revolution causes the Pick-up to swing in over the record so the Needle rests on the smooth part of the record as the Turntable is raised to reproducing elevation by means of Cam 789 figure 1. Regulating Weight Lever 872 figure 4 on Standard 788 now causes the Pick-up to move over from the smooth part of the record to the first reproducing groove. Reproduction of the record begins at once.

COCKING MECHANISM AND STOPPING CYCLE OF CAM

When the Pick-up Unit first swings away from the record, Pick-up Arm Lever 811 figure 2 passes under the tail of Throwout Lever 822 figure 1, causing it to rise to a position where the notch in Trip Lever 814 is allowed to enter its proper place under the lug in Throw-out Lever 822, holding Throwout Lever 822 in this

Parts Lists Numbers: *524, *1026, *B-3700, *A-6006

SPARKS WITHINGTON CO.

MODEL 35
Service Data

(Continued)

position after the Pick-up Arm Lever 811 *figure 2* no longer supports it. When the Throwout Lever is raised to this position, a spring tension is created which pulls on Clutch Lever 816-C *figure 1* attempting to pull back and open Clutch 826 but Clutch Lever 816-C is held in the engaging position by means of Control Disc 864-C until the Cam has completed its entire revolution when a notch in the Control Disc allows the Clutch Lever to follow the urge of the spring and disengage the Clutch.

REPEATING

In case it is desired to play the same record over, the repeat Button *figure 5* is moved to the left. This moves Repeat Lever 806 *figure 2* causing it to press against Drive Dog 822 causing the Dog to recede and not catch on Eject Drive Arm 790. Eject Drive Arm 790 remains stationary and the Eject Slide does not move. The Cam revolves and the Turntable goes through all of the elevating positions except the discard elevation. Eject Arm 790 does not allow Roller 845 to drop to the discard elevation in Cam 789 *figure 1*, thus the record will be repeated until the Repeat Lever is moved to the right.

CONTROL OF RECORDS

When Eject Slide 835-C *figure 4* comes forward, the bottom record is caught between the "Y" shaped plates 836 and 837 *figure 3* which brings the bottom record forward with the Slide. The other records slide over the top of these "Y" shaped plates and remain in the Hopper. Only the bottom record is allowed to come out of the Hopper onto the Turntable. Other records are prevented from coming out by means of the two Admitters 819-C which are devised so they gauge themselves according to the thickness of the record. Thick, thin or warped records are fed out through the action of the admitters without injury to the records or mechanism. The admitters are held down against the record by means of springs and are adjusted by Screws 902. Back Stops 871 prevent records from sliding too far back in Hopper.

If a ten inch record is on the bottom and is not in the center, it is forced into the center by the two Centering Levers 850-C *figure 4* and 848-C *figure 3* which are held in position under tension by Springs 569 *figure 1* and 565 *figure 2*. These Springs are right and left hand and are attached to bushings in Studs, which have right and left hand threads and have a tendency to keep the spring from unscrewing the studs and nuts which hold them.

These Springs hold the Centering Lever against the Stop Pins which are set so that they hold the Centering Levers just the right distance to allow a 10" record to pass through with a slight amount of tension. In case a 12" record is on the bottom, these Springs are allowed to open up and the Centering Lever 850-C *figure 4* acts to trip the mechanism as described under the paragraph about Slide Movement for 12" records.

THE STARTING BUTTON

In starting or rejecting records, the Starting Button *figure 5* is pressed. When this Button is pressed slightly, it causes the contacts in switch 897-A *figure 2* to be spread apart which changes the fields in the motor from a series connection to a parallel connection for a greater starting torque. Pressing down further causes Lever 662 *figure 2* to act against Throwout Lever Trip 814 and trip mechanism which discards the record. This is the same action as though it were tripped with the Dogs 813 or 814.

THE CLUTCH SWITCH

Clutch Switch 895-A on Bracket 876 *figure 1* is operated by Clutch Lever 816-C by means of a fibre switch Opener, the purpose of this switch is to allow switch 895-A *figure 4* to be opened when the Clutch is engaged and the Cam is in motion. This carries the current whenever Clutch is in motion and the Pick-up Unit is not resting on a Record.

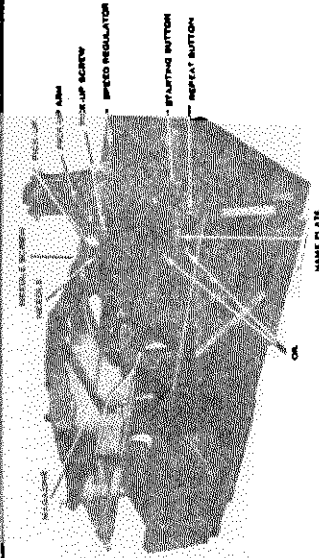


FIGURE 5

THE PICK-UP UNIT SWITCH

Pick-up Switch 898-A *figure 4* is attached to the back of Standard 788. When the Pick-up is not resting on a record, the Pick-up Arm drops down, swiveling at Trunion Pin 641, *figure 3*. This allows the Brake Shoe on Pick-up Arm 866 to rise and press against Cork Insert 623 *figure 4* which is in the Brake Adjustment 686. This retards the Swinging action of the Pick-up and allows it to move only when forced by Index Lever 816 *figure 2*. This Brake Adjustment 686 can be regulated to bring the Pick-up to the height desired and is locked in place by a nut.

Through the center of Brake Adjustment 686 is a Fibre Rod 590 *figure 4* which also rests on Brake Shoe 974 and is raised whenever the Brake is closed. The upper end of this acts on the Contact Spring in Switch 898-A and causes it to open the Switch and break the entire circuit, acting the same as the Clutch Switch in parallel with it. With both of these switches open, the power supply is entirely cut off. Also, when this switch is open a contact is formed with the upper part of the Switch which cuts out Speed Regulating Rheostat No. 544 *figure 2* and allows the full power to be used while the Cam is in the operating cycle.

Lubrication on the Sparton Ensemble Model 35 Automatic Phonograph Mechanism

The Model 35 automatic phonograph mechanism is thoroughly lubricated at the factory when assembled and requires no oiling or greasing except as noted in this section.

THE ELECTRIC MOTOR ARMATURE SHAFT BEARINGS. Oil once every six months. Use nothing but light fine oil. Located on the

upper side of the motor board *figure 5* are two (2) pipe plugs marked "OIL." Remove these plugs and inject a quantity of oil in the tubes under them. This lubricates both armature shaft bearings. The wick type oil wells used on the bearings keep the bearings well lubricated for a six (6) months period of normal operation.

MODEL 35
Adjustments

SPARKS WITHINGTON CO.

consistency of vaseline, mixed with graphite if possible. In the main body casting, housing the turntable shaft and worm gears two (2) pipe (2) pipe plugs 687 *figure 4* marked "Grease." Remove these Plugs and inject a small quantity of grease in the openings.

KNUCKLES, JOINTS AND BEARINGS. Oil once every six (6) months. Use nothing but light fine oil.
AUTOMATIC MECHANISM GEARS AND BEARINGS. Grease once every year. Use nothing but a good grade of grease of about the

Adjustments on the Sparton Ensemble Model 35 Automatic Phonograph Mechanism

ADMITTERS 819-C. *FIGURE 3.* Use Adjusting Screw 902. Turning this screw in a clockwise direction raises the end of the admitter higher. The height of the admitter should be just enough to touch a record on the Eject Slide 835-C *figure 2* when the slide is out.

ALIGNMENT OF MOTOR DRIVE SPRING 877. *FIGURE 1 WITH DRIVE SHAFT 793.* Two adjustments are provided for this purpose, one for aligning the spring if it is horizontally off center with the drive shaft and the other for alignment if the spring is vertically off center.

To align the spring if horizontally off center loosen the four collars (see 574-C, *figure 1*) on Screw Studs 797. This will then allow either side of Motor 895-C to be moved back or forth on the studs as the case demands. To align the spring if off center vertically, the Hex. nut on Stud 799 should be loosened or tightened depending upon whether the motor is to be tipped up or down.

PICKUP UNIT TO STRIKE AT PROPER PLACE ON RECORD. Use adjusting Screw 535 *figure 2.* The needle in the Pickup Unit should strike about 1/8 inch in from the outside edge of the record.

PICKUP UNIT TO TRIP MECHANISM ON SPIRAL GROOVE RECORD. Use adjusting Screw 812, *figure 2.* The mechanism should trip

Eject Slide should carry out a 10 inch Victor record to a distance where the tip of Receiving Stud 508, *figure 3,* enters the hole in the record at the front side of the hole. If a 10" Columbia record is used to make this adjustment, the stud should enter the hole in the record at the rear side.

END PLAY IN CAM WORM SHAFT 524-C. *FIGURE 1.* Use Adjusting Screw 525-C. The end play in this shaft should be just enough to be detected when shaft is moved back and forth by hand. If end play is too great, the clutch will remain engaged and the mechanism will not automatically stop when the last record has been reproduced.

PICKUP SWITCH 898-A. *FIGURE 4.* This switch is adjusted by loosening the two screws turntable shaft and worm gears are located two by which it is fastened to standard 788, and moving it up or down so the contacts will close when the pickup unit is on a record in reproducing position.

CLUTCH SWITCH 896-A. *FIGURE 1.* This switch is adjusted by loosening the two screws

which hold Bracket 876 to the body casting and moving the bracket one way or the other so the contacts will close when clutch 526 is in gear. Clutch 526 is placed in gear immediately after a record has been discarded automatically or manually.

END PLAY IN DRIVE SHAFT 793. *FIGURE 1.* Use Adjusting Screw 706-C, *figure 4.* The end play in this shaft should be just enough to be detected when shaft is moved back and forth by hand. If end play is too great, the reproduction of a record will have a wavering effect.

SPRING TENSION ON CENTERING LEVER 842-C and 850-C. *FIGURE 4 and 3.* **RESPECTIVELY.** Use Adjusting Screws 847 and 849, *figure 4.* The spring tension on these levers must be equal and sufficient to hold the center of a record in a line with Receiving Stud 508, *figure 3.* If the tension is insufficient or unequal, Eject Slide 835-C, *figure 2,* will not center the record over turntable 510-C. Loosen these screws and turn them to the right or left to increase or decrease tension as the case demands.

(Continued)

Resistor Data

SPARKS WITHINGTON CO.

STANDARD RESISTOR COLOR CODE AND RESISTORS USED IN SPARTON RADIO RECEIVING SETS AND SPARTON ENSEMBLES

Standard Resistor Color Code

- | | |
|----------|----------|
| 0—Black | 5—Green |
| 1—Brown | 6—Blue |
| 2—Red | 7—Violet |
| 3—Orange | 8—Gray |
| 4—Yellow | 9—White |

To determine the value of a resistor, the first significant figure of resistance value is represented by the color of the body of the resistor, and the second

figure of resistance value by the color of the tip of the resistor. The number of ciphers following the second figure is determined by the color of the dot or stripe in the center of the body of the resistor. For example, a 20,000 ohm resistor has a red body, black tip, with orange dot or orange stripe. A 2,200 ohm resistor would be red body, with red tip and red dot, or red stripe, and as all colors are the same, it would be a single color resistor.

CARBON RESISTORS

Part No.	Ohms	Watts	Body	Tip	Dot Stripe
B-4114-11	200	.5	Red	Black	Brown
B-4114-3	250	.5	Red	Green	Brown
B-4114-1	500	.5	Green	Black	Brown
B-4114-13	1,000	.5	Brown	Black	Red
A-3397	1,000	2	Light Brown		
A-3397	1,000	2	Brown	Black	Red
A-3750	1,250	3	Brown	Orange	Red
A-3750	1,250	3	Black	Silver	Orange
A-3750	1,250	3	Black		
A-3750	1,250	3	Slate		
A-3325	1,700	2	Dark Brown		
A-3639	1,700	5	Gray	Silver	
A-4613	1,700	1	Brown	Violet	Red
A-5550	2,000	.5	Red	Black	Red
B-4114-6	Use A-5550				
A-5622	2,500	3	Red	Green	Red
A-3232	2,800	.5	Black	Paper Label	
A-4122	2,800	.5	Gray		
A-4122	2,800	.5	Red		
A-4653	2,800	.5	Red	Gray	Red
A-5180	5,000	.5	Green	Black	Red
B-4114-16	Use A-5180				
B-4114-20	Use A-5180				
B-4114-25	7,000	.5	Violet	Black	Red
B-4114-2	8,000	.5	Gray	Black	Red
A-3764-C	10,000	4	Blue		
A-3735	10,000	5	Brown	Black	Orange
A-3735	10,000	5	Gray	Silver	Blue
A-4614	10,000	1	Brown	Black	Orange
B-4114-7	10,000	.5	Brown	Black	Orange
B-4114-5	10,000	.3	Brown	Black	Orange
A-4107	15,000	5	Brown	Green	Orange
A-4107	15,000	5	Gray	Silver	
B-4114-23	15,000	.5	Yellow	Black	Orange
A-2934	20,000	2	Green		
A-2934	20,000	2	Red	Black	Orange
A-3422	20,000	3	Gray		Green
A-3422	20,000	3	Red	Black	Orange
A-4261	20,000	5	Red	Black	Orange
A-4261	20,000	5	Gray	Silver	Blue
B-4114-14	20,000	.5	Red	Black	Orange
B-4114-24	Use B-4114-14				
A-7111	25,000	4.5	Red	Green	Orange

SPARKS WITHINGTON CO.

CARBON RESISTORS—Continued

Part No.	Ohms	Watts	Body	Tip	Dot Stripe
B-4114-18	25,000	.5	Red	Green	Orange
A-5139	30,000	1	Orange	Black	Orange
B-4114-19	30,000	.5	Orange	Black	Orange
B-4114-22	40,000	.5	Yellow	Black	Orange
A-3423	50,000	3	Gray		Red
A-3423	50,000	3	Green	Black	Orange
B-4114-12	50,000	.5	Green	Black	Orange
B-4114-15	60,000	.5	Blue	Black	Orange
A-5354	100,000	1	Brown	Black	Yellow
B-4114-10	100,000	.5	Brown	Black	Yellow
B-4114-8	150,000	.5	Brown	Green	Yellow
A-2702-5	200,000		Glass		
B-4114-17	200,000	.5	Red	Black	Yellow
A-1514	250,000		Glass		
A-4234	250,000	1	Red	Green	Yellow
A-5270	Use A-4234				
B-4114-4	250,000	.5	Red	Green	Yellow
A-2702-6	Use A-1514				
A-5269	500,000	1	Green	Black	Yellow
B-4114-9	500,000	.5	Green	Black	Yellow
A-5138	1,000,000	1	Brown	Black	Green
B-4114-21	1,000,000	.5	Brown	Black	Green
A-2702-11	1,000,000		Glass		
A-1515	3,000,000		Glass		
A-2702-13	Use A-1515		Glass		


WIRE WOUND RESISTORS

Part No.	Ohms	Watts	Color	Type	Part No.	Ohms	Watts	Color	Type
A-7411	.43			Special	A-7118	250	1	Blue	Wire Wound
A-6890	.54	2.5	5-23/32"	Wire	A-5137	330	1	Gray	Wire Wound
A-6889	.67	2.5	7-7/64"	Wire	A-3536	900	10	Black	Wire Wound
A-5863	2	5	Blue	Wire Wound	A-7119	1,050	7.5	Blue	Wire Wound
A-4363	7	20	Blue	Wire Wound	A-7018	1,250	4		Candohm
A-7509	8-9			Wire Wound	A-4974	1,250	5	Gray	Candohm
A-5140	(.11 ohms per ft. at 20° C.)			Wire	A-6617	1,500	2	Brown	Braided
A-5862	12	10	Blue	Wire Wound	A-3383	3,000	10	Black	Wire Wound
A-4364	12	30	Blue	Wire Wound	A-3535	7,000	10	Black	Wire Wound
A-5890	14	10	Blue	Wire Wound	A-4583	Use A-3535			
A-4366	15	50	Blue	Wire Wound	A-2043	10,000	6	Black	Wire Wound
A-7421	35	.25	Red	Braided	A-4356	20,000		Blue	Wire Wound
A-5889	54	175	Blue	Wire Wound	A-3811	30,000	.5	Black	Wire Wound
A-5861	57	175	Blue	Wire Wound	A-3642	(6.04 ohms per ft. at 20° C.)			Wire Wd. Tap.
A-4365	63	10	Blue	Wire Wound	A-4260	2,000-7,000	20	Black	Wire Wd. Tap.
A-3590	110	1	Black	Wire Wound	A-5426	1,800-2,400	8	Blue	Wire Wd. Tap.
A-4670	110	1	Black	Wire Wound	A-5870	Use A-5426			
A-4915	110	1	Black	Candohm	A-6619	2,900-3,000	15	Blue	Wire Wd. Tap.
A-7427	160	1	Blue	Wire Wound	A-7120	2,400-3,200	4.5	Blue	Wire Wd. Tap.
A-6618	200	.5	Red	Braided	A-7461	3,900-4,300		Blue	Wire Wd. Tap.
A-5502	200	1	Red	Candohm	A-6977	5,500-6,000	7	Blue	Wire Wd. Tap.
A-6976	230	3	Blue	Wire Wound	A-7462	60-220-2,100		Blue	Wire Wd. Tap.

MODEL 40
Schematic
Voltage

SPARKS WITHINGTON CO.

SPARTON MODEL 40 SCHEMATIC DIAGRAM
(AUTOMOBILE RECEIVER)

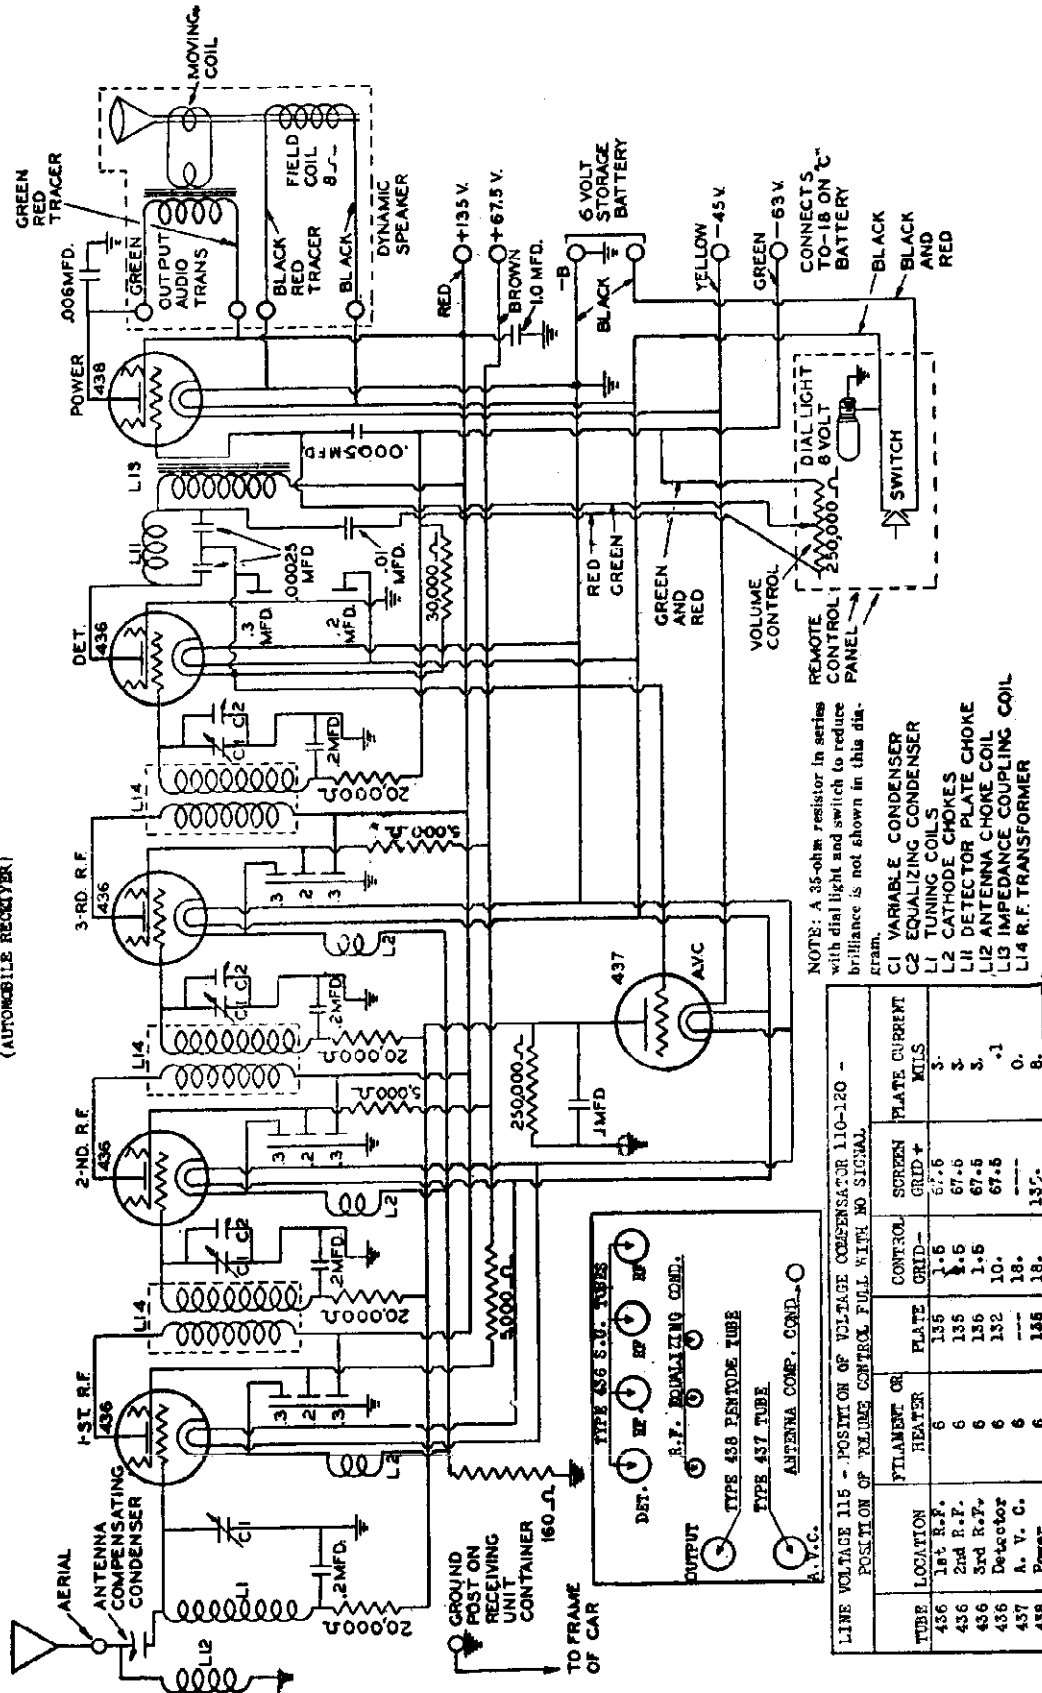


NOTE: A 35-ohm resistor in series with dial light and switch to reduce brilliancy is not shown in this diagram.

- C1 VARIABLE CONDENSER
- C2 EQUALIZING CONDENSER
- L1 TUNING COILS
- L2 CATHODE CHOKES
- L3 DETECTOR PLATE COIL
- L4 ANTENNA CHOKES
- L5 IMPEDANCE COUPLING COIL
- L6 R.F. TRANSFORMER

TUBE	LOCATION	FLAMENT OR HEATER	PLATE	CONTROL GRID-	SCREEN GRID+	PLATE CURRENT MILS
436	1st R.F.	6	135	1.5	67.5	3
436	2nd R.F.	6	135	1.5	67.5	3
436	3rd R.F.	6	135	1.5	67.5	3
436	Detector	6	132	10	---	0
437	A. V. C.	6	135	18	135	0
438	Power	6	135	18	---	8


LINE VOLTAGE 115 - POSITION OF VOLTAGE COMPENSATOR 110-120 - POSITION OF VOLUME CONTROL FULL WITH NO SIGNAL.

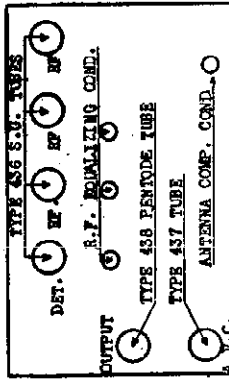

SPARKS WITHINGTON CO.


MODEL 41
Schematic
Voltage

POLICE AUTO RECEIVER

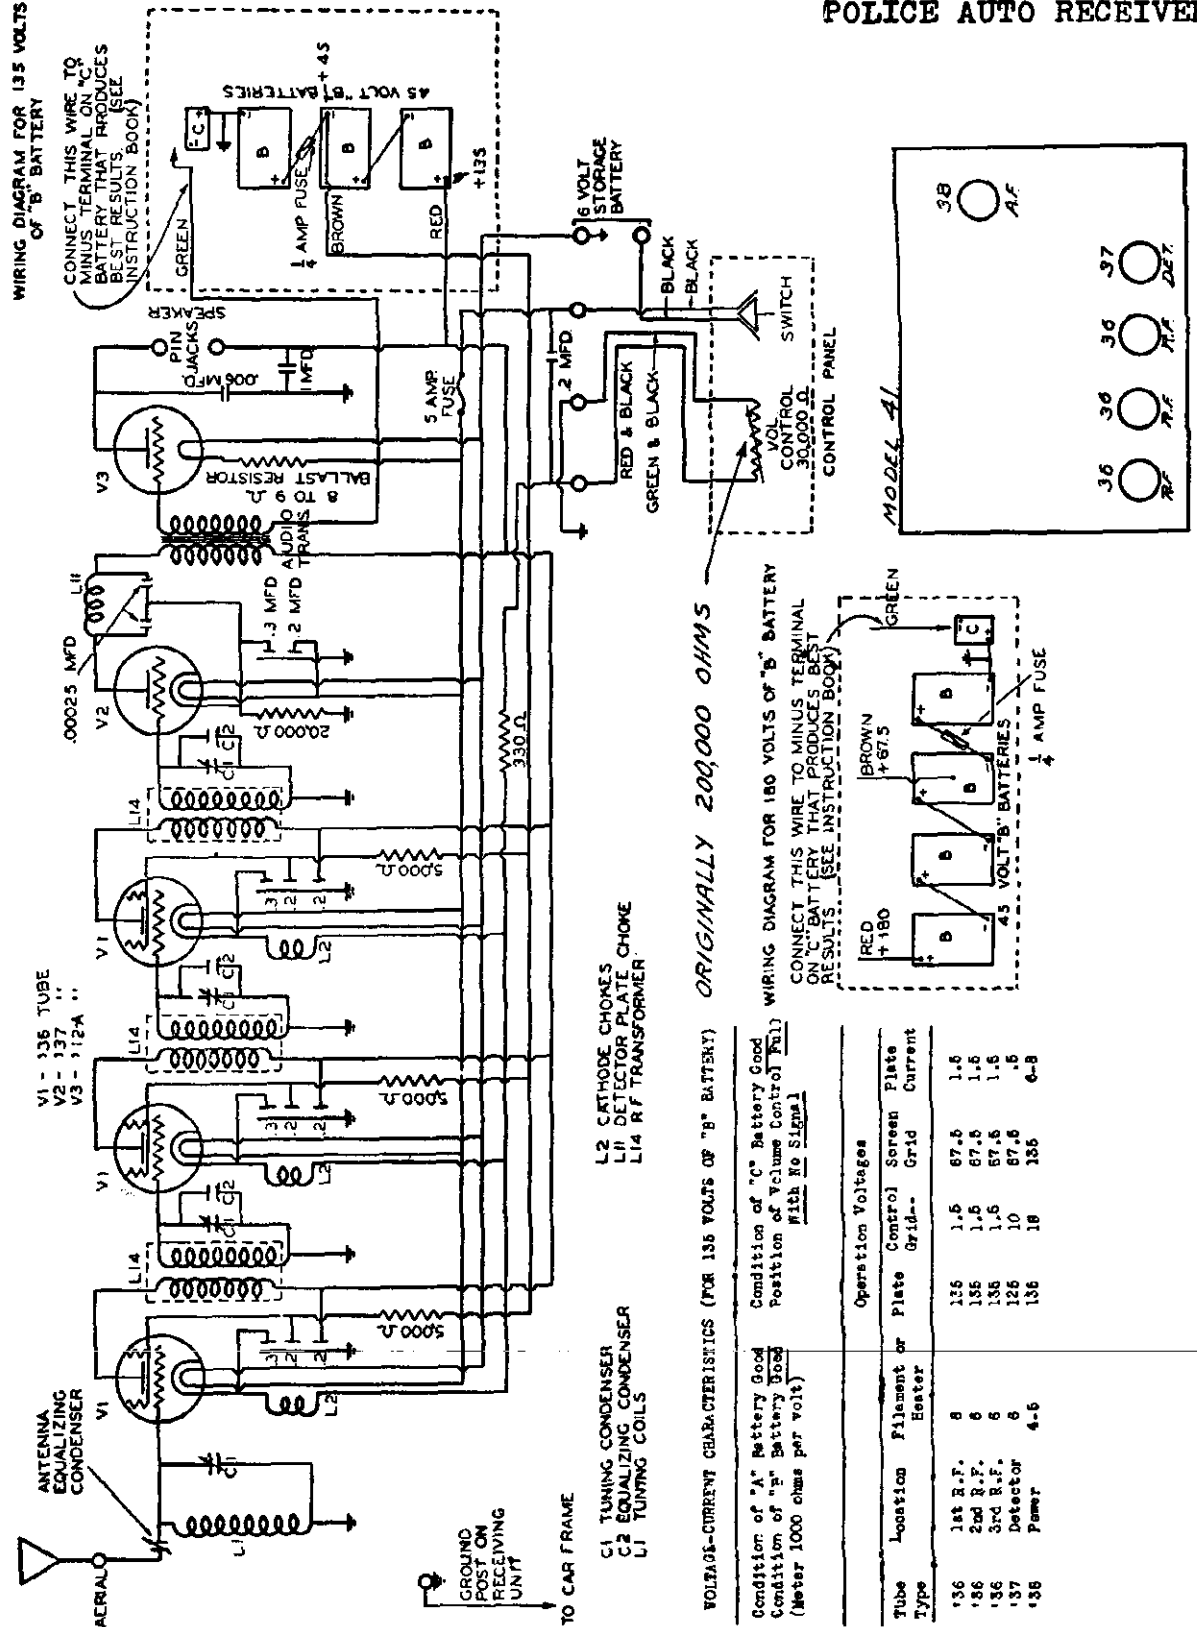

MODEL 45
Schematic

SPARKS WITHINGTON CO.

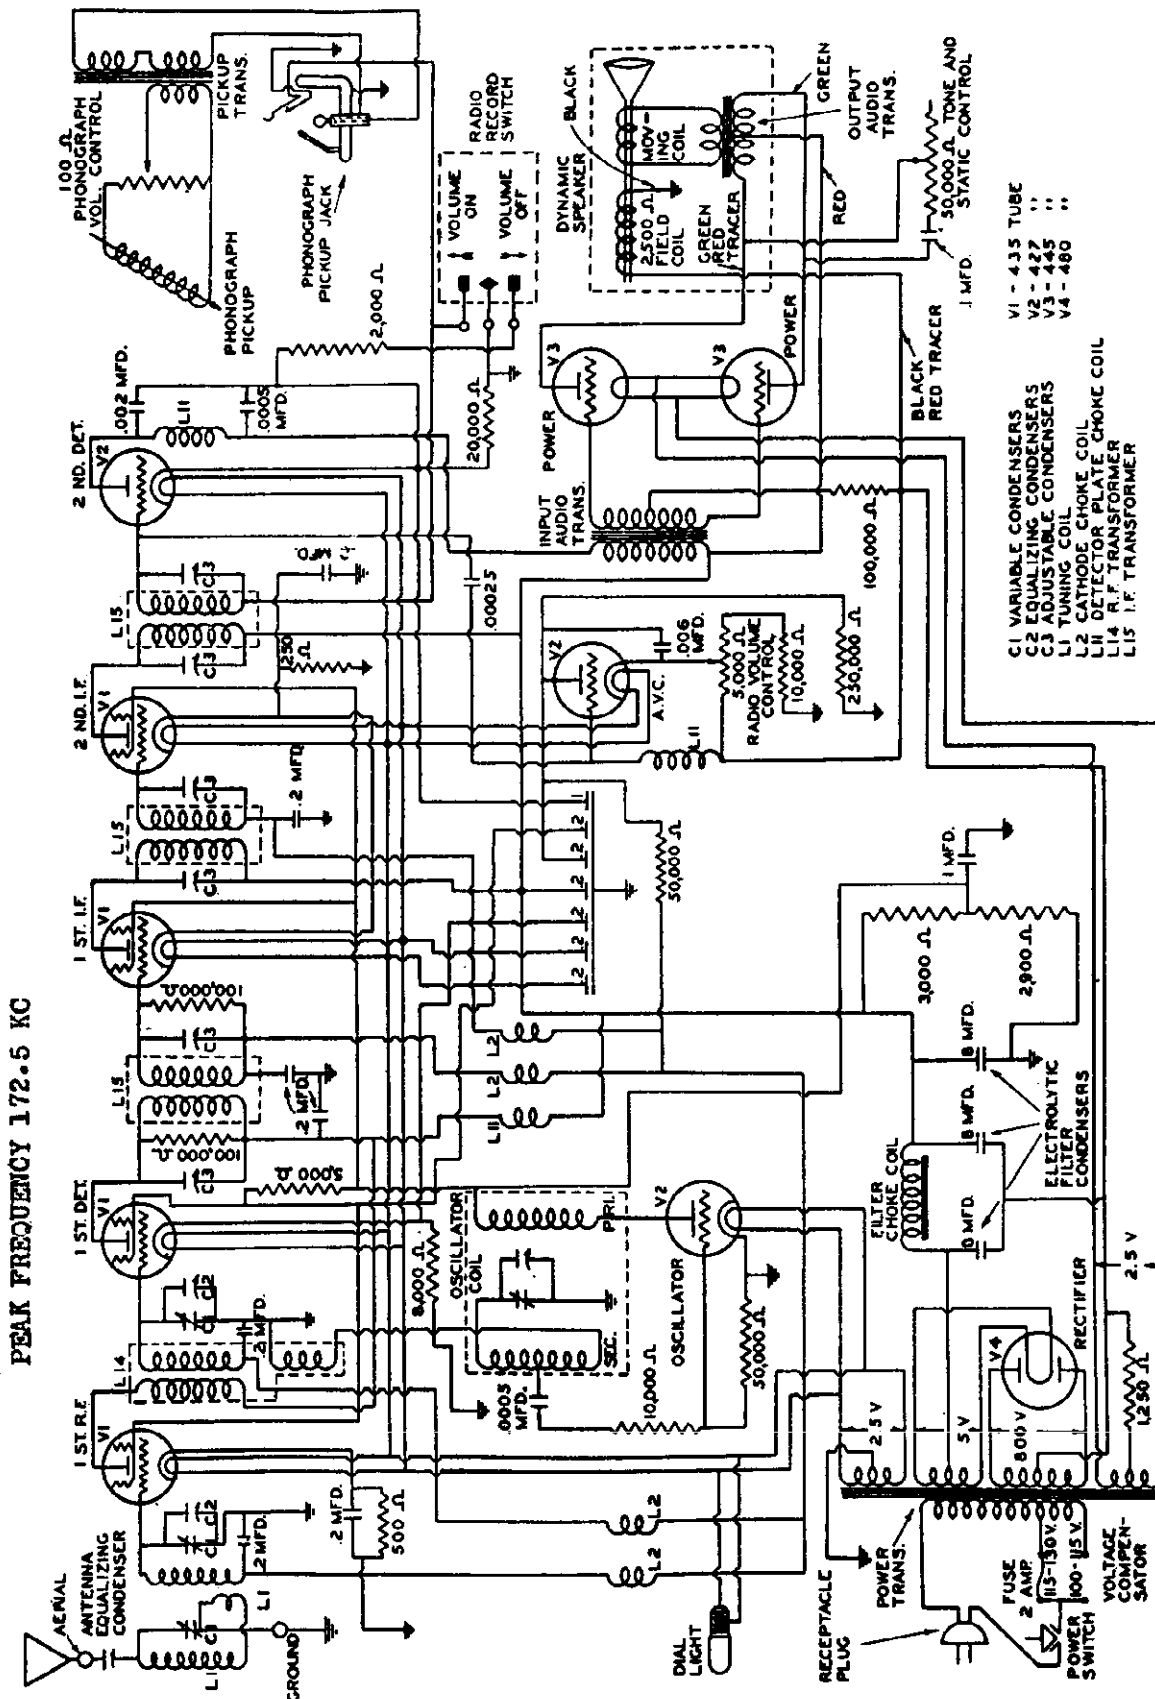

- C1 VARIABLE CONDENSERS
 - C2 EQUALIZING CONDENSERS
 - C3 EQUILIBRATING CONDENSERS
 - L1 TUNING COIL
 - L2 CATODE CHOKER COIL
 - L3 DETECTOR PLATE CHOKER COIL
 - L4 I.F. TRANSFORMER
 - L5 I.F. TRANSFORMER
- V1 - 435 TUBE
 - V2 - 427 "
 - V3 - 425 "
 - V4 - 480 "

SPARTON MODEL 45 (VISIONOLA) SUPERHETERODYNE

SPARKS WITHINGTON CO.

MODEL 45
Chassis
Voltage

Line Voltage 115—Position of Voltage Compensator 100-115—Position of Volume Control Full

Tube	Location	OPERATING VOLTAGES				Plate Current Mills.
		Heater or Filament	Plate	Control Grid—	Screen Grid+	
435	1st R. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8
435	1st Det.	2.2 - 2.5	180 - 220	*6.4 - 14	80 - 100	*.8 - 1.8
435	1st I. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8
435	2nd I. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8
427	Oscillator	2.2 - 2.5	80 - 100	†	‡
427	2nd Det.	2.2 - 2.5	170 - 205	14 - 207 - 1.0
427	A. V. C.	2.2 - 2.5	§	30 - 50	Zero
445	Power	2.2 - 2.5	225 - 270	30 - 45	20 - 30
445	Power	2.2 - 2.5	225 - 270	30 - 45	20 - 30
480	Rectifier	4.2 - 5	360 - 440	48 - 58

(Measured with 1000 ohm per volt voltmeter)


* Remove oscillator tube.

† Tube generates own bias when oscillating.

|| Meter reading use 150 volt scale—true voltage 50-75—if lower scale voltmeter is used expect lower voltages.

§ Test from grid prong to ground approx. 125 volts.



‡ Test with plug in 2nd. Detector socket and tube in Analyzer.

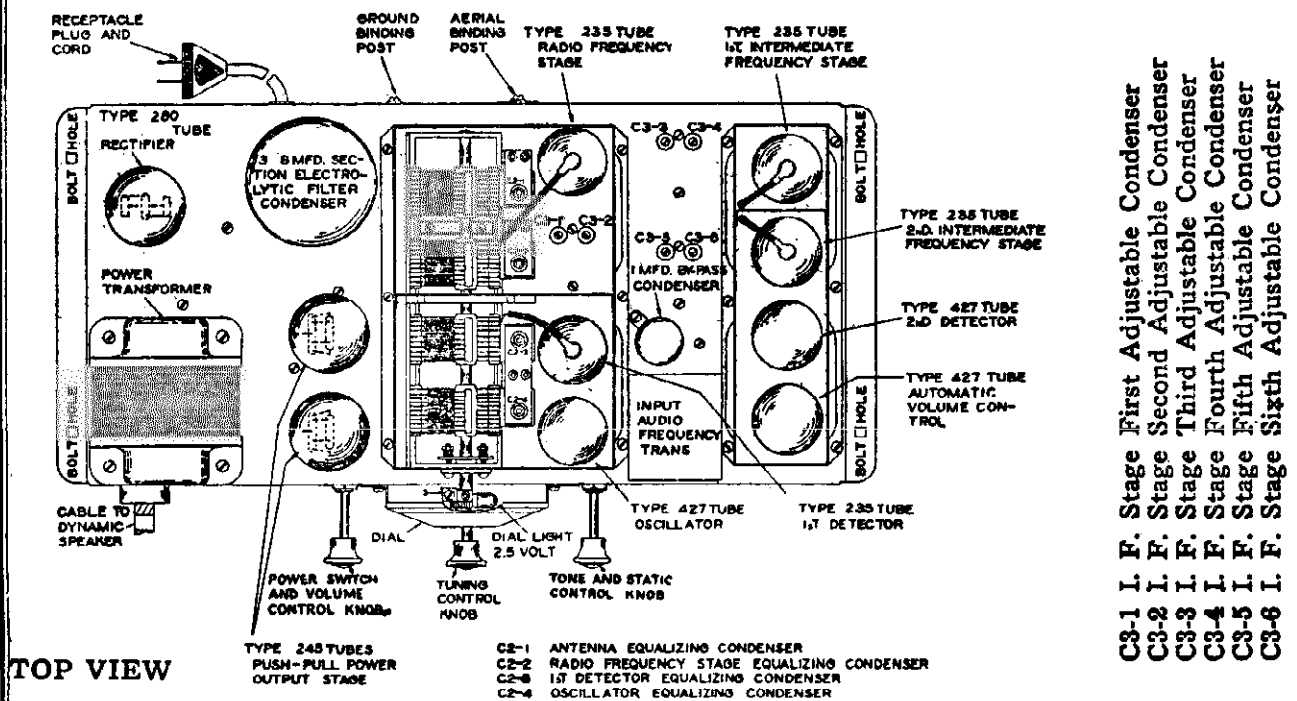

MODEL 51,52
Schematic
Voltage

SPARKS WITHINGTON CO.

Sparton Model 51 and 52 Schematic Diagram

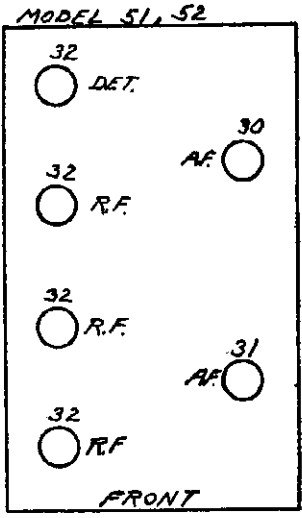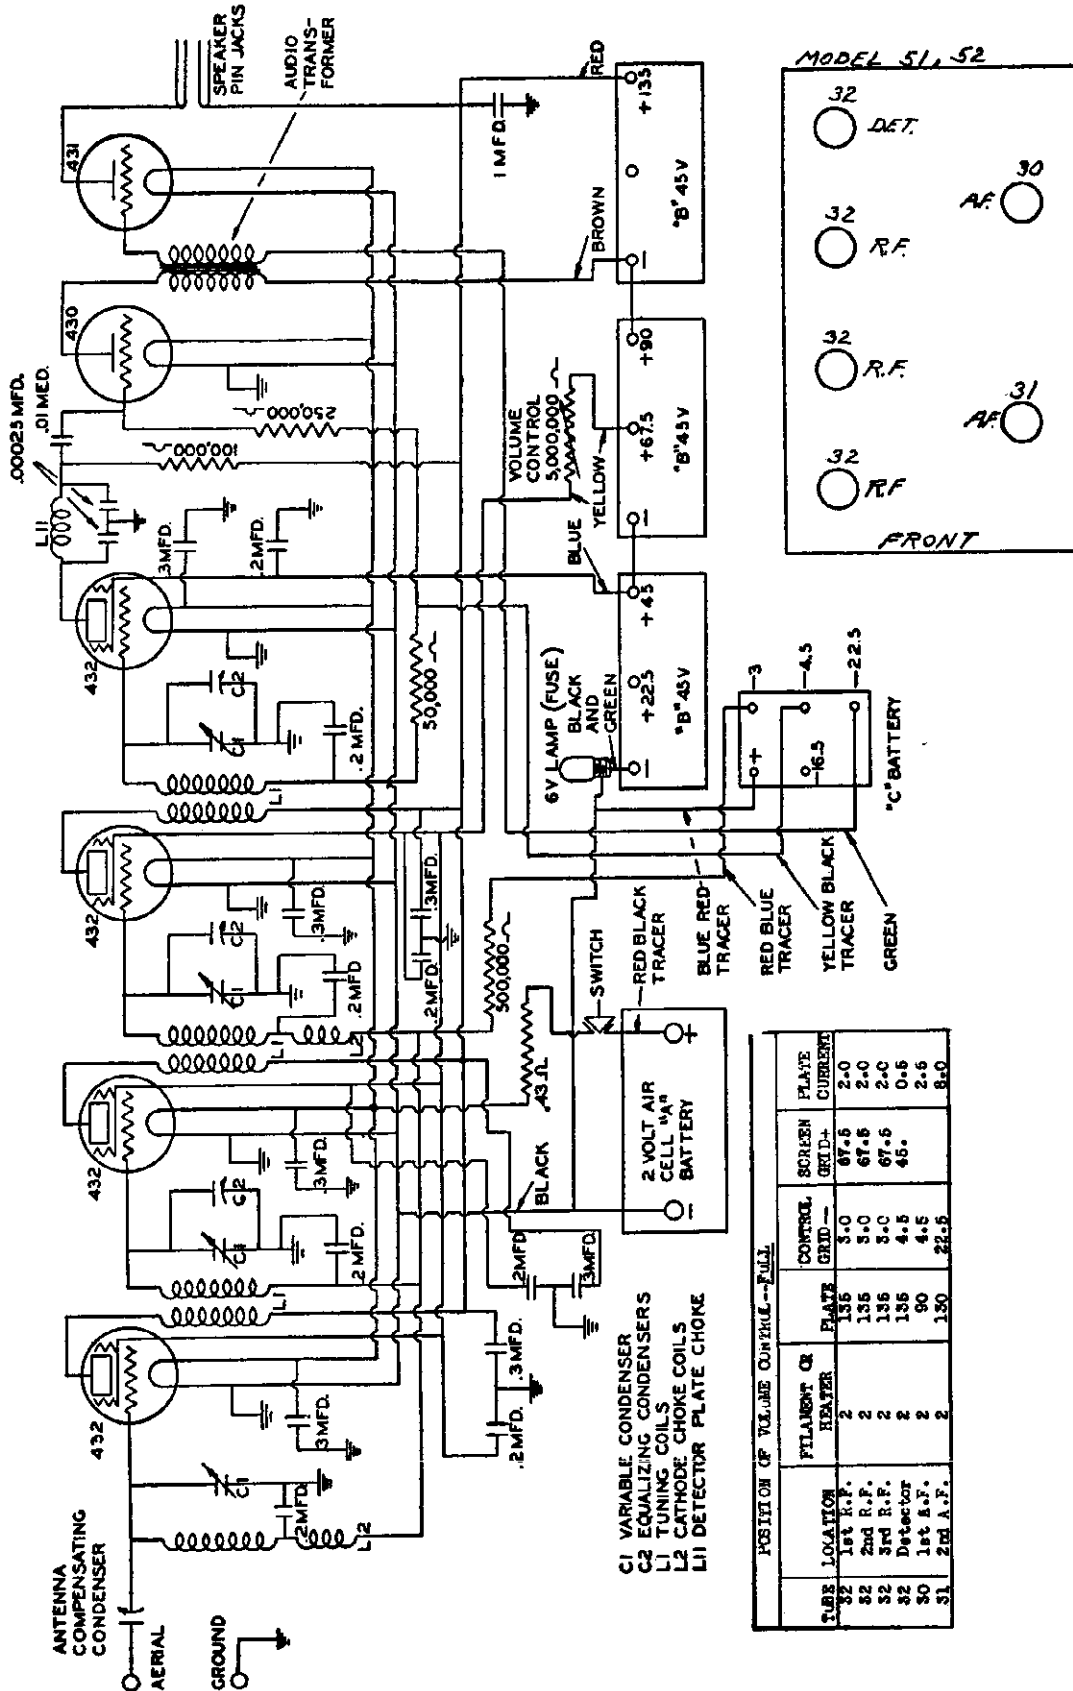



- C1 VARIABLE CONDENSER
- C2 EQUALIZING CONDENSERS
- L1 TUNING COILS
- L2 CATHODE CHOKE COILS
- L1 DETECTOR PLATE CHOKE

POSITION OF VOLUME CONTROL -- FULL.

TUBE LOCATION	FILAMENT OR HEATER	PLATE	CONTROL GRID --	SCREEN GRID +	PLATE CURRENT
32 1st R.F.	2	135	3.0	67.5	2.0
32 2nd R.F.	2	135	3.0	67.5	2.0
32 3rd R.F.	2	135	3.0	67.5	2.0
32 Detector	2	90	4.5	45.	0.5
30 1st A.F.	2	130	4.5	22.5	2.5
31 2nd A.F.	2	130	22.5		8.0


SPARKS WITHINGTON CO.

MODEL 51,52
Tone Control
Speaker Cone
Data

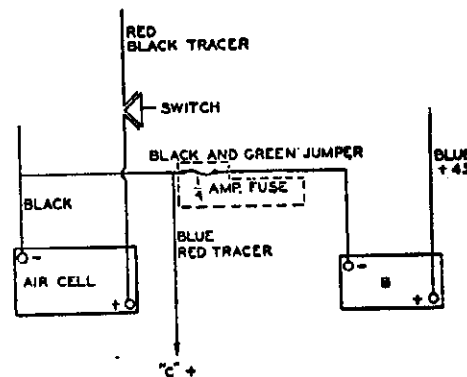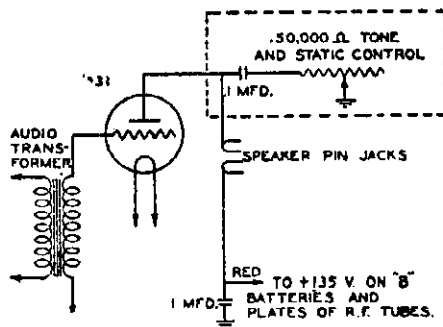

SCHEMATIC
DRAWING OF TONE
AND STATIC
CONTROL AND
1/4 AMPERE "B"
BATTERY FUSE
USED ON MODLES
51 AND 52
SERIAL NOS. 345
AND 195 UP
RESPECTIVELY

WIRING DIAGRAM FOR 180
VOLTS OF "B" BATTERY
SPARTON MODEL 51 AND 52

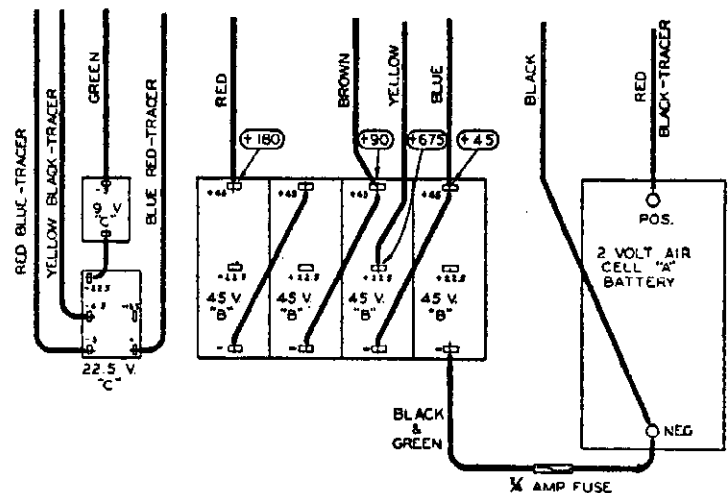

How to Replace Cone Head in Magnetic Speaker in Model 51 and 52

First:

Remove the motor or speaker driving element by removing the four mounting screws, unsoldering the lead wires from the outside terminal lugs, and unsoldering the driving link from the diaphragm apex pin.

Second:

Remove the cone head and all paper rings from the speaker housing.

Third:

Coat the rim of the speaker housing where the paper ring on the diaphragm rests with an ample coating of cellulose cement (such as Du Pont's Household Cement or Ambroid).

Fourth:

Place the cone head (part No. B-3528) into position, set the speaker housing onto a flat surface with the opening of diaphragm down, place a weight on housing and leave until cement is dry.

Fifth:

Fasten the driving motor back into position with four mounting screws, making sure that the movable armature of the motor is in exact center between the pole pieces before mounting, and solder the lead wires to the terminal lugs.

Sixth:


Solder the diaphragm apex pin to the apex driving link, making sure not to exert any strain on the drive link which might put the motor armature out of center while soldering. The apex pin should be cut off before soldering, so that it will extend about 1/4" along the drive link. Use ordinary soft solder.

Seventh:

Next cement the paper ring (part No. A-5847) and finally the paper ring (part No. A-5846) into position, using cellulose cement.

MODEL 55
Police Desk
Schematic

SPARKS WITHINGTON CO.
SPARTON OF CANADA LTD.

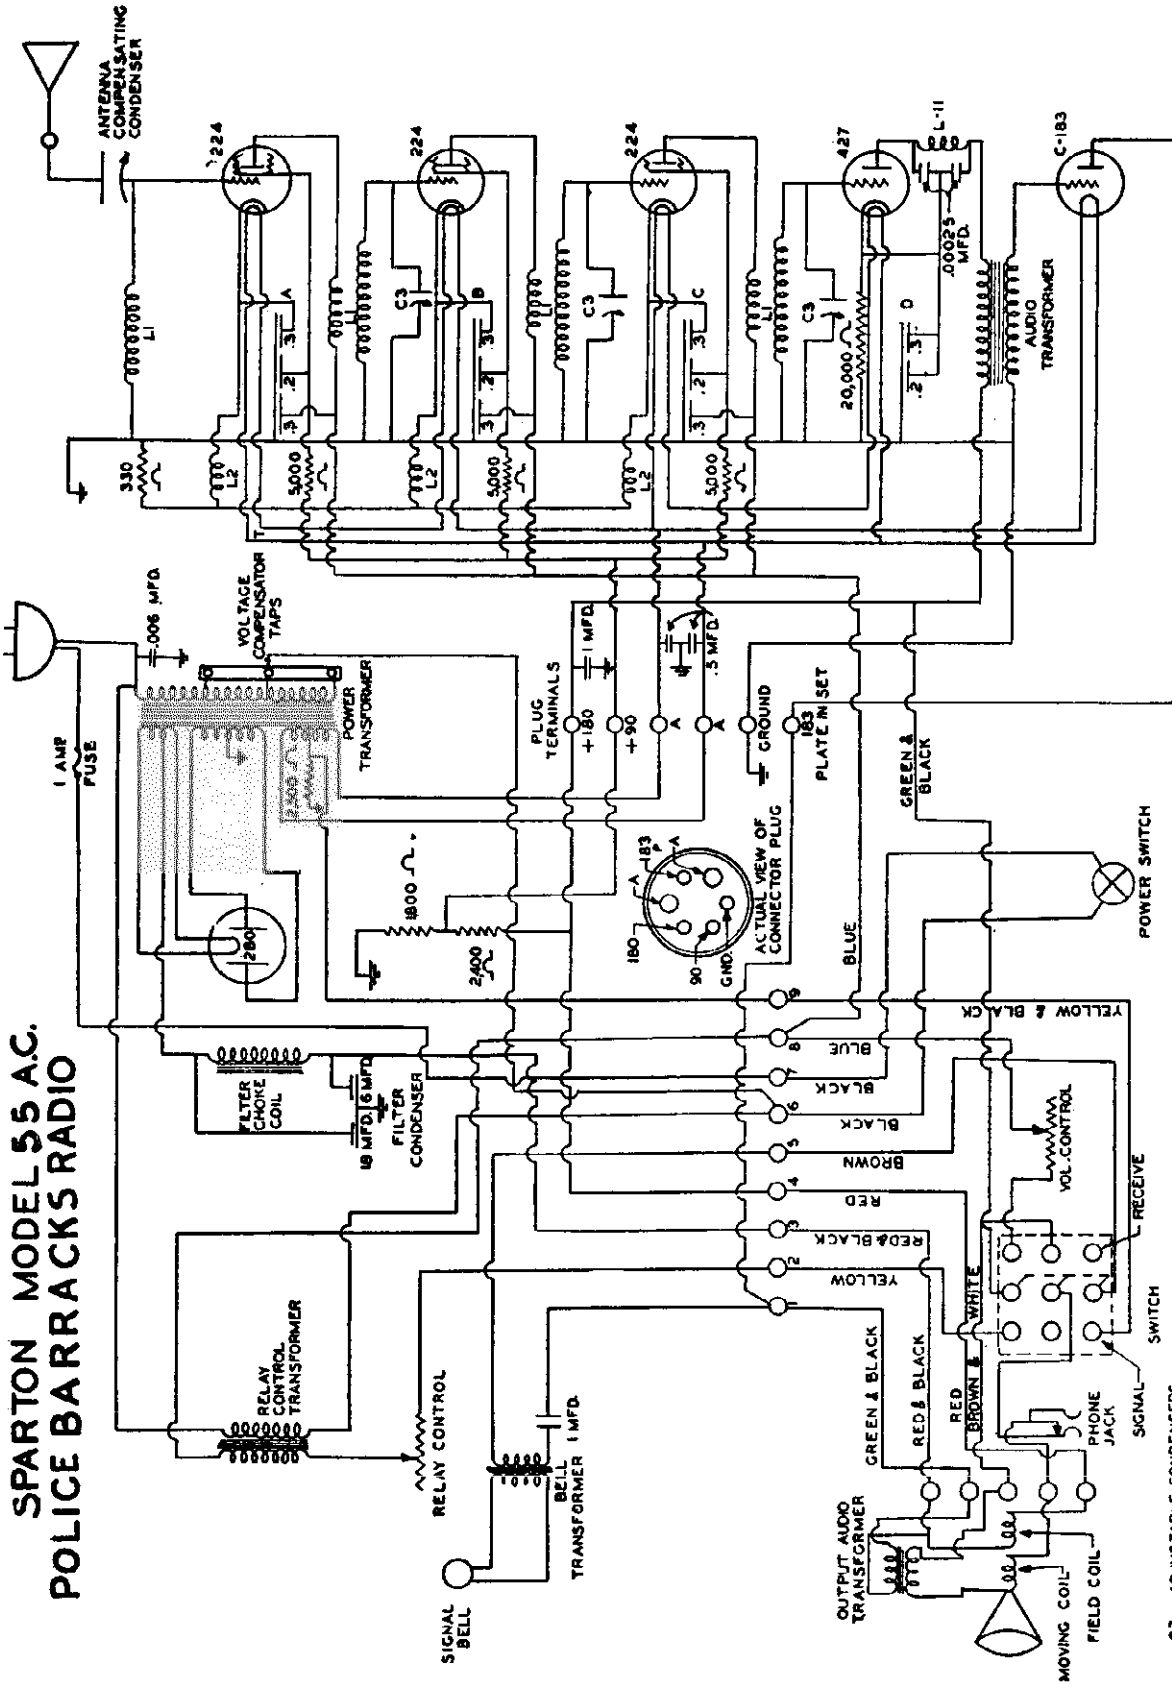


SPARTON MODEL 55 A.C.
POLICE BARRACKS RADIO

- C3 ADJUSTABLE CONDENSERS
- L1 TUNING COILS
- L2 CATHODE COILS
- L11 DETECTOR PLATE CHOKES
- A, B, C & D CONDENSERS IN ONE BLOCK

MODEL 56
Voltage
Socket
Trimmers

SPARKS WITHINGTON CO.

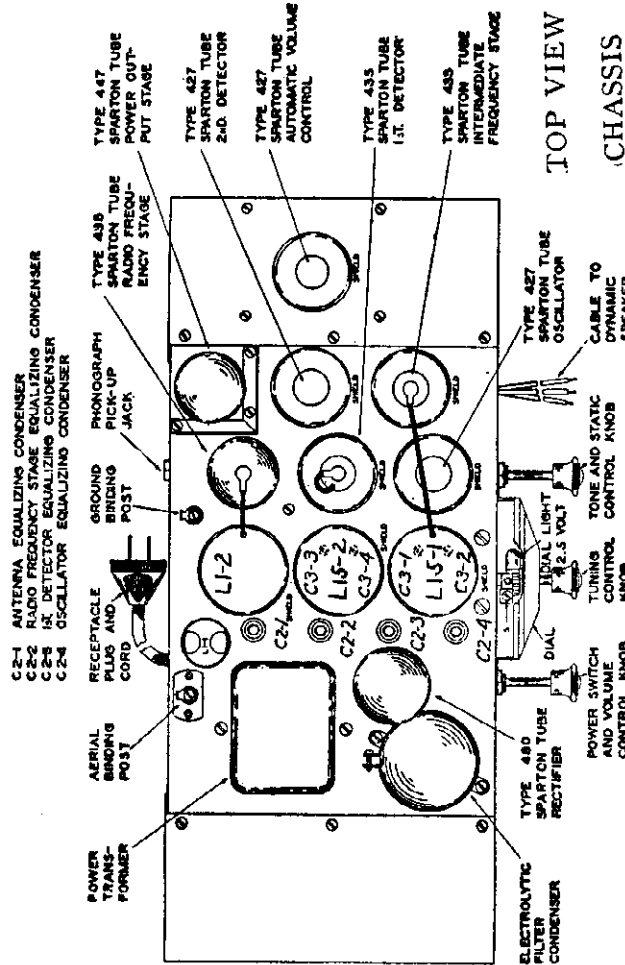

ALL SHIELDS MUST BE SNUGLY IN PLACE

- L1-1 First R. F. Tuning Coil
- L1-2 Second R. F. Tuning Coil
- L15-1 First I. F. Transformer (1st. Det. to I.F. Stage)
- L15-2 Second I. F. Transformer (I.F. to 2nd. Det. Stage)
- C3-1 I. F. Stage First Adjustable Capacitor
- C3-2 I. F. Stage Second Adjustable Capacitor
- C3-3 I. F. Stage Third Adjustable Capacitor
- C3-4 I. F. Stage Fourth Adjustable Capacitor

Voltage Current Characteristics

Line Voltage 115—Position of Voltage Compensator 100-115—Position of Volume Control Full

Tube	Location	OPERATING VOLTAGES				Plate Current Mills.
		Heater or Filament	Plate	Control Grid —	Screen Grid +	
435	1st R. F.	2.2 - 2.5	230 - 270	2.5 - 4.0	85 - 100	5 - 8
435	1st Det.	2.2 - 2.5	230 - 270	**4.5 - 7.5	85 - 100	**1.8 - 3.5
435	1st I. F.	2.2 - 2.5	230 - 270	2.5 - 4.0	85 - 100	5 - 8
427	Oscillator	2.2 - 2.5	85 - 110	†	‡
427	2nd Det.	2.2 - 2.5	*100 - 135	8 - 14	4.0 - .7
447	Power	2.2 - 2.5	220 - 260	15 - 18	230 - 270	30 - 36
480	Rectifier	4.2 - 5	360 - 420	40 - 55

*Use 300 volt scale.


**Remove Oscillator tube.

†Tube generates own bias when oscillating.

‡Test with plug in 2nd. Detector socket and tube in analyzer

SPARKS WITHINGTON CO.

MODEL 60
Short Wave
Converter

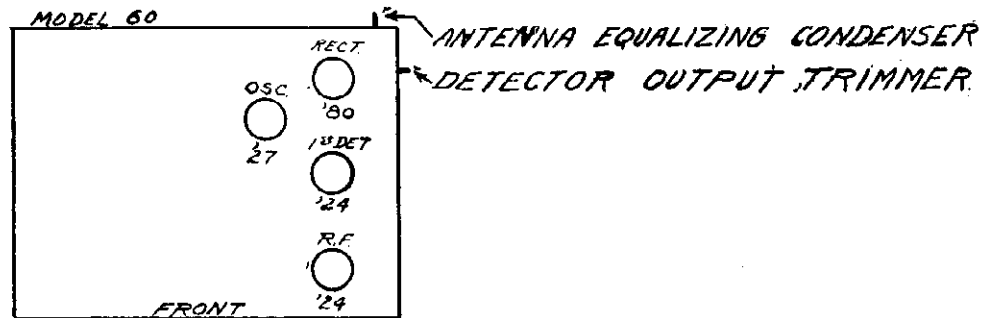


MODEL 60 SHORT-WAVE CONVERTER

Tube	Location	Filament Heater or	Plate	Control Grid -	Screen Grid +	Plate Current M. A.
'24-A	R. F.	2.2 - 2.5	180 - 230	2 - 3	70 - 100	3 - 6
'24-A	Detector	2.2 - 2.5	180 - 230	*5 - 6	70 - 100	.2 - 1
427	Oscillator	2.2 - 2.5	180 - 230	†	-----	§
'80	Rectifier	4.4 - 5.0	230 - 260	-----	-----	7 - 10

LINE VOLTAGE 115 POSITION OF VOLUME CONTROL FULL

- † Tube generates own bias when oscillating.
- * Presence of voltage can only be determined by testing circuit continuity and measuring the plate and screen grid current of this tube. Voltage is five thousand times current in amperes.
- § Measure with plug in the second detector socket and tube in test kit.

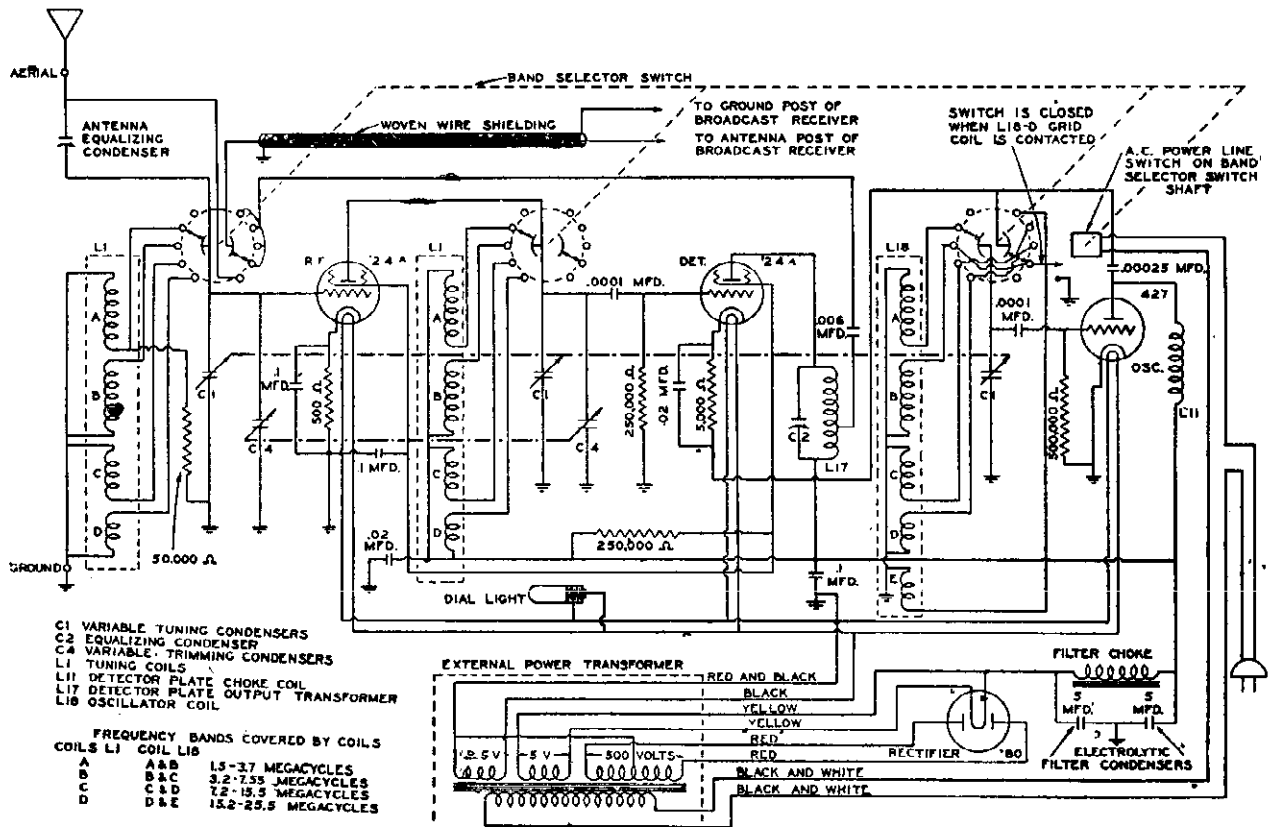

- C1 VARIABLE TUNING CONDENSERS
 - C2 EQUALIZING CONDENSER
 - C4 VARIABLE TRIMMING CONDENSERS
 - L1 TUNING COILS
 - L11 DETECTOR PLATE CHOKE COIL
 - L17 DETECTOR PLATE OUTPUT TRANSFORMER
 - L18 OSCILLATOR COIL
- FREQUENCY BANDS COVERED BY COILS
- | COILS L1 | COIL L18 | FREQUENCY BANDS |
|----------|----------|----------------------|
| A | A&B | 1.5-3.7 MEGACYCLES |
| B | B&C | 3.2-7.35 MEGACYCLES |
| C | C&D | 7.2-15.5 MEGACYCLES |
| D | D&E | 15.2-25.5 MEGACYCLES |

**Antenna Trimmer
Service Notes**

SPARKS WITHINGTON CO.

How to Adjust the Antenna Compensating and Equalizing Condensers

SPARTON MODELS 103, 235, 564, 570, 574, 578, 589, 591, 593, 600, 610, 620, 740, 750 AND 870. ALSO MODELS EQUIPPED WITH PHONOGRAPH PICKUP JACK MANUFACTURED PRIOR TO JUNE 1, 1936.

After the aerial and ground have been inspected and found to be in good order, and all tubes have been tested and placed in their proper sockets, the final operation in the installation of a SPARTON Radio Receiving Set in adjustment of the antenna compensating and equalizing condensers. This adjustment should ALWAYS be made with the use of a High Resistance Voltmeter as a resonance indicator. Using the ear as a resonance indicator should be resorted to only when it is impossible to employ a Voltmeter.

Any 1,000 ohm per volt 0-60, 75 or 100 scale D. C. Voltmeter will serve the purpose.

Connect two leads to the binding posts of the Voltmeter to be used, and terminate them in a phone plug which is then inserted in the Phonograph Pick-up Jack just far enough to touch the first inside contact. (See figure 2.) (DO NOT PLUG ALL THE WAY INTO THE JACK, as this will short out the Detector tube biasing resistor, and cause inaccurate readings.) Be sure that no Analyzer Adapters are connected to the end of the Analyzer Cord, or plugged into the Analyzer Socket, as this will short-circuit the Voltmeter.

NOTE: (When aligning Models 235 and 103, two small battery clips instead of a phone plug are fastened to the Voltmeter leads. On the Model 235 the leads are connected to terminals No. 11 and No. 13 of the terminal block located on the left-hand side of the cabinet. On the Model 103 the leads are connected to terminals No. 14 and No. 17 on the terminal strip.)

1. With aerial and ground wires connected to the set as they are to be permanently used, CALIBRATION OF DIAL STRIP ON SPARTON MODELS 103, 235, 410, 420, 564, 570, 574, 578, 589, 591, 593, 600, 610, 620, 740, 750 AND 870.

Note carefully whether or not a station around 600 kilocycles indicates correctly on the dial when tuned to the loudest volume.

If station reads off its proper setting, loosen the screws which hold the celluloid strip

PHONE PLUG INSERTED APPROXIMATELY 3/4 OF THE WAY INTO THE JACK OR JUST FAR ENOUGH TO OBTAIN A READING OF APPROXIMATELY 15 VOLTS WITH NO SIGNAL TUNED IN

11. Next, tune in a station between 1100 and 1300 kilocycles and see if it reads correctly on the dial.

12. If stations tune in to maximum volume at a setting different from station's correct kilocycle reading, turn dial to the reading the station should come in on according to its log-book reading. Then readjust the Condensers as explained in No. 1 to No. 5.

13. This final adjustment will scarcely affect the calibration of the stations around 600 kilocycles and will properly align the Selector Unit to its highest efficiency, and will cause the dial to read correctly over the entire broadcast spectrum.

MODELS AR-19 AND 31
Due to the construction of these Models, it is not convenient to connect a Voltmeter at the proper place in the circuit so it can be used as a resonance indicator, therefore, a pair of ear phones are substituted for the speaker and are used as the means of determining when the antenna compensating and equalizing condensers have been properly adjusted.

1. With aerial and ground wires connected to the set as they are to be permanently used, tune in a DISTANT STATION between 80 and 90 or higher on the dial.

2. Turn Volume control down until station is barely audible.

3. Adjust Antenna Compensating Condenser with insulated handle screw driver to a point where the station sounds the loudest.

4. The Equalizing Condensers are numbered 1, 2, and 3, from front to back of receiver. Reduce the volume control until the station is barely audible and with the adjusting wrench, adjust

No. 3 to a point where the station sounds the loudest.

5. Next adjust No. 1 and No. 2 in the same manner.

TO CHECK ADJUSTMENT
6. Tune in a station between 15 and 25 on the dial.

7. Readjust the Antenna Compensating and Equalizing Condensers No. 3, No. 1, and No. 2 in exactly the same manner as they were adjusted between the 80 to 90 setting of the dial. The purpose of this adjustment is to check the "tracking" of the four condensers. The volume of the station should decrease if any of the four original adjustments are changed. That is, the four tuned circuits must show alignment between 15 and 25 on the dial on the adjustment made between 80 and 90.


TO READJUST

8. After the check between 15 and 25 on the dial, it will be necessary to again readjust the condensers as explained in No. 1 to No. 5 inclusive. This is necessary due to the adjustments being slightly thrown off during the checking process.

SPARTON MODELS 410 AND 420

Follow the same procedure outlined for adjusting the antenna compensating and equalizing condensers for the SPARTON Models AR-19 and 31, except in this case ear phones are not substituted for the speaker as a means of determining when the condensers are properly adjusted. The speaker serves this purpose as it is, and as the dial is calibrated in kilocycles a station is tuned in at 1200 kilocycles or higher frequency instead of between 80 and 90 as specified in paragraph No. 1, and the re-check is made between 500 and 600 kilocycles instead of between 15 and 25.

3RD EQUALIZING CONDENSER
2ND EQUALIZING CONDENSER
1ST EQUALIZING CONDENSER
ANTENNA CONDENSER

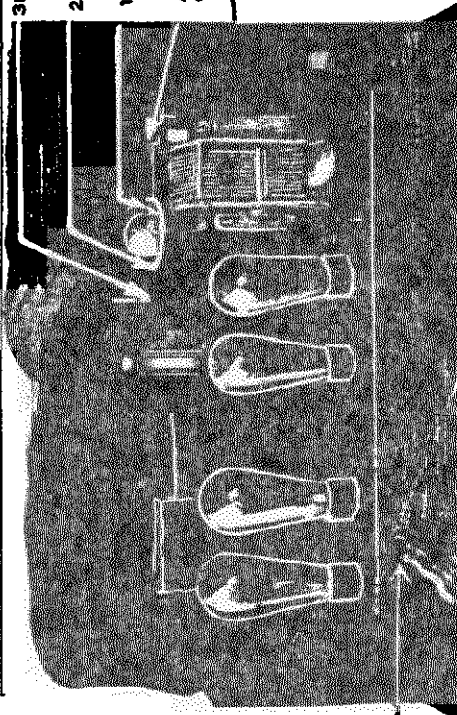


TO VOLTMETER

SPARKS WITHINGTON CO.

MODEL 111-A, 574, 870
Schematic

SPARTON MODEL
574 AND 870
ALSO MODEL 111-A

For Voltage Data
See Model 110 AC

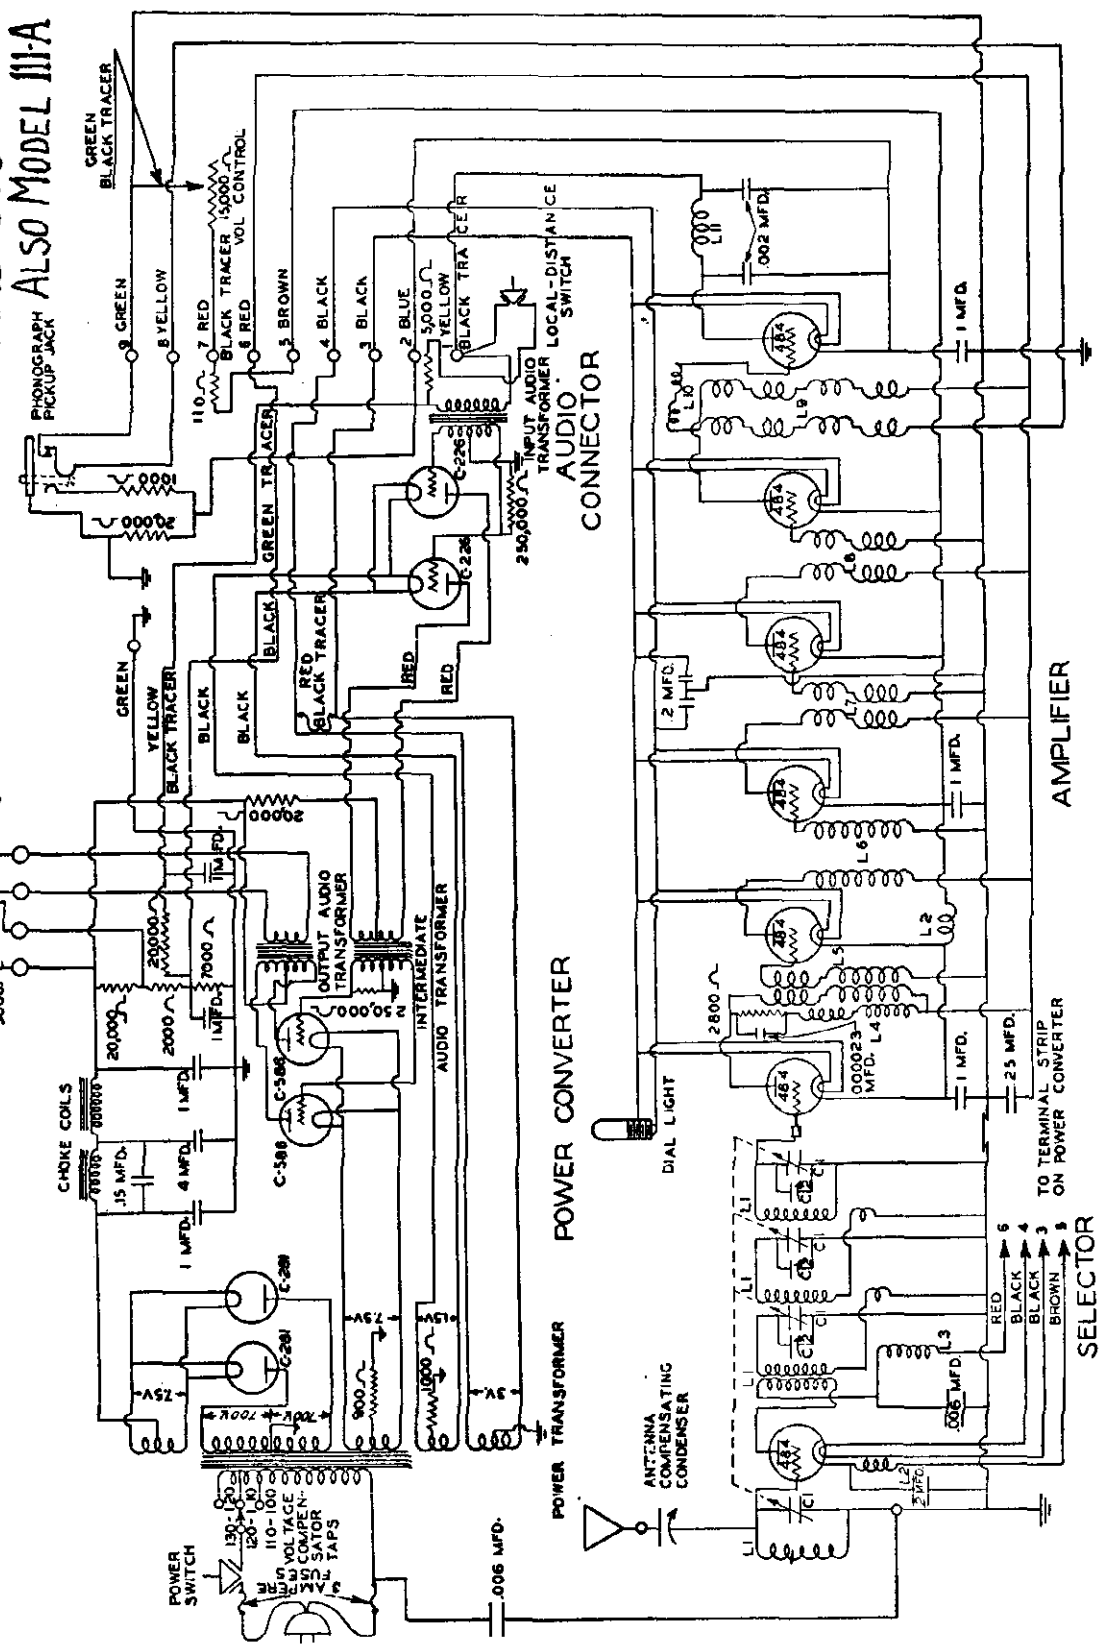

- C1 VARIABLE CONDENSERS
- C2 EQUALIZING CONDENSERS
- L1 TUNING COILS
- L2 CATHODE COILS
- L3 R.F. CHOKE COIL
- L4 FIRST PLATE COIL
- L5 COUPLING COIL
- L6 FIRST R.F. TRANSFORMER
- L7 SECOND R.F. TRANSFORMER
- L8 THIRD R.F. TRANSFORMER
- L9 FOURTH R.F. TRANSFORMER
- L0 FREE GRID COIL
- LU DETECTOR PLATE CHOKE

SPARKS WITHINGTON CO.

MODEL 235
Schematic


- C1 VARIABLE CONDENSERS
- C2 EQUALIZING CONDENSERS
- L1 TUNING COILS
- L2 CATHODE COIL

- L3 R.F. CHOKE COIL
- L4 FIRST PLATE COIL
- L5 COUPLING COIL

- L6 FIRST R.F. TRANSFORMER
- L7 SECOND R.F. TRANSFORMER
- L8 THIRD R.F. TRANSFORMER


- L9 FOURTH R.F. TRANSFORMER
- L10 GRID COIL
- L11 DETECTOR PLATE CHOKE

SPARTON MODEL 235

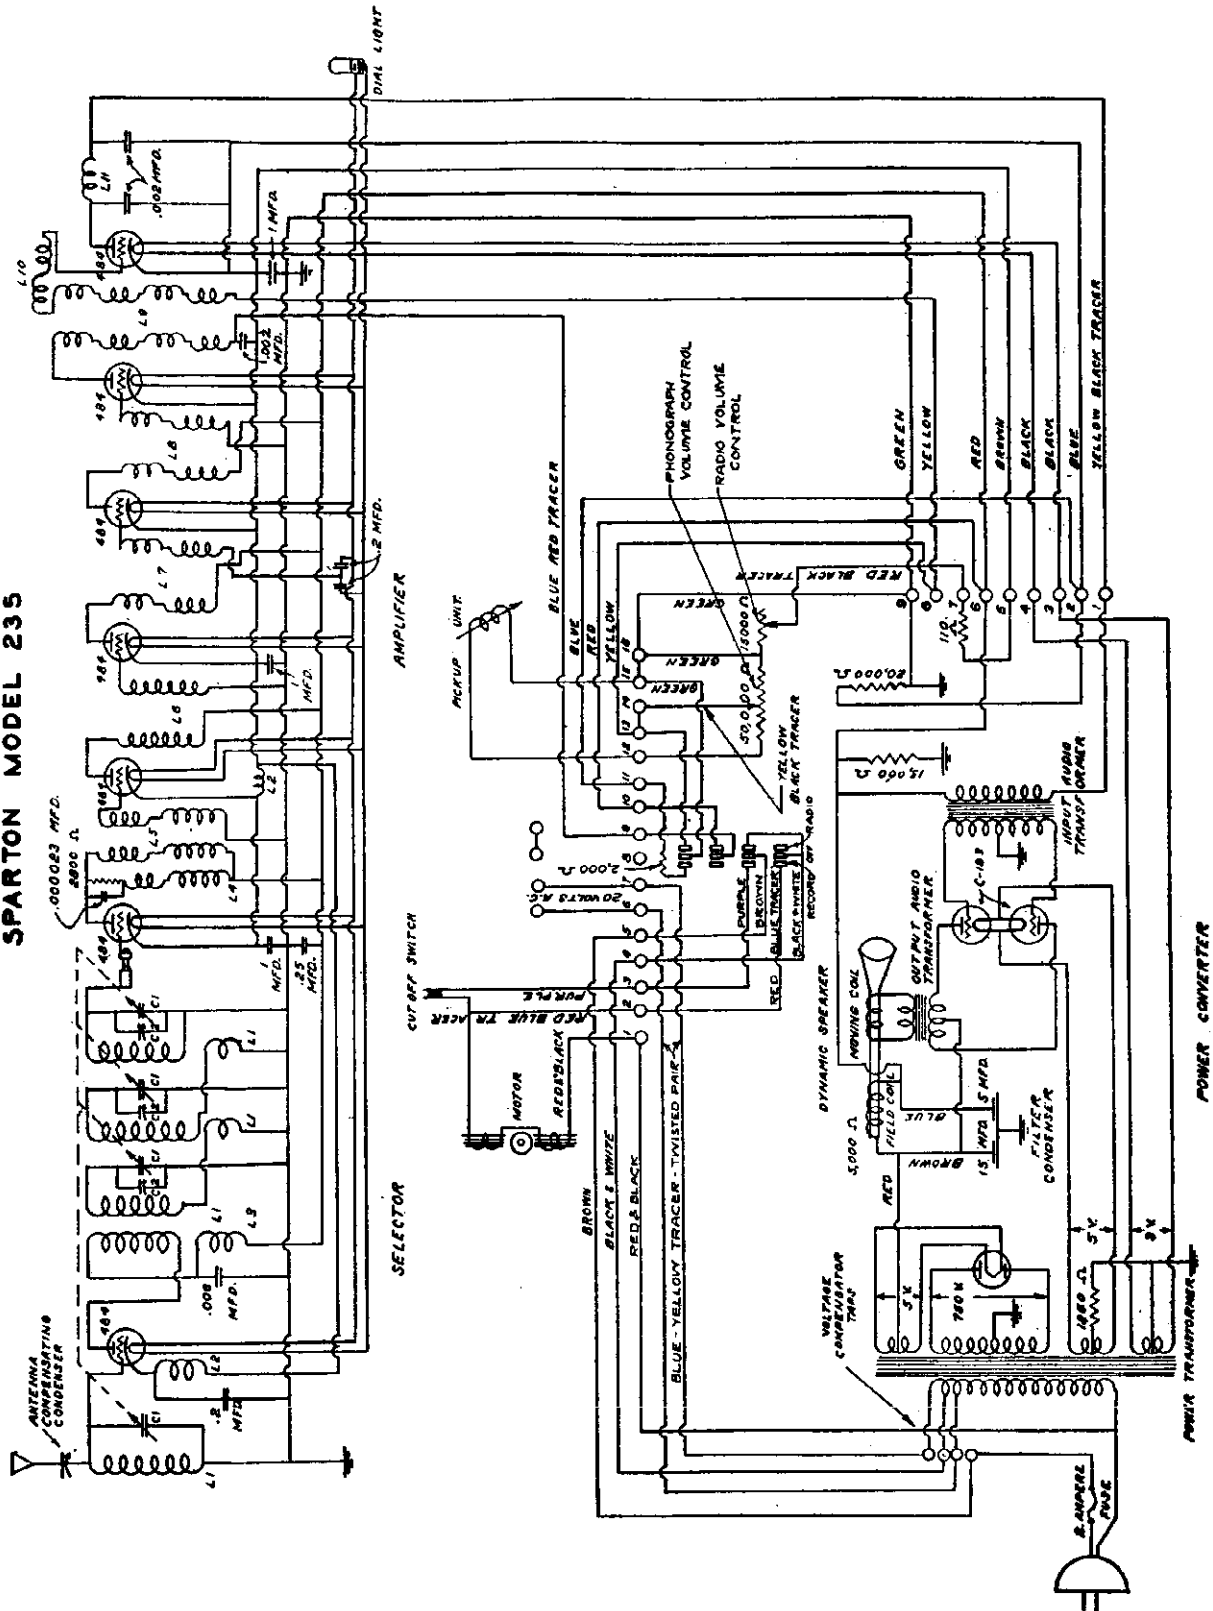


MODEL 420 AC
Chassis

SPARKS WITHINGTON CO.

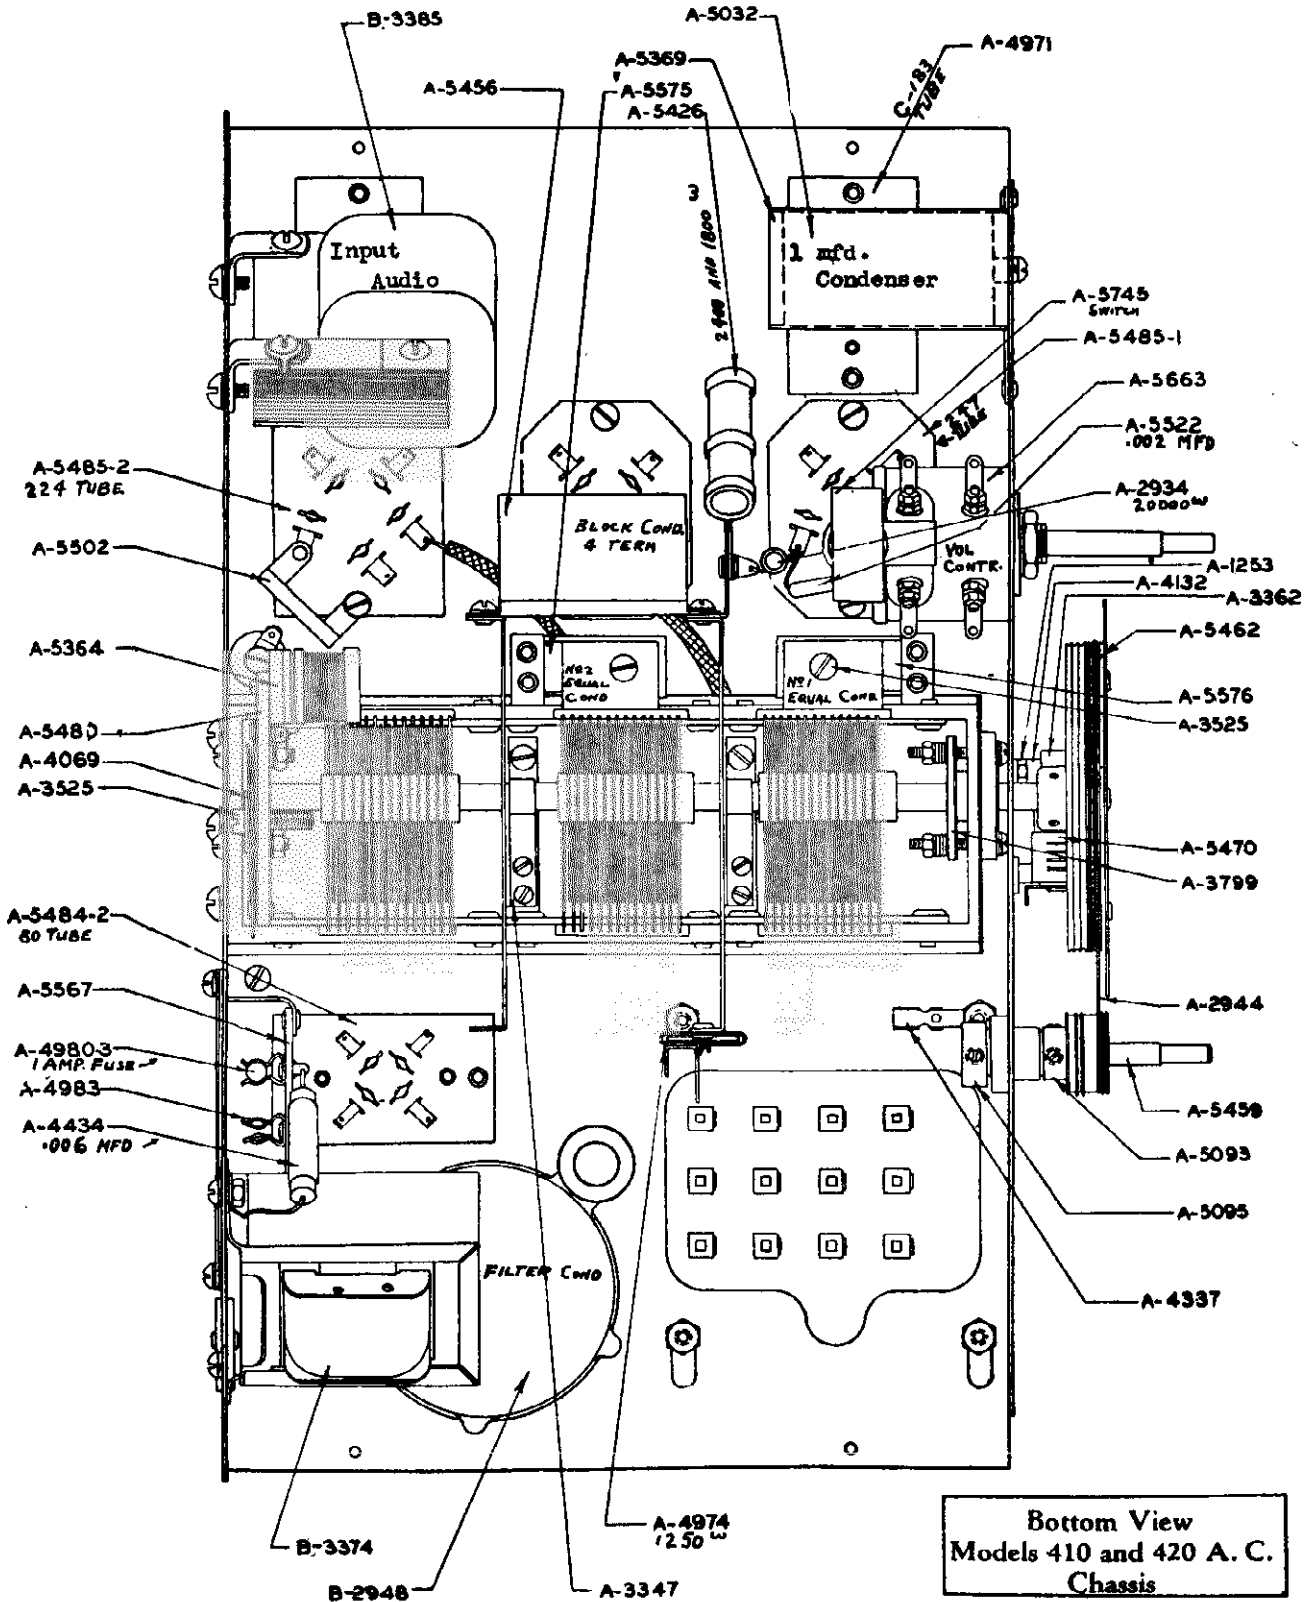

SPARKS WITHINGTON CO.

MODEL 420 DC
Schematic

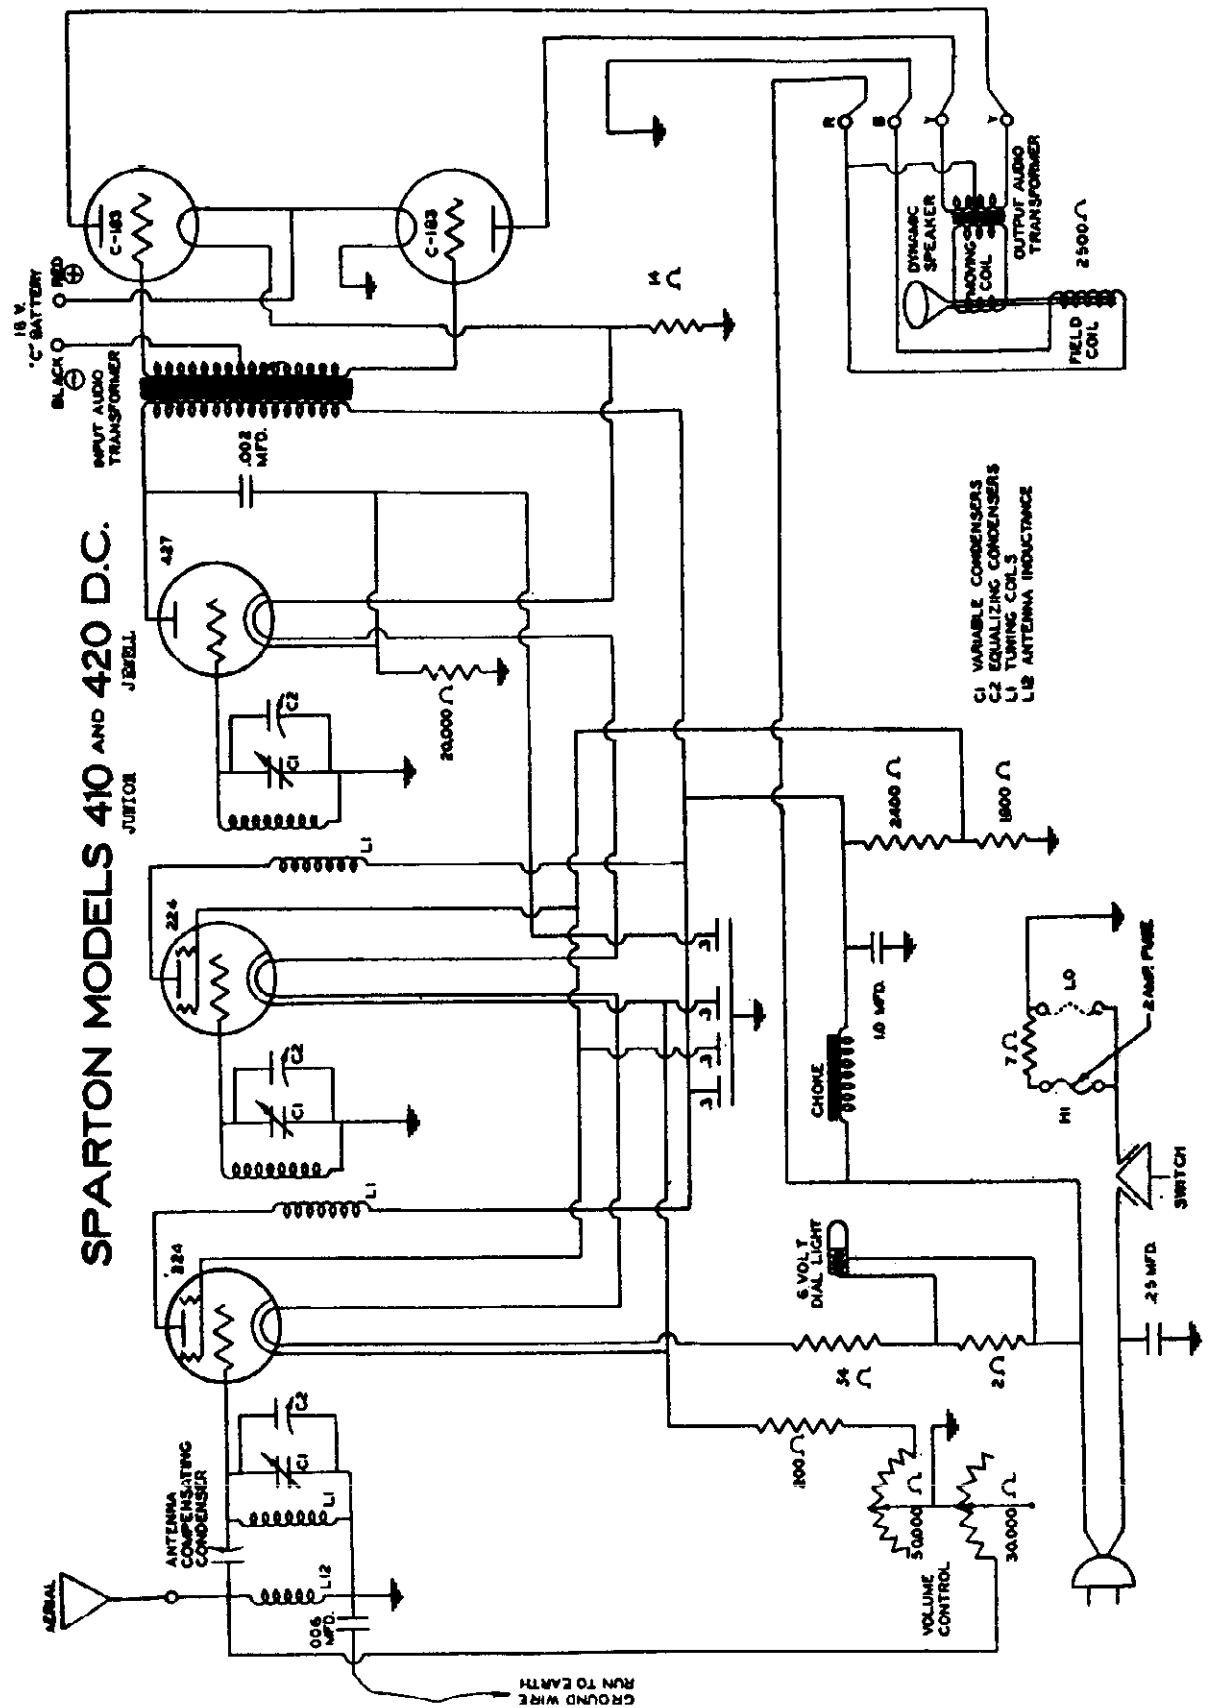

SPARTON MODELS 410 AND 420 D.C.

MODEL 564,570,
740,750 AC

SPARKS WITHINGTON CO.

SPARTON—Model
Line Voltage 120—Set on 120-130 Volt Tap—Volume
Control Position Max
#250 or 585 types tubes.

TUBE	TYPE	NO.	POSITION	TUBE DATA		RESISTANCE VALUE IN OHMS OF NET		TUBE IN TESTER		REMARKS	
				VOLTS	AMPS	PLATE	GRID	PLATE	GRID		
1	484	585	1ST AF	150	2.9	120	4.5	7.5	13	5.5	
2	484	585	2ND AF	150	2.9	120	4.5	7.5	13	5.5	
3	484	585	3RD AF	150	2.9	120	4.5	7.5	13	5.5	
4	484	585	4TH AF	150	2.9	120	4.5	7.5	13	5.5	
5	484	585	5TH AF	150	2.9	120	4.5	7.5	13	5.5	
6	484	585	6TH AF	150	2.9	120	4.5	7.5	13	5.5	
7	484	585	7TH AF	150	2.9	120	4.5	7.5	13	5.5	
8	484	585	8TH AF	150	2.9	120	4.5	7.5	13	5.5	
9	250	585	1ST A	250	7.25	350	10	40	45	5	
10	250	585	2ND A	250	7.25	350	10	40	45	5	
11	250	585	3RD A	250	7.25	350	10	40	45	5	
12	250	585	4TH A	250	7.25	350	10	40	45	5	
13	250	585	5TH A	250	7.25	350	10	40	45	5	
14	250	585	6TH A	250	7.25	350	10	40	45	5	
15	250	585	7TH A	250	7.25	350	10	40	45	5	
16	250	585	8TH A	250	7.25	350	10	40	45	5	
17	250	585	9TH A	250	7.25	350	10	40	45	5	
18	250	585	10TH A	250	7.25	350	10	40	45	5	


*Models 740 and 750—1 Additional 484 Tube in Selector

SELECTOR

- C1 VARIABLE CONDENSERS
- C2 EQUALIZING CONDENSERS
- L1 TUNING COILS
- L2 CATHODE COIL
- L3 R.F. CHOKER COIL
- L4 FIRST PLATE COIL
- L5 COUPLING COIL
- L6 FIRST R.F. TRANSFORMER
- L7 SECOND R.F. TRANSFORMER
- L8 THIRD R.F. TRANSFORMER
- L9 FOURTH R.F. TRANSFORMER
- L10 GRID COIL
- L11 DETECTOR PLATE CHOKER

AMPLIFIER

- L6 FIRST R.F. TRANSFORMER
- L7 SECOND R.F. TRANSFORMER
- L8 THIRD R.F. TRANSFORMER
- L9 FOURTH R.F. TRANSFORMER
- L10 GRID COIL
- L11 DETECTOR PLATE CHOKER

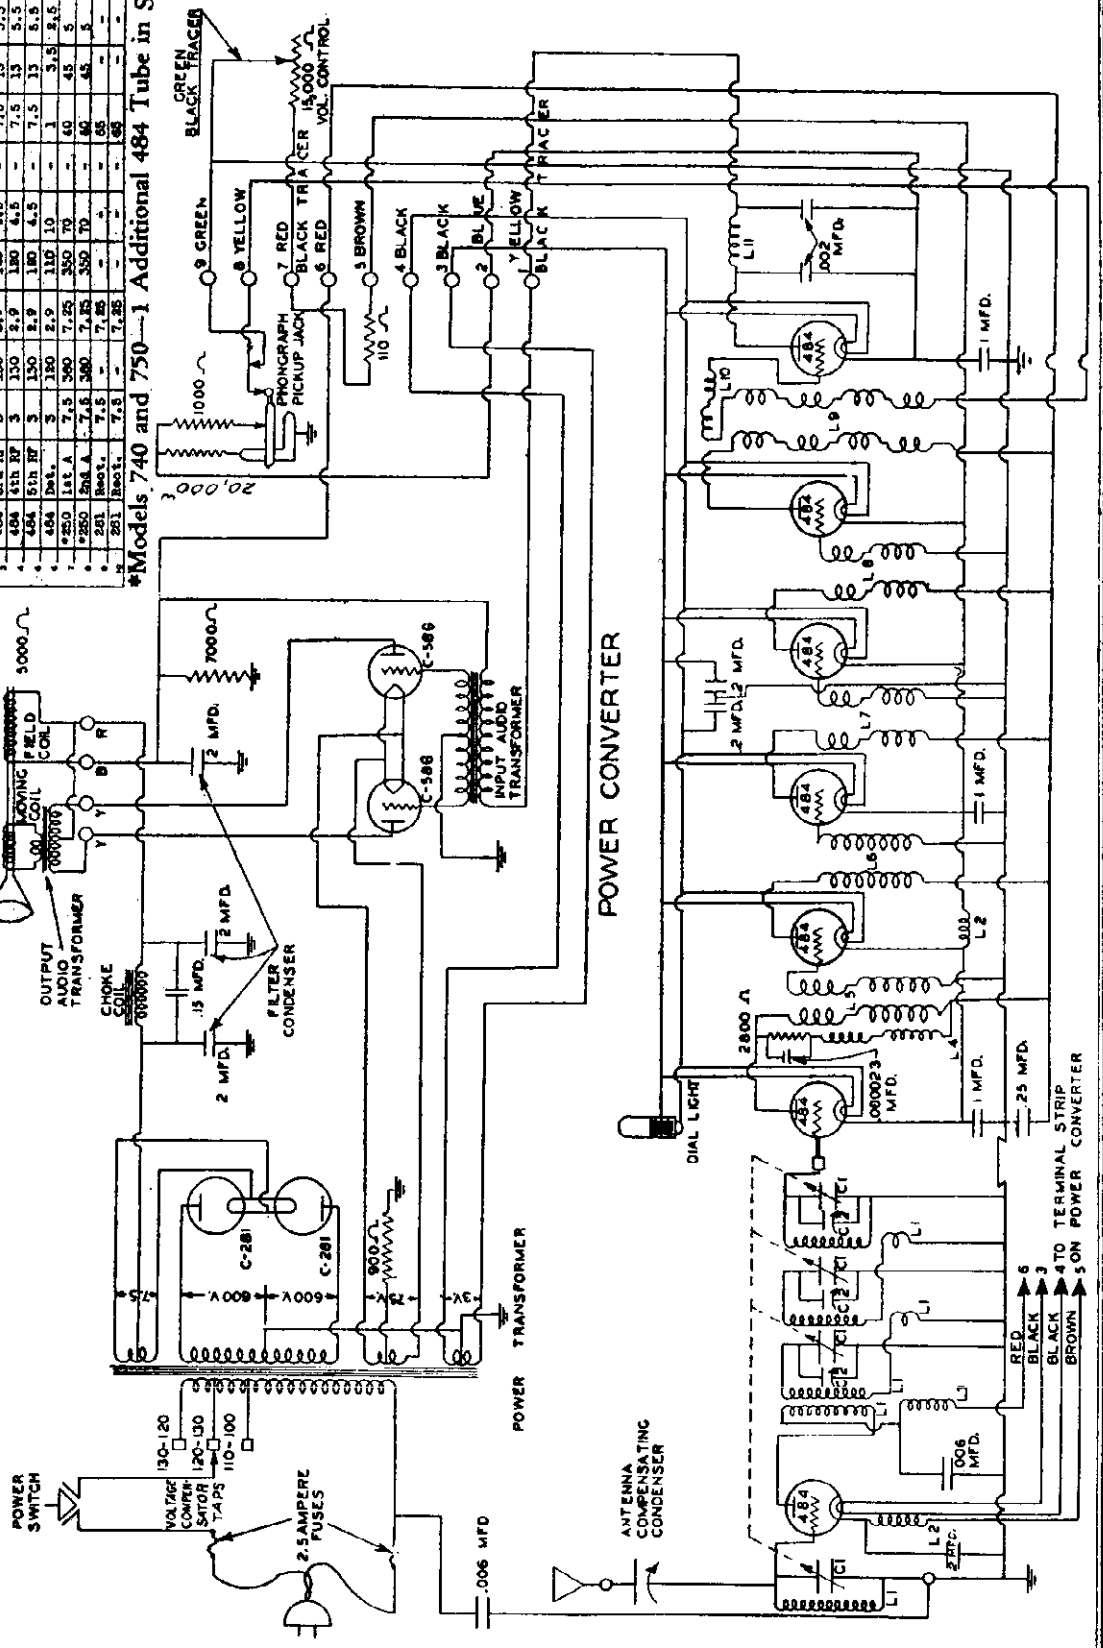

- RED → 6
- BLACK → 3
- BLACK → 4
- BROWN → 5

- RED → 6
- BLACK → 3
- BLACK → 4
- BROWN → 5

SPARKS WITHINGTON CO.

Resistor
Color Code

Standard Resistor Color Code and Resistors Used In Sparton Radio Receiving Sets and Sparton Ensembles

STANDARD RESISTOR COLOR CODE

0—Black	5—Green
1—Brown	6—Blue
2—Red	7—Violet
3—Orange	8—Gray
4—Yellow	9—White

To determine the value of a resistor, the first significant figure of resistance value is represented by the color of the body of the re-

sistor, and the second figure of resistance value by the color of the tip of the resistor. The number of ciphers following the second figure is determined by the color of the dot or stripe in the center of the body of the resistor. For example, a 20,000 ohm resistor has a red body, black tip, with orange dot or orange stripe. A 2,200 ohm resistor would be red body, with red tip and red dot, or red stripe, and as all colors are the same, it would be a single color resistor.

SPARTON PART NO.	RESISTANCE, OHMS	SIZE, WATTS	OLD COLOR	STANDARD RESISTOR COLOR CODE		
				BODY	TIP	DOT OR STRIPE
A-2934	20,000	2	Green	Red	Black	Orange
A-3397	1,000	2	Tan	Brown	Black	Red
A-3397-X	1,000	0.5	Tan	Brown	Black	Red
A-3423	50,000	2	Red	Green	Black	Orange
*A-3750	1,250	3	Black, Silver Ends	Brown	Orange	Red
A-4107	15,000	5	Black, Silver Ends	Brown	Green	Orange
A-4234	250,000	5	Brown, Blue Ends	Red	Green	Yellow
A-4261	20,000	1	Green	Red	Black	Orange
A-4353	2,800	0.5	Gray	Red	Gray	Red
A-4613	1,700	1	Brown	Brown	Violet	Red
A-4614	10,000	1	Blue	Brown	Black	Orange
A-5139	30,000	1	Red	Orange	Black	Orange
A-5180	5,000	15	Green	Green	Black	Red
A-5269	500,000	1	Green	Black	Black	Yellow
A-5270	250,000	1		Red	Green	Yellow
A-5354	100,000	1		Brown	Black	Yellow

*1250 ohm resistors same color scheme as 1300 ohm resistors.

Standard Resistor Color Code Is Not Applied to Vitreous Enamel Resistors

SPARTON PART NO.	RESISTANCE OHMS	SIZE WATTS	COLOR	SPARTON PART NO.	RESISTANCE OHMS	SIZE WATTS	COLOR
A-4363	7	20	Blue	A-4365	15	50	Blue
A-4364	12	30	Blue	A-5177	160	1	Blue
A-4365	63	10	Blue	A-5426	2,400-1,800	8	Blue
A-5889	54	175	Blue	A-5990	14	6	Blue


Standard Color Code Is Not Applied to Wire Wound Resistors

SPARTON PART NO.	RESISTANCE OHMS	SIZE, WATTS	COLOR	SPARTON PART NO.	RESISTANCE OHMS	SIZE, WATTS	COLOR
A-3383	3,000	10	Black	A-4915	110	1	Black
A-3535	7,000	10	Black	A-4974	1,250	5	Gray
A-3536	900	10	Black	A-5137	330	1	Gray
A-3811	30,000	0.5	Black	A-5502	200	1	Red
A-4260	7,000-2,000	20	Black	A-5861	57	175	Blue
A-4363	7	20	Black	A-5862	12	10	Blue
A-4583	7,000	10	Black	A-5863	2	5	Blue
A-4670	110	1	Black				

MODEL 591, 593 AC

SPARKS WITHINGTON CO.

SPARTON MODELS
591 AND 593 RECEIVER

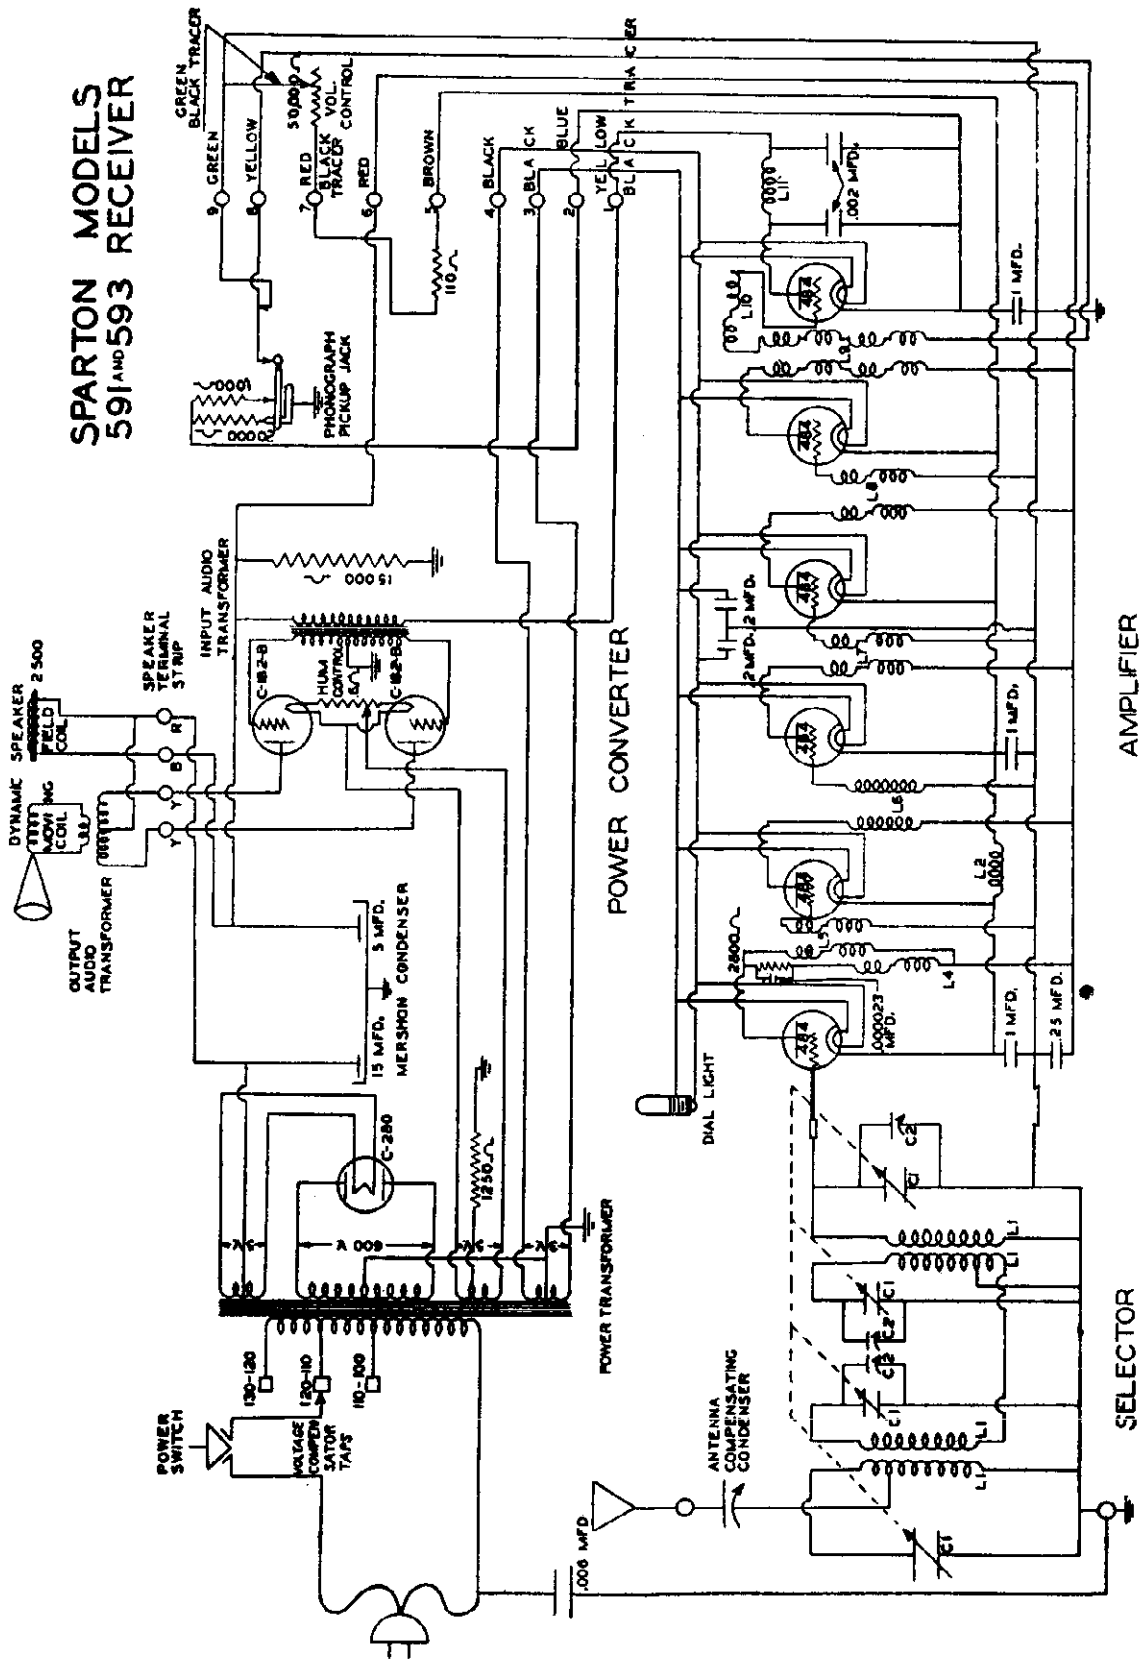

For Voltage Data See Model 589

- C1 VARIABLE CONDENSERS
- C2 EQUALIZING CONDENSERS
- L1 TUNING COILS
- L2 CATHODE COIL
- L4 FIRST PLATE COIL
- L5 COUPLING COIL
- L6 FIRST R.F. TRANSFORMER
- L7 SECOND R.F. TRANSFORMER
- L8 THIRD R.F. TRANSFORMER
- L9 FOURTH R.F. TRANSFORMER
- L10 FREE GRID COIL
- L11 DETECTOR PLATE CHOKE

AMPLIFIER


SELECTOR

POWER CONVERTER

SPARKS WITHINGTON CO.

MODEL DC 564,570
600,610,620,740,750


SPARTON MODELS
600, 610, 620, 740 and 750 D. C.
Also 564-570

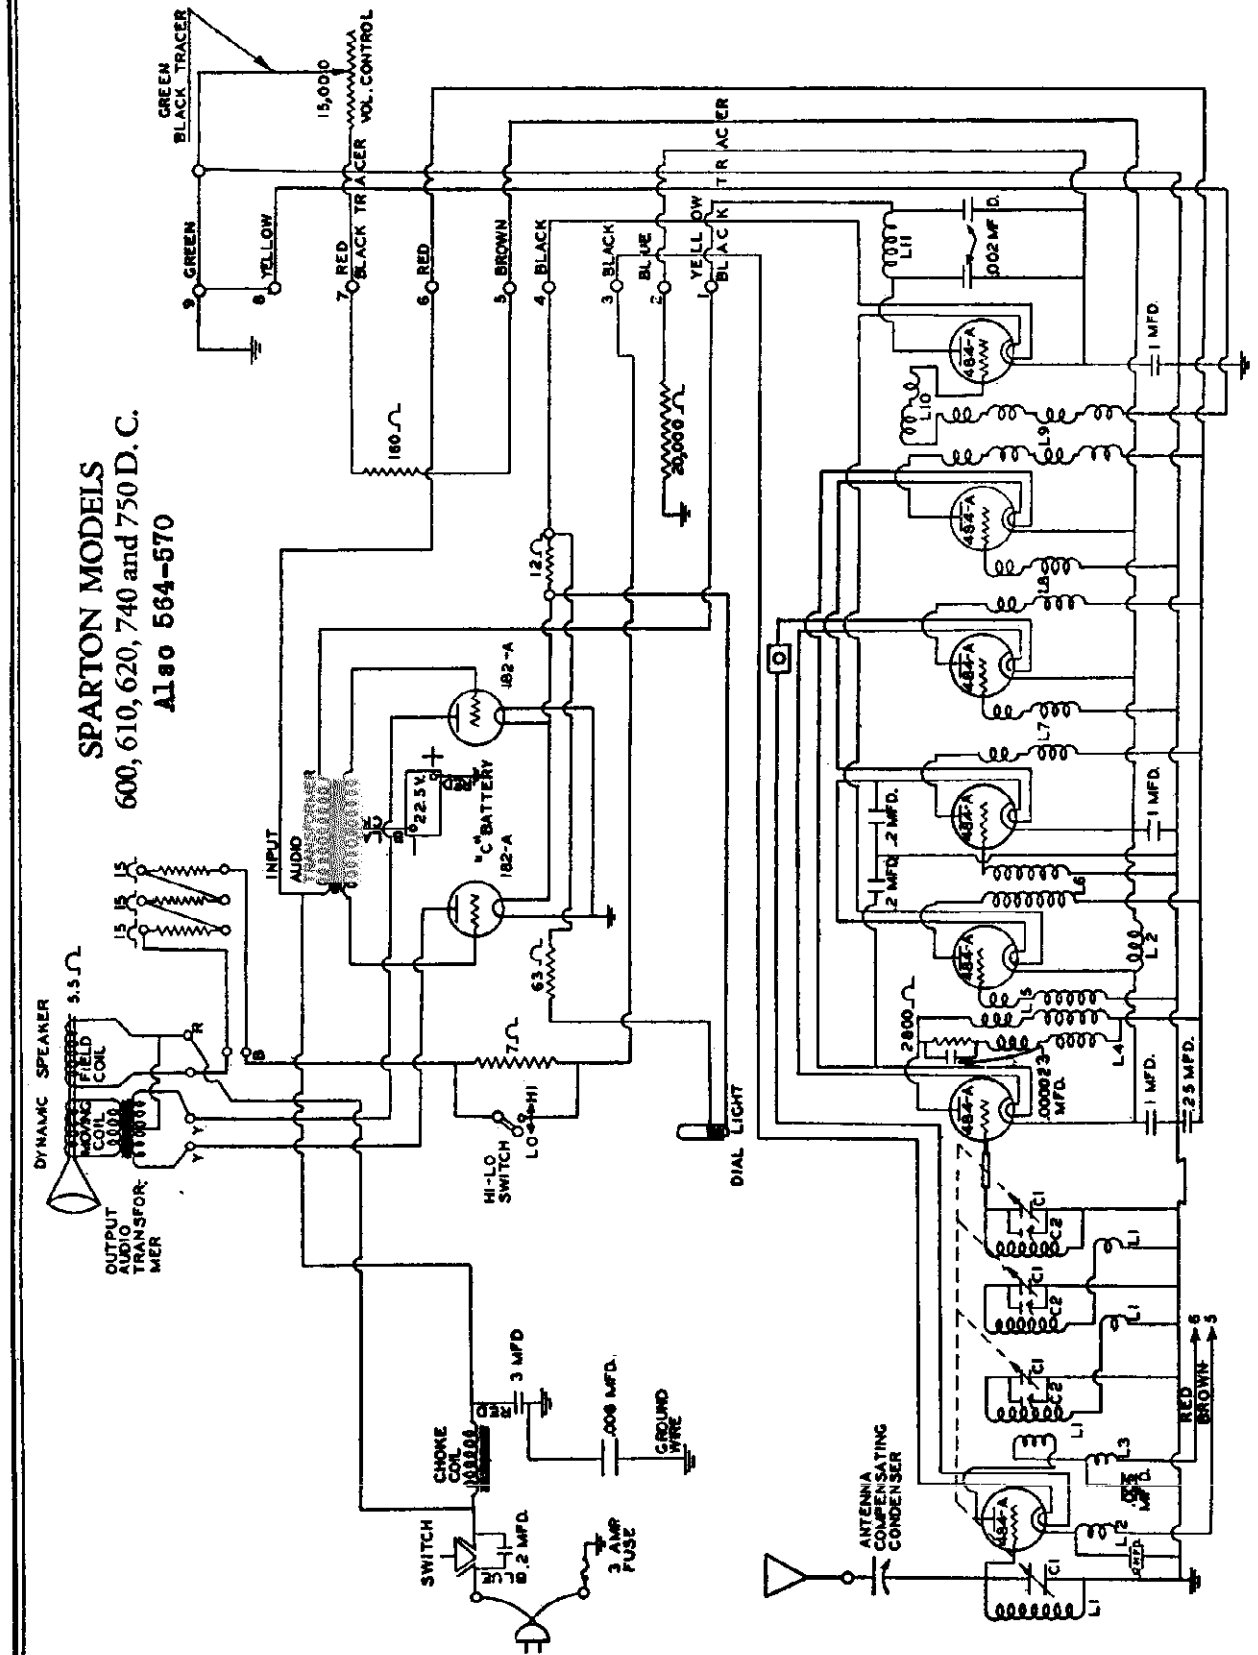


- C1 VARIABLE CONDENSERS
- C2 EQUILIBRATING CONDENSERS
- L1 TUNING COILS
- L2 CATHODE COILS
- L3 R.F. CHOKER COIL
- L4 FIRST PLATE COIL
- L5 SECOND R.F. TRANSFORMER
- L6 THIRD R.F. TRANSFORMER
- L7
- L8
- L9 FIRST R.F. TRANSFORMER
- L10 GRID COIL
- L11 DETECTOR PLATE CHOKER

Power Converter

SPARKS WITHINGTON CO.

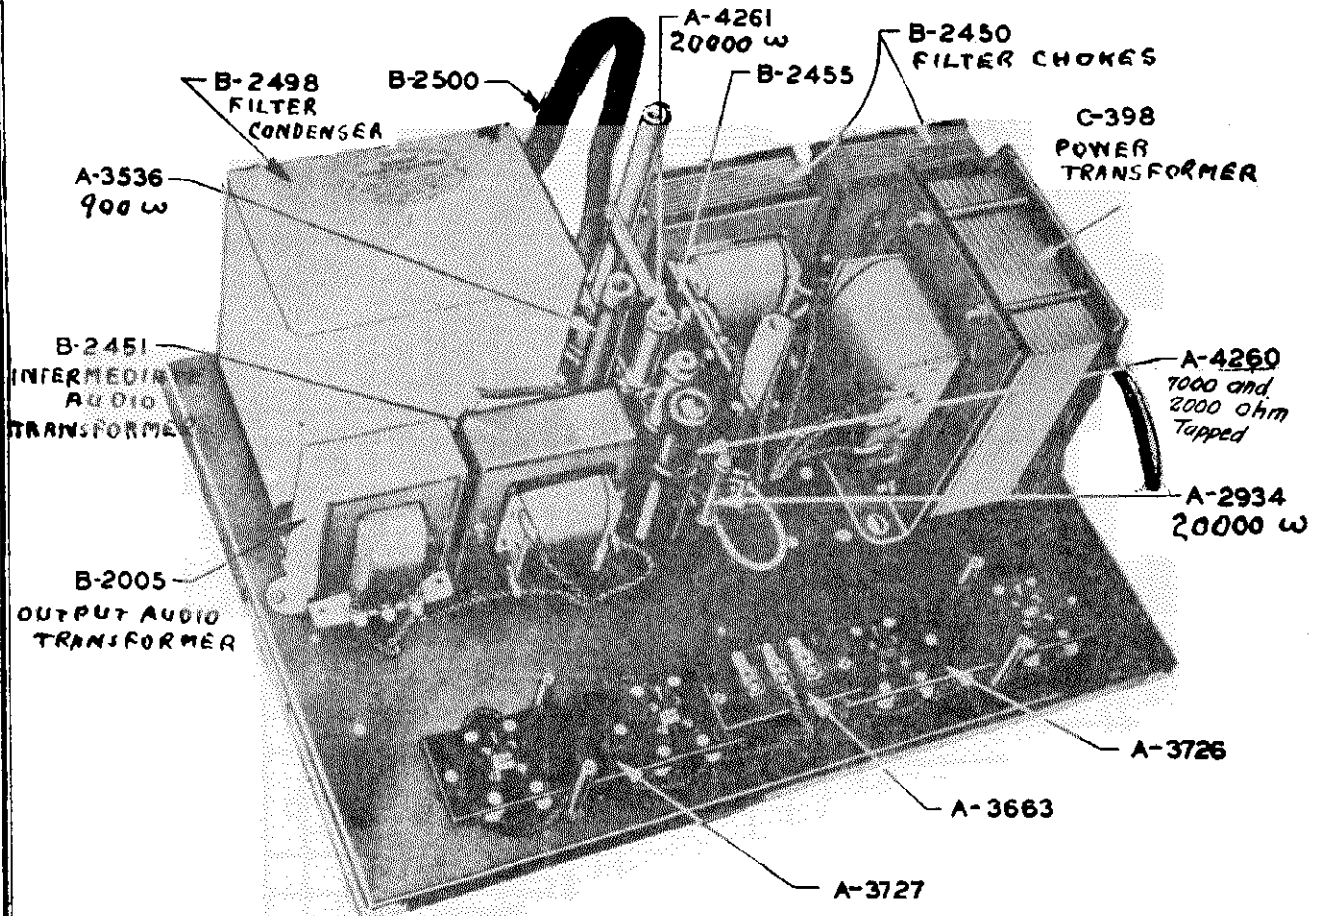


Inside View—Power Converter, Models 111-A and 870 A. C.
ALSO 574

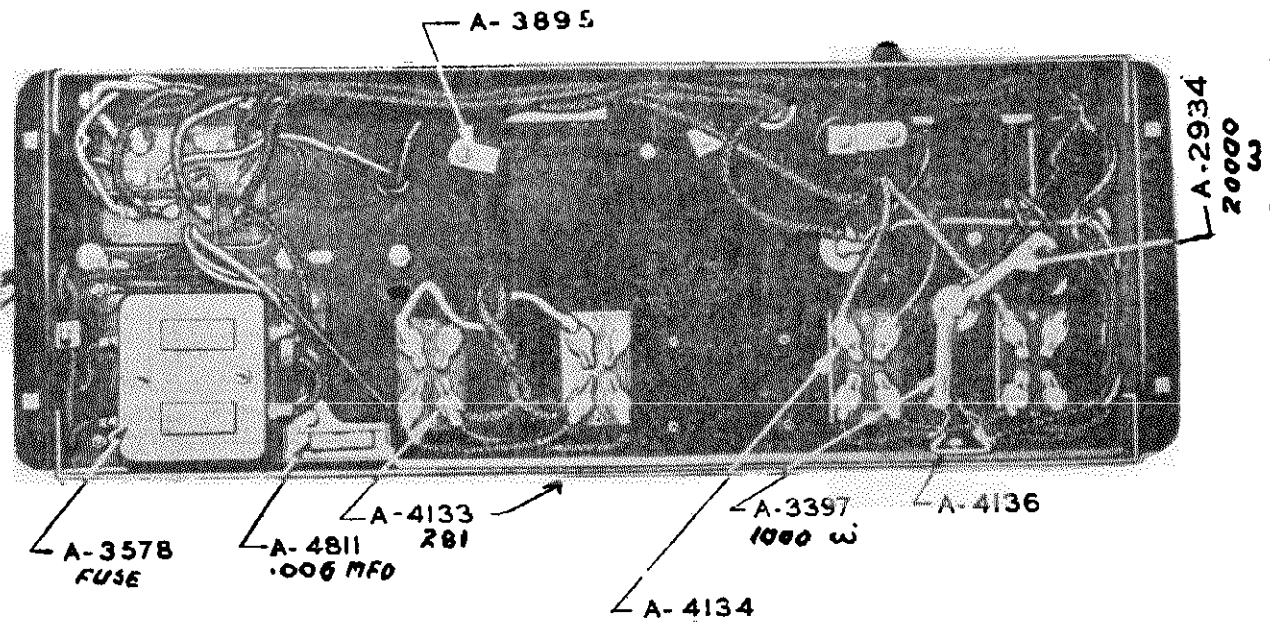

Bottom View—Power Converter, Models 103, 301-A, 578, 740 and 750 A. C.


SPARKS WITHINGTON CO.

Selector Unit

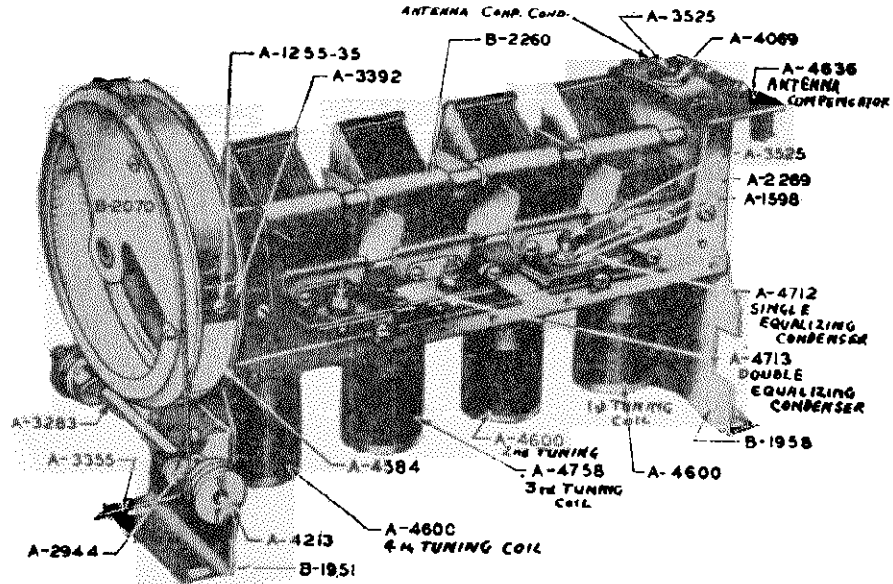


Inside View—Selector Unit Models 301, 591, 593 and 931 A. C. and D. C.

Note: D. C. Models use A-4388 Antenna Compensating Condenser.

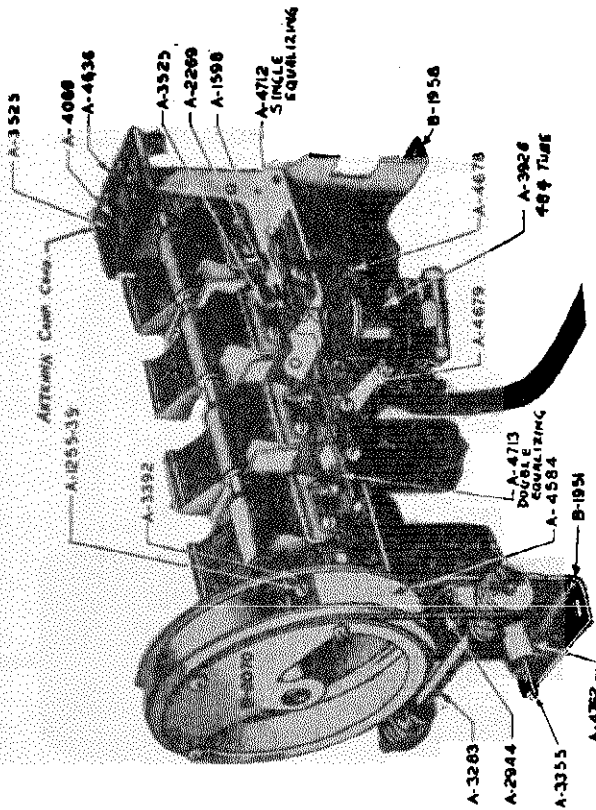

Top View—Selector Unit, Models 103, 111-A, 235, 301-A, 564, 570, 574, 578, 589, 600, 610, 620, 737, 740, 750 and 870 A. C. and D. C.


Note: D. C. Models use A-5276 Antenna Compensating Condenser.

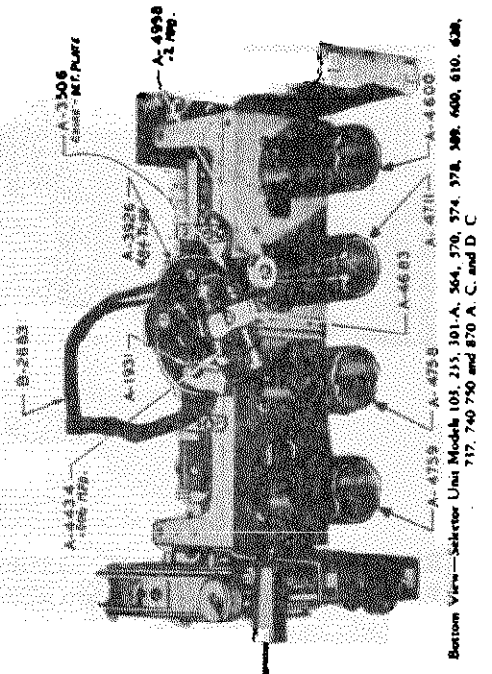

Bottom View—Selector Unit Models 103, 235, 301-A, 564, 570, 574, 578, 589, 600, 610, 620, 717, 740, 750 and 870 A. C. and D. C.



Amplifier Unit
Connector Unit

SPARKS WITHINGTON CO.,

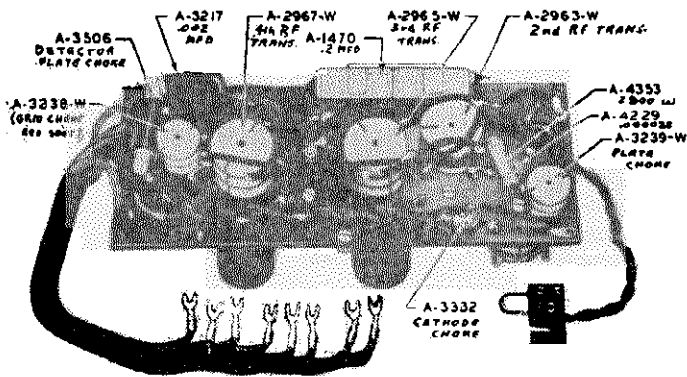

(Left) Bottom Inside View of Amplifier Unit - Models 103 - 111A- 235- 301- 301A- 564- 570- 578- 589- 600- 610- 650- 737- 740- 750- 870- and 931 AC and DC.


(Right) Top Inside View of Amp- lifier Unit- Models 103- 111A- 235- 301- 301A- 564- 570- 574- 578- 589- 591- 593- 600- 610- 620- 737- 740- 750- 870- 931 AC and DC.

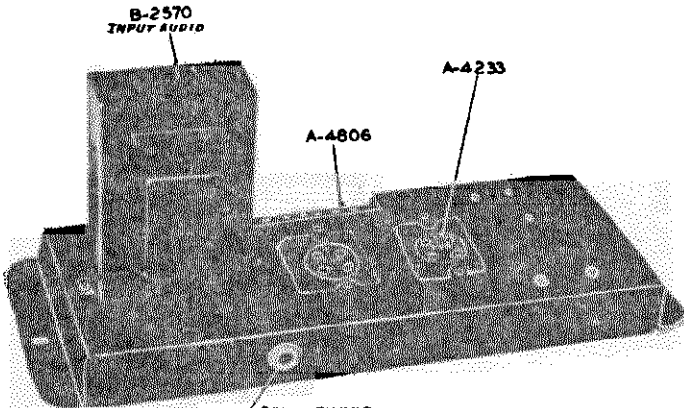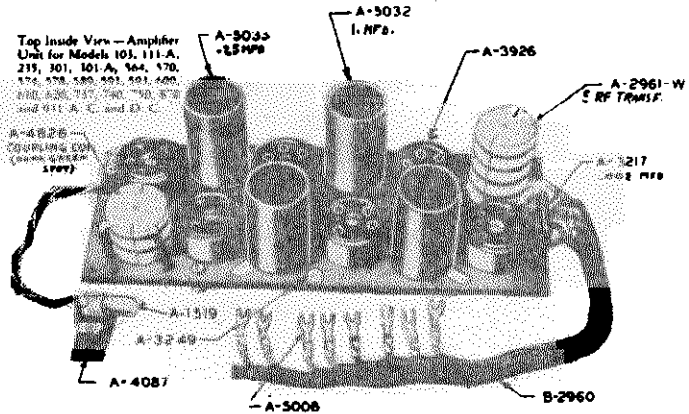

Top View—Connector Unit, Models 111-A and 870 A. C.

(Left) Top View of Connector Unit for Models 111A and 870 AC


(Right) Bottom View of Connector Unit for Models 111A- 574- 870 AC

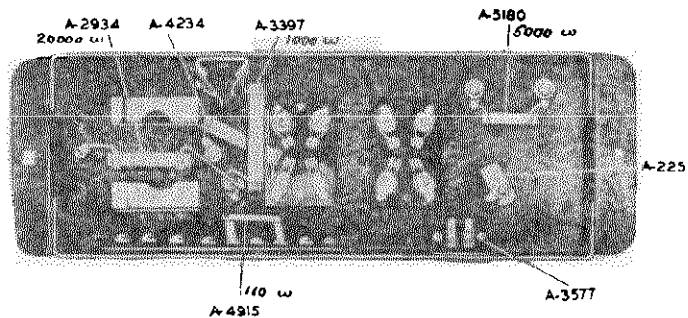


Bottom View—Connector Unit, Models 111-A and 870 A. C. ALSO 574

Power Converter

SPARKS WITHINGTON CO.

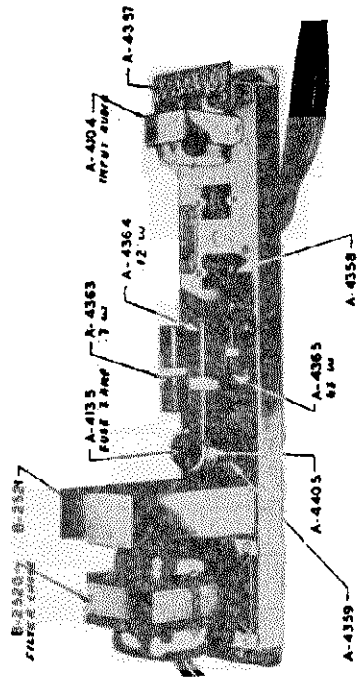


Top View—Power Converter, Models 215, 600, 610, 620, 717, 740, 750 D. C.

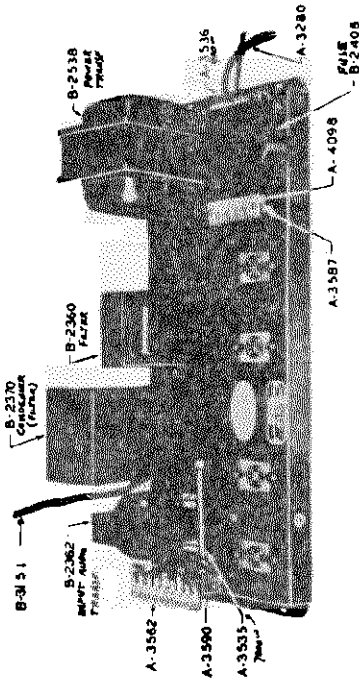


Top View—Power Converter—Models 101, 901-A, 578, 740 and 750 A. C.


Note: Models 101 and 578 use 302-121B cable instead of B-3151, and B-2120 Filter Condenser instead of B-2170, A-1562 Terminal Block, and A-1590 Terminal Block Brackets are not used

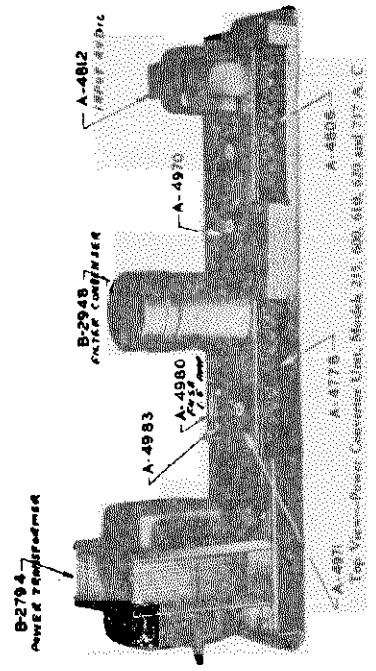


Top View—Power Converter, Models 589, 591, 593 and 911 A. C.

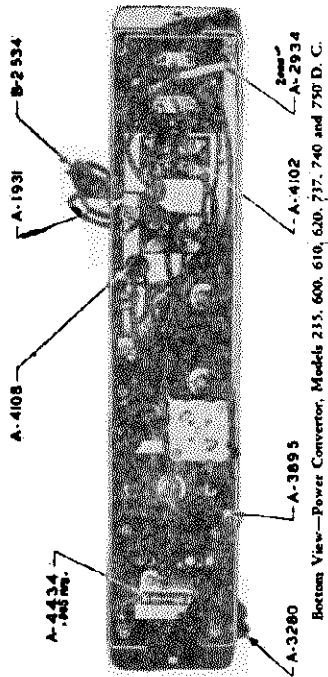


Bottom View—Power Converter, Models 215, 600, 610, 620, 717, 740 and 750 D. C.

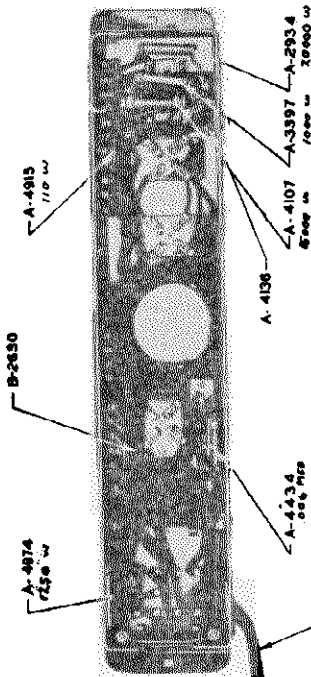

Bottom View—Power Converter, Models 215, 600, 610 and 620 A. C.

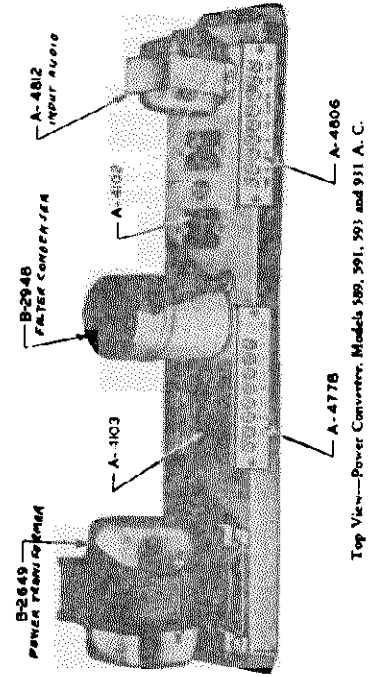

Bottom View—Power Converter, Models 589, 591, 593 and 911 A. C.

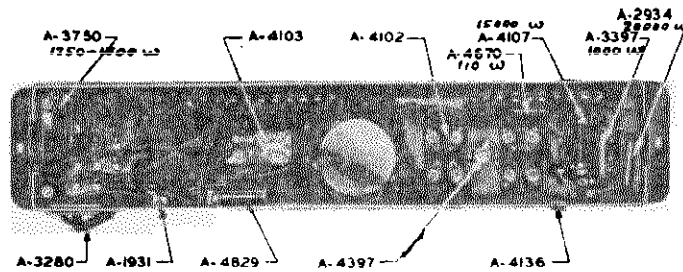

Bottom View—Power Converter, Models 589, 591, 593 and 911 A. C.

Sparton
Tube Data


SPARKS WITHINGTON CO.

Characteristics of Sparton Tubes

Type	Base	Use	"A" Supply	Filament Voltage	Filament Current Amperes	Detector Plate Voltage	Detector Plate Current Milli-Amps	Amplifier Plate Voltage	Grid Voltage	Amplifier Plate Current Milli-amps	Plate Impedance Ohms	Mutual Conductance Micromhos	Amplification Factor
C-112-A	Standard 4 prong	Power Amplifier	Stor. 6 volt Transformer 5 volts	5.0	0.25	-----	-----	135 157.5 180	-9.0 -10.5 -13.5	7.0 9.5 7.8	5000 4700 4700	1600 1700 1700	8.0
C-181	Side Pin 4 prong	Power Amplifier	Transformer 3 Volts	3.0	1.3	-----	-----	200	-40	16	2850	1050	3.0
C-182	Standard 4 prong	Power Amplifier	Transformer 5 Volts	5.0	0.9	-----	-----	200	-45	18	2000	1500	3.0
C-182-A	Standard 4 prong	Direct Current Power Amplifier	Transformer 5 Volts	5.0	0.8	-----	-----	200	-45	18	2000	1500	3.0
C-182-B	Standard 4 prong	Power Amplifier	Transformer 5 Volts	5.0	1.25	-----	-----	200	-29	18	3330	1500	5.0
C-183	Standard 4 prong	Power Amplifier	Transformer 5 Volts	5.0	1.25	-----	-----	200	-45	20	2000	1500	3.0
C-210	Standard 4 prong	Power Amplifier	Transformer 7.5	7.5	1.25	-----	-----	350	-27	20	5500	1450	8.0
C-231	Standard 4 prong	Power Amplifier	6 dry cells Series Parallel	2.0	0.150	-----	-----	135	-22.5	8.0	4000	875	3.5
C-245	Standard 4 prong	Power Amplifier	Transformer 2.5	2.5	1.5	-----	-----	180 250	-33 -50	26 32	1460 2250	2400 1450	3.5
C-586	Standard 4 prong	Power Amplifier	Transformer 7.5	7.5	1.25	-----	-----	250 350 450	-45 -63 -84	28 45 55	2150 2000 1950	1575 1700 1750	3.4
C-201-A	Standard 4 prong	Detector Amplifier	Storage 6 volts	5.0	.25	45	1.5	90 135	-4.5 -9.0	2.5 3.0	11000 10000	725 800	8.0
C-230	Standard 4 prong	Detector Amplifier	6 dry cells Series Parallel	2.0	0.060	45	1.5	90	-4.5	2.0	12500	700	8.8
C-401	Side Pin 4 prong	Detector Amplifier	3 Volts	3.0	1.3	45	2	90 120	-3 -4	5.0 6.0	9500 7000	1000 1200	9.5 8.7
C-427	Standard 5 prong	Detector Amplifier	2.5 Volts	2.5	1.75	180	0.8	90	-3	5.0	10800 9300	1150	12.5
C-484	Standard 5 prong	Detector Amplifier	3 Volts	3.0	1.3	135	0.8	90 120	-3 -4	5.0 6.0	10800 9300	1150 1350	12.5
C-484-A	Standard 5 prong	Direct Current Detector Amplifier	3 volts D. C.	3.0	1.6	100	0.5	90 120	-3 -4	5.0 6.0	9300	1150 1350	12.5
C-226	Standard 4 prong	Amplifier	1.5 Volts	1.5	1.05	-----	-----	180	-13.5	6.0	7000	1170	8.2
C-686	Standard 5 prong	Amplifier	Storage 6 volts	3.0	.25	-----	-----	90	-3.0	3.0	28000	450	12.5
C-224	Standard 5 prong	Screen Grid Amplifier	Storage 6 Volt Transformer 2.5 Volt	2.5	1.75	Screen Grid Voltage Plus 90	-----	180	-3.0	4.0	400000	1000	400
C-232	Standard 4 prong	Screen Grid Amplifier	6 dry cells Series Parallel	2.0	0.060	Screen Grid Voltage Plus 67.5	-----	135	-3.0	1.5	800000	550	440
C-280	Standard 4 prong	Full Wave Rectifier	5.0 Volts	5.0	2.0	Max. A. C. Voltage per plate 350 Volts R. M. S. Max. Rectified Current 125 M. A.							
C-281	Standard 4 prong	Half Wave Rectifier	7.5 Volts	7.5	1.25	Max. A. C. Voltage per plate 700 R. M. S. Max. Rectified Current 85 M. A.							


STEINITE RADIO CO.

MODEL 203,600,605,
630,635,642,643
(Chassis 22)

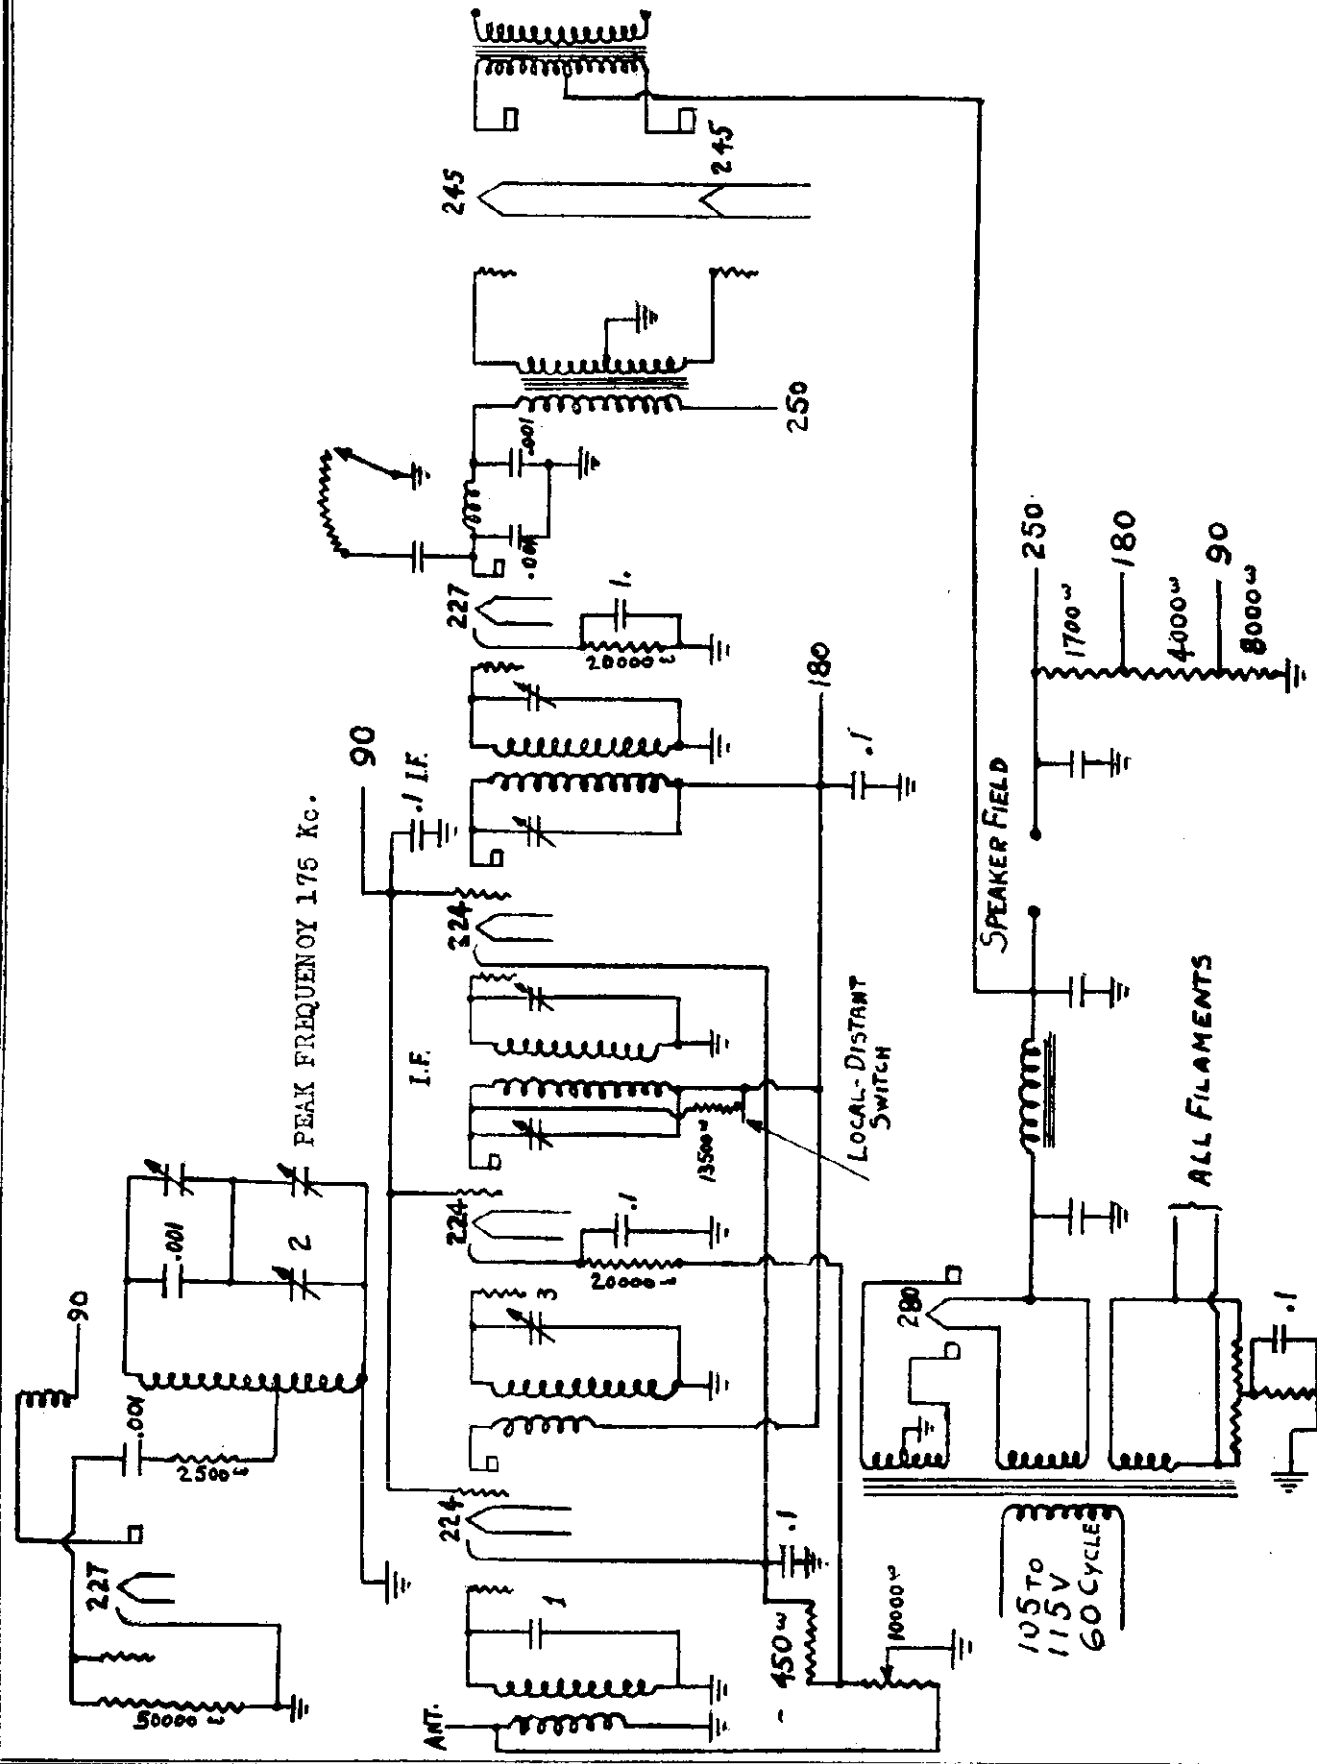

MODEL 421,425
(Chassis 21)
Voltage, Chassis

STEINITE RADIO CO.

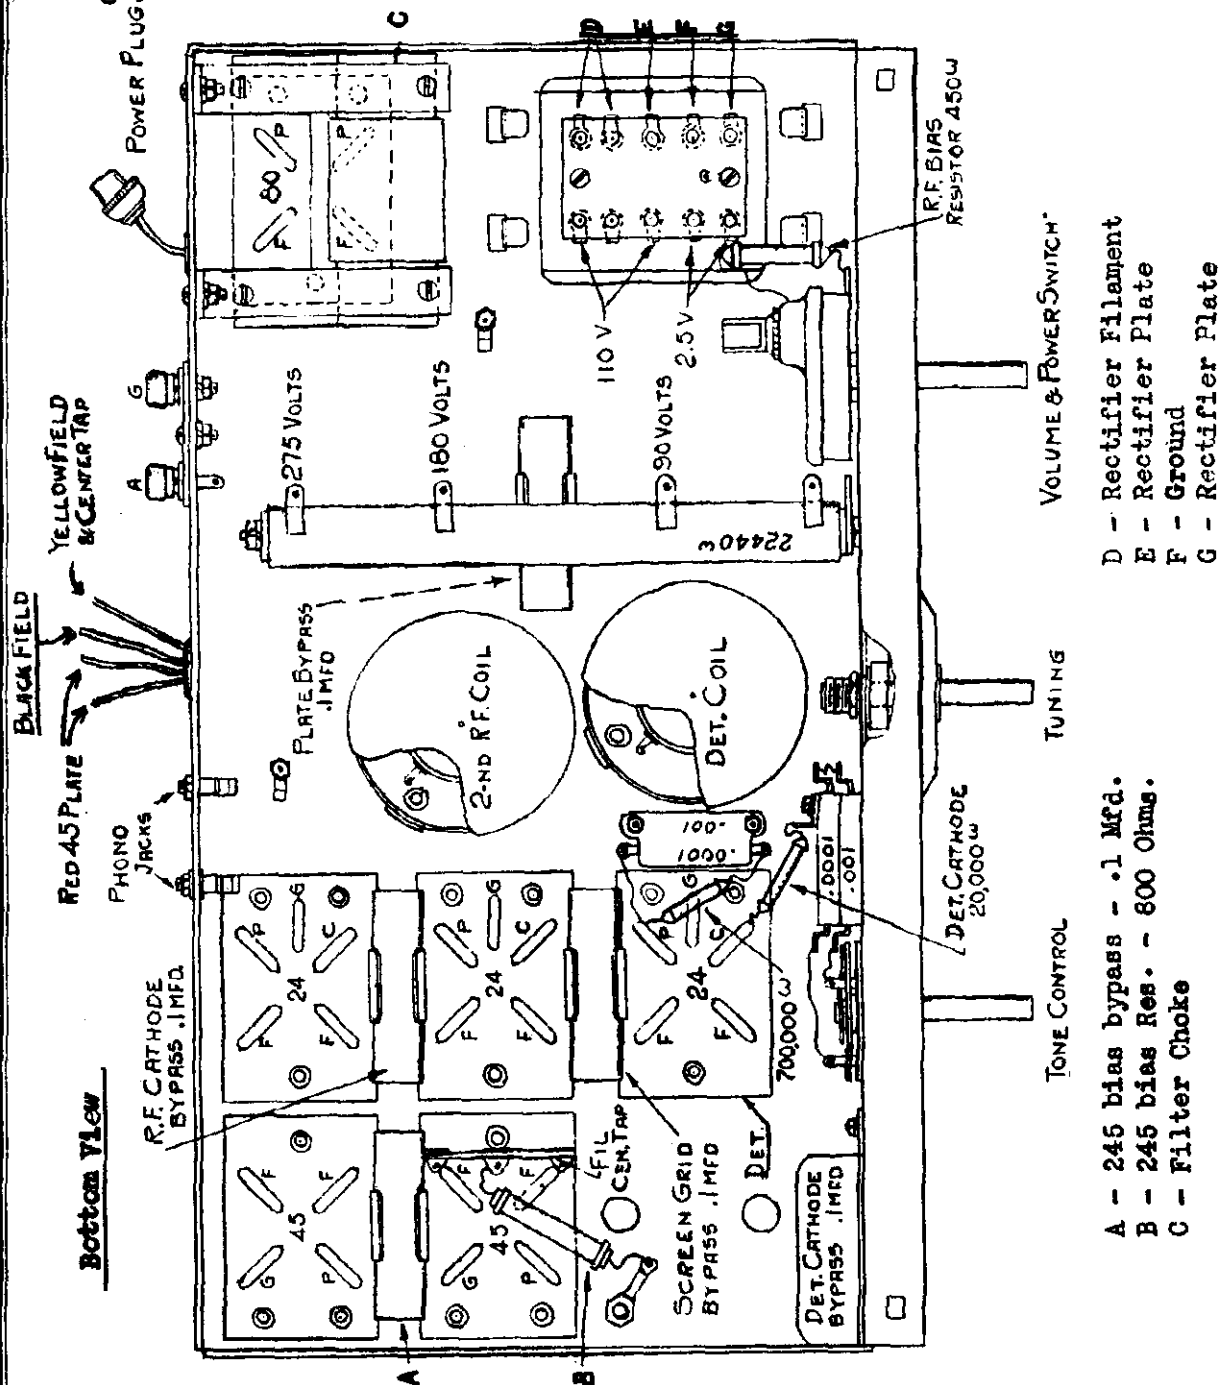

- D - Rectifier Filament
- E - Rectifier Plate
- F - Ground
- G - Rectifier Plate


- A - 245 bias bypass - .1 Mfd.
- B - 245 bias Res. - 800 Ohms.
- C - Filter Choke

Readings obtained with
Line Volt. = 110
Vol. Cont. Max.

'24 and '45 filaments	-----	2.2 v
'80 filament	-----	4.5 v
R.F. screen grids (to ground)	-----	90 v
R.F. plates (to ground)	-----	180 v
Detector Plate (to ground)	-----	250 v
Detector screen grid (to ground)	-----	90 v
R.F. Cathode to ground	-----	
Volume Control Maximum	-----	3 v
Volume Control minimum	-----	10 v
Detector Cathode (to ground)	-----	10 v
'45 plate (to ground)	-----	275 v
All filaments to ground	-----	40 v


STEINITE RADIO CO.

MODEL 421, 425
(Chassis 21)
Schematic

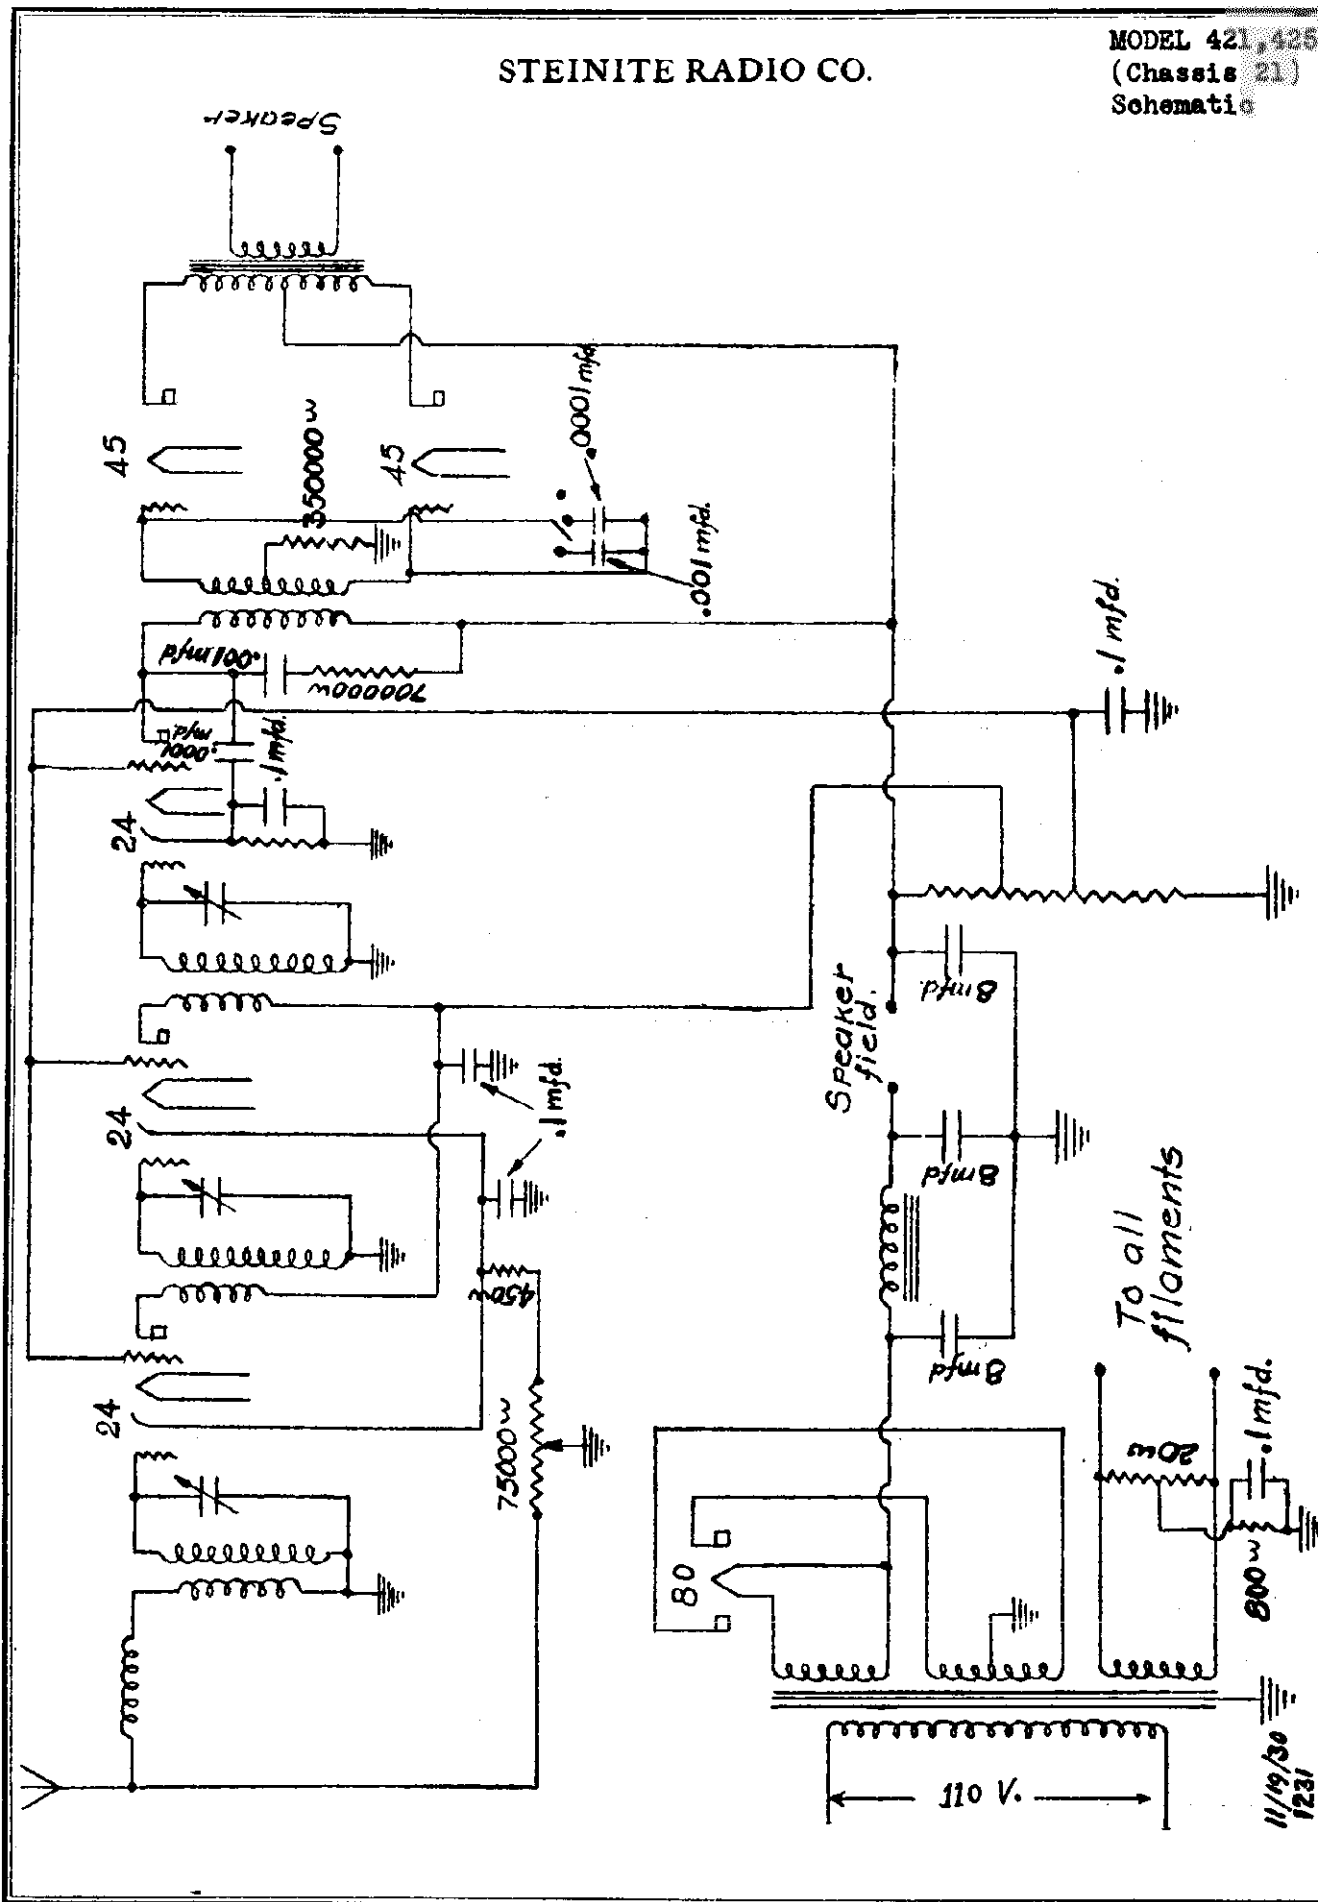

STEINITE RADIO CO.


MODELS 700,705
706,725,642-B
(Chassis 26)
Schematic

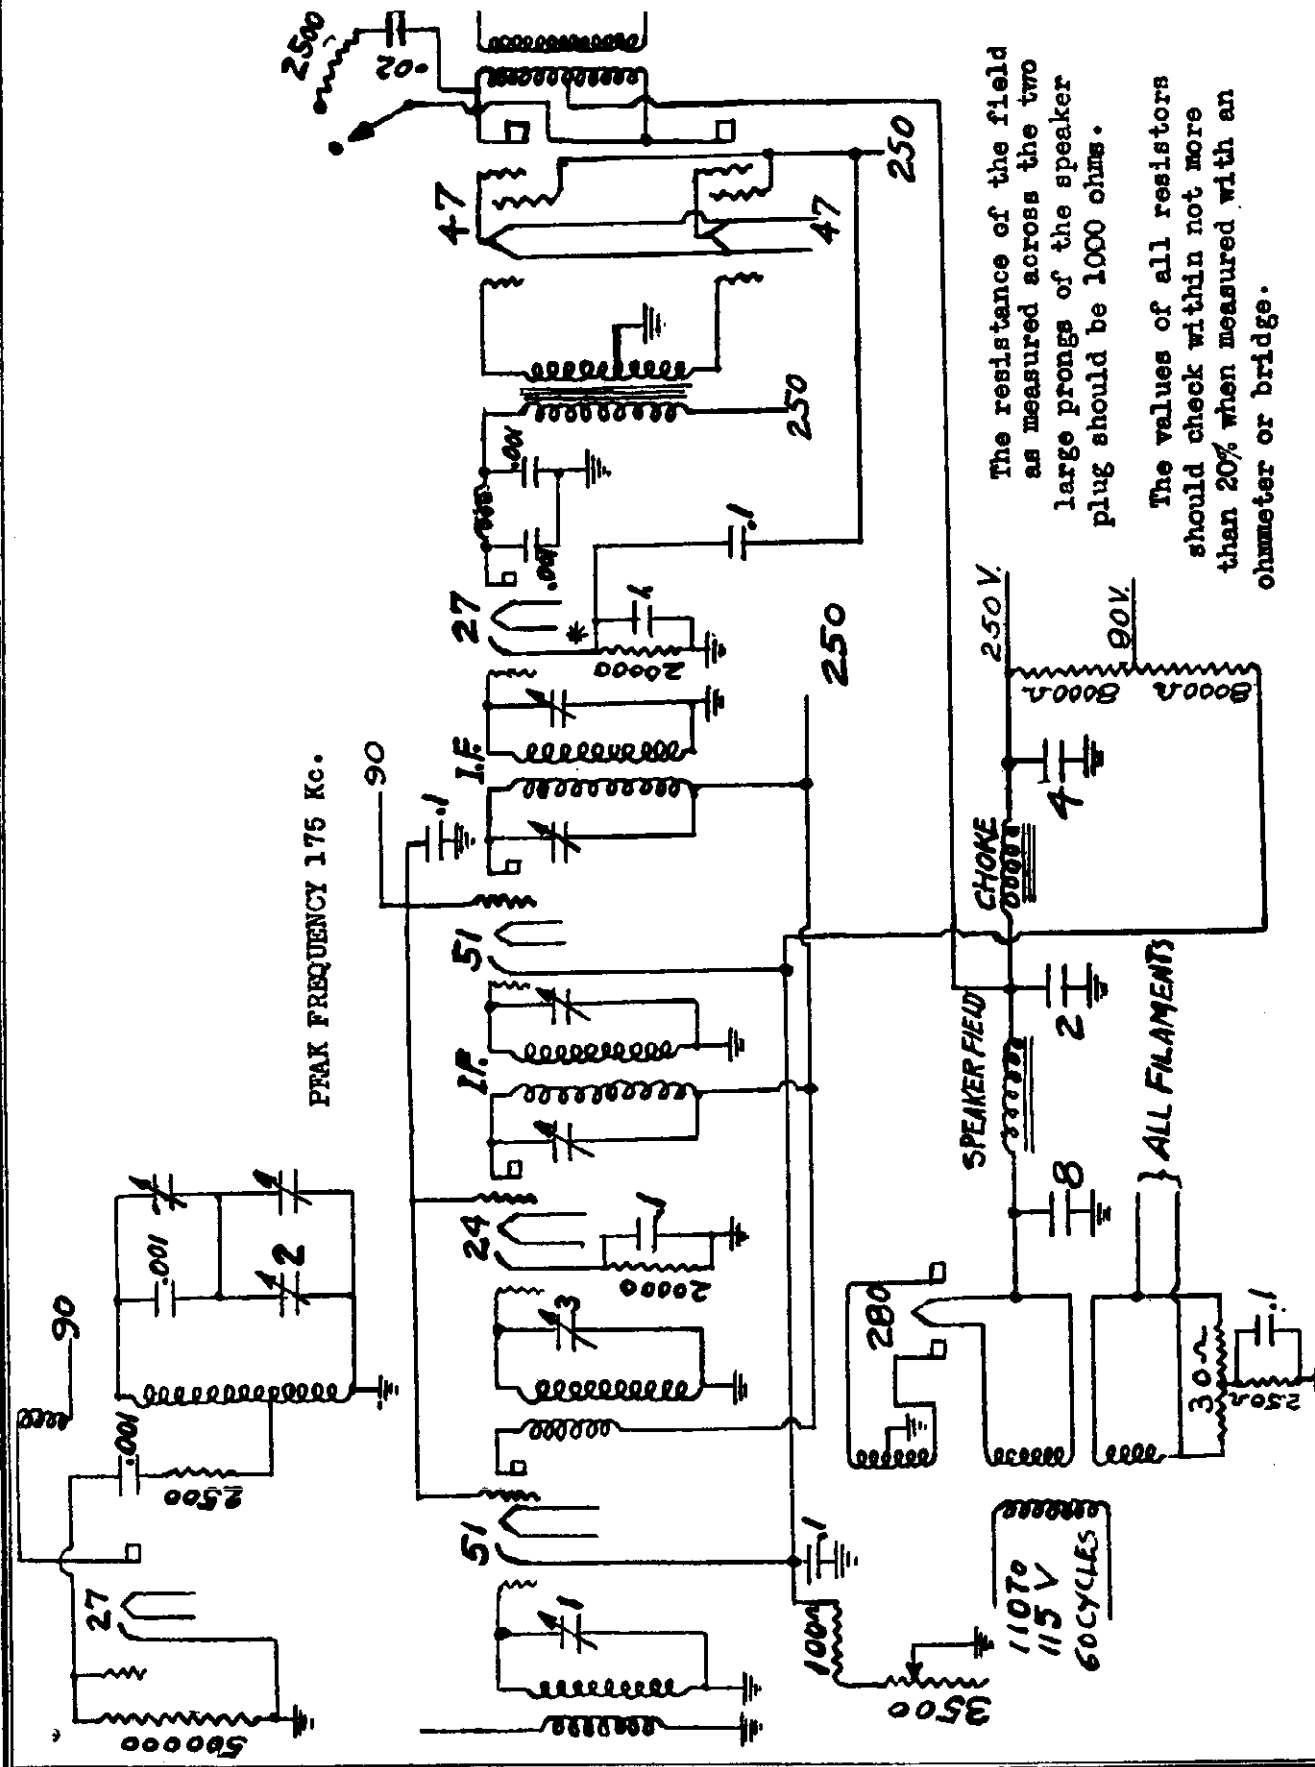

The resistance of the field as measured across the two large prongs of the speaker plug should be 1000 ohms.

The values of all resistors should check within not more than 20% when measured with an ohmmeter or bridge.

PEAK FREQUENCY 175 Kc.

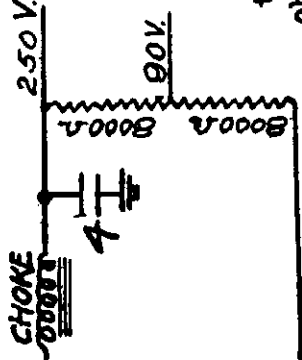

110V
115 V
60 CYCLES

MODELS 700,705
706,725,642-B

STEINITE RADIO CO.

(Chassis 26)
Voltage, Data

If a 175 kilocycle oscillator is available, the receiver may be aligned as follows: (all aligning operations should be made with bottom plate under act)

The output of the 175 K.C. oscillator is connected to the grid of the 1st detector tube and 125 m.a. thermo couple output meter is connected to the voice coil of the loud speaker. The two aligning condensers of each I.F. transformer should then be carefully adjusted for maximum output. These four condensers should be adjusted several times to be certain that all four circuits are tuned to exactly 175 K.C. (Use an insulated screw driver.)

After this has been done a station operating on about 1400 K.C. or preferably a modulated oscillator should be tuned in with the antenna or lead from the oscillator connected to the grid of the R.F. amplifier tube. The tuning dial should be set to correspond to the signal being used. That is, if a 1400 K.C. signal is being used, turn the tuning dial to read 1400 K.C. Then adjust the aligning condenser of the middle section of the gang condenser until maximum output is obtained. The next step is to remove the lead from the grid of the R.F. tube and connect it to the antenna binding post. DO NOT CHANGE THE TUNING DIAL WHILE DOING THIS. Then adjust the aligning condenser on the R.F. section of the condenser (the section at the rear of the chassis) until maximum output is obtained. After this has been completed the receiver is properly aligned at high frequencies.

Next set the oscillator at 600 K.C. or tune in a station near this frequency with the lead from oscillator or the antenna connected to the grid of the R.F. tube. Then adjust the oscillator aligning condenser (mounted in lower center front of chassis) for maximum output. This should be carefully done and at the same time the tuning dial should be changed slightly to see if maximum output is obtained. If it is found necessary to change the oscillator tuning condenser greatly it is well to repeat the aligning operation at the high frequency mentioned above.







	R.F. 1st detector, and	
	I.F. plate to ground-----	250 volts
	R.F. 1st detector, and	
	L.F. screen to ground-----	90 volts
Readings obtained	R.F. and I.F. cathode to ground-----	3 volts
with	1st detector, cathode to ground-----	12 volts
Line Volt. = 110	Oscillator, plate to ground-----	90 volts
Vol. Cont. at Max.	2nd, detector, plate to ground-----	250 volts
	2nd, detector, cathode to ground-----	22 volts
	'47 plate to filament-----	250 volts
	'47 screen to filament-----	250 volts
	All filaments to ground-----	16.5 volts
	'51, '47, '27, and '24 filaments-----	2.4 volts
	'80 filament-----	4.7 volts

The following points should be checked if no signal are heard when a good set of tubes are used.

The oscillator may be checked for oscillation by reading the cathode voltage of the 1st detector. This is normally about 12 volts. Then touch the grid of the oscillator tube and if it is working properly the reading obtained on the cathode of the 1st detector will drop to about half the normal reading. If it is not oscillating various '27 tubes should be tried in the oscillator position and if still no oscillation is obtained connections in the oscillator circuit should be checked for continuity.





STERLING MFG. CO.

MODEL R-100MV, R-403,
R-404, R-402,
R-406, R-407

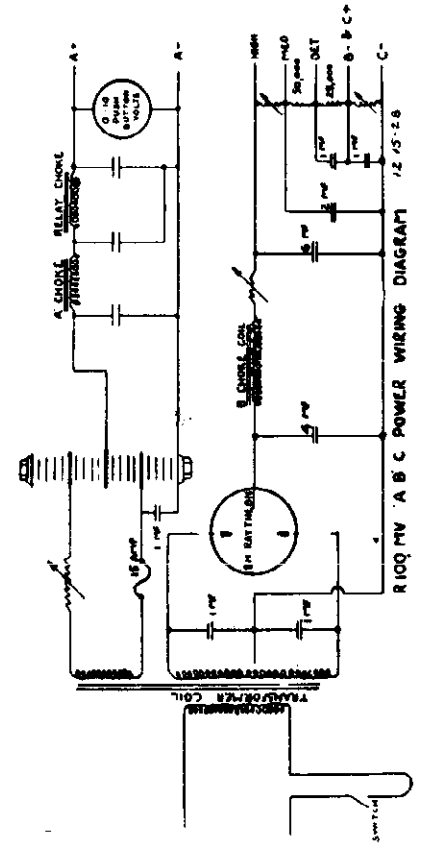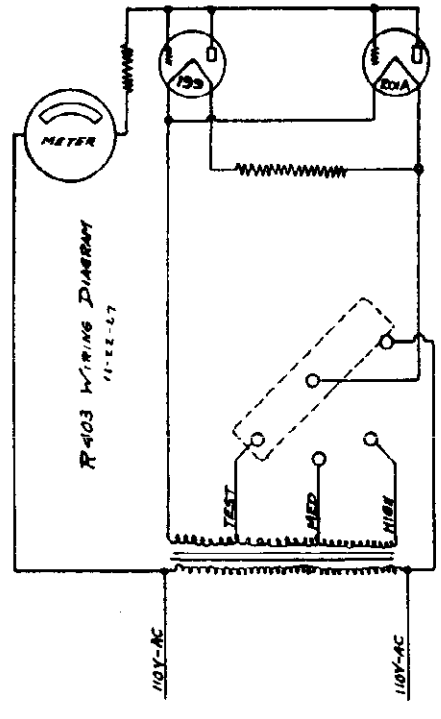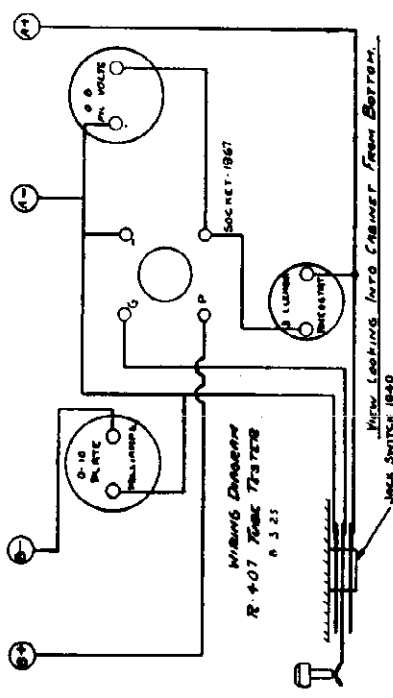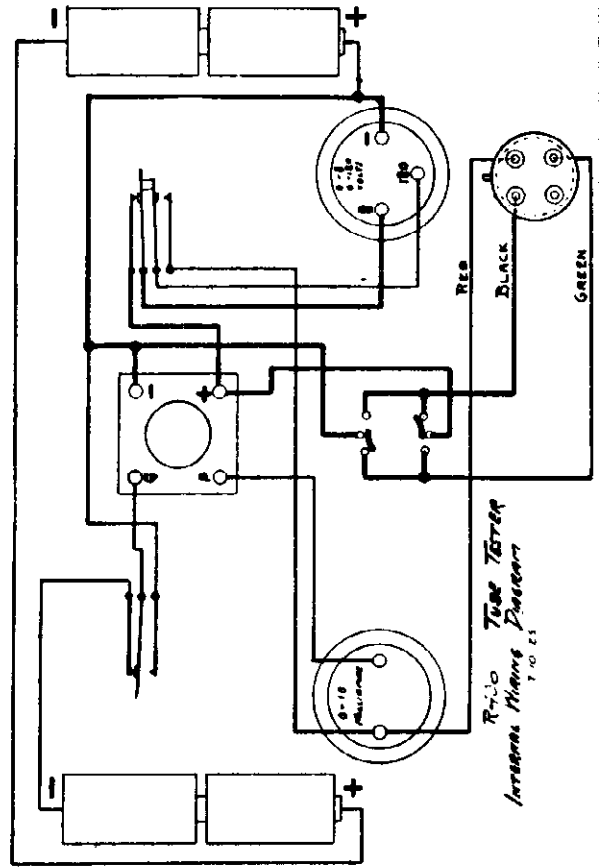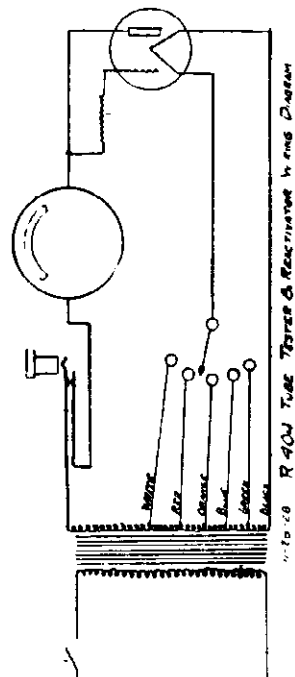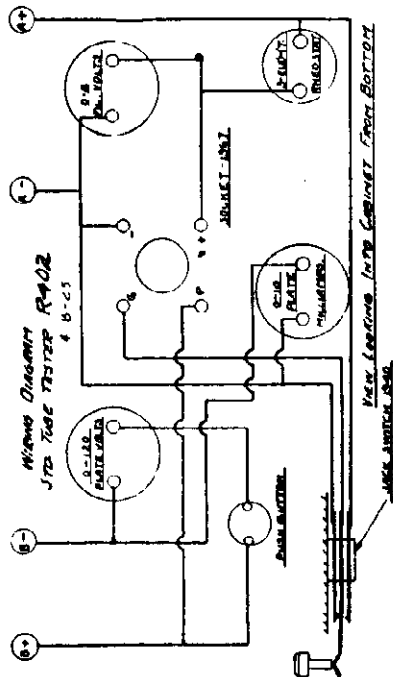







MODEL R-807A, R-810
 (1st Type), R-810
 (2nd Type), R-880.

STERLING MFG. CO.

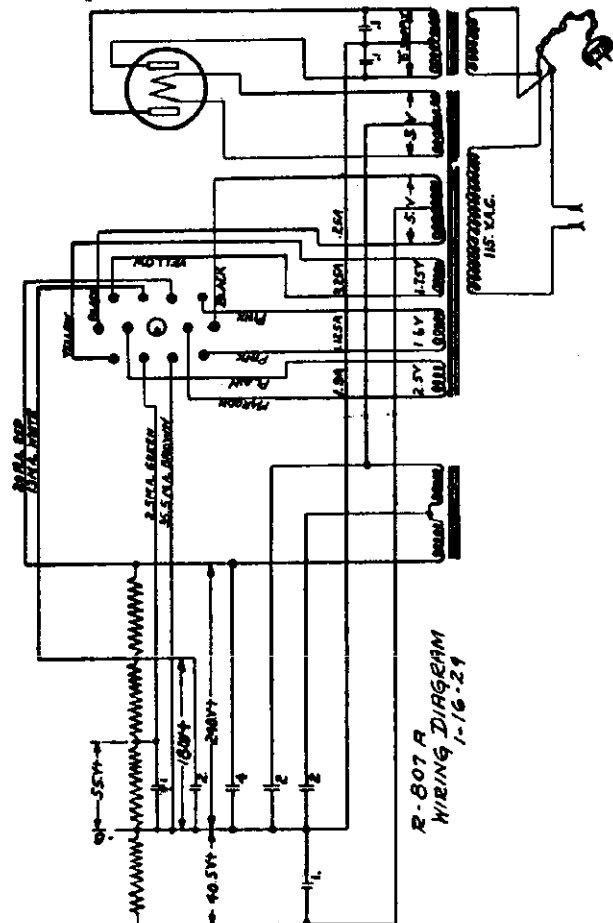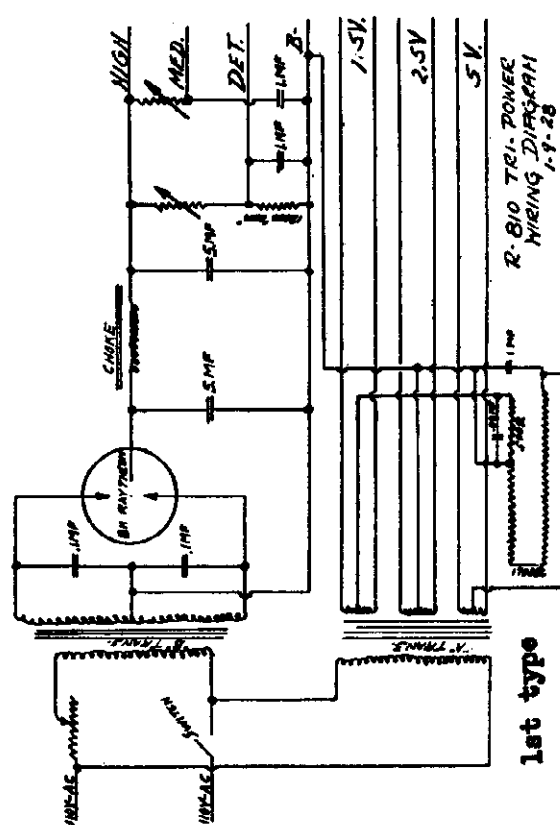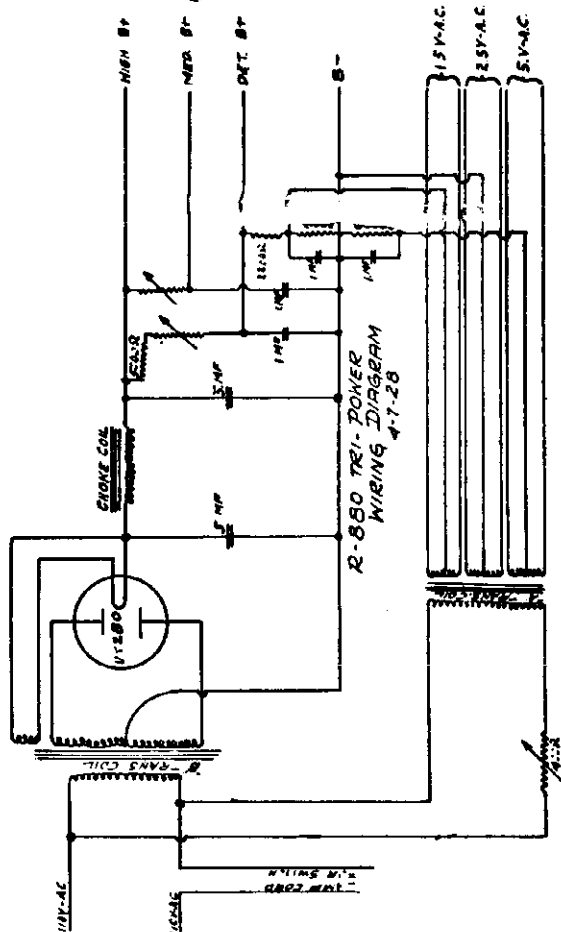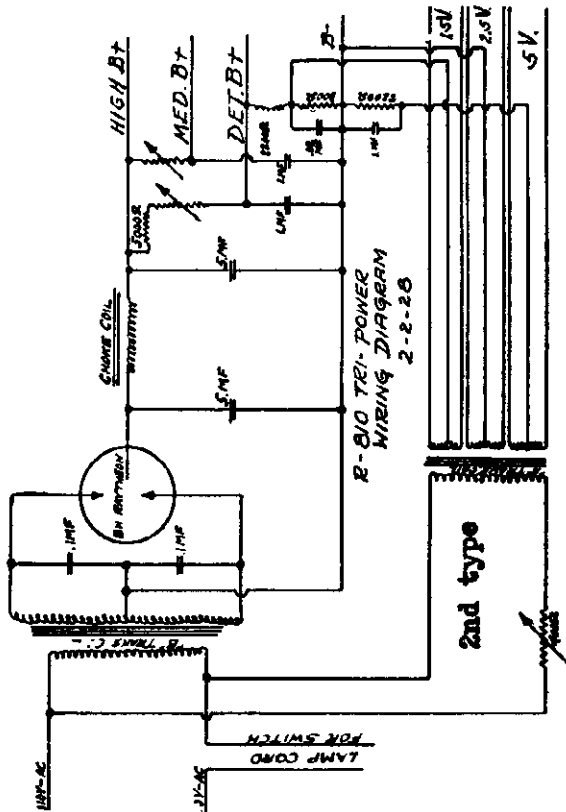



STERLING MFG. CO.

MODEL R-409, R-410, R-411, R-412, R-509, R-510

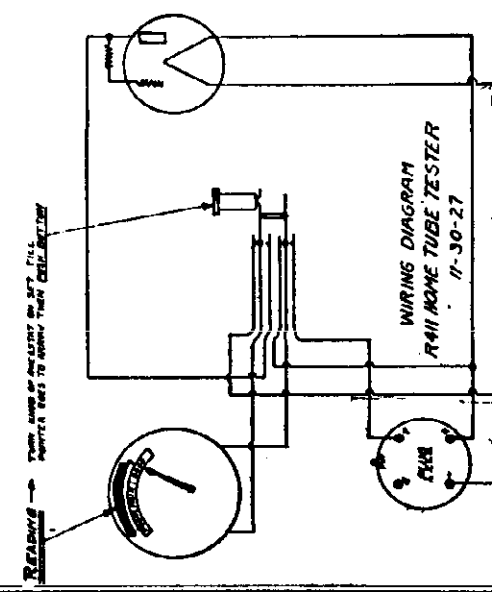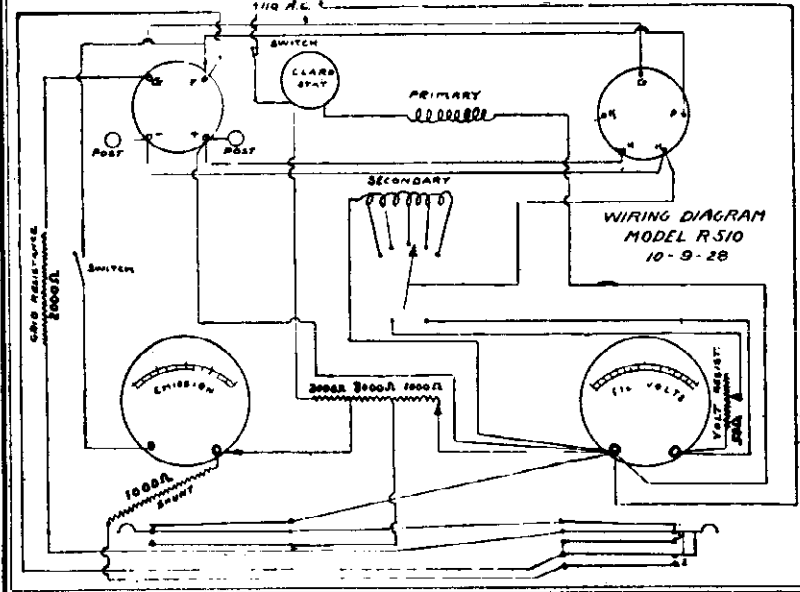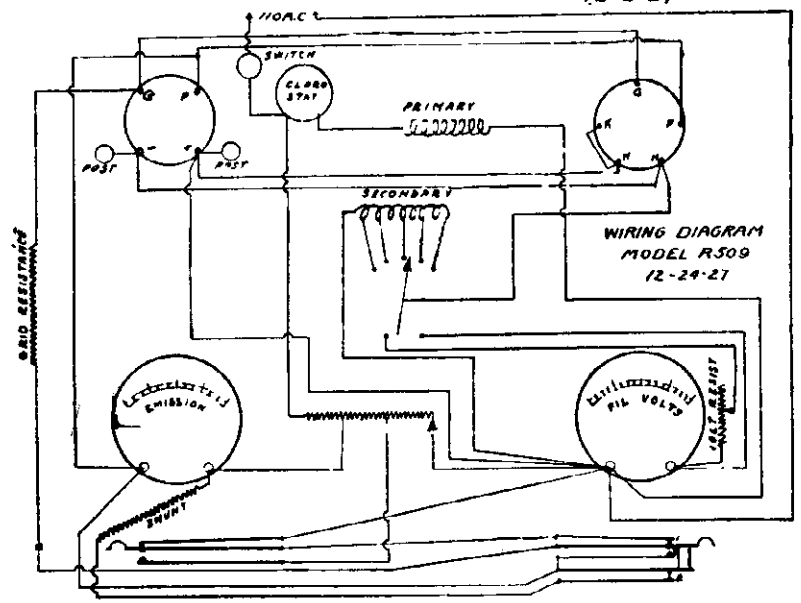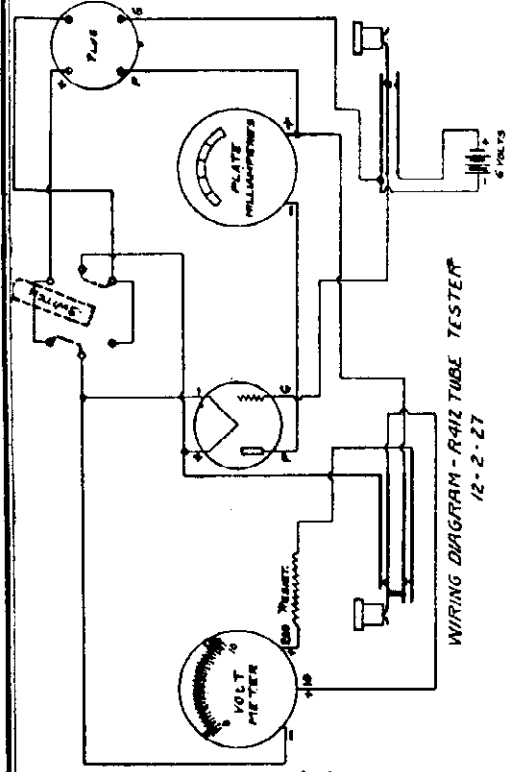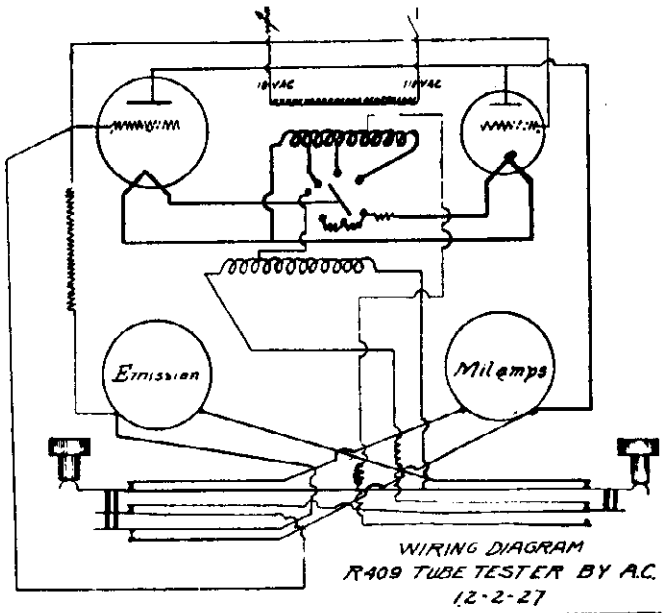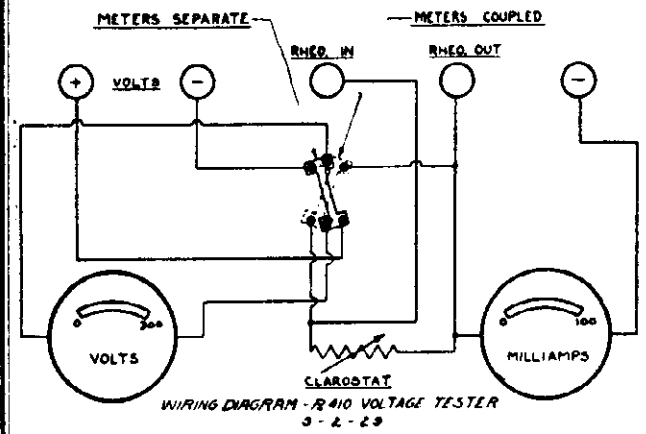

MODEL R-101, R-102
Service Notes

STEWART-WARNER CORP.

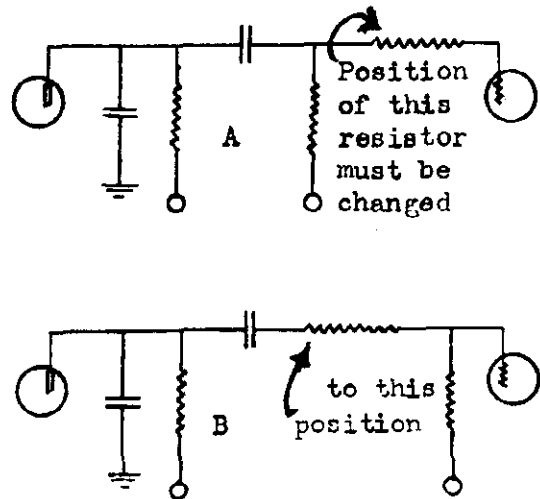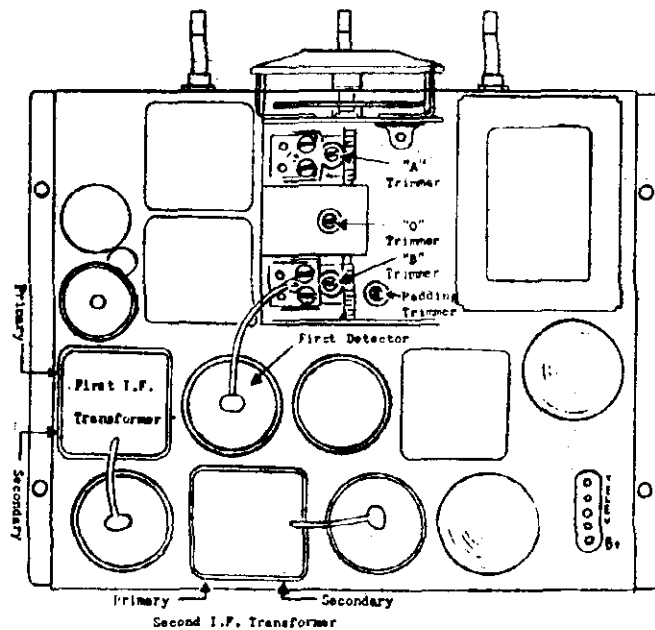


PENTODE SERVICE NOTES FOR MODELS R101-R102 series.

Pentode tubes in which the steady grid current is somewhat higher than average overload readily in the type of circuit used in the R101 and R102 series. Overloading of this type is evidenced in several ways;— by a distinct buzz in the speaker, by a peculiar fluttering reception that develops after the tube warms up and by short tube life. Troubles of this sort can be permanently eliminated by reducing the value of the resistance inserted in the pentode control grid circuit. Figure A shows the normal connection of the pentode control grid circuit in the above receivers. Shift the 500,000 ohm resistor from the normal position shown in figure A to that shown in figure B, namely between the blocking condenser and the junction of the grid leak and the control grid terminal of the pentode tube.

VOLUME DIFFICULTY IN R 102A.

If the output volume is below normal and the alignment is perfect, check the 2nd detector screen grid voltage and circuit. If it is appreciably below 20 volts when measured with a high resistance voltmeter, the 2 meg detector screen grid resistor is probably open circuited. Instead of replacing with a new unit, make the following changes, which as a matter of fact are now incorporated in the production models. The change consists of cutting out the 2 meg resistor and feeding the screen grid through the 500,000 ohm resistor that was previously used as the bleeder unit in this circuit. This change requires nothing more than the cutting of two wires and the soldering of two connections. This change will raise the screen grid voltage to about 30 volts. The diagrams below show the resistor terminal strip and the screen and plate circuits of the 2nd detector indicating the points at which the wires are cut and the new lead inserted. Cut wires at point marked "X" and make changes shown.

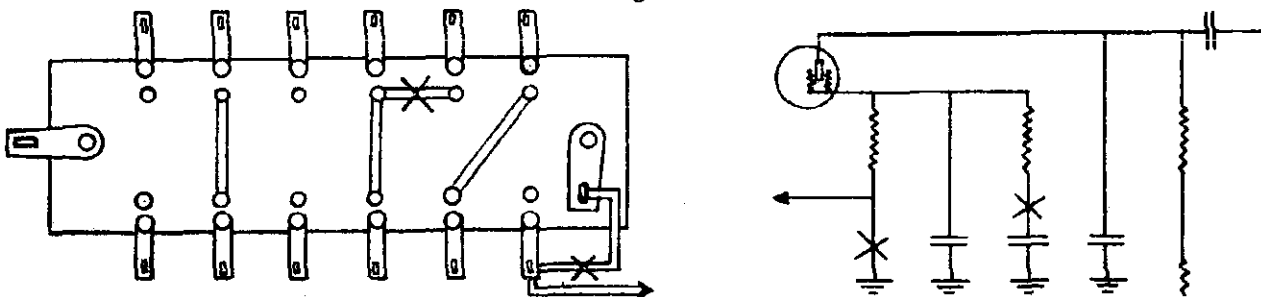

STEWART - WARNER CORP.

MODEL R-101, R-102
Service NotesADDITIONAL SERVICE NOTES FOR MODELS R101 and R102 Series

The following applies to oscillation troubles in the R102 series of receivers when the volume control is in an intermediate position. Tighten down all coil shields, then carefully realign the tuned circuits. This applies if the regeneration although excessive is not violently so. If the trouble is very pronounced, the aforementioned operations may not be of complete aid. In such cases the 2000 ohm suppressor resistor in the grid circuit of the oscillator tube should be cut out and shifted to the cathode circuit where it acts both as a suppressor and as a bias resistor. This resistor is the small red unit with the black end, that connects direct from the grid of the #27 oscillator tube to the oscillator coil. After disconnecting the resistor, resolder the open leads. Then remove the short bare wire from the cathode of the oscillator to the grounded lug on the padding trimmer condenser and connect the resistor between these two points.

Parasitic oscillation of the oscillator tube, evidenced by a continuous whistle, particularly upon the high frequency end of the dial is eliminated by the aforementioned change.

The phasing tool required to adjust the trimmers is part # T 70583 and is available at a cost of \$25. To align the tuned circuits it is necessary to remove the chassis. Remove the control knobs and the four hex head screws which hold the chassis in place. The speaker can be left in the cabinet since the leads are of sufficient length. The various trimmers are shown upon the chassis layout illustrated upon page 588-H. The IF transformers are of the tuned primary and tuned secondary type, each tuned by a separate trimmer. The IF trimmer adjusting screws can be reached thru small holes at the base of each shield, the primary in each case being at the left and the secondary at the right. If a commercial output meter is used it can be plugged into the television terminals, but a series condenser must be in one of the output meter leads. The test signal is fed into the 1st detector tube, the "A" lead of the oscillator being connected to the control grid, after the regular control lead has been removed. The IF peak frequency is 177.5 KC.

The RF and oscillator circuits require that the signal be fed to the receiver through the regular aerial and ground posts. Replace the control grid lead to the 1st detector. Ground the set and oscillator. Adjust the oscillator to 1400 KC. Tune the receiver to maximum output. Then reduce oscillator output until output meter reads half scale. Then tune "A" trimmer for maximum meter indication. If the output meter goes beyond full scale, REDUCE THE OSCILLATOR OUTPUT AND DO NOT CHANGE THE RECEIVER VOLUME CONTROL. Then adjust "B" and "O" trimmers for maximum output. The "O" trimmer adjustment is very critical. Then shift test oscillator frequency to 600 KC and tune receiver for maximum output. Then adjust receiver oscillator padding condenser for maximum output, RETURNING the set after each change in adjustment. Then increase test oscillator frequency to 1400 KC and carefully tune the set to this frequency. Then carefully adjust the "A", "B" and "O" trimmers for maximum output.

The following should be of interest in connection with the Models 203 and 204 speakers used in the present line of receivers. A high temperature developed by the field coil is not a sign of a defect. This is true even if the housing becomes too hot to touch, providing of course that the speaker is functioning in normal manner. This design is deliberate and proper provision has been made to safeguard against injury of the windings.

RADIO SERVICE NOTES (R-101 & 102)REPLACING POWER TRANSFORMERS

When replacing power transformers in Model 101 or 102 Radio Receivers, the following precautions must be observed, or the transformer is almost certain to hum badly.

After mounting the transformer but prior to clamping it tightly in place, paint the edges of the steel core of the transformer with a liberal quantity of shellac or medium thick clear lacquer to act as a binder and prevent the individual laminations from rattling. Allow the shellac to dry for several minutes and then using a heavy screw driver, tighten down the bolts with as much force as you can exert. A light screw driver will not enable you to tighten the bolts sufficiently. Do not omit the lock-washers under the screw-heads. Do not turn on the set until the binder has had a chance to dry, otherwise hum may not be eliminated.

When servicing a radio receiver in which the transformer hums, remove the two bolts holding it in position, thus loosening the transformer. It is not necessary to unsolder the leads. Drive in the wedge which you will find on one side of the center leg of the core between the core and coil. This tightens the center portion of the core and prevents it from vibrating. Now paint the transformer core liberally with shellac, insulating varnish, or medium thick clear lacquer, and replace as directed above.

For humming filament transformers in Model 301 receivers, remove the two screws holding the transformer to the set and pry off the U shaped metal clamp from about the steel core, taking care that you do not bend it out of shape. Paint the edges, with particular attention to the top I section, with a liberal quantity of shellac or lacquer as in the case of power transformers and replace the U shaped clamp. If necessary, bend in the side flaps of the clamp so that they press the individual laminations together more firmly.

REPAIRING SHORT WAVE CONVERTERS HAVING POOR VOLUME


Occasionally a short wave converter may be found which is very insensitive even though all circuits check perfectly and the tubes are in good condition.

Converters of this type may frequently be made to operate satisfactorily by RESOLDERING EVERY SOLDERED CONNECTION IN THE CONVERTER, even though these connections may appear to be entirely satisfactory.

A poorly soldered connection may have sufficiently high resistance to materially affect performance on short waves, yet not high enough to show up on a simple continuity test.

MODEL 102-A, B & E
Schematic, Voltage
1st Type

STEWART-WARNER CORP.

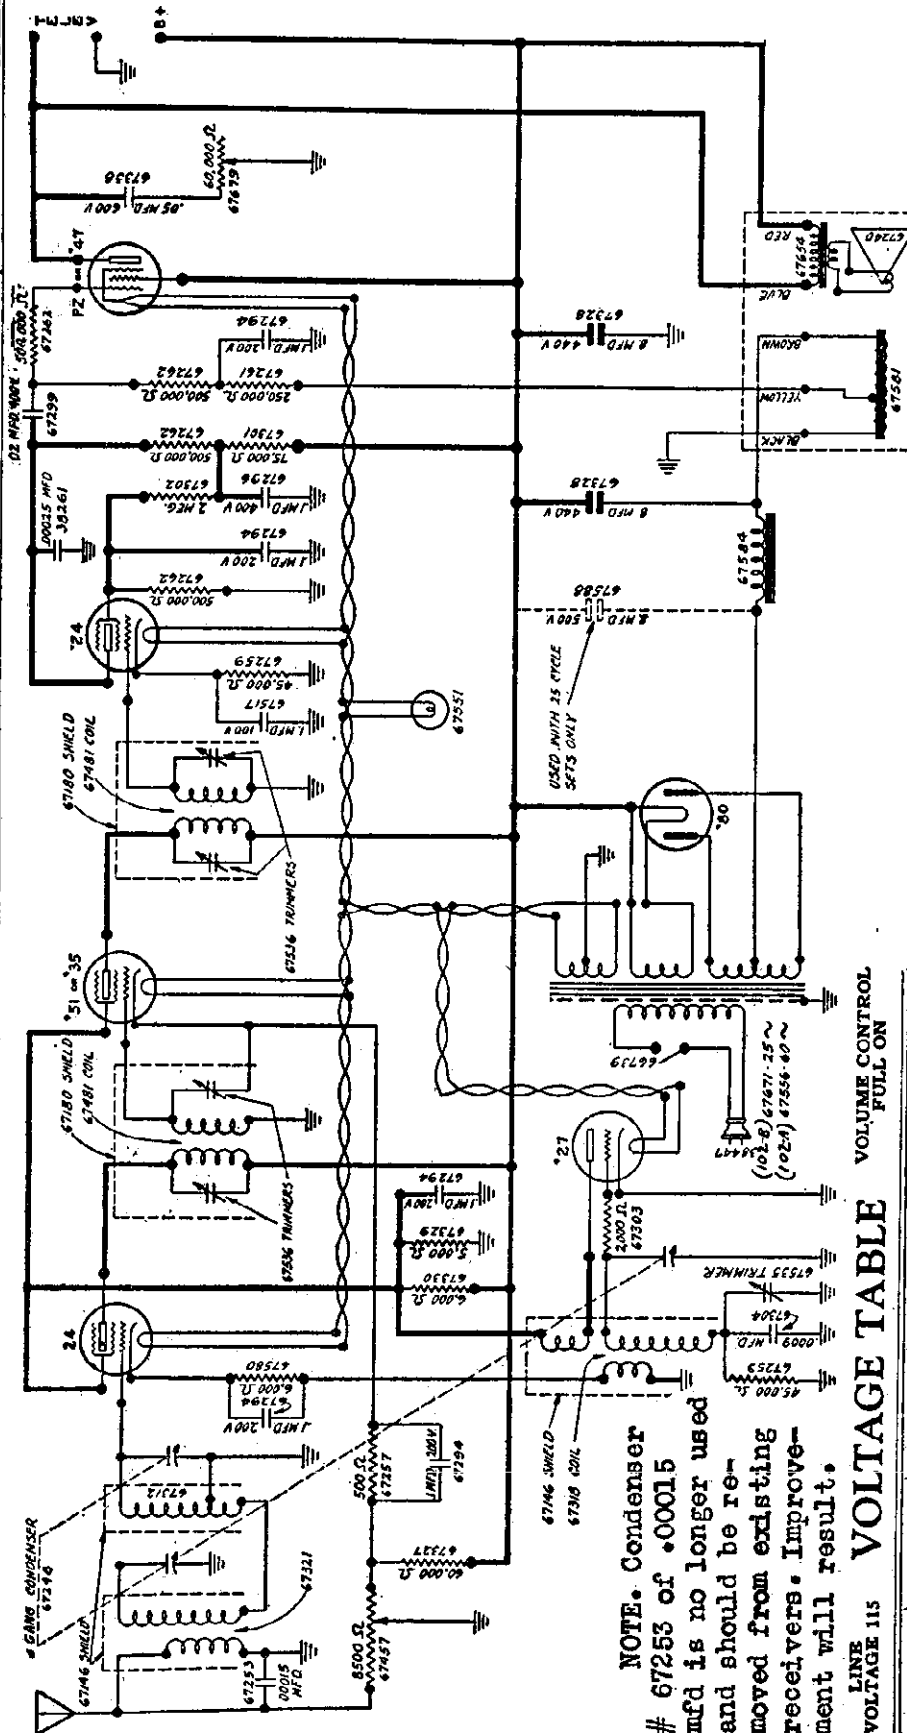


INTERMEDIATE FREQUENCY
TRANSFORMERS TUNED TO
177.5 K. C.

Voltage data accurate at sockets

Models 102A, B & E.

FRONT OF SET

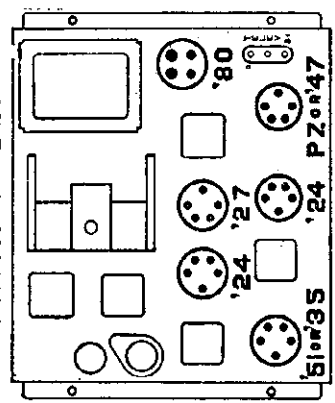

TUBE LOCATIONS

NOTE. Condenser # 67253 of .00015 mfd is no longer used and should be removed from existing receivers. Improvement will result.

LINE VOLTAGE 115 VOLTAGE TABLE VOLUME CONTROL FULL ON


Type of Tube	Tube Circuit	Filament Voltage	Platc Voltage	Screen Grid Voltage	Bias Voltage
'24	1st Det.	2.4	245	90	6.7
'27	Osc.	2.4	90		0
'51	I. F.	2.4	245	90	3
'24	2nd Det.	2.4	100	20	3
P. Z. or '47	Output	2.4	220	245	15*
'80	Rect.	4.8			

* This reading obtained between ground and yellow speaker lead. Direct reading from grid to ground or reading taken with a set tester will show low voltage because of high resistance in grid circuit.


STEWART-WARNER CORP.

MODEL R-102-A, B & E
Revised Schematic
Voltage.

Circuit Data of Stewart-Warner Models R-102-A, B & E.*

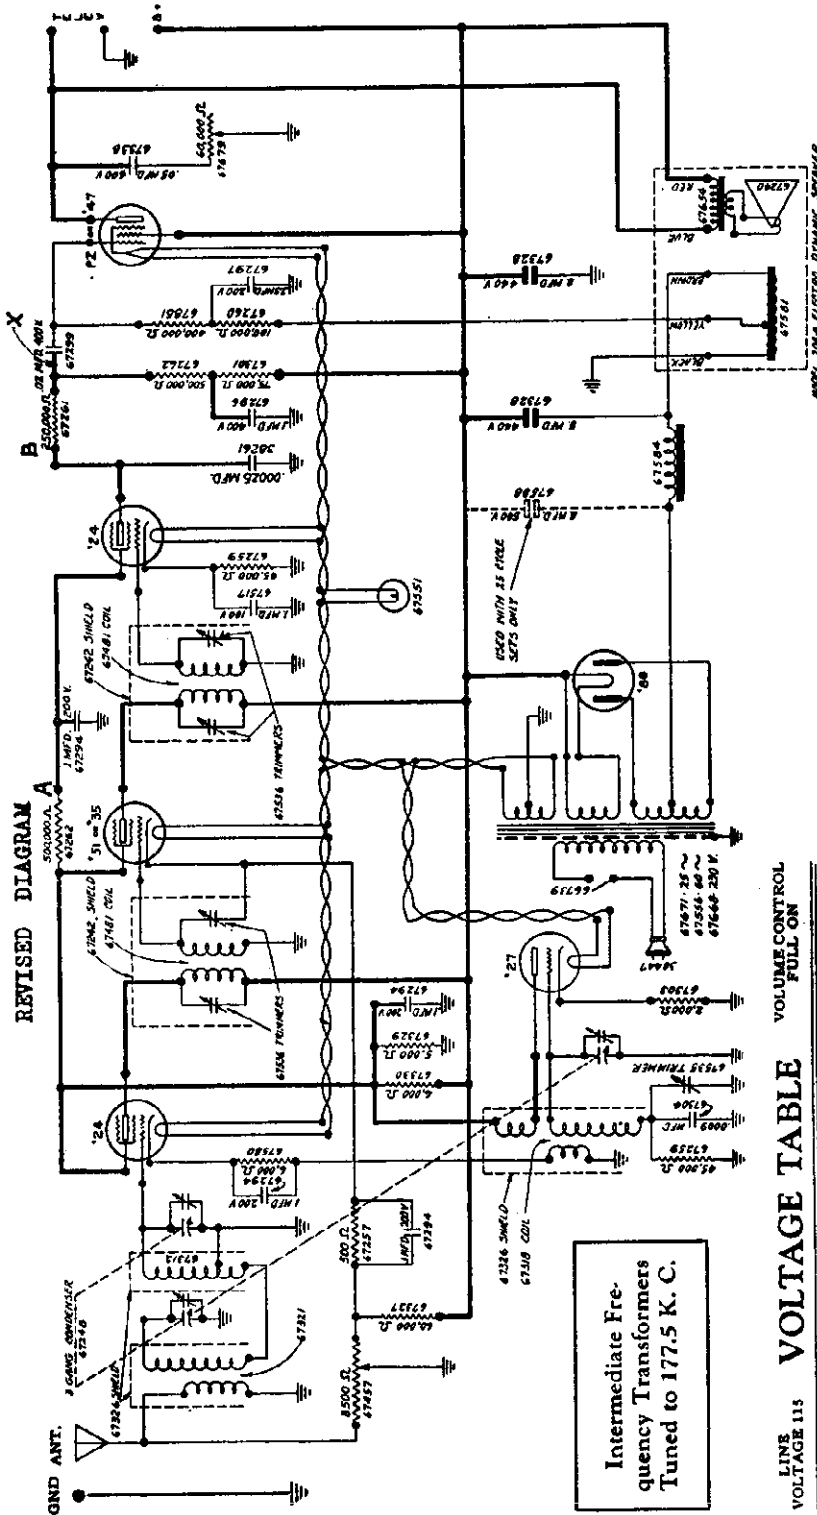

*This data sheet applies to the following serial numbers only:
Model 102-A, 34,000 upwards
Model 102-B, 10,500 upwards
Model 102-E, 10,200 upwards

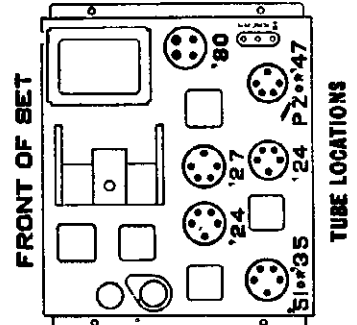

LINE VOLTAGE 115 VOLUME CONTROL FULL ON

Type of Tube	Tube Circuit	Filament Voltage	Plate Voltage	Bias Voltage
'24	1st Det.	2.45	250	95
'27	Osc.	2.45	95	9
'51	I. F.	2.40	250	3
'24	2nd Det.	2.45	70	30
P. Z. or '47	Output	2.45	250	250
'80	Rect.	4.8	170	151

All D. C. voltages measured with respect to ground, using high resistance voltmeter of 1000 ohms per volt. Readings will vary, depending upon voltage range of meters, being higher for higher range instruments. This variation is most marked for second detector screen grid and plate voltages.
* This reading obtained between ground and yellow speaker lead. Direct reading from grid to ground or reading taken with a set tester will show about 3 volts because of high resistance in grid circuit.

CHANGES IN MODELS 102 A, B, E

- A. 500,000-ohm resistor changed to 1,000,000 ohms.
 - B. 250,000-ohm resistor omitted. 100,000-ohm resistor inserted at X
- When phonograph is used, a 6000-ohm resistor is shunted across the 45,000-ohm detector bias resistor. A radio-phonograph switch has been added to the volume control, connecting the pickup when volume of set is turned off.

MODEL 10-11

Resistance Data

STROMBERG - CARLSON TEL. MFG. CO.

'45 Control Grid 6,400 ohms
 '45 Control Grid to Control Grid 11,400 ohms
 '45 Control Grid to '45 Fil 6,660 ohms
 '45 Plate to '45 Plate 408 ohms
 '45 Plate to '80 Fil 350-700 ohms
 '80 Fil to '80 P 16,185 ohms

Output Transformer Secondary only 1.6ohms
 RF and Detector Filament to Ground 0 resistance

Input winding only 4.6ohms
 Secondary winding 4.6ohms
 Broad Band Transformer Primary winding 1,980 ohms
 Broad Band Transformer Secondary winding 81 ohms
 2nd RF Plate Winding only 11 ohms
 Secondary of second bi-resonant circuit 4.6ohms
 3 RF Grid Winding only 4.6ohms
 Input AF Transformer primary alone 11,080 ohms
 Resistance across input AF transformer primary 250,000 ohms


'45 Control Grid 6,400 ohms
 '45 Control Grid to Control Grid 11,400 ohms
 '45 Control Grid to '45 Fil 6,660 ohms
 '45 Plate to '45 Plate 408 ohms
 '45 Plate to '80 Fil 350-700 ohms
 '80 Fil to '80 P 16,185 ohms

Output Transformer Secondary only 1.6ohms
 RF and Detector Filament to Ground 0 resistance

Input winding only 4.6ohms
 Secondary winding 4.6ohms
 Broad Band Transformer Primary winding 1,980 ohms
 Broad Band Transformer Secondary winding 81 ohms
 2nd RF Plate Winding only 11 ohms
 Secondary of second bi-resonant circuit 4.6ohms
 3 RF Grid Winding only 4.6ohms
 Input AF Transformer primary alone 11,080 ohms
 Resistance across input AF transformer primary 250,000 ohms

STROMBERG-CARLSON—Models 10 and 11
 Line Voltage 120—Voltage Tap High

Tap	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Voltage	110	115	120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205
Power	100	110	120	130	140	150	160	170	180	190	200	210	220	230	240	250	260	270	280	290

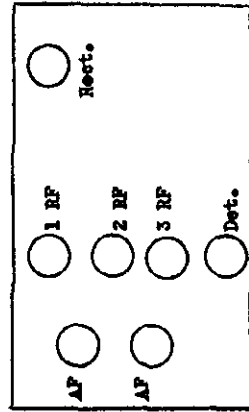

All tubes out of socket and AC plug removed from power supply line.
 Speaker plug removed from speaker socket. Phone switch in radio position.

From Chassis To	Correct	Incorrect
Aerial	Condenser	
1 RF Control Grid to Input Tuning Condenser Stator	9.2 ohms	Coupling condenser
1 RF Control Grid	900-1100 ohms	Volume Control
1 RF Cathode	0 ohm	BC-500 ohm unit-Y
1 RF Screen Grid	5,900 ohms	TC-1 rf Cg-Y
1 RF Plate	11, 610 ohms	BC-1 rf Sg-Y (.5 mfd)
		BC-1 rf Tr-Y (.5 mfd)
		BC- VD 80 P wdg
		BC- 2 rf P-Y (.5 mfd)
		BC- 3 rf P-Y (.5 mfd)
2 RF Control Grid	100,580 ohms	BC- 2 rf Cg wdg-Y
2 RF Cathode	0 ohm	See 1 RF Control Grid
2 RF Screen	6,500 ohms	BC- 2 rf Sg-Y (.5 mfd)
		BC- 1 rf Sg-Y (.5 mfd)
2 RF Screen to 3 RF Screen	0 ohm	BC- 2 rf P wdg-P (.5 mfd)
2 RF Plate	9,661 ohms	BC- 600 ohm unit-Y (.5mfd)
		See 1 RF Plate
2 RF Plate to 3 RF Plate	22 ohms	
Detector Control Grid	5,100,000 ohms	TC-Y
Detector Cathode	20,000 ohms	Grid condenser
Detector Screen Grid	16,600 ohms	BLC- rf Grid wdg-Y (.05mfd)
Detector Plate to '80 Fil	51,078 ohms	BC- DK-Y (.6 mfd -1. mfd)
Detector Plate	64,653 ohms	BC-D Sg-Y (.5 mfd)
		BC- DP-Y (.0001 mfd)
		BC- AF Tr-Y (1 mfd)
		FC- '80 P -'80 P wdg
		BC- VD-Y
		FC- Filter ohk-80 p wdg
3 RF Control Grid	942 ohms	BC-500 ohm unit-Y (.5mfd)
3 RF Cathode	0 ohms	TC- 3 rf Cg-Y
3 RF Screen Grid	6,500 ohms	See 2 RF Screen
3 RF Plate	9,661 ohms	See 2 RF Plate
		See 1 RF Plate

MODEL 19,20 AC
Voltage
Electrical Values

STROMBERG - CARLSON TEL. MFG CO.

INDUCTANCES

		No.
L1	.9 millihenry	R1
L2	215. microhenry	R2
L3	215. microhenry	R3
L4	5.5 millihenry	R4
L5	215. microhenry	R5
L6	5.5 millihenry	R6
L7	5.5 millihenry	R7
L8	5.5 millihenry	R8
L9	5.5 millihenry	R9
L10	5.5 millihenry	R10
L11	5.5 millihenry	R11
L12	5.5 millihenry	R12
L19	15. microhenry	R13
L20	5.5 microhenry	R14
L21	172. microhenry	R15
		R16
		R17
		R18
		R19

Value	Body	Tip	Dot
500	Green	Blk	Brn
600	Blue	Blk	Brn
600	Blue	Blk	Brn
3	(Wire wound)		
10 megs	Brn	Blk	Blue
100,000	Brn	Blk	Green
750	(Wire wound)		
10	(Wire wound)		
500	Green	Blk	Brn
6,500	Blue	Green	Red
6,500	Blue	Green	Red
60,666	Blue	Blk	Orange
1,575	(Wire wound)		
900	(Wire wound)		
1,000	(Wire wound)		
60	(Wire wound)		
30,000	Orange	Blk	Orange
400	(Wire wound)		
100,000	Carbon potentiometer		

CONDENSERS

C2	.0004 mfd	max.
C3	.0004 mfd	max.
C4	.04 mfd	
C5	.000001 mfd	app.
C6	.3 mfd	
C7	.3 mfd	
C8	.0004 mfd	max.
C11	.3 mfd	
C12	.3 mfd	
C16	.3 mfd	
C16	.3 mfd	
C17	.00025 mfd	
C18	.001 mfd	
C20	.002 mfd	
C21	.6 mfd	
C22	.2 mfd	
C23	.04 mfd	
C24	.001 mfd	
C26	.0004 mfd	max.
C28	.3 mfd	
C29	.001 mfd	
C30	.01 mfd	
C31	.01 mfd	
C32	2. mfd	
C33	2. mfd	
C34	3. mfd	
C35	3. mfd	
C36	1. mfd	
C36	4. mfd	(25 cy.)
C37	1. mfd	
C38	1. mfd	

TABLE 4.
Normal Voltage Readings

(Be sure to make these readings with the Meter and Scale indicated, otherwise the results will not agree with those tabulated. Alternating voltages are indicated by italics.)

Voltage	Meter	Scale	Where Measured	Approx. Value in Volts
H Heater Voltage Nos. 227 & 228 Tubes	A.C.	0-4	Across Heater Terminals of Sockets	2.4
F Filament Voltage No. 248 Tubes	A.C.	0-4	Across Filament Terminals of Audio Output Sockets	2.4
F Filament Voltage No. 280 Tube	A.C.	0-8	Across Filament Terminals of Rectifier Sockets	4.8
P Plate Voltage Radio Amplifiers	D.C.	0-200	Between Plate Terminal of R. F. Amplifier Socket (+) and Chassis Base (-)	100-170
M Plate Voltage Mixer Tube	D.C.	0-200	Between Plate Terminal Mixer Tube Socket (+) and Chassis Base (-)	100-170
O Plate Voltage Oscillator	D.C.	0-250	Between Plate Terminal of Oscillator Socket (+) and Chassis Base (-)	65-90
I Plate Voltage I. F. Tubes	D.C.	0-200	Between Plate Terminals of I. F. Amplifier Sockets (+) and Chassis Base (-)	100-170
D Plate Voltage Demodulator	D.C.	0-200	Between Plate Terminal of Demodulator Socket (+) and Chassis Base (-)	100-170
A Plate Voltage Audio Output Tubes	D.C.	0-200	Between Plate Terminals Audio Output Socket (+) and 10 ohm Mid Tap Resistor R ₂ (-)	200
C Control Grid Voltage R. F. Amplifier	D.C.	0-10	Between Control Grid Clip of R. F. Amplifier Tube (-) and Cathode (+) of R. F. Amplifier Tube	3
C Control Grid Voltage Mixer Tube	D.C.	0-200	Between Control Grid Clip Mixer Tube (-) and Cathode (+) of Mixer Tube	10-15
C Control Grid Voltage 1st I. F. Amplifier	D.C.	0-10	Between Control Grid Clip 1st I. F. Tube (-) to Cathode (+) of 1st I. F. Tube	3
C Control Grid Voltage 2nd I. F. Tube	D.C.	0-10	Between Control Grid Clip 2nd I. F. Tube (-) to Cathode (+) of 2nd I. F. Tube	3
O Grid Voltage Oscillator	D.C.	0-200	Across 6600 ohm Resistor R ₁₀	10-15
D Grid Voltage Demodulator	D.C.	0-200	Across 30,000 ohm Resistor R ₁₁	20-25
A Grid Voltage Audio Tubes	D.C.	0-200	Between Grids of Audio Tubes (-) to Mid Tap 10 ohm Resistor R ₂ (+)	65-90*
S Screen Voltage Radio Amplifier Mixer 1st & 2nd I. F. Tubes	D.C.	0-250	Between Screen Terminals of Tubes (+) to Chassis Base (-)	90-95*
B B Voltage R. F. Amplifier and Mixer Tube	D.C.	0-250	Between Tube Side of 500 ohm Resistor R ₁ and Chassis Base	100-170*
B B Voltage 1st & 2nd I. F. and Mixer Tubes	D.C.	0-250	Between "High" Side of Voltage Divider and Chassis Base	100-170*
B B Voltage Audio Tubes	D.C.	0-250	Between Mid Tap of Audio Output Transformer (+) and Chassis Base (-)	200
C C Voltage Audio Output Tubes	D.C.	0-250	Across 750 ohm Biasing Resistor R ₇	30
S Speaker Field Voltage	D.C.	0-250	Across Small Pins of Speaker Connector Sockets	100-170
P Plate Voltage A. C. Pare Anode No. 280 Rectifier	A. C.	See Remarks	Between P Terminals No. 280 Rectifier Sockets and Chassis Base	220-200*

*These voltage vary with dial setting and position of volume control. Cannot be measured on Weston Model 320 Meter unless multiplier is used.

MODEL 19,20 AC
Resistance Data


STROMBERG - CARLSON TEL. MFG. CO.

All tubes removed from sockets and AC plug disconnected from power supply.
Speaker plug removed from speaker socket. Volume control maximum unless
otherwise stated. See Notes.

From Chassis To	Correct	Incorrect
RF Control Grid	504.9 ohms	BC- rf Cg wdg-Y
RF Cathode (V.C.Max)	60 ohms	BC- if K-Y (.3 mfd)
RF Cathode (V.C.Min)	1,060 ohms	
RF Screen Grid	2,560 ohms	BC- rf Sg-Y (.3 mfd) BC- if Sg-Y (.3 mfd)
RF Plate	4,179 ohms	BC- rf P-Y (.3 mfd) BC- if P wdg-Y (.3 mfd) FC- if P wdg-Y (1. mfd)
Mixer Tube Control Grid	4.9 ohms	TC- Mixer Cg-Y
Mixer Cathode	6,560 ohms	BC-Osc Coupling Coil-Y See RF Cathode
Mixer Screen Grid	2,560 ohms	See RF Screen
Mixer Plate	4,179 ohms	See RF Plate TC- if Tr Primary
Mixer Plate to RF Plate	88 ohms	
1 IF Control Grid	42.3 ohms	TC- 1 if Cg-Y
1 IF Cathode	60 ohms	See RF Cathode
1 IF Screen Grid	1,960 ohms	See RF Screen
1 IF Plate	3,579 ohms	BC- 1 if P wdg-Y See Mixer Plate
1 IF Plate to 2 IF Plate	90.5 ohms	
2 IF Control Grid	45.3 ohms	TC- 2 if Cg-Y
2 IF Cathode	60 ohms	BC- 2 if K-Y (.3 mfd)
2 IF Screen	1,960 ohms	See RF Screen
2 IF Plate	3,580 ohms	See 1 IF Plate
Demodulator Control Grid	10,100,000 ohms	TC- grid condenser-Y BC- grid wdg-Y (.001 mfd)
Demodulator Cathode	30,000 ohms	BC- Dem K-Y (2 mfd)
Demodulator Plate to 80 Fil	51,040 ohms	
Demodulator Plate to Chassis	0 ohm	BC- AF Tr wdg-Y (2 mfd) FC- Filter chk-Y (3 mfd) BC- AF Tr wdg- Dem K BC- Dem P- Dem K-
'45 Control Grid	4,340-5,350 ohms	Split windings do not have equal resistance
'45 Control Grid to '45 Fil	5,100-6,000 ohms	
'45 Plate to Plate	425 ohms	Tone Control condenser
'45 Plate to 80 Fil	500-525 ohms	
Output Transformer secondary only	1.4 ohms	
Oscillator Control Grid	502 ohms	Oscillator winding is tapped
Oscillator Cathode	6,500 ohms	BC- Osc K-Y (.001 mfd)
Oscillator Plate to RF Screen	1.2 ohms	
RF Mixer- IF and Demodulator Filament to chassis	0 ohm	
Across AC plug (LO)	4.1 ohms	
Across AC plug (HI)	4.5 ohms	
AC plug to chassis	0 ohm	FC- across primary


MODEL 22,22-A
Chassis Wiring

STROMBERG-CARLSON TEL. MFG. CO.

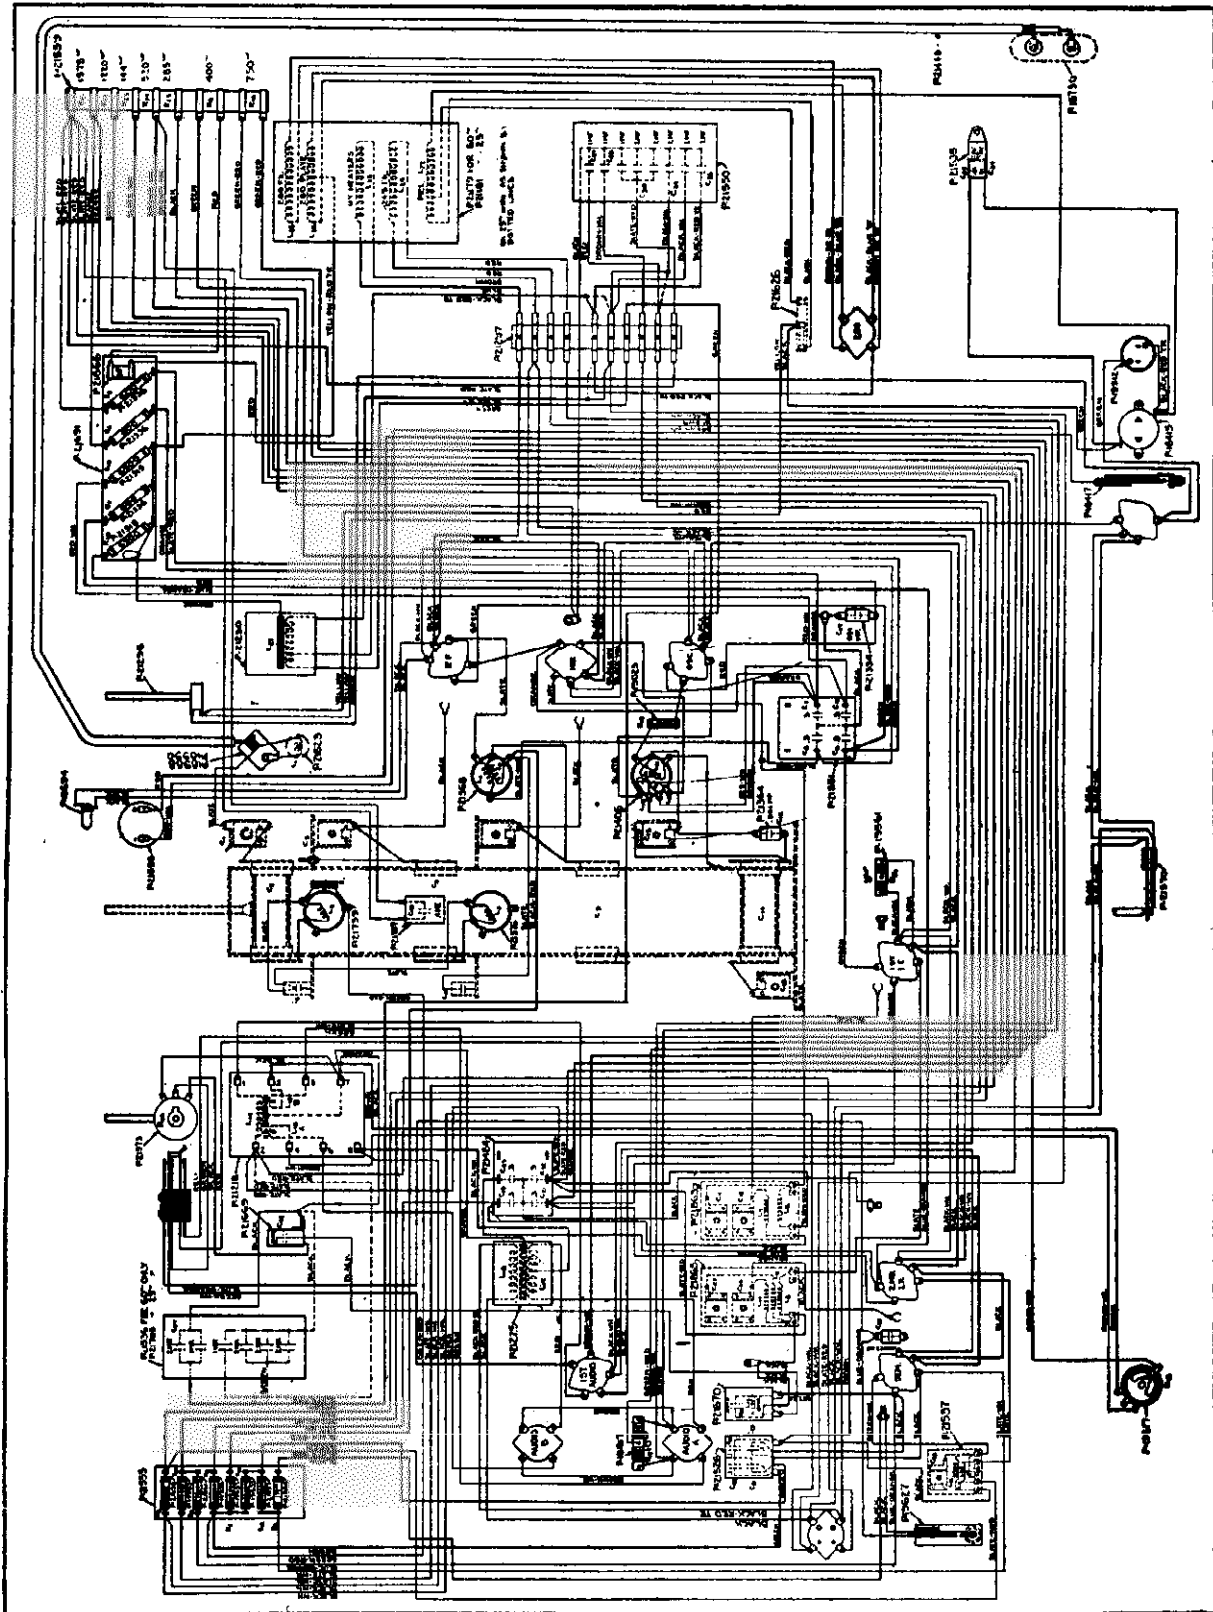

STROMBERG - CARLSON TEL. MFG. CO.


MODEL 22,22-A
Schematic

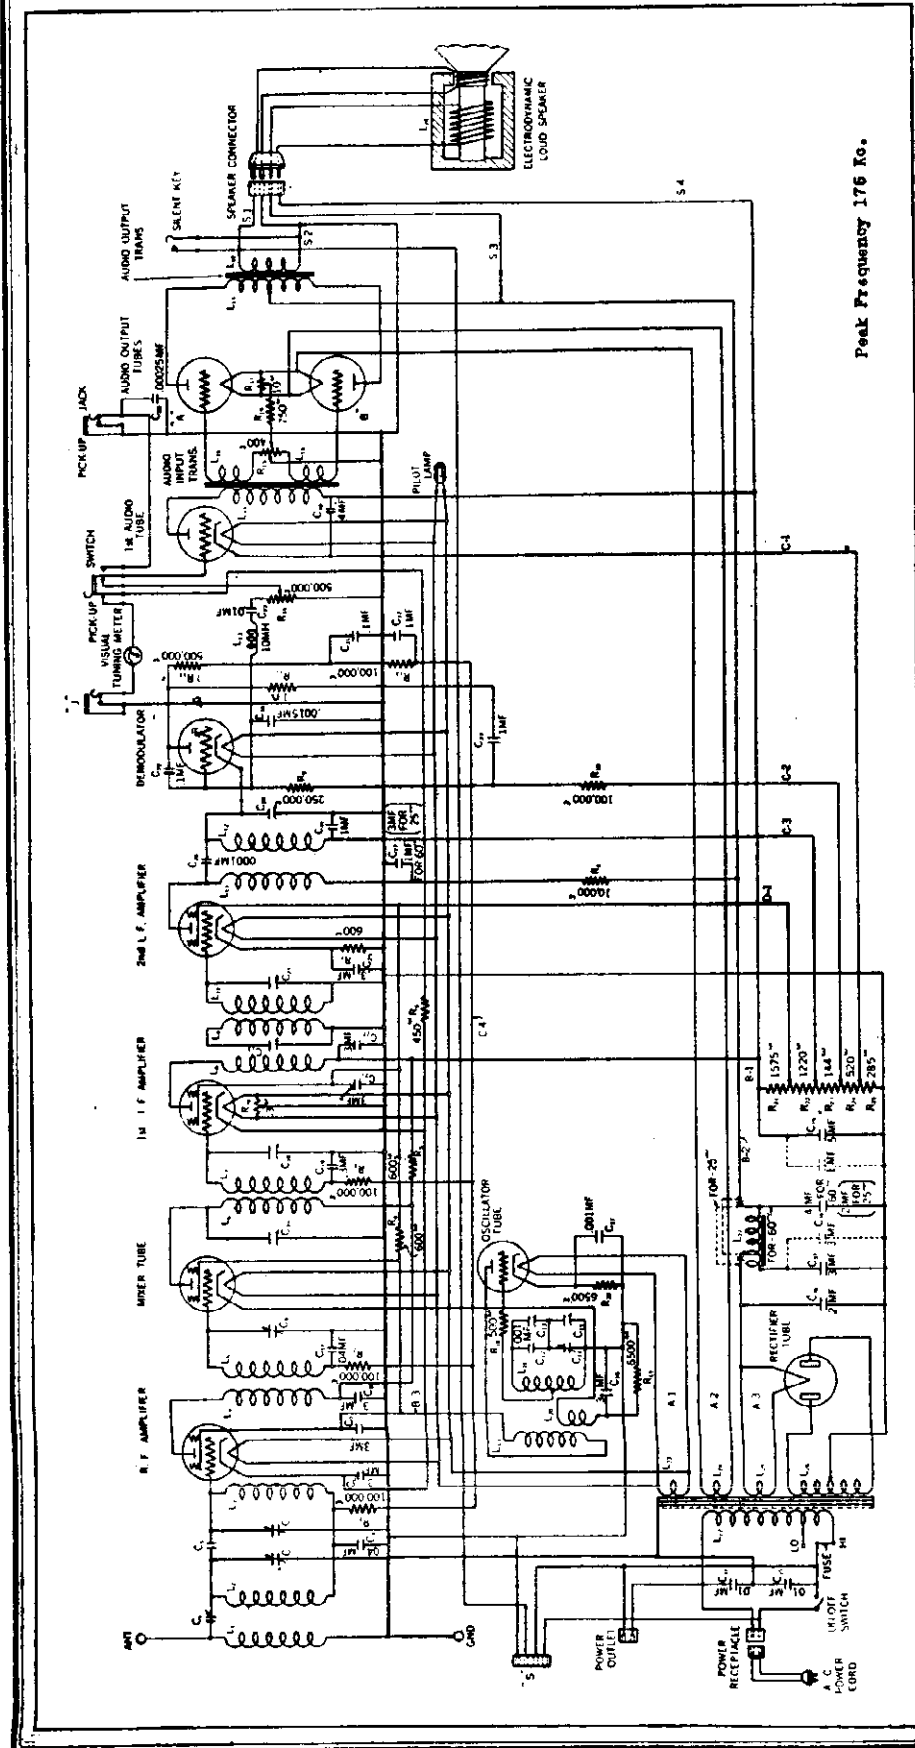

Peak Frequency 176 Kc.

The 1st and 2nd IF transformers have two tuning adjustments. The 3rd, has but one tuning adjustment. Three windings are used in the 2nd IF transformer. The tuning condensers are accessible through holes through the top of the IF transformer containers.

Model 22 (1931)

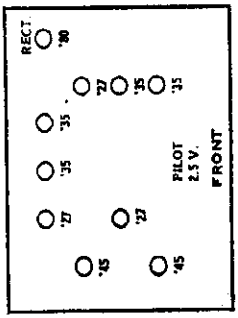

MODEL 22, 22-A

Voltage


STROMBERG - CARLSON TEL. MFG. CO

Electrical Values


TUBE	APPROX. VOLTS	CONDENSERS		RESISTANCES		INDUCTANCES
		Value	No.	Value	No.	
Plate Voltage RF	135-155	400. mmf max		100,000	R1	L1 .9 millihenry
Plate Voltage 1st Det.	135-155	400. mmf max		100,000	R2	L2 215. microhenry
Plate Voltage Osc.	75-90	.04 mf		100,000	R3	L3 215. microhenry
Plate Voltage 1st I.F.	135-155	Approx. 1 mmf		600	R4	L4 5.5 millihenry
Plate Voltage 2nd I.F.	220-245	.3 mf		600	R5	L5 215. microhenry
Plate Voltage 2nd Det.	Note A	.3 mf		450	R6	L6 5.5 millihenry
Plate Voltage 1st AF	135-155	.3 mf		600	R7	L7 5.5 millihenry
Plate Voltage AF Output	230-260	400. mmf max.		10,000	R8	L8 5.5 millihenry
"C" Voltage RF	4.0	.04 mf		250,000	R9	L9 5.5 millihenry
"C" Voltage 1st Det.	9.4	.001 mf		100,000	R10	L10 5.5 millihenry
"C" Voltage 1st IF	4.1	400. mmf max.		1 meg	R11	L11 40. millihenry
"C" Voltage 2nd IF	2.8	.3 mf		500,000	R12	L12 5.5 millihenry
Grid Voltage Osc.	18.5-21.0	.001 mf		100,000	R13	L13 10. millihenry
Grid Voltage 2nd Osc.	35-40	.3 mf		500,000	R14	L14 15. microhenry
Grid Voltage 1st AF	11.6	250. mmf		600	R15	L15 5.5 millihenry
Grid Voltages AF	45-55*	.3 mf		400	R16	L16 5.5 millihenry
Screen Voltage RF	75-90*	.3 mf		750	R17	L17 5.5 millihenry
Screen Voltage 1st Det	75-90*	.3 mf		10	R18	L18 5.5 millihenry
Screen Voltage IF Tubes	75-90*	.3 mf		500	R19	L19 5.5 millihenry
B Voltage RF 1st Det	135-155*	100. mmf		6,500	R20	L20 5.5 millihenry
B Voltage 1st IF	135-155*	1. mf		6,500	R21	L21 172. microhenry
B Voltage 2nd IF	225-250*	(3 mf for 25 cye)		1,575	R22	
B Voltage 1st AF	135-155	.1 mf		1,220	R23	
B Voltage Output (AF)	285-330	.0015 mf		144	R24	
C Voltage 1st AF	11.5	.1 mf		520	R25	
C Voltage AF Output	45-55	.1 mf		285	R26	
Speaker Field Voltage	135-155	1. mf		3		
AC Plate Voltage		.01 mf				
per Anode	325-355	.01 mf				
Heater Voltage '27-35	2.4	2. mf				
Filament Voltage '45	2.4	3. mf				
Filament Voltage '80	4.8	(6 mf for 25 cye)				
*These voltages vary with Dial setting and position of Volume Control.		4. mf				
NOTE "A" No voltage can be obtained across these terminals. The plate is grounded to the Chassis through 1 Megohm R 11.		(2 mf for 25 cye)				
		5. mf				
		(6 mf for 25 cye)				
		.4 mf				
		.1 mf				
		.01 mf				

STROMBERG - CARLSON TEL. MFG. CO.

MODEL 22,22-A
Chassis Views

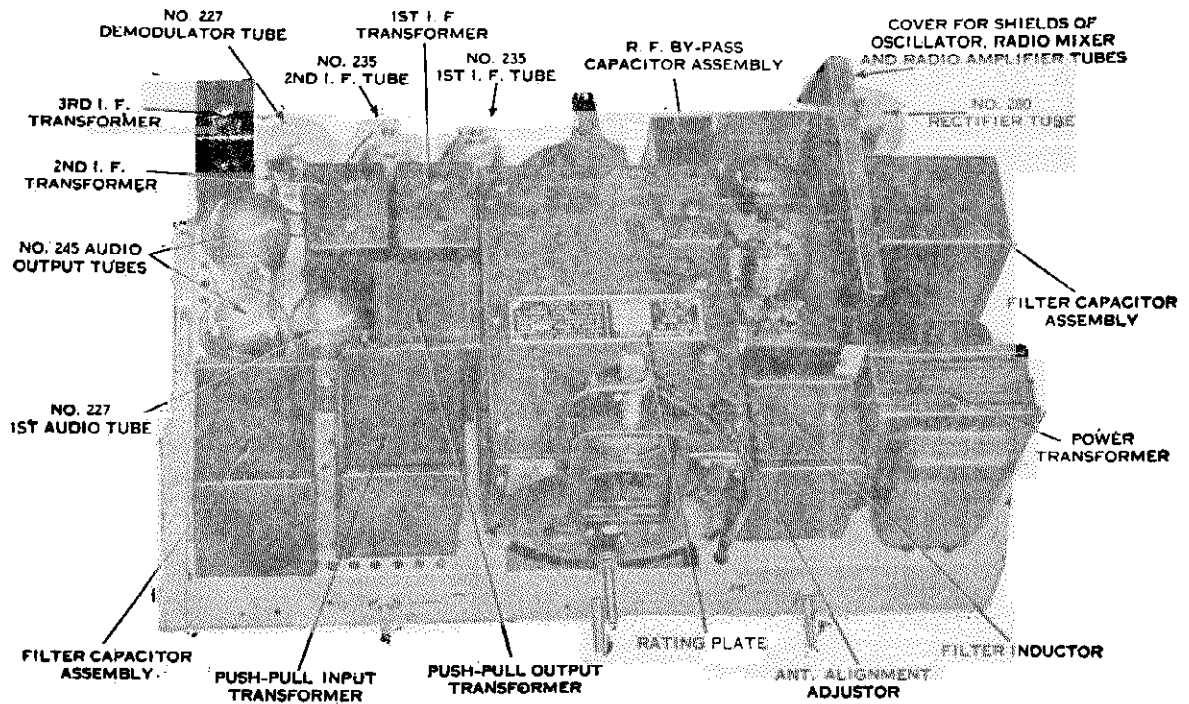

Top View of Chassis with Tube Shields Removed.

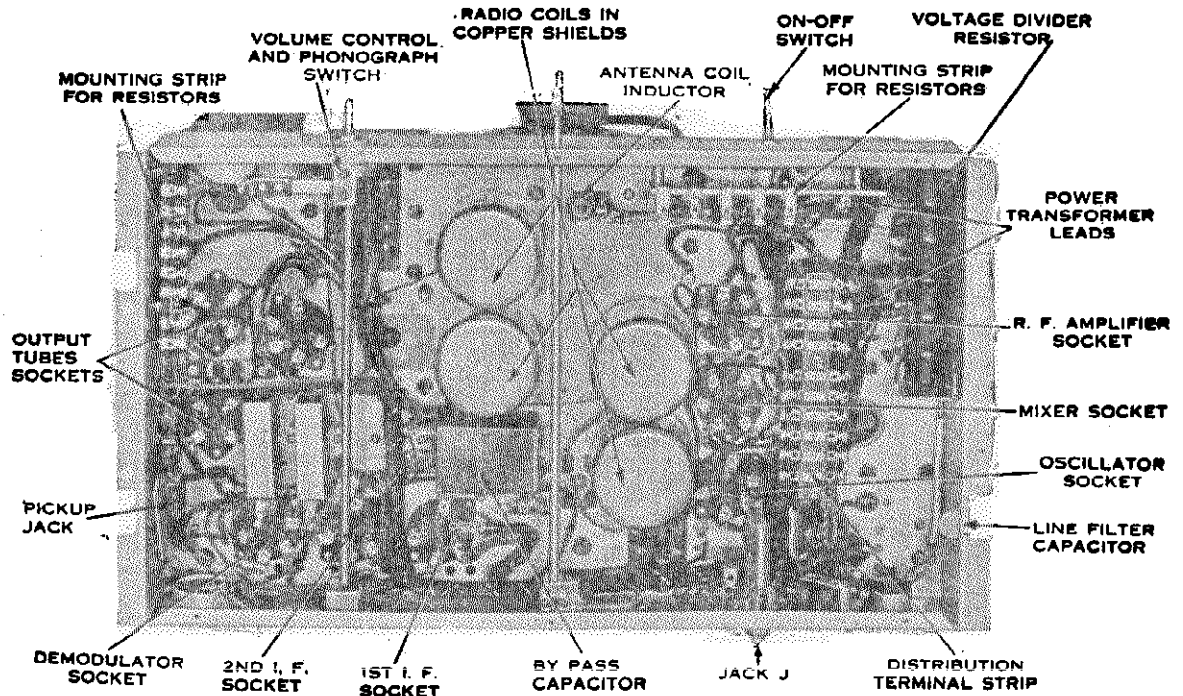


Bottom View of Chassis (Bottom Shield Removed).

The hum adjuster is located at the rear of the chassis under the third IF transformer. The fuse box is to the front of the rectifier tube socket looking at the chassis from the front. The two outlets near the rectifier tube socket are the power input and power output. The pickup jack is to the rear of the audio output tubes, next to the speaker connector receptacle.

STROMBERG - CARLSON TEL. MFG. CO.;


MODEL 25,26 AC Schematic

Models 25, 26 (1931).

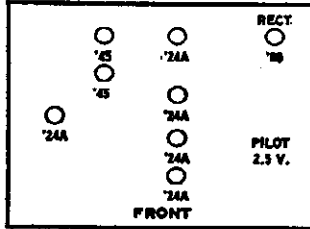

REVERSE PER DOTTED LINES & RES. VALUES FOR 25.

PEAK FREQUENCY 175 KC

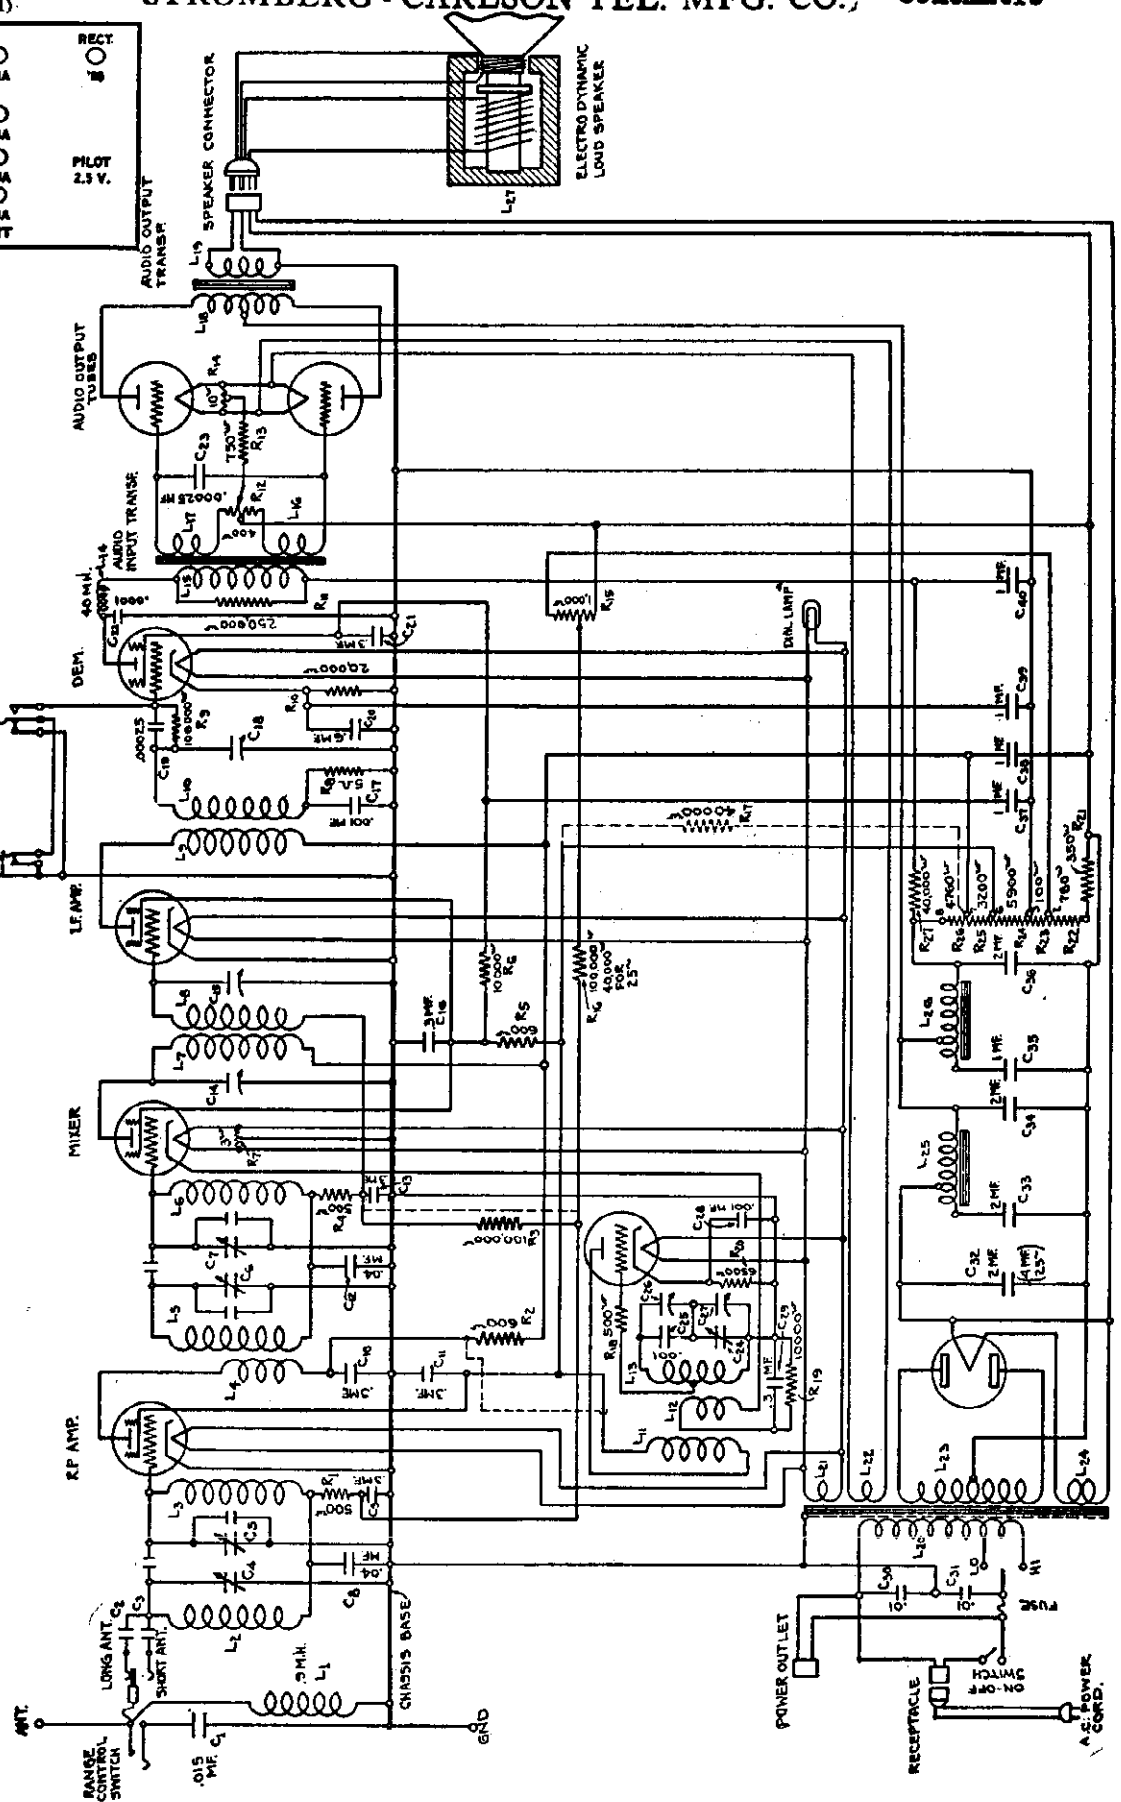

MODEL 25,26 AC Voltage

STROMBERG - CARLSON TEL. MFG. CO.

NOS. 25 AND 26 RECEIVERS

TABLE III. CAPACITOR IDENTIFICATION—Continued

Designation	Function	Value	Voltage	Meter Scale	Where Measured	Approx. Value in Volts
C ₁	Capacitor across triodes of Push-Pull (Output Tubes)	250 Mmf.	Plate Voltages	D. C. 0-250	Between Plate Terminals of Audio Output Sockets (+) and Mid Tap 10 ohm Resistor (-)	265-335
C ₂	Unit of Variable Gang Capacitor	400 Mmf. Max.	Audio Output Tubes			
C ₃	Series Capacitor for Oscillator Tuning Circuit	100 Mf.	Control Grid Voltage, R. F. Mixer and I. F. Tubes	D. C. 0-10	Between Center Terminal of 1000 ohm Volume Control Potentiometer (-) and Chassis Base (+)	25
C ₄	Aligning Capacitor for C ₃	.001 Mf.	Grid Voltage	D. C. 0-250	Between Cathode Terminal of Oscillator Socket (+) and Chassis Base (-)	19
C ₅	Cathode By-pass of Oscillator	.01 Mf.	Oscillator Tube Control Grid Voltage Demodulator Tube	D. C. 0-250 (See Note)	Between Cathode Terminal of Demodulator Socket (+) and Chassis Base (-)	7
C ₆	Cathode By-pass of Mixer Tube	2 Mf.	Grid Voltage	D. C. 0-250	Between Grid Terminals of Audio Output Sockets (-) and Mid Tap 10 ohm Resistor (+)	40-50
C ₇	Power Line Filter Capacitor	(4 Mf. 25 Cycles)	Audio Output Tubes	D. C. 0-250	Between Screen Terminals of Tubes (+) and Chassis Base (-)	130-150
C ₈	Ripple Filter Capacitor	2 Mf.	Screen Voltages R. F., Mixer, I. F. and Demodulator Tubes			
C ₉	Ripple Filter Capacitor	2 Mf.	B Voltage R. F. Amplifier Tube	D. C. 0-250	Between Tube Side of 600 ohm Resistor (+) and Chassis Base (-)	135-150
C ₁₀	Ripple Filter Capacitor	1 Mf.	B Voltages Mixer and I. F. Tubes	D. C. 0-250	Between Terminal No. 6 on Voltage Divider (+) and Chassis Base (-)	135-150
C ₁₁	Ripple Filter Capacitor	2 Mf.	B Voltage Demodulator Tube	D. C. 0-250	Between Terminal No. 1 on Input Transformer (+) and Chassis Base (-)	200-230
C ₁₂	Demodulator Screen Circuit Filter Capacitor	1 Mf.	B Voltage Audio Output Tubes	D. C. 0-250	Between Mid Tap on Audio Output Transformer (+) and Chassis Base (-)	250-280
C ₁₃	R. F. Amplifier and Mixer Plate Circuit Filter Capacitor	1 Mf.	C Voltage R. F., Mixer and I. F. Tubes	D. C. 0-10	Across 100 ohm Resistance on Voltage Divider	25
C ₁₄	Cathode By-pass of Demodulator	1 Mf.	C Voltage Oscillator Tube	D. C. 0-250	Across 6,500 ohm Biasing Resistor	12
C ₁₅	Demodulator Plate Circuit Filter Capacitor	1 Mf.	C Voltage Demodulator Tube	D. C. 0-250	Across 20,000 ohm Biasing Resistor	7
C ₁₆			C Voltage Audio Output Tube	D. C. 0-250	Across 750 ohm Biasing Resistor	40-50
C ₁₇			Total B Voltage	D. C. 0-500	Between Terminals No. 1 and No. 8 on Voltage Divider	260-300
C ₁₈			Speaker Field Voltage	D. C. 0-500	Across Small Pins of Speaker Connector Socket	300-335
C ₁₉			Plate Voltage A. C. Per Anode No. 280 Tube	A. C.	Between P Terminals of No. 280 Rectifier Socket and Negative Side of 350 ohm Resistor	330-350

NOTE: Measurements to be taken on 0-250 Volt Scale to give accurate readings as this voltage is across only 20,000 ohms. Cannot be measured on Weston Model 528 Meter unless multiplier is used.

III. NORMAL VOLTAGE READINGS

Voltage	Meter Scale	Where Measured	Approx. Value in Volts
Heater Voltages No. 221 and 227 Tubes	A. C. 0-1	Across Heater Terminals of Sockets	2.1
Heater Voltages No. 245 Tubes	A. C. 0-1	Across Heater Terminals of Audio Output Sockets	2.1
Heater Voltage R. F. Amplifier Tube	A. C. 0-3	Across Heater Terminals of Rectifier Socket	4.3
Plate Voltage Mixer Tube	D. C. 0-250	Between Plate Terminal of R. F. Amplifier Socket (+) and Chassis Base (-)	135-150
Plate Voltage I. F. Tube	D. C. 0-250	Between Plate Terminal of Mixer Socket (+) and Chassis Base (-)	135-150
Plate Voltage Oscillator Tube	D. C. 0-250	Between Plate Terminal of I. F. Socket (+) and Chassis Base (-)	135-150
Plate Voltage Demodulator Tube	D. C. 0-250	Between Plate Terminal of Oscillator Socket (+) and Chassis Base (-)	135-150
Plate Voltage Demodulator Tube	D. C. 0-250	Between Plate Terminal of Demodulator Socket (+) and Chassis Base (-)	190-213

STROMBERG - CARLSON TEL. MFG. CO. MODEL 25,26 AU
Condenser-Resistor Values

NOS. 25 AND 26 RECEIVERS

II. COMPONENT IDENTIFICATION TABLES

TABLE I. INDUCTOR IDENTIFICATION

Designation	Function	Value
L ₁	Antenna Inductor	.9 Millihenry
L ₂	First Coil Preslector Bi-resonator	195 Microhenrys
L ₃	Second Coil Preslector Bi-resonator	195 Microhenrys
L ₄	Primary of Radio Transformer	195 Microhenrys
L ₅	First Coil of Second Bi-resonator	195 Microhenrys
L ₆	Second Coil of Second Bi-resonator	10 Millihenrys
L ₇	Primary of First I. F. Transformer	10 Millihenrys
L ₈	Secondary of First I. F. Transformer	10 Millihenrys
L ₉	Primary of Second I. F. Transformer	10 Millihenrys
L ₁₀	Secondary of Second I. F. Transformer	15 Microhenrys
L ₁₁	Plate Inductor of Oscillator	3.5 Microhenrys
L ₁₂	Cathode Coupling Inductor of Mixer Tube	158 Microhenrys
L ₁₃	Grid Inductor of Oscillator	40 Millihenrys
L ₁₄	Demodulator Plate Radio Frequency Choke	
L ₁₅	Primary of Push-Pull Input Transformer	
L ₁₆	Secondary of Push-Pull Input Transformer	
L ₁₇	Primary of Push-Pull Input Transformer	
L ₁₈	Secondary of Push-Pull Output Transformer	
L ₁₉	Primary of Push-Pull Output Transformer	
L ₂₀	Secondary of Push-Pull Output Transformer	
L ₂₁	Primary of Power Transformer	
L ₂₂	Secondary of Power Transformer for Heaters	
L ₂₃	Secondary of Power Transformer for Output Tube Filaments	
L ₂₄	Secondary of Power Transformer for Plates of Rectifier Tube	
L ₂₅	Secondary of Power Transformer for Rectifier Filament	
L ₂₆	First Ripple Filter Inductor	
L ₂₇	Second Ripple Filter Inductor	
L ₂₈	Speaker Field Winding	

TABLE II. RESISTOR IDENTIFICATION

Designation	Function	Value
R ₁	Grid Bias Feeder of Radio Amplifier	500 Ohms
R ₂	Filter Resistor Plate Circuit of Radio Amplifier	600 Ohms
R ₃	Grid Bias Feeder for Mixer of I. F. Amplifier	100,000 Ohms
R ₄	Grid Bias Feeder for Mixer Tube	500 Ohms
R ₅	Filter Resistor for Screen Circuits of Mixer and I. F. Amplifier	600 Ohms
R ₆	Filter Resistor for Demodulator Screen Circuit	10,000 Ohms
R ₇	Mid-tap Resistor Heater Circuit (at Mixer Tube)	3 Ohms
R ₈	Grid Bias Feeder for Demodulator	5 Megohms
R ₉	Grid Bias Feeder for Demodulator	100,000 Ohms
R ₁₀	Cathode Resistor of Demodulator Tube	20,000 Ohms

TABLE II. RESISTOR IDENTIFICATION—Continued


Designation	Function	Value
R ₁₁	Shunt Resistor for Primary of Push-Pull Input Transformer	250,000 Ohms
R ₁₂	Hum Balancer Potentiometer	400 Ohms
R ₁₃	Grid Biasing Resistor at Power Output Tube	750 Ohms
R ₁₄	Mid-Tap Resistor of Filament Circuit of Output Tube	10 Ohms
R ₁₅	Volume Control Potentiometer	1,000 Ohms
R ₁₆	Filter Resistor for Grid Bias Circuits	100,000 Ohms (10,000 Ohms 25 Cycles)
R ₁₇	Filter Resistor of Screen Circuits, 25 Cycles Only	40,000 Ohms
R ₁₈	Series Grid Resistor of Oscillator	500 Ohms
R ₁₉	Cathode Resistor of Mixer Tube	10,000 Ohms
R ₂₀	Cathode Resistor of Oscillator Tube	6,500 Ohms
R ₂₁	Auxiliary Voltage Divider Resistor	350 Ohms
R ₂₂	Section of Voltage Divider Resistor	780 Ohms
R ₂₃	Section of Voltage Divider Resistor	100 Ohms
R ₂₄	Section of Voltage Divider Resistor	8,900 Ohms
R ₂₅	Section of Voltage Divider Resistor	3,200 Ohms
R ₂₆	Section of Voltage Divider Resistor	4,760 Ohms
R ₂₇	Filter Resistor of Demodulator Plate Circuit	40,000 Ohms

TABLE III. CAPACITOR IDENTIFICATION

Designation	Function	Value
C ₁	Range Control Capacitor	.015 Mf.
C ₂	"Long Antenna" Aligning Capacitor	
C ₃	"Short Antenna" Aligning Capacitor	
C ₄	Unit of Variable Gang Capacitor	400 Minf. Max.
C ₅	Unit of Variable Gang Capacitor	400 Minf. Max.
C ₆	Unit of Variable Gang Capacitor	400 Minf. Max.
C ₇	Unit of Variable Gang Capacitor	.04 Mf.
C ₈	First Bi-resonator Main Coupling Capacitor	.3 Mf.
C ₉	Plate Circuit By-pass of Radio Amplifier	.3 Mf.
C ₁₀	Screen Circuit By-pass of Radio Amplifier	.04 Mf.
C ₁₁	Second Bi-resonator Main Coupling Capacitor	.3 Mf.
C ₁₂	Grid Circuit By-pass of Mixer and I. F. Amplifier	
C ₁₃	Aligning Capacitor for Primary of First I. F. Transformer	
C ₁₄	Screen Circuit By-pass for Mixer and I. F. Amplifier	
C ₁₅	Grid Circuit By-pass of Demodulator	
C ₁₆	Aligning Capacitor for Secondary of Second I. F. Transformer	
C ₁₇	"Grid Capacitor" of Demodulator	.250 Mmf.
C ₁₈	Cathode By-pass of Demodulator	.6 Mf.
C ₁₉	Screen Circuit By-pass of Demodulator	.3 Mf.
C ₂₀	Demodulator Plate Filter Capacitor	100 Mmf.

MODEL 27 AC
Chassis Wiring



STROMBERG-CARLSON TEL. MFG. CO.

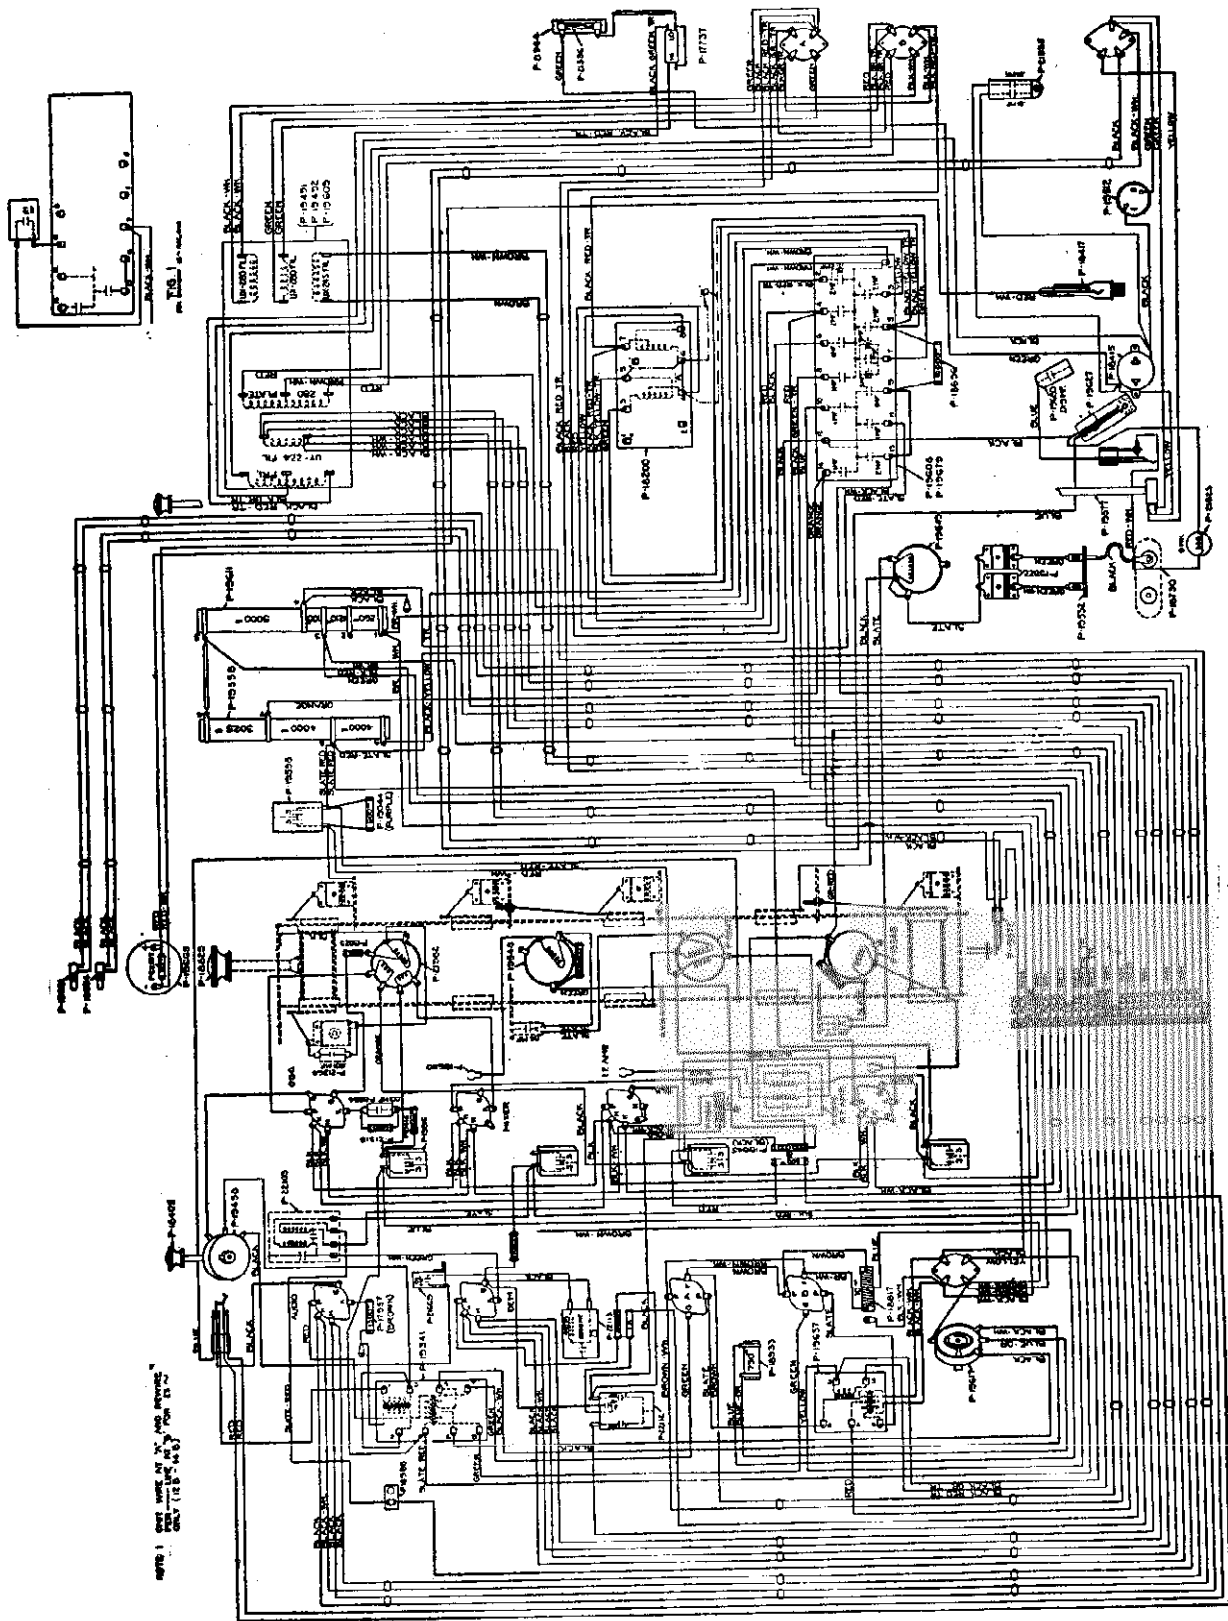

STROMBERG - CARLSON TEL. MFG. CO.

Schematic Circuit of No. 27 Superheterodyne Receiver

PEAK FREQUENCY 175 KC

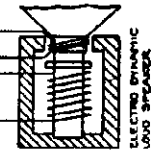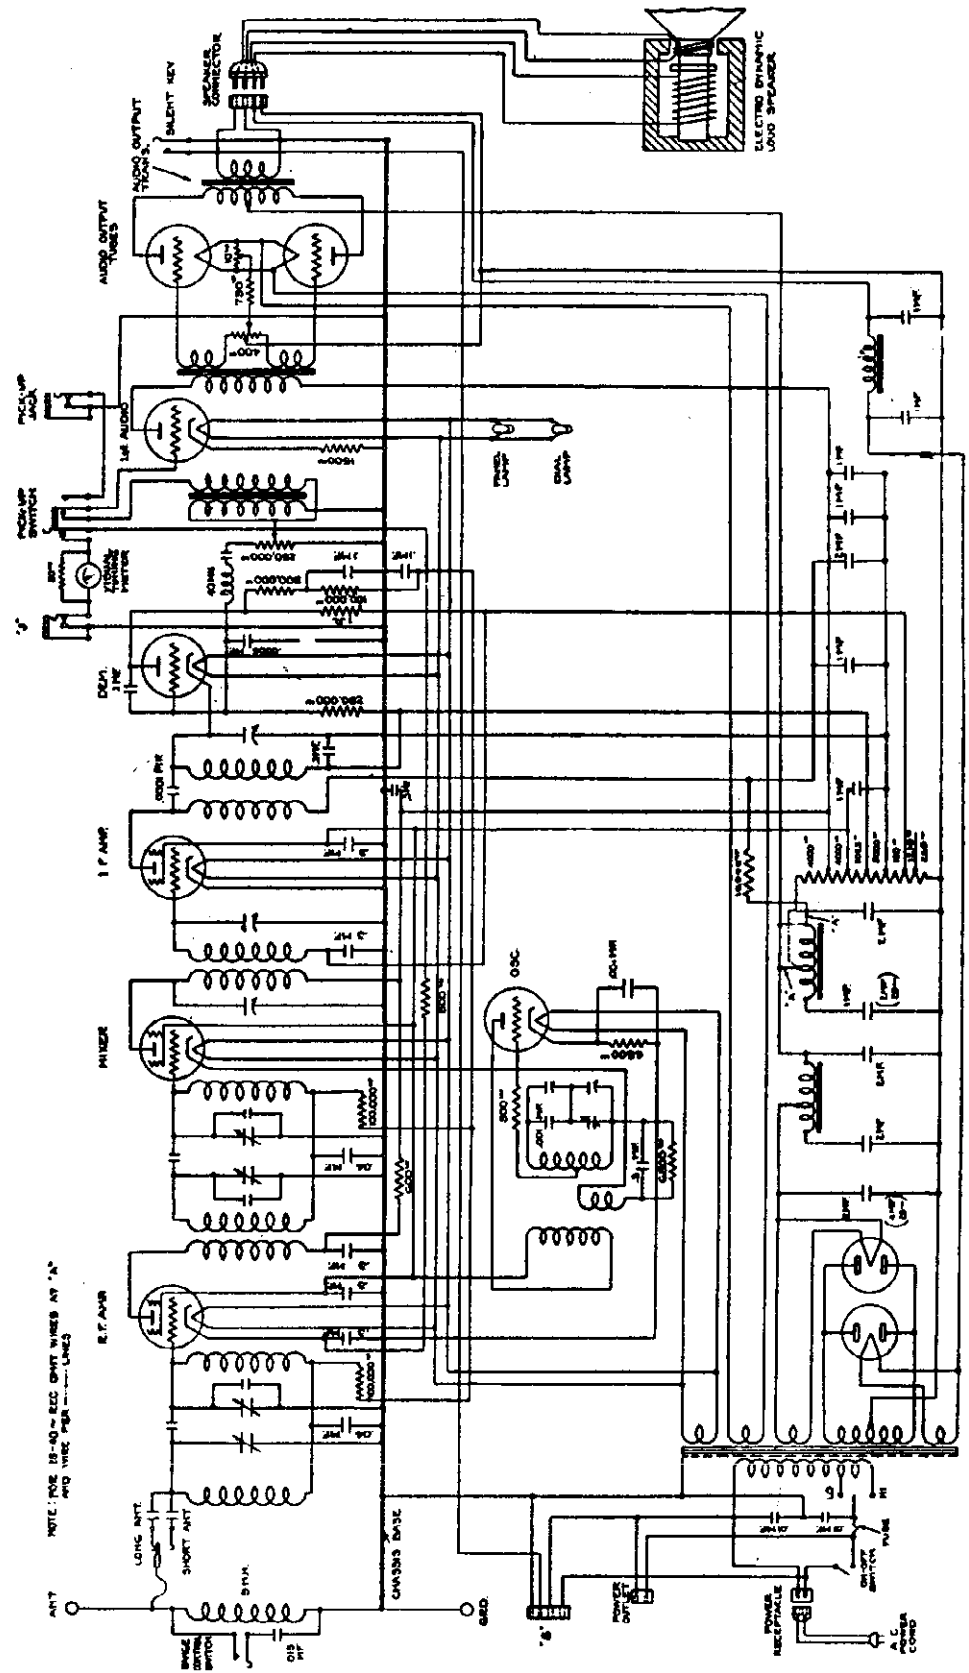

STROMBERG - CARLSON TEL. MFG. CO.

MODEL 27
Voltage
Parts List

Part Number	Name of Part	Description of Part	Required per Receiver	Part Number	Name of Part	Description of Part	Required per Receiver
P-18429	Knob, Station Selector	Large Moulded Knob	1	P-18544	Audio Transformer Assembly	First Audio and Push-Pull Input Transformer	1
P-18405	Knob, Volume Control, On-Off and Silent Key	Small Moulded Knob	3	P-18677	Audio Output Transformer	Push-Pull Output Transformer	1
P-19665	Meter	Visual Tuning Meter	1	P-18730	Binding Post Assembly	Antenna and Ground Binding Post	1
P-19735	Pick-up Head	Low Impedance Magnetic Pick-up	1	P-19504	Bracket Assembly	Carbon Resistor Mounting	4
P-19656	Pin Plug Assembly	Antenna Pin Tip	1	P-18984	Bracket Assembly	Pilot Lamp Socket Mounting	1
P-19532	Pin Jack	Antenna Pin Jacks	1	P-18691	Bracket Assembly	Voltage Divider Mounting	2
List 3027	Plug	Pick-up Cord Plug	1	P-18817	Cap	Aligning Capacitor Covers	8
P-19673	Potentiometer	Phonograph Volume Control	1	P-19522	Capacitor, Aligning	Aligning Capacitor for Hi-Resonator Circuits	3
P-19617	Potentiometer	Hum Balancer	1	P-19531	Capacitor, Aligning	Detector Stage Aligning Capacitor	1
P-18415	Receptacle, Convenience Outlet	Power Supply Outlet—Rear of Chassis	1	P-19520	Capacitor, Aligning	Antenna Aligning Capacitor	2
P-19512	Receptacle, Supply Cord	Input Power Supply Receptacle	1	P-21964	Capacitor, Aligning	Oscillator Series Tuning Capacitor	1
P-21562	Resistor, 1 Megohm	Carbon Type, Brown-Black-Green	1	P-19516	Capacitor Assembly	Radio Bi-Pass Capacitors—Two .3 MF Units	4
P-21697	Resistor, 500,000 ohms	Carbon Type, Green-Black-Yellow	1	P-19508	Capacitor Assembly	Radio Bi-Pass Capacitors—Two .3 MF Units	1
P-21361	Resistor, 250,000 ohms	Carbon Type, Red-Green-Yellow	1	P-22112	Capacitor Assembly	Radio Bi-Pass Capacitors—Three .1 MF Units	1
P-19533	Resistor, 100,000 ohms	Carbon Type, Brown-Black-Yellow	2	P-19608	Capacitor Assembly	Filter Capacitor Block—60 Cycle	1
P-19915	Resistor, 100,000 ohms	Carbon Type, Black	1	P-19679	Capacitor Assembly	Filter Capacitor Block—25 Cycle	1
P-19606	Resistor, 10,000 ohms	Carbon Type, Blue	1	P-19452	Capacitor	Bi-Resonator Coupling Capacitor—04 MF	1
P-21315	Resistor, 6,500 ohms	Carbon Type, Blue-Green-Red	2	P-19680	Capacitor	Range Control Capacitor—.015 MF	1
P-19257	Resistor, 1,500 ohms	Carbon Type, Brown	1	P-21334	Capacitor	Fixed Capacitor—.001 MF	1
P-19044	Resistor, 800 ohms	Carbon Type, Purple	1	P-21535	Capacitor	Line Filter Across A. C. Input	1
P-19023	Resistor, 500 ohms	Carbon Type, Pink	2	P-21361	Capacitor	Series Tuning Oscillator Tuning	1
P-19817	Resistor, 10 ohms	Wire Wound (mid-tap)	1	P-19549	Coil Assembly R. F.	First Coil of First Bi-Resonator	1
P-19561	Resistor, 3 ohms	Wire Wound (mid-tap)	1	P-19548	Coil Assembly R. F.	Second Coil of First and Second Bi-Resonators	2
P-19558	Resistor, 11,025 ohms	Voltage Divider (Vitreous Enamelled)	1	P-19547	Coil Assembly R. F.	First Coil of Second Bi-Resonator	1
P-19611	Resistor, 6,570 ohms	Voltage Divider (Vitreous Enamelled)	1	P-21962	Coil Assembly, Oscillator	Oscillator Tuning Inductor	1
P-18933	Resistor, 750 ohms	Vitreous Enamelled Type	1	P-21975	Coil and Capacitor Assembly	First I. F. Transformer	1
P-19572	Silent Tuning Key	Silent Tuning Key Assembly	1	P-22103	Coil and Capacitor Assembly	Second I. F. Transformer	1
P-19598	Socket	UX Type (4 Prong)	5	P-18746	Cone and Moving Coil Assembly	Moving Element of P-19410 Dynamic Speaker	1
P-19507	Socket	UY Type (5 Prong)	7	P-19502	Cord	Power Supply Cord to Chassis	1
P-19410	Speaker	Complete Assembly—10" Cone	1	P-19415	Cord	Speaker Connector Cord	1
P-17737	Switch	Hi-Lo Switch	1	P-19629	Dial	Station Selector Dial	1
P-19577	Switch	On-Off Switch on Local-Distance Switch Assembly	1	P-19486	Drive Assembly	Driving Unit for Gang Tuning Capacitor Assembly	1
P-19491	Transformer, Power	60 Cycle, 110 Volt	1	P-18701	Escutcheon Assembly	Selector Dial Escutcheon	1
P-19492	Transformer, Power	25-60 Cycle, 110 Volt	1	P-22113	Filter Assembly	Demodulator Plate Filter	1
P-19608	Transformer, Power	25-60 Cycle, 220 Volt	1	P-19627	Frame and Spring Assembly	Pick-up Jack	1
P-18957	Transformer, Pick-up	Pick-up Input Transformer	1	P-19630	Grid Clip	Control Grid Clips for Tetrodes	3
P-19474	Volume Control Assembly	Volume Control and Phonograph Switch Assembly	1	P-19200	Inductor Assembly	Filter Inductor Assembly—Double "B" Choke	1
				P-18417	Jack	Remote Control Jack	1


Voltage	Meter	Scale	Where Measured	Approx. Value in Volts	Voltage	Meter	Scale	Where Measured	Approx. Value in Volts
Heater Voltages No. 224 and 227 Tubes	A. C.	0-4	Across Heater Terminals of 224 and 227 Tube Sockets	2.4	Screen Voltages R. F. Mixer and I. F. Tubes	D. C.	0-250	Between Screen Terminals of R. F., Mixer and I. F. Sockets (+) and Chassis Base (-)	75-90
Filament Voltages No. 245 Tubes	A. C.	0-4	Across Filament Terminals of Audio Output Sockets	2.4	"B" Voltages R. F. Mixer and 1st A. F. Tubes	D. C.	0-250	Between Terminal 8 on Voltage Divider (+) and Chassis Base (-)	100-165
Filament Voltages No. 280 Tubes	A. C.	0-8	Across Filament Terminals of Rectifier Tube Sockets	4.8	"B" Voltage Oscillator Tube	D. C.	0-250	Between Screen Terminal of Mixer Tube Socket (+) and Chassis Base (-)	75-90
Plate Voltage R. F. Tube	D. C.	0-250	Between Plate Terminal of R. F. Amplifier Socket (+) and Chassis Base (-)	140-165	"B" Voltage I. F. Tube	D. C.	0-250	Between Terminal 9 on Capacitor Assembly (+) and Chassis Base (-)	210-230
Plate Voltage Mixer Tube	D. C.	0-250	Between Plate Terminal of Mixer Socket (+) and Chassis Base (-)	140-165	"B" Voltage Audio Output Tubes	D. C.	0-250	Between Terminal 1 on Output Transformer (+) and Chassis Base (-)	230-260
Plate Voltage Oscillator Tube	D. C.	0-250	Between Plate Terminal of Oscillator Socket (+) and Chassis Base (-)	75-90	"C" Voltage I. F. Tube	D. C.	0-10	Between Terminals 3 (-) and 1 (+) on Voltage Divider	2.0
Plate Voltage I. F. Tube	D. C.	0-250	Between Plate Terminal of I. F. Socket (+) and Chassis Base (-)	210-230	"C" Voltage Audio Output Tubes	D. C.	0-250	Across 750 ohm Bypass Resistor	15-55
Plate Voltage Demodulator Tube	D. C.	0-250	Between Plate Terminal of Demodulator Socket (+) and Chassis Base (-)	See Note A	Speaker Field Voltage	D. C.		Across Small Pins on Speaker Connector Socket	335-365
Plate Voltage 1st A. F. Tube	D. C.	0-250	Between Plate Terminal of 1st A. F. Socket (+) and Chassis Base (-)	110-125	Plate Voltage A. C. Per Anode No. 200 Rectifier Tubes	A. C.	0-650	Between Plate Terminals of Rectifier Tube Sockets and Terminal 1 on Voltage Divider	530-590
Plate Voltages Audio Output Tubes	D. C.	0-250	Between Plate Terminals of Audio Output Sockets (+) and Mid Tap of 10 ohm Resistor (-)	250-270					
"C" Voltage R. F. Tube	D. C.	0-110	Between Cathode Terminal of R. F. Socket (+) and Chassis Base (-)	2.4					
"C" Voltage Mixer Tube	D. C.	0-10	Between Cathode Terminal of Mixer Socket (+) and Chassis Base (-)	0.5					
Grid Voltage Oscillator Tube	D. C.	0-250	Between Cathode Terminal of Oscillator Socket (+) and Chassis Base (-)	27-35					
Control Grid Voltage I. F. Tube	D. C.	0-10	Between Control Grid Clip of I. F. Tube (-) and Cathode Terminal of I. F. Socket (+)	2.8					
Grid Voltage Demodulator Tube	D. C.	0-250	Between Cathode Terminal of Demodulator Socket (+) and Chassis Base (-)	45-55					
Grid Voltage 1st A. F. Tube	D. C.	0-10	Between Cathode Terminal of 1st A. F. Socket (+) and Chassis Base (-)	0.5					
Grid Voltage Audio Output Tube	D. C.	0-250	Between Grid Terminals of Audio Output Sockets (-) and Mid Tap of 10 ohm Resistor (+)	40-50					

NOTE "A"—No voltage can be obtained across these terminals as the Demodulator Plate is connected to the Chassis Base through 1 megohm and 100 ohm resistors.

NORMAL VOLTAGE READINGS

MODEL 29
Schematic

STROMBERG - CARLSON TEL. MFG. CO.

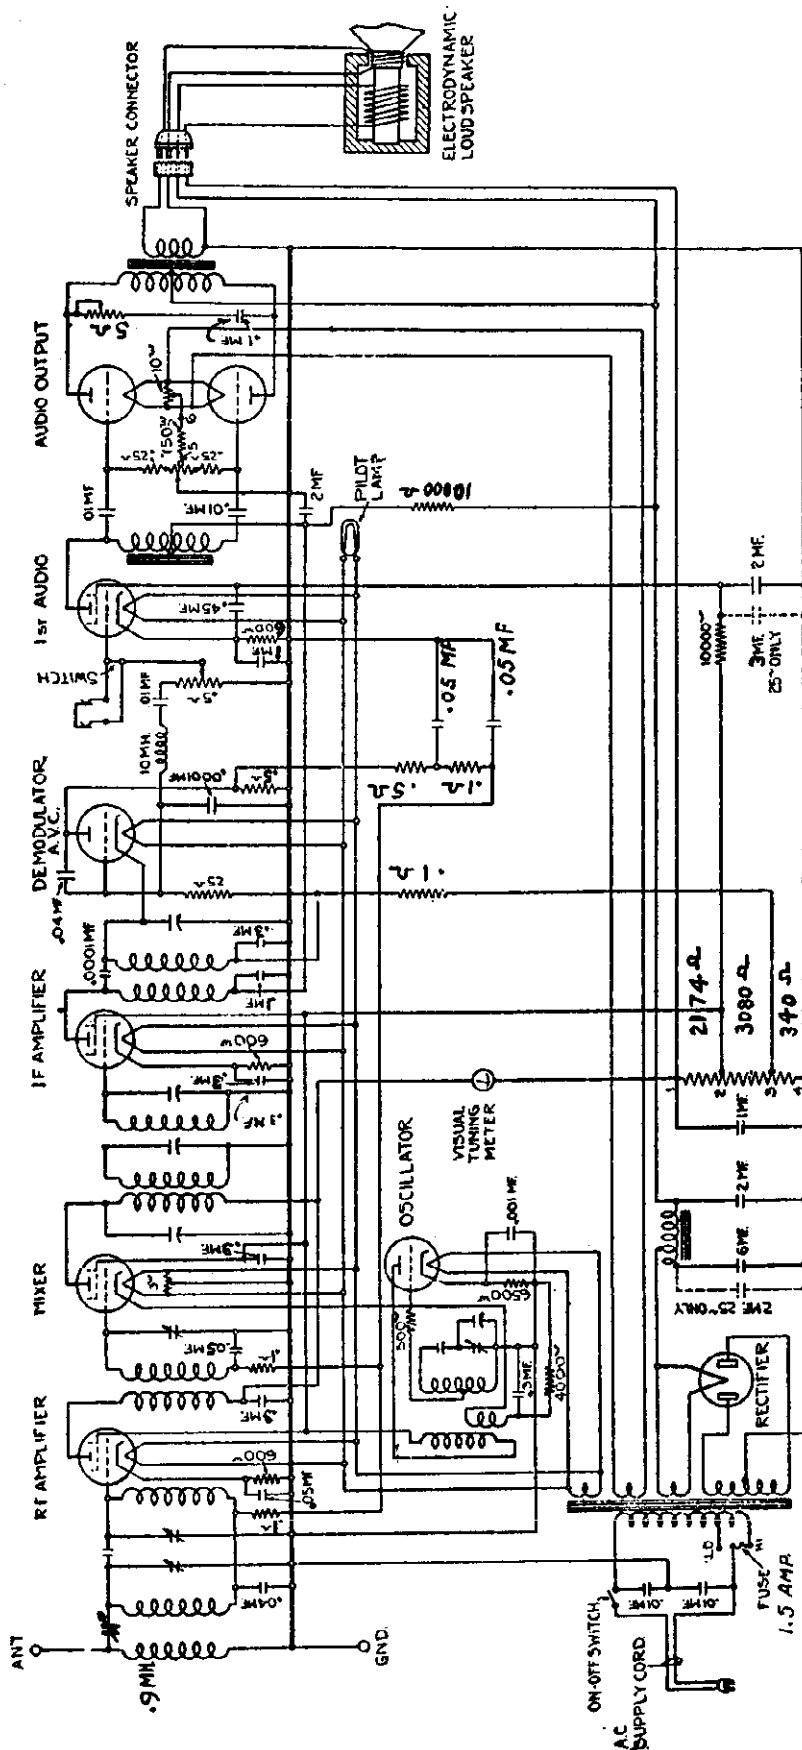

Model 29 (1932)

RECT	○ '80	○ '77	○ '35	○ '35
	○ '45	○ '35	○ '27	○ '35
PILOT 2.5 V.				
FRONT				

The Stromberg-Carlson No. 29 Radio Receiver is a Superheterodyne employing nine tubes. An improved Automatic Volume Control circuit with Visual Tuning Meter is incorporated.

Four No. 235 tubes are used as R. F. Amplifier, Mixer, I. F. Amplifier, and First Audio Amplifier. Two No. 227 tubes are used as Oscillator and Demodulator-AVC. Two No. 245 tubes are used in the push-pull output stage. A No. 280 Rectifier is used in the power supply.

A Bi-resonator is used to couple the antenna to the R. F. amplifier to prevent any cross modulation. The R. F. amplifier is coupled to the mixer by an ordinary tuned R. F. transformer. This gives three tuning circuits (four gang tuning capacitor) for R. F. selectivity ahead of the mixer, thus the image response ratio is exceedingly high. The oscillator is coupled to the cathode circuit of the mixer tube in the regular manner. The I. F. output of the mixer tube is fed into a Tri-resonator (three tuned circuit transformer) and thence to the I. F. amplifier tube. This tube is coupled to the duo-diode demodulator-AVC tube by a choke-tuned circuit arrangement. The audio output of the duo-diode is fed through a radio frequency filter to the resistor unit of the Manual Volume Control which acts as a coupling resistor to the audio amplifier. The A. V. C. voltages from the other diode circuit are led back to the control grids of the first two tubes. A No. 235 screen grid tube is used in the first audio stage to obtain high amplification without distortion.

MODEL 29
Parts List
Voltage

STROMBERG - CARLSON TEL. MFG. CO.

REPLACEMENT PARTS

(See Chassis Assembly on Page 4 and Wiring Diagram on Page 2)

Part Number	Part	Description of Part	Required per Receiver
P-22288	Audio Transformer	Audio Output Transformer	1
P-22289	Audio Transformer	Push-Full Transformer	1
P-21663	Bracket Assembly	Voltage Divider Mounting	1
P-22352	Capacitor	By-Pass Capacitor	1
P-22353	Capacitor, Aligning	Oscillator "Series Aligner"	1
P-21334	Capacitor	.001 Mfd.	1
P-21535	Capacitor	.01 Mfd.	1
P-21669	Capacitor	.01 Mfd.	3
Code No. 21	Capacitor	1 Mfd. Filter Capacitor	1
Code No. 22	Capacitor	2 Mfd. Filter Capacitor	1
P-19452	Capacitor	Bi-Resonator Coupling Capacitor .04 Mfd.	1
P-22411	Capacitor	.04 Mfd.	1
P-21282	Capacitor, Aligning	Aligner for First I. F. Transformer	1
P-22338	Capacitor Assembly	Filter Capacitor (80 Cycle)	1
P-22342	Capacitor Assembly	Filter Capacitor (25 Cycle)	1
P-22290	Coil and Capacitor Assembly	First I. F. Transformer	1
P-22291	Coil and Capacitor Assembly	Second I. F. Transformer	1
P-22355	Coil Assembly	First Coil of Bi-Resonator	1
P-22359	Coil Assembly	Second Coil of Bi-Resonator	1
P-22360	Coil Assembly	R. F. Transformer	1
P-22361	Coil Assembly	Oscillator Coil	1
P-21623	Coil Assembly	Antenna Inductor	1
P-21566	Fuse	1 1/2 Amperes	1
P-19630	Grid Clip		4
P-21704	Grid Clip Assembly		2
P-21230	Inductor Assembly	Filter Inductor—"B" Choke	1
P-21277	Knob	Antenna Aligner	1
P-22390	Knob	Selector Knob	1
P-22391	Knob	Volume Control and Clarifier-Switch	2
F-22351	Meter	Visual Tuning Meter	1
P-19617	Potentiometer	Hum Adjuster	1
P-22318	Potentiometer and Switch	Volume Control and Phonograph Switch and Clarifier and "On-Off" Switch	2
P-12661	Resistor, 3-Ohms	Resistor across Heater of Mixer Tube	1
P-12817	Resistor, 10-Ohms	Resistor across Filament of Output Tubes	1
P-19023	Resistor, 500-Ohms, "C" Type	Carbon Resistor, Green, Black, and Brown	1
P-22327	Resistor, 600-Ohms, "C" Type	Carbon Resistor, Blue, Black, and Brown	3
P-22328	Resistor, 4,000-Ohms, "C" Type	Carbon Resistor, Yellow, Black, and Red	1
P-22329	Resistor, 6,500-Ohms, "C" Type	Carbon Resistor, Blue, Green, and Red	1
P-22353	Resistor, 7,344-Ohms	Voltage Divider	1
P-18696	Resistor, 10,000-Ohms, "B" Type	Carbon Resistor, Brown, Black, and Orange	1
P-22330	Resistor, 10,000-Ohms, "C" Type	Carbon Resistor, Brown, Black, and Orange	1
P-22333	Resistor, 100,000-Ohms, "D" Type	Carbon Resistor, Brown, Black and Yellow	4
P-21561	Resistor, 250,000-Ohms, "C" Type	Carbon Resistor, Red, Green, and Yellow	2
P-22334	Resistor, 250,000-Ohms, "D" Type	Carbon Resistor, Red, Green, and Yellow	2
P-22335	Resistor, 500,000-Ohms, "D" Type	Carbon Resistor, Green, Black, and Yellow	2
P-22344	Resistor and Coil Assembly	Demodulator Plate Filter	1
P-22346	Transformer	Power, 60 Cycle, 110 Volts	1
P-22347	Transformer	Power, 25-60 Cycle, 110 Volts	1

NORMAL VOLTAGE READINGS

These voltage readings correspond to a line voltage at 120 volts with the fuse in the "HI" position or 110 volts in the "LO" position. The fuse should be set in the proper position for the line voltage obtained before making measurements. When voltages are measured proper allowance should be made for a difference in line voltage above or below 110 or 120 volts. Be sure to make these readings with the Meter and Scale indicated, otherwise the results will not agree with those tabulated. Alternating voltages are indicated by italics.

Voltage	Meter	Scale	Where Measured	Approx. Value in Volts
Heater Voltages No. 227 and No. 228 Tubes	A. C.	0-4	Across Heater Terminals of Sockets	2.60
Filament Voltage No. 26A Tubes	A. C.	0-4	Across Filament of Audio Output Socket	2.60
Plate Voltage Radio Amplifiers	D. C.	0-250	Between Plate Terminal of R. F. Amplifier Socket (+) and Chassis Base	170
Plate Voltage Mixer Tube	D. C.	0-250	Between Plate Terminal of Mixer Socket (+) and Chassis Base (-)	170
Plate Voltage Oscillator Tube	D. C.	0-250	Between Plate Terminal of Oscillator Tube Socket (+) and Chassis Base (-)	87
Plate Voltage I. F. Tube	D. C.	0-250	Between Plate Terminal of First I. F. Socket (+) and Chassis Base (-)	100
Plate Voltage First Audio Tube	D. C.	0-250	Between Plate Terminal of First Audio Socket (+) and Chassis Base	120
Plate Voltage Audio Output Tubes	D. C.	0-250	Between Plate Terminals of Audio Output Sockets (+) and Midtap 18-Ohm Resistor Midtap (-)	200
"C" Voltage R. F. Amplifier	D. C.	0-10	Between Cathode Terminal of R. F. Amplifier Socket (+) and Chassis Base (-)	3
"C" Voltage Mixer Tube	D. C.	0-10	Between Cathode Terminal of Mixer Socket (+) and Chassis Base (-)	3
"C" Voltage I. F. Amplifier	D. C.	0-10	Between Cathode Terminal I. F. Socket (+) and Chassis Base (-)	3
Grid Voltage Oscillator Tube	D. C.	0-250	Between Cathode Terminal of Oscillator Socket (+) and Chassis Base (-)	10-15
Plate Voltage Demodulator Tube	D. C.	0-250	Between Voltage Divider Terminal No. 2 (+) and Chassis Base (-)	12.5
Screen Voltages of R. F. Amplifier, Mixer, and I. F. Amplifier	D. C.	0-250	Between Screen Terminals on Sockets (+) and Chassis Base (-)	55
"B" Voltage R. F. Amplifier	D. C.	0-250	Between High Side Voltage Divider (+) and Chassis Base (-)	175
"B" Voltage I. F. Amplifier and First Audio Tube	D. C.	0-250	Between Midtap First Audio Transformer (+) and Chassis Base (-)	200
"B" Voltage Output Tubes	D. C.	0-250	Between Midtap on Output Transformer (+) and Chassis Base (-)	200
"C" Voltage First A. F. Tube	D. C.	0-10	Between Cathode of First A. F. Tube (+) and Chassis Base (-)	3
"C" Voltage Output Tubes	D. C.	0-250	Across 750-Ohm Bypass Resistor	50
Speaker Field Voltage	D. C.	0-250	Across Small Pin on Speaker Connector Socket	197.5
Plate Voltage A. C. For Anode No. 280 Rectifier Tube	A. C.		Between Plate Terminals of No. 280 Rectifier Socket and Chassis Base	260
Filament Voltage No. 226 Rectifier Tube	A. C.	0-4	Between Filament Terminals of No. 226 Rectifier Socket	4.9

MODEL 38, 39, 40
1st Type
Schematic

STROMBERG - CARLSON TEL. MFG. CO.

ELECTRICAL SPECIFICATIONS

Type of Circuit	Superheterodyne
Type and Number of Tubes	4 No. 58, 2 No. 56, 2 No. 45, 1 No. 80
Voltage Rating	105-125 volts
Frequency Rating	60 cycles and 25-60 cycles
Power Consumption	110 watts
Undistorted Electrical Power Output of Chassis	3.2 watts

CIRCUIT DESCRIPTION


The four No. 58 triple-grid tubes are used as R. F. Amplifier, Mixer, I. F. Amplifier, and Demodulator-AVC. The two No. 56 tubes are used as Oscillator and First Audio Amplifier. The two No. 45 tubes are used in the push-pull output stage. The No. 80 is used as the rectifier in the power supply.

A Bi-resonator is used to couple the antenna to the R. F. amplifier to prevent any cross modulation. The R. F. amplifier is coupled to the mixer by an ordinary tuned R. F. transformer. This gives three tuning circuits (four gang tuning capacitor) for R. F. selectivity ahead of the mixer, thus the image response ratio is exceedingly high. The oscillator is coupled to the cathode circuit of the mixer tube in the regular manner. The I. F. output of the mixer tube is fed into a Tri-resonator (three tuned circuit transformer) and thence to the I. F. amplifier tube. This tube is coupled to the diode-triode demodulator-AVC tube by a single tuned circuit transformer.


The load resistor of the diode portion of the diode-triode forms the resistor unit of the first potentiometer of the dual volume control. The AVC voltage and the rectified audio signal are built up across this resistor. The AVC voltage is fed back to the grids of the first two tubes through a suitable filter. The audio voltage is applied to the control grid of the triode portion of this system through the movable contact of the potentiometer. The screen of the tube acts as the plate of the triode portion of the system, thus forming the triode audio amplifier in conjunction with the diode rectifier.

The output of this "plate" circuit is coupled to the second unit of the dual volume control which feeds the grid of the first audio tube. The output of this first audio stage is coupled to the push-pull output triodes. The Adjustable Automatic Clarifier system is connected across the primary of the push-pull input transformer. The output transformer feeds the signal from the power triodes to the high quality electro-dynamic speaker.

The power supply system employs two stages of filter; the first being of the resistance type, and the second using the field of the speaker as a choke. The plate supply for the output tubes is tapped off between these filter sections, while the remainder of the voltages are supplied from the voltage divider resistor.



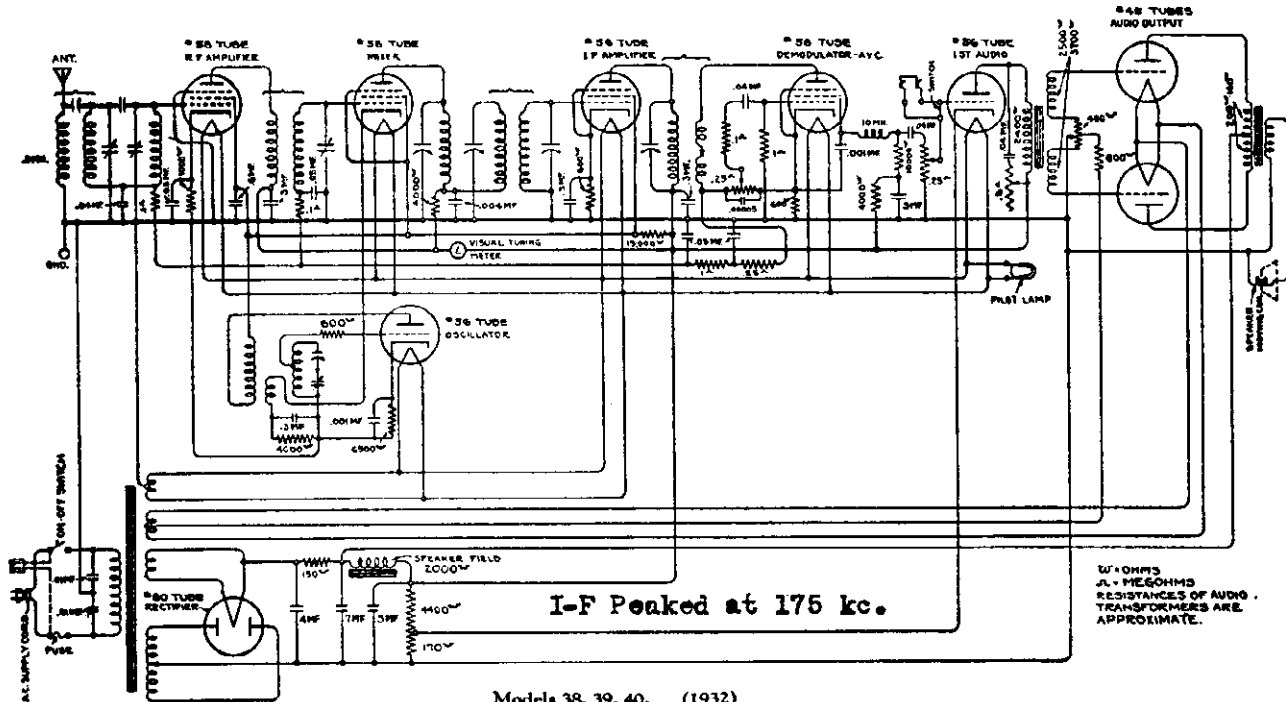


Models 38, 39, 40, (1932)

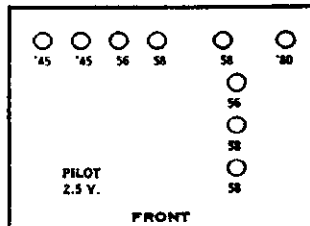

STROMBERG - CARLSON TEL. MFG. CO.

MODEL 38,39,41
1st Type
Chassis Wiring

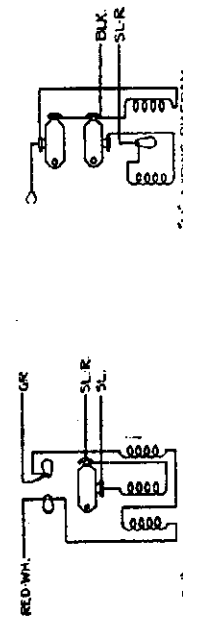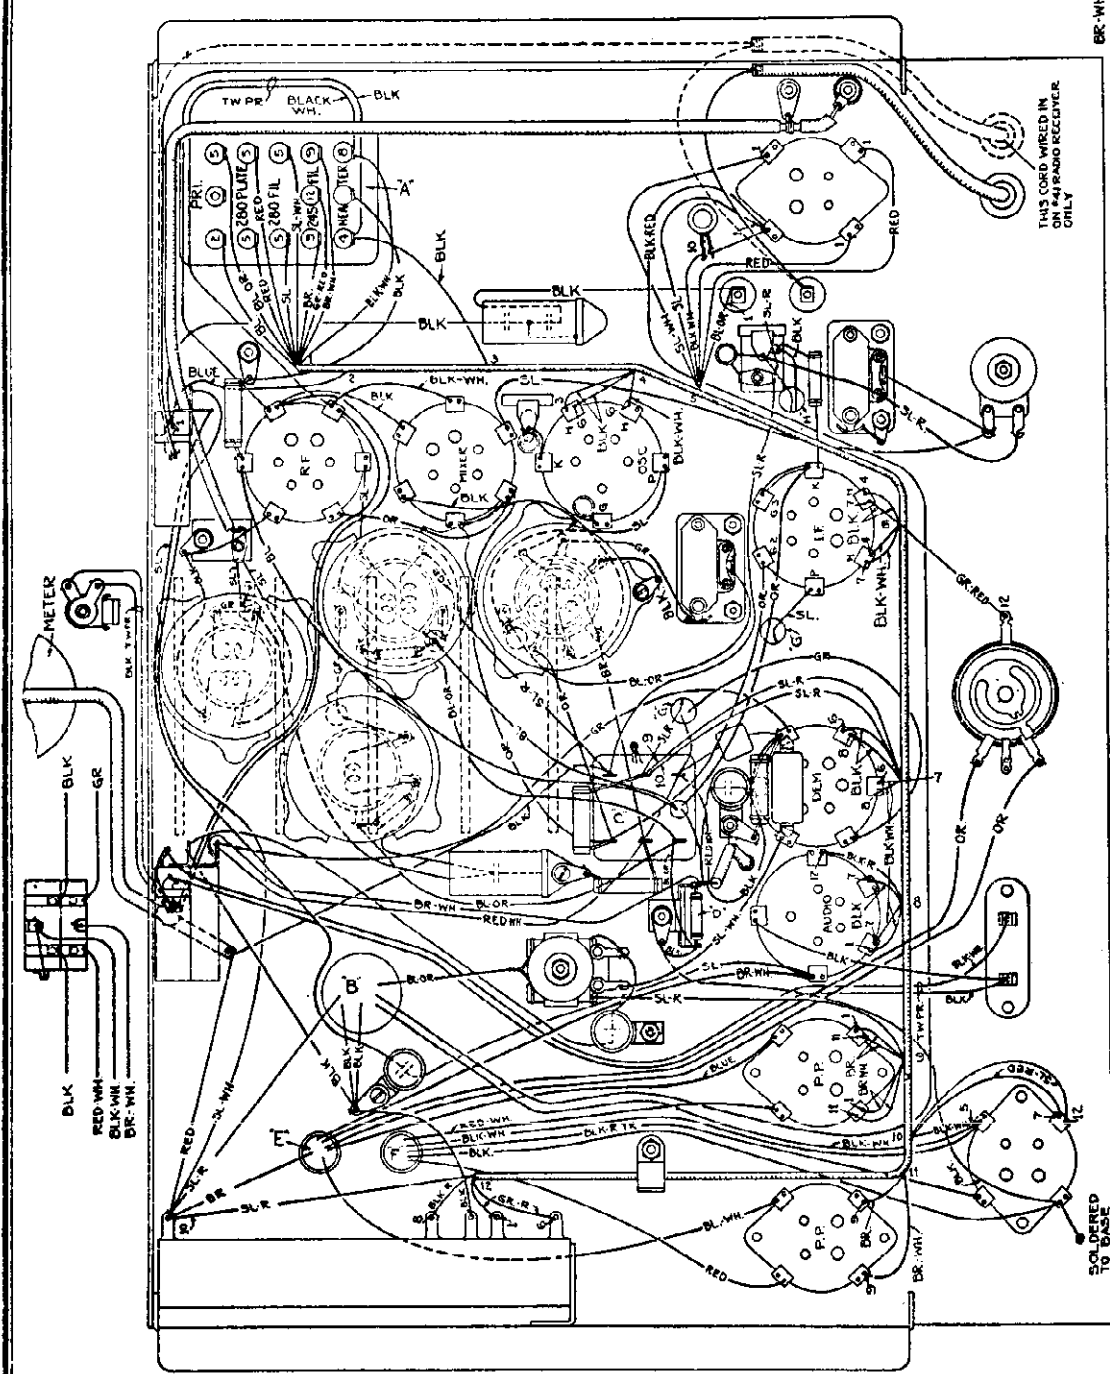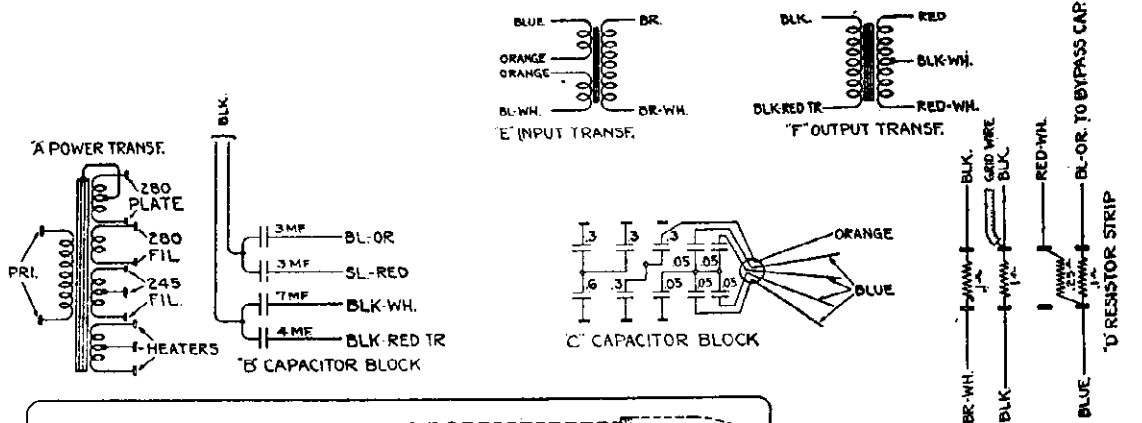

NOTE: ALL POINTS WHERE WIRES EMERGE FROM THE CHASSIS ARE TO BE WELDED TO THE CHASSIS. NUMBERS ON WIRES INDICATE POINT WHERE OTHER END OF WIRE EMERGES FROM CHASSIS.

THIS CORD WIRED IN ON #41 RADIO RECEIVER ONLY

SOLDERED TO BASE

MODEL 38, 39, 40

1st Type
Parts List
Voltage

STROMBERG - CARLSON TEL. MFG. CO.

NORMAL VOLTAGE READINGS

These voltage readings correspond to a line voltage at 120 volts.

Voltage	Meter	Scale	Where Measured	Appro. Value in Volts
Heater Voltages No. 56 and No. 58 Tubes	A. C.	0-4	Across Heater Terminals of Sockets	2.5
Filament Voltages No. 245 Tubes	A. C.	0-4	Across Filament Terminals of Audio Output Sockets	2.5
Filament Voltage No. 280 Tube	A. C.	0-8	Across Filament Terminals of No. 280 Rectifier Socket	5
Plate Voltage Radio Amplifier Tube	D. C.	0-250	Between Plate Terminal of R. F. Amplifier Socket (+) and Chassis Base (-)	165
Plate Voltage Mixer Tube	D. C.	0-250	Between Plate Terminal of Mixer Socket (+) and Chassis Base (-)	150
Plate Voltage Oscillator Tube	D. C.	0-250	Between Plate Terminal of Oscillator Socket (+) and Chassis Base (-)	80
Plate Voltage I. F. Tube	D. C.	0-250	Between Plate Terminal of I. F. Socket (+) and Chassis Base (-)	170
Plate Voltage Demodulator Tube	D. C.	0-250	Between Plate Terminal and Demodulator Socket (+) and Chassis Base (-)	0
Plate Voltage First Audio Tube	D. C.	0-250	Between Plate Terminal of First Audio Socket (+) and Chassis Base (-)	160
Plate Voltages Audio Output Tubes	D. C.	0-250	Between Plate Terminals of Audio Output Sockets (+) and Chassis Base (-)	285
"C" Voltage R.F. Amplifier Tube	D. C.	0-10	Between Cathode Terminal of R. F. Amplifier Socket (+) and Chassis Base (-)	6
"C" Voltage Mixer Tube	D. C.	0-10	Between Cathode Terminal of Mixer Socket (+) and Chassis Base (-)	8
"C" Voltage Oscillator Tube	D. C.	0-250	Between Cathode Terminal of Oscillator Socket (+) and Chassis Base (-)	25
"C" Voltage I. F. Tube	D. C.	0-10	Between Cathode Terminal of I. F. Socket (+) and Chassis Base (-)	3
"C" Voltage Demodulator Tube	D. C.	0-10	Between Cathode Terminal of Demodulator (+) and Chassis Base (-)	2.5-3
"C" Voltage First Audio Tube	D. C.	0-10	Between Cathode Terminal of First Audio Socket (+) and Chassis Base (-)	6.5
"C" Voltage Audio Output Tube	D. C.	0-250	Across 750 ohm Biasing Resistor	47
Screen Voltages R. F. Mixer and I. F. Tubes	D. C.	0-250	Between Screen Terminals on Sockets (+) and Chassis Base (-)	85
"B" Voltage R. F. Mixer, I. F. First Audio and Demodulator Tube	D. C.	0-250	Between High Side of Voltage Divider (+) and Chassis Base (-)	160
"B" Voltage Audio Output Tubes	D. C.	0-750	Between Mid-Tap of Output Transformer (+) and Chassis Base (-)	300
Speaker Field Volts	D. C.	0-250	Across Small Pins on Speaker Connector Socket	125
Plate Voltage A. C. per Anode No. 280 Rectifier Tube	A. C.		Between Plate Terminals of No. 280 Rectifier Socket and Chassis Base	340

REPLACEMENT PARTS

Part Number	Part	Description of Part	Required per Receiver
P-22540	Audio Transformer Assembly	Input and Output Push-Pull Transformer	1
P-21663	Bracket Assembly	Voltage Divider Mounting	1
P-22353	Capacitor	Oscillator "Series Aligner"	1
P-21324	Capacitor	.001 Mfd.	2
P-22557	Capacitor	.004 Mfd.	1
P-19597	Capacitor	.04 Mfd.	1
P-21535	Capacitor	2-.01 Mfd.	1
P-22411	Capacitor	.04 Mfd.	2
P-22556	Capacitor	Aligner in Tri-Resonator	1
P-22565	Capacitor Assembly	R. F. and I. F. By-Pass Capacitors	1
P-22544	Capacitor Assembly	Filter Capacitor Assembly	1
P-22540	Coil	Tri-Resonator Circuit and Demodulator Plate Circuit	2
P-22358	Coil Assembly	First Coil of Bi-Resonator	1
P-22359	Coil Assembly	Second Coil of Bi-Resonator	1
P-22360	Coil Assembly	R. F. Transformer	1
P-22361	Coil Assembly	Oscillator Coil	1
P-21623	Coil Assembly	Antenna Inductor	1
P-21666	Fuse	1.5 Amperes	1
P-19630	Grid Clip		1
P-21704	Grid Clip Assembly		2
P-22532	I. F. Transformer	First I. F. Transformer	1
P-22533	I. F. Transformer	Second I. F. Transformer	1
P-21277	Knob	Antenna Aligner	1
P-22390	Knob	Selector Knob	1
P-22391	Knob	Volume Control and Clarifier Switch	2
P-22351	Meter	Visual Tuning Meter (Weston No. 654)	1
P-19617	Potentiometer	Ham Adjuster	1
P-22593	Potentiometer	Clarifier and On-Off Switch	1
P-22546	Potentiometer	Dual Volume Control and Phonograph Switch	1
P-22594	Resistor, 150 Ohms	Filter Resistor	1
P-22594	Resistor, 5370 Ohms	Voltage Divider	1
P-21621	Resistor, 1,000 Ohms, "C" Type	Carbon Resistor, Brown, Black and Red	1
P-22329	Resistor, 6,500 Ohms, "C" Type	Carbon Resistor, Blue, Green and Red	1
P-22327	Resistor, 600 Ohms, "C" Type	Carbon Resistor, Blue, Black and Brown	3
P-22328	Resistor, 4,900 Ohms, "C" Type	Carbon Resistor, Yellow, Black and Red	3
P-22330	Resistor, 10,000 Ohms, "C" Type	Carbon Resistor, Brown, Black and Orange	1
P-22331	Resistor, 15,000 Ohms, "C" Type	Carbon Resistor, Brown, Green and Orange	1
P-22393	Resistor, 100,000 Ohms, "D" Type	Carbon Resistor, Brown, Black and Yellow	4
P-22384	Resistor, 250,000 Ohms, "D" Type	Carbon Resistor, Red, Green and Yellow	1
P-22561	Resistor, 1 Megohm, "D" Type	Carbon Resistor, Brown, Black and Green	1
P-21280	4 Pin Socket		4
P-22570	5 Pin Socket		2
P-22571	6 Pin Socket		4
P-22529	Transformer	Power, 60 Cycle, 110 Volts	1
P-22530	Transformer	Power, 25-60 Cycles, 110 Volts	1


MODEL 641

Resistance Data STROMBERG - CARLSON TEL. MFG. CO.

All tubes removed from sockets and AC plug removed from power supply lead.
 Speaker field disconnected. Volume control maximum unless otherwise stated
 Pickup disconnected

From Chassis To	Correct	Incorrect
Aerial (V.C.Max)	17 ohms	
Aerial (V.C. Varied)	0-5000 ohms*	*Antenna volume control is 20,000 ohms
1 RF Control Grid	3.8 ohms	TC- 1 rf Cg-Y
1 RF Cathode	164 ohms	BC- 1 rfK-Y (.3 mfd)
1 RF Screen	3,781 ohms	BC- 1 rf Sg-Y (.3 mfd)
1 RF Plate	8,297 ohms	BC- 1 rf P-Y (.3 mfd) BC- VD-Y (1. mfd) BC- 2 rf P-Y (.3 mfd) BC- 3 rf P-Y (.3 mfd)
1 RF Plate to 2 RF Plate	34 ohms	
2 RF Control Grid	3.5 ohms	TC- 2 rf Cg-Y
2 RF Cathode	164 ohms	See 1 RF Cathode
2 RF Screen	3,781 ohms	See 1 RF Screen
2 RF Plate	8,297 ohms	See 1 RF Plate
2 RF Plate to 1 RF Plate	34 ohms	
3 RF Control Grid	3.5 ohms	TC- 3 rf K-Y
3 RF Cathode	390 ohms	BC- 3 rf K-Y (.3 mfd)
3 RF Screen	3,781 ohms	See 1 RF Screen
3 RF Plate	8,297 ohms	See 1 RF Plate
Detector Control Grid	2,000,000 ohms	Also 3.5 ohms grid winding Grid condenser
Detector Cathode	15,000 ohms	BC- DK-Y (1.mfd)
Detector Plate	28,000 ohms	BC-DP-Y BC- AF Tr-Y (1 mfd) See RF Screen FC- Filter chk-Y
Detector Plate to '80 Fil	12,720 ohms	FC- Filter chk-Y See Detector Plate
'45 Control Grid	9,570 ohms	
'45 Fil to chassis	1,452 ohms	
'45 Plate to 80 Fil	1,403 ohms	BC- across tone filter. (2-.01 mfd) FC- Filter chk-Y
Across Speaker Terminals	1.7 ohms	
80 Fil to chassis	16,881 ohms	See Detector Plate FC- Tuned Filter chk-Y

641,

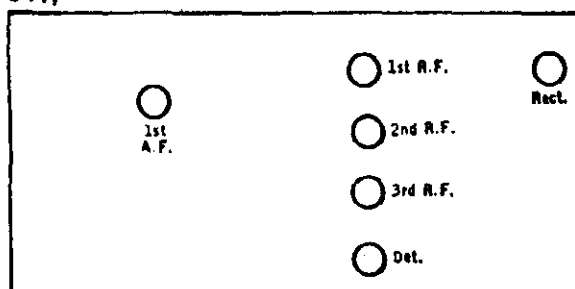

STROMBERG-CARLSON—Model 641
 Line Voltage 114—Set on High Volt Tap—Volume Control Position Max

TUBE NO. IN SOCKET	TYPE OF TUBE	POSITION OF TUBE	RESISTANCE PLUG IN SOCKET OF SET									
			TUBE OUT					TUBE IN TESTER				
			VOLTS	VOLTS	VOLTS	VOLTS	ADJUSTED	CATHODE HEATER PLATE	PLATE IN A GRID	PLATE IN A GRID	PLATE IN A GRID	PLATE IN A GRID
224	1st RF	2.45	140	2.24	136	3.5	3.5	1.5	4	1.5	4	1.5
224	2nd RF	2.45	140	2.24	136	3.5	3.5	1.5	4	1.5	4	1.5
224	3rd RF	2.45	140	2.24	136	3.5	3.5	1.5	4	1.5	4	1.5
227	Det.	2.45	278	2.24	240	3	3	1.6	-	-	-	-
245	Amp.	2.45	355	2.24	220	35	30	32	f	4	-	-

STROMBERG - CARLSON TEL. MFG. CO.

MODEL 846
Resistance Data


846 Cont'd

All tubes removed from receiver and AC power plug disconnected from supply circuit. Pickup switch in radio position.

From Chassis To	Correct	Incorrect
Aerial (V.C.Min)	10 ohms	
Aerial (V.C.Max)	20 ohms	
Aerial (V.C. Halfway)	5,000 ohms	approx Variable antenna V.C. has a value of 20,000 ohms
1 RF Tuning Condenser Stator	3.8 ohms	TC-Y
1 RF Control Grid	5,200,000 ohms	BLC- 1 rf Cg-grid wdg BC- 5 meg unit-Y BLC- AVC P-Y (.5 mfd) BC- 1 rf K-Y (.3 mfd) BC- 1 rf Sg-Y (.3 mfd) BC- 2 rf Sg-Y (.5 mfd) BC- 3 rf Sg-Y (.3 mfd) BC- 1 rf P-Y (.3 mfd) BC- 2 rf P-Y (.5 mfd) BC- 3 rf P-Y (.3 mfd) FC- V D-Y (1.mfd)
1 RF Cathode	390 ohms	TC-Y
1 RF Screen	4,350 ohms	BLC- 2 rf Cg-grid wdg BC- 5 meg unit-Y BLC- AVC P-Y (.5 mfd)
1 RF Plate	10,367 ohms	See 1 RF Screen
2 RF Tuning Condenser Stator	3.5 ohms	*DC Resistance of visual tuning meter must be added
2 RF Control Grid	5,100,000 ohms	BC- 2 rf K-Y (.3 mfd) See 1 RF Plate
2 RF Cathode	390 ohms	TC-Y
2 RF Screen	4,380 ohms	BLC- 3 rf Cg-grid wdg BC- 3 rf K-Y (.5 mfd)
2 RF Plate	10,367 ohms	See 1 RF Plate
3 RF Tuning Condenser Stator	3.6 ohms	TC-Y
3 RF Control Grid	5,000,000 ohms	BLC- 5 rf Cg-grid wdg BC- 3 rf K-Y (.5 mfd)
3 RF Cathode	600 ohms	See 1 RF Screen
3 RF Screen	4,350 ohms	See 1 RF Plate
3 RF Plate	10,367 ohms	TC- D Cg
Detector Control Grid	2,035 ohms	BC across bias unit (1 mfd)
Detector Cg to Det F	6 ohms	BC D P-Y
Detector Cg to Det Cathode	15,005 ohms	FC- AF Tr-180 P wdg FC- 10,000 ohm unit-80 P wdg FC- Tuned Filter ohl FC- 80 F-80 P wdg 250,000 ohm V.C.
Detector Cathode	17,030 ohms	
Detector Plate	27,630 ohms	
1 AF Control Grid (V.C.Max)	4,915 ohms	
1 AF Cathode	1,500 ohms	
1 AF Plate	13,730 ohms	
2 AF Control Grid	20,840 or 11,920 ohms*	*Two windings of transformer do not have like resistance. One half has 9890 ohms and other half

From Chassis To	Correct	Incorrect
2 AF Control Grid to Control Grid	24,700 ohms	has 14,810 ohms
2 AF Filament	2,755 ohms	BC-across 725 ohm unit
2 AF Plate to Plate	886 ohms	FC-Tuned Filter ohl-
2 AF Plate to 80 Fil	825-900- ohms	FC-Filter ohl-
Across speaker terminals only	1.77ohms	
AVC Control Grid	2,002,030 ohms	BC- 2 meg unit-Y CG- AVC Cg- 3 rf P BC- AVC K-Y BC- AVC P-Y (.5 mfd) FC FC
AVC Cathode	1,700 ohms	
AVC Plate	200,000 ohms	
'80 Filament	14,200-14,300 ohms	
'80 Filament to 80 Anode	15,340-16,440 ohms	

Note* Speaker power supply checked separately

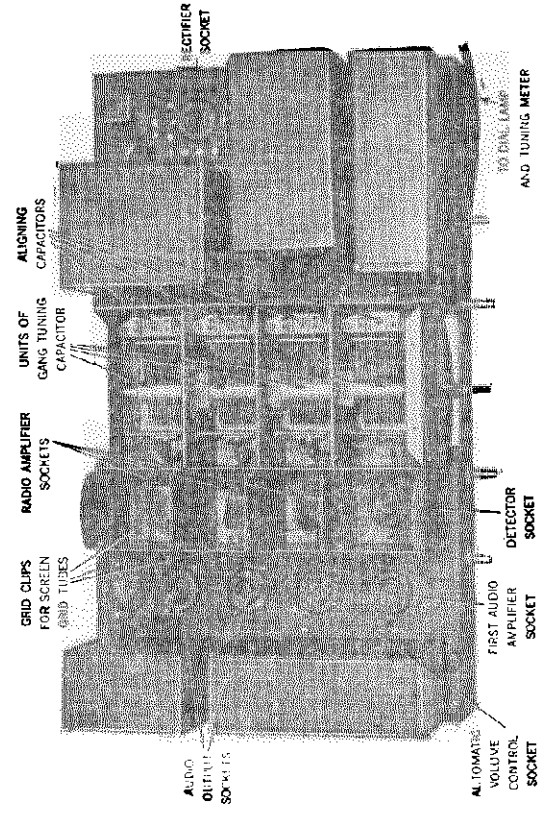


*A very slight deflection of the meter only. Readings given are for either of the 2 tubes used in Push Pull

Tube	Pin 1 to Pin 2	Pin 1 to Pin 3	Pin 1 to Pin 4	Pin 1 to Pin 5	Pin 1 to Pin 6	Pin 1 to Pin 7	Pin 1 to Pin 8	Pin 1 to Pin 9	Pin 1 to Pin 10	Pin 2 to Pin 3	Pin 2 to Pin 4	Pin 2 to Pin 5	Pin 2 to Pin 6	Pin 2 to Pin 7	Pin 2 to Pin 8	Pin 2 to Pin 9	Pin 2 to Pin 10						
1	10	20	5000	3.8	5200000	390	4350	10367	3.5	5100000	390	4380	10367	3.6	5000000	600	4350	10367	2035	6	15005	17030	27630
2	10	20	5000	3.8	5200000	390	4350	10367	3.5	5100000	390	4380	10367	3.6	5000000	600	4350	10367	2035	6	15005	17030	27630
3	10	20	5000	3.8	5200000	390	4350	10367	3.5	5100000	390	4380	10367	3.6	5000000	600	4350	10367	2035	6	15005	17030	27630
4	10	20	5000	3.8	5200000	390	4350	10367	3.5	5100000	390	4380	10367	3.6	5000000	600	4350	10367	2035	6	15005	17030	27630
5	10	20	5000	3.8	5200000	390	4350	10367	3.5	5100000	390	4380	10367	3.6	5000000	600	4350	10367	2035	6	15005	17030	27630
6	10	20	5000	3.8	5200000	390	4350	10367	3.5	5100000	390	4380	10367	3.6	5000000	600	4350	10367	2035	6	15005	17030	27630
7	10	20	5000	3.8	5200000	390	4350	10367	3.5	5100000	390	4380	10367	3.6	5000000	600	4350	10367	2035	6	15005	17030	27630
8	10	20	5000	3.8	5200000	390	4350	10367	3.5	5100000	390	4380	10367	3.6	5000000	600	4350	10367	2035	6	15005	17030	27630
9	10	20	5000	3.8	5200000	390	4350	10367	3.5	5100000	390	4380	10367	3.6	5000000	600	4350	10367	2035	6	15005	17030	27630
10	10	20	5000	3.8	5200000	390	4350	10367	3.5	5100000	390	4380	10367	3.6	5000000	600	4350	10367	2035	6	15005	17030	27630

SUPREME INSTRUMENTS CORP.


MODEL 400-B
#4 Series
Diagnoser

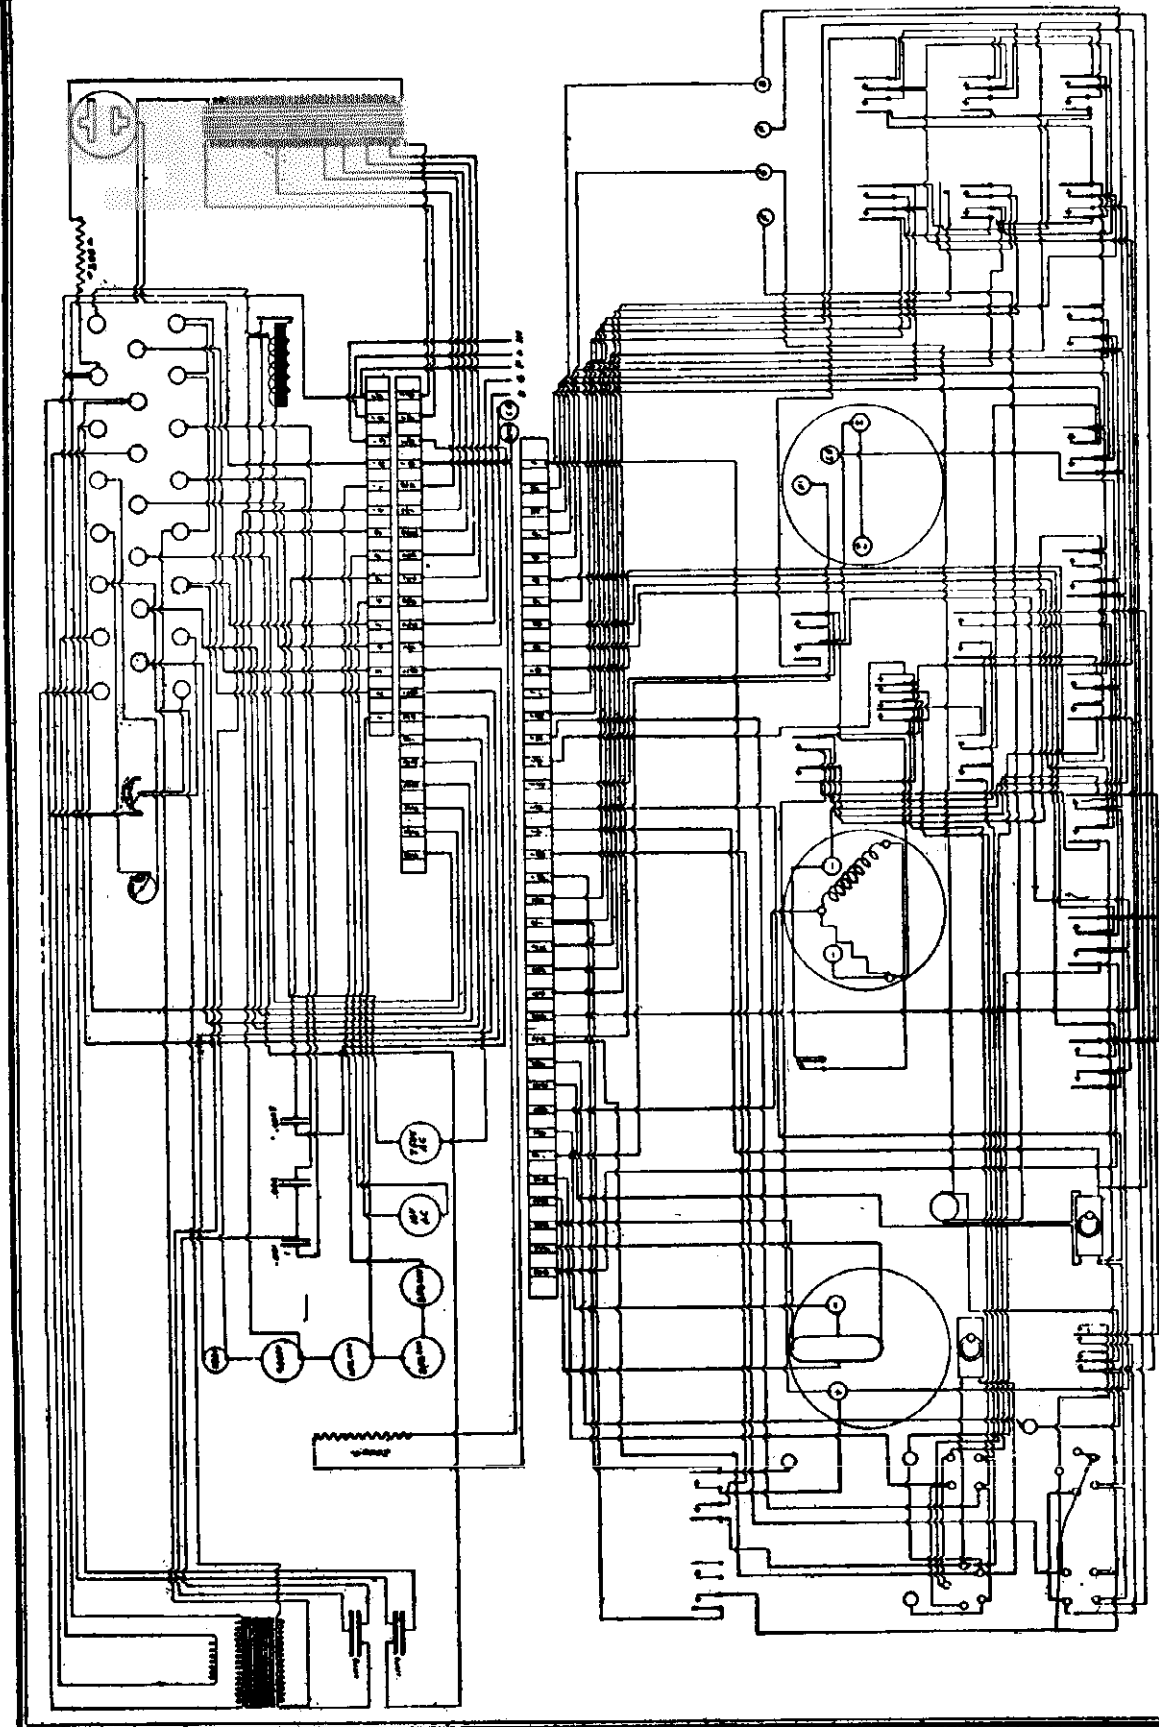

DESIGNED BY	W. J. B.
DRAWN BY	D. J. B.
CHECKED BY	C. J. B.
APPROVED BY	C. J. B.
DATE	10/1/50
PROJECT	SUPREME INSTRUMENTS CORP. #4 Series
DRAWING NO.	509D


SUPREME INSTRUMENTS CORP.

MODEL 56 Analyzer
Weston Metered
MODEL 90 Analyzer
Weston Metered 6-J

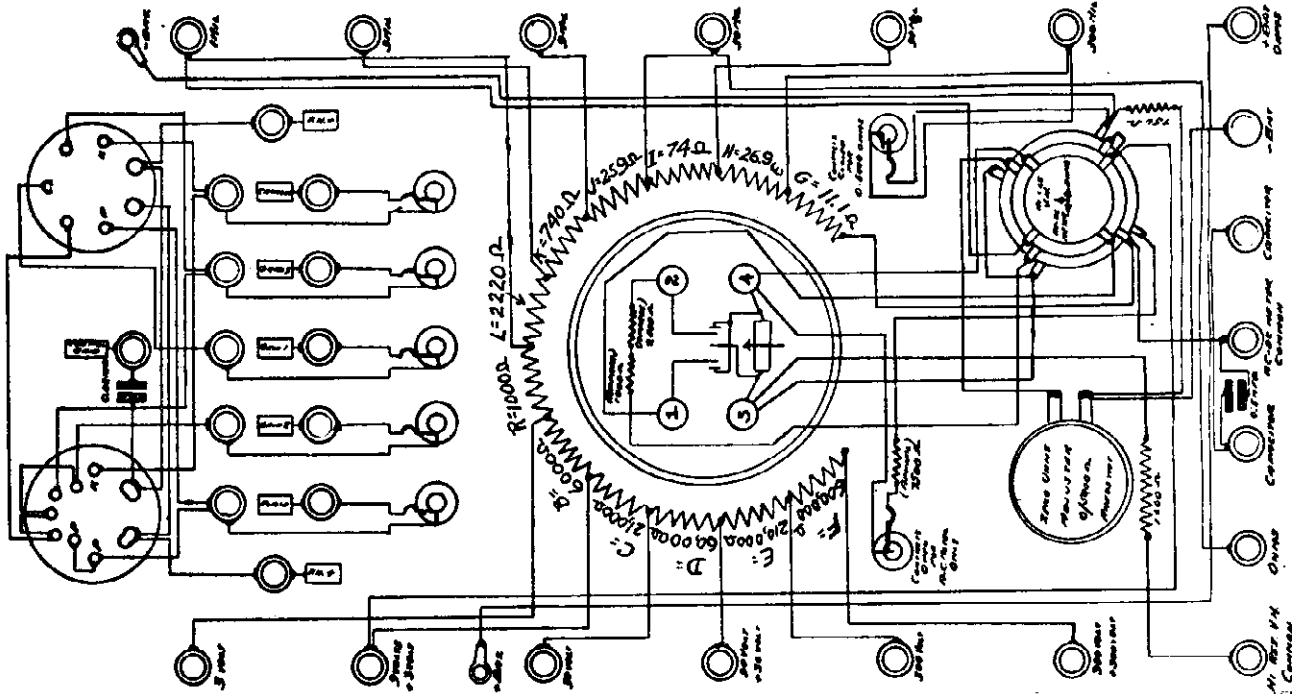

NOTE: THE PLUGS TYPED IN INDICATE LUGS THROUGH ALUMINUM COILS TO BRASS LUGS.


Checked	Approved	SUPREME INSTRUMENTS CORP. GREENWOOD, MISS. POINT TO POINT DIAGRAM OF WESTON METERED MODEL 56 ANALYZER	DATE: 4/1/52
Checked	Approved		639-B
Checked	Approved		

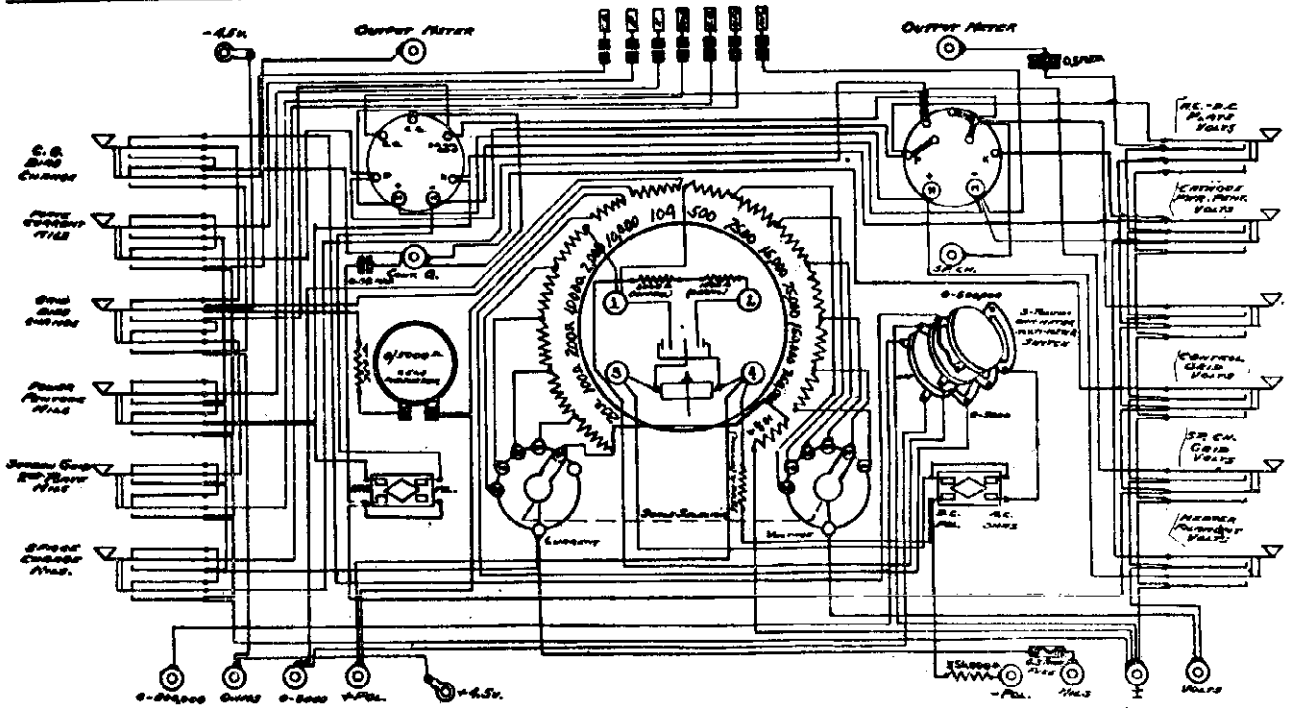

Checked	Approved	SUPREME INSTRUMENTS CORP. GREENWOOD, MISS. POINT TO POINT DIAGRAM OF WESTON METERED MODEL 90 ANALYZER SERIES 6-J	DATE: 4/1/52
Checked	Approved		641-B
Checked	Approved		


MODEL 90 Analyzer
MODEL Output Meter

SUPREME INSTRUMENTS CORP.

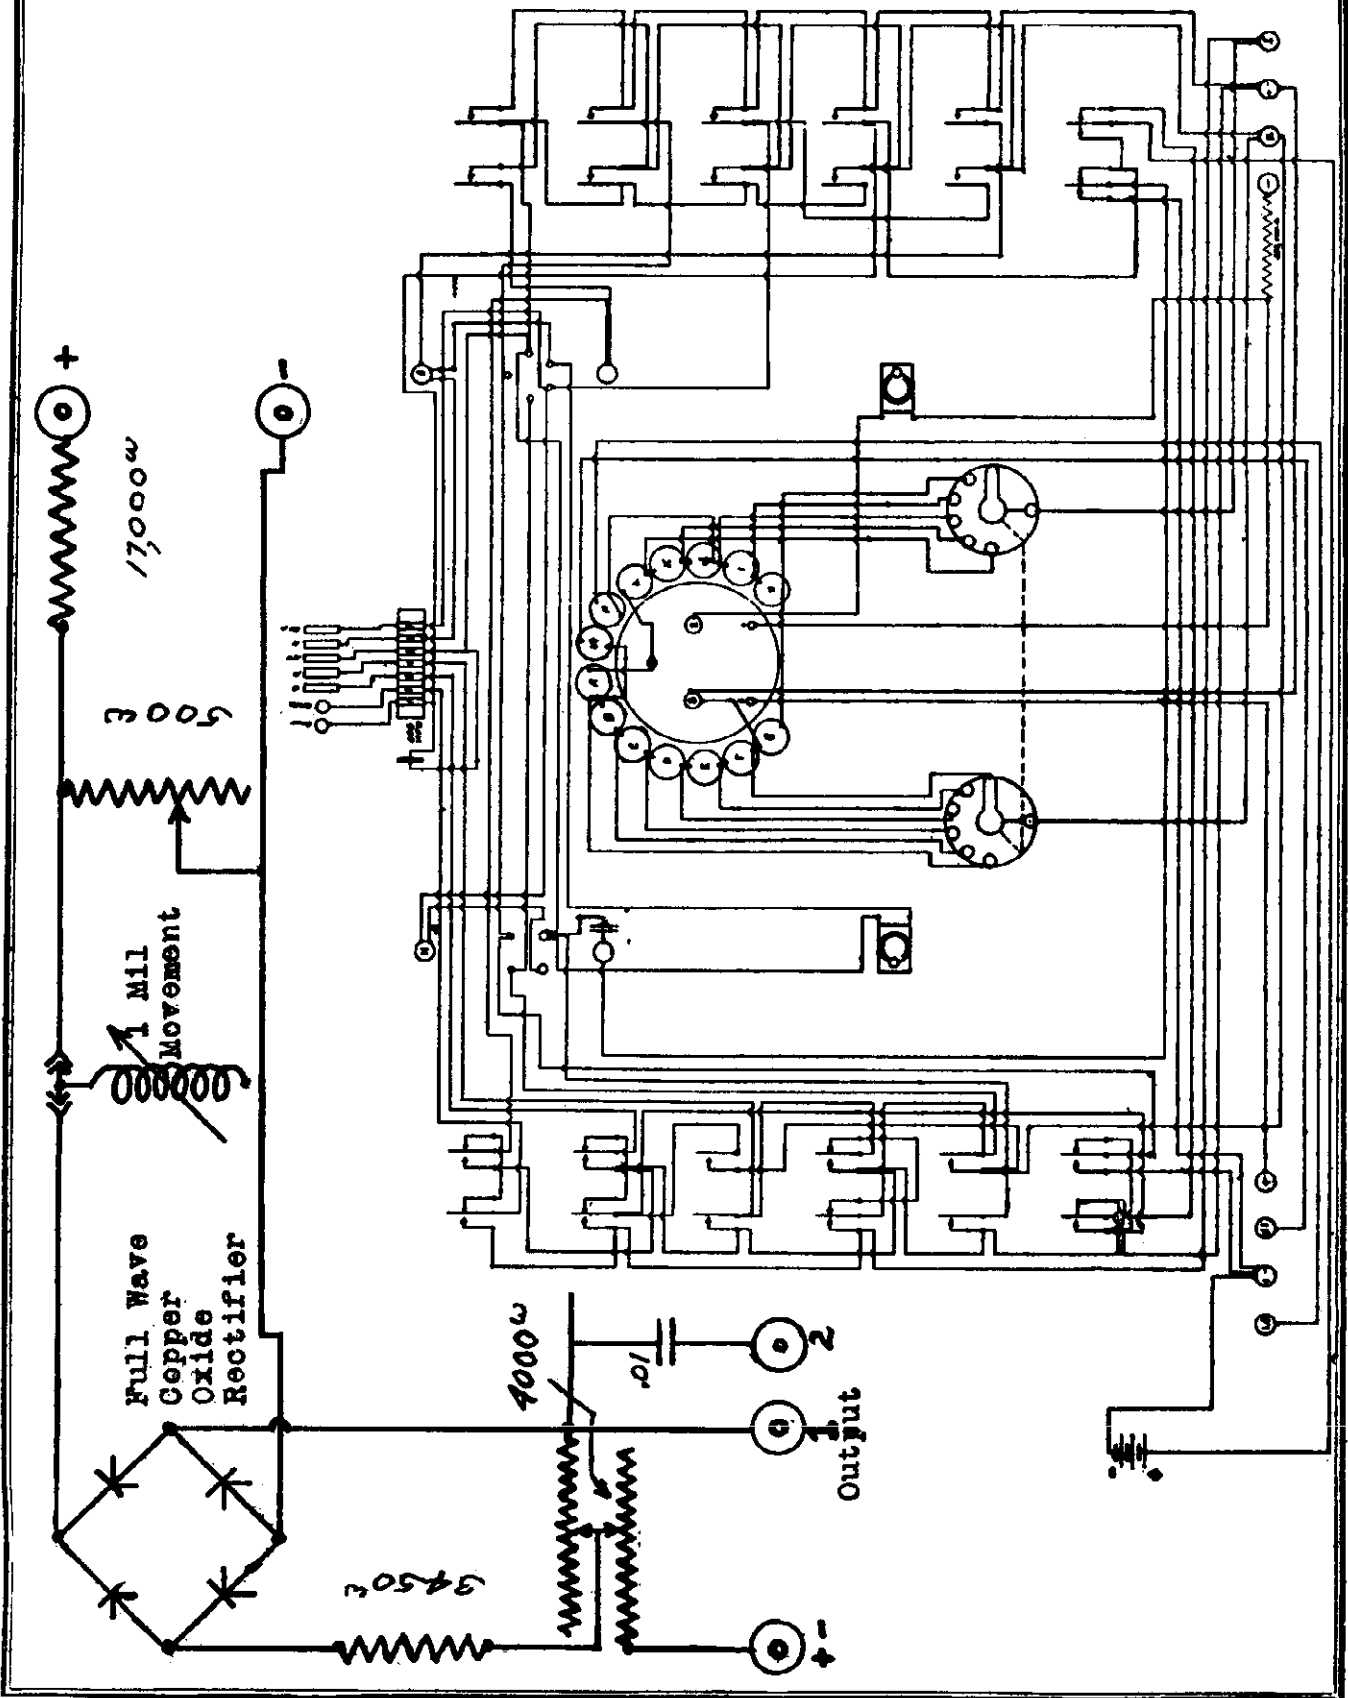

TRANSFORMER CORP. OF AMERICA

MODEL AC84,85
Schematic
Voltage

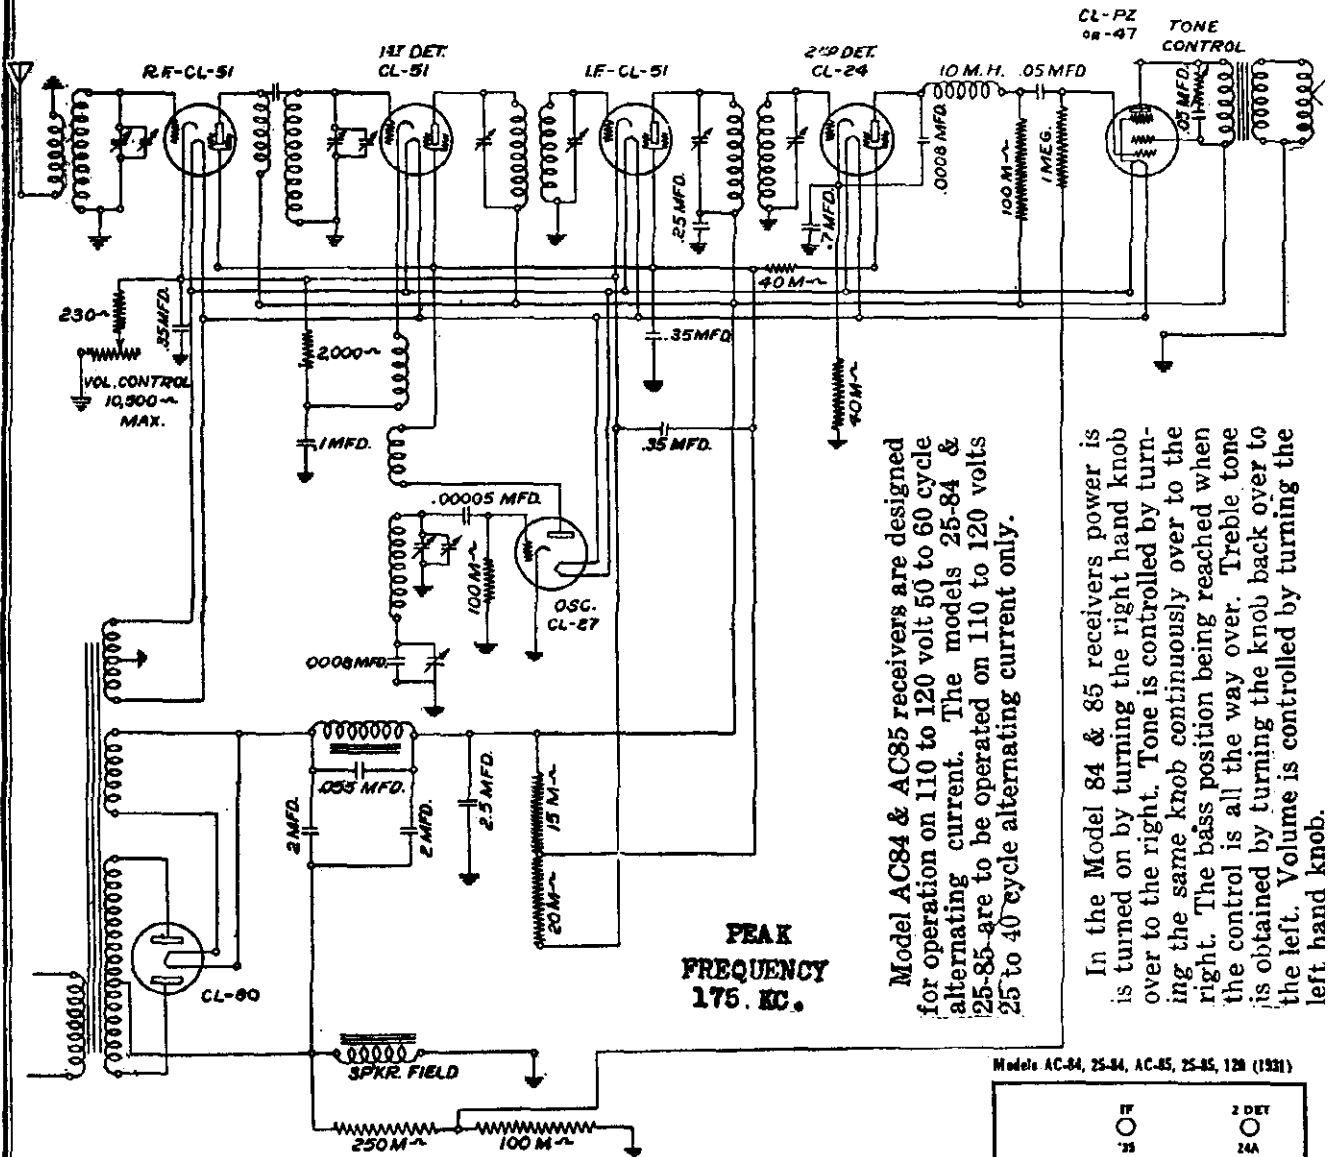


Model AC84 & AC85 receivers are designed for operation on 110 to 120 volt 50 to 60 cycle alternating current. The models 25-84 & 25-85 are to be operated on 110 to 120 volts 25 to 40 cycle alternating current only.

In the Model 84 & 85 receivers power is turned on by turning the right hand knob over to the right. Tone is controlled by turning the same knob continuously over to the right. The bass position being reached when the control is all the way over. Treble tone is obtained by turning the knob back over to the left. Volume is controlled by turning the left hand knob.

PEAK
FREQUENCY
175. KC.

Models AC-84, 25-84, AC-85, 25-85, 128 (1931)

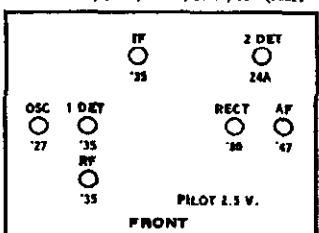

READINGS TAKEN WITH WESTON MODEL 565 ANALYSER


No.	Stage	Type Tube	A Volts	B Volts	Cont. Grid Volts	Cath. Volts	I _p Norm.	SG Volts
1	r. f.	51	2.1	255	3.5	3.5	3.5	.78
2	1st Det.	51	2.1	240	10.	10.	2	108
3	Osc.	27	2.1	135	0	0	6.	0
4	I. F.	51	2.1	250	3.5	3.5	3.5	.77
5	2nd det.	24	2.2	190	6.0	6.0	.2	.68
6	Output	47	2.2	228	14.	0	25	255
7	Rect.	80	4.4		0	.0		0

Volume control position Full Line Voltage 115


Note: Since resistance tolerances in the sets are plus or minus 10%, and tubes may vary over 20%, your readings may disagree with the above by plus or minus 30%.

MODEL AC 84,85
Chassis Views
Speaker
MODEL AC 94,95
Speaker

TRANSFORMER CORP. OF AMERICA

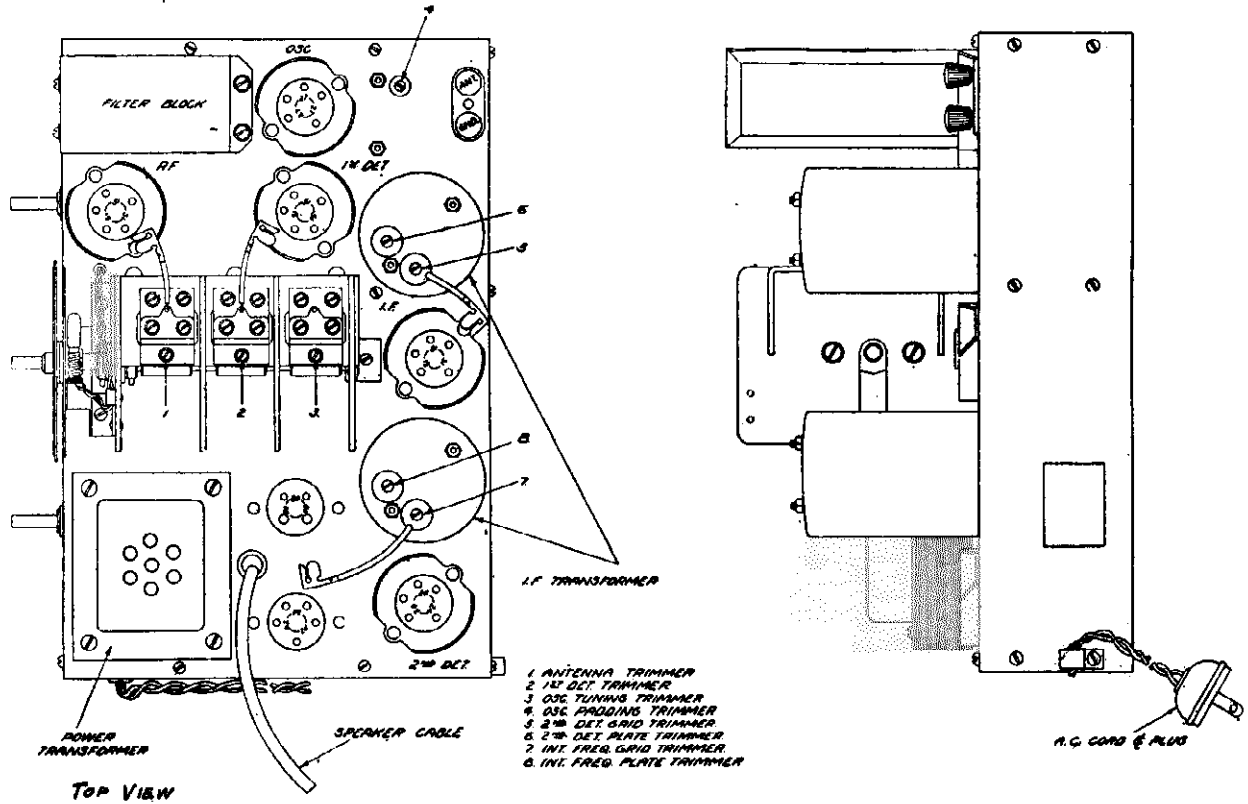


TOP VIEW

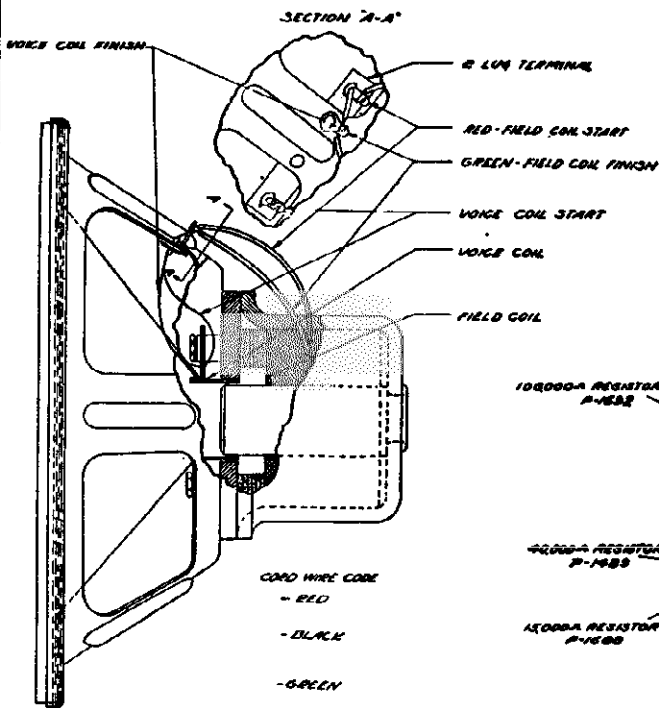

DYNAMIC SPEAKER

MODELS 84 & 85 AND 94 & 95

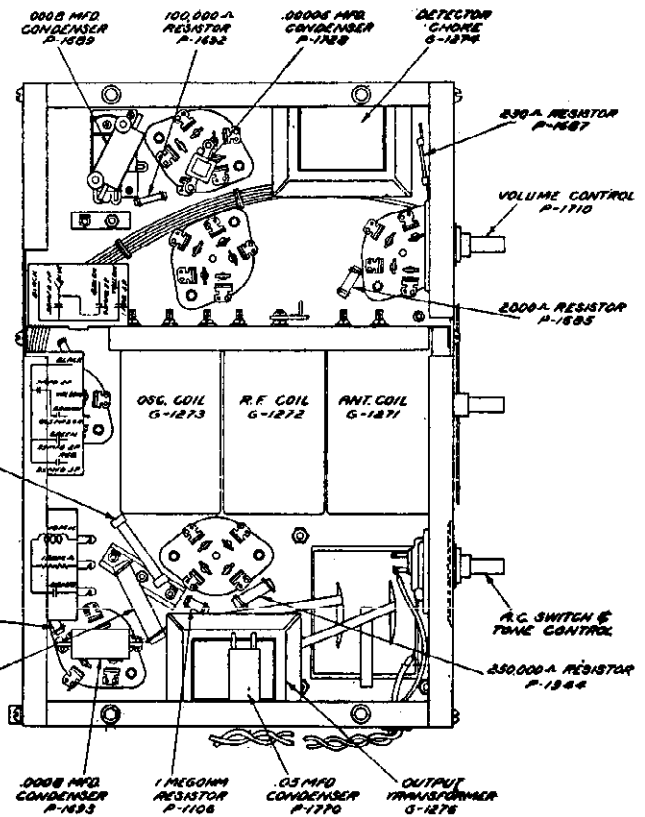

G-83 CHASSIS
BOTTOM VIEW

TRANSFORMER CORP. OF AMERICA

MODEL AC 84,86
 MODEL AC 94,95
 Alignment Data

CLARION

MODELS 84 & 85

MODELS 94 & 25-94

READJUSTING TRIMMERS

To readjust the trimmers on these super-heterodyne receivers it will be necessary that a good design of 175 k.c. oscillator be employed and that a dependable broadcast test oscillator be on hand so that stages handling intermediate frequency and those handling radio frequency can be thoroughly checked. It is advisable to use a bakelite screw driver when making any of these adjustments.

First, connect the 175 k.c. oscillator output leads from the control grid cap of the first detector tube to ground. Do not remove any of the tubes from the sockets, and it is not necessary to disconnect the grid cap clip from the first detector tube. Reset trimmers No. 5, No. 6, No. 7 and No. 8 for maximum output. While this test oscillator is working into the intermediate frequency stages, no adjustment of the tuning condenser on the receiver will have any effect, inasmuch as the intermediate frequency stage is fixed tuned.

If your test oscillator is properly designed, it will supply exactly 175 k.c., and when trimmers No. 5, No. 6, No. 7 and No. 8 are set and turned for maximum output, they will be correctly adjusted.

Next, disconnect the 175 k.c. test oscillator and connect to the antenna binding post of the receiver, the output lead from your broadcast test oscillator or tune in a broadcast signal around 1400 k.c., then reset trimmer No. 2 and No. 1, respectively, for maximum output. This adjustment will track the first detector and r. f. stages.

To check calibration of the receiver, whether it be high or low, trimmer No. 3 (oscillator) should be reset until a station of known high frequency is brought in at the correct dial marking with peak volume. If your broadcast test oscillator is accurately calibrated, it might be used in place of the broadcasting station signal. In this adjustment, a broadcast station or test oscillator signal at about 1400 k.c. should be chosen. The setting of the trimmer at 1400 k.c. is more critical than it would be at 600 k.c.

The next adjustment is important and not easily explained in writing, so pay close attention to the following instructions. We will now balance the oscillator to the r. f. and first detector stages.

Tune the external broadcast test oscillator and the receiver both to 600 k.c., then slowly increase or decrease the capacity of No. 4 (oscillator padding trimmer), at the same time and continuously tuning back and forth across the signal with the receiver tuning condenser gang. The output meter needle will now be swinging up and down in step with the variation in tuning. Watch the peak of this swinging closely and readjust No. 4 trimmer until the swinging needle reaches its highest peak.

Retune the receiver and broadcast test oscillator to 1400 k.c. and re-check trimmer No. 3 to make sure that the adjustment of No. 4 has not thrown the receiver out of calibration. If it has, then readjust No. 3 until the calibration is correct, (as previously explained), and check on trimmers No. 2 and No. 1, to make sure that the adjustment of No. 4 has not reduced the sensitivity.

CONTINUITY TESTS

(Applicable to completely and partially in-operative sets and circuits)

A 175 k.c. test oscillator should be connected to the grid cap of the first detector tube so that the modulated signal can be reproduced in the loud speaker. This indicates that the first detector and intermediate frequency stages are operating. To determine if the oscillator is working, a broadcast test oscillator should be connected to the grid cap of the first detector tube. No signal will come through unless the oscillator tube and stage are functioning correctly. The r. f. tube, of course, can be checked lastly by connecting the broadcast test oscillator to the antenna and ground binding posts of the receiver.

MODEL AC 84,85
Parts List
MODEL 120-139
Parts List

TRANSFORMER CORP. OF AMERICA

MODELS 84-85 (Also Series 120-139)

P-1038	Pilot lamp	.35	P-1931	10" diaphragm for G-1370 speaker	.75
P-1049	Grip cap clip	.05	P-1944	250,000 ohm resistor	.35
P-1096	A. C. cable clip	.05	P-1955	Tone cont. on-off switch	1.90
P-1106	1,000,000 ohm resistor	.35	P-1990	10" diaphragm for P-1883 speaker	.75
P-1354	Chassis mounting screws	2.50 C	P-1991	Voice coil and spider for P-1883 speaker	.65
P-1459	Tube shield base	.20	P-3050	8" diaphragm for G-1260 speaker	.55
P-1472	Tube shield	.10	G-3019	Voice coil and spider for G-1260 speaker	.65
P-1488	20,000 ohm resistor	.35	G-1220	Dial drive inc. pilot lamp socket	\$ 1.50
P-1499	40,000 ohm resistor	.30	G-1236	I. F. transformer	2.60
P-1593	24 socket	.20	G-1255	Power trans., 60 cycle	4.00
P-1595	80 socket	.20	G-1255A	Power trans., 25 cycle	5.85
P-1597	27 socket	.20	G-1255B	Power trans., 220 volt	5.85
P-1634	Ant. ground binding post	.25	†G-1260	8" Speaker for model 85	12.50
P-1637	Escutcheon plate	.55	G-1271	Antenna coil	1.25
P-1680	Osc. padding cond.	.45	G-1272	R. F. coil	1.25
P-1682	51 socket	.20	G-1273	Osc. coil	1.00
P-1683	47 socket	.20	G-1274	Filter choke	1.65
P-1685	2000 ohm resistor	.35	G-1276	Output transformer	2.00
P-1687	230 ohm resistor	.20	G-1277	Detector plate choke	1.50
P-1688	15,000 ohm resistor	.55	G-1350	Filter pack, 60 cycles	5.00
P-1689	.0008 mfd. cond., red dot	.30	G-1350A	Filter pack, 25 cycles	6.50
P-1692	100,000 ohm resistor, R. F.	.35	G-1351	R. F. bypass cond.	1.00
P-1693	.0008 mfd. condenser	.25	G-1352	A. F. bypass cond.	1.25
P-1700	Chassis mounting strap	.15	G-1357	Voice coil for G-1360 and G-1370 speakers	.65
P-1704	Knobs	.30	*G-1360	8" Speaker for model 85	12.50
P-1707	Escutcheon screws	.75 C	*G-1370	10" Speaker for model 84	12.50
P-1710	Volume control	1.75			
P-1728	.00005 mfd. condenser	.30			
P-1770	.05 tone control cond.	.25			
†P-1883	10" speaker for model 84	12.50			

*Speaker number stamped on field coil pot.
†Blank—no number stamped on field coil pot.


SERIES 120-139

P-4033	Escutcheon Plate (replacing P-1637)	50.55
P-4037	Large Knobs (replacing P-1704)	.30
P-4047	Small Knobs (replacing P-1704)	.25
P-4075	Tone Control (replacing P-1955)	1.90
P-4080	Volume Control (replacing P-1710)	1.75
G-1363	Oscillator Padding Condenser (replacing P-1680)	.75
G-1379	Dial and Scale Assembly (replacing G-1220)	1.50
G-1402	I. F. Transformer (replacing G-1236)	1.75

For complete parts data refer to parts list of models 84-85 above.

(Be Sure to Specify As Above if Ordering Speakers or Parts of Same)

MODEL AC-94, 25-94
 TRANSFORMER CORP. OF AMERICA Schematic - Voltage

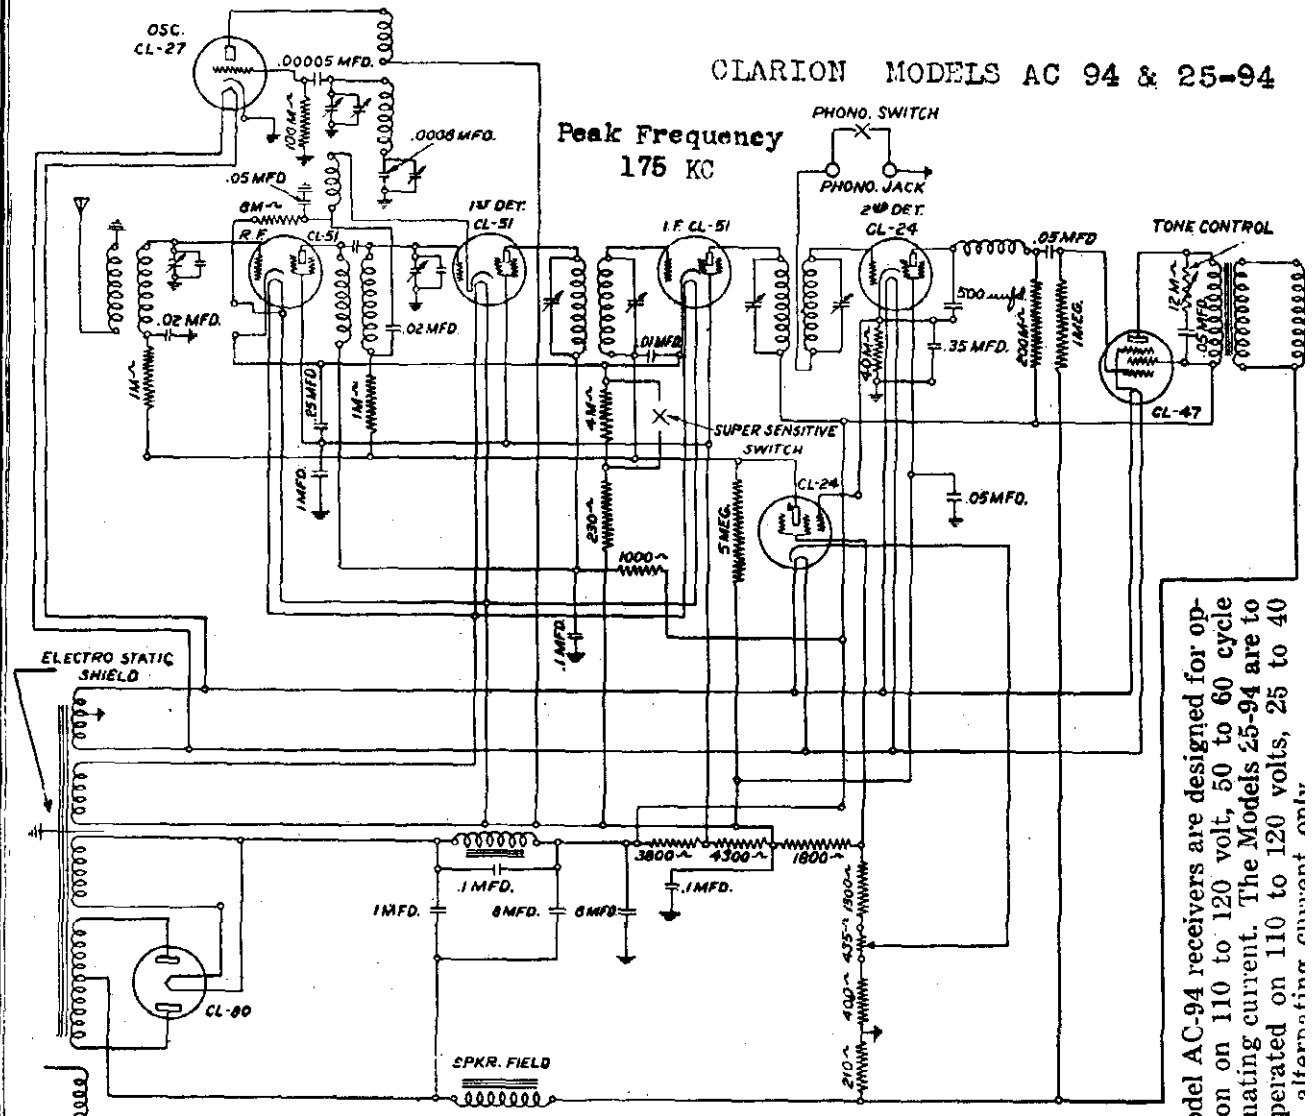

Model AC-94 receivers are designed for operation on 110 to 120 volt, 50 to 60 cycle alternating current. The Models 25-94 are to be operated on 110 to 120 volts, 25 to 40 cycle alternating current only.

READINGS TAKEN WITH WESTON MODEL 565 ANALYSER

No.	Stage	Type Tube	A Volts	B Volts	Cont. Grid Volts	Cath. Volts	Ip' Norm.	SG Volts
1	r. f	51	2.1	178	1.5	2.5	4.5	82
2	1st det.	51	2.1	160	9.5	10.	1.2	75.
3	Osc.	27	2.05	120	0	0	10	0
4	I. F.	51	2.05	180	.6	3.	3	82.
5	2nd det.	24	2.05	220	8.	8.	.25	85.
6	A.V.C.	24	2.05	50	12.	20	0	37
7	A.F.	47	2.1	280	16.5		40	275.
8	Rect.	80	4.6	160			40	

Volume control position Full. Line Voltage 115-60 cycle.

NOTE: Filaments and cathodes of R.F., I.F., and first detector are 95 volts positive with respect to ground.
 NOTE: Since resistance tolerances in the sets are plus or minus 10%, and tubes may vary over 20%, your readings may disagree with the above by plus or minus 30%.

MODEL AC94, 25-94

Chassis Views

TRANSFORMER CORP. OF AMERICA

Test Data

RESISTANCE TABLE


(Using 6 volt scale, 1,000 ohms per volt; meter and 6 volt battery)

Item Tested	Description Color—Code	From	To	Reads	Ohms Resistance
Osc. Grid Resistor	Brown body, black tip, yellow dot	Across Resistor		.6	100,000
1st Det. Grid Bias Resistor	Gray body, black tip, red dot	Across Resistor		3.4	8,000
Super-Sensitive Grid Bias Resistor	Yellow body, black tip, red dot	Across Resistor		4.4	4,000
R.F. and I.F. Grid Bias Resistor	Black, wire wound	Across Resistor		5.9	230
Volume Cont.	Red, wire wound	Across Resistor		5.8	400
Screen Voltage Resistor	Orange body, gray tip, red dot	Across Resistor		4.4	3,800
A.V.C. Plate Resistor	Green body, black tip, yellow dot	Across Resistor		.1	500,000
A.V.C. Screen Voltage Resistor	Brown body, gray tip, red dot	Across Resistor		5.2	1,800
A.V.C. Grid Bias Resistor	Brown body, orange tip, red dot	Across Resistor		5.3	1,300
2nd Det. Screen Voltage Resistor	Yellow body, orange tip, red dot	Across Resistor		4.2	4,300
Vol. Cont.	Front panel	Across Control		5.8	485
Tone Cont.	Front panel	Across Control		2.6	12,000
1st Det. and I.F. Plate Volt. Resistor	Wire wound on filter choke	Across Resistor		5.5	1,000
Pentode Grid Bias Resistor	Wire wound green	Across Resistor		5.9	210
Pentode Grid Coupling Resistor	Brown body, black tip, green dot	Across Resistor		.1	1,000,000
2nd Det. Plate Coupling Resistor	In det. plate choke	Across red leads on det. choke		.3	200,000
2nd Det. Grid Bias Resistor	Yellow body, black tip, orange dot	Across Resistor		1.3	40,000


CONTINUITY TEST TABLES

Circuit	From	To	Reading
Antenna Coil Pri.	Antenna post	Ground	6.0
R. F. Grid	Rect. fil. prong	R. F. grid cap clip	0.2
R. F. Cathode	Rect. fil. prong	R. F. cathode prong	2.7*
R. F. Screen	Rect. fil. prong	R. F. screen prong	4.2
R. F. Plate	Rect. fil. prong	R. F. plate prong	5.2
1st Det. Grid	Rect. fil. prong	1st det. grid cap clip	0.2
1st Det. Cathode	Rect. fil. prong	1st det. cathode prong	2.3
1st Det. Screen	Rect. fil. prong	1st screen prong	4.2
1st Det. Plate	Rect. fil. prong	1st det. plate prong	5.3
I. F. Grid	Rect. fil. prong	I. F. grid cap clip	0.2
I. F. Cathode	Rect. fil. prong	I. F. cathode prong	2.7*
I. F. Screen	Rect. fil. prong	I. F. screen prong	4.2
I. F. Plate	Rect. fil. prong	I. F. plate prong	5.3
A. V. C. Grid	Rect. fil. prong	A. V. C. grid clip	1.0
A. V. C. Cathode	Rect. fil. prong	A. V. C. cathode prong	2.9
A. V. C. Screen	Rect. fil. prong	A. V. C. screen prong	3.0
A. V. C. Plate	Rect. fil. prong	A. V. C. plate prong	0.2
2nd Det. Grid	Rect. fil. prong	2nd det. grid prong	3.8
2nd Det. Cathode	Rect. fil. prong	2nd det. cathode prong	1.0
2nd Det. Screen	Rect. fil. prong	2nd det. screen prong	3.3
2nd Det. Plate	Rect. fil. prong	2nd det. plate prong	0.3
Pent. Cont. Grid	Rect. fil. prong	Pent. cont. grid prong	0.1
Pent. S. C. Grid	Rect. fil. prong	Pent. S. C. grid prong	5.8
Pent. Plate	Rect. fil. prong	Pent. plate prong	5.6
Osc. Grid	Rect. fil. prong	Osc. grid prong	0.5
Osc. Cathode	Rect. fil. prong	Osc. cathode prong	2.8
Osc. Plate	Rect. fil. prong	Osc. plate prong	2.1
Power Trans. Pri.	ACROSS	A. C. plug	6.0
Power Trans. Sec.	ACROSS	280 plates	5.8
Osc. pick up coil	Black lead on Osc. trimmer	Green lead on .00005 cond.	6.0
Speaker V.C. disconnected	V.C. ground lead	V. C. black lead	0.0
Speaker field	Field red lead	Field green lead	5.6


Model AC-94, 25-94 (1931)

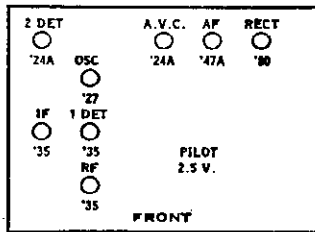

Top View

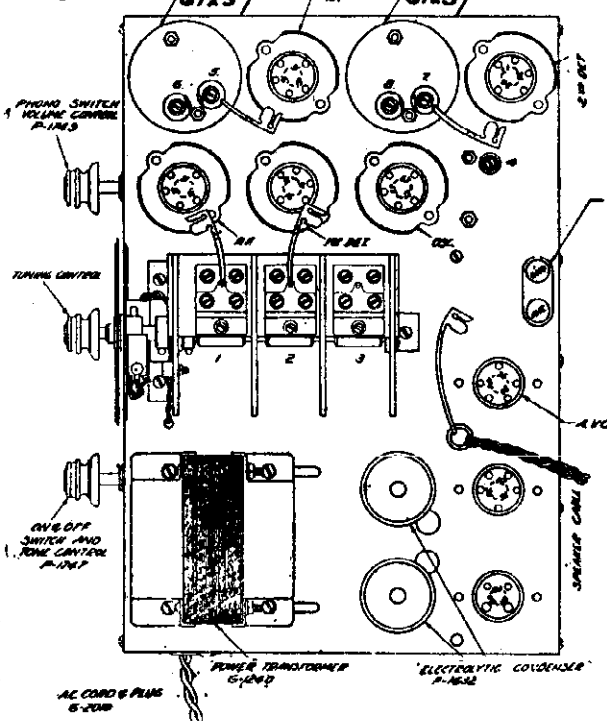

Bottom View

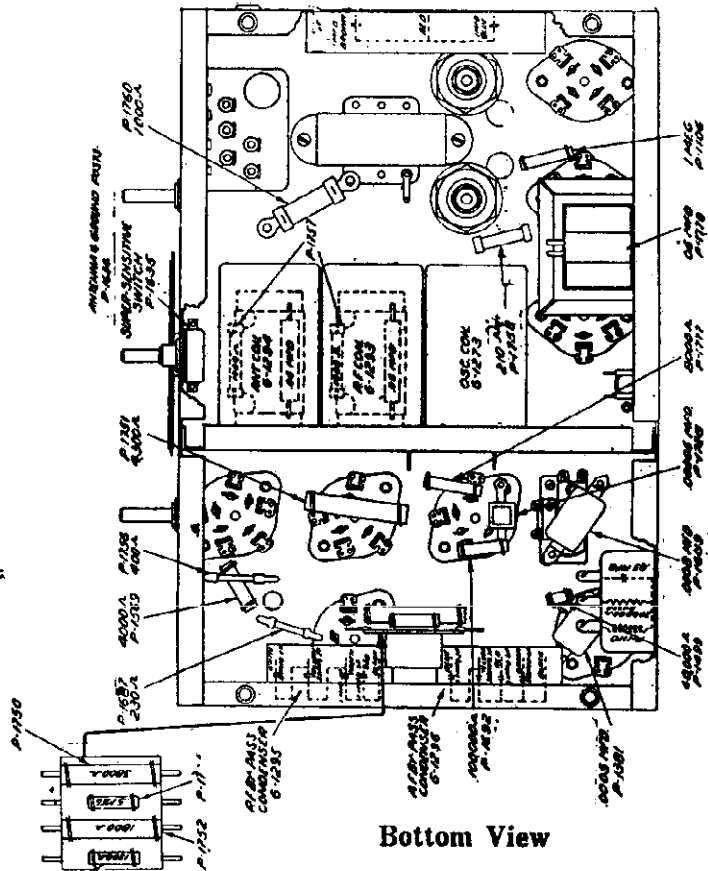

MODEL AC 100 Series
 Chassis View
 Data



TRANSFORMER CORP. OF AMERICA

CLARION SERIES 100 SUPERHETERODYNE

CONTINUITY TESTS

Applicable to Completely and Partially In-Operative Sets and Circuits)


To determine which section of the receiver is defective, the second detector tube might be tapped with the finger, listening for a ringing noise in the speaker—this indicates that the audio end is O. K. A 175 K. C. test oscillator should be connected to the grid cap of the Super-autodyne tube so that the modulated signal can be reproduced in the loud speaker. This indicates that the Super-autodyne and intermediate frequency stages are operating. To determine if the super-autodyne is oscillating as it should be, a broadcast test oscillator should be connected to the grid cap of the super-autodyne tube. No signal will come through unless the tube is oscillating, and the stage functioning correctly. The R. F. tube, of course, can be checked, lastly by connecting the broadcast test oscillator to the antenna and ground binding posts of the receiver.

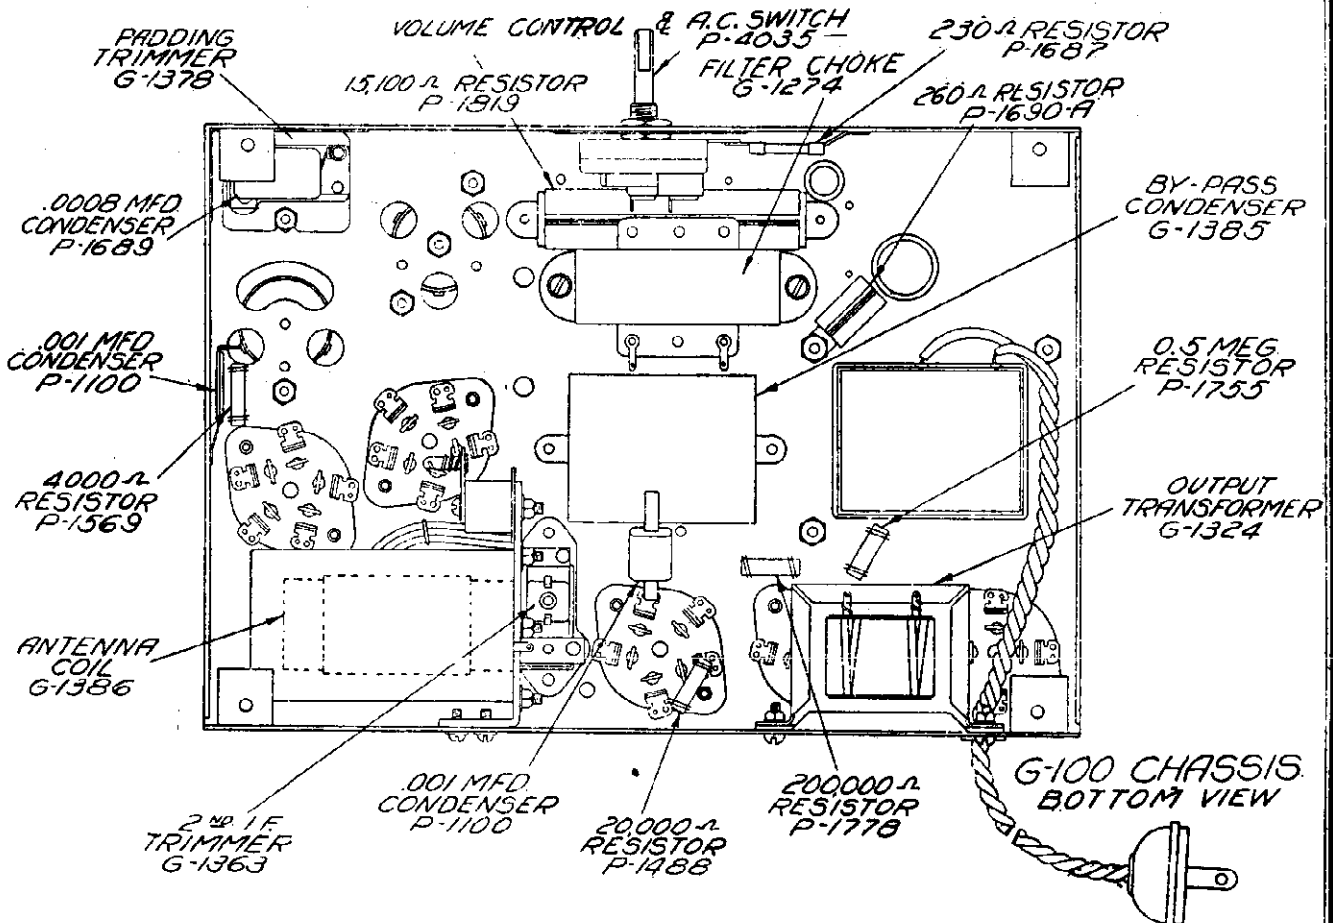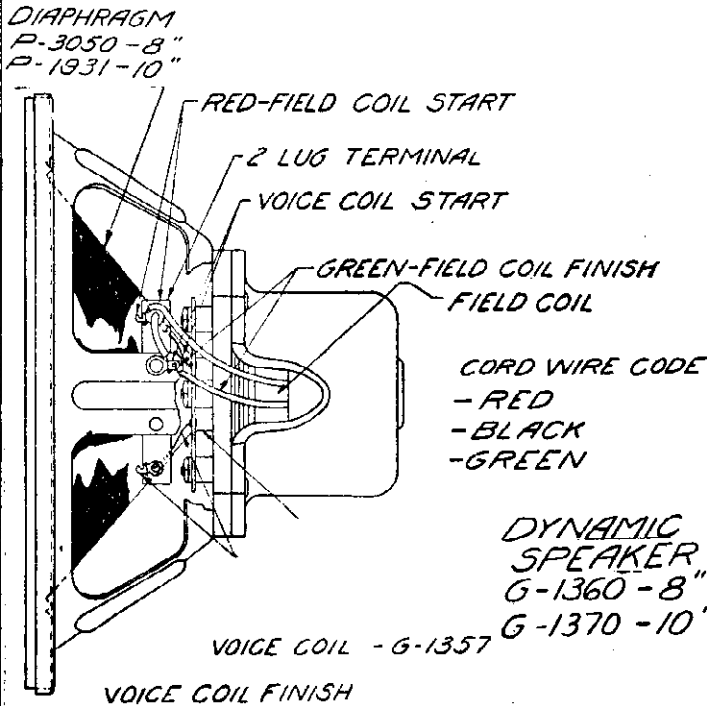

MODEL AC 100 Series
Trimmer Notes

TRANSFORMER CORP. OF AMERICA

CLARION SERIES 100 SUPERHETERODYNE

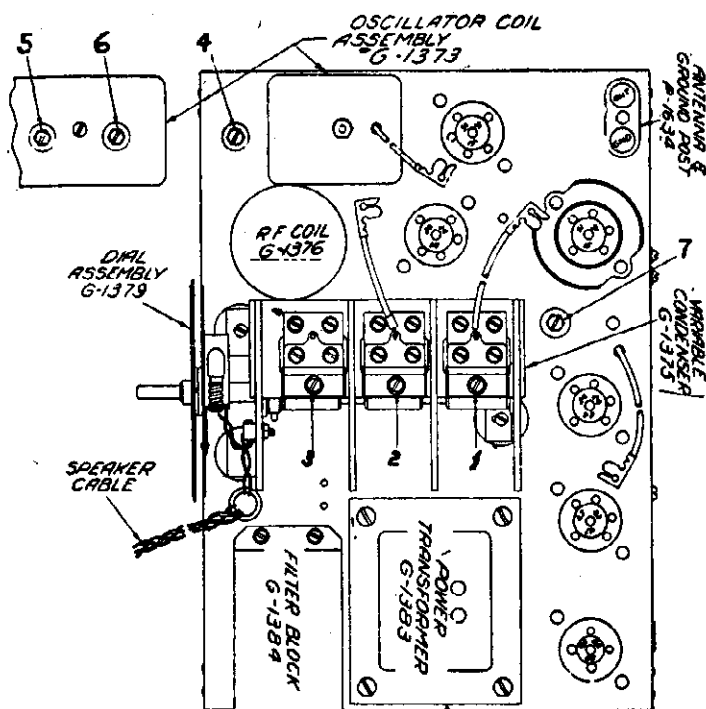

READJUSTING TRIMMERS

Number 1 is the antenna trimmer.

Number 2 is the gang condenser trimmer tuning the grid of the Super-autodyne.

Number 3 is the gang condenser trimmer tuning the plate (or oscillator of the super-autodyne).

Number 4 is the oscillator padding trimmer.

Number 5 is the Super-autodyne plate trimmer.

Number 6 is the I. F. grid trimmer.

Number 7 is the second detector grid trimmer.

To readjust the trimmer, it will be necessary that a good design of 175 k. c. oscillator be employed, and that a dependable broadcast test oscillator be on hand so that stages handling intermediate frequency, and those handling radio frequency can be thoroughly checked. It is advisable to use a bakelite screwdriver when making any of these adjustments.

First, connect the 175 k. c. oscillator output leads from the control grid cap of the super-autodyne tube to ground. Do not remove any of the tubes from the sockets, and it is not necessary to disconnect the grid cap clip from the tube. Reset trimmers numbers 5, 6 and 7 for maximum output. While this test oscillator is working into the intermediate fre-

quency stages, no adjustment of the tuning condenser on the receiver will have any effect, inasmuch as the intermediate frequency stage is fixed tuned.

If your test oscillator is properly designed, it will supply exactly 175 k. c., and when trimmers number 5, 6 and 7 are set for maximum output, they will be correctly adjusted and should be sealed.

Next, disconnect the 175 k. c. test oscillator and connect to the antenna binding post of the receiver, the output lead from your broadcast test oscillator, or tune in a broadcast signal around 1400 k. c., then reset trimmers numbers 2 and 1 respectively for maximum output. This adjustment will track the super-autodyne grid circuit of the R. F. stage.

To check the calibration of the receiver, whether it be high or low, trimmer number 3 should be reset until a station of known high frequency is brought in on the correct dial marking with peak volume. If your broadcast test oscillator is accurately calibrated, it might be used in place of the broadcasting station signal. In this adjustment, a broadcast station or test oscillator signal at about 1400 k. c. should be chosen. The setting of the trimmer at 1400 k. c. is more critical than it would be at 600 k. c.; calibration therefore more accurate.

The next adjustment is important and not easily explained in writing, so pay close attention to the following instruction. We will now balance the oscillator to the r. f. and first detector stages.

Tune the external broadcast test oscillator and the receiver both to 600 k.c., then slowly increase or decrease the capacity of No. 4 (oscillator padding trimmer), at the same time and continuously tuning back and forth across the signal with the receiver tuning condenser gang. The output meter needle will now be swinging up and down in step with the variation in tuning. Watch the peak of this swinging closely and readjust No. 4 trimmer until the swinging needle reaches its highest peak.

Retune the receiver and broadcast test oscillator to 1400 k.c. and re-check trimmer No. 3 to make sure that the adjustment of No. 4 has not thrown the receiver out of calibration. If it has, then readjust No. 3 until the calibration is correct, (as previously explained), and check on trimmers No. 2 and No. 1, to make sure that the adjustment of No. 4 has not reduced the sensitivity.

MODEL AC 100 Series
Parts List
Continuity Test


TRANSFORMER CORP. OF AMERICA

CONTINUITY TEST TABLES		Using 10 Volt Scale 1000 Ohm Per Volt Meter and 4 1/2 Volt Battery	
Circuit Tested	From	To	Readings
P-1038 Dial light	R. F. Grid	R. F. Grid Clip	1.5
P-1049 Grid cap clip	R. F. Screen	R. F. Screen Prong	2.2
P-1100 Autodyne Cath. cond. .008	R. F. Plate	R. F. Plate Prong	4.4
P-1459 Tube shield base	R. F. Cathode	R. F. Cathode Prong	1.5
P-1472 Tube shield	Autodyne Grid	Autodyne Grid Clip	1.5
P-1569 Autodyne Cath. resistor 4000 ohms	Autodyne Screen	Autodyne Screen Prong	2.2
P-1593 Type 24 socket	Autodyne Plate	Autodyne Plate Prong	4.5
P-1595 Type 80 socket	Autodyne Cathode	Autodyne Cath. Prong	1.3
P-1634 Ant. ground binding post	I. F. Grid	I. F. Grid Clip	1.5
R-1682 Type 51 socket	I. F. Screen	I. F. Screen Prong	2.2
P-1683 Type 47 socket	I. F. Plate	I. F. Plate Prong	4.4
P-1689 Autodyne trimmer cond. .008	I. F. Cathode	I. F. Cathode Prong	1.5
P-1690A 260 ohm wire wound resistor	2nd Det. Grid	2nd Det. Grid Clip	1.5
P-1755 Pentode cont. grid resistor, 500,000 ohms	2nd Det. Screen	2nd Det. Screen Prong	2.2
P-1778 2nd det. plate resistor, 200,000 ohms	2nd Det. Plate	2nd Det. Plate Prong	.8
P-1819 Voltage dividing resistor	2nd Det. Cathode	2nd Det. Cath. Prong	.8
P-3050 Speaker diaphragm	Pent. Cont. Grid	Pent. C. G. Prong	.1
P-4033 Escutcheon plate	Pent. Plate	Pent. Plate Prong	4.4
P-4035 Vol. cont. and on-off switch	Pent. S. C. Grid	Pent. S. C. Grid Prong	4.5
P-4037 Large knobs	Ant. Pri.	Gnd. Post	4.5
	Pwr. Trans. Pri.	A. C. Plug	4.5
	Pwr. Trans. Sec.	Rect. Plates	4.3
	Spr. Field	Black Lead Cable	4.2
	Spr. V. C.	Black Lead Cable	4.5

P-4045 I. F. coil (unshielded)	.60
P-4047 Small knobs	.25
P-4088 2nd det. cathode Resistor 20,000 ohms	.25
G-1274 Filter choke	1.75
G-1324 Output transformer	1.50
G-1357 Voice coil and spider assembly	.75
G-1360 Speaker complete	12.50
G-1363 Trimmer condenser	.45
G-1372 Antenna and R. F. coil shield	.25
G-1373 Autodyne coil	2.00
G-1376 R. F. coil, less shield	.75
G-1378 Autodyne trimmer cond. (insulated)	.50
G-1379 Dial and scale assembly	1.50
G-1383 Power transformer 110 v. 60 cycle	3.50
G-1383A Power transformer 110 v. 25 cycle	7.20
G-1383B Power transformer 220 v. 60 cycle	7.20
G-1384 Filter peak, 60 cycle	3.50
G-1384A Filter peak, 25 cycle	4.50
G-1385 By-pass condenser peak	1.50
G-1386 Antenna coil	.75


TRANSFORMER CORP. OF AMERICA

MODEL AC 240
Schematic
Chassis View
Breakdown
Parts List

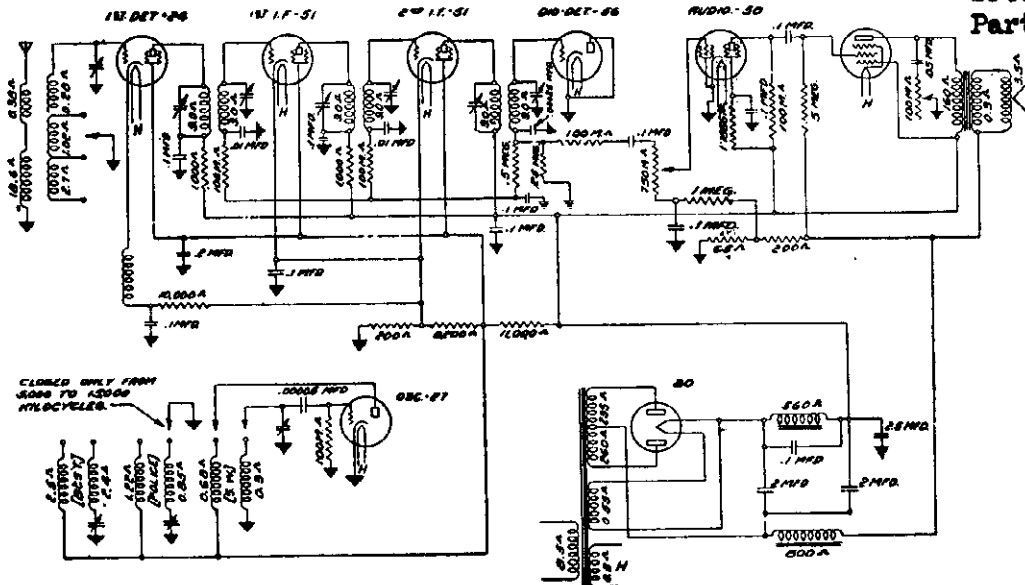


IF PEAK 490 KC

SCHEMATIC DIAGRAM
OF
CLARION MODEL 240
DRAWN BY L.J. CHECKED BY [Signature]
APPROVED BY [Signature] DATE: 5-17-52

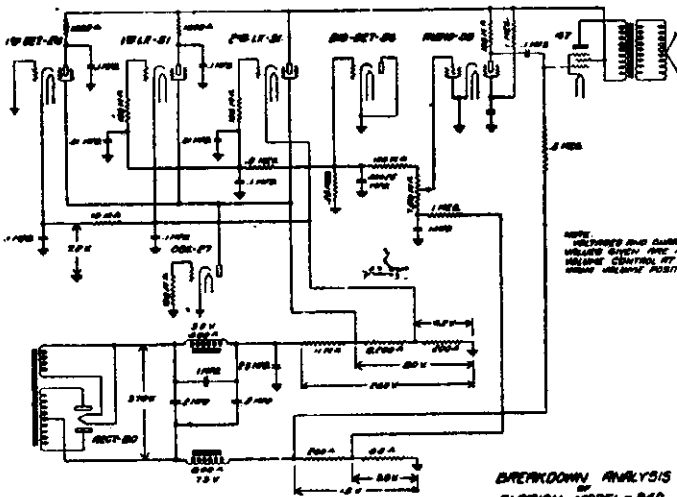

BREAKDOWN ANALYSIS
OF
CLARION MODEL 240

P-1038	Pilot lamp	.35
P-1049	Grid cap clip	.05
P-1106	1 megohm resistor	.35
P-1118	Chassis mounting washers	.03
P-1472	Tube shields	.10
P-1518	Chassis mounting screws	.05
P-1593	Type 24 socket	.20
P-1595	" 80 "	.20
P-1597	" 27 "	.20
P-1682	" 51 "	.20
P-1683	" 47 "	.20
P-1692	100,000 ohm resistor	.35
P-1728	.00005 mfd cond	.30
P-1755	500,000 ohm resistor	.35
P-4037	Knobs (large)	.30
P-4047	" (small)	.25
P-4118	1,000 ohm resistor	.20
P-4216	Speaker diaphragm	.50
P-4229	Ant. gnd building post	.15
P-4247	Band switch	2.50
P-4256	Escutcheon plate	.55
P-4259	Tone control-on-off switch	1.75
P-4260	Volume control	1.00
P-4262	Type 56 socket	.20
P-4264	" 58 "	.20
P-4267	Voltage div. resistor	.90
P-4271	10,000 ohm resistor	.20

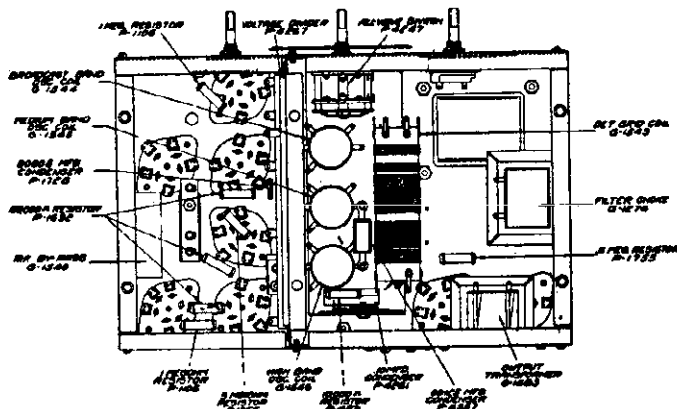


G-240 CHASSIS
BOTTOM VIEW

G-1274	Filter choke	1.75
G-1364	Trimmer and bracket assembly	.75
G-1483	Output transformer	1.50
G-1484	Speaker voice coil	.40
G-1502	Speaker complete	5.00
G-1528	Power transformer 110 vo. 60 cy.	3.75
G-1528A	" " 110 " 25 "	5.25
G-1528B	" " 220 " 60 "	4.50
G-1529	Filt. pack " 110 " 60 "	3.50
G-1529A	" " 110 " 25 "	4.50
G-1530	Dial and scale assembly	1.50
G-1531	First I. F. transformer	2.50
G-1532	Second " "	2.50
G-1533	Third " "	2.50
G-1540	Bypass cond. assembly	1.75
G-1543	Antenna coil	1.75
G-1544	Broadcast osc. coil	1.25
G-1545	Medium osc. coil	1.25
G-1546	High frequency osc. coil	1.25


Full List Prices - Your Regular Discount Applies

UNITED AMERICAN BOSCH CORP.

MODEL 20-J, 20-K,
20-L
Schematic, Voltage

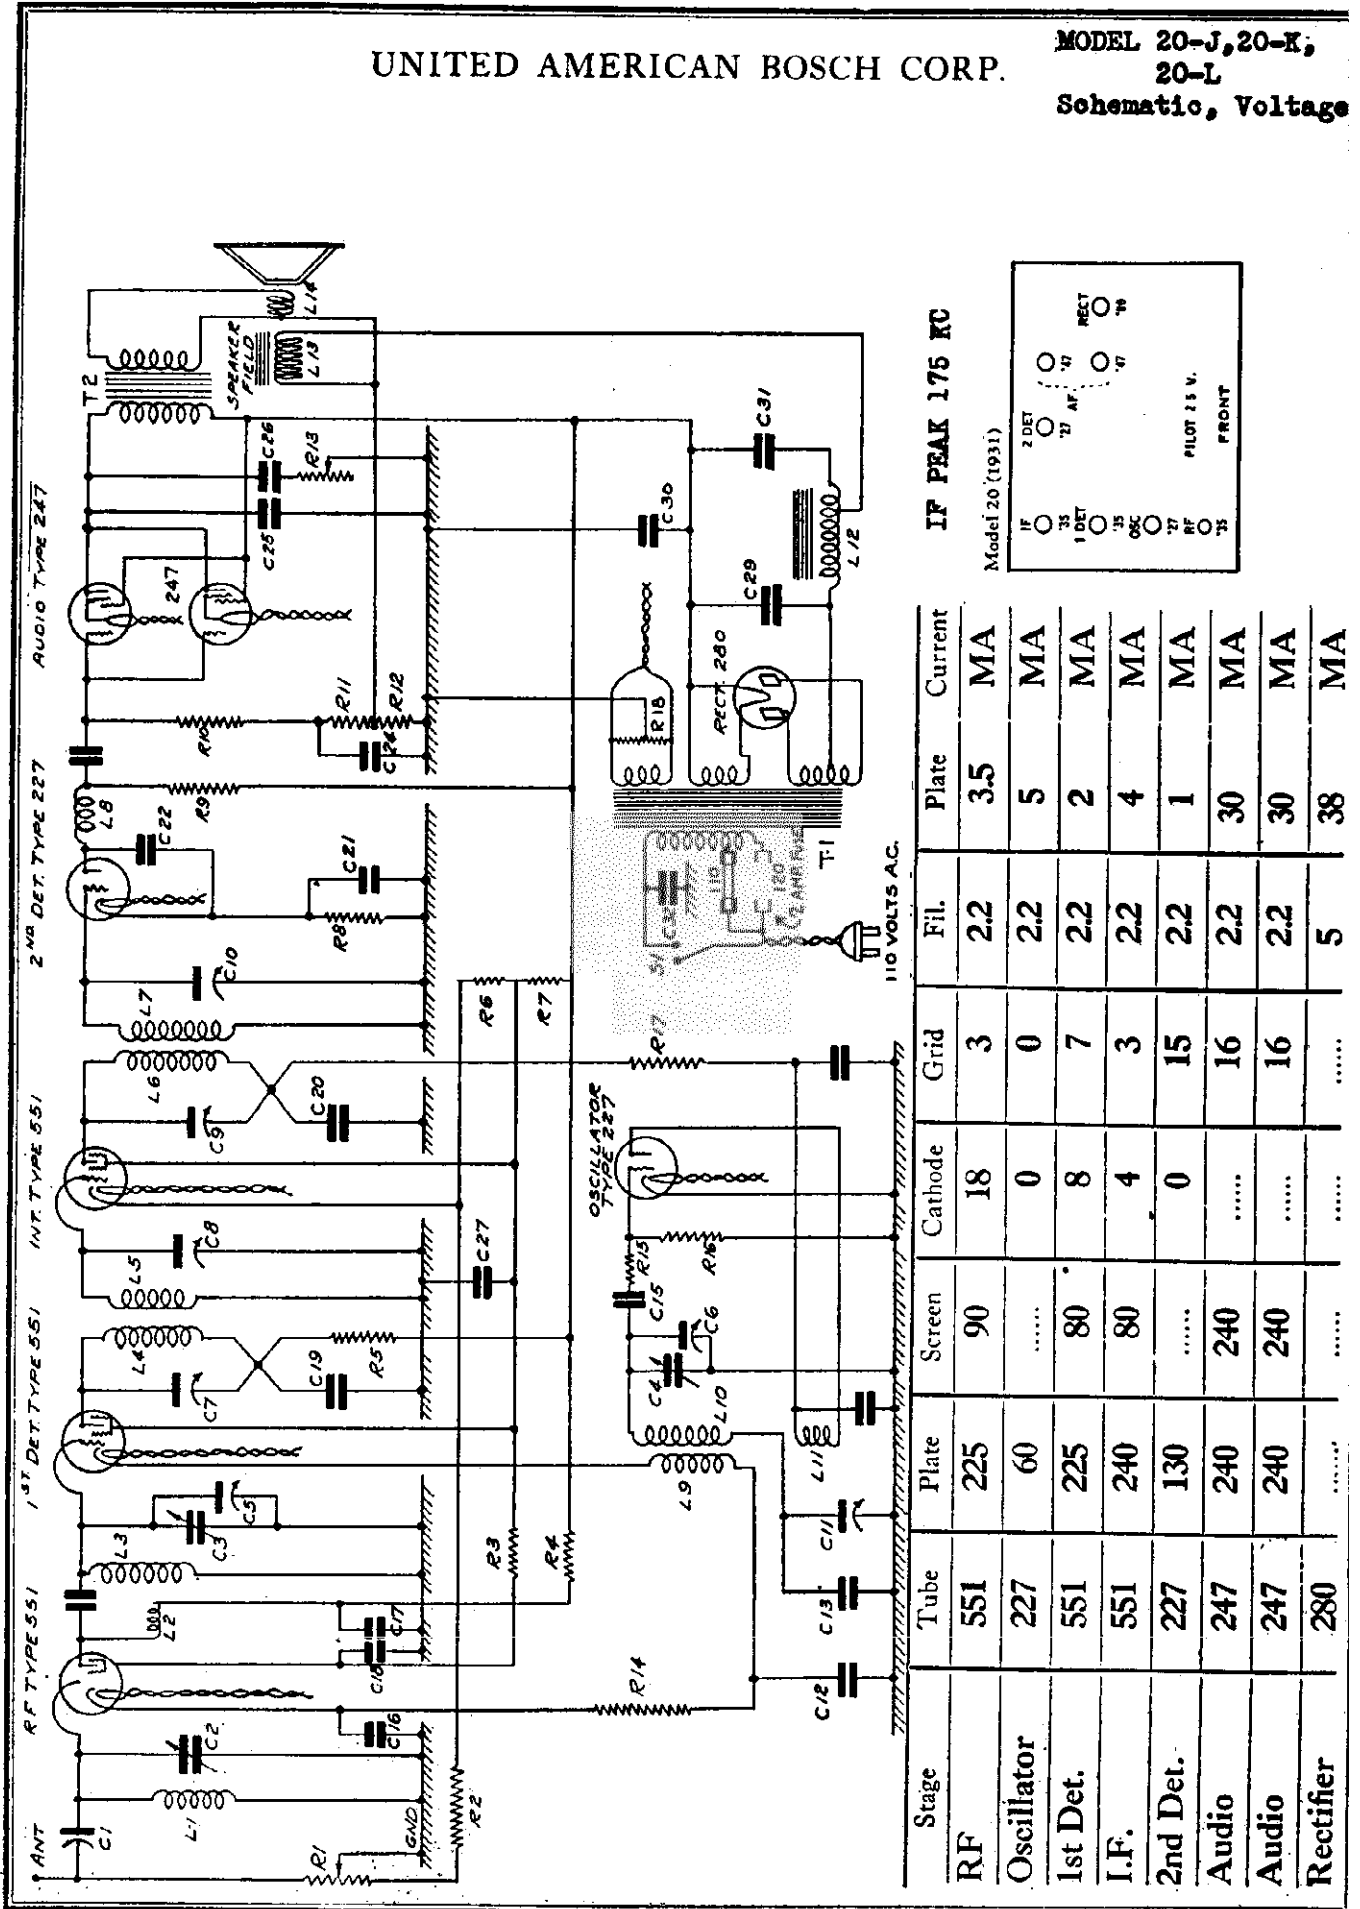

IF PEAK 175 KC

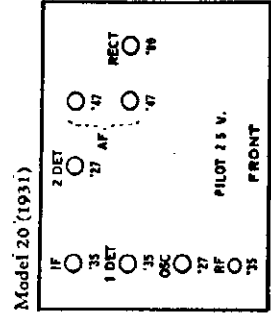

Stage	Tube	Plate	Screen	Cathode	Grid	Fil.	Plate	Current
RF	551	225	90	18	3	2.2	3.5	MA
Oscillator	227	60	0	0	2.2	5	MA
1st Det.	551	225	80	8	7	2.2	2	MA
I.F.	551	240	80	4	3	2.2	4	MA
2nd Det.	227	130	0	15	2.2	1	MA
Audio	247	240	240	16	2.2	30	MA
Audio	247	240	240	16	2.2	30	MA
Rectifier	280	5	38	MA

MODEL 20-J, 20-K,
20-L
Electrical Values
Notes

UNITED AMERICAN BOSCH CORP.

Antenna Adjustment—The antenna adjustment must be made when any change is made in the antenna.


Alignment Instruction

1. Connect the 175 KC output of the oscillator to the grid cap of the 1st detector.
 - a—Align Primary of 2nd IF Transformer (C9).
 - b—Align Secondary of 2nd IF Transformer (C10).
 - c—Align Primary of 1st IF Transformer (C7).
 - d—Align Secondary of 1st IF Transformer (C8).

(It is advisable to go over these adjustments twice to insure accuracy).

2. Reset the Oscillator for 1400 KC, connected to the 1st detector grid as before.
 - a—Align the Oscillator tuning condenser C6 by unscrewing two full turns, then turning slowly to the right until the first peak is reached.
3. Connect the 1400 KC output to the Antenna Connection of the set.
 - a—Align Antenna Trimmer and 1st detector C3.

- C 1—Antenna Trimmer
- C 2 } Tuning Condenser Gang with trimmer condensers
- C 3 }
- C 4 }
- C 5 }
- C 6 }
- C 7 } Variable Condenser Unit 75 to 140 mmf.
- C 8 }
- C 9 }
- C 10 } Variable Condenser Unit 75 to 140 mmf.
- C 11—Oscillator Series Trimming Condenser
- C 12—By-pass Condenser—.05 mfd.
- C 13—Oscillator Series Tuning Condenser .0011 mfd.
- C 14—Oscillator Plate By-pass Condenser .05 mfd.
- C 15—Oscillator Grid Condenser .0001 mfd.
- C 16—RF Cathode By-pass Condenser .05 mfd.
- C 17—RF Screen By-pass Condenser .05 mfd.
- C 18—RF Plate By-pass Condenser .05 mfd.
- C 19—1st Detector Blocking Condenser .05 mfd.
- C 20—IF Blocking Condenser .05 mfd.
- C 21—Detector Cathode By-pass Condenser .25 mfd.
- C 22—Detector Plate By-pass Condenser .0011 mfd.
- C 23—Audio Coupling Condenser .05 mfd.
- C 24—Audio Grid By-pass Condenser .05 mfd.
- C 25—Audio Plate By-pass Condenser .02 mfd.
- C 26—Tone Selector Condenser .1 mfd.
- C 27—Screen By-pass Condenser .5 mfd.
- C 28—Oscillator By-pass Condenser .5 mfd.
- C 29—Filter Condenser 1.8 mfd.
- C 30—Filter Condenser 3.5 mfd.
- C 31—Filter Condenser 1.8 mfd.
- C 32—Buffer Condenser .05 mfd.

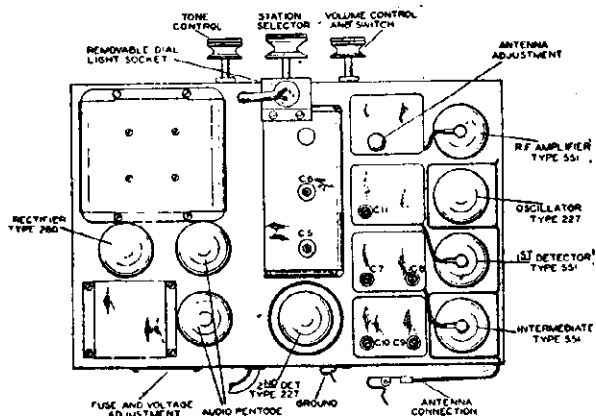




Alignment Adjustments

4. Retune the receiver to 600 KC and set oscillator to this frequency.
 - a—Align the oscillator low frequency adjustment C11. Rotate the dial slowly back and forth over a range of perhaps 1/4", at the same time rotating C11 back and forth until the maximum output is reached.
5. Return to 1400 KC (Receiver and Oscillator).
 - a—Re-align C3, C6 and the Antenna Trimmer.

- R 1—Volume Control 10,000 ohms
- R 2—Series Resistor 200 ohms
- R 3—RF Screen Resistor 1000 ohms
- R 4—RF Plate Resistor 1000 ohms
- R 5—1st Detector Plate Resistor 1000 ohms
- R 6—Divider Resistor 20,000 ohms
- R 7—Screen Supply Resistor 25,000 ohms
- R 8—2nd Detector Cathode Resistor 15,000 ohms
- R 9—2nd Detector Plate Resistor 100,000 ohms
- R 10—Audio Grid Resistor 250,000 ohms
- R 11—Audio Grid Resistor 100,000 ohms
- R 12—Audio Bias Resistor 200 ohms
- R 13—Tone Control
- R 14—Cathode Resistor 2000 ohms
- R 15—Oscillator Grid Resistor 5000 ohms
- R 16—Oscillator Grid Resistor 100,000 ohms
- R 17—Oscillator Plate Resistor 40,000 ohms
- T 1—Main Power Transformer
- T 2—Output Transformer
- S 1—Main Switch.
- L 1—Antenna Coil
- L 2—Primary of RF Coil
- L 3—Secondary of RF Coil
- L 4—I.F. primary coil
- L 5—I.F. secondary coil
- L 6—I.F. primary coil
- L 7—I.F. secondary coil
- L 8—Detector plate choke
- L 9—Oscillator coupling coil
- L 10—Oscillator grid coil
- L 11—Oscillator plate coil
- L 12—Filter choke coil
- L 13—Speaker Field Coil
- L 14—Speaker Voice Coil

UNITED AMERICAN BOSCH CORP.

MODEL 31, 32
Schematic
Data - Socket

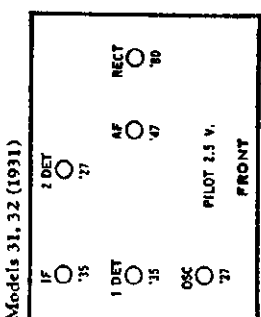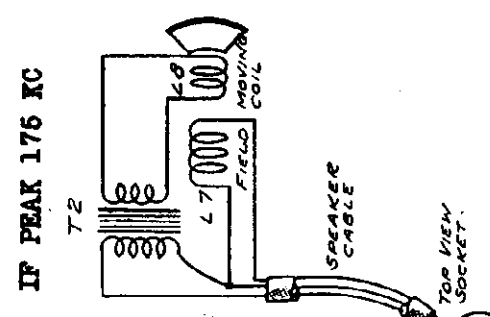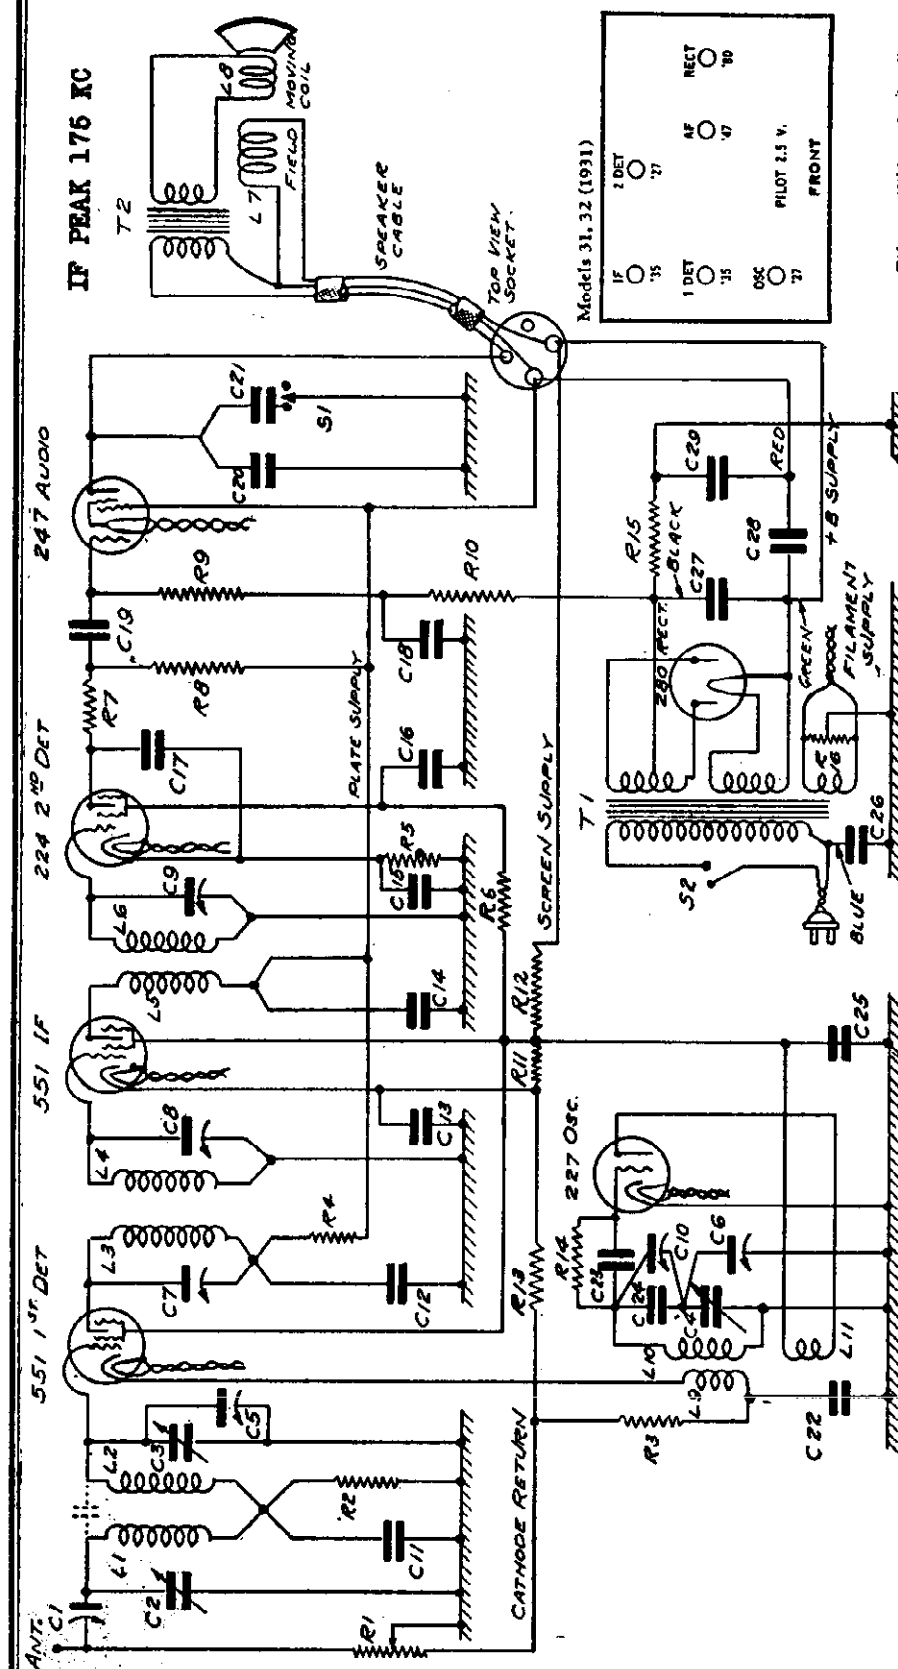


Antenna Adjustment—The antenna knob, located as shown on the drawing (figure 1) is for the purpose of obtaining the most efficient adjustment of the receiver to the antenna. Simply tune in a semi-distant broadcast station at reduced volume and turn the adjustment knob until the point of loudest reception is found. Select if possible a station received near 140 on the dial. The adjustment is permanent, and need not be disturbed unless the antenna is changed.

Line Voltage—The model 31 receiver is designed for use on 50 to 60 cycle alternating current, 105 to 120 volts. The model 32 is designed for 25 to 50 cycle, 105 to 120 volt alternating current. If excessive line voltage is encountered, some type of series resistance or "voltage regulator" should be employed.

Tone Control—The tone is varied from treble to bass by means of a two position snap switch operated by the right hand knob. The range of motion of this switch has been reduced from that found on previous models and care should be taken not to force the switch beyond the stop position.

MODELS 31-32
Superheterodyne

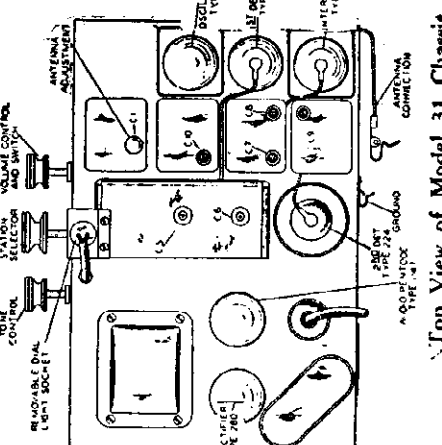

Top View of Model 31 Chassis

MODEL 31,32 AC
Electrical Values
Voltage

UNITED AMERICAN BOSCH CORP.

SOCKET VOLTAGES

T1—Power Transformer
T2—Output Transformer

L1—RF Coil
L2—RF Coil
L3—I.F. Coil (Primary)
L4—I.F. Coil (Secondary)
L5—I.F. Coil (Primary)
L6—I.F. Coil (Secondary)

L7—Speaker Field
L8—Speaker Voice Coil
L9—Oscillator Coupling Coil
L10—Oscillator Grid Coil
L11—Oscillator Plate Coil

Stage	Tube	Plate	Screen	Cathode*	Grid	Fil	Plate MA
1st Det.	551	260	80	10	7	2.2	2
Oscillator	227	75	..	*0	*0	2.2	5
I.F.	551	260	80	3	3	2.2	4
2nd Det.	224	50	*5	3	1	2.2	*.1
Audio	247	250	250	..	*3	2.2	32
Rectifier	280					4.8	22-22

Line voltage—115 volts

Volume control fully "on"

* These values will vary considerably with the type of test kit employed, due to the high resistance in the circuit.

- R1—Volume Control—10,000 ohms
- R2—Coupling Resistor—1000 ohms
- R3—1st Det. Cathode Resistor—5000 ohms
- R4—1st Det. Plate Resistor—1000 ohms
- R5—2nd Det. Cathode Resistor—50,000 ohms
- R6—2nd Det. Screen Resistor—2 megohms
- R7—2nd Det. Plate Resistor—10,000 ohms
- R8—2nd Det. Plate Resistor—1 megohm
- R9—Audio Grid Resistor—1/2 megohm
- R10—Audio Grid Resistor—100,000 ohms
- R11—Divider Resistor—20,000 ohms
- R12—Screen Supply Resistor—30,000 ohms
- R13—Cathode Resistor—300 ohms
- R14—Oscillator Grid Resistor—100,000 ohms
- R15—Audio Bias Resistor—350 ohms
- R16—Mid Tap Resistor
- C1—Antenna Trimmer
- C2—Tuning Condenser
- C3—Tuning Condenser
- C4—Oscillator Tuning Condenser
- C5—Alignment Condenser
- C6—Oscillator Tuning Alignment
- C7—I. F. Alignment Condenser
- C8—I. F. Alignment Condenser
- C9—Alignment Condenser
- C10—Oscillator Alignment
- C11—RF Coupling Condenser .05 mfd.
- C12—1st Det. Plate By-pass .05 mfd.
- C13—I. F. Cathode By-pass .05 mfd.
- C14—I. F. Plate By-pass .05 mfd.
- C15—2nd Det. Cathode By-pass 1. mfd.
- C16—2nd Det. Screen By-pass .25 mfd.
- C17—2nd Det. Plate By-pass .0001 mfd.
- C18—Audio De-coupling Condenser .02 mfd.
- C19—Audio Coupling Condenser .006 mfd.
- C20—Audio Plate Condenser .05 mfd.
- C21—Tone Selector Condenser .05 mfd.
- C22—Cathode By-pass Condenser .05 mfd.
- C23—Oscillator Grid Condenser .0001 mfd.
- C24—Oscillator Tuning Condenser .0011 mfd.
- C25—Screen By-pass Condenser 8. mfd.
- C26—Buffer Condenser .08 mfd.
- C27—Filter Condenser 3.5 mfd.
- C28—Field Coil Tuning Condenser .08 mfd.
- C29—Filter Condenser 3.5 mfd.
- S1—Tone Selector Switch
- S2—Main Switch

Main Power Transformer

The various transformer windings may be identified for testing purposes as follows: Four leads are brought out on the terminal strip side and five on the opposite side.

Primary Winding—two terminal strip terminals nearest rear of set.

551, 224, 227 Filaments—heavy wires, terminal strip side.

Plate Center Tap—terminal nearest front of set.

280 Plates—stranded wires, opposite side.

280 Filaments—solid wires, opposite side.

Resistors

The resistors used in the models 31 and 32 receivers conform to the RMA standard of marking and may be identified by the following table of value and colors

Value	Body Color	Tip Color	Dot Color
300 ohms	Orange	Black	Brown
350 "	Orange	Green	Brown
1000 "	Brown	Black	Red
5000 "	Green	Black	Red
10000 "	Brown	Black	Orange
20000 "	Red	Black	Orange
30000 "	Orange	Black	Orange
50000 "	Green	Black	Orange
100000 "	Brown	Black	Yellow
1/2 megohm	Green	Black	Yellow
1 megohm	Brown	Black	Green
2 megohm	Red	Black	Green

ALIGNMENT

The following instructions for the alignment of the condensers in the models 31 and 32 describe the operation as done with any type of special oscillator designed for the adjustment of superheterodyne receivers. Such an oscillator is essential for anyone who handles more than a small amount of service work. Such oscillators are designed to provide ordinary broadcast frequencies, and in addition, a 175 kilocycle for the alignment of the intermediate frequency (I. F.) stages.

Alignment Instructions:

1—With 175 KC on the grid of the 551 IF tube Align C9

2—With 175 KC on the grid of the 551 1st detector Align C7, C8 and re-check C9

Set the condenser gang at the maximum position and move the dial until the line of light indicator is 1/4" to the right of the 55 division.

3—With 1400 KC on the grid of the 551 1st detector Align C6

4—Set gang at 600 KC and with 600 KC input on grid of 1st detector

Align C10

Re-check as in 3 above.

5—Set gang at 1400 KC with input on antenna connection

Align C1 and C5

Main Filter Condenser

The main filter condenser unit contains buffer condenser C26, by-pass condensers C27 and C29, and condenser C28 which "tunes" the speaker field coil. The unit is connected as follows:

Red lead —Speaker plug socket (see wiring diagram)
Green lead—"F" terminal of 280 socket
Blue lead —110 volt terminal at main transformer
Black lead—to R15 (350 ohms) on resistor strip

Test C27 from Black to Green
Test C28 from Green to Red
Test C29 from Red to Ground
Test C26 from Blue to Ground

MODELS 31-32 Superheterodyne

**MODEL 80
Installation
Notes**

UNITED AMERICAN BOSCH CORP.

Capacitor Plate:

In Figure 5 is shown the means by which this plate is supported underneath the chassis of the automobile. The insulation has been very carefully considered and is so designed that

it is unaffected by mud, water, or dust. A location on either side of the car frame or one across the rear, parallel to the axle, will be satisfactory. The plate is adjustable and it is desirable that it be lengthened as much as is possible without interfering with the mechanism of the car. Do not, however, bring the plate too near the motor compartment. Make sure that the clamping nut of the capacitor plate supporting bolt is tightened before fastening the clamp in place on the car frame with the pointed screw. The clamping nut, besides locking the supporting bolt, also serves to reinforce the "C" clamp against any tendency to open. Complete the installation by tightening the set screw and lock nut. The capacitor plate must be mounted as low as possible without interfering with the road clearance, and not too closely to large metal objects, such as "B" battery box, muffler, or car frame.

Chassis:

The chassis mounting is a rigid frame "D" having two adjustable brackets, "C" to support it against the dash board. Refer to Figure 2. In the installation of the set these brackets are assembled and the frame work used as a template to locate the holes in the dash board for the holding bolts. The bracket must be so located that clearance will be obtained for all obstructions. On the engine side, care should be taken to avoid interference with the vacuum tank or other devices mounted there. In using this bracket as a template, do not fail to use the radio set as a guide to obtain clearance for the projection of the set and for the control shaft and the battery cable. Drill the holes as located, using a 5/16" diameter drill in order that unavoidable irregularities in the location of the holes may be taken care of when the set is screwed in place. Next, mount the chassis on its rubber cushions and secure the entire assembly in position. Drive the holding bolts from the front and pull the set securely in place. In some cases, where the dash-board is free of all obstructions, it is possible to dispense with the brackets "C" and bolt the mounting frame directly against the engine bulkhead. This type of installation provides slightly more leg room. The frame is used as a template for laying out the mounting holes as before.

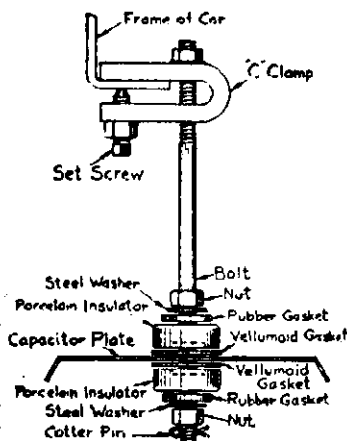


Fig. 5—Capacitor Plate.

Capacitor Coupler:

This unit must be mounted at the nearest convenient point to the capacitor plate. The mounting bracket is permanently fastened to the coupler and it is only necessary to bolt the bracket to the car frame. See Figure 6.

The coupler is provided with two connecting leads. The red lead should be cut to a length just sufficient to reach the capacitor plate and the spade terminal (which is shipped loosely clipped to the wire) soldered to the

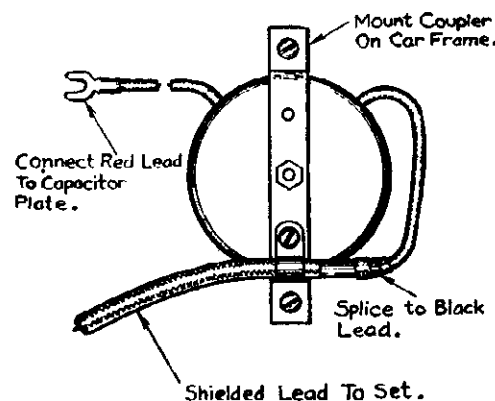


Fig. 6—Coupler.

end. Connection is made at the capacitor plate by means of a terminal screw and clip.

The shielded lead from the receiver must be tightly clamped in the cable clamp provided on the coupler unit. Connect the wire in the shielded lead to the black wire from the coupler and carefully solder and tape the joint. Be careful that the woven shielding is effectively grounded through the clamp provided on the coupler, and is kept back from the joint in order to prevent a short circuit.

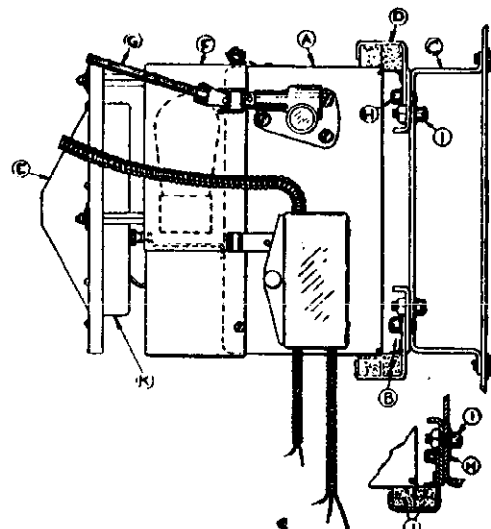


Fig. 2—Radio Chassis.

MODEL 91,92
Voltage
Values

UNITED AMERICAN BOSCH CORP.

NOMENCLATURE — MODEL 91

- R 1—500,000 ohms—Grid Resistor
- R 2—10,000 ohms—Grid Resistor
- R 3—1,000 ohms—Plate Resistor
- R 4—300 ohms—Cathode Divider Resistor
- R 5—20,000 ohms—Cathode Divider Resistor
- R 6—15,000 ohms—Screen Supply Resistor
- R 7—20,000 ohms—Screen Resistor
- R 8—25,000 ohms—Cathode Resistor
- R 9—50,000 ohms—Screen Resistor
- R 10—500,000 ohms—Plate Resistor
- R 11—500,000 ohms—Volume Control
- R 12—100,000 ohms—Grid Resistor
- R 13—500,000 ohms—Tone Control
- R 14—2 megohms—AVC Resistor
- R 15—5,000 ohms—Cathode Resistor
- R 16—100,000 ohms—Grid Resistor
- R 17—Mid Tap Resistor
- R 18—750 ohms—25 cycle only
- R 19—200 ohms—Bias Resistor
- R 20—750 ohms—Bias Resistor
- R 21—350 ohms—Bias Resistor
- R 22—2 megohms—Bias Resistor

- L 1—Antenna Coil
- L 2—1st R.F. Coil
- L 3—Primary } 1st IF Coil
- L 4—Secondary }
- L 5—Primary } 2nd IF Coil
- L 6—Secondary }
- L 7—Cathode Winding } Oscillator Coil
- L 8—Plate Winding }
- L 9—Grid Winding }
- L 10—Primary } Output Transformer T 2
- L 11—Secondary }
- L 12—Field Coil } Loud Speaker
- L 13—Voice Coil }

- C 1—Variable—Antenna Trimmer
- C 2—Variable
- C 3—Variable
- C 4—Variable } Condenser Gang
- C 5—Alignment }
- C 6—Alignment }
- C 7—Variable } 1st IF alignment condenser
- C 8—Variable }
- C 9—Variable—2nd IF alignment condenser
- C 10—Variable—Oscillator Series Condenser
- C 11—.05 mfd.—RF coupling condenser
- C 12—.05 mfd.—Plate by-pass condenser
- C 13—.05 mfd.—Grid Condenser
- C 14—.05 mfd.—Cathode by-pass condenser
- C 15—.05 mfd.—Plate by pass condenser
- C 16—.0001 mfd.—AVC condenser
- C 17—.5 mfd.—Cathode by-pass
- C 18—.25 mfd.—Screen by-pass
- C 19—.00025 mfd.—Plate by-pass
- C 20—.006 mfd.—Audio coupling condenser
- C 21—.25 mfd.—Grid by-pass
- C 22—.01 mfd.—Plate by-pass
- C 23—.05 mfd.—Tone Control Condenser
- C 24—.05 mfd.—Grid condenser
- C 25—.05 mfd.—Cathode by-pass
- C 26—.0011 mfd.—Oscillator series condenser
- C 27—.0001 mfd.—Oscillator grid condenser
- C 28—8 mfd.—Screen by-pass
- C 29—.01 mfd.—Buffer condenser
- C 30—16 mfd.—Filter condenser
- C 31—4 mfd.—Filter condenser
- C 32—.01 mfd.—Field shunt condenser


SOCKET VOLTAGES

Stage	Tube	Plate	Screen	Cathode	Grid	Fil.	Plate MA
Osc.	227	100	0	5	2.2	4
1st Det.	551	240	85	0	3.5	2.2	.1
IF	551	240	90	3	.5	2.2	2
2nd Det.	224	90	45	5	4	2.2	.1
AVC	224	10	50	60	.5	2.2	.1
Audio	247	240	240	16	2.2	30
Rect.	280	4.8	25

NOTE: These are average readings obtained with an ordinary set analyzer.

UNITED AMERICAN BOSCH CORP.

MODEL 91, 92
Schematic

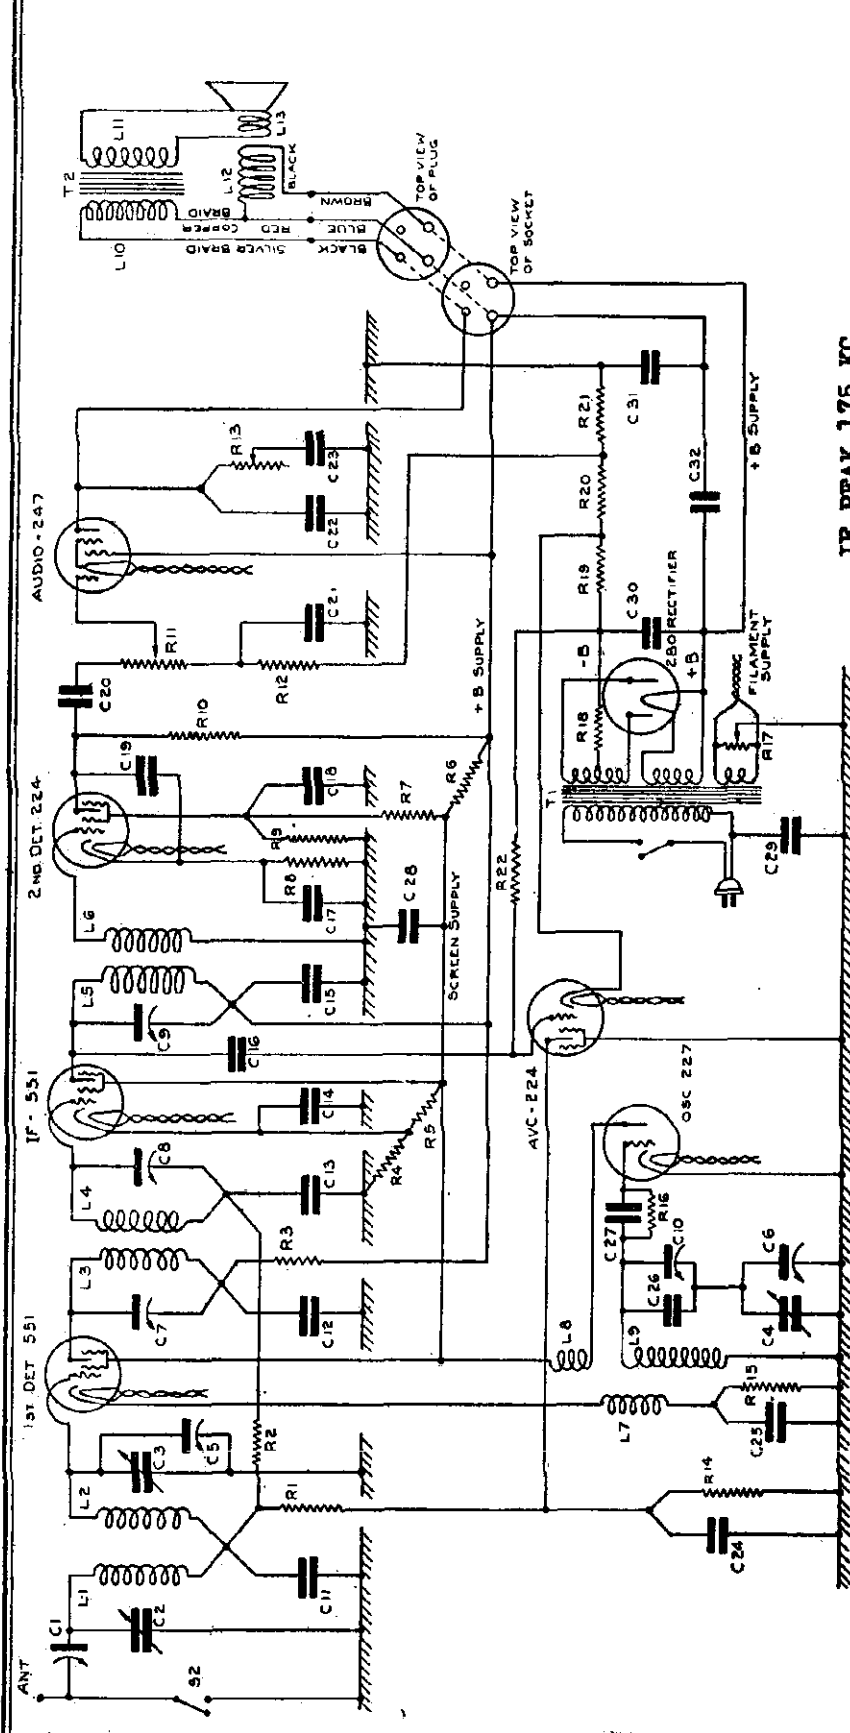



IF PEAK 175 KC

Fig. 2—Schematic Diagram — Model 91

LOCATION OF PARTS

- R 9, R 11, R 13, R 17, C 11, C 19, C 22, C 23, C 28, C 32 on Chassis Base.
- R 3, R 4, R 5, R 6, R 15, R 16, C 14, C 25, C 27 on Resistor Strip.
- R 7, R 8, R 10, R 12, C 17, C 18, C 20, C 21 on Resistor Strip.
- R 1, R 14, R 19, R 20, R 21, C 24, C 29 on Resistor Strip.
- C 10, C 26, L 7, L 8, L 9 on Oscillator Coil Assembly.
- R 2, C 7, C 8, C 12, C 13, L 3, L 4 on 1st IF Coil Assembly.
- R 22, C 9, C 15, C 16, L 5, L 6 on 2nd IF Coil Assembly.
- C 30, C 31 in Housed Filter Assembly.
- C 1, C 2, C 3, C 4, C 5, C 6 on Main Tuning Condenser Gang.

Models 91, 92 (1932)

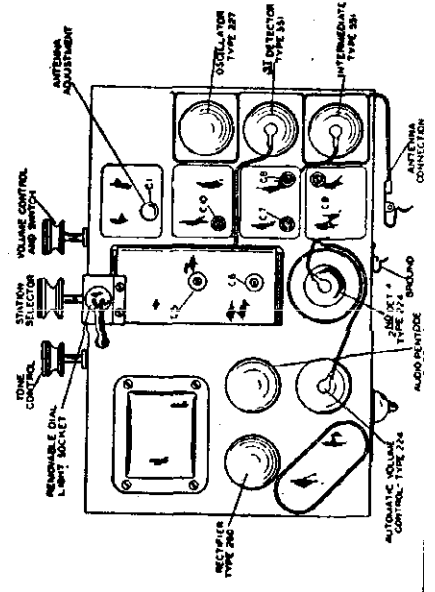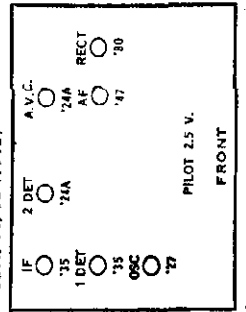

MODEL 100 Auto
Advertised 9-20
Data

UNITED AMERICAN BOSCH CORP.

MODEL 100 SUPERHETERODYNE
MOTOR CAR RADIO

This is a seven tube, superheterodyne receiver with full automatic volume control, push-pull pentode output and electro dynamic speaker. The Magmotor, a source of "B" current, is supplied as an accessory.

TUBES are furnished with receiver as follows:

- | | |
|---|---|
| 1 type 236, radio frequency amplifier. | 1 type 238, diode triode which functions as a second detector, and audio-amplifier, and with its related circuit, furnishes voltage for automatic volume control. |
| 1 type 237, oscillator. | |
| 1 type 236, first detector. | |
| 1 type 236, intermediate frequency amplifier. | |
| 2 type 238, as push-pull audio amplifiers. | |

The type 238 tubes used in the last three positions named above, are pentode power output tubes. All of the tubes used in this receiver are designed especially for automobile use to withstand the vibration and heater voltage fluctuation to which they are subjected.

CHASSIS contains the tubes, tuning condensers and elements of the electrical circuit. (See circuit diagram). It is enclosed in a metal box provided with mounting hooks for easy attachment to a MOUNTING PLATE designed to be mounted either side of the bulkhead. Shielding is complete and internal filtering is so arranged that a minimum of engine interference obtains. Speaker, battery box, control head and plate antenna, find easy attachment to the chassis through cable plug connections inserted on the under side of chassis.

CONTROL UNIT fastens to the steering column and regulates the station selection and volume level. Cable is connected internally with plug for chassis connection.

FLEXIBLE SHAFT connects control unit and chassis drive. It consists of three layers of five strands of wire wound in alternate directions, enclosed in flexible tube: provides accurate tuning unaffected by excessive vibration.

LOUD SPEAKER of electro dynamic type consumes $1\frac{1}{2}$ amperes from storage battery. Cable is connected internally with plug for chassis connection.

MAGMOTOR using permanent magnet field delivers 40 M. A. of plate current at 160 volts (at the tubes) with an "A" battery drain of 2 amperes. Self-enclosed with filtering to eliminate brush interference. Cable connected internally with plug for chassis connection.

IGNITION SUPPRESSION is accomplished through use of 9 resistors in ignition circuits and grounding of cable shields.

BATTERY BOX of heavy weather proof steel, for optional use to contain 3 special Heavy Duty automobile type "B" batteries. Battery box hangs from floor boards of car, access from the top. Cable furnished with plug for chassis connection.


PLATE ANTENNA for optional use when there is no roof antenna in car: clamps to frame of car with hardened set screws. Step down transformer fastened to bracket; cable attached to plate with plug for chassis connection.

"B" Battery Cable



- B-	Black
+67½ B	White
+135 B	Red

UNITED AMERICAN BOSCH CORP

MODEL 100 Auto
Advertised 9-2
Schematic
Values

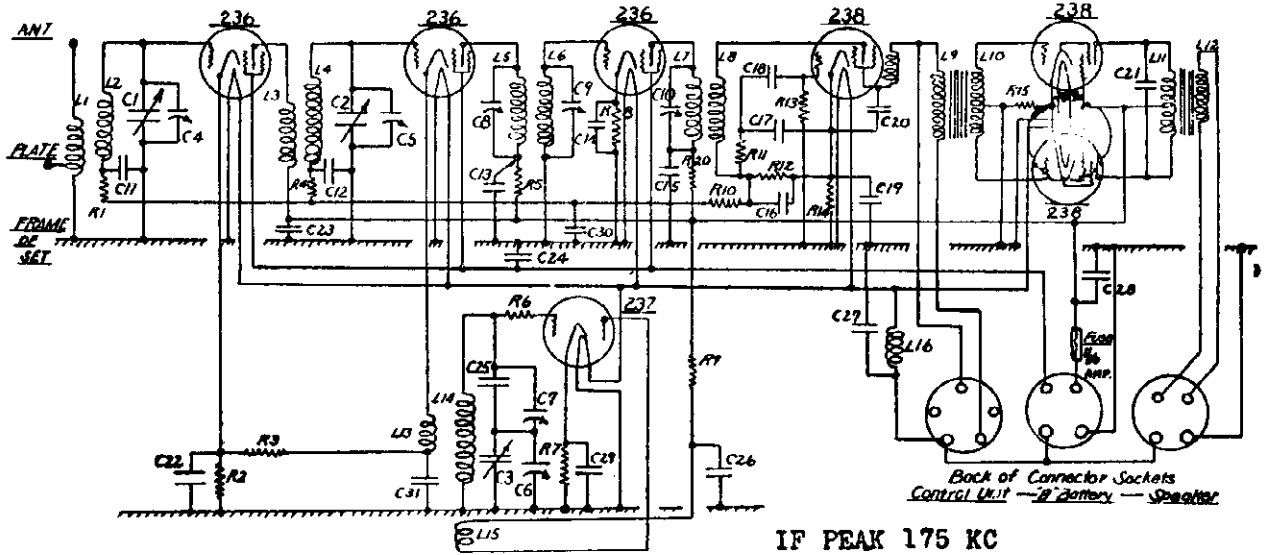

Model 100 (Motor Car) (1932)

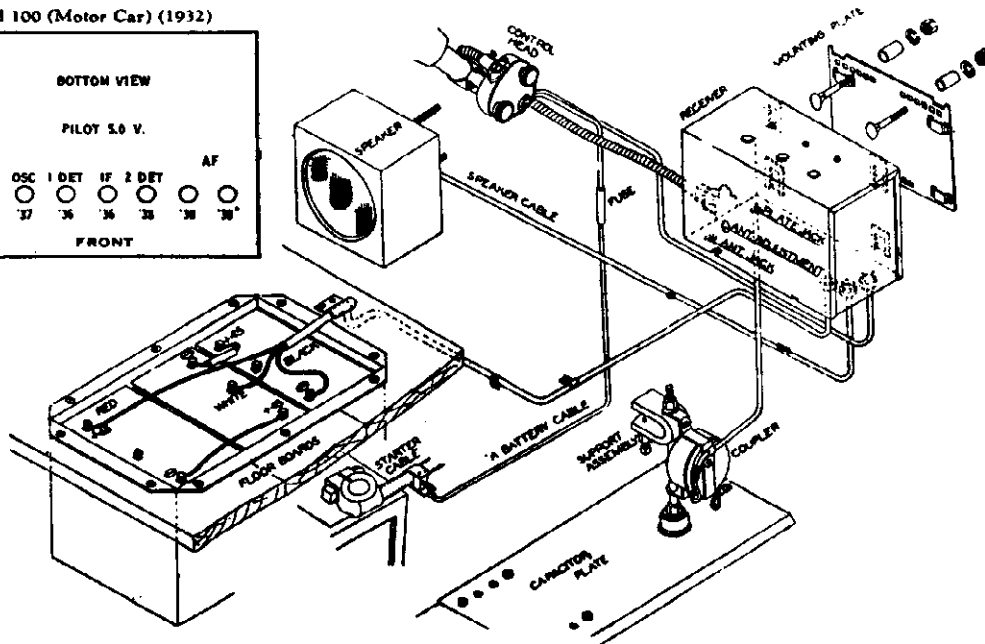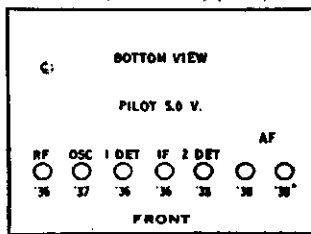

Stage	Tube	Fil.	Carbide	Grid	Screen	Plate	ALTA
RF	236	5.8	5	10	60	130	1
Osc	237	5.8	30	80	55	130	1
1st Det	236	5.8	20	25	60	130	1.5
IF	238	5.8	50	1	120	*1	*6
2nd Det	238	5.8	12	12	135	130	10
Audio	238	5.8	12	12	135	130	10

Note: The values in the table are only approximate due to unavoidable differences in tubes.

Symbols and Electrical Values

- R1 — 10,000 ohms
- R2 — 3,000 ohms
- R3 — 5,000 ohms
- R4 — 10,000 ohms
- R5 — 1,000 ohms
- R6 — 1,000 ohms
- R7 — 3,000 ohms
- R8 — 1,500 ohms
- R9 — 5,000 ohms
- R10 — .5 megohm
- R11 — 100,000 ohms
- R12 — .5 megohm
- R13 — .1 megohm

- R14 — 2,000 ohms
- R15 — 1,500 ohms
- R16 — 1,000 ohms
- C1
- C2 } Condenser
- C3 } Gang with
- C4 } Alignment
- C5 } Condensers
- C6
- C7 — 100 to 200 mmf.
- C8 — 75 to 140 mmf.
- C9 — 75 to 140 mmf.
- C10 — 75 to 140 mmf.

- C11 — .05 mfd.
- C12 — .05 mfd.
- C13 — .05 mfd.
- C14 — .05 mfd.
- C15 — .05 mfd.
- C16 — .00025 mfd.
- C17 — .0001 mfd.
- C18 — .01 mfd.
- C19 — .5 mfd.
- C20 — .0011 mfd.
- C21 — .004 mfd.
- C22 — .05 mfd.
- C23 — .05 mfd.

- C24 — .25 mfd.
- C25 — 1100 mmf.
- C26 — .05 mfd.
- C27 — .25 mfd.
- C28 — .25 mfd.
- C29 — .05 mfd.
- C30 — .25 mfd.
- C31 — .05 mfd.
- L1 } Antenna Coil
- L2 } Antenna Coil
- L3 } Radio Pre-
- L4 } quency Coil

- L5 } Intermediate
- L6 } Coil
- L7 } Intermediate
- L8 } Coil
- L9 } Audio Input
- L10 } Transformer
- L11 } Audio Output
- L12 } Transformer
- L13 } Oscillator
- L14 } Coil
- L15 } Coil
- L16 — Filter

**MODEL 108
Police Auto
Data**

UNITED AMERICAN BOSCH CORP.

ADJUSTMENT OF THE RECEIVER.

After the receiver has been installed it is necessary to adjust it to the frequency of the transmitting station. Even if the set has been shipped with the proper setting, a slight readjustment will be necessary. The procedure is the same in both cases.

The positions of the four alignment condensers which take care of the adjustment are shown on the installation drawing. The car should be in the vicinity of the transmitting station when the alignment is made, in order to assure adequate signal strength. Proceed as follows:

1. Switch the receiver "on" and turn the volume and sensitivity control to maximum position.
2. Adjust OSCILLATOR condenser until the signal is picked up, using a special screw driver with an insulated tip. (Such an American Bosch Service Tool #432).
3. Reduce the sensitivity control until the station can just be heard, and re-adjust the OSCILLATOR until the signal is loudest.
4. Reduce the sensitivity control until the station can just be heard and adjust the HF alignment for maximum volume. As the volume increases, reduce the sensitivity as far as possible. This permits a sharper adjustment to be made, as the ear is more sensitive to changes in volume when the signal is faint.
5. Screw the SERIES antenna condenser in as far as possible. Pay no attention to the signal while doing this.
6. Attempt to find a position of the SHUNT condenser which will give maximum volume. Always reduce the sensitivity control when increased response of the set results from the various adjustments which you are making.
7. If no position of the SHUNT condenser will give a point of maximum volume or "peak", unscrew it as far as possible and slowly unscrew the SERIES condenser until the adjustment is obtained. Endeavor to obtain this adjustment with the SERIES condenser screwed IN as far as possible.

The relative position of the shunt condenser is unimportant.



FUSES

A 1/16 ampere fuse is located in the B Battery jumper wire, as described under "B" Battery Cable". The "A" fuse is located in the control box and may be reached for replacement by simply removing the cover.

C1	75 to 140 mmf	Antenna Series Condenser
C2	7 to 70 mmf	Antenna Shunt Condenser
C3	75 to 140 mmf	Tuning Condenser (1st. Det.)
C4	75 to 140 mmf	Tuning Condenser (I.F.)
C5	75 to 140 mmf	Tuning Condenser (I.F.)
C6	75 to 140 mmf	Tuning Condenser (2nd Det.)
C7	100 to 280 mmf	Oscillator Tuning Condenser
C8	.05 mfd	By-pass Condenser (RF)
C9	.05 mfd	By-pass Condenser (RF)
C10	.05 mfd	By-pass Condenser (RF)
C11	.05 mfd	By-pass Condenser (1st. Det.)
C12	.05 mfd	By-pass Condenser (1st. Det.)
C13	.05 mfd	By-pass Condenser (IF)
C14	.05 mfd	By-pass Condenser (IF)
C15	.25 mfd	By-pass Condenser (2nd. Det.)
C16	.25 mfd	By-pass Condenser (2nd Det.)
C17	.00025 mfd	By-pass Condenser (2nd Det.)
C18	.00025 mfd	By-pass Condenser (2nd Det.)
C19	.006 mfd	Audio Condenser
C20	.05 mfd	Audio Condenser
C21	.5 mfd	Audio Blocking Condenser
C22	.25 mfd	Heater By-pass Condenser
C23	.25 mfd	Screen By-pass Condenser
C24	.0001 mfd	AVC Condenser
C25	.05 mfd	By-pass Condenser (1st. Det.)
C26	.05 mfd	By-pass Condenser (Osc.)
C27	.05 mfd	By-pass Condenser (Osc.)
C28	.25 mfd	By-pass Condenser (AVC)
C29	.25 mfd	By-pass Condenser (AVC)
R1	10,000 ohms	Grid Resistor (RF)
R2	10,000 ohms	Grid Resistor (1st. Det.)
R3	1,000 ohms	Plate Resistor (1st. Det.)
R4	1,000 ohms	Cathode Resistor (IF)
R5	1 megohm	Cathode Resistor (2nd. Det.)
R6	500,000 ohms	Screen Resistor (2nd. Det.)
R7	500,000 ohms	Plate Resistor (2nd. Det.)
R8	1 megohm	Audio Grid Resistor
R9	100,000 ohms	Plate Resistor (2nd Det.)
R10	1,000 ohms	Cathode Resistor (RF)
R11	2 megohm	AVC Grid Resistor
R12	100,000 ohms	AVC Resistor
R13	500,000 ohms	AVC Plate Resistor
R14	1,000 ohms	Oscillator Plate Resistor
R15	2,000 ohms	Oscillator Cathode Resistor
R16	20,000 ohms	1st. Det. Cathode Resistor
R17	10,000 ohms	2nd. Det. Plate Resistor

UNITED AMERICAN BOSCH CORP.

MODEL 108
Police Auto
Schematic

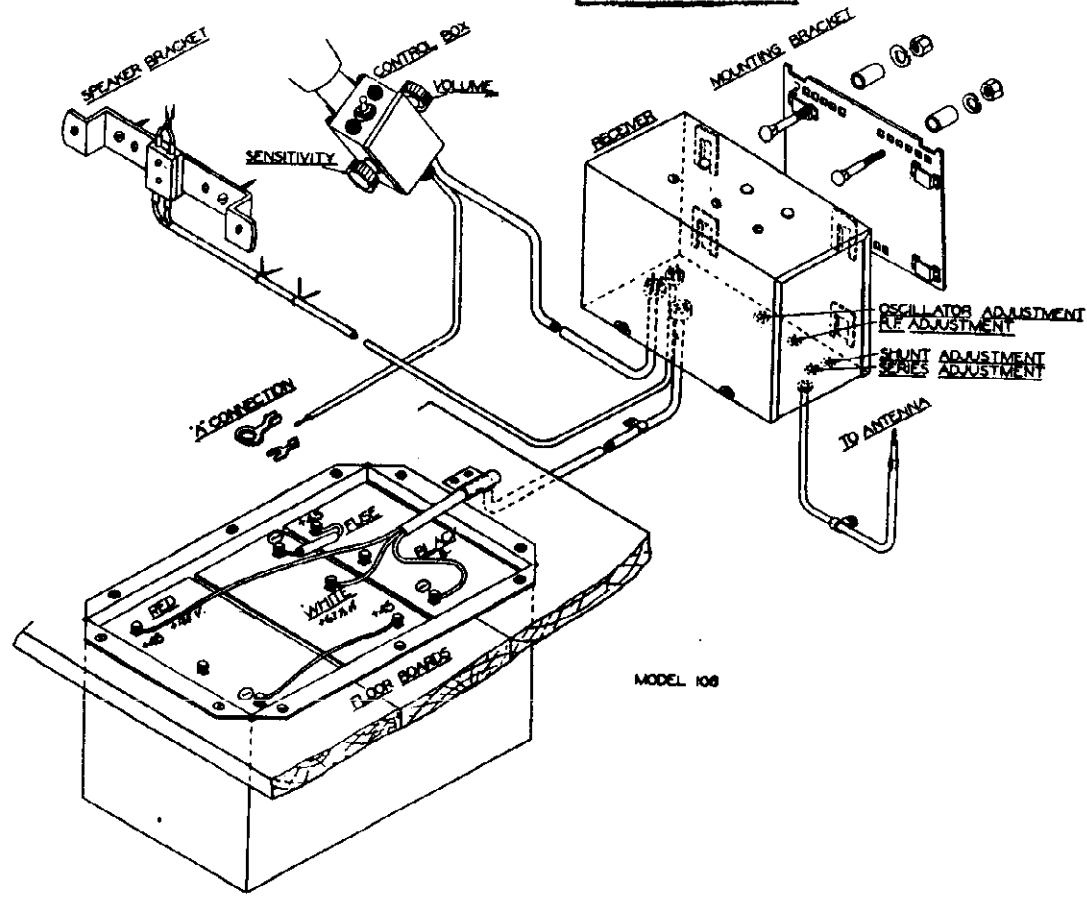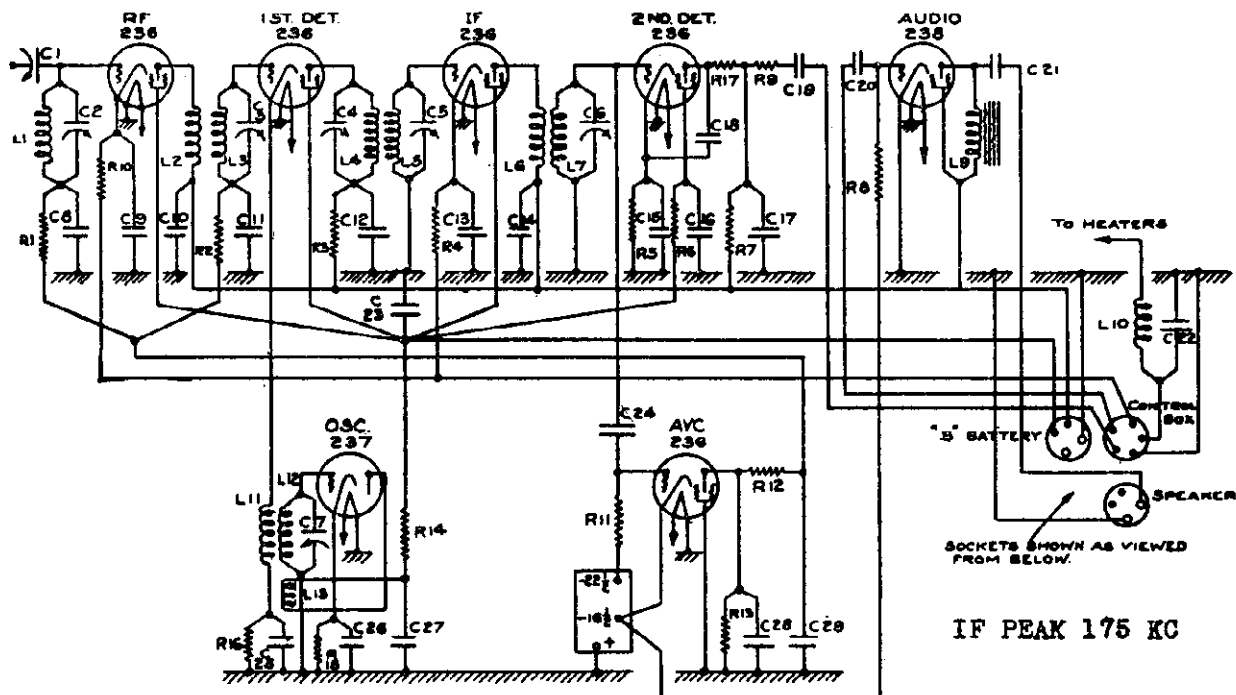

MODEL 108

MODEL 205,206,5-A
205-A


UNITED AMERICAN BOSCH CORP.

Voltage - Data

STAGE	TUBE	FIL.	PLATE	SOCKET VOLTAGES			PLATE MA.	
				SCREEN	CATHODE	GRID		
1st RF	551	2.3	250	90	2.5	3.0	4.5	
2nd RF	551	2.3	250	90	2.5	3.0	4.5	
Det.	224	2.3	*150	*20	3.0	1.5	.5	
Audio	247	2.3	250	250	--	*16	*32	
Rect.	280	4.8	Plate current of each plate · 20					

The readings were made with the volume control in the full "on" position.

*These voltages are the correct values. The average test kit will give much lower readings, (as low as 1/10 of these values) due to the low resistance of the meters compared to the high resistance included in the detector plate and screen circuits and the audio grid circuit.

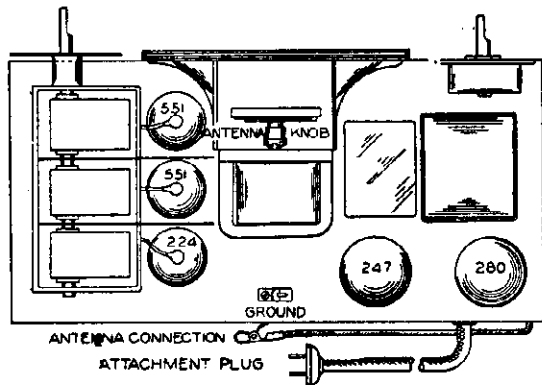


IMPORTANT

Antenna Adjustment: The small knob located on the loud speaker must be adjusted at the time of installation to obtain the best reception. Make this adjustment on a weak station which is received at some point near 30 on the dial and then re-check the adjustment at several other points to make sure that it has been accurately done.

Chassis: The chassis may be removed by pulling off the knobs and unscrewing the felt feet.

Model 5A, Edition 2 (1931)

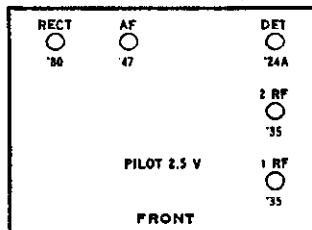

RESISTOR COLOR CODE


200 ohms ----- Red ---- Black -- Brown	50,000 ohms ---- Green -- Black -- Orange
400 ohms ----- Yellow - Black -- Brown	100,000 ohms ---- Brown -- Black -- Yellow
10,000 ohms ---- Brown -- Black -- Orange	500,000 ohms ---- Green -- Black -- Yellow
15,000 ohms ---- Brown -- Green -- Orange	1 megohm ----- Brown -- Black -- Green
20,000 ohms ---- Red ---- Black -- Orange	2 megohms ----- Red ---- Black -- Green

TEMPORARY CONDENSED SERVICE PARTS LIST FOR TYPE R.S. 205 RADIO RECEIVER

MAIN ASSEMBLIES	KNOBS	100727 Resistor (100,000 ohms)
103655 Chassis (with tubes)	102445 Volume and tuning knobs	100194 Resistor (1/2 megohm)
102280 Speaker	100929 Trimmer cond. knob	100815 Resistor (1 megohm)
103878 Cabinet with plates	MISCELLANEOUS PARTS	100196 Resistor (2 megohms)
COILS	101895 Dial with scale	99412 Mid tap resistance
101858 Field coil (speaker)	102282 Diaphragm for speaker	SOCKETS
102438 R. F. coil complete	98713 Lamp for dial	101890 Dial light socket
102243 R. F. primary coil	RESISTORS	102447 Tube socket for '24 tube
102439 Antenna coil	102342 Volume control & switch	102449 Tube socket for '80 tube
CONDENSERS	102437 Volume control only	102446 Tube socket for '47 tube
102178 By-pass assembly	102314 Resistor (200 ohms)	102448 Tube socket for '51 tube
102022 Antenna trimmer	102177 Resistor (400 ohms)	SWITCH
101143 Fixed (.0001 mfd.)	100825 Resistor (10,000 ohms)	101930 Switch with (2) nuts
101881 Large filter cond.	101404 Resistor (15,000 ohms)	TRANSFORMER
103695 Cond. (.01 mfd-4ply)	100813 Resistor (20,000 ohms)	102551 Output transformer
100705 Cond. (.006 mfd.)	100512 Resistor (50,000 ohms)	101939 Power transformer


UNITED AMERICAN BOSCH CORP.

MODEL 205,206,5-A
205-A
Schematic - Data

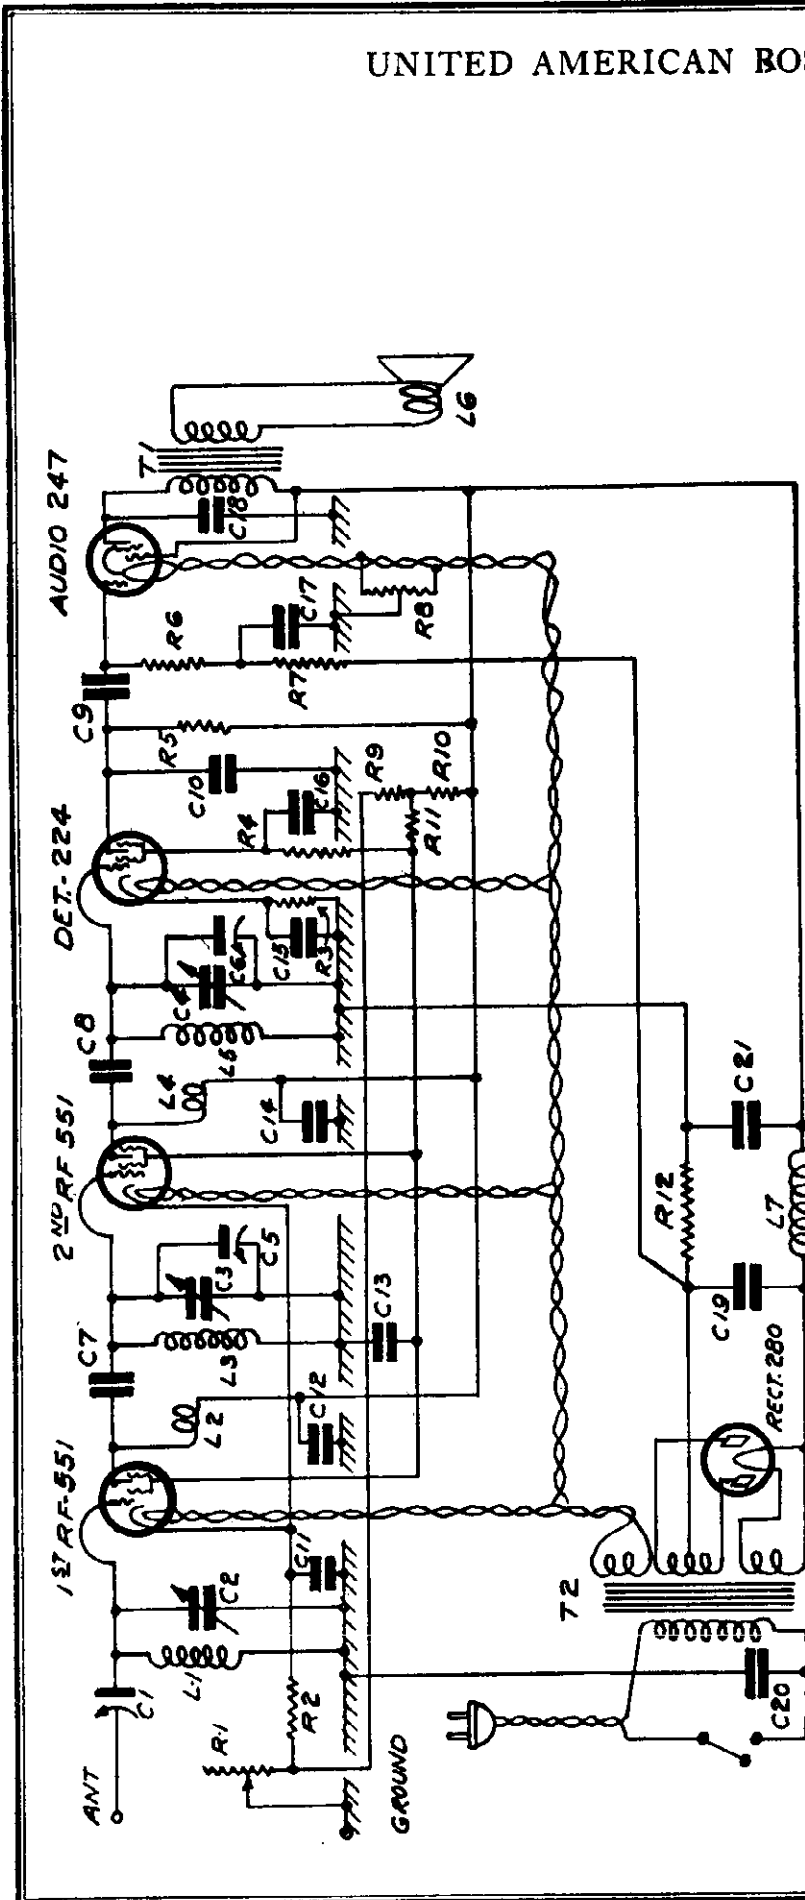

ELECTRICAL VALUES

R1 - 10,000 ohms	R11 - 10,000 ohms	C19 - .006 mfd.	C19 - 8. mfd.
R2 - 200 ohms	R12 - 400 ohms	C20 - .0001 mfd.	C20 - .01 mfd.
R3 - 50,000 ohms	C1 - Trimmer	C21 - .05 mfd.	C21 - 4 mfd.
R4 - 2 megohms	C2 - Tuning	L1 - Ant. Coil	L1 - Ant. Coil
R5 - 1 megohm	C3 - Tuning	L2 - Primary	L2 - Primary
R6 - 500,000 ohms	C4 - Tuning	L3 - Secondary	L3 - Secondary
R7 - 100,000 ohms	C5 - Alignment	L4 - Primary	L4 - Primary
R8 - Center Tap	C6 - Alignment	L5 - Secondary	L5 - Secondary
R9 - 20,000 ohms	C7 - Coupling	L6 - Voice Coil	L6 - Voice Coil
R10 - 15,000 ohms	C8 - Coupling	L7 - Field Coil	L7 - Field Coil

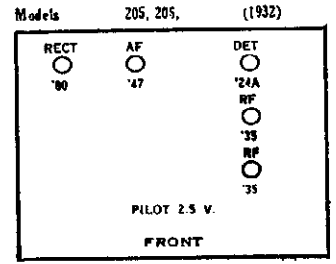


Note: Electrolytic filter condensers C19 and C21 are a single assembly. Condensers C11 to C18 inclusive are also a single assembly contained in the square can underneath the base plate.

MODEL 226

UNITED AMERICAN BOSCH

RECORD OF CHANGES
 70220 C-26 - 24-24-24
 7124 C-26 - 24-24-24
 7125 C-26 - 24-24-24
 7126 C-26 - 24-24-24
 7127 C-26 - 24-24-24
 7128 C-26 - 24-24-24
 7129 C-26 - 24-24-24
 7130 C-26 - 24-24-24
 7131 C-26 - 24-24-24
 7132 C-26 - 24-24-24
 7133 C-26 - 24-24-24
 7134 C-26 - 24-24-24
 7135 C-26 - 24-24-24
 7136 C-26 - 24-24-24
 7137 C-26 - 24-24-24
 7138 C-26 - 24-24-24
 7139 C-26 - 24-24-24
 7140 C-26 - 24-24-24
 7141 C-26 - 24-24-24
 7142 C-26 - 24-24-24
 7143 C-26 - 24-24-24
 7144 C-26 - 24-24-24
 7145 C-26 - 24-24-24
 7146 C-26 - 24-24-24
 7147 C-26 - 24-24-24
 7148 C-26 - 24-24-24
 7149 C-26 - 24-24-24
 7150 C-26 - 24-24-24
 7151 C-26 - 24-24-24
 7152 C-26 - 24-24-24
 7153 C-26 - 24-24-24
 7154 C-26 - 24-24-24
 7155 C-26 - 24-24-24
 7156 C-26 - 24-24-24
 7157 C-26 - 24-24-24
 7158 C-26 - 24-24-24
 7159 C-26 - 24-24-24
 7160 C-26 - 24-24-24
 7161 C-26 - 24-24-24
 7162 C-26 - 24-24-24
 7163 C-26 - 24-24-24
 7164 C-26 - 24-24-24
 7165 C-26 - 24-24-24
 7166 C-26 - 24-24-24
 7167 C-26 - 24-24-24
 7168 C-26 - 24-24-24
 7169 C-26 - 24-24-24
 7170 C-26 - 24-24-24
 7171 C-26 - 24-24-24
 7172 C-26 - 24-24-24
 7173 C-26 - 24-24-24
 7174 C-26 - 24-24-24
 7175 C-26 - 24-24-24
 7176 C-26 - 24-24-24
 7177 C-26 - 24-24-24
 7178 C-26 - 24-24-24
 7179 C-26 - 24-24-24
 7180 C-26 - 24-24-24
 7181 C-26 - 24-24-24
 7182 C-26 - 24-24-24
 7183 C-26 - 24-24-24
 7184 C-26 - 24-24-24
 7185 C-26 - 24-24-24
 7186 C-26 - 24-24-24
 7187 C-26 - 24-24-24
 7188 C-26 - 24-24-24
 7189 C-26 - 24-24-24
 7190 C-26 - 24-24-24
 7191 C-26 - 24-24-24
 7192 C-26 - 24-24-24
 7193 C-26 - 24-24-24
 7194 C-26 - 24-24-24
 7195 C-26 - 24-24-24
 7196 C-26 - 24-24-24
 7197 C-26 - 24-24-24
 7198 C-26 - 24-24-24
 7199 C-26 - 24-24-24
 7200 C-26 - 24-24-24

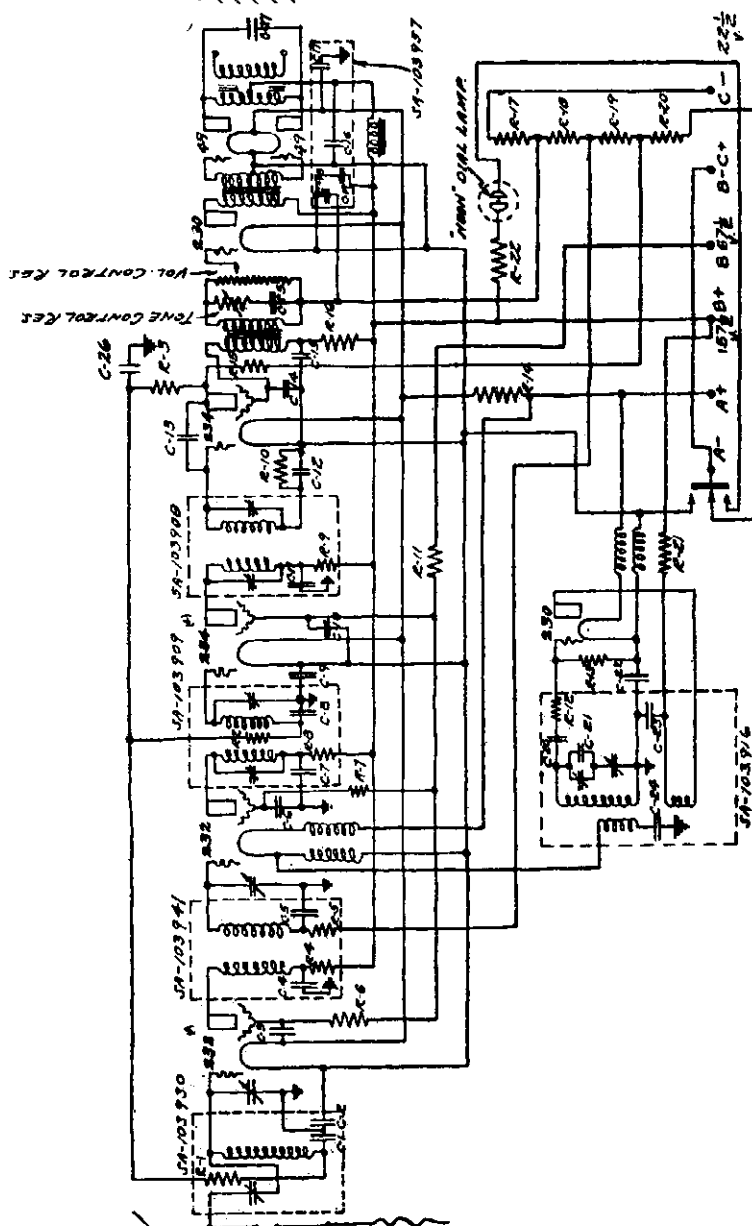

- 1- CHASSIS ASSY - SA-103,990
- 2- CHASSIS ASSY - SA-103,991
- 3- CONDENSER (WAXED) - SA-103,954
- 4- A.F. COIL ASSY - SA-103,957
- 5- A.F. COIL ASSY - SA-103,957
- 6- OSCILLATOR COIL ASSY - SA-103,956
- 7- 100V CYCL LAMP - SA-103,990
- 8- 100V CYCL LAMP - SA-103,990
- 9- INSULATION PLATE ASSY - SA-103,990
- 10- INSULATION PLATE ASSY - SA-103,990

1	SA-103,990	1	SA-103,990
2	SA-103,991	2	SA-103,991
3	SA-103,954	3	SA-103,954
4	SA-103,957	4	SA-103,957
5	SA-103,956	5	SA-103,956
6	SA-103,990	6	SA-103,990
7	SA-103,990	7	SA-103,990
8	SA-103,990	8	SA-103,990
9	SA-103,990	9	SA-103,990
10	SA-103,990	10	SA-103,990
11	SA-103,990	11	SA-103,990
12	SA-103,990	12	SA-103,990
13	SA-103,990	13	SA-103,990
14	SA-103,990	14	SA-103,990
15	SA-103,990	15	SA-103,990
16	SA-103,990	16	SA-103,990
17	SA-103,990	17	SA-103,990
18	SA-103,990	18	SA-103,990
19	SA-103,990	19	SA-103,990
20	SA-103,990	20	SA-103,990
21	SA-103,990	21	SA-103,990
22	SA-103,990	22	SA-103,990

MATERIAL AND SPECIFICATION	LENGTH PER 1000 PCS	WEIGHT PER 1000 PCS	FIRST MADE FOR
WIRING DIAGRAM			
DI-103,982			
SCALE	THE SERVICE STAFF PART TO SERVICE M.		

UNITED AMERICAN BOSCH CORPORATION
 FACTORY: SPRINGFIELD, MASS.

MODEL 312,313
Adjustments

UNITED AMERICAN BOSCH CORP.

TEST OF SENSITIVITY ON MODEL #312

NOTE While making adjustments on chassis make sure that the signal does not overload any of the tubes, otherwise incorrect adjustment will result.

I. F. ADJUSTMENT

- a. Set volume control on max. tone control on treble and ground antenna lead.
- b. Connect the 175 Kc. I.F. signal generator to the grid of the 1st. det.
- c. Align secondary of 3rd I.F. transformer for max. output.
- d. With the lossor on the grid of the 2nd I.F. tube, adjust condenser on primary (front one) of 2nd I.F. coil. (e) Holding the lossor on the plate side of 2nd I.F. coil, adjust the condenser on secondary (rear one) of 2nd I.F. coil.
- f. With the lossor on the grid of the 1st I.F. coil, adjust the condenser on secondary (front one) of 1st I.F. coil. (g) Holding the lossor on the plate side of the 1st I.F. coil, adjust the condenser on secondary (rear one) of 1st. I.F. coil.
- h. Check sensitivity of I.F. Sensitivity limits are 200 mv. on 1st. det. grid. 700 - 312 on 1st I.F. grid. 18,000 on 2nd I.F. grid.

OSCILLATOR ADJUSTMENT

- a. Adjust pointer to mark past 550 Kc. (b) Connect ant. lead of the R.F. signal generator to grid of 1st. det. (c) Set the microvolter dial at 1400 Kc.
- d. Adjust oscillator alignment condenser until max. output is obtained.

NOTE When adjusting the oscillator 2 peaks may be obtained. Set the align. condenser down tight; turn to the right, one peak at (1575 Kc.) will be noted about $\frac{1}{2}$ of a turn out. Set on the (1575 Kc.) peak, otherwise the oscillator will not track in the center of the scale. (e) Connect ant. lead to microvolter. DO NOT TOUCH OSCILLATOR CONDENSER.

- f. Adjust antenna, R.F. and detector alignment condensers for max. output.
- g. Set the signal generator dial to 600 Kc. and pointer of the chassis to 600.
- h. Adjust the condenser on the oscillator coil (on side of chassis) until max. output is obtained and note sensitivity.

NOTE Disregard the pointer reading entirely during this adjustment. This is best obtained by adjusting the trimmer, retune & noting the output, then readjust & retuning until maximum output is obtained.

R. F. ADJUSTMENT

- a. Set the dials at 1400 Kc. and readjust all trimmers peaking oscillator condenser first; note sensitivity at 1400, 1000, 700, 550.
limits are 7 3 3 5.
- b. Check switch, volume control action and tone control. (c) Check power output. Should be 5 volts. (d) Check for hum, note any distortion while making tests.
- e. Check A.V.C. action by tuning meter. Should A.V.C. at 40 mv.
- f. Tap the 2nd. det. tube & check noise. (g) Check relay at 954 Kc. with control at maximum. It should release at 300 mv.

AIR TEST

- a. Connect ant. lead to outdoor ant. (b) Check for tone quality and carrier hum
- c. Check for selectivity & stability. (d) Check vol. control action & switch. (e) Check for power output. Should be ___ volts 10 watts. (f) Check for noise with ant. grounded.

**MODEL 7
Alignment
Voltage
Data**

U. S. RADIO & TELEVISION CORP.

Condenser Alignment

Aligning Intermediate Condensers—First align the screw driver is preferable for this. Adjust the signal generator for a signal of 282 K.C. The location knob should be at the normal position as explained in the section on this control or else it may be turned to the extreme counterclockwise position. One of the best ways of reading the output is by means of a rectifier type meter. This meter, if of low range, is connected across the secondary of the output transformer in series with a large condenser to prevent the flow of D.C. plate current through the meter. In either method of connection, opening the voice coil of the speaker will give a better deflection on the output meter.

Remove the grid cap from the grid connection of the 224 1st detector tube and connect the lead from the signal generator to the grid of the 224 1st detector. The tube shield should be on end of the chassis grounded. One way to make this connection is to bring the antenna lead from the signal generator through the place in the shield through which the grid wire passes. A grid cap on the end of the antenna lead of the signal generator will facilitate making this connection. This lead, of course, should be insulated. Another way of making this connection is to cut a hole of about 1/8" diameter in No. 7 chassis tube shield about 1" in front of the 224 tube. Connect the grid lead can then be passed through this hole to the grid connection of the 224 tube. Connect the ground lead of the signal generator to the ground post of the chassis.

The oscillator coil must be shorted out by grounding the lead from the tap on the secondary. This can be done conveniently by connecting a jumper from ground to the lug on the 3,200 ohm resistor at the end which connects to the oscillator.

The intermediate condenser adjusting screws are reached from the bottom of the chassis. There are two on the porcelain base of the oscillator and one on the porcelain base of the 2nd I.F. transformer assembly, Part No. 3544. The volume control should be at maximum setting. Attenuate the signal from the signal generator until the output is 75 volts or less in order to prevent any action of the A.V.C. Then adjust the three intermediate condenser screws until maximum output is obtained at 75 volts or less. After all three have been adjusted the first time, go over them again and check the setting for maximum output.

Aligning R.F. and Oscillator Condensers—For adjusting the R.F. and oscillator condensers the signal input from the signal generator should be made to the antenna post. Adjust the signal generator for a signal of exactly 1400 K.C. Then turn the tuning condenser rotor until the pointer is at exactly 1400 on the dial scale. Then adjust the three trimmers on the tuning condenser for maximum output adjusting the oscillator trimmer first (trimmer nearest back of chassis). Turn the screws up or down until greatest deflection on output indicating meter is obtained. Keep the output below 75 volts as explained above.

The next step is to adjust the oscillator 600 K.C. trimmer condenser. The adjusting screw for this condenser is reached from the top of the

chassis and is located just in front and to the side of the 1st I.F. and oscillator assembly. Adjust the signal generator for a signal of 600 K.C. and turn the tuning condenser rotor until the output is at maximum. To correctly adjust this oscillator 600 K.C. trimmer it will be necessary to turn the screw to several different positions, using a nonmetallic screw driver preferably. At every position of this adjusting screw turn the tuning condenser rotor until maximum output is obtained. For each position of the adjusting screw there will be a maximum output and the correct position of the adjusting screw is the setting at which the deflection on output indicating meter is the greatest.

Next set the signal generator again for a 1400 K.C. signal and check the adjustment for tuning condenser trimmers at this frequency for maximum output. Then set the signal generator for a signal of 1000 K.C. and turn the tuning condenser rotor until the output indicating meter shows maximum deflection. Then bend the slotted rotor plate sections of the R.F. tuning condenser sections which are last in mesh. In or out until maximum output is obtained. In some instances it may be necessary to bend the oscillator condenser rotor plate sections also in order to get maximum output but this should be done only as the last resort as it tends to throw the dial calibration off. Tune in a signal at 750 K.C. and then at 600 K.C. and follow the same procedure bending the rotor plate sections last in mesh until maximum output is obtained. Do not change the setting of the oscillator 600 K.C. trimmer in any way after it has once been set as indicated above.

NOTE—In the No. 7 Receivers, starting approximately with Serial No. 1074064 the oscillator 600 K.C. trimmer is replaced by a condenser of fixed value and a different dial chart is used. The procedure for aligning the R.F. and oscillator condensers of these receivers is as follows:

Loosen the drive plate set screws and turn the tuning condenser rotor counterclockwise as far as it will go so that the rotor is completely in mesh. Turn the drive plate until the lowest frequency mark is directly under the dial pointer. Then lightly tighten one set screw.


Set the signal generator for a signal of 1400 K.C. and turn the drive plate until the 1400 K.C. mark is under the pointer. Adjust the three trimmer condensers at this frequency until maximum output is obtained, adjusting the oscillator trimmer first (trimmer nearest back of chassis).

Set the signal generator for a signal of 600 K.C. and tune the receiver exactly to this signal. Loosen the drive plate set screw and adjust dial drive scale. Then tighten the drive plate set screw lightly.

Set the signal generator again for a signal of 1400 K.C. and tune the receiver to this frequency. Readjust the trimmer condensers if necessary until the signal is received with maximum volume when the pointer is at 1400 on the dial chart.

Recheck the calibration at 600 K.C. for maximum output and if it is correct tighten both drive plate set screws firmly, care being taken that the rotor shaft does not slip.

Then set the signal generator for signals of 1000, 750 and 600 K.C. and check the two R.F. condenser for resonance. Bend the slotted rotor plate sections last in mesh of these two banks until maximum output is obtained.

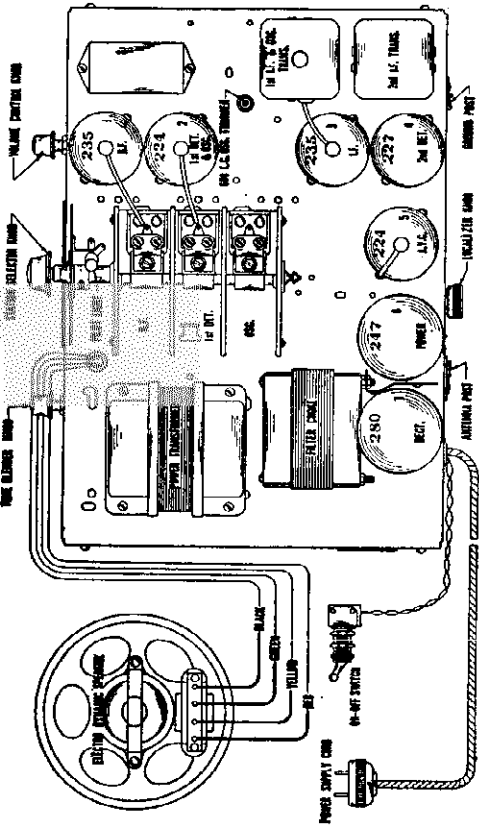

—Top View of No. 7 Chassis showing Tube Sockets and Speaker Connections
No. 7 CHASSIS—VOLTAGES AT SOCKETS—LINE VOLTAGE 115
VOLUME CONTROL AT MAXIMUM—LOCALIZER AT NORMAL SETTING

Type of Tube	Position of Tube	Function	Across Filament or Heater	Plate to Cathode	Grid to Cathode	Screen to Cathode	Screen to Heater	Cathode to Heater	Plate to MA	Grid Test MA
235	1	R.F.	2.35	150	4.5 (1)	70 (2)	9	4.5	2.7	4.2
224	2	1st Det. & Osc.	2.35	240	6.4	93	3	6.4	1.8	2.6
235	3	I.F.	2.35	150	4.5 (1)	70 (2)	9	4.5	2.7	4.2
227	4	2nd Det.	2.35	150	12-24 (3)	0-10 (4)	0 (4)	12	2-5 (3)	21-51 (3)
224	5	A.V.C.	2.35	60	0-15 (3)	9	0 (4)	12	0 (4)	0 (4)
247	6	Power	2.35	220	16 (5)	240	6.4	34	34	40
280	7	Rect.	4.9					39	Per Plate	

(1) This voltage read across 800 ohm resistor.

(2) Voltage as read with 600,000 ohm meter.

(3) Varies with setting of localizer. Voltages read with high resistance meter.

(4) Current zero with no signal and localizer at normal position.


(5) The voltage read across 200 ohm section of voltage divider.

SETTING THE LOCALIZER.


Turn the localizer knob counterclockwise as far as it will go. Then turn the knob one quarter turn clockwise. Next tune in a fairly strong signal and reduce the volume by means of the volume control knob on the front panel. Then turn the localizer knob to the extreme clockwise position. This will cause plate current cutoff in the RF and IF tubes. Then turn the knob slowly in a counterclockwise direction until the signal is again heard. With a slight additional turn in the same direction the signal builds up sharply to full strength and this is the correct position of the localizer setting. This adjustment should not be changed unless the set is reinstated or the tubes are changed. Incorrect adjustment of this knob will control the action of the AVC tube in such fashion that the automatic action will commence too soon or too late.

U. S. RADIO & TELEVISION CORP.


MODEL 7
Transformer
Data 25 cycle.

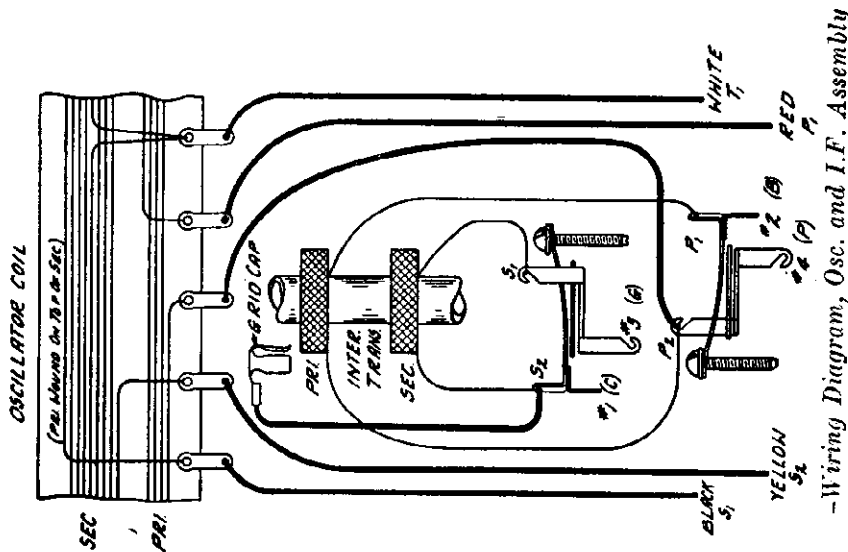


-Wiring Diagram, Osc. and I.F. Assembly

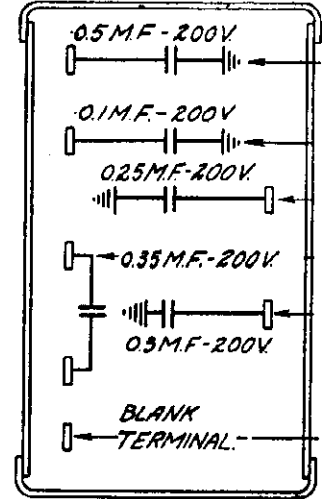

5 Section Condenser Internal Wiring

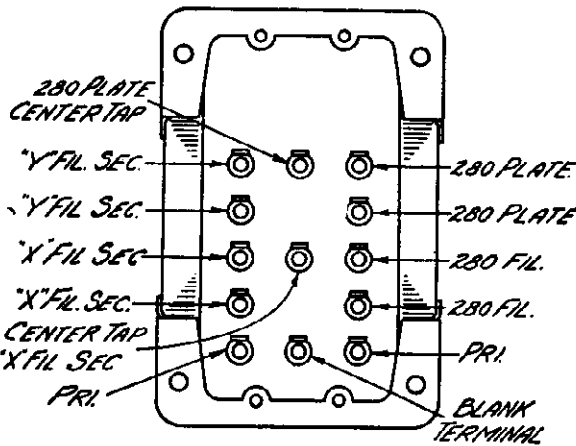

-Power Transformer Terminals

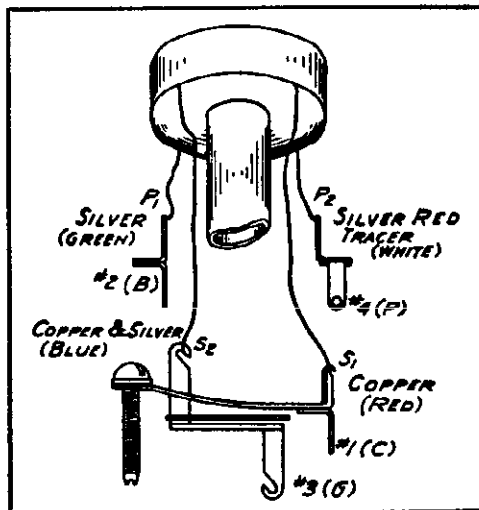

-Wiring Diagram, 2nd I.F. Assembly

No. 7X Chassis—25 Cycle, 115 Volt

Chassis No. 7X is almost identical in construction with chassis No. 7, except that it is designed for 25 cycle, 115 volt operation. All parts as used in the No. 7 chassis are used in the No. 7X chassis with the exception of the power transformer, .1 Mfd. choke tuning condenser and 2 Mfd. electrolytic filter condenser. These items are replaced by a 25 cycle power transformer, .35 Mfd. choke tuning condenser and a 4 Mfd. electrolytic filter condenser. All of these items for the 25 cycle receiver are shown in the parts list.


The description and testing as covered in the No. 7 Service Notes also applies to the No. 7X.

Referring to Fig. 1 it will be noted that in the 60 cycle, No. 7 chassis the filter choke is tuned with a .1 Mfd. condenser. The purpose of this condenser is to tune the choke so as to offer maximum opposition to the 120 cycle ripple component. In the No. 7X chassis a .35 Mfd. condenser is used to tune the choke so as to offer maximum opposition to the 50 cycle ripple component which is present when 25 cycle power is used. Also in the No. 7X chassis there are three 4 Mfd. filter condensers used, while the No. 7, 60 cycle chassis uses two 4 Mfd. units and one 2 Mfd. unit.

The No. 7X, 25 cycle chassis can be operated satisfactorily from a 60 cycle power supply. If there is excessive hum it will be necessary to remove the .35 choke condenser and replace it with a .1 Mfd. choke condenser, Part No. 2927. The reverse is not true, that is, the No. 7, 60 cycle receiver cannot be operated satisfactorily from a 25 cycle power supply.

MODEL 7
Chassis View
Parts List

U. S. RADIO & TELEVISION CORP.

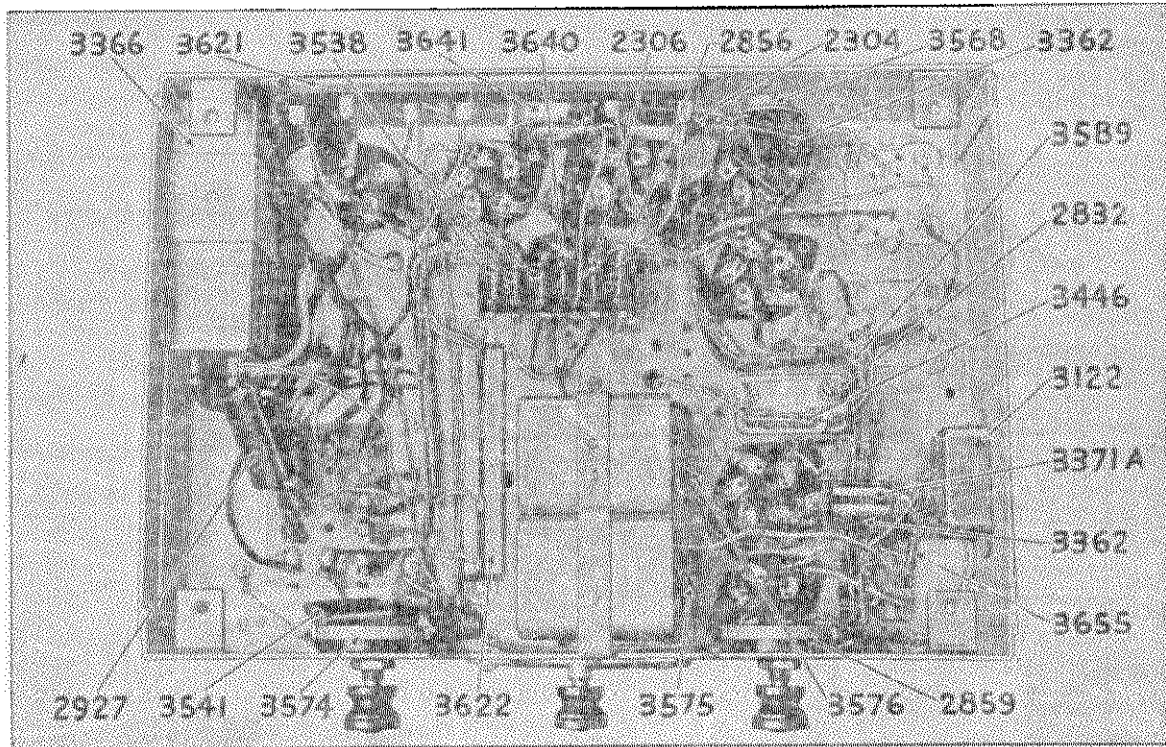

-No. 7 Chassis, Bottom View


No. 7 CHASSIS REPLACEMENT PARTS

Parts orders must be accompanied by serial number and model number of chassis. Order through your distributor.

Part No.	Description	No. Used in Set	List Price Each
2304	.0005 Mfd. By-pass Condensers.....	2	\$.40
2832	Oscillator 600 K.C. Trimmer Condenser.....	1	.40
2927	.1 Mfd. Choke Condenser for 60 Cycle.....	1	.40
3683	.35 Mfd. Choke Condenser for 25 Cycle.....	1	.55
3122	.5 Mfd. By-pass Condenser.....	1	.70
3362	.01 Mfd. Coupling and By-pass Condensers.....	2	.30
3366	4 Mfd. Electrolytic Condenser Unit, 450 Volt.....	2	1.40
3529	2 Mfd. Electrolytic Condenser Unit, 450 Volt.....	1	1.10
3559	Clamp for Electrolytic Condenser Unit.....	1	.10
3446	775 Mmf. Oscillator Condenser.....	1	.45
3541	.04 Mfd. Tone Blender Condenser.....	1	.30
2306	60,000 Ohm Series Resistor, Carbon.....	1	.45
2856	25,000 Ohm Series Resistor, Carbon.....	1	.45
2859	Volume Control 0—500,000 Ohm.....	1	1.40
3574	Tone Blender 0—150,000 Ohm.....	1	1.40
2641	Localizer Resistor 0—200,000 Ohm.....	1	1.20
3371A	3,200 Ohm Biasing Resistor, Wire Wound.....	1	.40
3537	300,000 Ohm Plate Resistor, Carbon.....	1	.40
3538	200,000 Ohm Plate and Series Resistors, Carbon.....	3	.40
3621	3315 Ohm Voltage Divider Resistor, Wire Wound.....	1	1.10
3622	4300 Ohm Voltage Divider Resistor, Wire Wound.....	1	.70
3640	120,000 Ohm Bias Resistor, Carbon.....	1	.40
3655	3,000 Ohm R.F. Resistor, Carbon.....	1	.40
3575	Antenna Transformer..... (Sold in matched)	1	1.00
3576	1st Detector Transformer..... sets of two	1	.60
3562	Can for Antenna and 1st Detector Transformer.....	1	.65
E.P.	Esoutechon Plate (Specify Model No. of Receiver).....	1	.75
3568	Detector Plate Choke Assembly complete.....	1	.60
3680	R.F. Choke Coil, 5 uh.....	1	.10
3589	Harness Cable.....	1	1.00

MODEL 8 Series
 Socket - Voltage
 Condenser Data


U. S. RADIO & TELEVISION CORP.

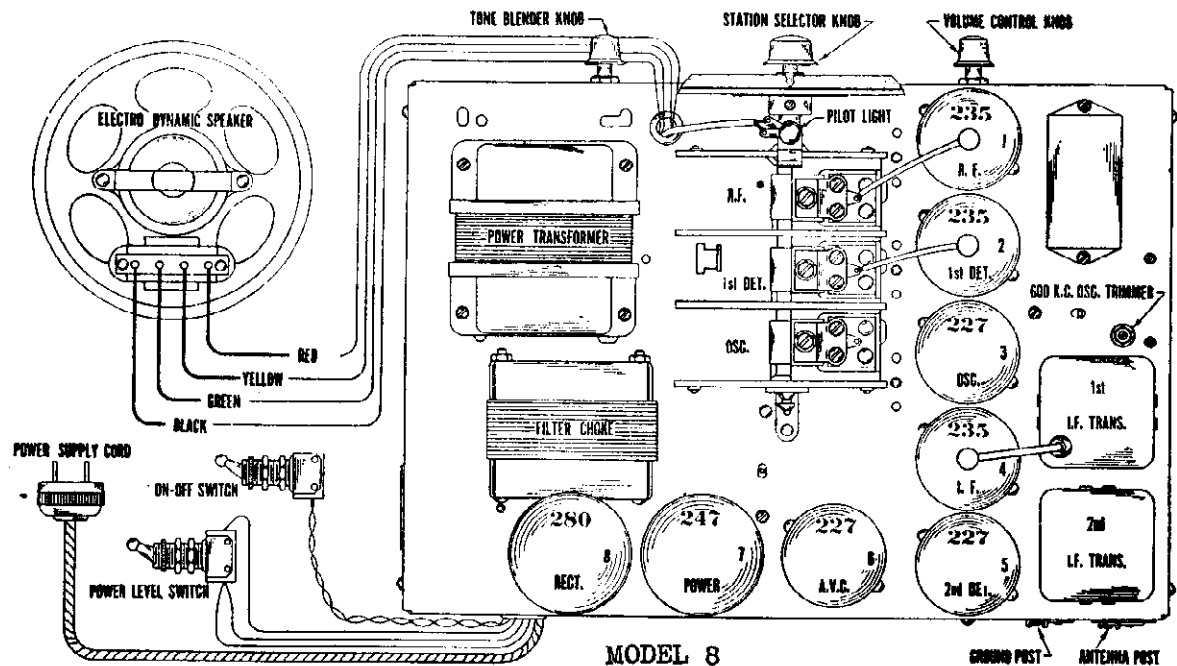

Top View of Chassis Showing Tube Location and Speaker Connections

MODEL 8					
Tube	A	B	V	Ser.	Plt.
	Volts	Volts	Volts	Volts	Crnt.
RF	2.3	190	2.3 ¹	68.	3.8
1st Det	2.3	190	6.5	70.	2.0
Osc.	2.3	80	15-50 ²		4.7
IF	2.3	190	2.3 ¹	68.	3.6
2nd Det	2.3	150	20.		.4
AVC	2.3	65 ³	40. ¹		0.
Power	2.35	260	20 ⁵	280.	32.
Rect.	5.				41. ⁶

- ¹ Across 250 ohm series resistor
- ² Governed by setting of tuning condenser
- ³ Across 1000 and 1200 ohm sections of shunt resist
- ⁴ Across two 600 ohm sections of shunt resistor
- ⁵ Across 550 ohm series resistor
- ⁶ Per Anode.

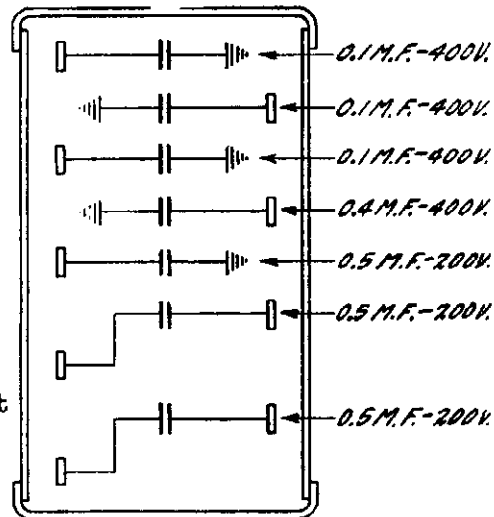

The No. 8X chassis is the same as the No. 8 except that it is intended for use on 25 cycle lines. The major difference is found in the power transformer and in the use of an untuned filter system. The .06 mfd condenser shown in the model 8 schematic connected across the filter choke is not employed in 8X. The 8X chassis may be used on a 60 cycle line. If the hum is bad, add the .06 mfd condenser.


For special service data see Heterodyne and Motorboating notes and RF, Oscillator and IF trimmer condenser data

U. S. RADIO & TELEVISION CORP.

MODEL 8 Series
Chassis View
Parts List

NO. 8 CHASSIS. REPLACEMENT PARTS

Part No.	Description
929	50,000 Ohm Bias and Series Resistors, Carbon.
1348	100,000 Ohm Bias and Series Resistors, Carbon.
1751	200,000 Ohm Series Resistor, Carbon.
1754	250 Ohm Bias Resistor, Wire Wound.
2811	4450 Ohm Voltage Divider Resistor.
2856	25,000 Ohm Series Resistor, Carbon.
2857	10,000 Ohm Series Resistor, Carbon.
2858	1 Megohm Grid Resistor, Carbon.
2861	Tone Blender 0-150,000 Ohm.
2862	Volume Control 0-1 Megohm.
3087	3,000 Ohm Bias Resistor, Wire Wound.
2304	.0005 Mfd. Coupling and By-Pass Condensers.
2716	.01 Mfd. Oscillator Condenser.
2803	8 Mfd. Electrolytic Condenser Unit, 450 Volts.
2810	Clamp for 2803 Electrolytic Condenser Units.
2852	8 Mfd. Electrolytic Condenser Unit, 150 Volts.
2849	Clamp for 2852 Electrolytic Condenser Unit.
2808	7-Section Condenser Block.
2832	Oscillator 600 K.C. Trimmer Condenser.
2851	.04 Mfd. Coupling and By-pass Condensers.
2853	550 Mfd. Oscillator Condenser.
2854	.06 Mfd. Choke and By-Pass Condensers.
2823	3-Gang Variable Condenser Assembly Complete Less Drive
2927	1 Mfd. By-pass Condensers.
115	Pilot Light Lamp, 2.5 Volts.
2946	Pilot Light Bracket with Leads.
861	Attachment Cord and Plug.
678	Ground Binding Post.
2333	Antenna Binding Post Assembly.
701	Tube Socket-280.
703	Tube Socket-227.
2757	Tube Socket-247.
2805	Tube Socket-235.
1312	Terminal Insulator.
1436	On-Off Escutcheon Plate.
2848	Power Level Escutcheon Plate.
2881	Escutcheon Plate.
2813	Antenna Transformer.
2814	1st Detector Transformer.
2815	Oscillator Transformer.
2809	R.F. Transformer Shield Can.
2824	Tube Shield.
2879	Tube Shield Wing Nuts.
2783	Power Transformer, 60 Cycle, 115 Volt.
3084	Power Transformer, 25 Cycle, 115 Volt.
2830	1st Intermediate Assembly Complete with Can.
2831	2nd Intermediate Assembly Complete with Can.
2842	Adjusting Screw for Intermediate Condenser.
2850	Special Hex Nut for Intermediate Condenser.
2392	On-Off Switch and Leads.
2936	Power Level Switch and Leads.
2883	Drive Assembly Complete with Dial Chart.
2903	Dial Chart Assembly.
2895	Pointer Tension Spring for Drive.
2847	Chassis End Plates.

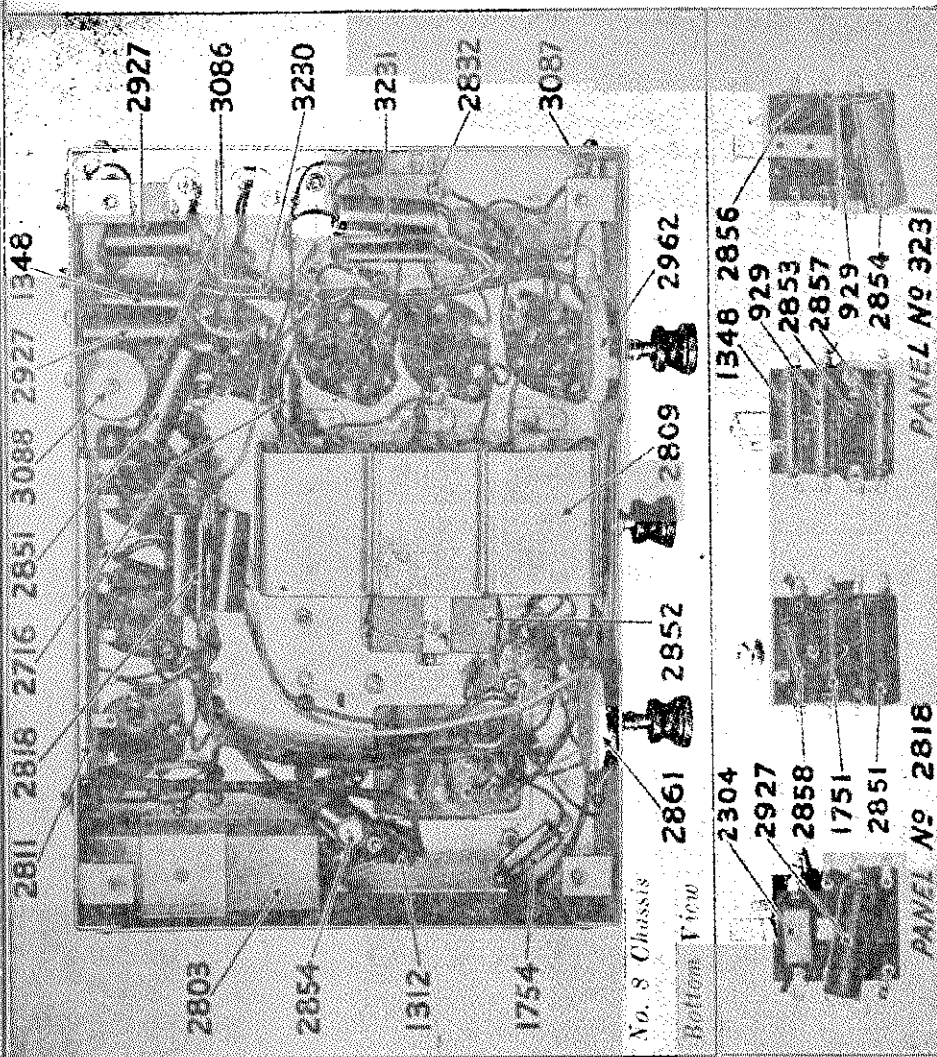


Part No.	Description
2932	Filter Choke Assembly.
2818	Resistor and Condenser Panel Assembly Complete.
3231	Resistor and Condenser Panel Assembly Complete.
3086	2nd Detector Panel Assembly Complete with Socket.
1766	Detector Plate Choke Coil.
3088	Shield Can for Detector Plate Choke Coil.
2801	8" D.C. Electrodynamic Speaker for No. 8 Chassis.
3294	Field Coil for Speaker.
3298	Transformer for Speaker.
3299	Terminal Strip for Speaker.
3295	Terminal Strip Cover for Speaker.
3296	Head Assembly Complete including Cone, Housing, Voice Coil, Spider and Pot Magnet Front Piece for Speaker.
3297	Pot Magnet Back Piece for Speaker.

-Resistor and Condenser Panels No. 8 Chassis

MODEL 10
Schematic

U. S. RADIO & TELEVISION CORP.

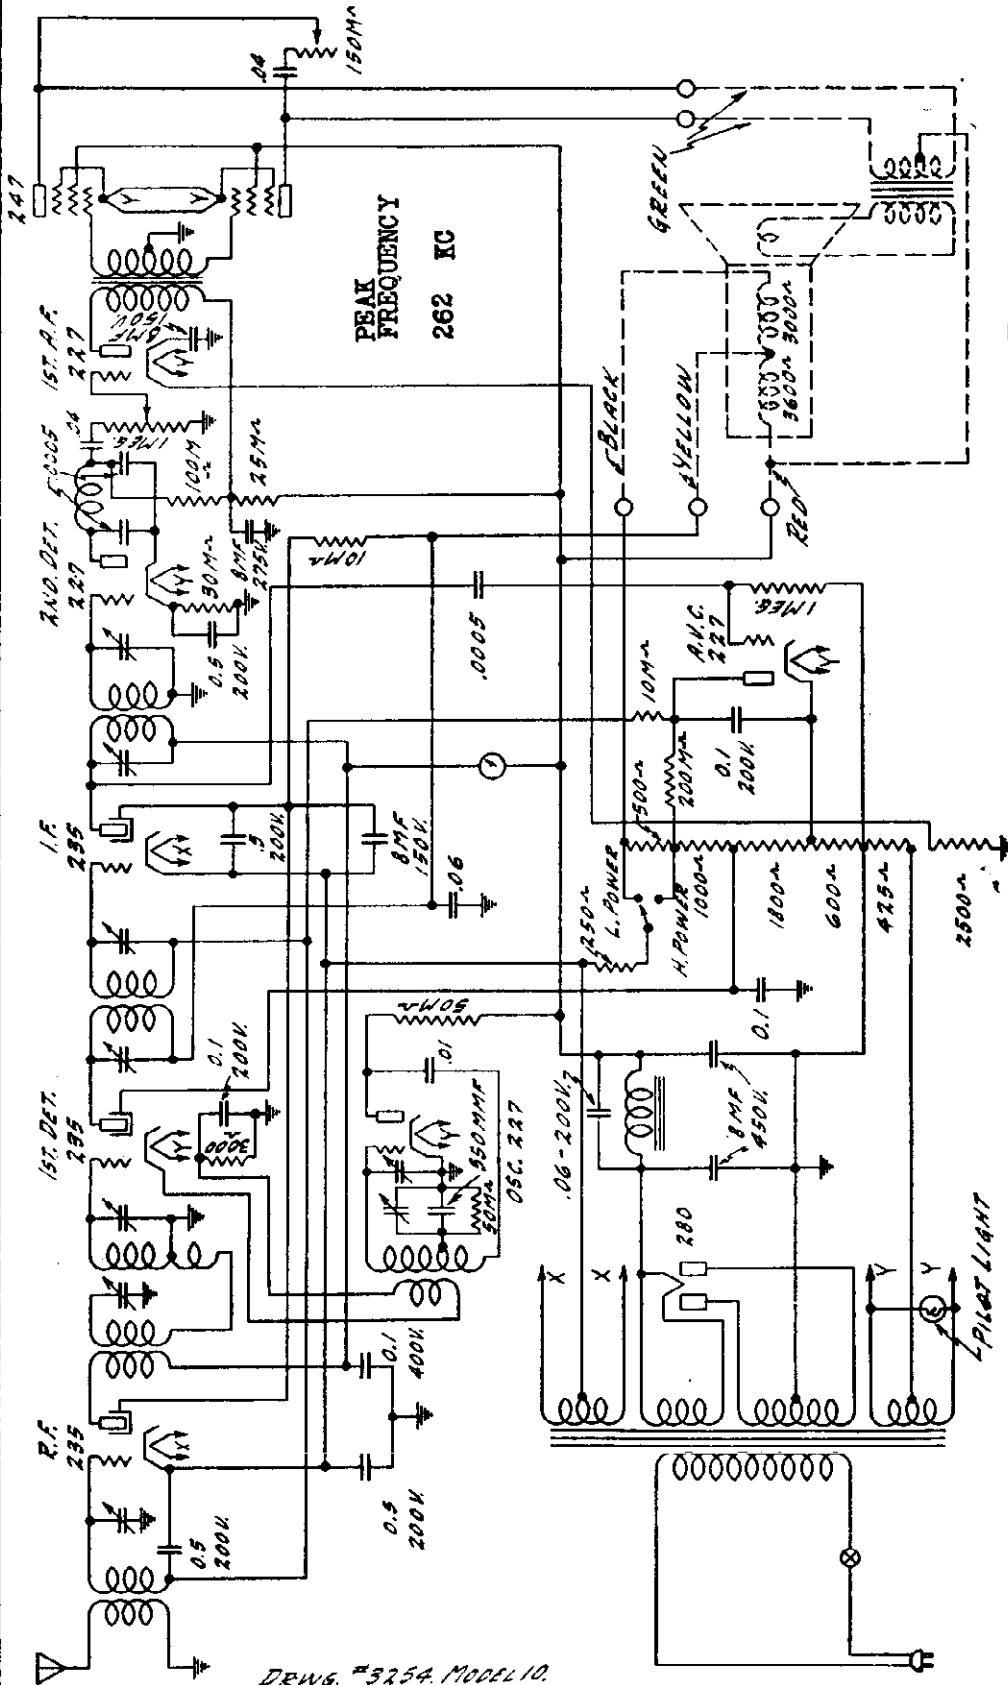

DRWG. #3254. MODEL 10.

DOTTED LINES SHOWN ARE IN SPEAKER

No. 10 Series Super-Heterodyne


The No. 10X, 25 cycle chassis can be operated satisfactorily from a 60 cycle power supply. If there is excessive hum it will be necessary to secure a .06 Mfd. condenser, Part No. 2854, and connect it in the circuit across the filter choke. The reverse is not true, that is, the No. 10, 60 cycle receiver cannot be operated satisfactorily from a 25 cycle power supply.

Chassis No. 10X is almost identical in construction with chassis No. 10, except that it is designed for 25 cycle, 115 volt operation. All parts as used in the No. 10 chassis are used in the No. 10X with the exception of the power transformer and .06 Mfd. choke tuning condenser. The correct power transformer for the No. 10X chassis is shown in the parts price list.

MODEL 10
Chassis View
Parts List.

U. S. RADIO & TELEVISION CORP.

NO. 10 CHASSIS

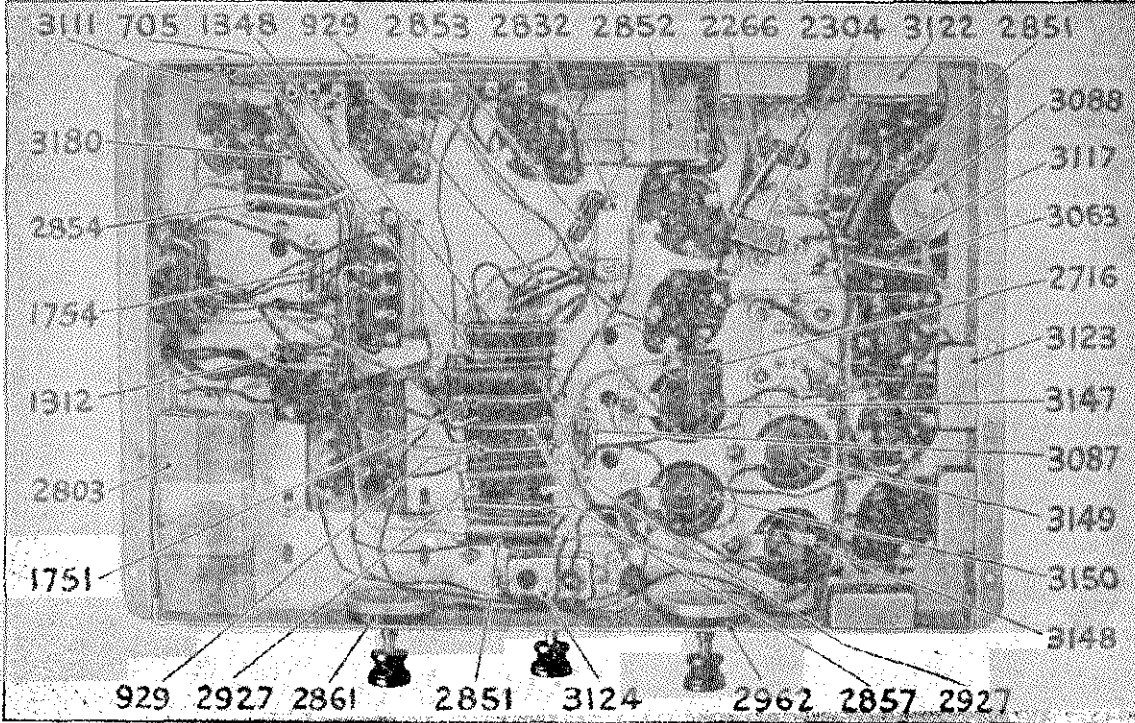

Bottom View No. 10 Chassis

No. 10 Chassis

Part No. Description

705	25,000 Ohm Series Resistor, Carbon.....
929	50,000 Ohm Bias and Series Resistors, Carbon.....
1348	100,000 Ohm Series Resistor, Carbon.....
1751	200,000 Ohm Series Resistor, Carbon.....
1754	250 Ohm Bias Resistor, Wire Wound.....
2266	1 Megohm Resistor.....
2857	10,000 Ohm Series Resistor, Carbon.....
2861	Tone Blender 0—150,000 Ohm.....
2962	Volume Control 0—1 Megohm.....
3065	10,000 Ohm Bias Resistor, Carbon.....
3087	2,000 Ohm Bias Resistor, Wire Wound.....
3111	6225 Ohm Voltage Divider Resistor.....
2304	.0005 Mfd. Coupling and By-Pass Condensers.....
2716	.01 Mfd. Oscillator Condenser.....
2719	8 Mfd. Electrolytic Condenser Unit, 275 Volt.....
2803	8 Mfd. Electrolytic Condenser Unit, 450 Volt.....
3112	Clamp for 2803 Electrolytic Condenser Units.....
2852	8 Mfd. Electrolytic Condenser Unit, 150 Volt.....
3118	Clamp for 2852 Electrolytic Condenser Unit.....
3130	Auxiliary Bracket for 2852 Electrolytic Condenser Unit.....
2832	Oscillator 600 K.C. Trimmer Condenser.....
2851	.04 Mfd. Coupling and Filter Condensers.....
2853	550 Mmfd. Oscillator Condenser.....
2854	.06 Mfd. Choke Condenser.....
2927	1 Mfd. By-Pass Condensers, 200 Volts.....
3122	.5 Mfd. By-Pass Condensers, 200 Volts.....
3123	Dual 1.—.05 Mfd. Condenser, 200 Volt.....
3124	1 Mfd. By-Pass Condenser, 400 Volt.....
3174	Resistor and Condenser Panel Assembly, Complete.....
1766	Detector Plate Choke Coil.....
3088	Shield Can for Detector Plate Choke Coil.....
3117	2nd Detector Panel Assembly, Complete with Socket.....
678	Ground Binding Post.....
2333	Antenna Binding Post Assembly.....
1812	Terminal Insulators.....
3148	Antenna Transformer.....
3150	R.F. Transformer.....
3149	1st Detector Transformer.....
3147	Oscillator Transformer.....
3180	Chassis Harness.....
701	Tube Socket—280.....
703	Tube Socket—227.....
2757	Tube Socket—247.....
2805	Tube Socket—235.....
861	Attachment Cord and Plug.....
2946	On-Off Escutcheon Plate.....
2882	Power Level Escutcheon Plate.....
2876	Escutcheon Plate.....
2882	Walnut Knob.....
2882	On-Off Switch and Leads.....
2936	Power Level Switch and Leads.....
3175	4-Gang Variable Condenser Assembly Complete less Drive and Meter.....
3121	Variable Condenser Shield.....
2883	Drive Assembly Complete with Dial Chart.....
2902	Dial Chart Assembly.....
2885	Pointer Tension Spring for Drive.....
2911	Tuning Meter.....
3081	Bracket for Tuning Meter.....
3181	Grid Cap Assembly.....
2830	1st Intermediate Assembly Complete with Can.....
2831	2nd Intermediate Assembly Complete with Can.....
2842	Adjusting Screw for Intermediate Condensers.....
2850	Special Hex Nuts for Intermediate Condensers.....
2912	Power Transformer, 60 Cycles, 115 Volt.....
3169	Power Transformer, 25 Cycles, 115 Volt.....
2932	Filter Choke Assembly.....
3100	Audio Transformer.....

Sold in
Matched
Sets of
Four

MODEL 10-C

Chassis 1000,1001

U. S. RADIO & TELEVISION CORP.

Voltage

Notes

SPEAKERS

The output of the receiver is fed into the primary of the transformer for the speakers. In the chassis No. 1001 matched speakers are used. Both are D.C. baffle mounting electrodynamic speakers—one having a cone diameter of 10 inches and the other an 8 inch cone.

The fields of both speakers are energized by the power system and are a part of the total resistance shunted across the power system from which the required voltages are obtained. The 5000 ohm field coil is a component part of the 10 inch speaker—Part No. 3846—as is the output transformer. The 5000 ohm field coil is above ground potential whereas the 2000 ohm field coil is below ground potential, as can be seen by referring to Fig. 1. The ground potential side of each field coil winding is grounded to the speaker frame. The voice coil of each speaker is connected in parallel across the secondary winding of the output transformer.

CAUTION—Do not use any other type of speakers with the No. 1001 chassis than the two supplied with it. It can readily be appreciated from the above that the speakers are especially designed for this chassis.

An open or shorted voice coil in either of the speakers will cause poor audio quality. Check voice coil tips (blue and white) at speaker terminal strip for good electrical contact. A shorted 2000 ohm speaker coil will cause distortion as will also an open 5000 ohm speaker coil, and in both cases, the needle of the tuning meter will swing to the extreme left.

The polarity of the leads connecting the voice coils of the two speakers in parallel should be checked. If the blue and white wires making these connections are reversed, distortion and motorboating will result, because one cone is moving out while the other is moving in, and vice versa.

ual. If one of the pilot light terminals is grounded, the second audio bias will be shorted out and there will be distortion present.

If the 2000 ohm field coil of the No. 3847 electrodynamic speaker is open lack of volume will be experienced and will be evidenced by the needle of the visual tuning meter, swinging almost to the extreme right. The same will be true if the 5000 ohm field of the No. 3846 electrodynamic speaker is open. However, in this case the needle of the tuning meter will swing to the extreme left. The yellow wire connecting the speakers to the chassis ground should be checked for good electrical connection. If this lead is making poor contact loss of volume will result. The tuning meter will register approximately a 50% reduction in swing at no signal.

MICROPHONIC HOWL

The No. 1001 Chassis is mounted in the console cabinet on sponge rubber washers to prevent any microphonic action that might otherwise arise due to vibrations set-up between the speaker and tube elements.

At the time of installation of the receiver the two bolts, one at the center of the flange at each end of the chassis should be removed. These bolts are used to securely anchor the chassis to the cabinet shelf and are intended only for shipping purposes. If they are not removed vibrations of the speaker will be transmitted to the tube elements and a microphonic howl may result.

This howl may also manifest itself when the chassis and speaker are being tested on a service bench thus making it very difficult to service the unit. The chassis or speaker should be cushioned as a preventive.

No. 1001 CHASSIS—VOLTAGES AT SOCKETS—LINE VOLTAGE 115 VOLUME CONTROL AT MAXIMUM										
Type of Tube	Position of Tube	Function	"A" Volts	"B" Volts	Control "C" Volts	Screen Volts	Screen Current MA	Cathode Volts	Plate MA	Grid Test MA
235	1	R.F.	2.2	160	2.8 (1)	60	.4	0.	2.7	6.1
235	2	1st Det.	2.25	160	6.5 (1)	55	.3	7.	1.8	2.4
235	3	I.F.	2.2	160	2.8 (1)	60	.4	0.	2.7	6.1
227	4	2nd Det.	2.3	105	6.			5.5	.2	.3
235	5	1st Audio	2.3	125	13. (2)			7.	2.8	3.0
227	6	Osc.	2.35	110	11-28 (3)			21.	3.4	3.5
227	7	A.V.C.	2.3	55 (4)	21. (5)	258	4.6	1.5	0.	0.
247	8	Power	2.3	250	20. (6)	258	4.6		20.	26.
247	9	Power	2.35	250	20. (6)	258	4.6		20.	26.
280	10	Rect.	5.0						50	
									Per. Plate	

(1) Measured across 350 ohm bias resistor.
 (2) Measured across 3000 ohm bias resistor. B. to Cathode.
 (3) Measured across 500 M ohm osc. bias resistor. Bias voltage varies from 11 to 28 between 1500 and 550 K.C. settings of tuning condenser.
 (4) Measured from B. to A.V.C. plate.
 (5) Measured from B. to A.V.C. Cathode.
 (6) Measured across 425 ohm bias resistor. B. to "Y" filament.

U. S. RADIO & TELEVISION CORP.

No. 1000X AND No. 1001X CHASSIS

Chassis No. 1000X and No. 1001X are almost identical in construction with chassis No. 1000 and No. 1001 except that they are designed for 25 cycle, 115 volt A.C. operation. The parts used in the 60 cycle chassis are also used in those chassis designed for 25 cycle operation with the exception of the power transformer and .06 Mfd. filter choke tuning condenser. The correct power transformer for the 25 cycle chassis as well as the correct filter choke tuning condenser are shown in the Parts Price List.

SUPPLEMENTARY NOTES FOR No. 1000 CHASSIS

The No. 1000 and No. 1001 Chassis are identically alike as regards the schematic circuit and the electrical constants. Referring to the schematic wiring diagram it will be noted the visual tuning meter is not drawn in solid lines but instead dotted lines are used. The significance of the dotted lines is to illustrate that the tuning meter is a component part of chassis No. 1001 whereas in chassis No. 1000 the meter is omitted the electrical circuit being completed by the joining of the two leads ordinarily connected to the meter leads on the 1001 chassis.



The electrical constants of the dual speakers used with each chassis are alike, however, the 1001 chassis has one 8 inch and one 10 inch

The description and testing as covered in the service notes for the 60 cycle chassis also applies to the 25 cycle chassis.

The 25 cycle chassis can be operated satisfactorily from a 60 cycle power supply. However, there may be excessive hum in which case it will be necessary to change the No. 1375 .45 Mfd. choke condenser to a No. 2854 .06 Mfd. condenser. The reverse is not true, that is, the 60 cycle chassis cannot be operated satisfactorily from a 25 cycle power supply.

electrodynamic speaker whereas the No. 1000 chassis utilizes two 8 inch speakers. The speakers for their respective chassis carry entirely different part numbers and these dissimilarities including other changes in a few of the parts for each chassis are enumerated in the parts list to follow.

It will be noted a number of the speaker parts for the No. 1001 chassis are interchangeable with the component parts of the speakers for the No. 1000 chassis and therefore it has not been thought necessary to make a repetition of these parts numbers in the accompanying list of the changes in parts for the No. 1000 chassis.

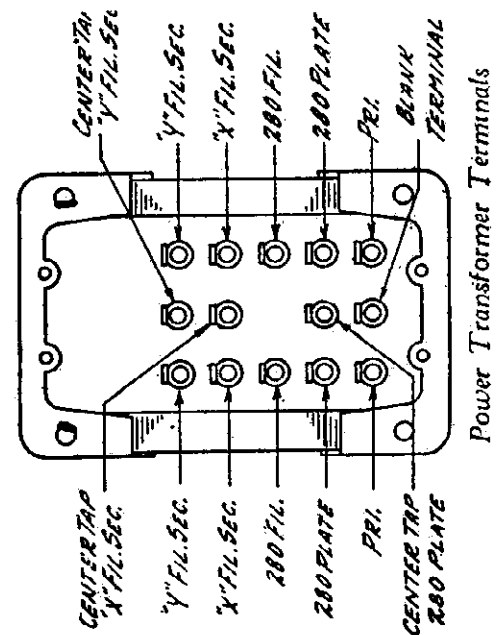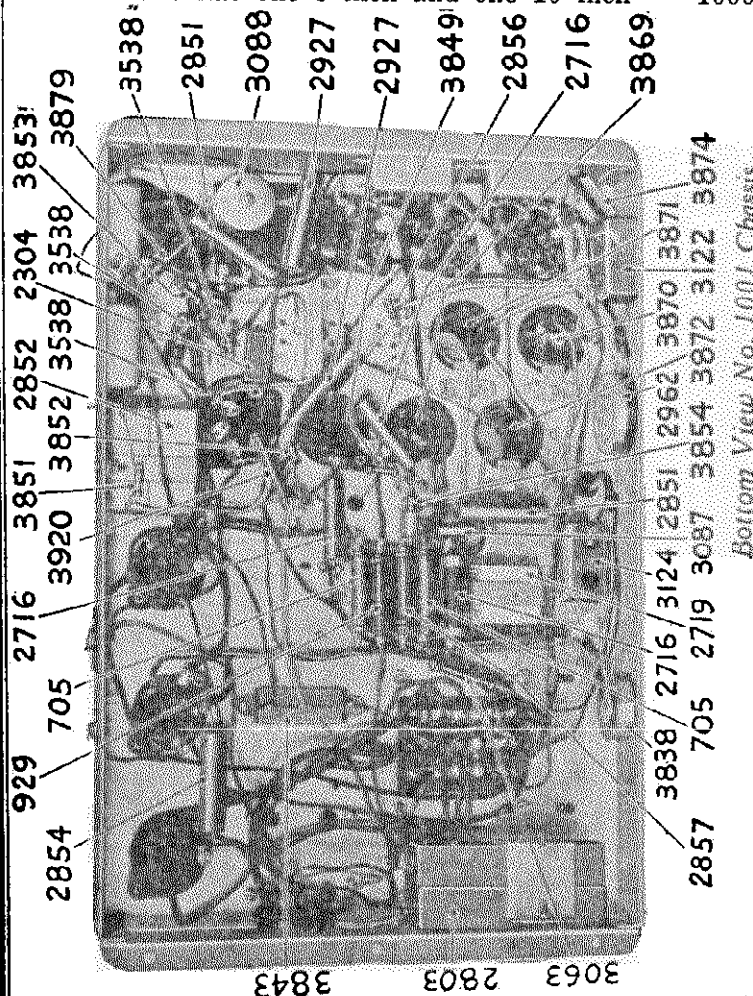

MODEL 10-C
Chassis 1000,1001
Bottom View
Notes

MODEL 10-C
Chassis 1000, 1001
Parts List

U. S. RADIO & TELEVISION CORP.

Part No.	Description	No. Used in Set	Price Each
3151	Pilot Light Bracket with Leads	1	.30
3178	Shield Can for R.F. and 1st Detector Transformer	1	.75
3179	Shield Can for Oscillator and R.F. Transformer	1	.75
3181	Grid Cap with Lead	1	.05
3924	Power Transformer, 60 Cycle, 115 Volt	1	9.00
3847	10 inch D.C. Electrodynamic Speaker with Input Transformer	1	10.00
3846	8 inch D.C. Electrodynamic Speaker less Input Transformer	1	6.00
3860	Tuning Meter	1	3.50
3862	Speaker Cable	1	.65
3873	Grid Cap with Lead for 1st Audio 285	1	.05
3881	Power Transformer, 25 Cycle, 115 Volt	1	11.00
3884	4 Gang Variable Condenser Complete less Drive and Meter	1	10.00
4010	Transformer for 3846 and 3844 Speakers	1	3.00
4011	Field Coil for 3846 and 3844 Speakers—5000 Ohm	1	1.50
4012	Terminal Strip for 3846 and 3844 Speakers	1	.50
4013	Head Assembly for 3847, 3844 and 3845 Speakers	1	3.50
4015	Terminal Strip for 3847 and 3845 Speakers	1	.50
4016	Terminal Strip Cover for 3847 Speaker	1	.50
4017	Terminal Strip Cover for 3847, 3844 and 3845 Speakers	1	.50
4020	Head Assembly for 3845 Speaker	1	3.75
4021	Field Coil for 3847 Speaker, 2000 Ohm	1	2.75

No. 1000 CHASSIS REPLACEMENT PARTS
(SUPPLEMENTING No. 1001 PARTS LIST)

The following parts are used in addition to the parts listed for the No. 1001 Chassis:

Part No.	Description	No. Used in Set	Price Each
3408	Escutcheon Plate, U. S. APEX	1	.75
3789	Volume Control, 0—1 Megohm	1	1.40
3837	Tone Blender Rheostat, 0—200,000 Ohm	1	1.40
3844	8" D.C. Electrodynamic Speaker with Input Transformer	1	8.50
3845	8" D.C. Electrodynamic Speaker less Input Transformer	1	6.00
3867	Drive Assembly Complete with Dial Chart less Pilot Light	1	1.20
3873	4 Gang Variable Condenser Assembly	1	10.00
4014	Field Coil for 3845 Speaker—2,000 Ohm	1	3.00

The following parts listed for the No. 1001 Chassis

are not used in the No. 1000 Chassis:

2882	Escutcheon Plate, U. S. APEX	1	.75
2883	Drive Assembly Complete with Dial Chart	1	1.20
2895	Pointer Tension Spring for Drive	1	.15
2902	Dial Chart Assembly	1	.20
2962	Volume Control, 0—1 Megohm	1	1.40
3081	Bracket for Tuning Meter	1	.10
3151	Pilot Light Bracket with Leads	1	.30
3838	Tone Blender Rheostat, 0—200,000 Ohm	1	1.40
3846	10" D.C. Electrodynamic Speaker with Input Transformer	1	10.00
3847	8" D.C. Electrodynamic Speaker less Input Transformer	1	6.00
3860	Tuning Meter	1	3.50
3884	4 Gang Variable Condenser Assembly Complete less Drive and Meter	1	10.00
4016	Terminal Strip Cover for 3846 Speaker	1	.50
4020	Head Assembly Complete for 3846 Speaker	1	3.75
4021	Field Coil for 3847 Speaker—2,000 Ohm	1	2.75

No. 1001 CHASSIS REPLACEMENT PARTS



Part No.	Description	No. Used in Set	Price Each
678	Ground Binding Post	1	.15
705	Resistor, 25,000 Ohm, Carbon, 1 Watt	2	.50
929	Resistor, 50,000 Ohm, Carbon, 1 Watt	1	.45
1375	Choke Condenser, 45 Mfd, for 25 Cycle	1	1.00
1766	Detector Plate Choke Coil	1	.60
2304	Condenser, .9005 Mfd Coupling and Bypass	3	.40
2333	Antenna Binding Post	2	.20
2719	Dry Electrolytic Condenser, 8 Mfd, 275 Volt	2	.45
2803	Dry Electrolytic Condenser, 8 Mfd, 450 Volt	2	2.00
2851	Condenser, .94 Mfd, 400 Volt	2	.50
2852	Dry Electrolytic Condenser, 8 Mfd, 150 Volt	2	1.00
2854	Condenser, .95 Mfd, 400 Volt	1	.40
2856	Resistor, 25,000 Ohm, Carbon, 1 Watt	1	.45
2857	Resistor, 10,000 Ohm, Carbon, 1 Watt	1	.45
2927	Condenser, .1 Mfd, 200 Volt	2	.40
2962	Volume Control, 0—1 Megohm	1	1.40
3053	Resistor, 30,000 Ohm, Carbon, 1 Watt	1	.45
3080	Bracket for 3854 Condenser	1	.35
3087	Resistor, 3000 Ohm, Candohm	1	.15
3098	Shield Can for Detector Plate Choke Coil	1	.05
3112	Clamp for 2803 Electrolytic Condenser	1	.05
3113	Clamp for 2862 Electrolytic Condensers	1	.05
3119	Intermediate Frequency Shield	1	.05
3122	Condenser, .5 Mfd, 200 Volts	5	.70
3124	Condenser, .1 Mfd, 400 Volts	1	.65
3358	Bakelite Terminal Insulator	3	.40
3358	Resistor, 200,000 Ohm, Carbon, 1 Watt	3	1.40
3358	Tone Control, 0—200,000 Ohm	1	1.40
3343	Resistor, 425-3000 Ohm, Candohm	1	.50
3349	Resistor, 500,000 Ohm, Carbon, 1 Watt	1	.40
3351	Resistor, 33,000 Ohm, Carbon, 1 Watt	1	.40
3352	Resistor, 10,000 Ohm, Carbon, 1 Watt	1	.40
3353	Resistor, 50,000 Ohm, Carbon, 1 Watt	1	.40
3354	Condenser, .540 Mmfd	1	.50
3356A	Resistor and Condenser Panel Assembly with Socket	1	2.50
3356	2nd Detector Panel Assembly Complete	1	2.50
3669	Oscillator Transformer	1	1.00
8671	1st Detector Transformer	1	.60
3672	R.F. Transformer	1	.60
3374	Resistor, 350 Ohm, Candohm	1	.30
3379	Resistor, 100,000 Ohm, 1 Watt	1	.40
3920	Resistor, 300,000 Ohm, 1 Watt	1	.40
701	Pilot Light Lamp	1	.25
701	Tube Socket—230	1	.35
703	Tube Socket—227	3	.35
861	Attachment Cord and Plug	1	1.00
1436	On-Off Escutcheon Plate	1	1.10
2392	Tube Socket—247	1	1.00
2392	Tube Socket—247	2	.35
2805	Tube Socket—235	4	.35
2830	1st Intermediate Transformer Assembly Complete with Can	1	1.80
2831	2nd Intermediate Transformer Assembly Complete with Can	1	1.80
2842	Adjusting Screw for Intermediate Condensers	4	.01
2850	Special Hex Nuts for Intermediate Condensers	4	.03
2875	Wainut Knobs	3	.30
2882	Escutcheon Plate, U. S. APEX	1	.75
2883	Drive Assembly Complete with Dial Chart	1	1.20
2895	Pointer Tension Spring for Drive	1	.15
2902	Dial Chart Assembly	1	.20
3081	Bracket for Tuning Meter	1	2.70
3100	Audio Transformer	1	.10
3108	Tube Shield	1	3.00
3121	Variable Condenser Shield	1	.30

SOLD IN MATCHED SETS OF FOUR

Models 99A, 99B (1931)


U. S. RADIO & TELEVISION CORP.

MODEL 99 Series Schematic

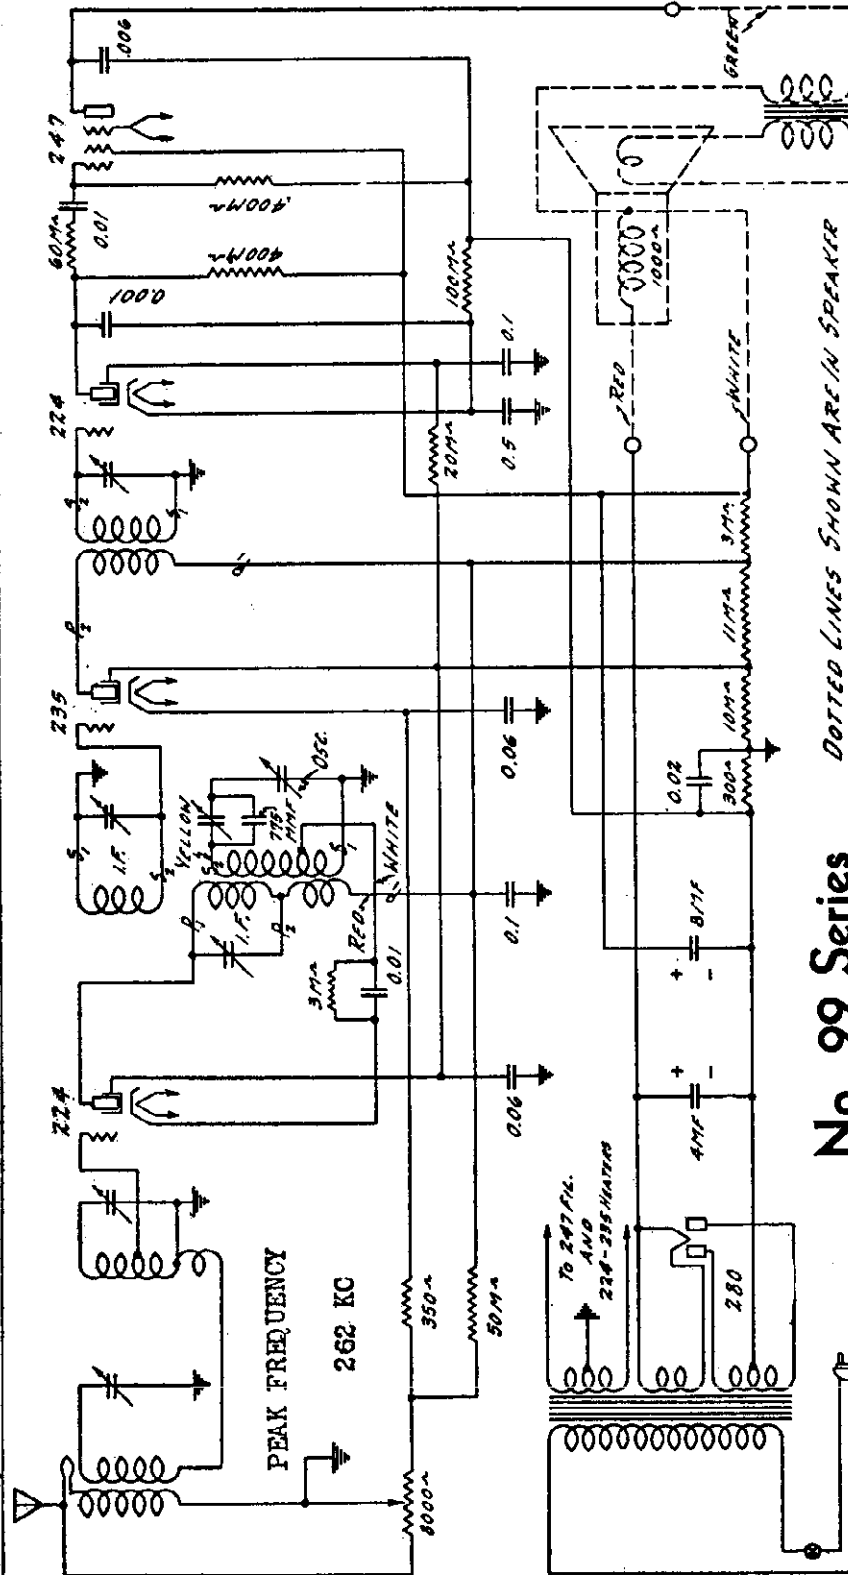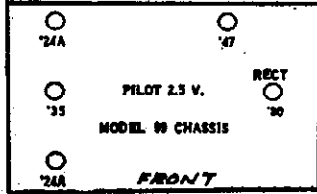

No. 99 Series

There are certain features to be noted in this receiver. The mixer is of the autodyne type, wherein it functions as a mixer (1st detector) and also as an oscillator. Also that the grid lead from the mixer tube joins the grid coil at a tap upon this winding. This tap is so apportioned that the circuit acts to suppress the transmission of image frequency signals, in this case 524 KC higher than the frequency setting of the tuned circuit. The IF transformer is also of special structure combining the frequency setting and also the oscillator system. The structure of this transformer-oscillator is illustrated upon the next page.

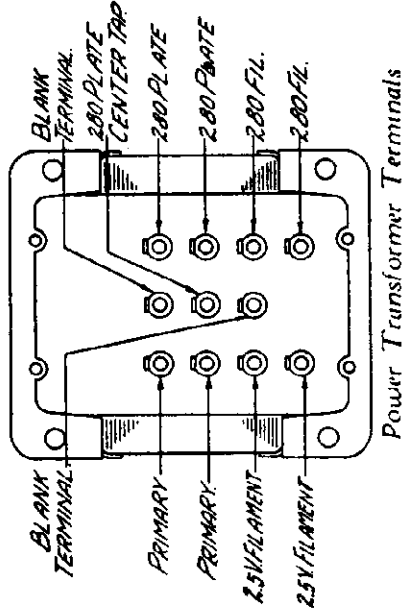

Power Transformer Terminals

MODEL 99 Series
Alignment
Voltage - Socket

U. S. RADIO & TELEVISION CORP.

CONDENSER ALIGNMENT

No. 99 CHASSIS

Aligning Intermediate Condensers—A non-metallic screw driver is necessary for aligning the intermediate condensers. A signal of 262 K.C. is required. Remove the grid cap from the grid connection of the 224 1st detector tube and connect the lead from the signal generator to the grid of the 224 1st detector. The tube shield should be left on. One way to make this connection is to bring the antenna lead from the signal generator through the slot in the end shield for the grid wire. A grid cap on the end of the antenna lead of the signal generator will facilitate making this connection. This lead, of course, should be insulated.

The oscillator coil must be shorted out by grounding the lead from the tap on the secondary. This is the white lead which comes through the porcelain base of the oscillator and I.F. assembly. This lead terminates at a lug on a vertically mounted bakelite terminal strip. Connect the jumper from this lug to the ground. Connect the ground lead from the signal generator to the ground post of the chassis.

The intermediate condenser adjusting screws are reached from the bottom of the chassis. There are two on the porcelain base of the oscillator and 1st I.F. transformer assembly, Part No. 3382 and one on the porcelain base of the 2nd I.F. transformer assembly, Part No. 3388. The volume control should be at maximum setting. Then adjust the three intermediate condenser screws until maximum output is obtained on the output meter. After all three have been adjusted the first time, go over them again and check the setting for maximum output.

Aligning R.F. and Oscillator Condensers—For adjusting the R.F. and oscillator condensers the signal input from the antenna generator should be made to the antenna post. Adjust the signal generator for a signal of exactly 1400 K.C. Then turn the tuning condenser rotor until the pointer is at exactly 1400 on the dial scale. Then adjust the three trimmers on the tuning condenser for maximum output adjusting the oscillator trimmer first (trimmer nearest back of chassis). Turn the screws up or down until greatest deflection on output indicating meter is obtained.

Then set the tuning generator for a signal of 600 K.C. and turn the tuning condenser rotor until the output is at maximum. The next step is to adjust the oscillator 600 K.C. trimmer condenser. The adjusting screw for this condenser is in back of the tuning condenser and is reached from the top of the chassis. To correctly adjust this oscillator 600 K.C. trimmer it will be necessary to turn the screw to several different positions using a nonmetallic screw

driver. At every position of this adjusting screw turn the tuning condenser rotor until maximum output is obtained. For each position of the adjusting screw there will be a maximum output and the correct position of the adjusting screw is the setting at which the deflection on output indicating meter is the greatest.

Next set the signal generator again for a 1400 K.C. signal and check the adjustment of the tuning condenser trimmers at this frequency for maximum output. Then set the signal generator for a signal of 1000 K.C. and turn the tuning condenser rotor until the output indicating meter shows maximum deflection. Then bend the slotted rotor plate sections of each tuning condenser bank which are last in mesh, in or out until maximum output is obtained. Tune in a signal at 750 K.C. and then at 600 K.C. and follow the same procedure bending the rotor plate sections last in mesh until maximum output is obtained. Do not change the setting of the oscillator 600 K.C. trimmer in any way after it has once been set as indicated above.

FLUTTERING OR MOTORBOATING


Fluttering or motorboating may be due to an open 8 Mfd. electrolytic filter condenser or to low capacity in this condenser. It may also be due to an open or low capacity .06 Mfd. screen by-pass condenser. If the 4 and 8 Mfd. electrolytic condenser units are reversed in position fluttering may result. The correct position of these two units is shown in Fig. 1.

A 224 1st detector with characteristics varying considerably from the standard may cause fluttering. Try out some new 224 tubes in this socket. A defective oscillator and 1st I.F. transformer assembly may also be responsible for this type of disturbance. If, after the tubes have been changed and the other possibilities suggested in this article have been investigated, fluttering persists, it may be advisable to secure a new oscillator and 1st I.F. transformer assembly and try it out in the receiver. Motorboating may be due to a poor grid connection to the 235 I.F. tube and to the 224 2nd detector.


ELECTROLYTIC FILTER CONDENSERS

There are two dry electrolytic condenser units in the No. 99 chassis. One of these units is an 8 Mfd. 450 volt condenser, Part No. 2803. The other unit is a 4 Mfd., 450 volt condenser, Part No. 3366.

In replacing the electrolytic condenser units great care should be taken to wire them in with the correct polarity. Tag the leads when they are taken off the old condensers. The positive terminal of the condenser is identified by a + symbol on the box. The positive lead in the chassis can be determined by referring to the schematic circuit diagram.

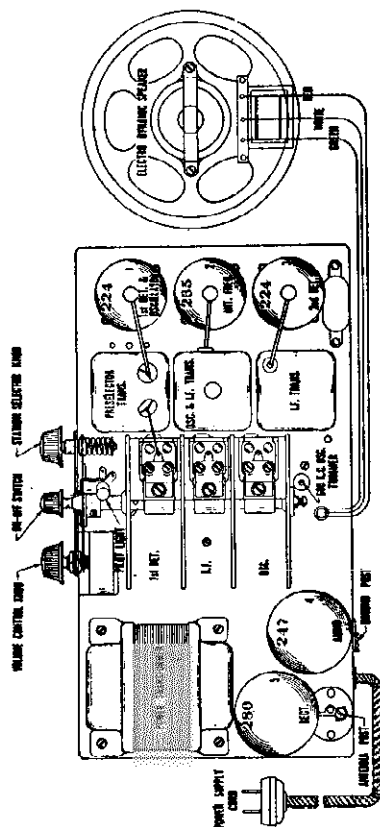

Top View of No. 99 Chassis showing Tube Sequence and Speaker Connectors.

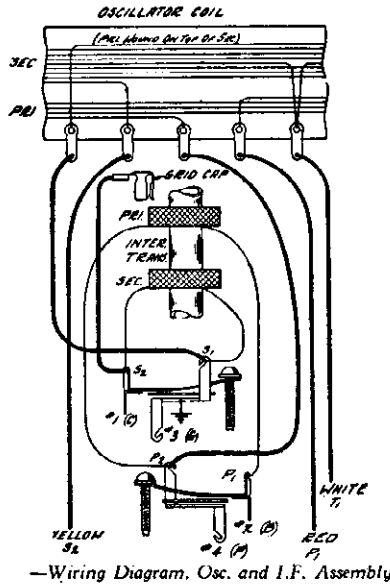

No. 99X CHASSIS—25 CYCLE, 115 VOLT

Chassis No. 99X is almost identical in construction with chassis No. 99, except that it is designed for 25 cycle, 115 volt operation. All parts as used in the No. 99 chassis are used in the No. 99X with the exception of the power transformer. The correct power transformer for the No. 99X chassis is shown in the parts price list.

The description and testing as covered in the No. 99 Service Notes also applies to the No. 99X chassis

No. 99 CHASSIS—VOLTAGES AT SOCKETS


LINE VOLTAGE 115—VOLUME CONTROL AT MAXIMUM

Type of Tube	Position of Tube	Function	"A" Volts	"B" Volts	Control "C" Volts	Screen Volts	Screen Current MA	Cathode Volts	Plate MA	Grid Test MA
224	1	1st Det. & Osc.	2.25	165	4.5-5.25 ⁽¹⁾	65	.4	4.5-5.25 ⁽¹⁾	1.3	2.0
235	2	I.F.	2.25	165	2.5	65	1.5	2.5	6.4	7.4
224	3	2nd Det.	2.25	128	6.5	60 ⁽²⁾	.05	6.5	.22	.23
247	4	Audio	2.25	205	16. (3)	225	8.0	29.	27.	33.
280	5	Rect.	4.9							


(1) Varies with frequency setting of dial, approximately as shown.
(2) Voltage as measured with 800,000 ohm meter.
(3) Measured across 300 ohm section of voltage divider resistor.

WARE MANUFACTURING CORP.


MODEL T
 MODEL 4 Tube
 MODEL 7 Tube

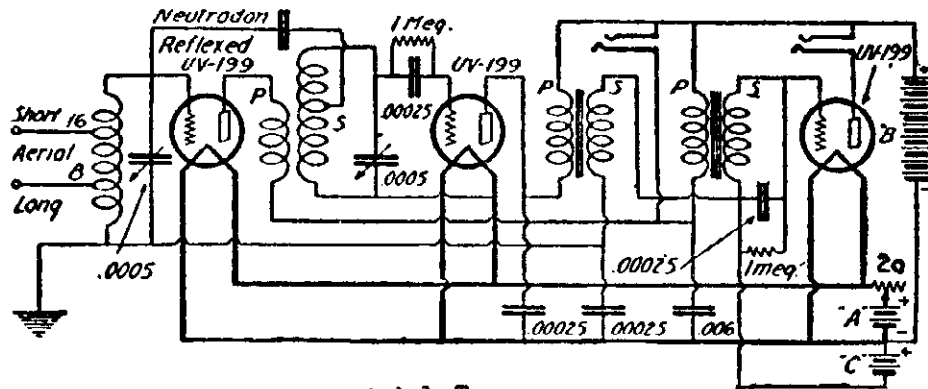

Model T

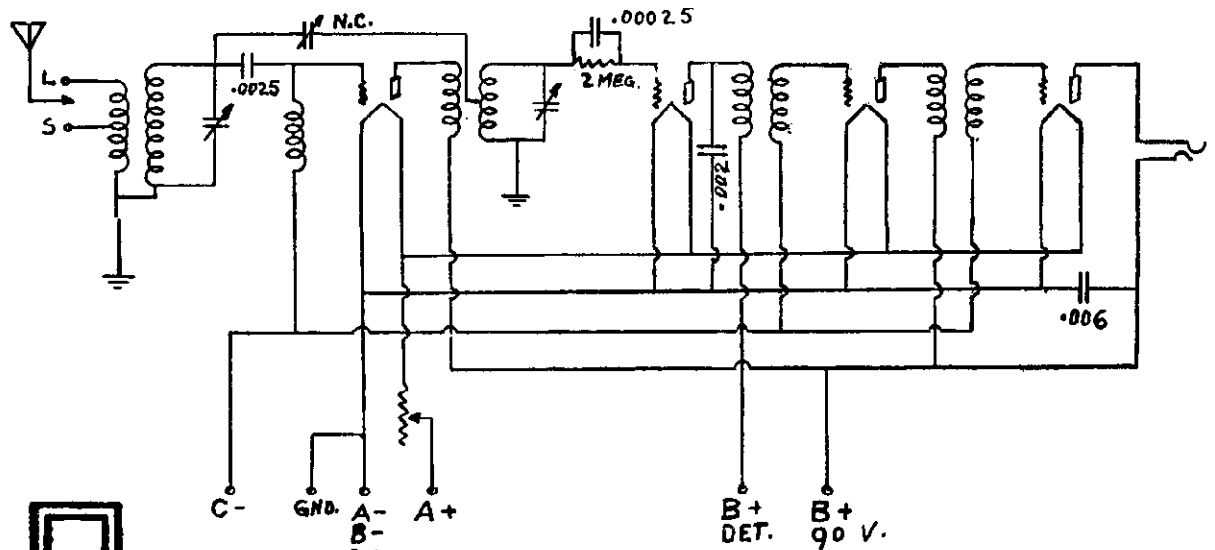

Model 4 Tube "Music Master"

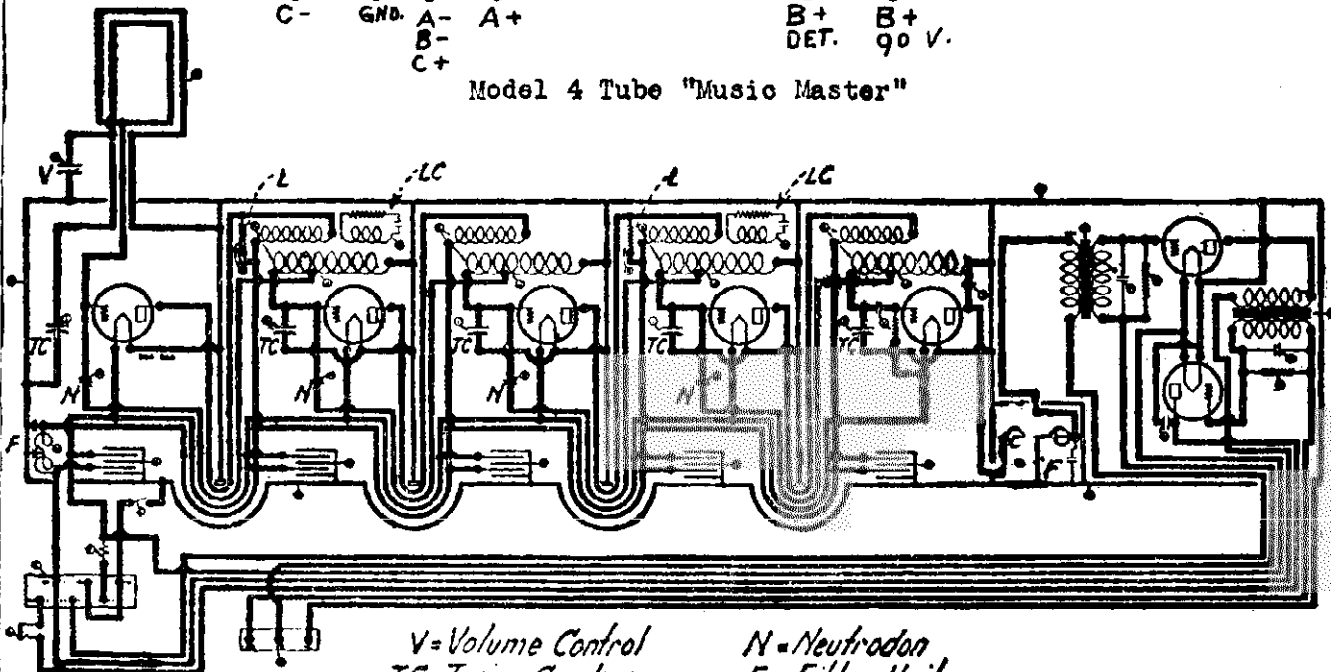


V = Volume Control N = Neutradon
 TC = Tuning Condensers F = Filter Unit
 LC = Losser Coil L = Leak

Model 7 Tube Music Master

MODEL B-1, B-2 Bantam

WARE MANUFACTURING CORP.

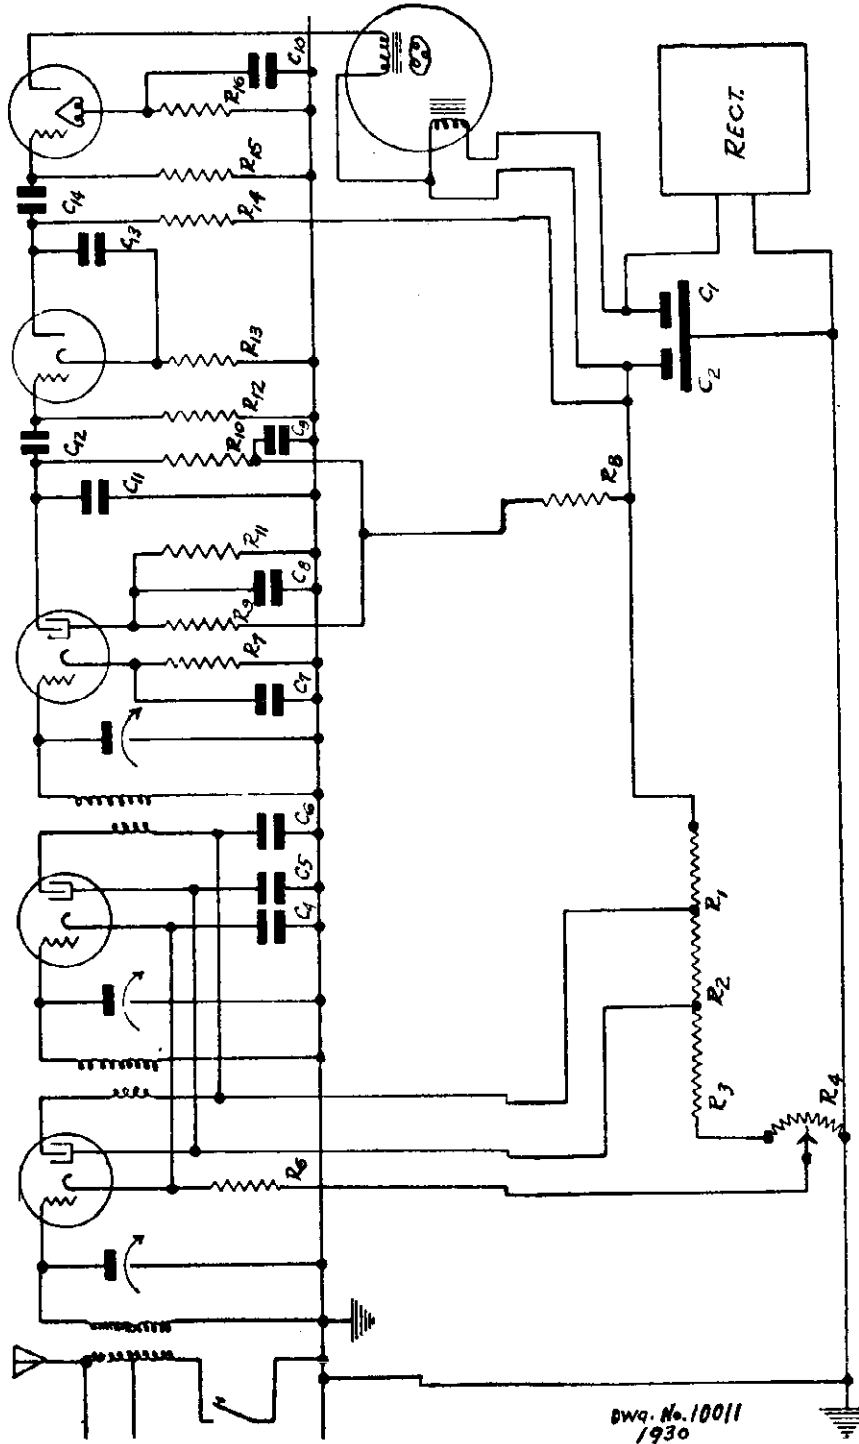


dwg. No. 10011
1930

- | | | | | |
|--------------------------------|------------------------------------|----------------|---|-----------------------------------|
| C 1--14 Mfd. Electrolytic | - First Filter Condenser | R 1--7500 ohms | 1 watt carbon | - R. F. Voltage Divider |
| C 2--2 " | - 2nd Filter Condenser | R 2--10000 " | " " " " | " " " " |
| C 3-- " | " " | R 3--7500 " | " " " " | " " " " |
| C 4--0.1 " | - R. F. Cathodes Bypass | R 4--1000 " | " Wire Wound Potentiometer-Volume Control | " " " " |
| C 5--0.1 " | - R. F. Screens Bypass | R 5 " | " " " " | " " " " |
| C 6--0.1 " | - R. F. Plates Bypass | R 6--280 " | 1 watt carbon | - R. F. Bias |
| C 7--1.0 " | - Det. Cathode Bypass | R 7--25000 " | " " " " | - Det. Bias |
| C 8--0.1 " | - Det. Screen Bypass | R 8--25000 " | " " " " | - Det. B. Common to Pl. and S. S. |
| C 9--0.25 " | - Det. Plate Bypass | R 9--1/2 Meg. | 1/2 " | - Det. Screen Supply |
| C 10--1.0 " | - Power Tube Bias Bypass | R 10--1 " | " " " " | - Det. Plate Supply |
| C 11--0.005 Mfd. | 350 V. Midget - Det. Plate to Gnd. | R 11-75000 " | 1 " | - Det. Screen Shunt |
| C 12--0.06 " | " " - Det-1st Audio Coupling | R 12-1/2 Meg. | 1 " | - 1st Audio Grid to Ground |
| C 13--0.02 " | " " - 1st Audio Plate to K. Bypass | R 13-1000 " | " " " " | - 1st Audio Bias |
| C 14--0.06 " | " " - 1st Audio-Pr. Tube Coupling | R 14-25000 " | " " " " | - 1st Audio Plate Supply |
| Variable Condenser, 3 Sections | \$67 M. Mfd. Each, | R 15--1/2 Meg. | " " " " | - P.T. Grid to Ground |
| | | R 16-1500 " | " " " " | - P.T. Bias |

WELLS - GARDNER & CO.

MODEL 052 Series
Schematic
Voltage

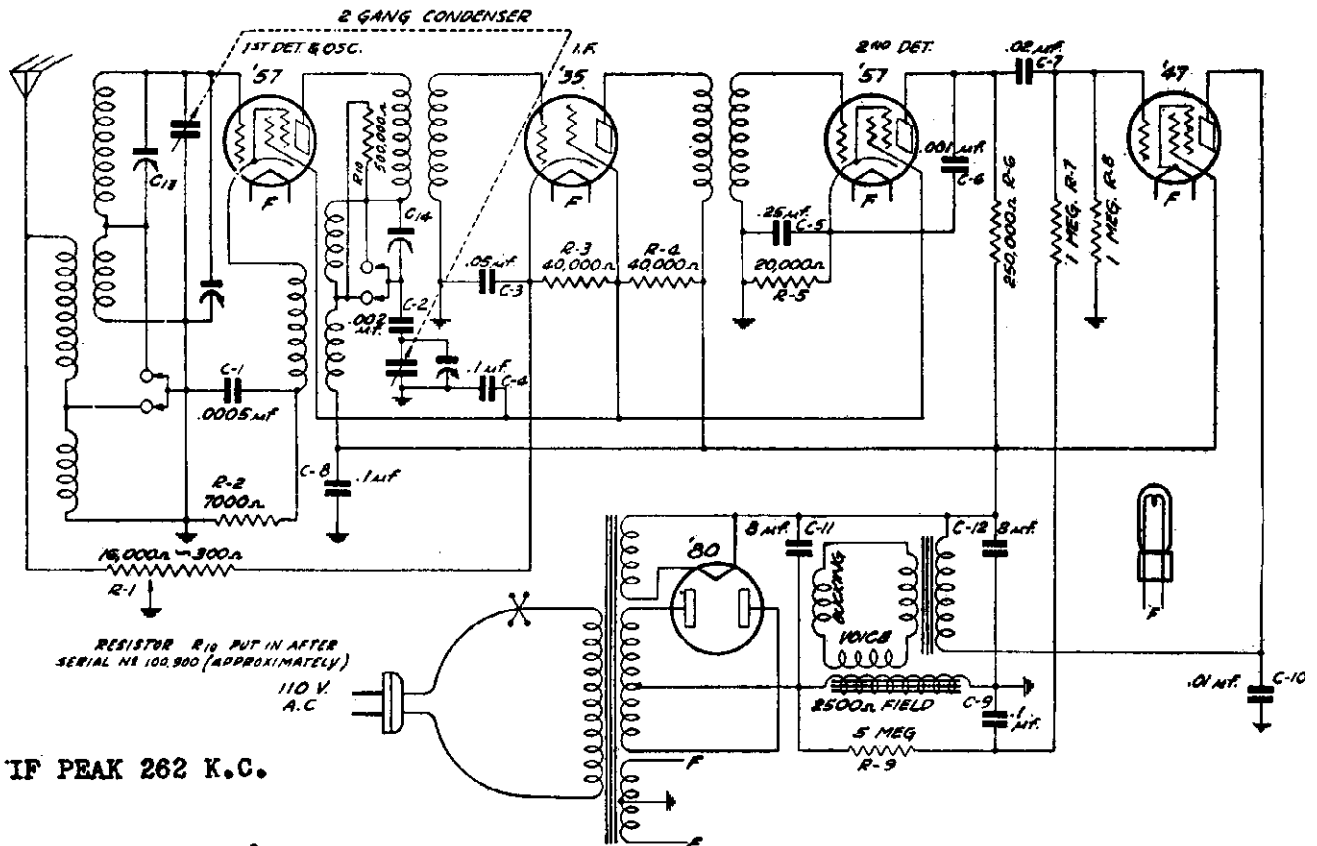


RESISTOR R10 PUT IN AFTER SERIAL NO 100,900 (APPROXIMATELY)

IF PEAK 262 K.C.


Tube	Fil.	Plate to Screen to Grid to Plate	Cathode	Cathode Crnt.
1st Det	2.15	225	90	.5
IF Amp	2.15	230	90	3.2*
2nd Det	2.15	170	90	.2
Audio	2.15	225	240	14.**
Rect.	4.75	620 volts AC from plate to plate		23.

* When read with cord and plug, ground the control grid.
** High resistance interferes with correct reading.

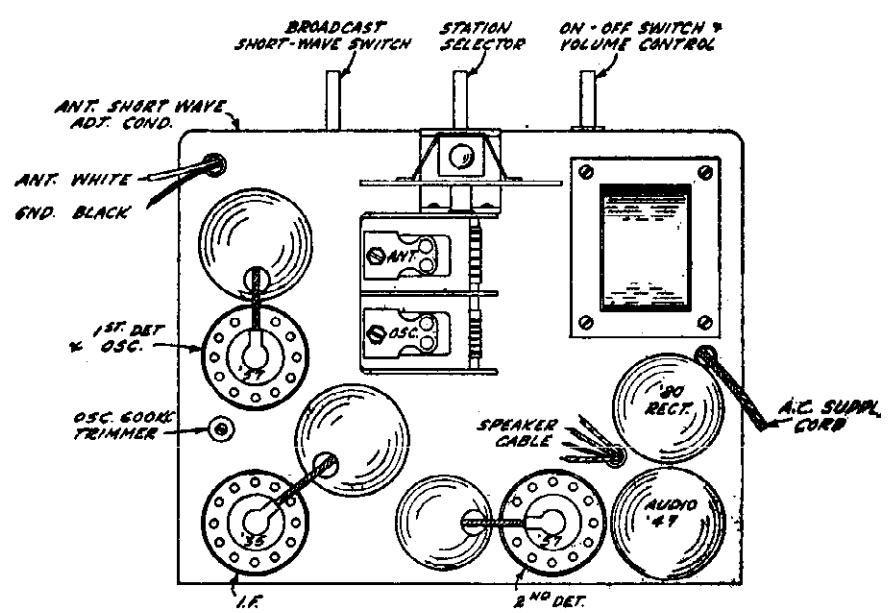

MODEL Jewell
198,199
2nd Type
MODEL Jewell 209


WESTON ELECTRICAL INSTRUM'T CORP.

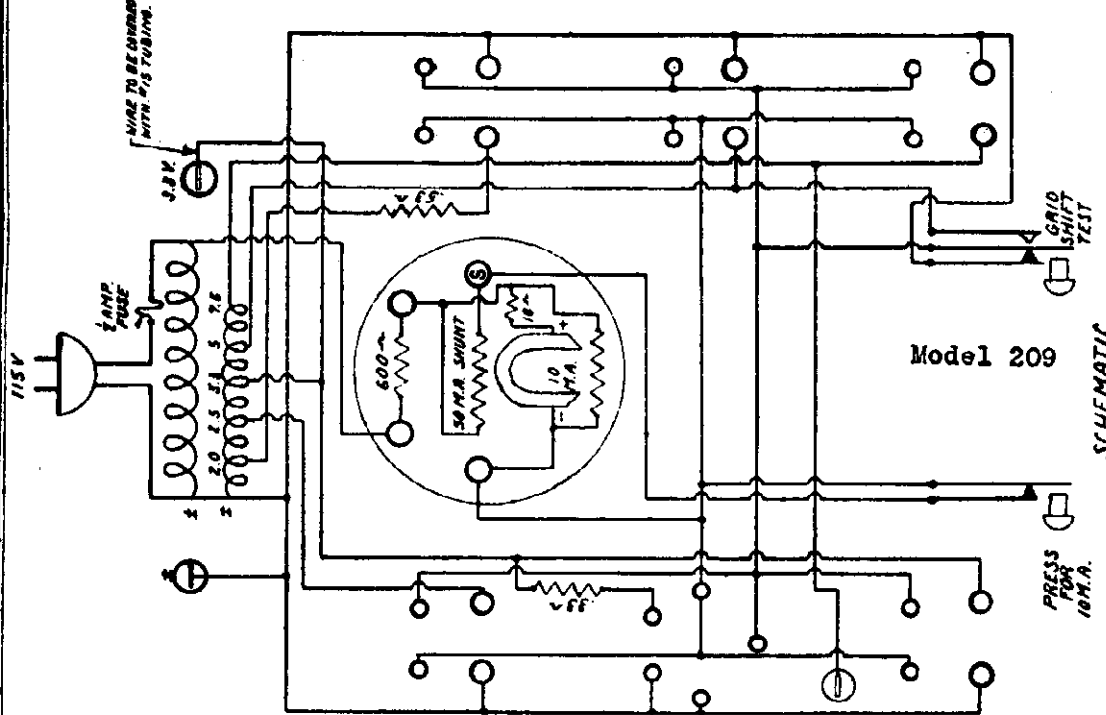


SCHEMATIC

LOOKING AT BACK OF CASE

THIS DIAGRAM APPLIES TO ALL PAT. 209 WITH SERIAL No 6371 AND OVER AND OVER FOR PAT. 209 WITH SERIAL No 4972 TO SERIAL No 6371 SEE M.D. 209 ISSUE 7. FOR PAT. 209 WITH SERIAL No UNDER 9972 SEE M.D. 209 ISSUE 5.

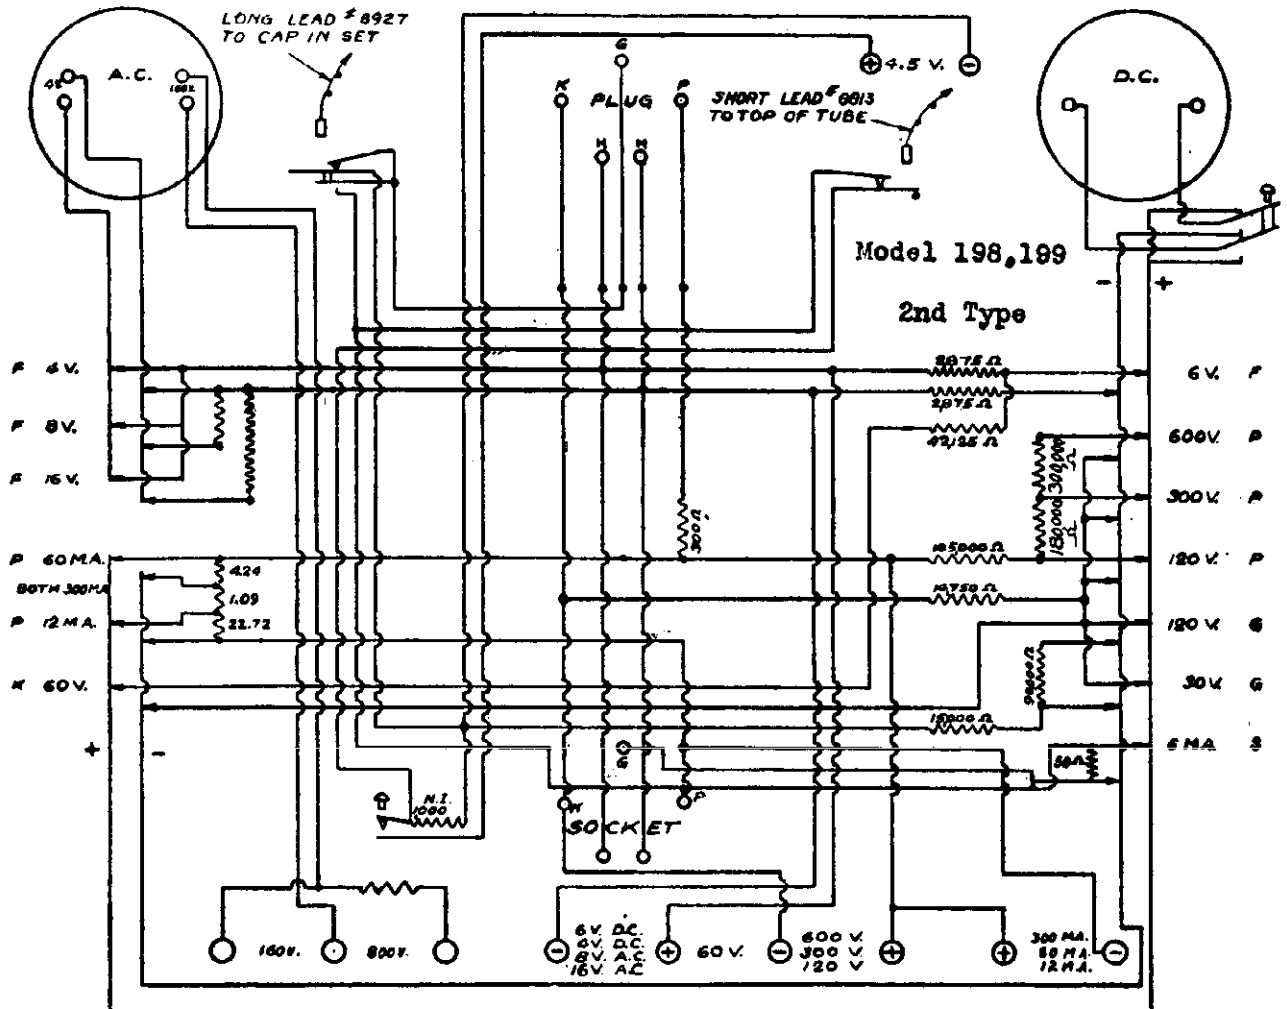


WESTON ELECTRICAL INSTRUM'T CORP.

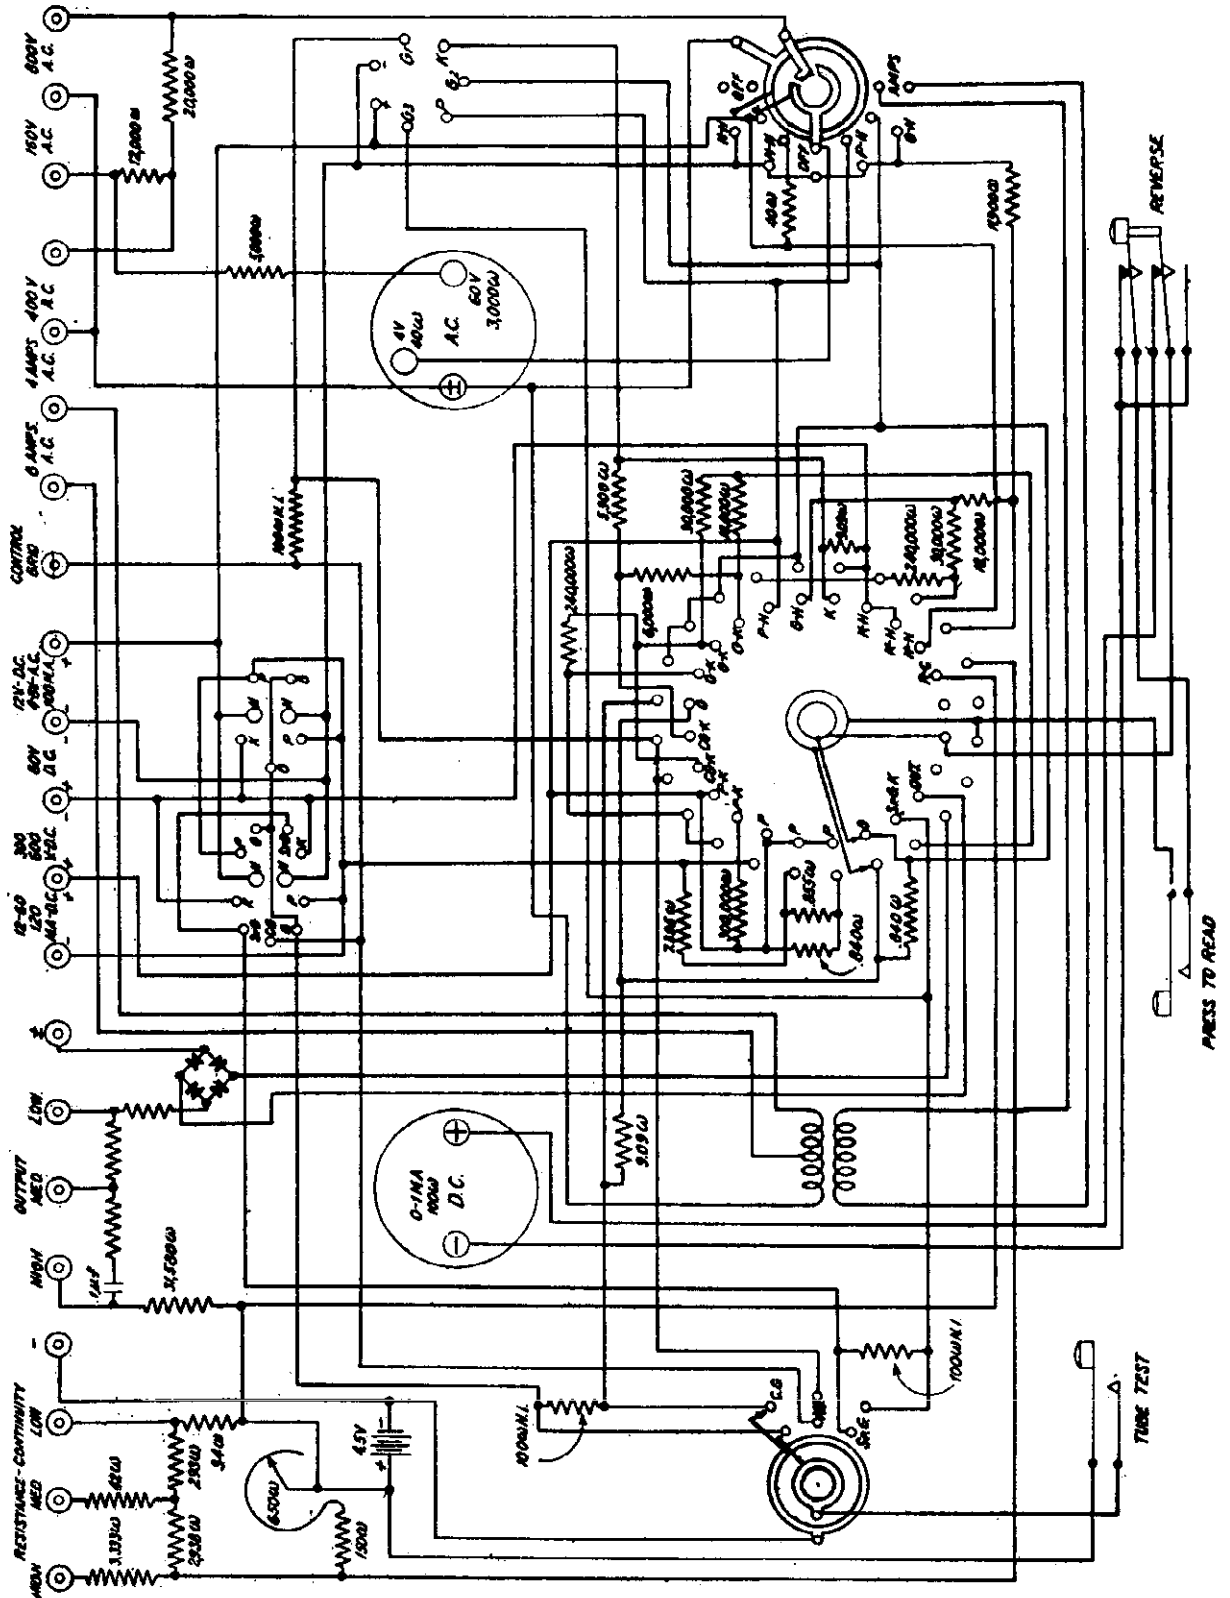


WESTON ELECTRICAL INSTRUM'T CORP.

MODEL Jewell
533
MODEL Jewell
534

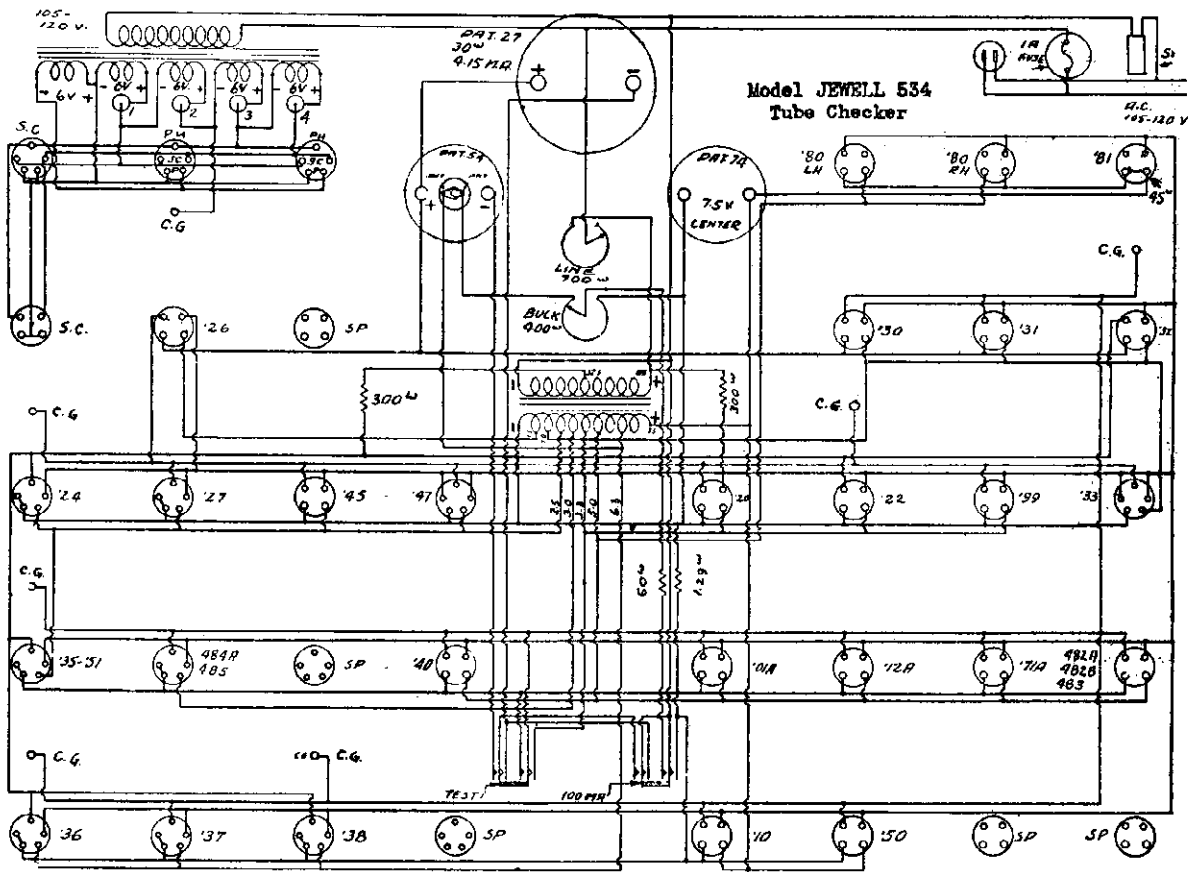


Model JEWELL 534
Tube Checker

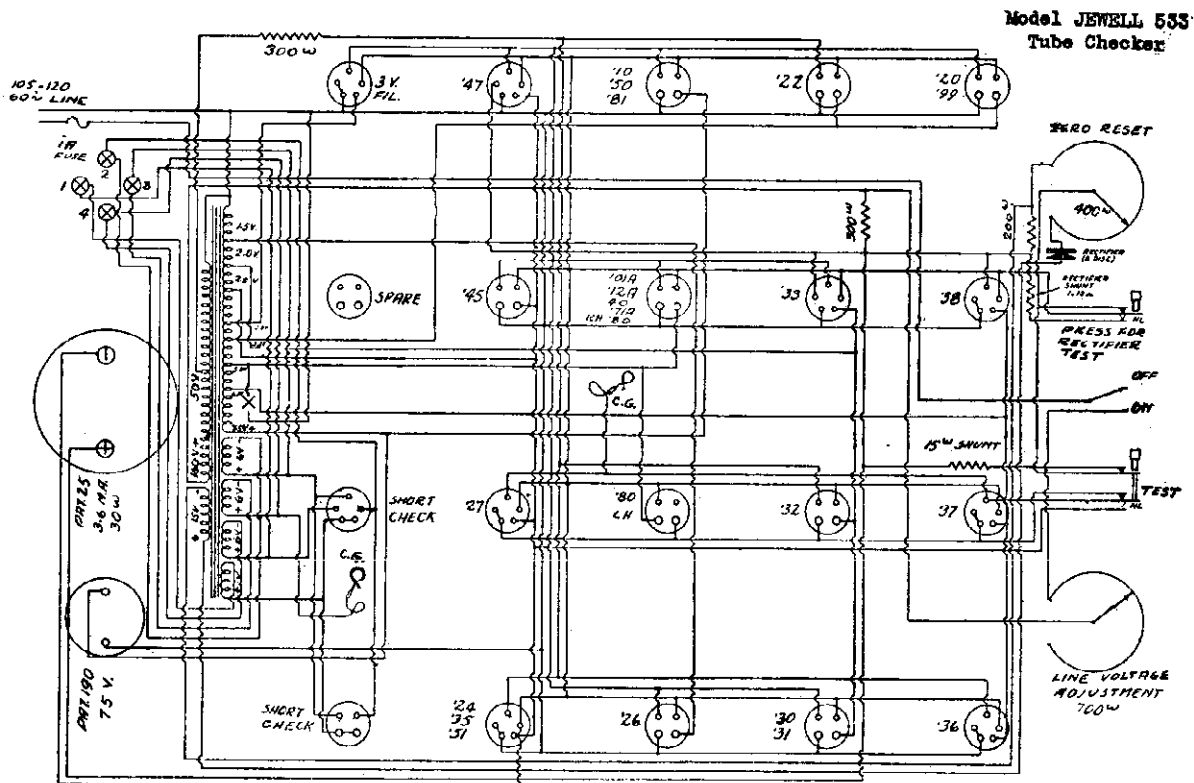

Model JEWELL 533
Tube Checker


VIEWING TOP OF PANEL

WESTON ELECTRICAL INSTRUM'T CORP.

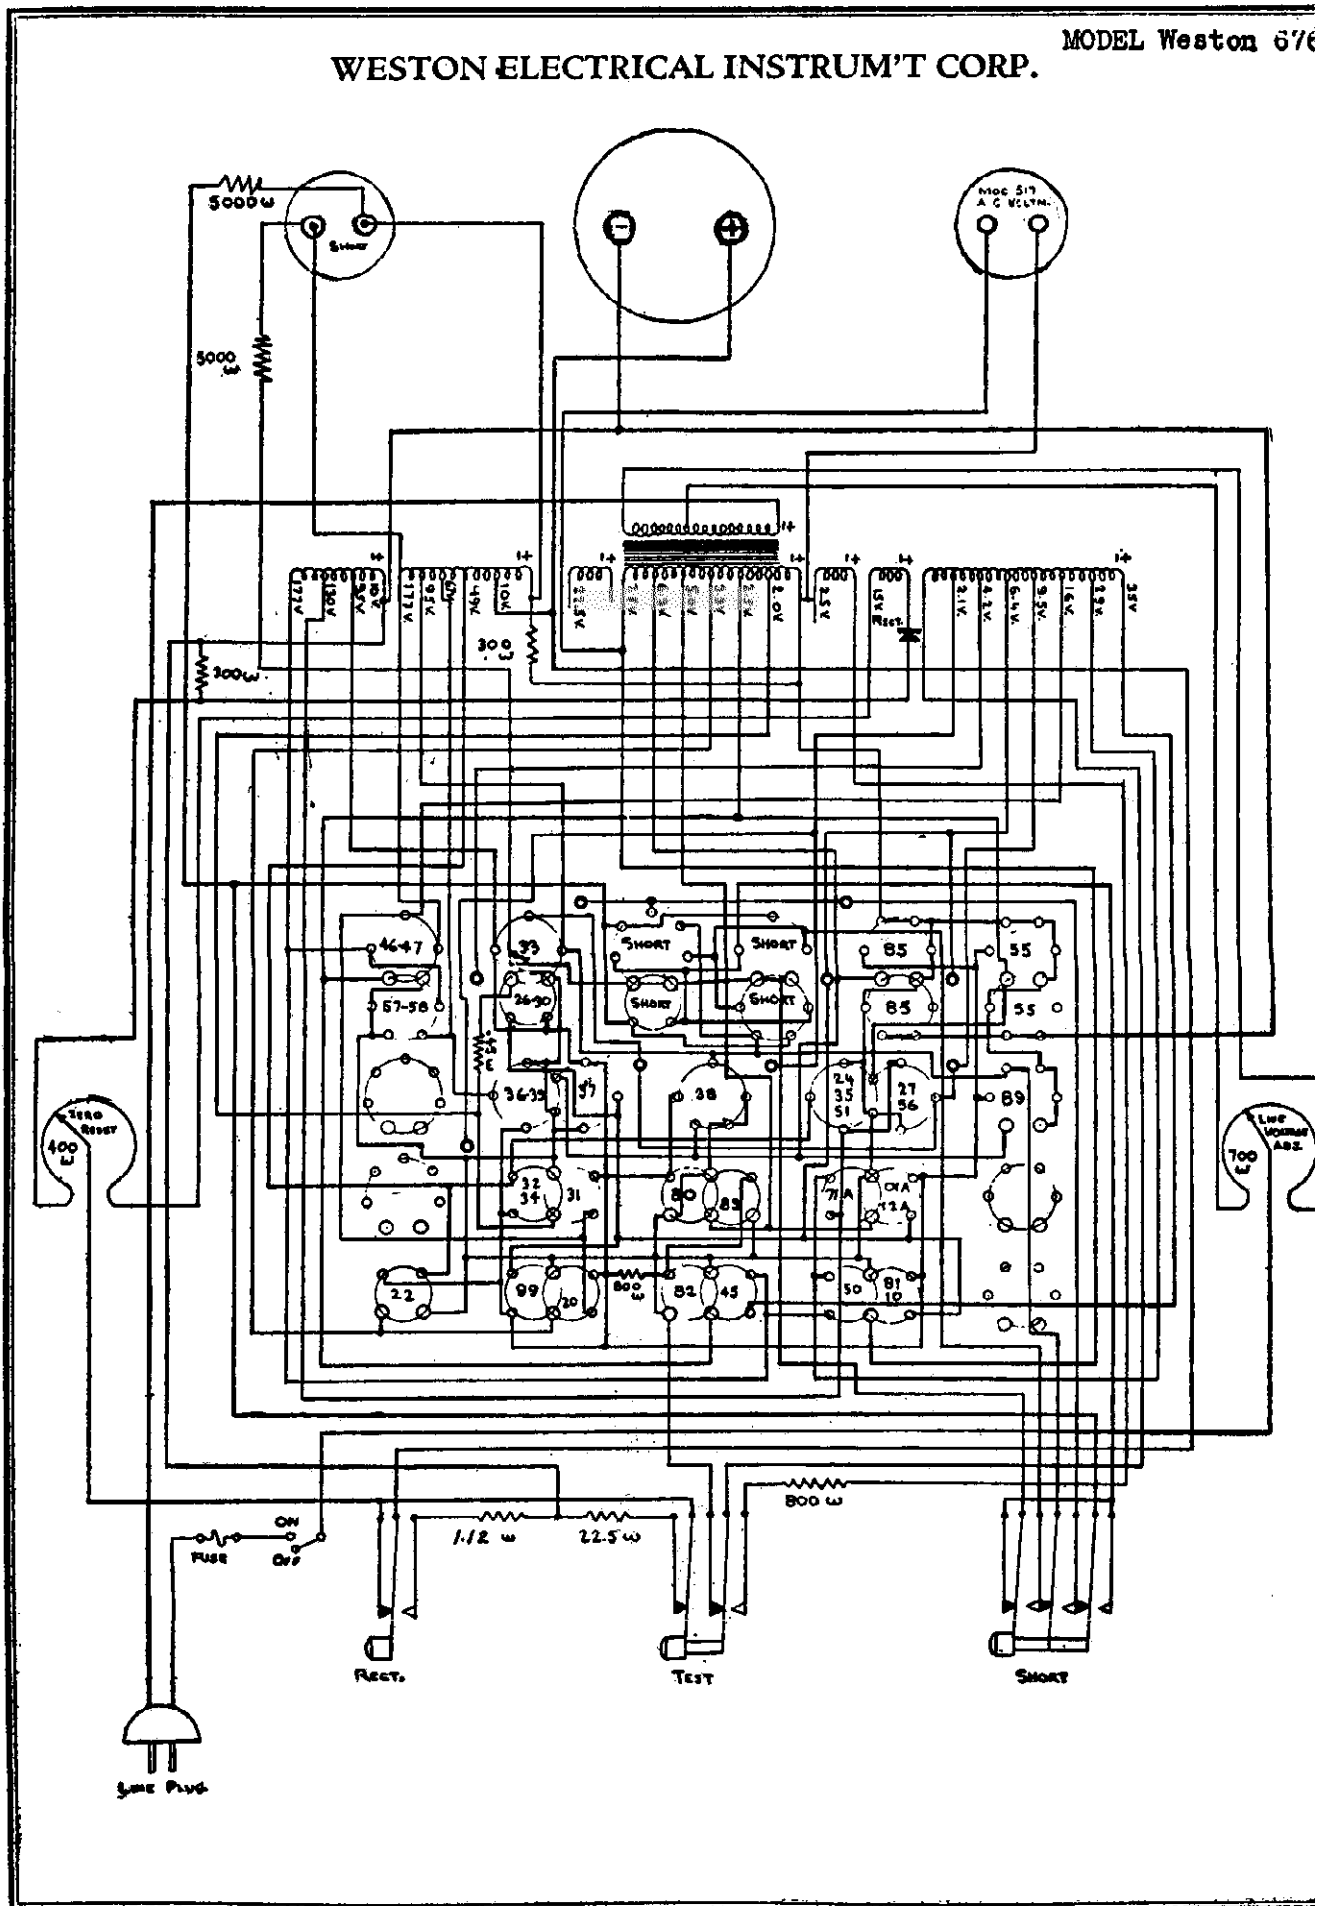


WILLARD STORAGE BATTERY CO.

MODEL B Unit 3095
 MODEL B Unit 3310
 4310
 MODEL B Unit 4095

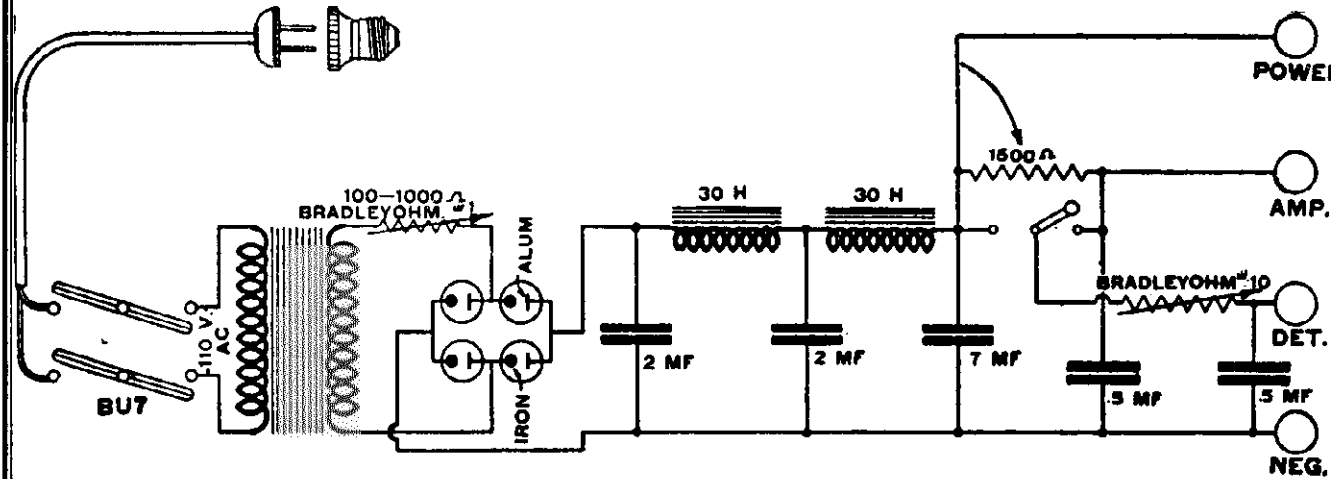


Standard "B" Power Unit, Part No. 3095, 50-60 Cycle

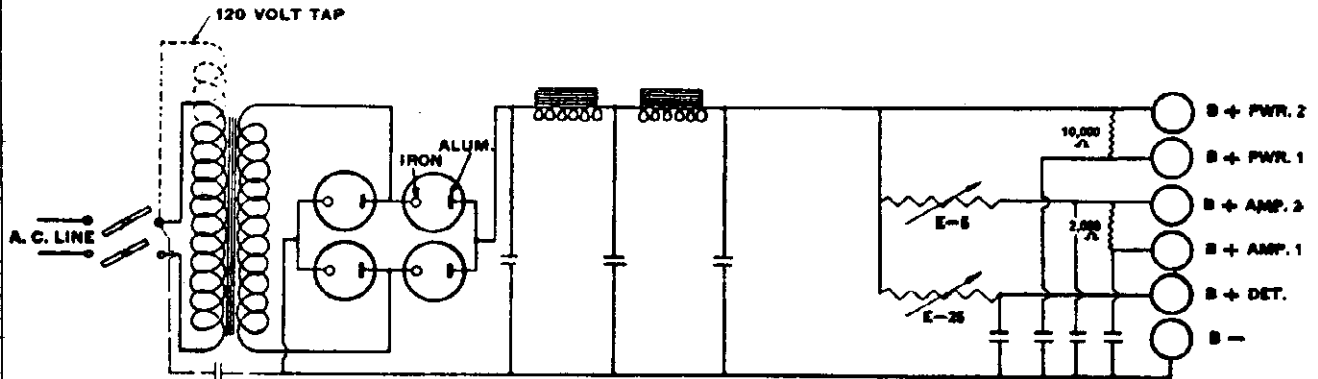

Super "B" Power Units, Part Nos. 3310 and 4310
 25-40 and 50-60 Cycle




THIS CONDENSER ON UNIT. PT. NO. 3310 ONLY

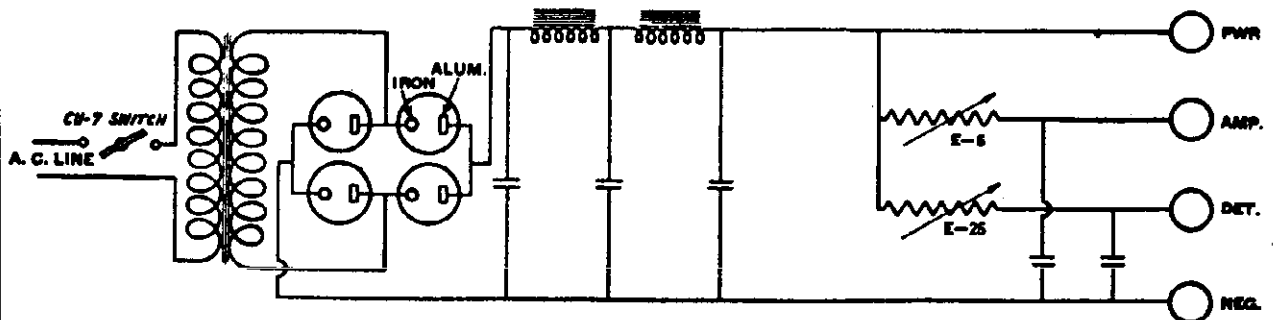

Standard "B" Power Unit, Part No. 4095, 50-60 Cycle


MODEL AB 6301
 MODEL AB 3301
 G.E. Charger
 MODEL AB 3301
 Westinghouse

WILLARD STORAGE BATTERY CO.

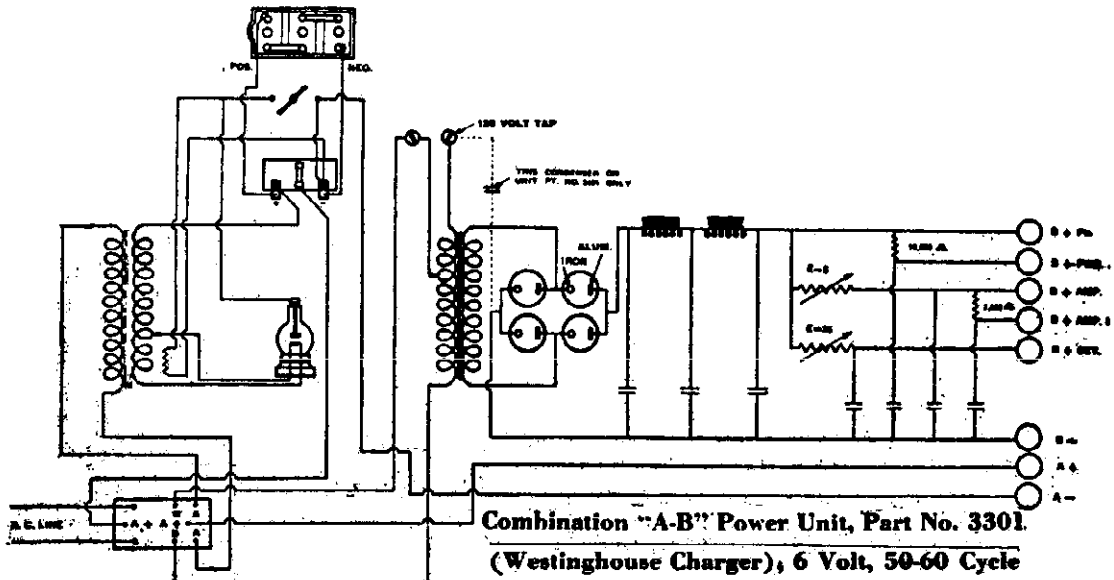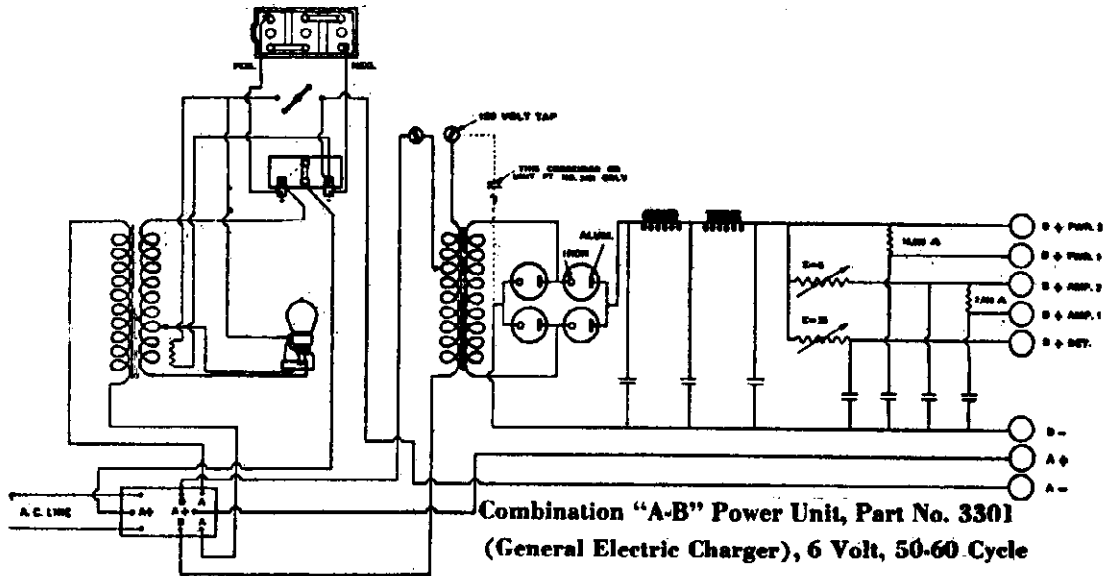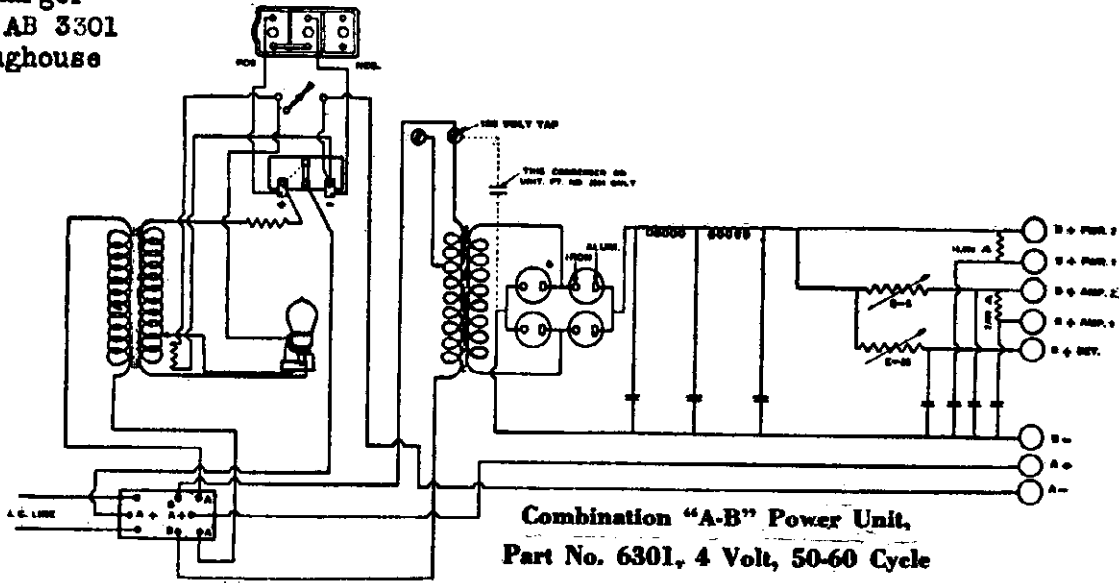


ZENITH RADIO CORP.

MODEL ZE-
MODEL ZE-
MODEL ZE-

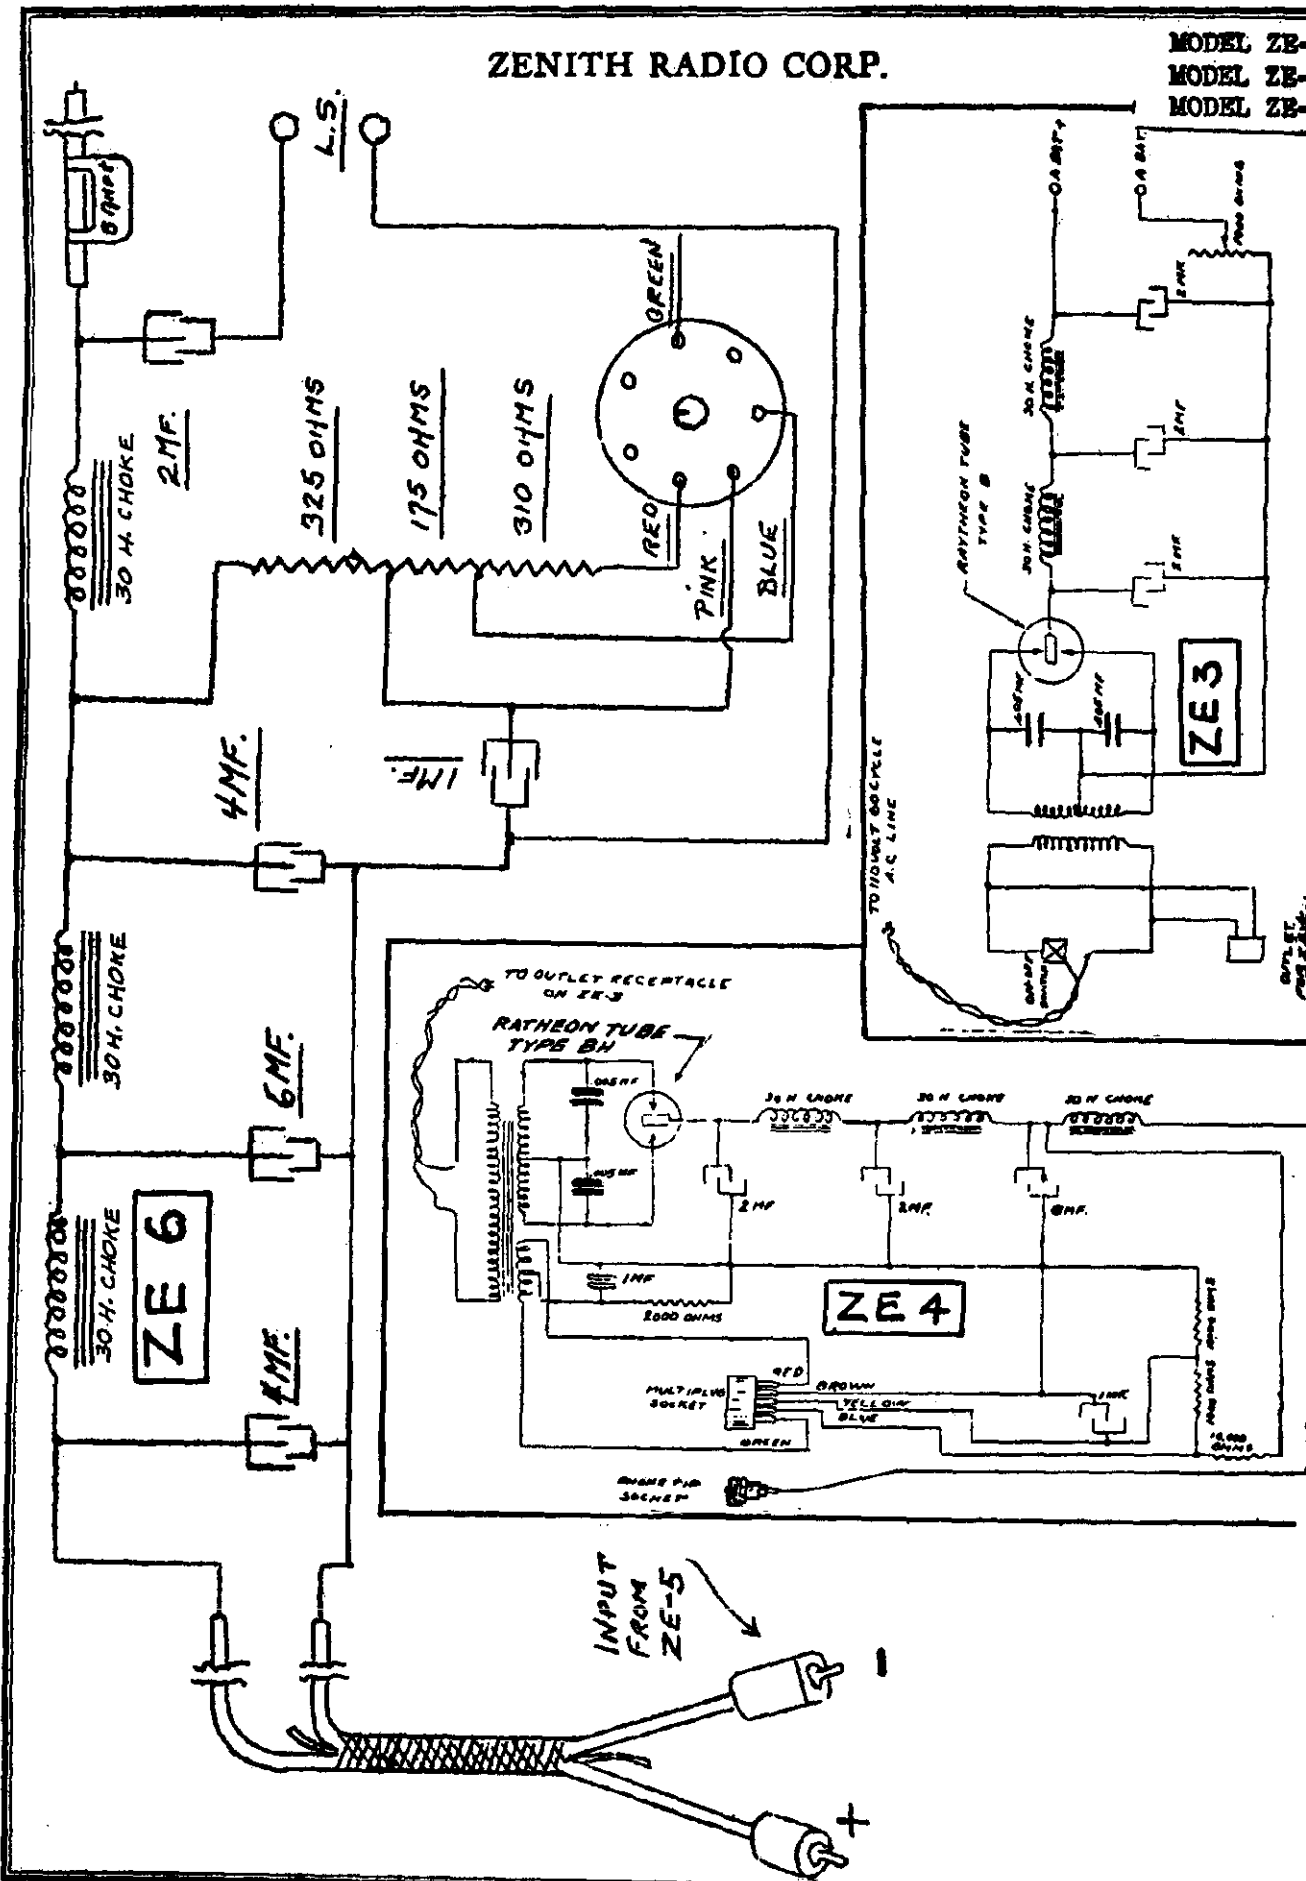


MODEL ZE-9
for Models 11-E, 14-E

ZENITH RADIO CORP.

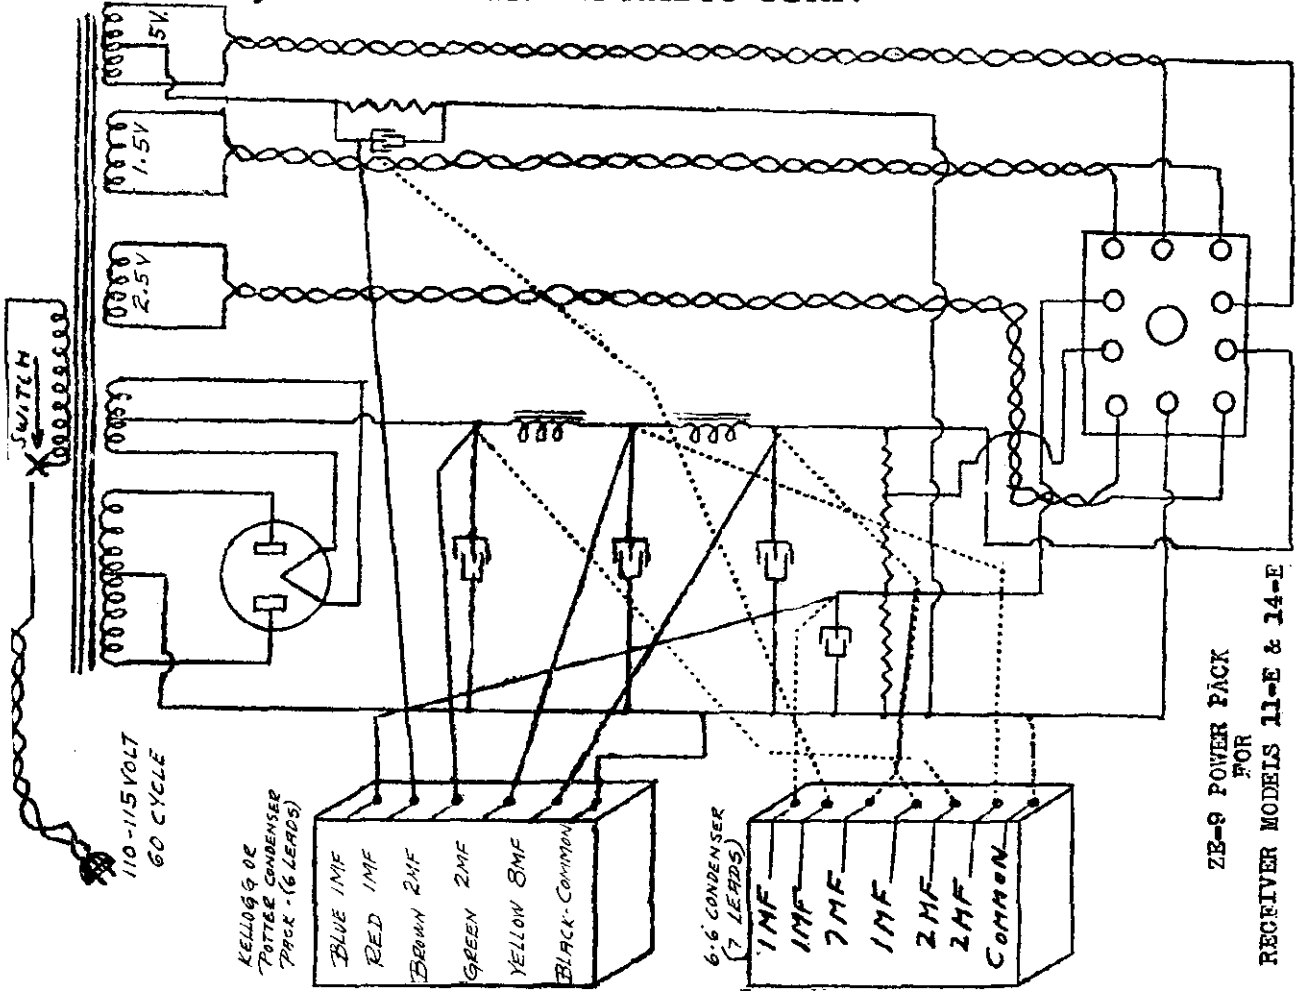

ZE-9 POWER PACK FOR RECEIVER MODELS 11-E & 14-E

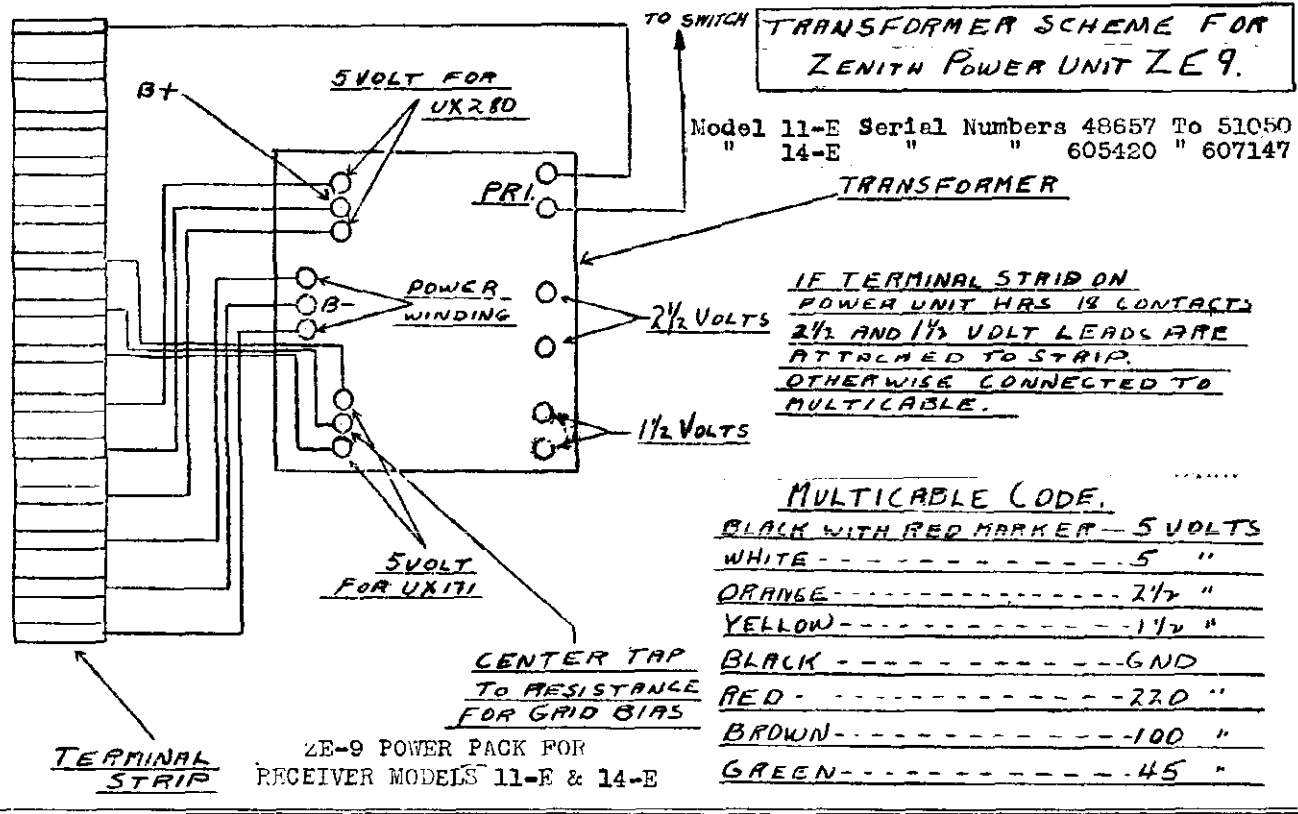

MODEL 91,92
Circuit Data

ZENITH RADIO CORP.

- * MODEL 91 (2014) SERIAL NUMBERS AFTER 373,334
* MODEL 92 (2014) SERIAL NUMBERS AFTER 301,394 (4B)

In all receivers, bearing serial numbers 373,334 on model 91 and 301,394 on model 92, or higher, the manual control has been removed from the A.V.C. cathode and placed in the grid circuit of the first A.F. stage. A tapped resistor takes the place of the original control. By use of this new system, the automatic volume control operates independently and at full efficiency, manual volume being controlled by varying the audio output.

Since the A.V.C. or R.F. circuit remains constant, the tuning meter will show maximum swing on the station at any manual control setting. Originally the meter action decreased as the volume was lowered.

The parts list shown previously, except for the substitutions given below, should be used when ordering replacement components.

PARTS CHANGE.

- 1 Audio volume control, part # 63-212 List \$ 1.65
1 Center tapped resistor, part # 63-210 List \$ 0.50
Deduct the 63-171 volume control.

-
- * MODEL 91 (2014) SERIAL NUMBERS AFTER 375,532
* MODEL 92 (2014) SERIAL NUMBERS AFTER 302,007 (4C)

All ten-tube Zenith Superheterodynes after the above serial numbers will incorporate a variable Sensitivity Control in place of the original Local-Distance switch. The diagram (*) indicates its position as being connected into the I.F. cathode. In addition to the control unit the first detector coil has been replaced by one having slightly different construction to provide equal sensitivity over the entire tuning range. It is not advisable to make this change in receivers subsequent to the above numbers, for the reason that each complete set of chassis coils must be inductively matched, otherwise the efficiency of the receiver will be seriously affected.

The following alteration makes the parts list directly applicable to the improved models:

DEDUCT

- 1 Local-Distance switch, part # 85-31
1 First detector coil, " # S-997
1 Eight megohm resistor " # 63-224
1 250,00 ohm resistor " # 63,135

ADD

- 1 Sensitivity Control, part # 63-228
1 Det. coil assembly " # S-2104
1 Bypass condenser, " # 22-115
1 50,000 ohm resistor, " # 63-136

ZENITH RADIO CORP.



MODEL 91,92
Balancing Notes

Balancing Chassis

Every Zenith Superheterodyne Receiver is carefully balanced on laboratory equipment before leaving the factory and should not require further attention in this respect. However, in the event that some part of the R. F. circuit has been changed, or the adjustments shifted by mishandling, the chassis may be rebalanced as follows:

If an oscillator is available more accurate results will be obtained. It should be accurately calibrated from 1500 to 550 kilocycles and should also have provision for generating a 175 kilocycle signal. In cases where an oscillator is not available a fairly good result may be had by listening to stations which operate as nearly as possible to the extreme ends of the dial. Although an output meter will give most accurate results, satisfactory adjustments can be made simply by listening to the speaker.


The chassis should be removed from the cabinet so that all adjustments are easily accessible. Next place the test oscillator in operation and connect it direct to the antenna and ground posts of the receiver. It should then be set to 1500 kilocycles and the receiver tuned to the same reading on the dial. If the oscillator is not accurate the stations will not be received on their proper calibration. If a station is used for this purpose, the dial pointer should first be set to the exact frequency of the station being received. Beginning with the variable condenser tuning section at the extreme left, which tunes the oscillator circuit, the trimmer should be regulated for maximum response, in either the loud speaker or output meter. It will be noticed that the second section does not employ a vernier adjustment. This stage is resonated by adjusting the antenna compensator knob as explained in the instruction card. The third, or 1st R. F. trimmer, is adjusted in the same manner as the oscillator. If at any time the volume reaches a very high level, so that it is not possible to determine slight changes, it should be reduced by means of the volume control knob so as to be barely audible. The fourth, or 1st detector section, is next in order and its trimmer should also be adjusted for resonance.

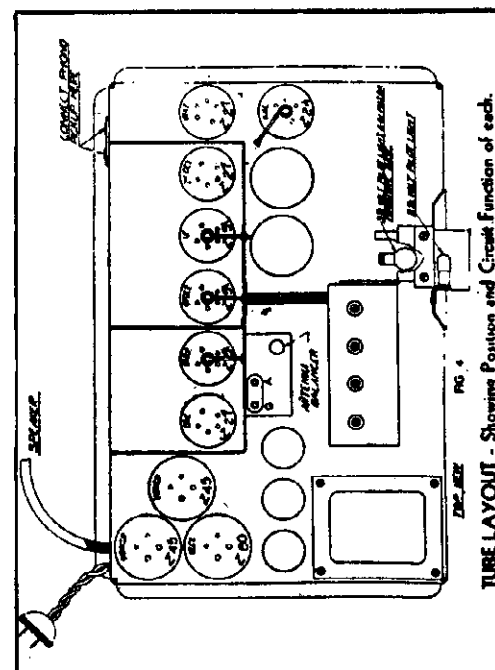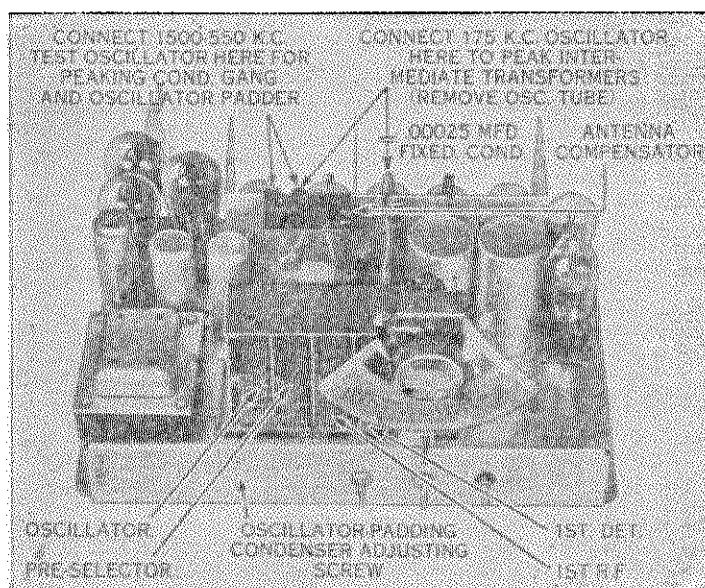

After the vernier adjustments have been completed the test oscillator should be set at 550 kilocycles and the dial of the receiver turned until the oscillator signal is tuned in. Now the oscillator padding condenser (see fig. 3) should be very carefully adjusted with a screw driver for maximum output of the receiver, while rocking the tuning condenser back and forth over the signal. This padding adjustment brings the oscillating circuit of the receiver in resonance with the remaining tuned circuits and, thereby, enables it to tract accurately over the entire scale. The receiver will now operate at full efficiency and all stations will be received at their proper calibration. If this is not found to be entirely so, the entire balancing operation should be repeated.

The intermediate transformers used in the ten tube Superheterodyne have been accurately peaked at 175 kilocycles on a temperature controlled crystal oscillator before leaving the factory. It is not recommended that their adjustments be tampered with unless an oscillator is available which is very accurately calibrated at 175 kilocycles, or unless the serviceman is absolutely certain the trouble lies in their adjustment. However, if it is necessary to check the adjustments, the 175 K. C. test oscillator may be connected to the grid terminal of the 1st detector through a .00025 fixed condenser. The ground lead of the test oscillator is connected to the ground post of the receiver. The oscillator tube must be removed from the chassis while this operation is being performed. Four adjusting screws are provided under the chassis directly beneath the intermediate transformers, which tune the plate circuit of the 1st detector, grid and plate circuits of the I. F. stage, and grid circuit of the second detector. (See wiring diagram.) Beginning with the 2nd detector grid vernier, each adjusting screw should, in turn, be set for maximum signal output from the speaker or output meter. For best results the verniers should be gone over twice in the same rotation always keeping the output from the test oscillator at the weakest possible strength in order to determine slight variations in volume.

ZENITH RADIO CORP. MODEL 10,11,12,102,112,122 Schematic, Parts List.

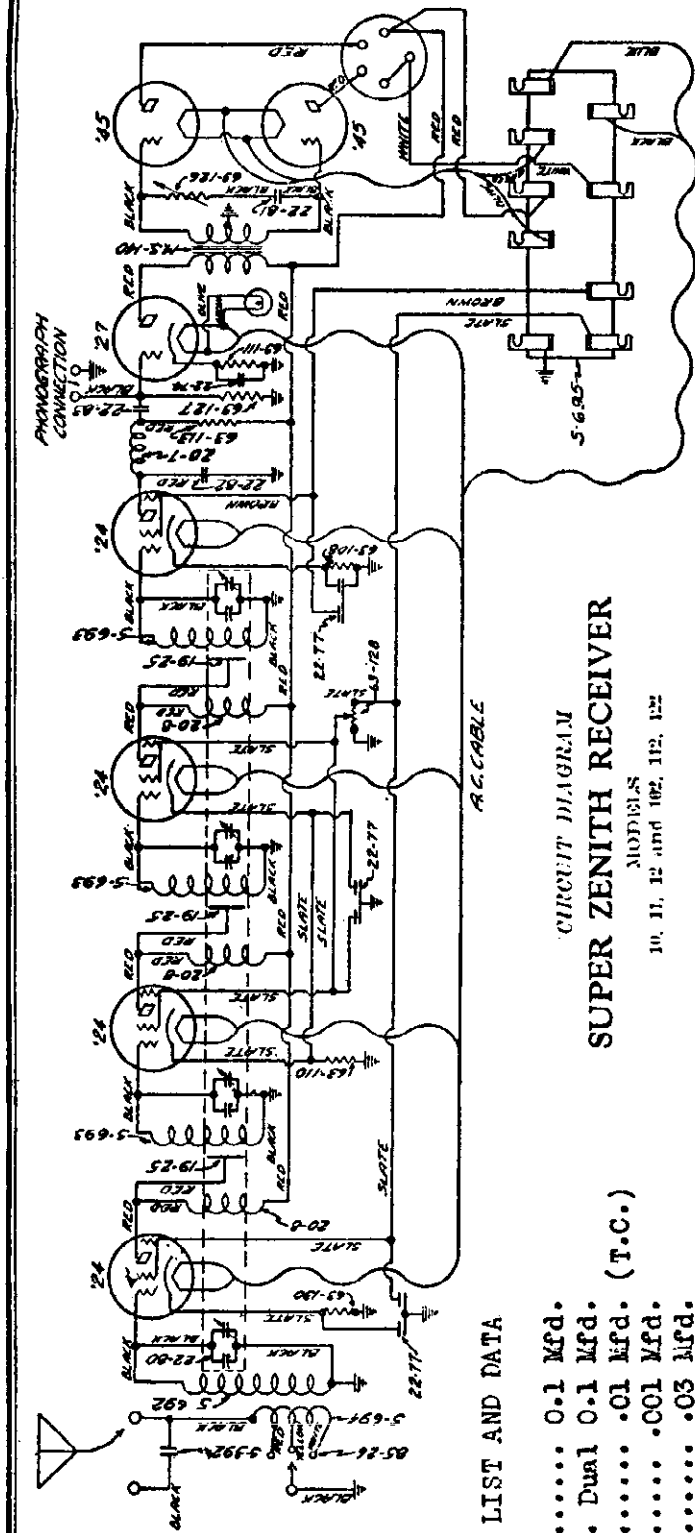

CIRCUIT DIAGRAM
SUPER ZENITH RECEIVER

MODELS
10, 11, 12 and 102, 112, 122

PARTS LIST AND DATA

- 22-74..... 0.1 Mfd.
- 22-77.... Dual 0.1 Mfd.
- 22-81..... .01 Mfd. (T.C.)
- 22-82..... .001 Mfd.
- 22-83..... .03 Mfd.
- 63-108.....50000 Ohms-green
- 63-110..... 400 Ohms-yellow
- 63-111..... 2000 Ohms-black
- 63-113.....250000 Ohms-white
- 63-127..... 1 Meg.-brown
- 63-128.....50000 Ohms (V.C.)
- 63-130.....800 Ohms-bl-yel.

POWER UNITS

- MODELS 10, 11, 12
- 22-71..... 1.0 Mfd.
- 22-72..... 8.0 Mfd. (Elect)
- 63-114..... 10 Ohm (C.T.)
- 63-124..... 10450 Ohm V. Div.
- 95-83... Power Transformer
- 95-84... Power Transformer for models 102, 112, 122, 25 cycle sets.



VOLTAGE READINGS AT SOCKETS USING WESTON 547 ANALYZER

Line Voltage 116. Fuse in 120 Volt Clips. Vol. (conr. in Max. Pos'n.

TYPE	POS. ITION	FIL. VOLTS	PLATE VOLTS	GRID VOLTS	SCREEN VOLTS	NORMAL PLATE M.A.	GRID TEST M. A.
224	1st R.F.	2.3	185	3.25	90	4	7
224	2nd R.F.	2.3	185	3.4	90	4	7.5
224	3rd R.F.	2.3	185	3.3	90	4	7.5
224	Det.	2.3	90	3	30	.25	.75
227	1st A.F.	2.3	170	12	—	6	7
245	P.P.	2.3	245	50	—	28	37
245	P.P.	2.3	245	50	—	28	37

ZENITH RADIO CORP.

MODEL LP
Schematic
Parts List

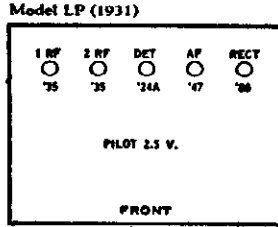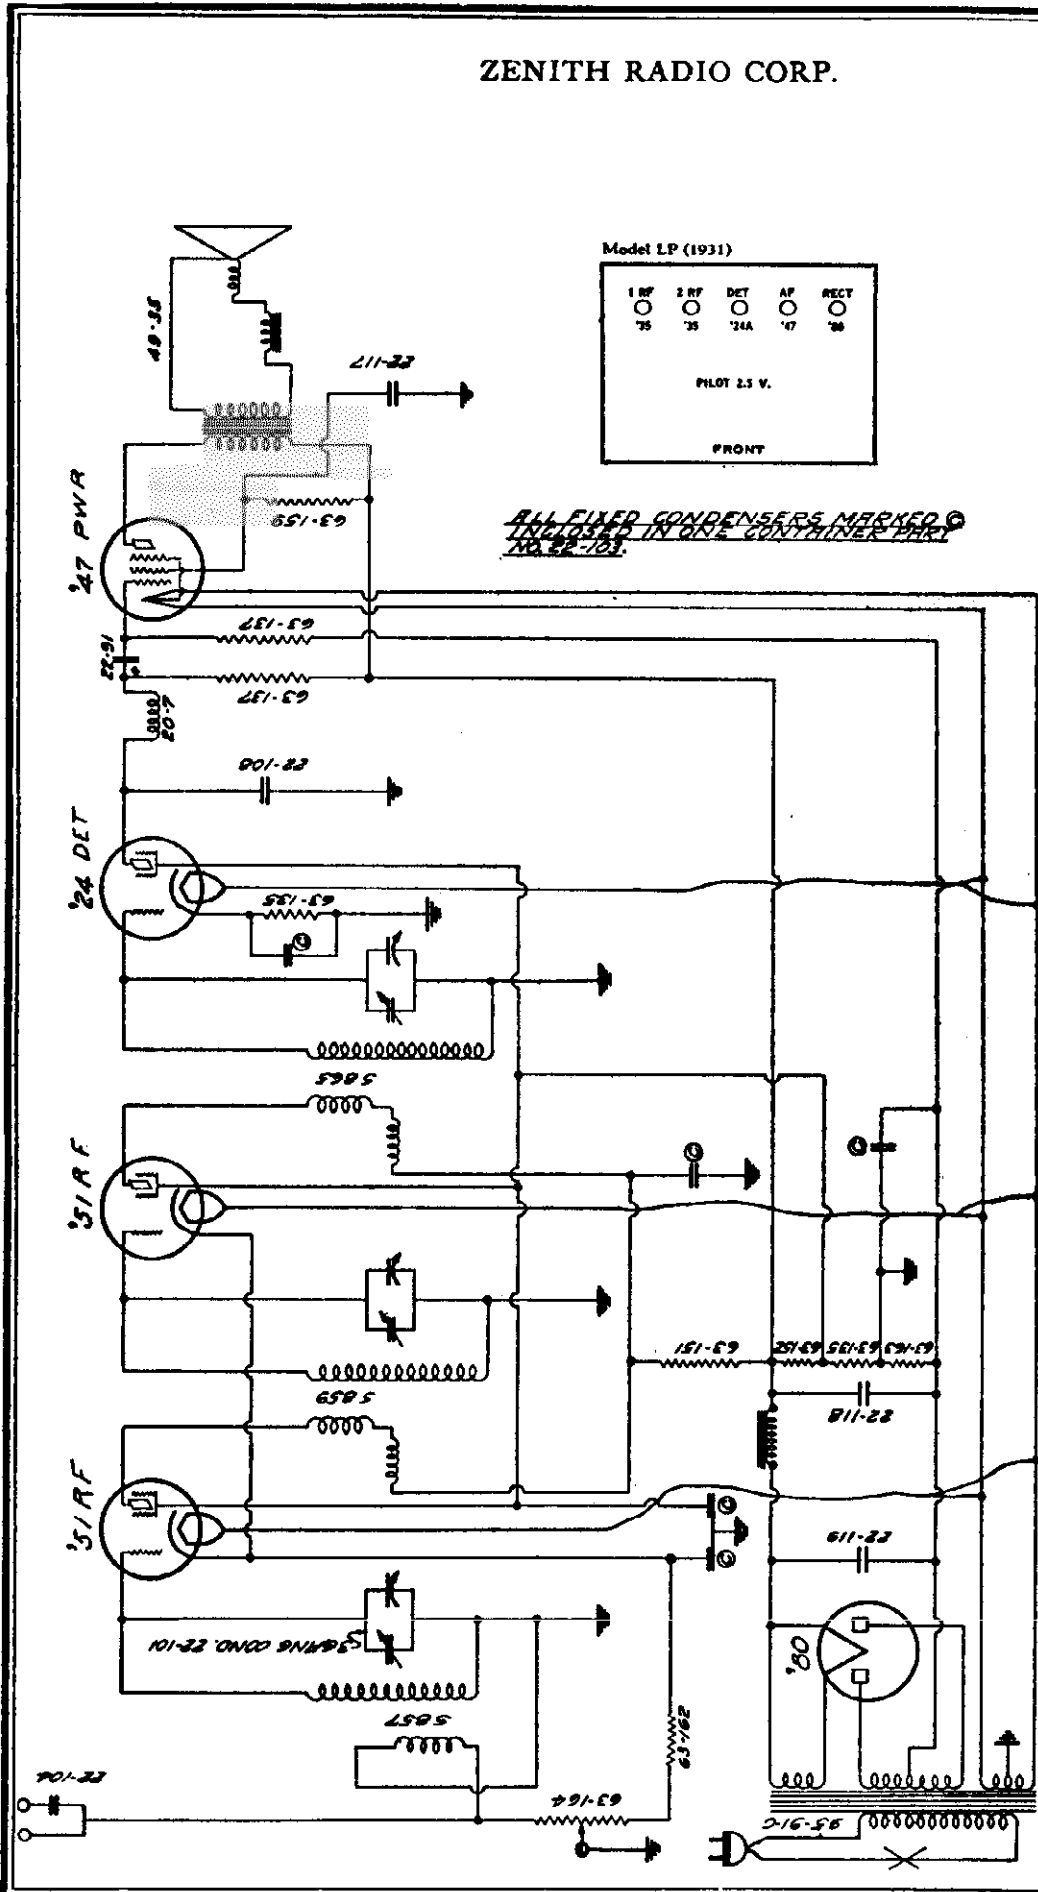


ALL FIXED CONDENSERS MARKED
INCLUDED IN ONE CONTAINER PART
NO. 22-103.


Resistors		Fixed Condensers	
63-135	25M ohm resistor (Red, Green end, Or arge Dot)	22-91	.03 mfd. condenser
63-137	" " " " " Yellow "	8-392	Antenna series condenser
63-151	" " " " " Brown " " Orange "	22-103	Five section bypass condenser
63-152	" " " " " Yellow Orange "	22-108	.002 mfd. condenser
63-159	" " " " " Black end Red "	22-117	.5 " " (bypass)
63-162	" " " " " (Flat wire wound black "	22-118	6. " " electrolytic low voltage)
63-163	" " " " " Red "	22-119	6. " " " high "

MODEL 27
 Super Zenith
 MODEL Super Zenith

ZENITH RADIO CORP.

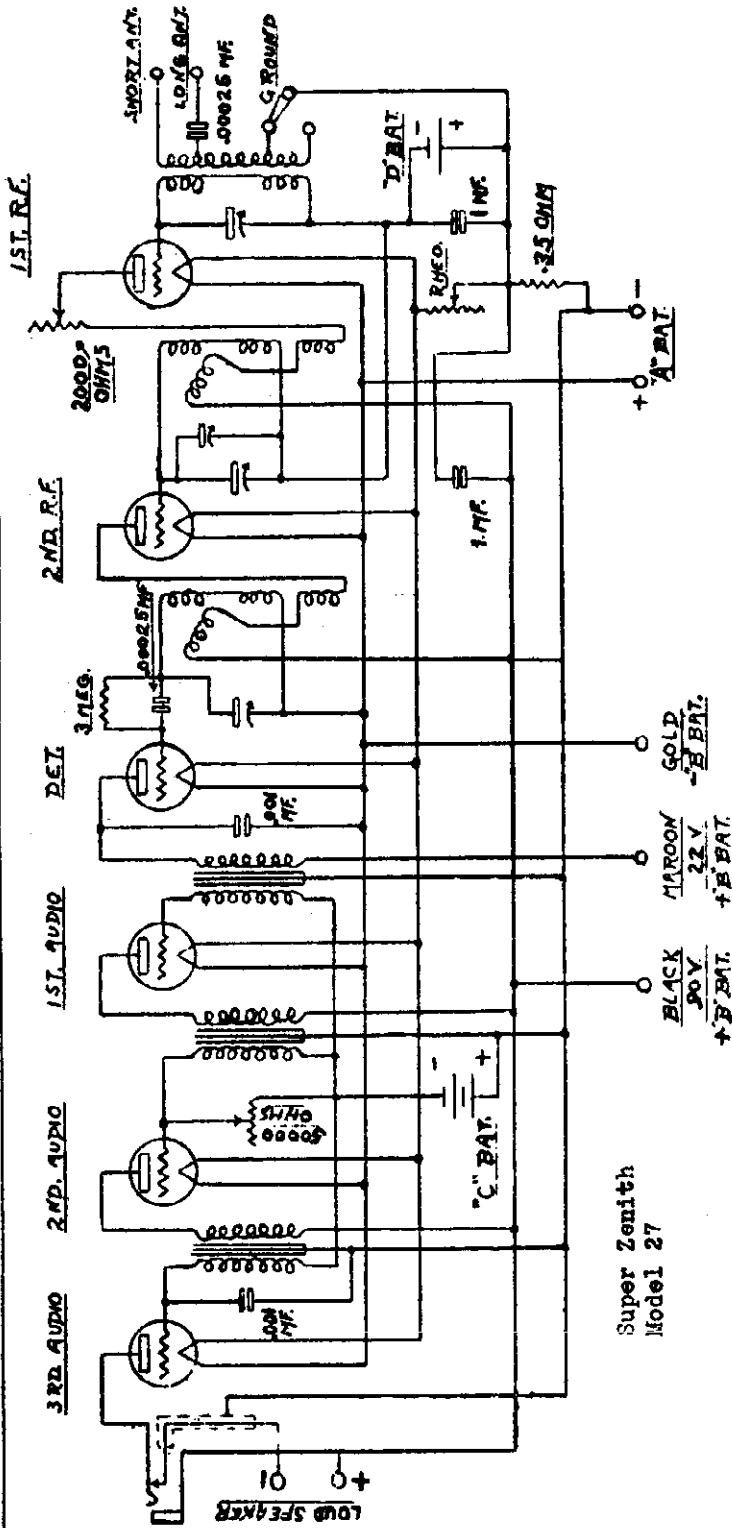


Super Zenith
 Model 27

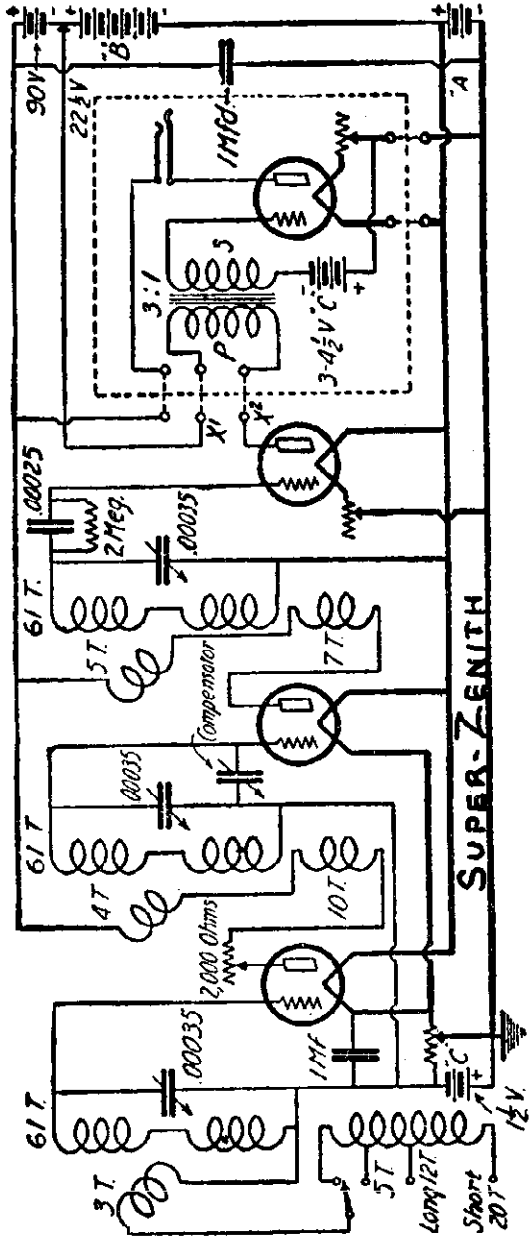

Super Zenith

ZENITH RADIO CORP.

MODEL 103
Chassis 2017
Above Serial # 450,451
Schematic

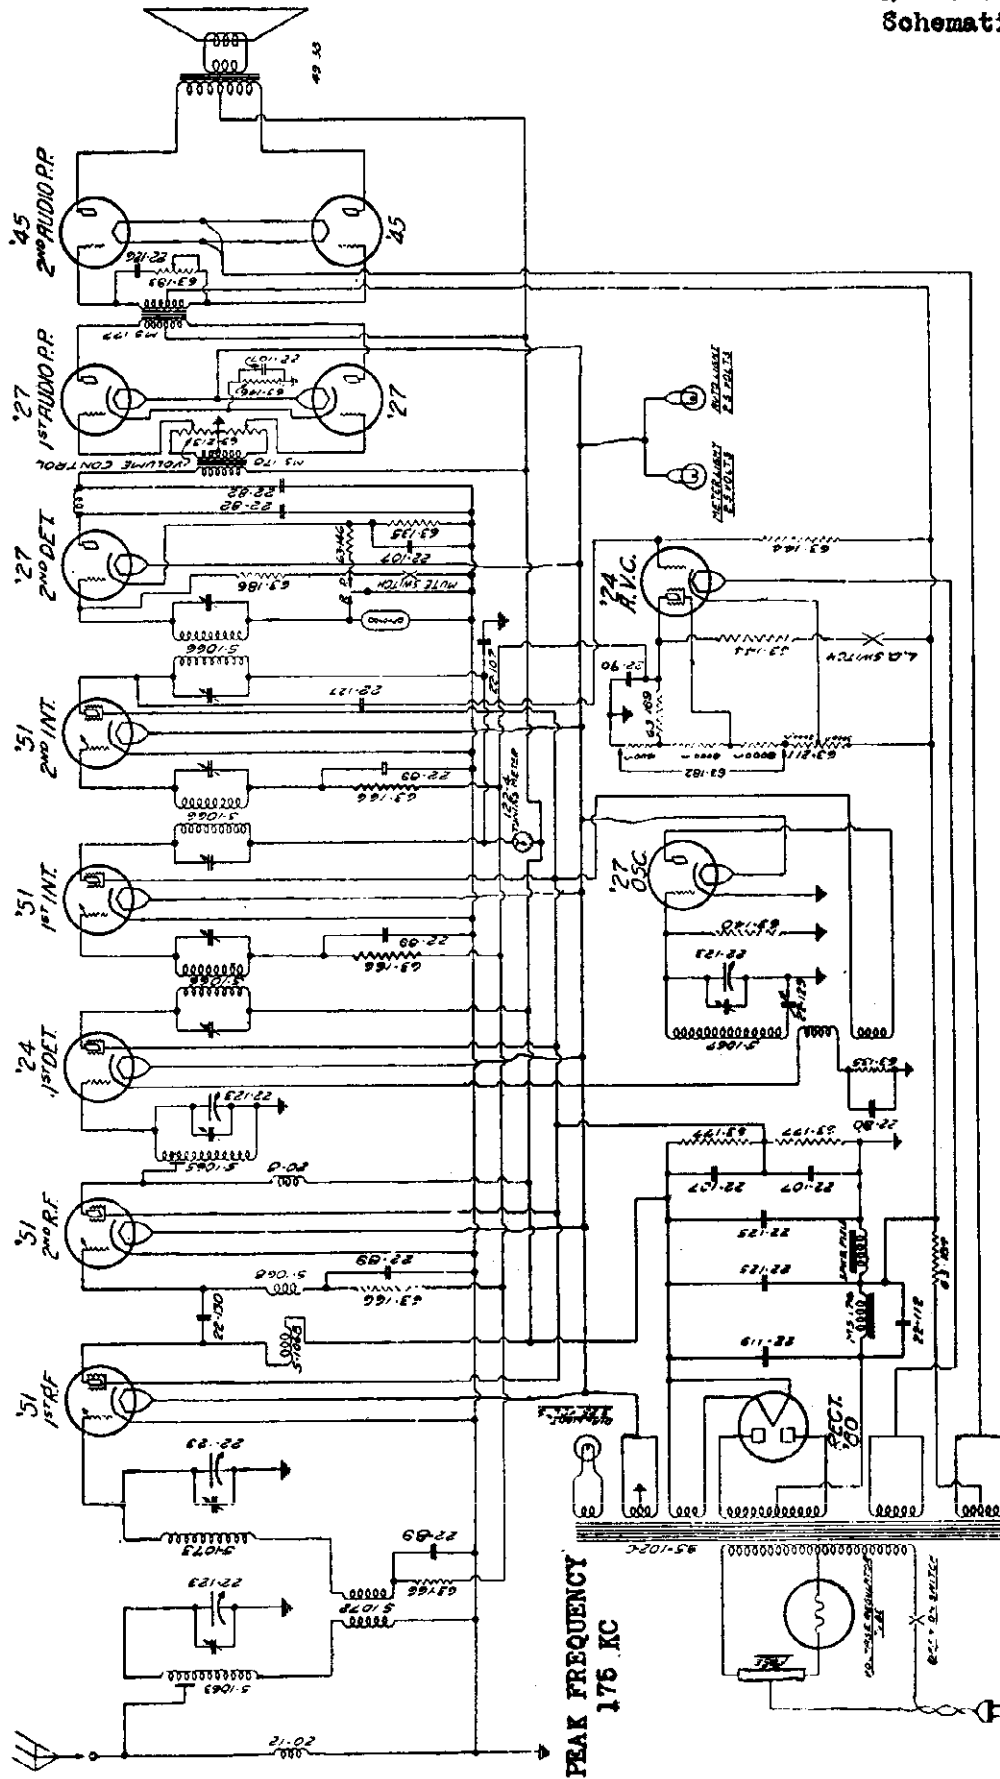


MODEL 103 (2017) SERIAL NUMBERS AFTER 450,451 ONLY.

PEAK FREQUENCY
175 KC

MODEL 103
 Chassis 2017
 Serials 450,001-450,450
 Schematic Notes

ZENITH RADIO CORP.

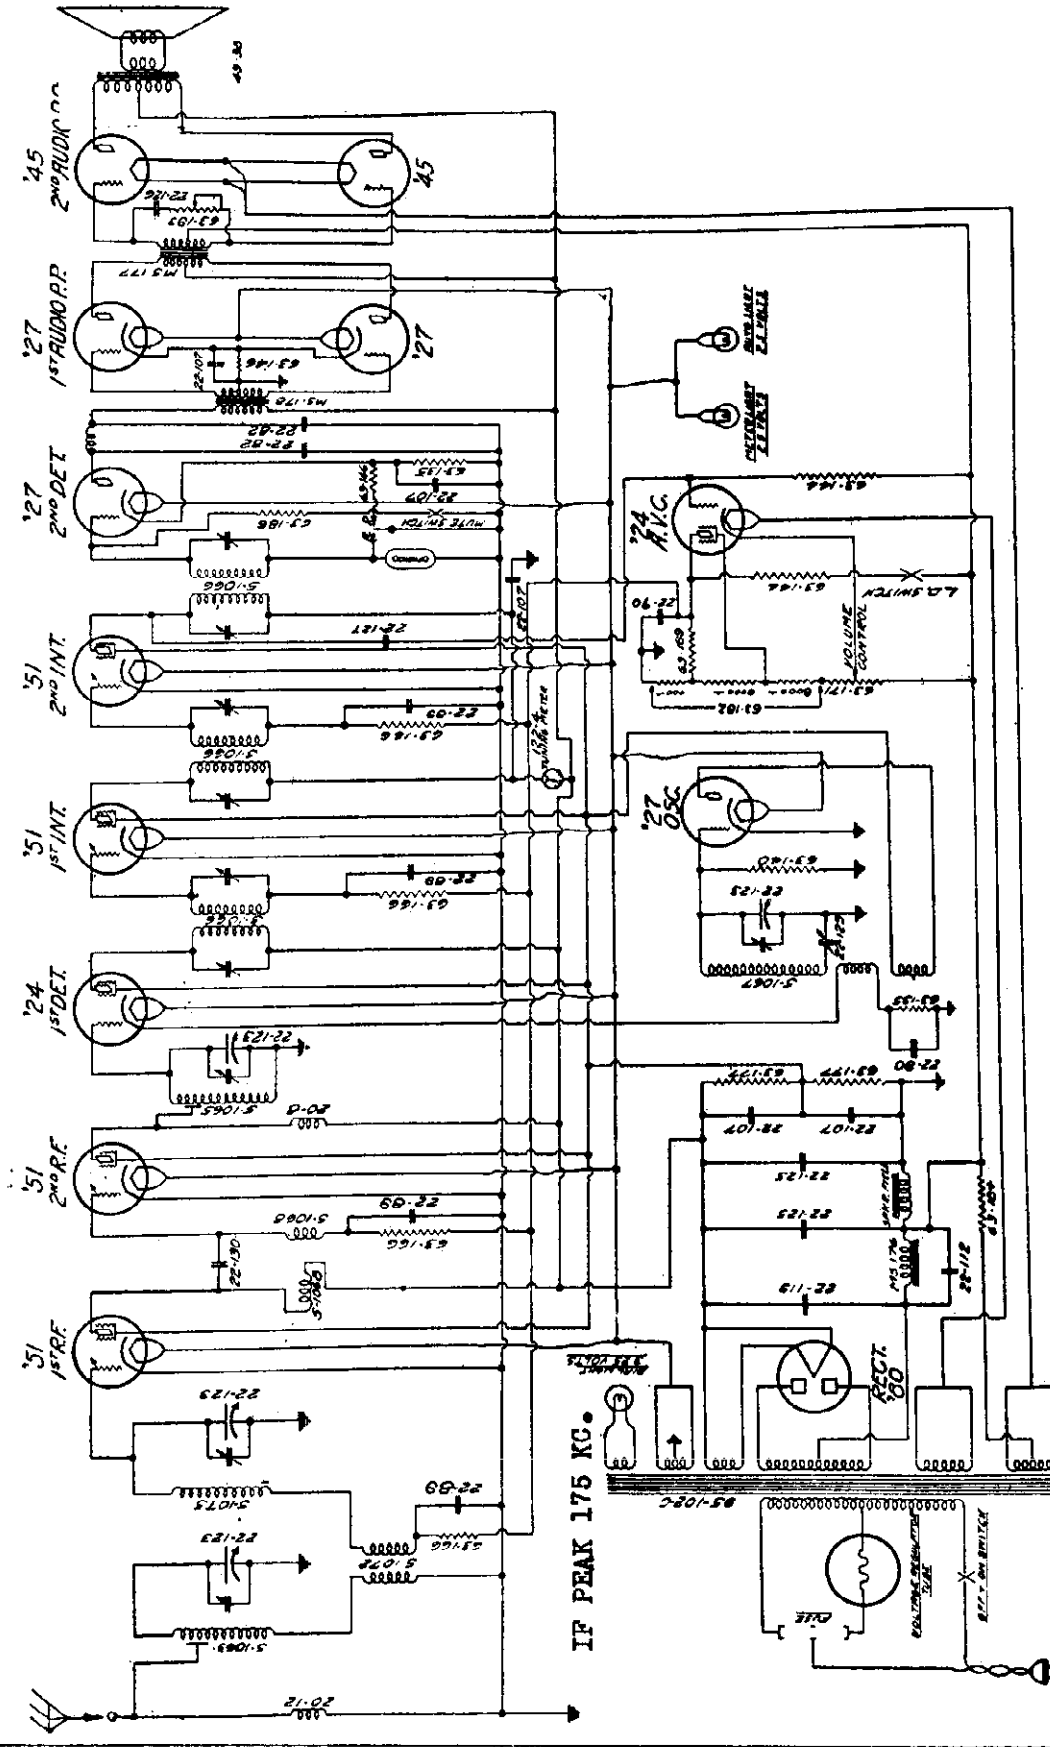


It should be noted that the line fuse provided in the rear of the chassis has two positions. The fuse should normally be used in the "Regulator Tube In" position. If the regulator tube becomes defective and a replacement is not immediately available, the fuse may be placed in the "Regulator Tube Out" clips. Do not leave the voltage regulator tube out permanently since line fluctuations or high voltage may cause damage to the tubes or power transformer.

It should be noted that the phonomograph pickup switch and jacks are connected in the grid return circuit of the second detector, consequently a howl will be heard if the phono switch is thrown to the phono position without a phono pickup having been attached. Be sure this action is taken into consideration when servicing the receiver or if there is a complaint of very weak reception accompanied by a very peculiar howl.

MODEL 103 (2017) 14 TUBE SUPERHETERODYNE
 SERIAL NUMBERS 450,001 TO 450,450

ZENITH RADIO CORP.

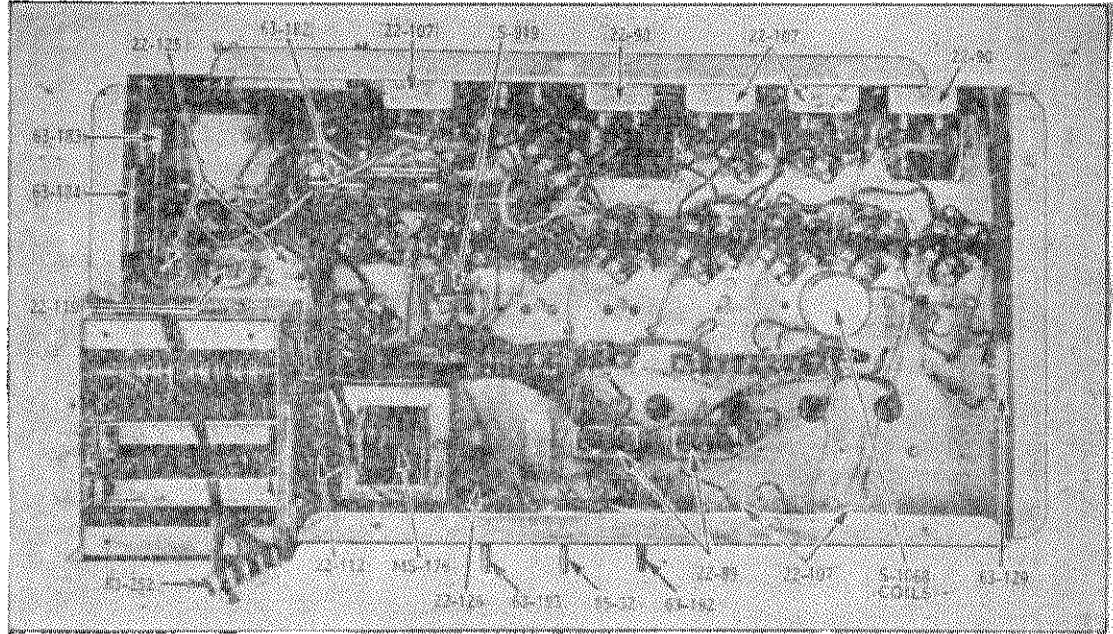MODEL 103
Chassis Layout
Parts List

MISCELLANEOUS

19-21	Grid Clip	.02
44-4	Phono Jack Base Assembly	.30
46-49	Tuning Knob	.23
46-55	Control Knob (3 used)	.20
49-58	Dynamic Speaker	25.00
52-25	Speaker Multicord	.45
57-308	Dial Escutcheon Plate	.30
57-309	Meter Escutcheon Plate	.35
73-8	Small Set Screw for Auto Coupling	.01
78-86	Z-51 Socket	.20
78-87	Z-27 Socket	.20
78-88	Z-24 Socket	.20
78-40	Z-80 Socket	.20
78-41	Z-45 Socket	.20
78-42	Amperite Socket	.15
83-252	Speaker Multicord Terminal Strip	.20
85-24	Phono Switch	.75
85-32	Local Distance and Mute Switch	1.00
88-147	Electrolytic Condenser Insulating Washer	.02
93-102	110 volt 60 cycle Power Transformer	8.00
93-116	110 volt 25 cycle Power Transformer	13.50
114-6	Large Set Screw for Auto Coupling	.05
130-2	3 amp Fuse	.10
143-11	Auto Coupling Collar	.35
S-1037	Auto Control Shaft Assembly	.90
MS-176	Power Choke	4.00
MS-177	Audio Transformer (Six Lead)	5.50
MS-178	Audio Transformer (Five Lead)	5.50

CONDENSERS

22-82	.001 Mfd. (2nd Detector Plate)	.30
22-89	.1 Mfd. (2 used, see footnote)	.85
22-100	.1 Mfd. (2 used, see footnote)	.55
22-107	.1 Mfd. (5 used, see footnote)	.95
22-112	.1 Mfd. (Choke Bypass)	.35
22-119	6. Mfd. (Electrolytic)	2.50
22-123	Four Gang Variable	10.00
22-125	8. Mfd. (Electrolytic)	1.50
22-126	.006 Mfd. (Tone Control)	.25
22-127	.000025 Mfd. (A. V. C. Coupling)	.35
22-129	Padder	.75
22-130	.0001 Mfd. (R. F. Coupling)	.20

Note: 22-89 1st, 2nd, R. F. and 1st, 2nd, I. F. Grids.
22-90 1st Detector Cathode and A. V. C. Plate.
22-107 2nd Detector Cathode, 1st A. F. Bias, I. F. Plate and Voltage Divider.
63-183 Specify—Porcelain or Metal Mounted Type.

COILS

20-8	2nd R. F. Plate Choke	.50
20-12	Antenna Choke	.50
S-919	2nd Detector Plate Choke and Bracket	.60
S-1068	Pre-Selector (Coil Only)	2.00
S-1073	1st R. F. (Coil Only)	.90
S-1003	1st Detector (Coil Only)	1.80
S-1066	I. F. Transformer (Specify with or without Grid Lead)	2.85
S-1067	Oscillator (Coil Only)	1.65
S-1068	2nd R. F. Untuned Transformer	2.00
S-1072	Coupling Coil	.90

RESISTORS

63-135	25M Ohm (1st, 2nd Detector Cathode)	.30
63-140	1 Meg Ohm (Oscillator Grid)	.30
63-146	2M Ohm (2nd Detector and A. F.)	.30
63-166	1400 Ohm (R. F. and I. F. Grid Return)	.30
63-169	400M Ohm (A. V. C. Plate)	.30
63-182	16400 Ohm (A. V. C. Divider, Metal Mtg.)	.75
63-183	6M Ohm (Voltage Divider, see footnote)	.65
63-184	750 Ohm (Power Bias)	.30
63-186	5M Ohm (2nd Detector Grid)	.30
63-192	Volume Control and Switch Assembly	1.75
63-193	Tone Control	1.00
63-144	3 Meg Ohm (A. V. C. Grid)	.30

DIAL ASSEMBLY

S-1003	Dial Light Socket and Clip (less lamp)	.60
S-1009	Tuning Shaft and Bracket Assembly	1.50
S-1010	Drum Gear and Cam	.55
S-1106	Dial Pointer and Reflector Plate	1.50
S-1110	Dial Strip and Bracket	.85
6-14	Pointer Arm Bearing	.30
15-12	Dial Light Clip	.35
78-110	Dial Elevator Shaft	.10
80-72	Pointer Arm Tension Spring	.04
94-119	Roller Bearings	.08
100-18	2 1/2 volt Meter Lamp	.35
100-20	3 1/2 volt Dial Lamp	.60
122-4	Tuning Meter and Cord	2.25
148-3	Dial Elevator Arm	.35

IMPORTANT: GIVE SERIAL NUMBER OF RECEIVER ON ALL PARTS ORDERS.
ALL PRICES ARE SUBJECT TO REGULAR DISCOUNT AND CHANGE WITHOUT NOTICE.


MODEL 103
Chassis Layout
Voltage

ZENITH RADIO CORP.

Socket Voltages

Type	Position	Fil. Volts	Plate Volts	Control Grid Volts	Cathode Volts	Plate M. A.	S. G. Volts
Z-51	1st. R. F.	2.2	185	- 9.	0.	2.5	80
Z-51	2nd. R. F.	2.2	200	- 3.9	0.	3.	84
Z-24	1st Det.	2.2	185	0.	+ 7.	.25	70
Z-27	Osc.	2.2	80	0.	0.	7.	0
Z-51	I. F.	2.2	185	- 4.	0.	3.	90
Z-51	I. F.	2.2	185	- 4.	0.	2.	90
Z-27	2nd. Det.	2.2	185	0.	+17.5	.5	0
Z-27	1st. P. P.	2.2	165	0.	+12.5	3.	0
Z-27	1st. P. P.	2.2	165	0.	+12.5	3.	0
Z-45	2nd. P. P.	2.3	240	-48.	0.	36.	0
Z-45	2nd. P. P.	2.3	240	-48.	0.	36.	0
Z-24	A. V. C.	2.3	30	- .4	0.	0.	45
Z-80	Rect.	5	350	0.	0.	70.	0
	Vol. Reg.	Con-	tin-	uity	test	only.	

Voltage readings taken with a Weston model 566 type 3 tester. Manual volume control in maximum position and antenna and ground disconnected. Line voltage 112

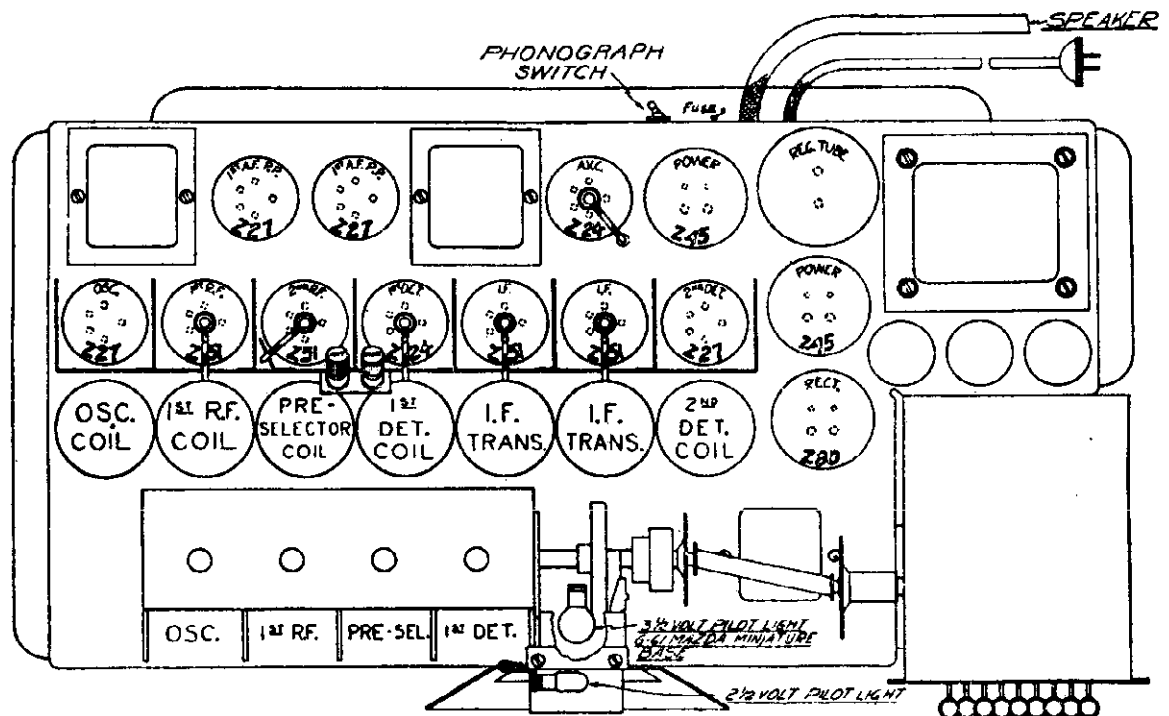

TUBE LAYOUT - Showing Position and Circuit Function of each.

ZENITH RADIO CORP.

MODELS 500, 501, 503, 514,
515, 516, 600, 604,
606, 610, 616, 618

Chassis 2037

Parts List

Resistors

63-121 100M ohm, 1 Watt (2nd Detector Plate).....
63-135 25M " $\frac{1}{2}$ " (2nd Detector Cathode).....
63-137 250M " " (Oscillator & Power Grid)..
63-140 1 meg " " (A.V.C. Screen).....
63-160 100M " " (A.V.C. Plate).....
63-169 400M " " (A.V.C. Grid).....
63-239 24M ohm 1 Watt (Oscillator Plate).....
63-244 500 " $\frac{1}{4}$ " (1st Detector Cathode).
63-251 Voltage Divider (six tap).....
63-252 Voltage Divider (five tap).....

Coils and Chokes

20-30 Antenna Coil.....
20-31 Oscillator Coil.....
20-35 Detector Coil.....
95-133 1st & 2nd I. F. Transformer.....

Condensers

22-112 .1 mfd 300 volt (2nd Detector Screen & Power Grid).....
22-113 .5 "(R.F. 1st Detector & I.F. Grid Return).....
*22-115 .1 " 200 volt (Four used, see below).....
22-117 .5 "(R.F. 1st Detector, & I.F. Screen).....
22-137 .05 " 400 volt (Oscillator Plate).....
22-147 .0005 600 volt (2nd Detector Plate & A.V.C. Screen).....
22-170 .1 mfd 400 volt (R.F. & 1st Detector Plate, 2nd Detector Plate)..
22-171 .05 " 600 volt (Tone Control).....
22-172 2. " 450 volt (Filter).....
22-173 8. " 500 volt (Filter).....

Socket Voltages

Tube Type	Position	Fil. Volt.	Plate Volt.	Cath. Volt.	Screen Volt.	Supp. Volt.	Plate Current
Z-58	R.F.	2.4	190	0	95	0	7.
Z-58	1st Det.	2.4	190	2.3	95	2.3	4.
Z-56	Osc.	2.4	100	0	-	-	4.
Z-58	I.F.	2.4	190	0	90	0	2.
Z-57	2nd Det.	2.4	90	-60	70	-60	.2
Z-57	A.V.C.	2.4	-10	-65	-2	-65	0
Z-59	Power	2.4	175	-70	165	-70	25
Z-80	Rect.	5.	*350	-	-	-	*36

Line 115 Volts


All Controls Maximum

All readings, with exception of heaters, taken from socket connections to ground. Use 1,000 ohm per volt D. C. meter.)

BALANCE I.F. frequency at 175 K.C. Condenser gang at 1500 K.C. and oscillator padder at 600 K.C.

MODELS 500, 501, 503, 514,
515, 516, 600, 604,
606, 610, 616, 618
Chassis 2037
Schematic

ZENITH RADIO CORP.

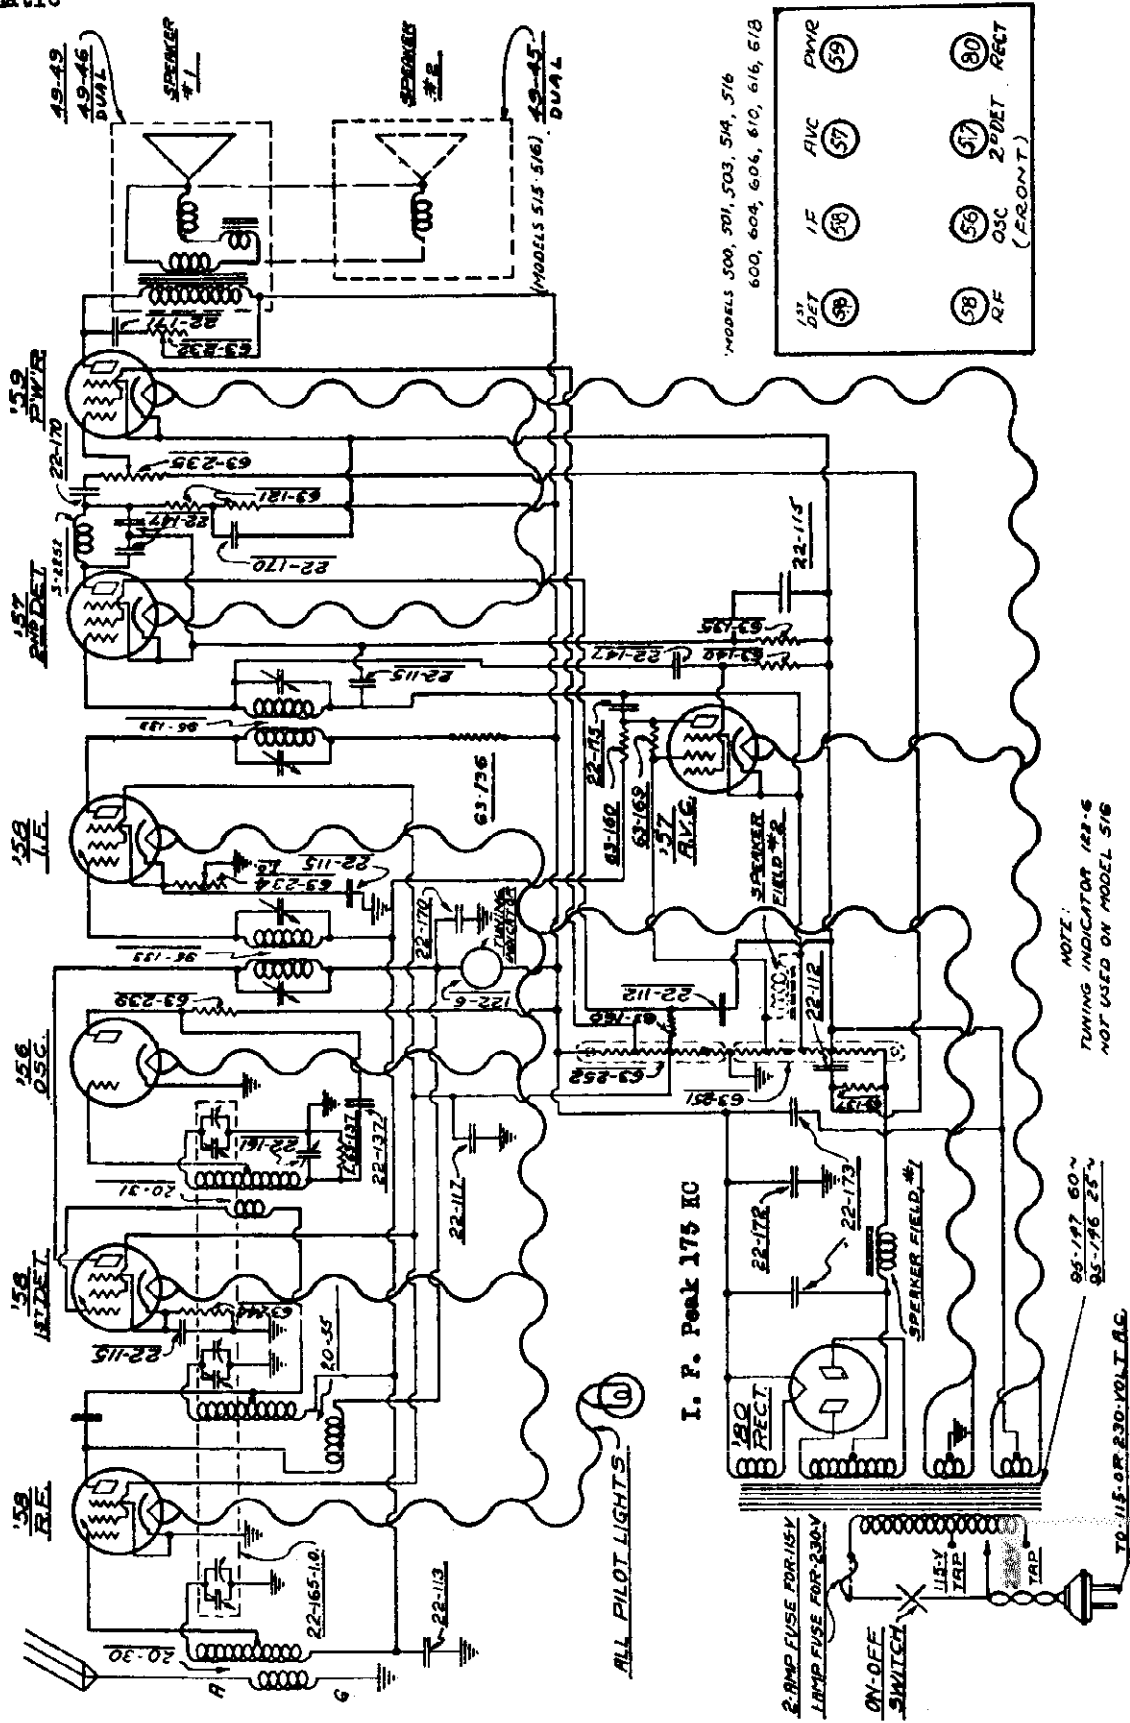

MODELS 500, 501, 503, 514, 516
600, 604, 606, 610, 616, 618

157 2ND DET	58	57	59
156 OSC	56	57	60
152 I.F.	55	57	RECT
158 RF	54	57	(FRONT)
158 1A7 DET	53	57	
150 RECT	52	57	
150 FUSE FOR 150V LAMP FUSE FOR 200V	51	57	
ON-OFF SWITCH	50	57	
230V TAP	49	57	
115V TAP	48	57	
TAP	47	57	

NOTE:
TUNING INDICATOR 122-6
NOT USED ON MODEL 516

95-797 60~
95-796 25~

TP-115-0R-230-VOLT AC

ALL PILOT LIGHTS

I. F. Peak 175 IC

